

FINCH V2

POWER 5V --> 3.3V

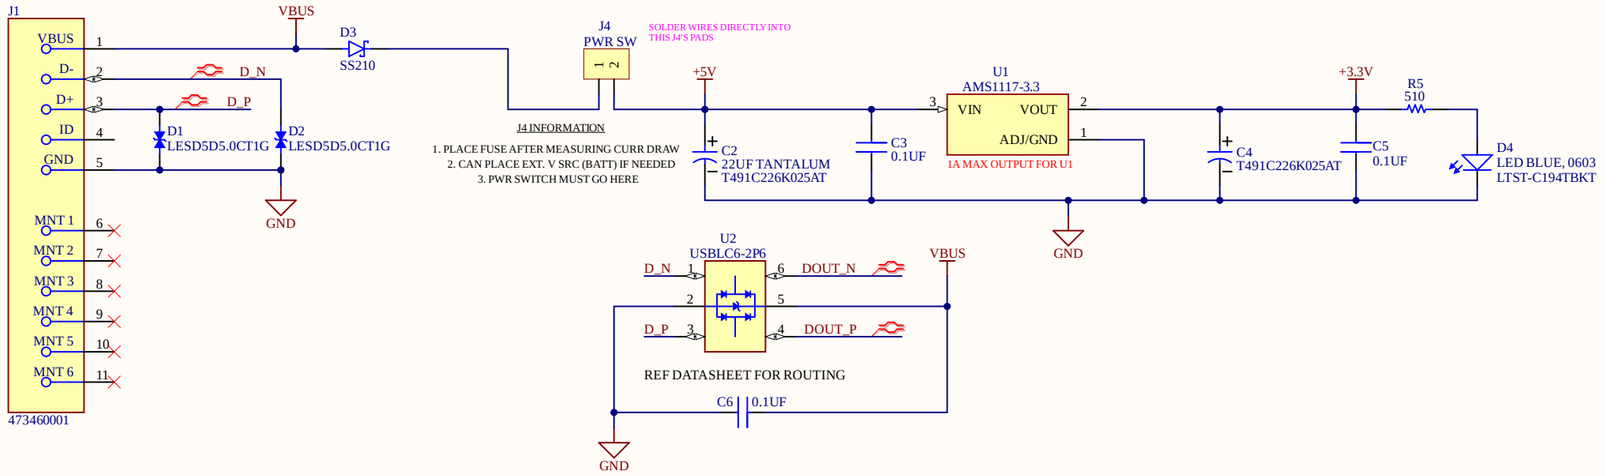


ESP32

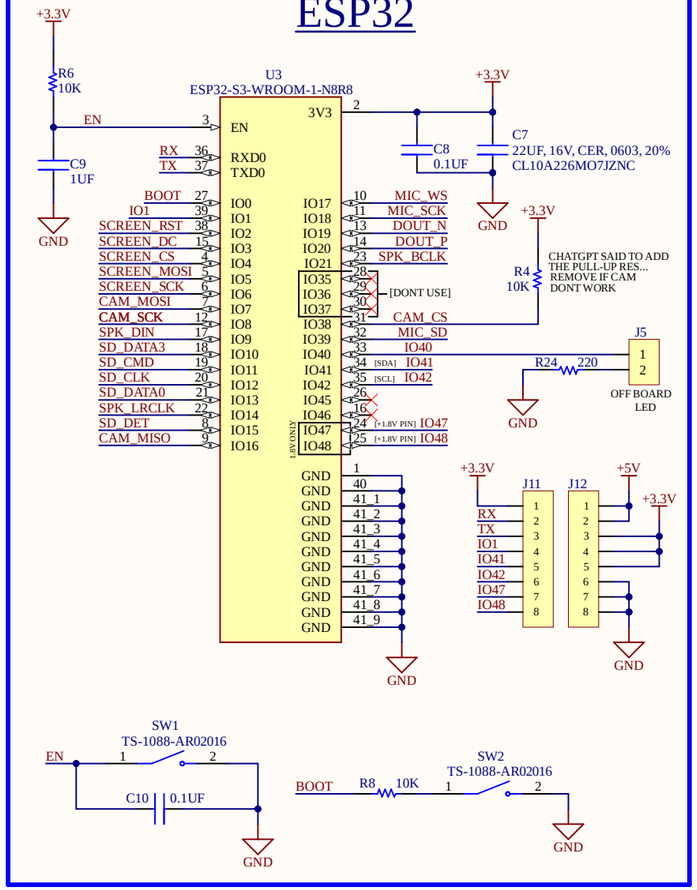


AUDIO


LR=GND => L CHANNEL
USE L CHANNEL FOR 1 MIC
INSTALL R12 TO USE R CHANNEL

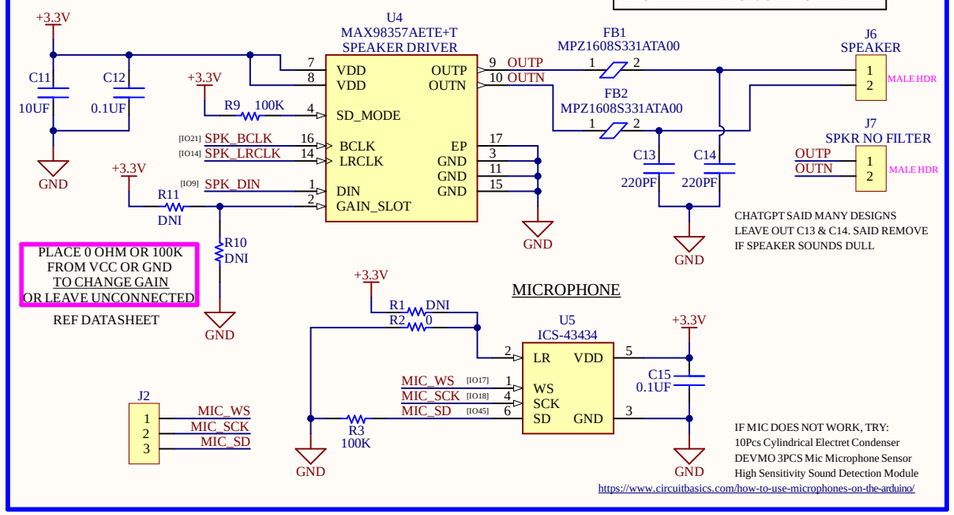


CAMERA

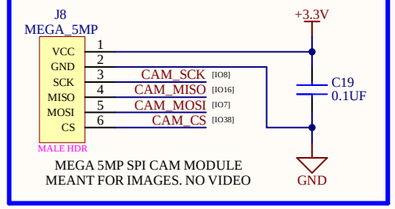


OLED

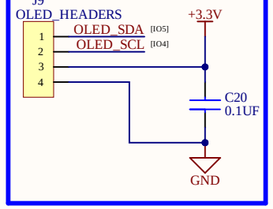

ILI9341 3.5-IN COLOR SCREEN

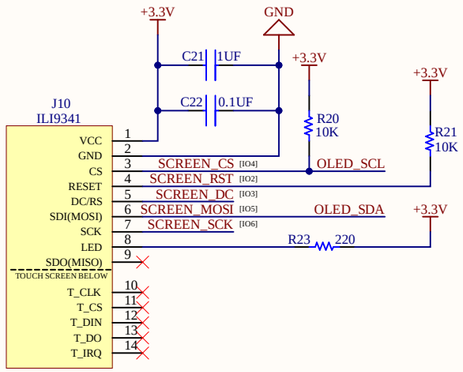

SD CARD

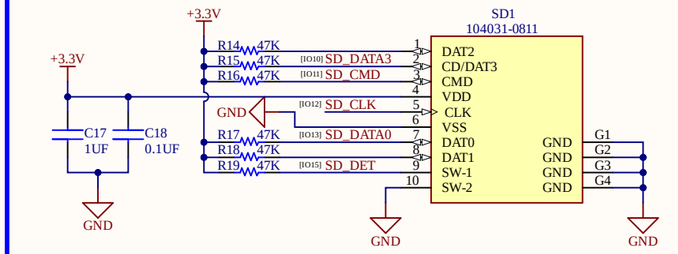

1. DNI R10 & R11 -- USED TO ADJUST GAIN ON U4
2. DNI R20, R21,R22, R23 -- USE THESE ONLY IF NOT USING OLED
   - IF USING LARGER SCREEN, SIMPLY DONT INSTALL OLED AND INSTALL R20, R21, R23
3. INSTALL R2 TO USE MICROPHONE L. SH
4. INSTALL R1 TO USE MICROPHONE R. SH
5. TRY TO UNINSTALL R21 IF ILI9341 NOT WORKING
6. R1 USED TO CHANGE TO R CH ON MIC, J2 FOR EXT MIC IF U5 DOESNT WORK