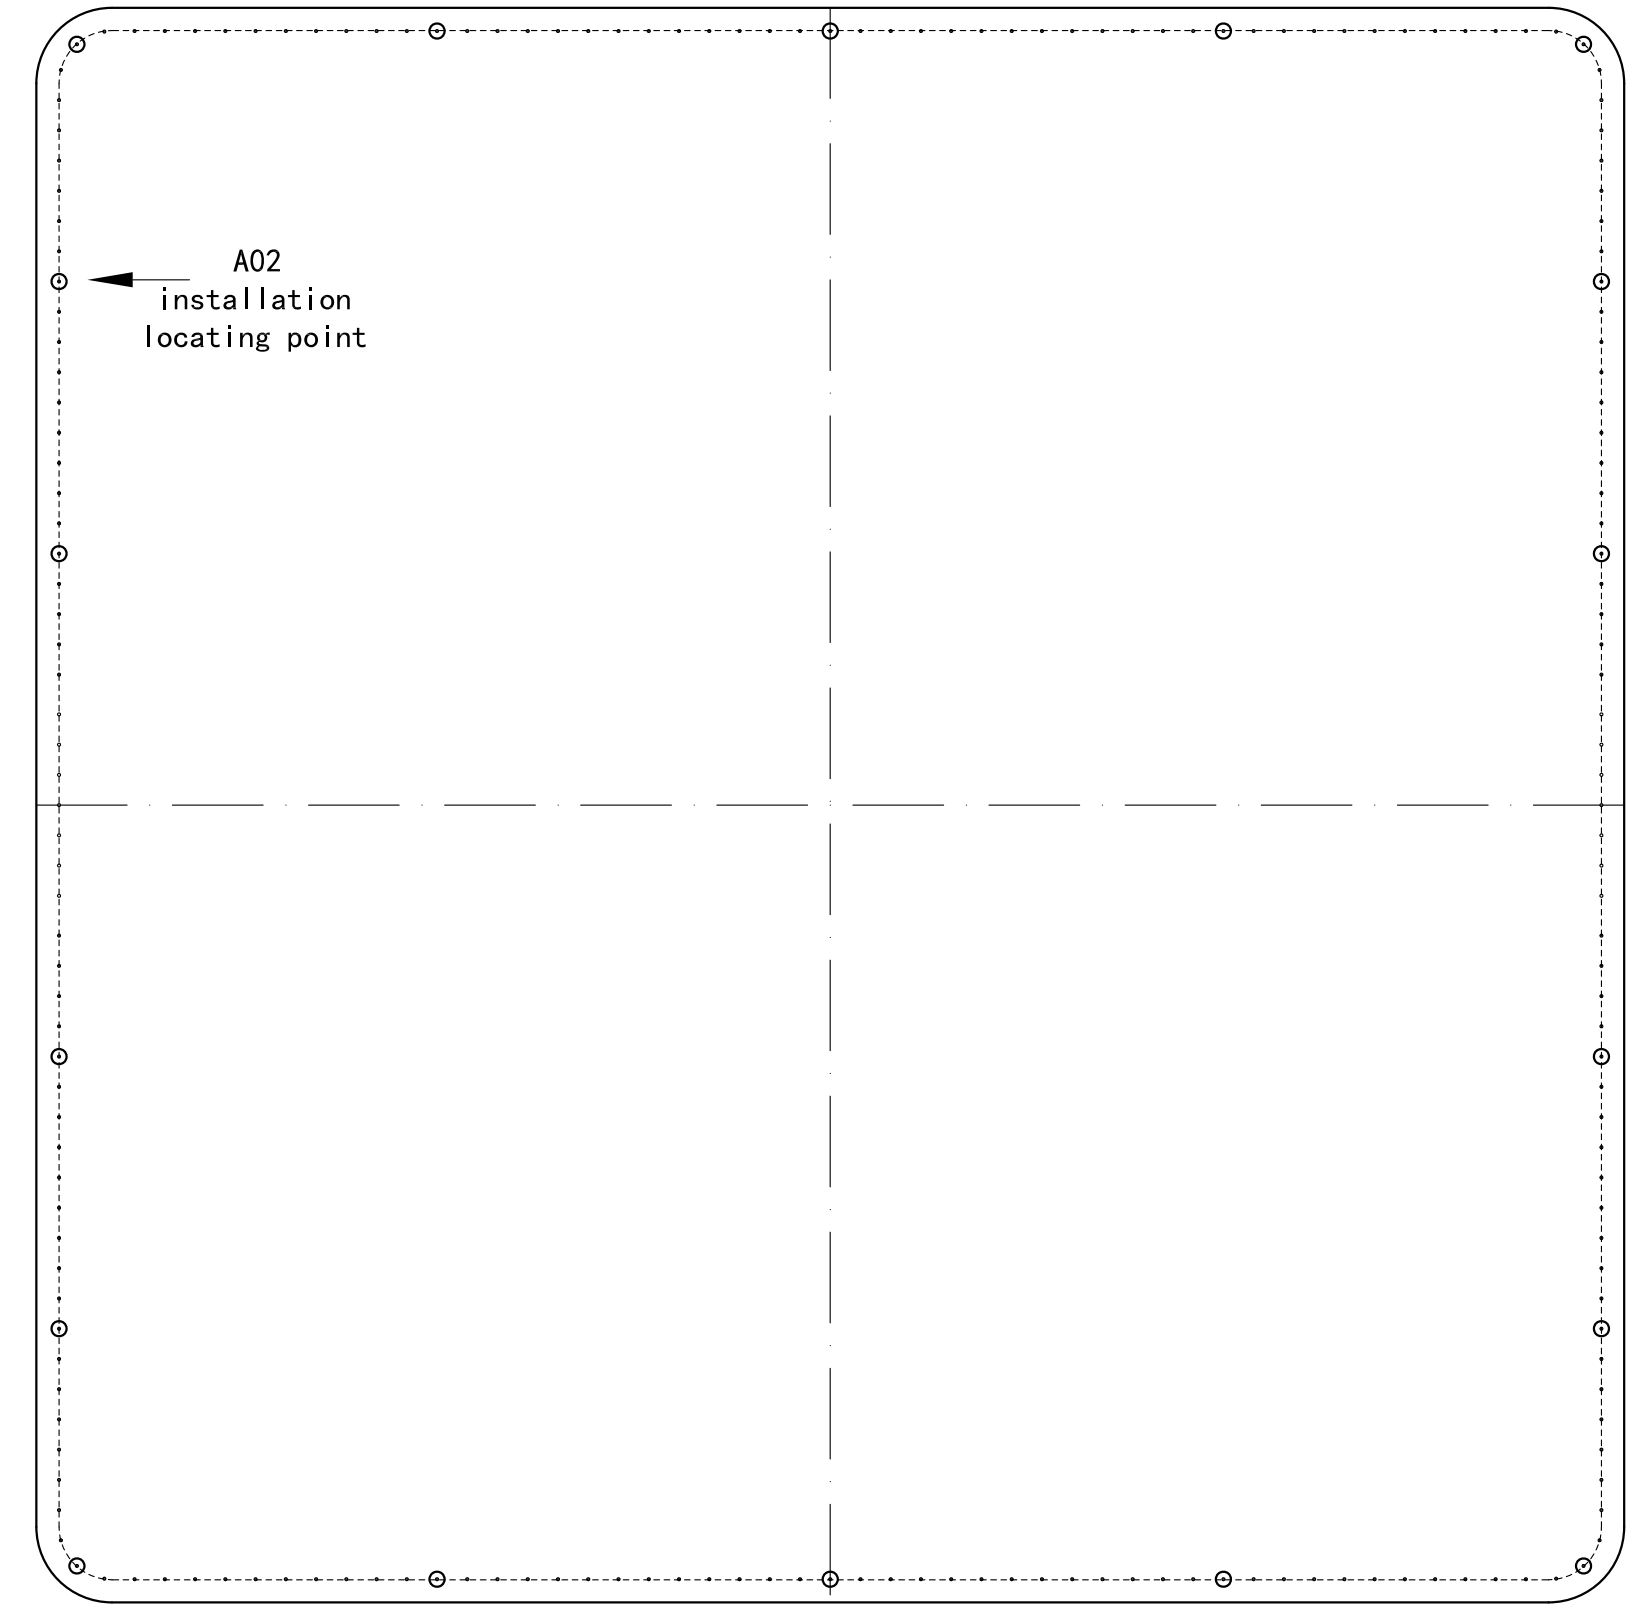
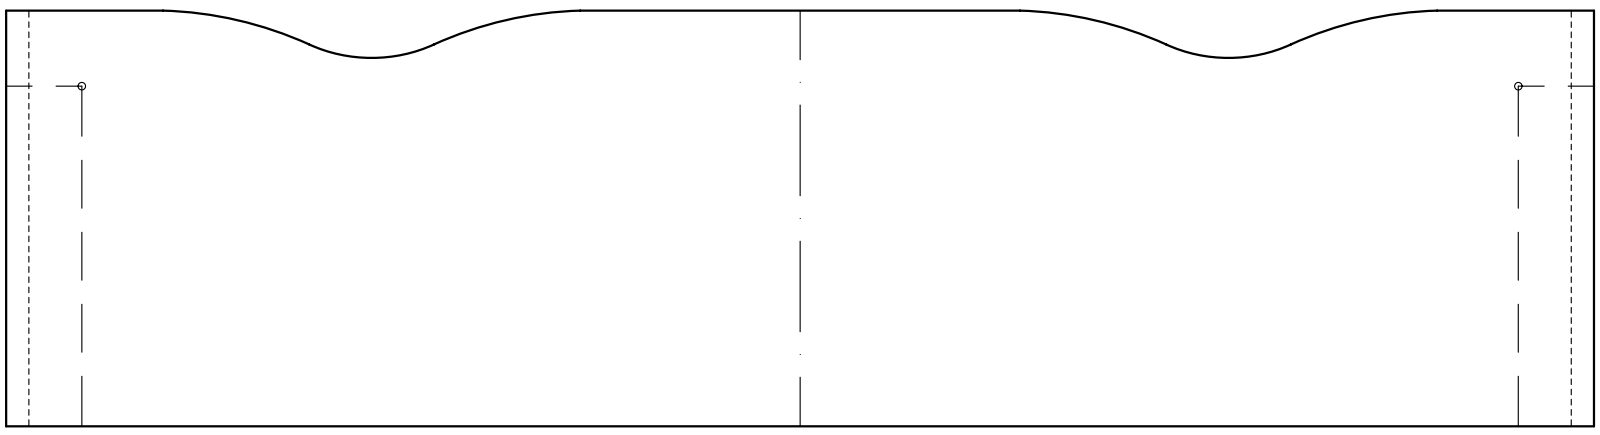
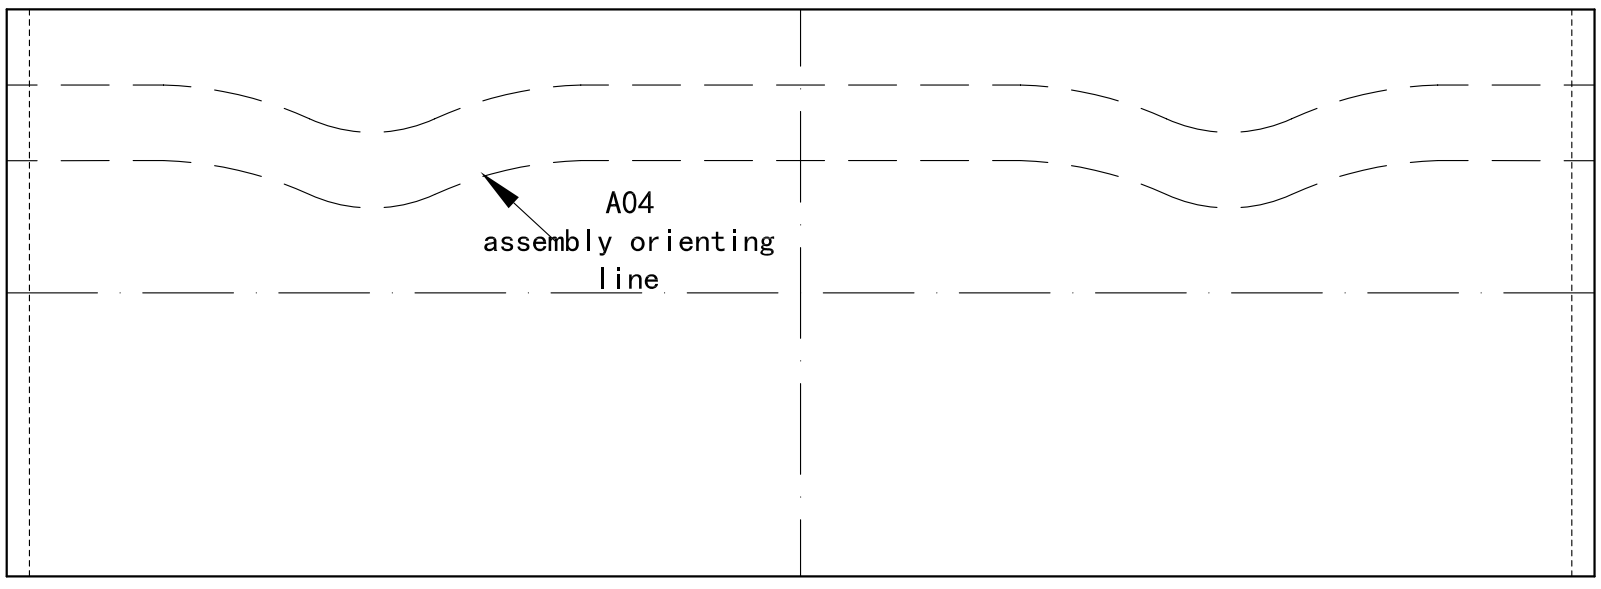

A02
installation
locating point




A04
assembly orienting
line