## ETSI TS 144 056 V8.0.0 (2009-01)

Technical Specification

Digital cellular telecommunications system (Phase 2+); GSM Cordless Telephony System (CTS), (Phase 1) CTS Radio Interface Layer 3 Specification (3GPP TS 44.056 version 8.0.0 Release 8)



# Reference RTS/TSGC-0144056v800 Keywords GSM

#### **ETSI**

650 Route des Lucioles F-06921 Sophia Antipolis Cedex - FRANCE

Tel.: +33 4 92 94 42 00 Fax: +33 4 93 65 47 16

Siret N° 348 623 562 00017 - NAF 742 C Association à but non lucratif enregistrée à la Sous-Préfecture de Grasse (06) N° 7803/88

#### Important notice

Individual copies of the present document can be downloaded from: <u>http://www.etsi.org</u>

The present document may be made available in more than one electronic version or in print. In any case of existing or perceived difference in contents between such versions, the reference version is the Portable Document Format (PDF). In case of dispute, the reference shall be the printing on ETSI printers of the PDF version kept on a specific network drive within ETSI Secretariat.

Users of the present document should be aware that the document may be subject to revision or change of status.

Information on the current status of this and other ETSI documents is available at

<a href="http://portal.etsi.org/tb/status/status.asp">http://portal.etsi.org/tb/status/status.asp</a>

If you find errors in the present document, please send your comment to one of the following services: http://portal.etsi.org/chaircor/ETSI\_support.asp

#### Copyright Notification

No part may be reproduced except as authorized by written permission. The copyright and the foregoing restriction extend to reproduction in all media.

© European Telecommunications Standards Institute 2009.
All rights reserved.

**DECT**<sup>TM</sup>, **PLUGTESTS**<sup>TM</sup>, **UMTS**<sup>TM</sup>, **TIPHON**<sup>TM</sup>, the TIPHON logo and the ETSI logo are Trade Marks of ETSI registered for the benefit of its Members.

**3GPP**<sup>™</sup> is a Trade Mark of ETSI registered for the benefit of its Members and of the 3GPP Organizational Partners. **LTE**<sup>™</sup> is a Trade Mark of ETSI currently being registered

for the benefit of its Members and of the 3GPP Organizational Partners.

## Intellectual Property Rights

IPRs essential or potentially essential to the present document may have been declared to ETSI. The information pertaining to these essential IPRs, if any, is publicly available for **ETSI members and non-members**, and can be found in ETSI SR 000 314: "Intellectual Property Rights (IPRs); Essential, or potentially Essential, IPRs notified to ETSI in respect of ETSI standards", which is available from the ETSI Secretariat. Latest updates are available on the ETSI Web server (http://webapp.etsi.org/IPR/home.asp).

Pursuant to the ETSI IPR Policy, no investigation, including IPR searches, has been carried out by ETSI. No guarantee can be given as to the existence of other IPRs not referenced in ETSI SR 000 314 (or the updates on the ETSI Web server) which are, or may be, or may become, essential to the present document.

#### **Foreword**

This Technical Specification (TS) has been produced by ETSI 3rd Generation Partnership Project (3GPP).

The present document may refer to technical specifications or reports using their 3GPP identities, UMTS identities or GSM identities. These should be interpreted as being references to the corresponding ETSI deliverables.

The cross reference between GSM, UMTS, 3GPP and ETSI identities can be found under <a href="http://webapp.etsi.org/key/queryform.asp">http://webapp.etsi.org/key/queryform.asp</a>.

## Contents

Intelle	ectual Property Rights	2
Forew	vord	2
Forew	vord	9
1	Scope	10
1.1	Scope of the Technical Specification	
1.2	Application to the interface structures	
1.3	Structure of layer 3 procedures	
1.4	Test procedures	
1.5	Use of logical channels.	
1.6	Overview of control procedures	
1.6.1	List of procedures	
1.7	Applicability of implementations	
2	References	
	Definitions, abbreviations and Random values	
3 3.1	Definitions, aboreviations and Random values	
3.1 3.2	Abbreviations	
3.2 3.3		
3.3	Random values	10
4	Overview/General	
4.1	Overview	16
4.1.1	General	16
4.1.2	Services provided to upper layers	17
4.1.2.1	1 CTS-Idle mode	17
4.1.2.2		
4.1.3	Services required from data link and physical layers	
4.1.4	Change of dedicated channels	
4.1.4.1		
4.1.4.2	- · · · · · · · · · · · · · · · · · · ·	
4.1.4.3	~ · 1 · · · · · · · · · · · · · · · · ·	
4.1.4.3	1	
4.1.4.3	· /	
4.1.4.3		18
4.1.4.3	,	
	transfer operation	
4.1.4.3		
4.1.4.3		
4.1.4.3		
4.1.5	Procedure for Service Request and Contention Resolution	
4.2	Idle mode procedures	
4.2.1	Mobile Station side	
4.2.1.1	S Comment of the comm	
4.2.1.2		
4.2.2	CTS-FP side	
4.2.2.1	<u> </u>	
4.2.2.2		
4.2.2.3		
4.2.2.4		
4.2.2.5		
4.2.2.5	•	
4.3	RR connection establishment	
4.3.1	RR connection establishment initiated by the mobile station	
4.3.1.1		
4.3.1.1		
4.3.1.1	1.2 Initiation of the immediate assignment procedure	24

4.3.1.1.3	Answer from the CTS-FP			
4.3.1.1.3.1	3.1.1.3.1 On receipt of a CTS ACCESS REQUEST message			
4.3.1.1.3.2				
4.3.1.1.4	Assignment completion	24		
4.3.1.1.4.1	Early classmark sending	25		
4.3.1.1.5	Abnormal cases			
4.3.2	Paging procedure for RR connection establishment	25		
4.3.2.1	Paging initiation by the CTS-FP	25		
4.3.2.2	Paging response	25		
4.3.2.3	Abnormal cases	25		
4.4	Procedures in dedicated mode	26		
4.4.1	SACCH procedures	26		
4.4.1.1	General	26		
4.4.1.2	Measurement report	26		
4.4.2	Transfer of messages and link layer service provision	26		
4.4.3	Intracell handover procedure			
4.4.3.1	Intracell handover initiation	27		
4.4.3.2	Intracell handover completion	27		
4.4.3.3	Abnormal cases	27		
4.4.4	Intercell handover procedure			
4.4.5	Frequency hopping definition procedure			
4.4.6	Channel mode modify procedure			
4.4.6.1	Normal channel mode modify procedure			
4.4.6.1.1	Initiation of the channel mode modify procedure			
4.4.6.1.2	Completion of channel mode modify procedure			
4.4.6.1.3	Abnormal cases			
4.4.7	Ciphering mode setting procedure			
4.4.7.1	Ciphering mode setting initiation			
4.4.7.2	Ciphering mode setting completion			
4.4.8	[Reserved: Additional channel assignment procedure]			
4.4.9	[Reserved: Partial channel release procedure]			
4.4.10	Classmark change procedure			
4.4.11	Classmark interrogation procedure			
4.4.12	[Reserved]			
4.4.13	RR connection release procedure			
4.4.13.1	Normal release procedure			
4.4.13.1.1	Channel release procedure initiation			
4.4.13.1.2	Abnormal case			
4.4.13.2	Radio link fai2lure in dedicated mode			
4.4.13.2.1	Mobile side			
4.4.13.2.2	CTS-FP side			
4.4.13.3	RR connection abortion in dedicated mode			
4.4.14	Receiving CTS RR STATUS message by a CTS-RR entity			
4.4.15	CTS RR parameters update			
	î .			
	mentary procedures for Mobility Management			
	General			
5.1.1	Type of CTS-MM procedures			
5.1.2	CTS-MM sublayer states			
5.1.2.1	CTS-MM sublayer states in the mobile station			
5.1.2.1.1	Main states			
5.1.2.1.2	Substates of the CTS-MM IDLE state			
5.1.2.2	CTS-MM sublayer states in the fixed part			
	CTS-MM common procedures			
5.2.1	CTS detach procedure			
5.2.1.1	CTS detach initiation by the mobile station			
5.2.1.2	CTS detach procedure in the fixed part			
5.2.1.3	CTS detach completion by the mobile station			
5.2.1.4	Abnormal cases			
5.2.2	CTS de-enrolment procedure			
5.2.2.1	CTS de-enrolment initiation by the fixed part			
5 2 2 2	CTS de-enrolment procedure in the mobile station	35		

5.2.2.3		
5.2.3	CTS mutual authentication procedure	
5.2.3.1	• 1	
5.2.3.2	1	
5.2.3.3		
5.2.3.4		
5.2.3.5		36
5.2.3.6		
5.2.4	CTSMSI update procedure	
5.2.4.1	1 1	
5.2.4.2		
5.2.4.3		
5.2.4.4		
5.3	CTS-MM specific procedures	
5.3.1	CTS enrolment procedure	
5.3.1.1		
5.3.1.2	1 1	
5.3.1.3	1 ,	
5.3.1.4		
5.3.1.5		
5.3.2	CTS attach procedure	
5.3.2.1	•	
5.3.2.2	1 1	
5.3.2.3 5.3.2.4	1 ,	
5.3.2.4 5.3.2.5	J v	
5.3.2.3 5.3.3	CTS re-attach procedure	
5.3.3.1 5.3.3.1		
5.3.3.2	· · · · · · · · · · · · · · · · · · ·	
5.3.3.3		
5.3.4	CTS periodic attach update procedure	
5.3.4.1		
5.3.4.2	1 1 1	
6	Elementary procedures for circuit-switched Call Control	
6.1	Overview	
6.1.1	General	
6.2 6.2.1	Hook flash procedure	
6.2.2	Hook flash response by the fixed part	
6.2.3	Stop hook flash request by the mobile station	
6.2.4	Stop hook flash response by fixed part	
6.3	Internal call procedure	
	•	
7	Examples of structured procedures	42
7.1	General	42
7.1.1	CTS paging request	
7.1.2	CTS immediate assignment	
7.1.3	CTS mutual authentication	
7.2	Abnormal cases	
7.3	Selected examples	
7.3.1	Enrolment	
7.3.1.1		
7.3.1.2	• 1	
7.3.2	Attachment	
7.3.3 7.3.4	De aprolment	
7.3.4 7.3.5	De-enrolment	
8	Handling of unknown, unforeseen, and erroneous protocol data	
8.1	General	
8.2	Message too short	
83	Unknown or unforeseen transaction identifier	10

8.4	Unknown or unforeseen message type	
8.5	Non-semantical mandatory information element errors	
8.5.1	Radio resource management	50
8.5.2	Mobility management	50
8.5.3	Call control	50
8.6	Unknown and unforeseen IEs in the non-imperative message part	51
8.6.1	IEIs unknown in the message	
8.6.2	Out of sequence IEs	
8.6.3	Repeated IEs	
8.7	Non-imperative message part errors	
8.7.1	Syntactically incorrect optional IEs	
8.7.2	Conditional IE errors	
8.8	Messages with semantically incorrect contents	
9	Message functional definitions and contents	52
9.1	Messages for Radio Resources management	
9.1.1	CTS access request	
9.1.2	CTS AFA monitoring command	
9.1.3	CTS AFA monitoring enquiry	
9.1.3	CTS AFA monitoring report	
9.1.5	CTS BCCH detection command	
9.1.5		
9.1.6 9.1.7	CTS BCCH detection enquiry	
	CTS BCCH detection report	
9.1.8	CTS beacon channel synchronisation burst information	
9.1.9	CTS channel mode modify	
9.1.10	, c	
9.1.11		
9.1.12	F	
9.1.13		
9.1.14	č	
9.1.15	1 4	
9.1.16		
9.1.16		
9.1.17		60
9.1.17	7.1 Rest Octets	60
9.1.18	CTS hunting request	61
9.1.18	Rest Octets	61
9.1.19	CTS immediate assignment	61
9.1.20	· · · · · · · · · · · · · · · · · · ·	
9.1.21		
9.1.21	e j	
9.1.21		
9.1.22	e e	
9.1.23		
9.1.24	1	
9.1.25		
9.1.25	1	
9.1.26		
9.1.20		
9.1.27	1 7	
	1	
9.1.29		
9.1.29	0 0 11	
9.1.30		
9.1.30		
9.1.31	• • • • • • • • • • • • • • • • • • • •	
9.1.31		
9.1.32	<b>7</b>	
9.1.33	3 CTS system information type 3	69
9.1.34	4 CTS RR parameters update	69
9.2	Messages for mobility management	70
9.2.1	CTS attach request	70
9.2.2	CTS attach accept	

9.2.3	CTS attach reject	
9.2.4	CTS detachment indication	
9.2.5	CTS enrolment request	
9.2.6	CTS enrolment accept	
9.2.7	CTS enrolment reject	73
9.2.8	CTS de-enrolment indication	
9.2.9	CTS MS authentication request	74
9.2.10	CTS MS authentication response	75
9.2.11	CTS FP authentication response	75
9.2.12	CTS MS authentication reject	76
9.2.13	CTSMSI update command	76
9.2.14	CTSMSI update complete	77
10 0	1	7.7
	eneral message format and information elements coding	
10.1	Overview	
10.2	Protocol Discriminator	
10.3	Sub-Protocol Discriminator and transaction identifier	
10.3.1	Sub-Protocol Discriminator	
10.3.2	Transaction identifier	
10.4	Message Type	
10.5	Other information elements	
10.5.1	Common information elements	
10.5.1.1	Mobile Identity	
10.5.2	Radio Resource management information elements	
10.5.2.1	CTSMSI	
10.5.2.2	TFH General Parameters	
10.5.2.3	TFH Current Parameters	
10.5.2.4	CTS Channel Description	
10.5.2.5	CTS Access Request Reference	
10.5.2.6	CTS L1 information	82
10.5.2.7	Information Transfert Capability	
10.5.2.8	BCD Display	
10.5.2.9	AFA Interference Level	83
10.5.2.10	AFA Monitoring Cycles	84
10.5.2.11		
10.5.2.12	Paging type	85
10.5.2.13	CTS selection parameters	85
10.5.2.14	CTS RR parameters	8 <i>6</i>
10.5.2.15	Timeslot shifting parameters	87
10.5.3	Mobility management information elements	87
10.5.3.1	Authentication parameter RIMS	87
10.5.3.2	Authentication parameter RIFP	88
10.5.3.3	Authentication parameter CH	88
10.5.3.4	Authentication parameter XRES	89
10.5.3.5	Authentication parameter Kax	89
10.5.3.6	Fixed part Identity	
10.5.3.7	CTS mobile group list	91
10.5.3.8	Following attach request	91
10.5.3.9	Access right identity	
10.5.3.10		
10.5.3.11		
10.5.4	Call control information elements	
10.5.4.1	Called party BCD number	
10.5.4.2	Calling party BCD number	
10.5.4.3	Keypad facility	
	•	
	st of system parameters	
11.1	Timers and counters for radio resource management	
11.1.1	Timers on the MS side	
11.1.2	Timers on the CTS-FP side	
11.1.3	Other parameters	
11.2	Timers of mobility management	95

11.2.1		95
11.2.2	2 Timers on the CTS-FP side	96
11.2.3		96
11.3	Timers of circuit-switched call control	96
Anne	ex A (informative): Default Codings of Information Elements	97
A.1	Common information elements	97
A.2	Radio Resource management information elements	97
A.3	Mobility management information elements	98
A.4	Call control information elements	99
Anne	ex B (informative): Change history	100
Histo	nrv	101

## Foreword

This Technical Specification has been produced by the 3<sup>rd</sup> Generation Partnership Project (3GPP).

The contents of the present document are subject to continuing work within the TSG and may change following formal TSG approval. Should the TSG modify the contents of the present document, it will be re-released by the TSG with an identifying change of release date and an increase in version number as follows:

Version x.y.z

#### where:

- x the first digit:
  - 1 presented to TSG for information;
  - 2 presented to TSG for approval;
  - 3 or greater indicates TSG approved document under change control.
- y the second digit is incremented for all changes of substance, i.e. technical enhancements, corrections, updates, etc.
- z the third digit is incremented when editorial only changes have been incorporated in the document.

## 1 Scope

The present document specifies the procedures used at the CTS radio interface (Reference Point Um\*, see GSM 03.56) for Call Control (CC), Mobility Management (MM), Radio Resource (RR).

When the notations for "further study" or "FS" or "FFS" are present in the present document they mean that the indicated text is not a normative portion of the present document.

These procedures are defined in terms of messages exchanged over the control channels of the radio interface. The CTS control channels are described in GSM 03.52.

The structured functions and procedures of this protocol and the relationship with other layers and entities are described in general terms in GSM 04.07.

## 1.1 Scope of the Technical Specification

The procedures currently described in the present document are for the call control of circuit-switched connections, mobility management and radio resource management for circuit-switched services over the CTS radio interface.

GSM 04.10 contains functional procedures for support of supplementary services.

GSM 04.11 contains functional procedures for support of point-to-point short message services.

NOTE: "layer 3" includes the functions and protocols described in the present document. The terms "data link layer" and "layer 2" are used interchangeably to refer to the layer immediately below layer 3.

## 1.2 Application to the interface structures

The layer 3 procedures apply to the interface structures defined in GSM 04.03. They use the functions and services provided by layer 2 defined in GSM 04.05 and GSM 04.06. GSM 04.07 gives the general description of layer 3 including procedures, messages format and error handling.

## 1.3 Structure of layer 3 procedures

A building block method is used to describe the layer 3 procedures.

The basic building blocks are "elementary procedures" provided by the protocol control entities of the three sublayers, i.e. radio resource management, mobility management and connection management sublayer.

Complete layer 3 transactions consist of specific sequences of elementary procedures. The term "structured procedure" is used for these sequences.

## 1.4 Test procedures

Test procedures of the GSM-CTS radio interface signalling are described in GSM 11.10 and GSM 11.56 series.

## 1.5 Use of logical channels

The logical control channels are defined in GSM 03.52. In the following those control channels are considered which carry signalling information or specific types of user packet information: [to be completed]:

- i) CTS Beacon CHannel (CTSBCH): downlink only, used to broadcast Cell specific information and fixed part identification information;
- ii) CTS Paging CHannel (CTSPCH): downlink only, used to send page requests to Mobile Stations (MSs);
- iii) CTS Access Random CHannel (CTSARCH): uplink only, used to request a Dedicated Control CHannel;

- iv) CTS-Access Grant CHannel (CTSAGCH): downlink only, used to allocate a Dedicated Control CHannel;
- v) Fast Associated Control CHannel (FACCH): bi-directional, associated with a Traffic CHannel;
- vi) Slow Associated Control CHannel (SACCH): bi-directional, associated with a Traffic CHannel;

Two service access points are defined on signalling layer 2 which are discriminated by their Service Access Point Identifiers (SAPI) (see GSM 04.06):

- i) SAPI 0: supports the transfer of signalling information including user-user information;
- ii) SAPI 3: supports the transfer of user short messages.

Layer 3 selects the service access point, the logical control channel and the mode of operation of layer 2 (acknowledged, unacknowledged or random access, see GSM 04.05 and GSM 04.06) as required for each individual message.

## 1.6 Overview of control procedures

#### 1.6.1 List of procedures

The following procedures are specified in the present document:

- a) Clause 4 specifies elementary procedures for Radio Resource management:
  - Idle mode procedures (subclause 4.2):
    - alive check procedure (subclauses 4.2.1.2 and 4.2.2.3);
    - BCH information broadcasting (subclause 4.2.2.1);
    - CCH information broadcasting (subclause 4.2.2.2);
    - hunting (subclause 4.2.2.4);
    - connectionless group alerting (subclause 4.2.2.5).
  - RR connection establishment (subclause 4.3):
    - entering the dedicated mode: immediate assignment procedure (subclause 4.3.1.1);
    - paging procedure for RR connection establishment (subclause 4.3.2).
  - Procedures in dedicated mode (subclause 4.4):
    - intracell change of channels (subclause 4.4.4);
    - channel mode change procedure (subclause 4.4.6);
    - ciphering mode setting procedure (subclause 4.4.7).
  - RR connection release (subclause 4.4.13).
- b) Clause 5 specifies elementary procedures for CTS-Mobility Management:
  - mobility management common procedures (subclause 5.2):
    - CTS attach procedure (subclause 5.2.1);
    - CTS periodic attach updating procedure (subclause 5.2.2);
    - CTS detach procedure (subclause 5.2.3);
    - CTS de-enrolment procedure (subclause 5.2.4);
    - CTS mutual authentication procedure (subclause 5.2.5);

- CTS-MSI update procedure (subclause 5.2.6).
- mobility management specific procedures (subclause 5.3):
  - CTS enrolment procedure (subclause 5.3.1);
  - CTS de-enrolment procedure (subclause 5.3.2).
- c) Clause 6 specifies CTS specific elementary procedure for circuit switched Call Control:
  - signalling procedures during the active state:
    - hook flash procedure (subclause 6.1.2).

The elementary procedures can be combined to form structured procedures. Examples of such structured procedures are given in clause 7. This part of the Technical Specification is only provided for guidance to assist implementations.

Clause 8 specifies actions to be taken on various error conditions and also provides rules to ensure compatibility with future enhancements of the protocol.

## 1.7 Applicability of implementations

The applicability of procedures of the present document for the mobile station is dependent on the services and functions which are to be supported by a mobile station.

## 2 References

The following documents contain provisions which, through reference in this text, constitute provisions of the present document.

- References are either specific (identified by date of publication, edition number, version number, etc.) or non-specific.
- For a specific reference, subsequent revisions do not apply.
- For a non-specific reference, the latest version applies. In the case of a reference to a 3GPP document (including a GSM document), a non-specific reference implicitly refers to the latest version of that document *in the same Release as the present document*.
- [1] GSM 01.02: "Digital cellular telecommunications system (Phase 2+); General description of a GSM Public Land Mobile Network (PLMN)".
- [2] GSM 01.04: "Digital cellular telecommunications system (Phase 2+); Abbreviations and acronyms".
- [3] GSM 02.02: "Digital cellular telecommunications system (Phase 2+); Bearer Services (BS) supported by a GSM Public Land Mobile Network (PLMN)".
- [4] GSM 02.03: "Digital cellular telecommunications system (Phase 2+); Teleservices supported by a GSM Public Land Mobile Network (PLMN)".
- [5] GSM 02.09: "Digital cellular telecommunications system (Phase 2+); Security aspects".
- [6] GSM 02.11: "Digital cellular telecommunications system (Phase 2+); Service accessibility".
- [7] GSM 02.17: "Digital cellular telecommunications system (Phase 2+); Subscriber Identity Modules (SIM); Functional characteristics".
- [8] GSM 02.40: "Digital cellular telecommunications system (Phase 2+); Procedures for call progress indications".
- [9] GSM 03.01: "Digital cellular telecommunications system (Phase 2+); Network functions".

[10]	GSM 03.03: "Digital cellular telecommunications system (Phase 2+); Numbering, addressing and identification".
[11]	GSM 03.13: "Digital cellular telecommunications system (Phase 2+); Discontinuous Reception (DRX) in the GSM system".
[12]	GSM 03.14: "Digital cellular telecommunications system (Phase 2+); Support of Dual Tone Multi-Frequency signalling (DTMF) via the GSM system".
[13]	GSM 03.20: "Digital cellular telecommunications system (Phase 2+); Security related network functions".
[14]	GSM 03.22: "Digital cellular telecommunications system (Phase 2+); Functions related to Mobile Station (MS) in idle mode and group receive mode".
[15]	GSM 04.02: "Digital cellular telecommunications system (Phase 2+); GSM Public Land Mobile Network (PLMN) access reference configuration".
[16]	GSM 04.03: "Digital cellular telecommunications system (Phase 2+); Mobile Station - Base Station System (MS - BSS) interface; Channel structures and access capabilities".
[17]	GSM 04.04: "Digital cellular telecommunications system (Phase 2+); Layer 1; General requirements".
[18]	GSM 04.05: "Digital cellular telecommunications system (Phase 2+); Data Link (DL) layer; General aspects".
[19]	GSM 04.06: "Digital cellular telecommunications system (Phase 2+); Mobile Station - Base Station System (MS - BSS) interface; Data Link (DL) layer specification".
[20]	GSM 04.07: "Digital cellular telecommunications system (Phase 2+); Mobile radio interface signalling layer 3; General aspects".
[21]	GSM 04.10: "Digital cellular telecommunications system (Phase 2+); Mobile radio interface layer 3; Supplementary services specification; General aspects".
[22]	GSM 04.11: "Digital cellular telecommunications system (Phase 2+); Point-to-Point (PP) Short Message Service (SMS) support on mobile radio interface".
[23]	GSM 04.12: "Digital cellular telecommunications system (Phase 2+); Short Message Service Cell Broadcast (SMSCB) support on the mobile radio interface".
[24]	GSM 04.80: "Digital cellular telecommunications system (Phase 2+); Mobile radio interface layer 3 supplementary services specification; Formats and coding".
[25]	GSM 04.81: "Digital cellular telecommunications system (Phase 2+); Line identification supplementary services; Stage 3".
[26]	GSM 04.82: "Digital cellular telecommunications system (Phase 2+); Call Forwarding (CF) supplementary services; Stage 3".
[27]	GSM 04.83: "Digital cellular telecommunications system (Phase 2+); Call Waiting (CW) and Call Hold (HOLD) supplementary services; Stage 3".
[28]	GSM 04.84: "Digital cellular telecommunications system (Phase 2+); MultiParty (MPTY) supplementary services; Stage 3".
[29]	GSM 04.85: "Digital cellular telecommunications system (Phase 2+); Closed User Group (CUG) supplementary services; Stage 3".
[30]	GSM 04.86: "Digital cellular telecommunications system (Phase 2+); Advice of Charge (AoC) supplementary services; Stage 3".
[31]	GSM 04.88: "Digital cellular telecommunications system (Phase 2+); Call Barring (CB) supplementary services; Stage 3".

[32]	GSM 05.02: "Digital cellular telecommunications system (Phase 2+); Multiplexing and multiple access on the radio path".
[33]	GSM 05.05: "Digital cellular telecommunications system (Phase 2+); Radio transmission and reception".
[34]	GSM 05.08: "Digital cellular telecommunications system (Phase 2+); Radio subsystem link control".
[35]	GSM 05.10: "Digital cellular telecommunications system (Phase 2+); Radio subsystem synchronisation".
[36]	GSM 07.01: "Digital cellular telecommunications system (Phase 2+); General on Terminal Adaptation Functions (TAF) for Mobile Stations (MS)".
[37]	GSM 09.02: "Digital cellular telecommunications system (Phase 2+); Mobile Application Part (MAP) specification".
[38]	GSM 09.07: "Digital cellular telecommunications system (Phase 2+); General requirements on interworking between the Public Land Mobile Network (PLMN) and the Integrated Services Digital Network (ISDN) or Public Switched Telephone Network (PSTN)".
[39]	GSM 11.10: "Digital cellular telecommunications system (Phase 2+); Mobile Station (MS) conformance specification".
[40]	GSM 11.21: "Digital cellular telecommunications system (Phase 2+); Base Station System (BSS) equipment specification".
[41]	ISO/IEC 646 (1991): "Information technology - ISO 7-bit coded character set for information interchange".
[42]	ISO/IEC 6429: "Information technology - Control functions for coded character sets".
[43]	ISO 8348 (1987) (Addendum 2): "Information processing systems - Data communications - Network service definition".
[44]	ITU-T Recommendation E.163: "Numbering plan for the international telephone service".
[45]	ITU-T Recommendation E.164: "The international public telecommunication numbering plan".
[46]	ITU-T Recommendation E.212: "The international identification plan for mobile terminals and mobile users".
[47]	ITU-T Recommendation F.69 (1993): "The international telex service - Service and operational provisions of telex destination codes and telex network identification codes".
[48]	ITU-T Recommendation I.330: "ISDN numbering and addressing principles".
[49]	ITU-T Recommendation I.440 (1989): "ISDN user-network interface data link layer - General aspects".
[50]	ITU-T Recommendation I.450 (1989): "ISDN user-network interface layer 3 - General aspects".
[51]	ITU-T Recommendation I.500 (1993): "General structure of the ISDN interworking recommendations".
[52]	ITU-T Recommendation T.50: "International Reference Alphabet (IRA) (Formerly International Alphabet No. 5 or IA5) - Information technology - 7-bit coded character set for information interchange".
[53]	ITU-T Recommendation Q.931: "ISDN user-network interface layer 3 specification for basic control".
[54]	ITU-T Recommendation V.21: "300 bits per second duplex modem standardized for use in the general switched telephone network".

[74]

[55]	ITU-T Recommendation V.22: "1200 bits per second duplex modem standardized for use in the general switched telephone network and on point-to-point 2-wire leased telephone-type circuits".
[56]	ITU-T Recommendation V.22bis: "2400 bits per second duplex modem using the frequency division technique standardized for use on the general switched telephone network and on point-to-point 2-wire leased telephone-type circuits".
[57]	$ITU-T\ Recommendation\ V.23:\ "600/1200-baud\ modem\ standardized\ for\ use\ in\ the\ general\ switched\ telephone\ network".$
[58]	ITU-T Recommendation V.26ter: "2400 bits per second duplex modem using the echo cancellation technique standardized for use on the general switched telephone network and on point-to-point 2-wire leased telephone-type circuits".
[59]	ITU-T Recommendation V.32: "A family of 2-wire, duplex modems operating at data signalling rates of up to 9600 bit/s for use on the general switched telephone network and on leased telephone-type circuits".
[60]	ITU-T Recommendation V.110: "Support by an ISDN of data terminal equipments with V-Series type interfaces".
[61]	ITU-T Recommendation V.120: "Support by an ISDN of data terminal equipment with V-Series type interfaces with provision for statistical multiplexing".
[62]	ITU-T Recommendation X.21: "Interface between Data Terminal Equipment and Data Circuit-terminating Equipment for synchronous operation on public data networks".
[63]	ITU-T Recommendation X.25: "Interface between Data Terminal Equipment (DTE) and Data Circuit-terminating Equipment (DCE) for terminals operating in the packet mode and connected to public data networks by dedicated circuit".
[64]	ITU-T Recommendation X.28: "DTE/DCE interface for a start-stop mode Data Terminal Equipment accessing the Packet Assembly/Disassembly facility (PAD) in a public data network situated in the same country".
[65]	ITU-T Recommendation X.30: "Support of X.21, X.21 bis and X.20 bis based Data Terminal Equipments (DTEs) by an Integrated Services Digital Network (ISDN)".
[66]	ITU-T Recommendation X.31: "Support of packet mode terminal equipment by an ISDN".
[67]	ITU-T Recommendation X.32: "Interface between Data Terminal Equipment (DTE) and Data Circuit-terminating Equipment (DCE) for terminals operating in the packet mode and accessing a packet-switched public data network through a public switched telephone network or an integrated services digital network or a circuit-switched public data network".
[68]	ITU-T Recommendation X.75 (1988): "Packet-switched signalling system between public networks providing data transmission services".
[69]	ITU-T Recommendation X.121: "International numbering plan for public data networks".
[70]	ETSI ETS 300 102-1: "Integrated Services Digital Network (ISDN); User-network interface layer 3; Specifications for basic call control".
[71]	ETSI ETS 300 102-2: "Integrated Services Digital Network (ISDN); User-network interface layer 3; Specifications for basic call control; Specification Description Language (SDL) diagrams".
[72]	ISO/IEC 10646: "Information technology - Universal Multiple-Octet Coded Character Set (UCS)".
[73]	GSM 02.56: "Digital cellular telecommunications system (Phase 2+); GSM Cordless Telephony System (CTS), Phase 1; Service description; Stage 1".

System (CTS), Phase 1; CTS Architecture Description; Stage 2".

GSM 03.56: "Digital cellular telecommunications system (Phase 2+); GSM Cordless Telephony

- [75] GSM 03.52: "Digital cellular telecommunications system (Phase 2+); GSM Cordless Telephony System (CTS), Phase 1; Lower Layers of the CTS Radio Interface; Stage 2".
- [76] GSM 04.08: "Digital cellular telecommunications system (Phase 2+); Mobile radio interface; Layer 3 specification".

## 3 Definitions, abbreviations and Random values

#### 3.1 Definitions

For the purposes of the present document, the terms and definitions given in GSM 04.08 and the following apply:

**CTS-idle mode:** in this mode, the mobile station is not allocated any dedicated channel; it listens to the BCH and to the CCH when requested

NOTE: In CTS-RR connected mode, main DCCH means FACCH.4 CTS-Radio Resource management procedures

#### 3.2 Abbreviations

For the purposes of the present document, the abbreviations given in GSM 01.04 apply.

#### 3.3 Random values

In a number of places in the present document, it is mentioned that some value must take a "random" value, in a given range, or more generally with some statistical distribution.

It is required that there is a low probability that two equipment's in the same conditions (including the case of two equipment's of the same type from the same manufacturer) will choose the same value. Moreover, it is required that, if it happens that two equipment's in similar conditions choose the same value, the probability of their choices being identical at the next occasion is the same as if their first choices had been different.

The meaning of such a specification is that any statistical test for these values, done on a series of similar events, will obtain a result statistically compatible with the specified distribution. This shall hold even in the cases where the tests are conducted with a subset of possible events, with some common parameters. Moreover, basic tests of independence of the values within the series shall pass.

Data against which correlation with the values shall not be found are the protocol state, or the IMSI, or identities or other unrelated information broadcast by the network, or the current TDMA frame number.

## 4 Overview/General

#### 4.1 Overview

#### 4.1.1 General

CTS-Radio Resource management procedures include the functions related to the management of the common transmission resources, e.g. the physical channels and the data link connections on control channels.

The general purpose of CTS-Radio Resource procedures is to establish, maintain and release RR connections that allow a point-to-point dialogue between the CTS-FP and a mobile station. Moreover, Radio Resource management procedures at the CTS-MS side include the reception of the uni-directional CTSBCH and CTSPCH when no RR connection is established. This permits automatic cell selection/reselection.

#### 4.1.2 Services provided to upper layers

A CTS-RR connection is a physical connection used by the two peer entities to support the upper layers' exchange of information flows.

#### 4.1.2.1 CTS-Idle mode

In CTS-idle mode no CTS-RR connection exists.

The RR procedures include (on the mobile station side) those for automatic cell selection/reselection. The RR entity indicates to upper layers the unavailability of a CTSBCH/CTSPCH and the cell change when decided by the RR entity. Upper layers are advised of the CTSBCH broadcast information when a new cell has been selected, or when a relevant part of this information changes.

In Idle mode, upper layers can require the establishment of an CTS-RR connection.

In Idle-mode, RR procedures provide the following service:

- alive check (CTS-FP side);
- hunting;
- connectionless group alerting;
- CTS system information broadcasting.

Connectionless group alerting is a point-to-multipoint unidirectional transmission on the CTSPCH. It can only be initiated by the CTS-FP.

#### 4.1.2.2 Dedicated mode

In dedicated mode, the CTS-RR connection is a physical point-to-point bi-directional connection, and includes a SAPI 0 data link connection operating in multiframe mode on the main DCCH. If dedicated mode is established, RR procedures provide the following services:

- establishment/release of multiframe mode on data link layer connections other than SAPI 0, on the main DCCH or on the SACCH associated with the channel carrying the main signalling link;
- transfer of messages on any data link layer connection;
- indication of temporary unavailability of transmission (suspension, resuming);
- indication of loss of CTS-RR connection;
- setting/change of the transmission mode on the physical channels, including change of type of channel, change
  of the coding/decoding/transcoding mode and setting of ciphering;
- release of an CTS-RR connection.

## 4.1.3 Services required from data link and physical layers

The CTS-RR sublayer uses the services provided by the data link layer as defined in GSM 04.05.

Moreover, the RR sublayer directly uses services provided by the physical layer such as CTSBCH searching, as defined in GSM 04.04.

## 4.1.4 Change of dedicated channels

NOTE: for this version of the protocol, no intra-cell handover is to be defined.

#### 4.1.4.1 Change of dedicated channels using SAPI = 0

In case a change of dedicated channels is required using a dedicated assignment procedure, the RR sublayer will request the data link layer to suspend multiple frame operation before the mobile station leaves the old channel. When the channel change has been completed, layer 3 will request the data link layer to resume multiple frame operation again. The layer 2 suspend/resume procedures are described in GSM 04.05 and 04.06.

These procedures are specified in such a way that a loss of a layer 3 message cannot occur on the radio interface. However, messages sent from the mobile station to the CTS-FP may be duplicated by the data link layer if a message has been transmitted but not yet completely acknowledged before the mobile station leaves the old channel (see GSM 04.06).

As the RR sublayer is controlling the channel change, a duplication of RR messages does not occur. However, there are some procedures for which a duplication is possible, e.g. DTMF procedures. For all upper layer procedures using the transport service of the RR sub-layer (e.g. MM and CM procedures), the request messages sent by the mobile station contain a sequence number in order to allow the CTS-FP to detect duplicated messages, which are then ignored by the CTS-FP. The procedures for sequenced transmission on layer 3 are described in subclause 4.1.4.2.

#### 4.1.4.2 Change of dedicated channels using other SAPIs than 0

For SAPIs other than 0, the data link procedures described in GSM 04.06 do not provide any guarantee against message loss or duplication.

Therefore, if an application uses a SAPI other than 0 and if this application is sensitive to message loss or duplication, then it has to define its own protection mechanism. No general protection mechanism is provided by the protocol defined in the present document.

#### 4.1.4.3 Sequenced message transfer operation

Upper layer messages sent using the RR sub-layer transport service from the mobile station to the CTS-FP can be duplicated by the data link layer in the following case:

- a channel change of dedicated channels is required (assignment procedure) and the last layer 2 frame has not been acknowledged by the peer data link layer before the mobile station leaves the old channel.

In this case, the mobile station does not know whether the CTS-FP has received the message correctly. Therefore, the mobile station has to send the message again after the new dedicated channel is established (see GSM 04.06).

The CTS-FP must be able to detect the duplicated received message. Therefore, each concerned upper layer message must be marked with a send sequence number.

For historical reasons (see GSM 04.08), messages sent with the CC, SS and MM PDs share the same sequence numbering.

#### 4.1.4.3.1 Variables and sequence numbers

#### 4.1.4.3.1.1 Send state variable V(SD)

The RR sublayer of the mobile station shall have one associated send state variable V(SD) ("Send Duplicated") for each upper layer message flow. The send state variable denotes the sequence number of the next in sequence numbered message in the flow to be transmitted. The value of the corresponding send state variable shall be incremented by one with each numbered message transmission. Arithmetic operations on V(SD) are performed modulo 2.

#### 4.1.4.3.1.2 Send sequence number N(SD)

At the time when such a message to be numbered is designated for transmission, the value of N(SD) for the message to be transferred is set equal to the value of the send state variable V(SD). See GSM 04.07.

## 4.1.4.3.2 Procedures for the initiation, transfer execution and termination of the sequenced message transfer operation

#### 4.1.4.3.2.1 Initiation

The sequenced message transfer operation is initiated by establishing a RR connection. The send state variables V(SD) are set to 0.

#### 4.1.4.3.2.2 Transfer Execution

The CTS-FP must compare the send sequence numbers of pairs of subsequent messages in the same upper layer messages flow. In case the send sequence numbers of two subsequent messages in a flow are not identical, no duplication has occurred. In case the send sequence numbers are identical, the CTS-FP must ignore the second one of the received messages.

#### 4.1.4.3.2.3 Termination

The sequenced message transfer operation is terminated by the RR connection release procedure.

## 4.1.5 Procedure for Service Request and Contention Resolution

Upon seizure of the assigned dedicated channel, the mobile station establishes the main signalling link on this channel by sending a layer 2 SABM frame containing a layer 3 service request message. The data link layer will store this message to perform the contention resolution. The service request message will be returned by the CTS-FP in the UA frame.

The data link layer in the mobile station compares the content of the information field (i.e. the layer 3 service request message) received in the UA frame with the stored message and leaves the channel in case they do not match. This procedure resolves contentions in the case where several mobile stations have accessed at the same random access slot and with the same random reference and one has succeeded due to capture. The full description of the procedure is given in GSM 04.06.

The purpose of the service request message is to indicate to the CTS-FP which service the mobile station is requesting. This then allows the CTS-FP to decide how to proceed (e.g. to authenticate or not).

The service request message must contain the identity of the mobile station and may include further information which can be sent without encryption.

Figure 4.1/GSM 04.56: Service request and contention resolution

## 4.2 Idle mode procedures

#### 4.2.1 Mobile Station side

#### 4.2.1.1 CTSBCH and CTSPCH monitoring

In CTS-idle mode, a MS which has recognised a known FPBI, listens to the CTSBCH and to the CTSPCH when CTSPCH indicator flags indicates "CTSPCH to decode".

#### 4.2.1.2 Alive check response

When the CTSPCH contains an CTS ALIVE CHECK REQUEST message, the addressed CTS-MS shall send a CTS ALIVE CHECK RESPONSE message. A CTS ALIVE CHECK RESPONSE message shall be send by the CTS-MS in response to each CTS ALIVE CHECK REQUEST message received with the corresponding CTSMSI.

The CTS ALIVE CHECK RESPONSE messages are sent on the CTSARCH and contain as parameters:

- an establishment cause which corresponds to "attachment update" given by the RR entity in response to a CTS ALIVE CHECK REQUEST message;
- the CTS-MS Mobile Subscriber Identity.

#### 4.2.2 CTS-FP side

#### 4.2.2.1 CTSBCH information broadcasting

FPBI and CTS-FP status are regularly broadcast by the CTS-FP on the CTSBCH. Based on this information, the CTS-MS is able to decide whether it may gain access to the CTS-FP.

The information broadcast may be grouped in the following classes:

- information giving unique identification of the current CTS-FP cell;
- information describing the Training Sequence Code to be used in dedicated mode;
- information describing the Radio Resource availability at the CTS-FP side;
- information describing the presence of a Paging Channel;
- information describing the timeslot number to be used by the CTSCCH except CTSBCH (i.e. CTSARCH, CTSPCH and CTSAGCH);
- information describing the shifting status of the CTSBCH.

#### 4.2.2.2 CTSPCH information broadcasting

In pure idle mode, the Paging Channel is not used. The CTS-FP shall set the CTSPCH indicator flag to "no CTSPCH" value.

#### 4.2.2.3 Alive check

The CTS-FP initiates the alive check procedure by broadcasting a CTS PAGING REQUEST message with an indication of Alive Check, and start timer TC3101. The CTSPCH indicator flag shall be set to "CTSPCH to decode" and the CTSBCH-SB Status field shall be set to idle. The alive check procedure shall not be triggered if the CTS-FP is in a busy state (no radio resources available); i.e. CTS-FP RR layer shall reject upper layer alive check procedure initiation request.

When receiving a CTS PAGING REQUEST with an indication of Alive Check, the CTS-MS shall send 2 CTS ACCESS REQUEST messages.

When receiving a valid CTS ACCESS REQUEST, the CTS-FP shall stop timer TC3101.

The CTS-FP RR sublayer shall end the alive check procedure when:

- a CTS ACCESS REQUEST with a valid cause has been received from the polled CTS-MS; or
- -- timer TC3101 expires; or
- an end of alive check procedure is triggered by the upper layer; or
- a paging procedure requiring a new PAGING REQUEST message to be started; or
- a busy state occurs (i.e. no more radio resource available).

The CTS-FP shall ignore unsolicited or out of sequence CTS ACCESS REQUEST.

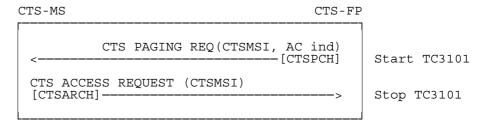


Figure 4.2/GSM 04.56: alive check sequence

#### 4.2.2.4 Hunting

The CTS-FP initiates the hunting procedure by continuously broadcasting CTS HUNTING REQUEST messages on the CTSPCH channel, and start timer TC3102. The CTSPCH indicator flag shall be set to "CTSPCH to decode". The value of TC3102 is manufacturer dependant, but shall be less than 120 s. The hunting procedure shall not be triggered if the CTS-FP is in a busy state (no radio resources available); i.e. CTS-FP RR layer shall reject upper layer hunting procedure initiation request.

Upon receipt of a CTS HUNTING REQUEST, the CTS-MSs shall act as following:

- if group alerting was requested, the CTS-MS shall alert if the received connectionless group CTSMSI is equal to its assigned connectionless group CTSMSI (if any);
- if collective alerting was requested, the CTS-MS shall start alerting.

Hunted CTS-MS are required to receive and analyse the message sent on the next CTSPCH occurrence. The CTS-MSs shall consider that the hunting procedure has been ended by the CTS-FP when no CTS HUNTING REQUEST message has been received within the 3 latest occurrences of the CTSPCH. The CTS-MSs shall stop alerting.

The CTS-FP shall end the hunting procedure when:

- T<sub>C3102</sub> expires; or
- a paging procedure is to be started; or
- an end of hunting procedure is triggered by the CTS-FP user; or
- a busy state occurs (i.e. no more radio resource available).

A CTS-MS shall stop alerting when requested by the user.

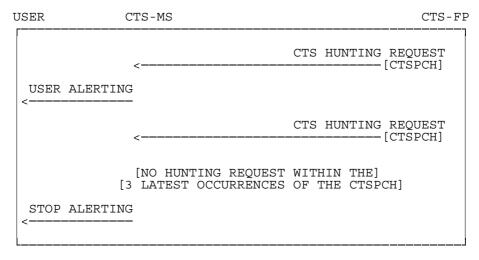


Figure 4.3/GSM 04.56: hunting sequence

#### 4.2.2.5 Connectionless group alerting

On receipt of a request for an incoming call, the CTS-FP may decide to alert part or all enrolled CTS-MSs.

In this case the CTS-FP shall request the RR sublayer to send a request for alerting indicating which CTS-MSs shall alert. Either the group mask shall be used to alert all CTS-MSs having an assigned connectionless group CTSMSI matching the group mask, or the connectionless CTSMSI shall be used to alert the CTS-MSs having this connectionless CTSMSI assigned, or the Collective Broadcast Identifier shall be used to alert all CTS-MSs.

This Connectionless CTS-MS paging procedure should be used for group or collective connectionless alerting service when the number of paged CTS-MS is greater than the number of available CTS-FP radio resources.

The CTS-FP initiates the connectionless group alerting procedure by broadcasting continuously a GROUP ALERTING REQUEST message on the CTSPCH subchannel.. The CTSPCH indicator flag shall be set to "CTSPCH to decode" and the CTSBCH-SB Status field shall be set to idle. Only connectionless group CTSMSI or Connectionless Broadcast Identifier are allowed in a CTS GROUP ALERTING REQUEST message.

Upon receipt of a CTS GROUP ALERTING REQUEST, the CTS-MS shall react as following:

- if group alerting was requested, the CTS-MS shall alert if the received connectionless group CTSMSI is equal to its assigned connectionless group CTSMSI (if any);
- if collective alerting was requested, the CTS-MS shall start alerting.

Alerted CTS-MSs are required to receive and analyse the message sent on the next CTSPCH. Unless the user accept the call, the CTS-MS shall not answer to this paging. When the user accept the call, the "off hook" shall trigger an outgoing call request. The CTS-FP shall initiate the immediate assignment procedure as specified in subclause 4.3.1. The CTS-FP shall suspend the connectionless paging procedure. The establishment of the main signalling link is initiated by the use of an SABM. The SETUP message shall be then passed to the CTS-FP.

At the CTS-FP, this outgoing call is directly mapped to the awaiting incoming call.

The CTS-FP shall stop the connectionless group alerting procedure when:

- the awaiting call is answered by a paged CTS-MS; or
- the fixed line end user hangs up before the call is answered; or
- the call is answered by another device (e.g. answering machine); or
- the paging timer expires.

The connectionless group alerting procedure could be resumed if the call establishment failed.

The CTS-MSs shall consider that the connectionless group alerting procedure has been ended by the CTS-FP when CTS GROUP ALERTING REQUEST message has not been received within the 3 latest occurrences of the CTSPCH. The CTS-MSs shall stop alerting.

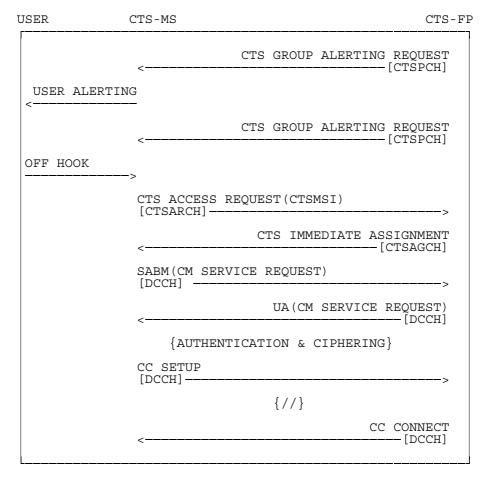


Figure 4.4/GSM 04.56: connectionless group alerting and response sequence

#### 4.2.2.5 CTS system information broadcasting

CTS SYSTEM INFORMATION TYPE 1, 2 or 3 may be broadcast by the CTS-FP on the CTSPCH channel.

CTS SYSTEM INFORMATION TYPE 1, 2 or 3 may be sent to the attached CTS-MSs when the TFH list or the TFH parameters need to be changed.

The information broadcast may be group in the following classes:

- information about the frequency list to used;
- information about the Total Frequency Hopping parameters to used.

#### 4.3 RR connection establishment

## 4.3.1 RR connection establishment initiated by the mobile station

The purpose of the immediate assignment procedure is to establish an RR connection between the mobile station and the CTS-FP.

#### 4.3.1.1 Entering the dedicated mode: immediate assignment procedure

The immediate assignment procedure can only be initiated by the RR entity of the mobile station. Initiation is triggered by request from the MM sublayer to enter the dedicated mode or by the RR entity in response to a CTS PAGING REQUEST message. Upon such a request:

- if access to the CTS-FP is allowed (as defined in subclause 4.3.1.1.1), the RR entity of the mobile station initiates the immediate assignment procedure as defined in subclause 4.3.1.1.2;

- otherwise, it rejects the request.

The request from the MM sublayer to establish an RR connection specifies an establishment cause. Similarly, the request from the RR entity to establish a RR connection in response to a paging message specifies one of the establishment causes "answer to paging".

#### 4.3.1.1.1 Permission to access the CTS-FP

Access to the CTS-FP is allowed to any enrolled CTS-MS when the CTSBCH status field indicates idle. CTS-MS shall not try to access the CTS-FP when the status field indicates busy and it shall continue to decode CTSBCH and if needed CTSPCH or CTSAGCH.

#### 4.3.1.1.2 Initiation of the immediate assignment procedure

The RR entity of the CTS-MS initiates the immediate assignment procedure by scheduling the sending on the CTSARCH and leaving idle mode. It then send maximally  $M_{CTS} + 1$  CTS ACCESS REQUEST messages on the CTSARCH.

The CTS ACCESS REQUEST messages are sent on the non-hopping CTSARCH for the enrolment and attachment MM-procedures and on the hopping CTSARCH for the other cases. They contain as parameters:

- an establishment cause which corresponds to the establishment causes given by the MM sublayer or which corresponds to one of the establishment causes "answer to paging" given by the RR entity in response to a CTS PAGING REQUEST message;
- the CTS-MS Mobile Subscriber Identity.

After sending the first CTS ACCESS REQUEST, the CTS-MS shall start listening continuously to the CTSAGCH. After having sent  $M_{\text{CTS}} + 1$  CTS ACCESS REQUEST messages, the CTS-RR entity of the CTS-MS shall start timer  $T_{\text{C3150}}$ . At expiry of this timer, the immediate assignment procedure is aborted. If the immediate assignment procedure was triggered by a request from the CTS-MM sublayer, a access failure is indicated to the CTS-MM sublayer.

#### 4.3.1.1.3 Answer from the CTS-FP

#### 4.3.1.1.3.1 On receipt of a CTS ACCESS REQUEST message

The CTS-FP may allocate a dedicated channel to the CTS-MS by sending an CTS IMMEDIATE ASSIGNMENT message in unacknowledged mode. Timer  $T_{\rm C3103}$  is then started by the CTS-RR layer of the CTS-FP.

The CTS IMMEDIATE ASSIGNMENT message contains:

- the access request reference (cause, CTSMSI);
- the description of the dedicated channel;
- optionally the multiframe number reference.

#### 4.3.1.1.3.2 Assignment rejection

If no channel is available for assignment, the CTS-FP may send to the CTS-MS a CTS IMMEDIATE ASSIGNMENT REJECT in unacknowledged mode in the CTSAGCH channel. This message contains an access request reference and a wait indication.

#### 4.3.1.1.4 Assignment completion

The immediate assignment procedure is terminated on the CTS-FP side when the main signalling link is established. Timer  $T_{C3103}$  is stopped and the MM sublayer on the CTS-FP side is informed that the RR entity has entered the dedicated mode.

On the mobile station side, the procedure is terminated when the establishment of the main signalling link is confirmed. The MM sublayer is informed that the RR entity has entered the dedicated mode.

#### 4.3.1.1.4.1 Early classmark sending

Early classmark sending consists in the mobile station sending as early as possible after access a CTS CLASSMARK CHANGE message to provide the CTS-FP with additional classmark information.

A mobile station which implements the "Controlled Early Classmark Sending" option shall indicate it in the classmark (ES IND bit).

#### 4.3.1.1.5 Abnormal cases

If a lower layer failure occurs on the mobile station side on the new channel before the successful establishment of the main signalling link, the allocated channels are released; the subsequent behaviour of the mobile station depends on the type of failure and previous actions.

- If the failure is due to information field mismatch in the contention resolution procedure, see subclause 4.1.5, and no repetition as described in this paragraph has been performed, the immediate assignment procedure shall be repeated.
- If the failure is due to any other reason or if a repetition triggered by a contention resolution failure has been performed. The mobile station returns to idle mode (RR connection establishment failure), transactions in progress are aborted and cell reselection then may take place.

#### 4.3.2 Paging procedure for RR connection establishment

The CTS-FP can initiate the establishment of an RR connection by the paging procedure for RR connection establishment. Such a procedure can only be initiated by the CTS-FP.

#### 4.3.2.1 Paging initiation by the CTS-FP

The CTS-FP initiates the paging procedure by broadcasting a CTS PAGING REQUEST message on the CTSPCH subchannel and starts timer  $T_{C3104}$ . The CTSPCH indicator flag shall be set to "CTSPCH to decode" and the CTSBCH-SB Status field shall be set to idle.

A CTS PAGING REQUEST message may include more than one CTS-MS identification. Only Assigned Individual CTSMSIs or are allowed in a CTS PAGING REQUEST message.

The CTS-MS is required to receive and analyse the paging messages sent on the CTSPCH according to the multiframe paging period.

#### 4.3.2.2 Paging response

Upon receipt of an CTS PAGING REQUEST, the addressed CTS-MS shall initiate the immediate assignment procedure as specified in subclause 4.3.1 The establishment of the main signalling link is then initiated by the use of an SABM with information field containing the paging response message. The MM sublayer in the CTS-MS is informed that an CTS-RR connection exists.

Upon receipt of the paging response message, timer  $T_{\rm C3104}$  is stopped and the MM sublayer in the CTS-FP is informed that a CTS-RR connection exits.

#### 4.3.2.3 Abnormal cases

The CTS-FP shall abort the paging procedure when:

- an end of paging procedure is triggered by the upper layer i.e.:
  - the fixed line end user hangs up before the call is answered; or
  - the call is answered by another device (e.g. answering machine); or
  - the call is forwarded; or
  - the paging timer expires.

If timer  $T_{C3104}$  expires and a valid CTS PAGING RESPONSE message has not been received, a specific failure indication shall be triggered to the upper layer and the CTS-FP upper layer may repeat the paging procedure.

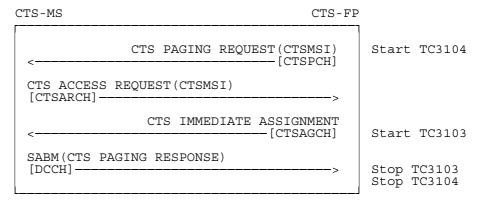


Figure 4.5/GSM 04.56: individual paging sequence

#### 4.4 Procedures in dedicated mode

Procedures described in this subclause apply to the dedicated mode.

Direct transition between dedicated mode and group transmit mode is possible in both directions by use of the following procedures:

- Channel assignment procedure;
- Channel mode modify procedure.

## 4.4.1 SACCH procedures

#### 4.4.1.1 General

In RR connected mode, the SACCH is used in signalling at least for measurement results transmission from the CTS-MS. Continuous transmission must occur in both directions. For that purpose, in CTS-MS to CTS-FP direction, measurement result messages are sent at each possible occasion when nothing else has to be sent. Similarly, empty UI frames are sent in the CTS-FP to CTS-MS direction when nothing else has to be sent.

#### 4.4.1.2 Measurement report

When in RR connected mode, the CTS-MS regularly sends CTS MEASURMENT REPORT messages to the CTS-FP. These messages contain measurement results about reception characteristics from the current cell. They are sent on the slow ACCH, in unacknowledged mode. If no other message is scheduled on the SACCH at the instant when a layer 2 frame is due to be sent, then the CTS-MS shall send a CTS MEASUREMENT REPORT message. The interval between two successive layer 2 frame containing CTS MEASUREMENT REPORT messages shall not exceed one layer 2 frame.

## 4.4.2 Transfer of messages and link layer service provision

When in dedicated mode or in group transmit mode, upper layers can send messages in multiframe or unacknowledged mode on SAPI 0.

Moreover, but only when in dedicated mode, upper layers have access to the full link layer services for SAPIs other than 0, with the exception of the error indication and local end release that are directly treated by the RR sublayer, as specified in particular places of clause 4.

#### 4.4.3 Intracell handover procedure

In dedicated mode, an intracell change of channel can be requested by upper layers for changing the channel type, or decided by the RR sublayer, e.g. for an internal handover. This change may be performed through the dedicated channel assignment procedure.

The purpose of the channel assignment procedure is to completely modify the physical channel configuration of the mobile station without frequency redefinition or change in synchronisation while staying in the same CTS-cell.

This procedure shall not be used for changing between dependent configurations, i.e. those sharing Radio Resource for the main signalling link. An example of dependent channels is a full rate channel and one of the corresponding half rate channels. In multislot operation however, it is allowed to use the same timeslots before and after the assignment, as long as the main signalling link has been changed. The only procedures provided for changing between dependent configurations for the main signalling link are the additional assignment and the partial release procedures.

The channel assignment procedure happens only in dedicated mode. This procedure cannot be used in the idle mode; in this case the immediate assignment procedure is used.

The channel assignment procedure includes:

- the suspension of normal operation except for RR management (layer 3);
- the release of the main signalling link, and of the other data links as defined in subclause 4.1.4, and the disconnection of TCHs if any;
- the deactivation of previously assigned channels (layer 1);
- the activation of the new channels and their connection if applicable;
- the triggering of the establishment of the data link connections for SAPI = 0.

The channel assignment procedure is always initiated by the CTS-FP.

#### 4.4.3.1 Intracell handover initiation

The CTS-FP initiates the intracell handover procedure by sending a CTS INTRACELL HANDOVER COMMAND message to the CTS-MS on the main signalling link. The CTS-FP then starts timer  $T_{\rm C3105}$ . When sending this message on the CTS-FP side, and receiving it on the CTS-MS side, all transmission of signalling layer message except for those RR messages needed for this procedure and for abnormal cases is suspended until resumption is indicated.

Upon receipt of the CTS INTRACELL HANDOVER COMMAND message, the CTS-MS initiates a local end release of link layer connections, disconnects the physical channels, commands the switching to the assigned channel and initiates the establishment of lower layer connections.

The CTS-MS shall wait up to the starting time before accessing the channel. If the starting time has already elapsed, the CTS-MS shall access the channel as an immediate reaction to the reception of the message.

#### 4.4.3.2 Intracell handover completion

After the main signalling link is successfully established, the CTS-MS returns a CTS INTRACELL HANDOVER COMPLETE message specifying cause "normal event" to the CTS-FP on the main DCCH.

The sending of this message on the CTS-MS side and its receipt on the CTS-FP side allow the resumption of the transmission of signalling layer messages other than those belonging to RR management.

At the receipt of the CTS INTRACELL HANDOVER, the CTS-FP releases the previously allocated resources and stops timer TC3105.

#### 4.4.3.3 Abnormal cases

If the CTS INTRACELL HANDOVER COMMAND instruct the CTS-MS to use a parameter that it is not capable of, then the CTS-MS shall return a CTS INTRACELL HANDOVER FAILURE message, and the CTS-MS shall remain on the current channel(s) and use the old channel description or channel mode.

When receiving a CTS INTRACELL HANDOVER FAILURE message, the CTS-FP stops TC3105.

On the CTS-FP side, if timer  $T_{C3105}$  elapses before either the CTS INTRACELL HANDOVER COMPLETE message has been receive on the new channel or a CTS INTRACELL HANDOVER FAILURE message is received or the CTS-MS has re-established the call, the old and the new channels are released and all contexts related to the connection with that CTS-MS are cleared.

#### 4.4.4 Intercell handover procedure

Intercell handover is a CTS phase 2 issue.

#### 4.4.5 Frequency hopping definition procedure

This procedure is used by the CTS-FP to update the Total Frequency Hopping List and Total Frequency Hopping parameters in the MS. The CTS-FP send a CTS FREQUENCY HOPPING DEFINITION message containing the new parameters together with a reference time indication. The TFH parameters are split in general static parameters and current dynamic parameters which are valid for a given TDMA frame number. The values indicated by the current parameters IE are those used by the TFH algorithm at the frame number indicated by the reference time. These parameters shall be used after the RR connection is released when the MS is returning in idle mode.

## 4.4.6 Channel mode modify procedure

In dedicated mode, higher layers can request the setting of the channel mode.

The channel mode modify procedure allows the CTS-FP to request the mobile station to set the channel mode for one channel or one channel set. The channel mode covers the coding, decoding and transcoding mode used on the indicated channel.

This procedure is always initiated by the CTS-FP.

NOTE: Direct transitions between full rate speech coder version 1 and full rate speech coder version 2 (and vice versa) may cause unpleasant audio bursts.

#### 4.4.6.1 Normal channel mode modify procedure

#### 4.4.6.1.1 Initiation of the channel mode modify procedure

The FP initiates the procedure by sending a message CTS CHANNEL MODE MODIFY to the CTS-MS. This message contains:

- a channel description of the channel(s) on which the specified mode shall be applied; and
- the mode to be used on that channel.

#### 4.4.6.1.2 Completion of channel mode modify procedure

When it has received the CTS CHANNEL MODE MODIFY message, the CTS-MS sets the mode for the indicated channel, and if that is in a multislot configuration, the whole channel set and then replies by a CTS CHANNEL MODE MODIFY ACKNOWLEDGE message indicating the ordered channel mode.

This applies whether the mode commanded by the CTS CHANNEL MODE MODIFY message is different from the one used by the CTS-MS or whether it is already in use.

#### 4.4.6.1.3 Abnormal cases

No specific action for a lower layer failure is specified in this subclause. If the mobile station does not support the indicated mode, it shall retain the old mode and return the associated channel mode information in CTS CHANNEL MODE MODIFY message.

#### 4.4.7 Ciphering mode setting procedure

In dedicated mode, the ciphering mode setting procedure is used by the FP to set the ciphering mode, i.e. whether or not the transmission is ciphered, and if so which algorithm to use. The procedure shall only be used to change from "not ciphered" mode to "ciphered" mode, or vice-versa, or to pass a CTS CIPHERING MODE COMMAND message to the mobile station while remaining in the "not ciphered" mode. The ciphering mode setting procedure is always triggered by the FP and it only applies to dedicated resources.

#### 4.4.7.1 Ciphering mode setting initiation

The CTS-FP initiates the ciphering mode setting procedure by sending a CTS CIPHERING MODE COMMAND message to the mobile station on the main signalling link, indicating whether ciphering shall be used or not, and if yes which algorithm to use.

The new mode is applied for reception on the CTS-FP side after the message has been sent.

#### 4.4.7.2 Ciphering mode setting completion

Whenever the CTS-MS receives a CTS CIPHERING MODE COMMAND message, it shall, if a SIM is present and considered valid by the mobile equipment and the ciphering key sequence number stored on the SIM indicates that a CTS ciphering key is available, load the ciphering key stored on the SIM into the ME. A valid CTS CIPHERING MODE COMMAND message is defined to be one of the following:

- one that indicates "start ciphering" and is received by the mobile station in the "not ciphered" mode;
- one that indicates "no ciphering" and is received by the MS in the "not ciphered" mode; or
- one that indicates "no ciphering" and is received by the mobile station in the "ciphered" mode.

Other CTS CIPHERING MODE COMMAND messages shall be regarded as erroneous, an CTS RR STATUS message with cause "Protocol error unspecified" shall be returned, and no further action taken.

Upon receipt of the CTS CIPHERING MODE COMMAND message indicating ciphering, the mobile station shall start transmission and reception in the indicated mode.

When the appropriate action on the CTS CIPHERING MODE COMMAND has been taken, the mobile station sends back a CTS CIPHERING MODE COMPLETE message. If the "cipher response" field of the cipher response information element in the CTS CIPHERING MODE COMMAND message specified "IMEI must be included" the mobile station shall include its IMEISV in the CTS CIPHERING MODE COMPLETE message.

Upon receipt of the CTS CIPHERING MODE COMPLETE message or any other correct layer 2 frame which was sent in the new mode, the CTS-FP starts transmission in the new mode.

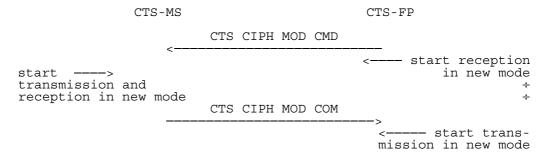


Figure 4.6/GSM 04.56: Ciphering mode setting sequence

## 4.4.8 [Reserved: Additional channel assignment procedure]

This is a CTS phase 2 issue.

#### 4.4.9 [Reserved: Partial channel release procedure]

This is a CTS phase 2 issue.

#### 4.4.10 Classmark change procedure

In dedicated mode, this procedure allows the mobile station to indicate to the CTS-FP a change of characteristics reflected in the classmark (e.g. due to addition of power amplification). Furthermore, a mobile station which implements the "controlled early classmark sending" option may also send a CTS CLASSMARK CHANGE message as described in subclause 4.3.1.1.4, even if no change of characteristics has occurred.

The mobile station sends a CTS CLASSMARK CHANGE message to the CTS-FP. This message contains the new mobile station classmark 2 information element. It may also contain a Classmark 3 Information Element. There is no acknowledgement from the CTS-FP at layer 3.

#### 4.4.11 Classmark interrogation procedure

This procedure allows the CTS-FP to request additional classmark information from the mobile station (e.g. if the information initially sent by the mobile station is not sufficient for CTS-FP decisions).

The CTS-FP initiate the classmark interrogation procedure by sending a CTS CLASSMARK ENQUIRY message to the CTS-MS on the main DCCH.

on receipt of the CTS CLASSMARK ENQUIRY message, the CTS-MS sends a CTS CLASSMARK CHANGE message to the CTS-FP on the main DCCH.

### 4.4.12 [Reserved]

#### 4.4.13 RR connection release procedure

#### 4.4.13.1 Normal release procedure

The release of the RR connection can be requested by upper layers.

The purpose of this procedure is to deactivate all the dedicated channels in use for this RR connection. When the channels are released, the mobile station returns to the idle mode. The channel release procedure can be used in a variety of cases, including TCH release after a call release, and DCCH release when a dedicated channel allocated for signalling is released.

In dedicated mode, the channel release procedure is always initiated by the CTS-FP.

#### 4.4.13.1.1 Channel release procedure initiation

The CTS-FP initiates the channel release procedure by sending a CTS CHANNEL RELEASE message to the CTS-MS on the main DCCH, starts timer  $T_{C3106}$  and deactivates the SACCH.

On receipt of a CTS CHANNEL RELEASE message, the CTS-MS starts timer T<sub>C3151</sub> and disconnect the main signalling link. When TC3151 times out or when the disconnection is confirmed, the CTS-MS deactivates all signalling link, considers the RR connection as released, and returns to idle mode.

On CTS-FP side, when the main signalling link is disconnected, the CTS-FP stops timer TC3106 and starts timer TC3107. When timer TC3107 times out, the CTS-FP deactivates the channels. If timer TC3106 times out, the CTS-FP deactivates the channels.

#### 4.4.13.1.2 Abnormal case

Abnormal cases are taken into account in the main part of the description of the procedure.

#### 4.4.13.2 Radio link fai2lure in dedicated mode

The main part of these procedures concerns the "normal" cases, i.e. those without any occurrence of loss of communication means. A separate paragraph at the end of the description of each procedure treats the cases of loss of communication, called a radio link failure. In dedicated mode, in most of the cases the reaction of the mobile station or the CTS-FP is the same. Those reactions are described in this subclause to avoid repetitions.

A radio link failure can be detected by several ways:

- 1) by analysis of reception at layer 1, as specified in GSM 05.08 and subclause 4.4.1.1;
- 2) by a data link layer failure as specified in GSM 04.06, on the main signalling link. A data link failure on any other data link shall not be considered as a radio link failure;
- 3) when a lower layer failure happens while the mobile station attempts to connect back to the old channels in a channel assignment procedure or handover procedure;
- 4) in some cases where timers are started to detect the lack of answer from the other party, as described in clause 3.

The two first cases are known by the term "lower layer failure".

#### 4.4.13.2.1 Mobile side

When a radio link failure is detected by the mobile station:

- the MS shall perform a local end release on all signalling links unless otherwise specified;
- the mobile station shall deactivate all channels;
- the RR sublayer of the mobile station shall indicate an RR connection failure to the MM sublayer unless otherwise specified.

NOTE: Upper layers may decide on a re-establishment (see subclause 5.5.4).

#### 4.4.13.2.2 CTS-FP side

When a radio link failure has been detected, an indication is passed to the upper sublayer on CTS-FP side.

The CTS-FP should release the connection except when otherwise specified, either with the channel release procedure as specified in subclause 4.4.13.1 or with the following procedure. The CTS-FP start timer TC3106 and deactivates the SACCH and hence stops transmission on the SACCH. When timer TC3106 expires, the CTS-FP can regard the channel as released.

NOTE: The CTS-FP The network should maintain for a while the transaction context in order to allow call re-establishment.

#### 4.4.13.3 RR connection abortion in dedicated mode

The mobile station aborts the RR connection by initiating a normal release of the main signalling link, performing local end releases on all other signalling links and disconnecting all traffic channels, if any.

## 4.4.14 Receiving CTS RR STATUS message by a CTS-RR entity

If the CTS-RR entity of the mobile station receives a CTS RR STATUS message no transition and no specific action shall be taken as seen from the radio interface, i.e. local actions are possible.

The actions to be taken on receiving a CTS RR STATUS message in the CTS-FP are defined in GSM 04.08. See also clause 8.

## 4.4.15 CTS RR parameters update

This procedure allows the CTS-FP to provide mandatory parameters to the mobile station. It shall be initiated during enrolment and attachment MM-procedures.

The CTS-FP sends the CTS RR PARAMETERS UPDATE message containing the relevant parameters.

## 5 Elementary procedures for Mobility Management

#### 5.1 General

This subclause describes the procedures used for mobility management at the CTS radio interface (Reference Point Um\*).

The general purpose of CTS Mobility Management sublayer is to support the mobility of the mobile stations, such as informing the fixed part of its presence and providing user identity confidentiality. The CTS-MM sublayer provides also connection management services to the different entities of the upper Connection Management (CM) sublayer.

All the CTS-MM procedures can only be performed if a CTS-RR connection has been established between the mobile station and the fixed part. If no CTS-RR connection is currently established, the CTS-MM sublayer has to initiate such establishment.

Depending of the CTS-MM procedure, they can be initiated either by the mobile station or by the fixed part or even indifferently by one of the two parties.

The CTS-FP may also start all mobility management procedures defined in GSM 04.08, including:

- the GSM authentication procedure;
- the GSM identity request procedure.

The messages defined in GSM 04.08 shall be used for these procedures.

## 5.1.1 Type of CTS-MM procedures

Depending on how they can be initiated, two types of CTS-MM procedures can be distinguished:

(i) CTS-MM common procedures:

A CTS-MM common procedure can always be initiated whilst a CTS-RR connection exists. The procedures belonging to this type are:

- Initiated by the fixed part:
  - CTS mutual authentication procedure;
  - CTSMSI update procedure;
  - CTS de-enrolment procedure.
- Initiated by the mobile station
  - CTS detach procedure.
- (ii) CTS-MM specific procedures:

A CTS-MM specific procedure can only be initiated if no other MM specific procedure is running or no MM connection exists. The procedures belonging to this type are:

- Initiated by the mobile station:
  - CTS enrolment procedure;
  - CTS attach procedure;
  - CTS re-attach procedure.
- Initiated by the fixed part:

- CTS periodic attach update procedure.

These running procedures do not preclude from running procedures defined in the CTS supervising system layer 3 specification.

#### 5.1.2 CTS-MM sublayer states

#### 5.1.2.1 CTS-MM sublayer states in the mobile station

An additional machine describes the states related to the CTS.

#### 5.1.2.1.1 Main states

#### 1. WAIT FOR CTS-RR ACTIVE

The CTS-MM sublayer has requested activation of the CTS-RR sublayer.

#### 2. WAIT FOR CTS-RR CONNECTION (ENROLMENT OR ATTACH)

The CTS-MM sublayer has requested CTS-RR connection establishment for starting the enrolment procedure or the attach one.

#### 3. ATTACH INITIATED

The attach procedure has been started and the CTS-MM awaits a response from the fixed part. The timer TC3250 is running.

#### 4. ENROLMENT INITIATED

The enrolment procedure has been started and the CTS-MM awaits a response from the fixed part. The timer TC3254 is running.

#### 5. ATTACH REJECTED

The attach procedure has been rejected and CTS-RR connection release is awaited. The timer TC3256 is running.

#### 6. ENROLMENT REJECTED

The enrolment procedure has been rejected and CTS-RR connection release is awaited.

#### 7. AUTHENTICATION INITIATED

The mutual authentication procedure has been started by the fixed part.

#### 8. CTS-MM IDLE

There is no MM procedure running and no RR connection exist. This is a compound state.

#### 5.1.2.1.2 Substates of the CTS-MM IDLE state

#### 8.1 NORMAL SERVICE

The mobile station is attached to a fixed part and it is reachable.

#### 8.2 FP SEARCH

The mobile station is searching for fixed parts on which the mobile station is enrolled.

#### 8.3 NO FP AVAILABLE

No fixed part can be selected. This state is entered after a first intensive search failed. Fixed parts are searched at a low rhythm. No CTS services are offered.

#### 5.1.2.2 CTS-MM sublayer states in the fixed part

#### 1. IDLE

The CTS-MM sublayer is not active.

#### 2. WAIT FOR CTS-RR CONNECTION

The CTS-MM sublayer has requested activation of the CTS-RR sublayer.

#### 3. CTS-MM CONNECTION ACTIVE

The CTS-MM sublayer has a CTS-RR connection to a mobile station. One or more MM connections are active.

#### 4. CTS AUTHENTICATION INITIATED

The authentication procedure has been started by the fixed part.

#### 5. CTS DE-ENROLMENT INITIATED

The de-enrolment procedure has been started by the fixed part.

#### 6. CTS CIPHERING MODE INITIATED

The cipher mode setting procedure has been requested to the CTS-RR-sublayer.

## 5.2 CTS-MM common procedures

## 5.2.1 CTS detach procedure

The purpose of the CTS detach procedure is to detach a mobile station from a fixed part. The mobile station may launch the detach procedure during the CTS mode deactivation (e.g. at the power off, when the SIM is extracted, when the mobile station is set in GSM mode only).

The CTS detach procedure is always initiated by the mobile station.

#### 5.2.1.1 CTS detach initiation by the mobile station

The mobile station initiates the CTS detach procedure by sending a CTS DETACH INDICATION to the fixed part. The mobile station then starts timer TC3253.

If no RR connection exists, the MM sublayer within the mobile station will request the RR sublayer to establish a RR connection. If a RR connection exists, the MM sublayer will release locally any ongoing MM connections before the CTS DETACH INDICATION message is sent.

#### 5.2.1.2 CTS detach procedure in the fixed part

On reception of a CTS DETACH INDICATION, the fixed part shall consider the mobile station as detached. No response is returned to the mobile station. After reception of the CTS DETACH INDICATION message, the fixed part shall release locally any ongoing MM connections, and start the normal RR connection release procedure.

#### 5.2.1.3 CTS detach completion by the mobile station

Timer TC3253 is stopped when the RR connection is released. The mobile station should, if possible, delay the local release of the channel to allow a normal release from the fixed part until TC3253. If this is not possible (e.g. detach at power down) the RR sublayer on the mobile side should be aborted.

#### 5.2.1.4 Abnormal cases

If establishment of an RR connection is not possible, or the RR connection is lost, the CTS detach procedure is aborted by the mobile station.

#### 5.2.2 CTS de-enrolment procedure

The purpose of the CTS de-enrolment procedure is to inform a CTS MS that it is no more enrolled on this CTS-FP.

The CTS de-enrolment procedure is always launched by the fixed part.

This procedure shall be launched when the mobile station has no more right to be enrolled (e.g. expiration of validity period, de-enrolment requested by the CTS operator). Any reference to this mobile station should be removed in the fixed part.

#### 5.2.2.1 CTS de-enrolment initiation by the fixed part

The fixed part initiates the CTS de-enrolment procedure by sending a CTS DE-ENROLMENT INDICATION to the mobile station. Then the fixed part will request the RR sublayer to release the RR connection.

#### 5.2.2.2 CTS de-enrolment procedure in the mobile station

On reception of a CTS DE-ENROLMENT INDICATION, the CTS-MS shall remove the corresponding CTS-FP of the list of the fixed parts on which the mobile station is enrolled.

The mobile station should inform the user that it is no more enrolled on this CTS-FP.

#### 5.2.2.3 Abnormal cases

If establishment of an RR connection is not possible, or the RR connection is lost, the CTS de-enrolment procedure is aborted by the fixed part. Nevertheless, any reference to the corresponding mobile station should be removed in the fixed part.

## 5.2.3 CTS mutual authentication procedure

The purpose of the CTS mutual authentication procedure is:

- to permit the fixed part to check whether the identity provided by the mobile station is acceptable or not (see GSM 03.20 annex E);
- to permit the mobile station to check whether the identity provided by the fixed part is acceptable or not (see GSM 03.20 annex E);
- to agree on required parameters between the fixed part and mobile station to calculate a new ciphering key (see  $GSM\ 03.20$  annex E).

The authentication procedure uses the CTSMSI if it is available. If it is not available or if the authentication fails using this identity, the authentication procedure shall be started again using the IMSI.

The CTS authentication procedure is always initiated by the CTS-FP on the radio interface.

This procedure shall be used each time an enrolment procedure or an attach procedure is started.

#### 5.2.3.1 CTS authentication initiation by the fixed part

The fixed part initiates the CTS authentication procedure by sending a CTS MS AUTHENTICATION REQUEST message to the CTS-MS and starts the timer TC3211.

The CTS MS AUTHENTICATION REQUEST message specifies the authentication parameter.

### 5.2.3.2 CTS authentication response by the mobile station

The mobile station shall be ready to respond upon a CTS MS AUTHENTICATION REQUEST message at any time whilst a CTS-RR connection exists.

On reception of a CTS MS AUTHENTICATION REQUEST from the fixed part, the mobile station shall send a CTS MS AUTHENTICATION RESPONSE and starts the timer TC3260.

The CTS MS AUTHENTICATION RESPONSE message specifies the authentication parameter CH2 and the authentication parameter SRES1.

### 5.2.3.3 CTS authentication processing by the fixed part

On reception of the CTS MS AUTHENTICATION RESPONSE from the mobile station, the fixed part shall stop the timer TC3211 and shall check the validity of the response (see GSM 03.20 annex E).

The fixed part shall respond with a CTS FP AUTHENTICATION RESPONSE message. This message specifies the authentication parameter SRES2.

### 5.2.3.4 CTS authentication completion by the mobile station

On reception of the CTS FP AUTHENTICATION RESPONSE from the fixed part, the mobile station shall stop the timer TC3260 and shall check the validity of the response (see GSM 03.20 annex E).

#### 5.2.3.5 Unsuccessful authentication

If mobile station authentication fails, i.e. the response given by the mobile station is not valid, the fixed part may distinguish between the two different ways of identification: IMSI or CTSMSI. If the mobile station identifies itself using the CTSMSI, the fixed part may request the IMSI using the identity request procedure and may start a new mutual authentication procedure using the IMSI.

If the fixed part does not start a new authentication procedure, it shall sent a CTS MS AUTHENTICATION REJECT message to the mobile station. After having sent this message, the fixed part shall release any ongoing MM connections and shall initiate the RR connection release procedure. If fixed part authentication fails, i.e. the response given by the fixed part is not valid, the mobile station may abort the RR connection. In this case, the CTS-MS shall abort any MM ongoing procedure.

#### 5.2.3.6 Abnormal cases

Fixed part side

#### (a) CTS-RR connection failure

Upon a detection of a CTS-RR connection failure before the CTS MS AUTHENTICATION RESPONSE is received, the fixed part shall release all MM connections (if any) and abort any ongoing MM specific procedure.

#### (b) Expiry of timer TC3211

The mutual authentication procedure is supervised on the fixed part by the timer TC3211. At expiry of this timer the fixed part may release the CTS-RR connection. In this case the fixed part shall abort the mutual authentication procedure and any ongoing MM specific procedure, release all MM connections if any, and initiate the CTS-RR connection release procedure described in subclause 4.4.13.

Mobile station side

#### (a) CTS-RR connection failure

Upon a detection of a CTS-RR connection failure before the CTS FP AUTHENTICATION RESPONSE is received, the mobile station shall release all MM connections (if any) and abort any ongoing MM specific procedure.

#### (b) Expiry of timer TC3260

The mutual authentication procedure is supervised on the mobile station by the timer TC3260. At expiry of this timer the mobile station may abort the CTS-RR connection. In this case the mobile station shall abort the mutual authentication procedure and any ongoing MM specific procedure, release all MM connections if any, and initiate the CTS-RR connection release procedure described in subclause 4.4.13.

### 5.2.4 CTSMSI update procedure

The purpose of the CTSMSI update procedure is to provide identity confidentiality, i.e. to protect a user against being identified and located by an intruder (see GSM 03.20 annex E).

The CTSMSI update procedure is always initiated by the CTS-FP on the radio interface.

The structure of the CTSMSI is specified in GSM 03.03. The CTSMSI has significance only for a specific CTS-FP.

The CTSMSI update procedure shall be performed after each access to the fixed part done by a mobile station

### 5.2.4.1 CTSMSI update initiation by the fixed part

The fixed part initiates the CTSMSI update procedure by sending a CTSMSI UPDATE COMMAND message to the CTS-MS and starts the timer TC3202.

The CTSMSI UPDATE COMMAND message specifies the new CTSMSI of the mobile station. The CTSMSI UPDATE COMMAND message shall be sent to the mobile station using a CTS-RR connection in ciphering mode (see GSM 03.20 annex E).

### 5.2.4.2 CTSMSI update response by the mobile station

Upon receipt of the CTSMSI UPDATE COMMAND message the mobile station stores the new CTSMSI related to the corresponding fixed part in the SIM.

The mobile station sends a CTSMSI UPDATE COMPLETE message to the fixed part.

### 5.2.4.3 CTSMSI update completion in the fixed part

Upon receipt of the CTSMSI UPDATE COMPLETE message the fixed part stops the timer TC3202 and considers the new CTSMSI as valid.

#### 5.2.4.4 Abnormal cases

Mobile station side:

Any CTS-RR connection failure after storage of the new CTSMSI value in the SIM does not have any impact on this storage.

Fixed part side

#### (a) CTS-RR connection failure:

If the CTS-RR connection is lost before the CTSMSI UPDATE COMPLETE message is received, all MM connections (if any) shall be released and both the old and the new CTSMSIs should be maintained in order to be able to recover from unsuccessful CTSMSI update.

(b) No response from the mobile station (expiry of timer TC3202)

The fixed part should maintain the old and the new CTSMSI in order to be able to recover from unsuccessful CTSMSI update.

# 5.3 CTS-MM specific procedures

### 5.3.1 CTS enrolment procedure

The purpose of the CTS enrolment procedure is:

- to define an association between a certain CTS-MS and a certain CTS-FP;
- to ensure the rights of the CTS-MS to use CTS services on this CTS-FP.

The CTS enrolment procedure is always initiated by the mobile station.

The user shall provide the CTS-PIN (see GSM 03.20 annex E) on the mobile station and shall take a physical action on the CTS-FP.

### 5.3.1.1 CTS enrolment initiation by the mobile station

The mobile station initiates the CTS enrolment procedure by sending a CTS ENROLMENT REQUEST message to the CTS-FP. The mobile station shall start the timer TC3254.

#### 5.3.1.2 CTS enrolment completion by the fixed part

After mutual authentication, the fixed part shall request the mobile station identity to perform the verification of its rights to use CTS services on this fixed part. This verification is done either locally by the fixed part or by the CTS operator via the Cf interface (see GSM 03.20 annex E). Upon these rights are verified, the CTS-FP shall enrol the CTS-MS and shall send a CTS ENROLMENT ACCEPT to the mobile station. The CTS ENROLMENT ACCEPT contains the identity of the fixed part (IFPSI or IFPEI), and the first CTSMSI value of the mobile station.

### 5.3.1.3 CTS enrolment completion by the mobile station

On reception of a CTS ENROLMENT ACCEPT, the CTS-MS shall stop the timer TC3254 and enters in CTS MM IDLE state.

### 5.3.1.4 Unsuccessful enrolment

If the mobile station has not the rights to be enrolled, the fixed part shall send a CTS ENROLMENT REJECT message to the mobile station. This message contains a reject cause and the identity of the fixed part.

On reception of a CTS ENROLMENT REJECT, the CTS-MS shall stop the timer TC3254 and enters in ENROLMENT REJECTED state.

#### 5.3.1.5 Abnormal cases

(a) CTS-RR connection failure

If the CTS-RR connection is lost before the CTS ENROLMENT ACCEPT message is received, the enrolment procedure has failed. A new enrolment attempt may be done by the user.

(b) No response from the fixed part (expiry of timer TC3254)

The mobile station should warn the mobile station user. A new enrolment attempt may be done by the user.

# 5.3.2 CTS attach procedure

The purpose of the CTS attach procedure is to attach the corresponding mobile station to a specific fixed part. Before performing the attach procedure, the corresponding mobile station has to be enrolled on this fixed part.

The attach procedure is always initiated by the mobile station.

### 5.3.2.1 CTS attach initiation by the mobile station

The mobile station initiates the CTS attach procedure by sending a CTS ATTACH REQUEST message to the CTS-FP and starts the timer TC3250.

The CTS ATTACH REQUEST message specifies the CTSMSI, and the classmark of the mobile station.

### 5.3.2.2 CTS attach completion by the fixed part

If the mobile identity corresponds to an enrolled mobile station on the CTS-FP, the fixed part shall send a CTS ATTACH ACCEPT to the mobile station.

If the mobile station sends its CTSMSI as identity and it does not correspond to any enrolled mobile station, the fixed part could use the identity request procedure (see GSM 04.08) to obtain the IMSI of the mobile station. If the IMSI corresponds to an enrolled mobile station, the fixed part shall complete the attachment as described before.

The fixed part shall send a CTS ATTACH REJECT with its identity (IFPSI or IFPEI) when the mobile shall not be attached:

- the mobile station is not enrolled on this fixed part: the reject cause shall be #4 (IMSI unknown in VLR);
- the fixed part is not able to complete all the operations it has to perform at mobile station attachment (e.g. FMC registration).

### 5.3.2.3 CTS attach completion by the mobile station

On reception of a CTS ATTACH ACCEPT, the mobile station shall stop the timer TC3250 and shall start the timer TC3252.

The CTS-MS enters in CTS MM IDLE state.

### 5.3.2.4 CTS attach rejection treatment by the mobile station

On reception of a CTS ATTACH REJECT, the mobile station shall verify if the CTS-FP identity (IFPSI or IFPEI) is the expected one and shall stop the timer TC3250.

If the fixed part identity is the expected one and the reject cause is equal to #4 (IMSI unknown in VLR), the mobile station shall not re-attempt to attach automatically to the same fixed part. The CTS-MS should inform the user that it is no more enrolled on this fixed part.

If the fixed part identity is the expected one and the reject cause is different of #4, the mobile station shall not attempt to attach to any fixed part having the same FPBI before expiration of the timer TC3257.

If the fixed part identity is not the expected one, the mobile station shall start the timer TC3256. The mobile shall not attempt to attach to any fixed part having the same FPBI before expiration of the timer TC3256. This does not forbid attachment attempts to fixed parts having an other FPBI.

#### 5.3.2.5 Abnormal cases

#### (a) CTS-RR connection failure:

Upon a detection of a CTS-RR connection failure before the CTS ATTACH ACCEPT is received, the mobile station shall abort the ongoing attach procedure and shall stop the timer TC3250.

(b) No response from the fixed part (expiry of TC3250 timer):

The mobile station shall start the timer TC3251. The mobile station shall not re-attempt to attach again to the same fixed part before expiry of timer TC3251.

# 5.3.3 CTS re-attach procedure

The purpose of the CTS re-attach procedure is to inform the presence of a mobile station to the fixed part on which it is attached.

The CTS re-attach procedure is always started by the mobile station.

This procedure is started at expiry of the timer TC3252.

### 5.3.3.1 CTS re-attach initiation by the mobile station

The mobile station initiates the CTS re-attach procedure by sending a CTS ATTACH REQUEST message with an indication of re-attachment to the CTS-FP and starts the timer TC3255.

### 5.3.3.2 CTS re-attach completion by the fixed part

On reception of a CTS ATTACH REQUEST message with an indication of re-attachment, the fixed part shall respond with a CTS ATTACH ACCEPT and shall start again the CTS periodic attach update procedure (see subclause 5.3.4).

#### 5.3.3.3 Abnormal cases

#### (a) RR connection failure:

Upon a detection of a RR connection failure before the CTS ATTACH ACCEPT is received, the mobile station shall consider to be detached from the fixed part.

#### (b) RR not available:

If no radio resource is currently available on the fixed part (STATUS field set to busy in the BCH-SB), the timer TC3252 shall be started again with its initial value.

#### (c) Expiry of timer TC3255

The mobile station shall be considered to be detached of the corresponding fixed part.

# 5.3.4 CTS periodic attach update procedure

The purpose of the CTS periodic attach update procedure is to verify the presence of the attached mobile stations.

The CTS periodic attach update procedure is started by the fixed part when it enters the MM IDLE state.

#### 5.3.4.1 CTS periodic attach update procedure behaviour in the fixed part

At the begin of this procedure, the timer TC3201 is started.

At expiry of TC3201, the MM sublayer shall trigger the RR sublayer to launch the alive check procedure (see subclause 4.2.2.3) with the CTSMSI corresponding to the mobile.

The fixed part can trigger up to NC320 times the alive check procedure using the same CTSMSI. At the next expiry of TC3201, the fixed part shall launch the CTSMSI update procedure instead of the alive check.

#### 5.3.4.2 Abnormal cases

After alive check triggering done by MM, the following abnormal cases may occur:

#### (a) RR not available

The fixed part shall start again the timer TC3201 with its initial value.

(b) No response from the mobile station

The fixed part shall considered that the mobile station is detached.

# 6 Elementary procedures for circuit-switched Call Control

### 6.1 Overview

### 6.1.1 General

This subclause describes the Call Control (CC) protocol, which is one of the protocols of the Connection Management (CM) sublayer (see GSM 04.07).

As a general rule, the CC protocol on the CTS radio interface Um\* is the same as the one used in the GSM radio interface Um. However, several specific procedures are introduced: the hook flash procedure and the internal call procedure.

# 6.2 Hook flash procedure

The hook flash is used for the control of some fixed-line supplementary services, associated with DTMF tones.

The mobile station shall be capable of transmitting hook flash request with the same conditions as the ones required for DTMF transmission but only on the Um\* interface. The hook flash itself is generated by the CTS-FP on the fixed line. As a general rule, the hook flash procedure is the same procedure as the one used to perform DTMF transmission except that a specific keypad value is used. The DTMF protocol control procedure is defined in GSM 04.08.

# 6.2.1 Hook flash request by the mobile station

A user may cause a hook flash to be generated e.g. by depression of a key in the mobile station. The relevant action is interpreted by the mobile station as a requirement for a hook flash to be sent in a START DTMF message on an established FACCH.

# 6.2.2 Hook flash response by the fixed part

Upon receiving the START DTMF message indicating "hook flash", the fixed part shall generate a hook flash on the fixed line and shall return a START DTMF ACKNOWLEDGE message to the mobile station indicating successful initiation of the procedure.

If the fixed line can not accept the hook flash (e.g. ISDN), a START DTMF REJECT message shall be sent to the mobile station.

# 6.2.3 Stop hook flash request by the mobile station

When the user indicates that the hook flash generation should cease e.g. by releasing the key the mobile station will send a STOP DTMF message to the fixed part.

## 6.2.4 Stop hook flash response by fixed part

After receiving the STOP DTMF message the fixed part returns a STOP DTMF ACKNOWLEDGE message to the mobile station when it has finished to generate the hook flash on the fixed line.

NOTE 1: The Fixed Part may implement the time limit option where the hook flash duration is controlled by the Fixed Part irrespective of the receipt of a stop hook flash request from the mobile station. The maximum duration of the hook flash to be generated on the fixed line is outside the scope of the present document and may be determined by specific regulations.

NOTE 2: The Fixed Part shall ensure that the minimum length of hook flash and minimum gap between hook flash and tones according to specific regulations are fulfilled.

# 6.3 Internal call procedure

To perform a internal call, the same procedure as the one used to perform a normal call shall be used except that the internal numbering plan is used.

# 7 Examples of structured procedures

Clause 7 is informative.

### 7.1 General

Clause 7 contains examples of how the fixed part may group together the elementary procedures (i.e. the procedures defined in clauses 3 to 5) in order to provide normal service.

# 7.1.1 CTS paging request

The paging procedure is used to page a mobile station to which a connection shall be established.

Upon receipt of a CTS PAGING REQUEST message the addressed mobile station initiates the immediate assignment procedure.



Figure 7.1/GSM 04.56: CTS paging request

# 7.1.2 CTS immediate assignment

The CTS immediate assignment procedure is always initiated by the mobile station. It may be triggered by a CTS paging request or by a mobile originating service request.

The mobile station sends a CTS ACCESS REQUEST message on the Access Request Channel. The fixed part responds with a CTS IMMEDIATE ASSIGNMENT message on the CTS Access Grant Channel.




Figure 7.2/GSM 04.56: CTS immediate assignment

### 7.1.3 CTS mutual authentication

The purpose of CTS mutual authentication procedure is to validate the identity provided by the mobile station and the one provided by the fixed part. It is initiated by the fixed part. The CTS mutual authentication procedure also provides the mobile station with information from which a new ciphering key can be derived. The fixed part shall use the CTS mutual authentication at the beginning of each MM connection establishment (see GSM 03.20 annex E).

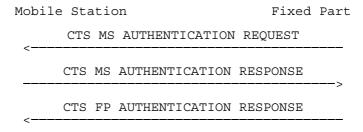


Figure 7.3/GSM 04.56: CTS mutual authentication

### 7.2 Abnormal cases

Abnormal cases are not described in the examples of clause 7.

# 7.3 Selected examples

The following examples are considered:

- enrolment;
- attachment:
- detachment;
- de-enrolment;
- mobile originating call establishment.

### 7.3.1 Enrolment

The enrolment procedure is always initiated by the mobile station.

## 7.3.1.1 Enrolment with CTS-MS identity authentication done only by the CTS-FP

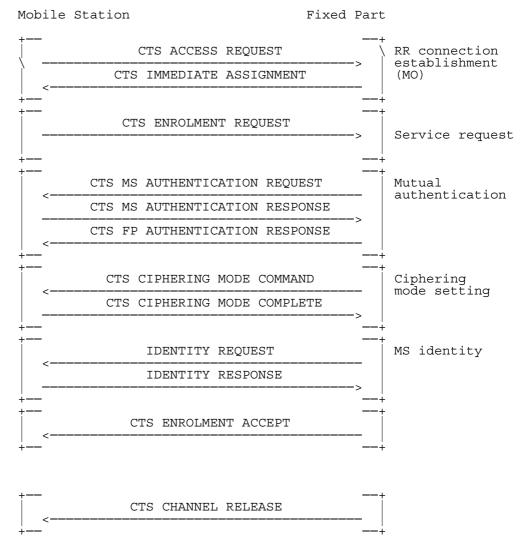


Figure 7.4/GSM 04.56: CTS enrolment

### 7.3.1.2 Enrolment with CTS MS authentication done by CTS operator

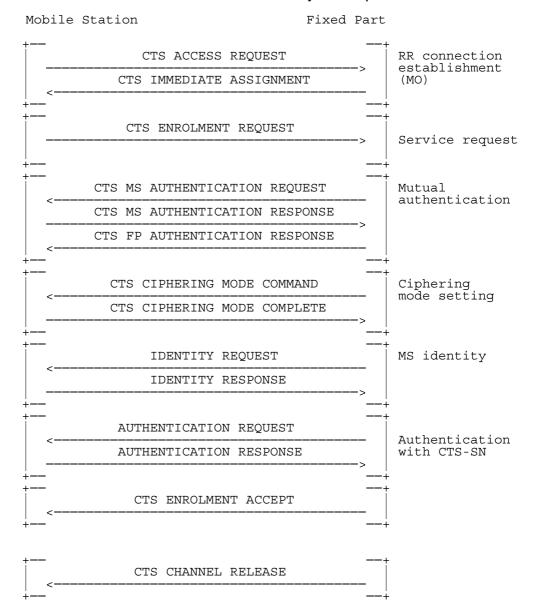


Figure 7.5/GSM 04.56: CTS enrolment

### 7.3.2 Attachment

The attachment procedure is always initiated by the mobile station.

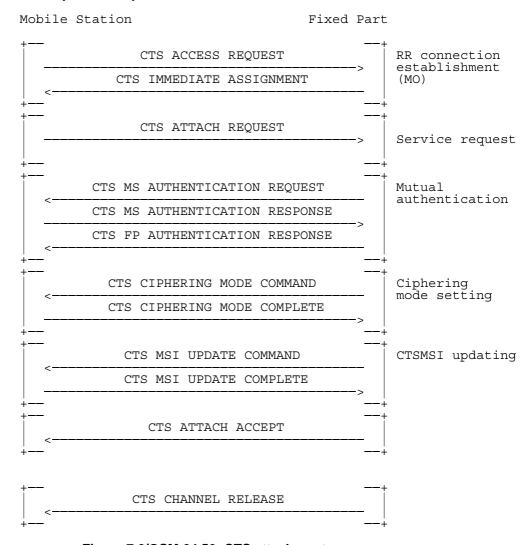


Figure 7.6/GSM 04.56: CTS attachment

### 7.3.3 Detachment

The detachment procedure is always initiated by the mobile station.

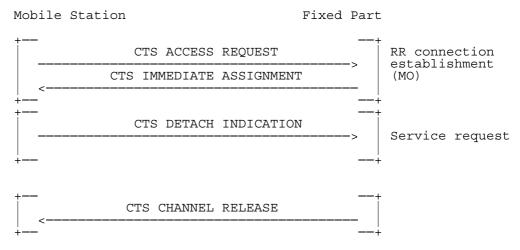


Figure 7.7/GSM 04.56: CTS detachment

### 7.3.4 De-enrolment

The de-enrolment procedure is always initiated by the fixed part.

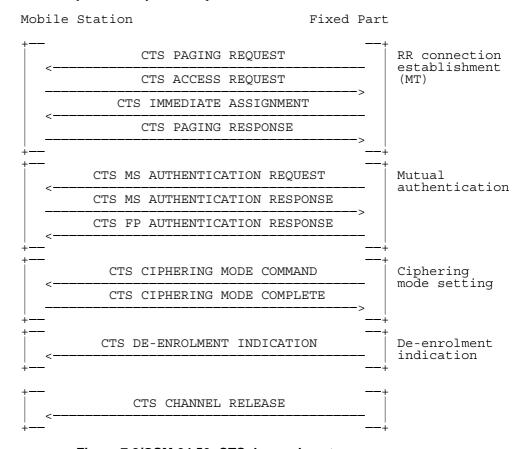


Figure 7.8/GSM 04.56: CTS de-enrolment

# 7.3.5 Mobile originating call establishment

The mobile station initiates immediate assignment, service request using the CM SERVICE REQUEST message, and contention resolution.

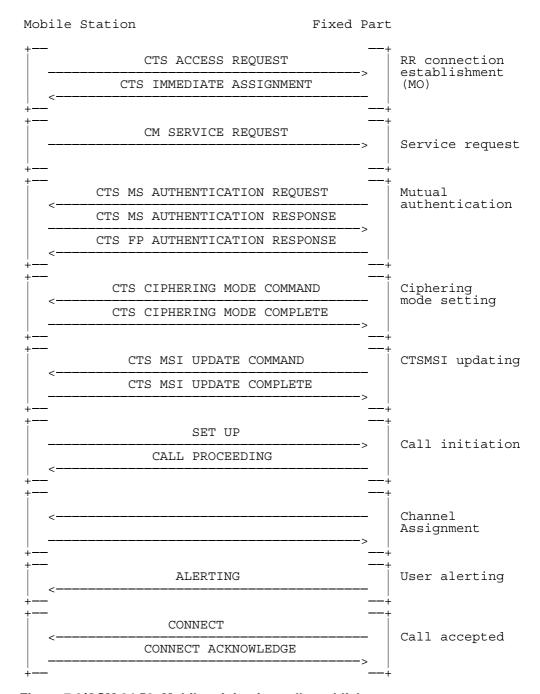


Figure 7.9/GSM 04.56: Mobile originating call establishment

# 8 Handling of unknown, unforeseen, and erroneous protocol data

### 8.1 General

The procedures specified in GSM 04.56 and call-related supplementary service handling in GSM 04.10 apply to those messages which pass the checks described in this subclause.

This subclause also specifies procedures for the handling of unknown, unforeseen, and erroneous protocol data by the receiving entity. These procedures are called "error handling procedures", but in addition to providing recovery mechanisms for error situations they define a compatibility mechanism for future extensions of the protocols.

Error handling concerning the value part of the Facility IE and of the SS Version Indicator IE are not in the scope of the present document. It is defined in GSM 04.10 and the GSM 04.8x series.

Subclauses 8.1 to 8.8 shall be applied in order of precedence.

Most error handling procedures are mandatory for the CTS-MS.

Detailed error handling procedures in the CTS-FP are implementation dependent and may vary. However, when extensions of this protocol are developed, CTS-FP will be assumed to have the error handling that is indicated in this subclause as mandatory ("shall") and that is indicated as strongly recommended ("should"). Subclauses 8.2, 8.3, 8.4, 8.5 and 8.7.2 do not apply to the error handling in the CTS-FP applied to the receipt of initial layer 3 message: If the CTS-FP diagnoses an error described in one of these subclauses in the initial layer 3 message received from the CTS-MS, it shall either:

- try to recognise the classmark and then take further implementation dependent actions; or
- release the RR-connection.

Also, the error handling of the CTS-FP is only considered as mandatory or strongly recommended when certain thresholds for errors are not reached during a dedicated connection.

In this subclause the following terminology is used:

- An IE is defined to be syntactically incorrect in a message if it contains at least one value defined as "reserved" in clause 10, or if its value part violates rules of clause 10. However it is not a syntactical error that a type 4 IE specifies in its length indicator a greater length than defined in clause 10.
- A message is defined to have semantically incorrect contents if it contains information which, possibly dependent on the state of the receiver, is in contradiction to the resources of the receiver and/or to the procedural part (i.e. clauses 4 and 5) of GSM 04.58, GSM 04.10, or relevant GSM 04.8X series.

# 8.2 Message too short

When a message is received that is too short to contain a complete message type information element, that message shall be ignored, see GSM 04.07.

### 8.3 Unknown or unforeseen transaction identifier

See GSM 04.08 clause 8.3. The CTS-FP shall act as the "network", whereas it is stated so.

# 8.4 Unknown or unforeseen message type

If a CTS-MS receives a message with message type not defined for the PD and SPD or not implemented by the receiver in unacknowledged mode, it shall ignore the message.

If a CTS-MS receives a message with message type not defined for the PD and SPD or not implemented by the receiver in acknowledged mode, it shall return a status message (STATUS, CTS RR STATUS or MM STATUS depending on the protocol discriminator and sub-protocol discriminator) with cause # 97 "message type non-existent or not implemented".

If the CTS-FP receives an RR message or MM message with message type not defined for the PD or not implemented by the receiver in a protocol state where reception of an unsolicited message with the given PD from the CTS-MS is not foreseen in the protocol, the CTS-FP actions are implementation dependent. Otherwise, if the CTS-FP receives a message with message type not defined for the PD and the SPD or not implemented by the receiver, it shall ignore the message except that it should return a status message (STATUS, CTS RR STATUS or MM STATUS depending on the protocol discriminator and Sub-Protocol Discriminator) with cause #97 "message type non-existent or not implemented".

NOTE: A message type not defined for the PD and SPD in the given direction is regarded by the receiver as a message type not defined for the PD and SPD, see GSM 04.07 [20].

If the CTS-MS receives a message not compatible with the protocol state, the CTS-MS shall ignore the message except for the fact that, if an RR connection exists, it returns a status message (STATUS, CTS RR STATUS or MM STATUS depending on the protocol discriminator and sub-protocol discriminator) with cause #98 "Message type not compatible with protocol state".

If the CTS-FP receives a message not compatible with the protocol state, the CTS-FP actions are implementation dependent.

# 8.5 Non-semantical mandatory information element errors

When on receipt of a message:

- an "imperative message part" error; or
- a "missing mandatory IE" error;

is diagnosed or when a message containing:

- a syntactically incorrect mandatory IE; or
- an IE unknown in the message, but encoded as "comprehension required" (see subclause 10.5); or
- an out of sequence IE encoded as "comprehension required" (see subclause 10.5)

is received,

- the CTS-MS station shall proceed as follows:

If the message is not one of the messages listed in subclauses 8.5.1, 8.5.2, and 8.5.3, the CTS-MS shall ignore the message except for the fact that, if an RR connection exists, it shall return a status message (STATUS, CTS RR STATUS or MM STATUS depending on the protocol discriminator and sub-protocol discriminator) with cause # 96 "invalid mandatory information".

the CTS-FP shall proceed as follows:

When the message is not one of the messages listed in subclause 8.5.3 b), c), d) or e), the CTS-FP shall either

- try to treat the message (the exact further actions are implementation dependent); or
- ignore the message except that it should return a status message (STATUS, CTS RR STATUS, or MM STATUS depending on the protocol discriminator and sub-protocol discriminator) with cause # 96 "invalid mandatory information".

### 8.5.1 Radio resource management

For the CTS-MS the following procedures shall apply:

- If the message is a CTS CHANNEL RELEASE message, the actions taken shall be the same as specified in subclause 4.4.13 "RR connection release".

# 8.5.2 Mobility management

No exceptional cases are described for mobility management messages.

#### 8.5.3 Call control

See GSM 04.08 subclause 8.5.3.

# 8.6 Unknown and unforeseen IEs in the non-imperative message part

### 8.6.1 IEIs unknown in the message

The CTS-MS shall ignore all IEs unknown in a message which are not encoded as "comprehension required".

The CTS-FP shall take the same approach.

### 8.6.2 Out of sequence IEs

The CTS-MS shall ignore all out of sequence IEs in a message which are not encoded as "comprehension required".

The CTS-FP should take the same approach.

### 8.6.3 Repeated IEs

If an information element with format T, TV, or TLV is repeated in a message in which repetition of the information element is not specified in clause 9 of the present document, only the contents of the information element appearing first shall be handled and all subsequent repetitions of the information element shall be ignored. When repetition of information elements is specified, only the contents of specified repeated information elements shall be handled. If the limit on repetition of information elements is exceeded, the contents of information elements appearing first up to the limit of repetitions shall be handled and all subsequent repetitions of the information element shall be ignored.

The CTS-FP should follow the same procedures.

# 8.7 Non-imperative message part errors

This category includes:

- syntactically incorrect optional IEs;
- conditional IE errors.

# 8.7.1 Syntactically incorrect optional IEs

The CTS-MS shall treat all optional IEs that are syntactically incorrect in a message as not present in the message.

The CTS-FP shall take the same approach.

### 8.7.2 Conditional IE errors

When the CTS-MS upon receipt of a message diagnoses a "missing conditional IE" error or an "unexpected conditional IE" error or when it receives a message containing at least one syntactically incorrect conditional IE, it shall ignore the message except for the fact that, if an RR connection exists, it shall return a status message (STATUS, CTS RR STATUS, or MM STATUS depending on the PD and SPD) with cause value # 100 "conditional IE error".

When the CTS-FP receives a message and diagnose a "missing conditional IE" error or an "unexpected conditional IE" error or when it receives a message containing at least one syntactically incorrect conditional IE, the CTS-FP shall either:

- try to treat the message (the exact further actions are implementation dependent); or
- ignore the message except that it should return a status message (STATUS, CTS RR STATUS or MM STATUS depending on the protocol discriminator and sub-protocol discriminator) with cause # 100 "conditional IE error".

# 8.8 Messages with semantically incorrect contents

When a message with semantically incorrect contents is received, the foreseen reactions of the procedural part of GSM 04.56 (i.e. of clauses 5, 5, 6) are performed. If however no such reactions are specified, the CTS-MS shall ignore the message except for the fact that, if an RR connection exists, it returns a status message (STATUS, CTS RR STATUS, or MM STATUS depending on the PD and SPD) with cause value # 95 "semantically incorrect message".

The CTS-FP should follow the same procedure except that a status message is not normally transmitted.

Semantic checking of the Facility information element value part (defined in GSM 04.80) is the subject of the technical specifications GSM 04.10 and the GSM 04.8x series.

# 9 Message functional definitions and contents

This subclause defines the structure of the messages of those layer 3 protocols defined in GSM 04.56. These are standard L3 messages as defined in GSM 04.07 with the exception of those sent on the SCH, ARCH.

Each definition given in the present subclause includes:

- a) a brief description of the message direction and use, including whether the message has:
  - 1. Local significance, i.e. relevant only on the originating or terminating access;
  - 2. Access significance, i.e. relevant in the originating and terminating access, but not in the CTS-FP;
  - 3. Dual significance, i.e. relevant in either the originating or terminating access and in the network; or
  - 4. Global significance, i.e. relevant in the originating and terminating access and in the network.
- b) a table listing the information elements known in the message and their order of their appearance in the message. All information elements that may be repeated are explicitly indicated. (V and LV formatted IEs, which compose the imperative part of the message, occur before T, TV, and TLV formatted IEs which compose the non-imperative part of the message, see GSM 04.07.) In a (maximal) sequence of consecutive information elements with half octet length, the first information element with half octet length occupies bits 1 to 4 of octet N, the second bits 5 to 8 of octet N, the third bits 1 to 4 of octet N+1 etc. Such a sequence always has an even number of elements.

For each information element the table indicates:

1. the information element identifier, in hexadecimal notation, if the IE has format T, TV, or TLV. Usually, there is a default IEI for an information element type; default IEIs of different IE types of the same protocol are different. If the IEI has half octet length, it is specified by a notation representing the IEI as a hexadecimal digit followed by a "-" (example: B-).

NOTE: The same IEI may be used for different information element types in different messages of the same protocol.

- 2. the name of the information element (which may give an idea of the semantics of the element). The name of the information element (usually written in italics) followed by "IE" or "information element" is used in GSM 04.08 as reference to the information element within a message.
- 3. the name of the type of the information element (which indicates the coding of the value part of the IE), and generally, the referenced subclause of clause 10 of GSM 04.08 describing the value part of the information element.
- 4. the presence requirement indication (M, C, or O) for the IE as defined in GSM 04.07.
- 5. The format of the information element (T, V, TV, LV, TLV) as defined in GSM 04.07.
- 6. The length of the information element (or permissible range of lengths), in octets, in the message, where "?" means that the maximum length of the IE is only constrained by link layer protocol, and in the case of the Facility IE by possible further conditions specified in GSM 04.10. This indication is non-normative.

c) subclauses specifying, where appropriate, conditions for IEs with presence requirement C or O in the relevant message which together with other conditions specified in GSM 04.08 define when the information elements shall be included or not, what non-presence of such IEs means, and - for IEs with presence requirement C - the static conditions for presence and/or non-presence of the IEs (see GSM 04.07).

# 9.1 Messages for Radio Resources management

Table 9.1/GSM 04.56 summarises the messages for Radio Resources management.

Table 9.1.1/GSM 04.56: Messages for Radio Resources management

Channel establishment messages:	Reference
CTS IMMEDIATE ASSIGNMENT	9.1.21
CTS IMMEDIATE ASSIGNMENT EXTENDED	9.1.22
CTS IMMEDIATE ASSIGNMENT REJECT	9.1.23
Ciphering messages:	Reference
CTS CIPHERING MODE COMMAND	9.1.14
CTS CIPHERING MODE COMPLETE	9.1.15
Channel release messages:	Reference
CTS CHANNEL RELEASE	9.1.13
Handover message:	Reference
CTS INTRACELL HANDOVER COMMAND	9.1.24
CTS INTRACELL HANDOVER COMPLETE	9.1.25
CTS INTRACELL HANDOVER FAILURE	9.1.26
Paging messages:	Reference
CTS GROUP ALERTING REQUEST	9.1.19
CTS PAGING REQUEST	9.1.31
CTS PAGING RESPONSE	9.1.32
CTS HUNTING REQUEST	9.1.20
Alive check messages:	Reference
Miscellaneous messages:	Reference
CTS ACCESS REQUEST	9.1.1
CTS CHANNEL MODE MODIFY	9.1.11
CTS CHANNEL MODE MODIFY ACKNOWLEGDE	9.1.12
CTS CLASSMARK CHANGE	9.1.16
CTS CLASSMARK ENQUIRY	9.1.17
CTS FREQUENCY HOPPING DEFINITION	9.1.18
CTS MEASUREMENT REPORT	9.1.27
CTS RR STATUS	
System messages:	Reference
CTS SYSTEM INFORMATION TYPE 1	9.1.33
CTS SYSTEM INFORMATION TYPE 2	9.1.34
CTS SYSTEM INFORMATION TYPE 3	9.1.35

# 9.1.1 CTS access request

This message is sent in random mode on the ARCH. It does not follow the basic format. The possible formats are presented directly below, without reference to information fields. The order of bit transmission is defined in GSM 04.04.

The message is only 25 bits long, coded as shown in figure 9.1.1/GSM 04.56.




Figure 9.1.1/GSM 04.56: CTS ACCESS REQUEST message content

CAUSE (octet 1)

This information field indicates the reason for requesting the access to a CTS-FP. This field has a fixed length (3 bits).

#### **CTSMSI**

This information field contains the individual Mobile Subscriber Identity. See GSM 03.03.

Table 9.1.2/GSM 04.56: CTS ACCESS REQUEST cause

3bits Code	Cause
000	Alive Check Response
001	MM procedures (Attachment, Re-attachment or detachment)
010	Reserved for future use
011	MS-originated call
100	Answer to paging
101	Enrolment
110	Reserved for future use
111	Reserved for future use

NOTE: Reserved for future use values shall not be used by the mobile station on ARCH. If such message is received by the CTS-FP, it may be ignored.

# 9.1.2 CTS AFA monitoring command

This message is sent on the main DCCH by the CTS-FP to the CTS-MS to instruct the CTS-MS to perform as soon as possible AFA interference measurements.

Message type: CTS AFA MONITORING COMMAND

Significance: dual

Table 9.1.3/GSM 04.56: CTS AFA MONITORING COMMAND message content

IEI	Information element	Type / Reference	Presence	Format	Length
	RR management	Protocol Discriminator	М	V	1/2
	Protocol Discriminator	subclause 10.2			
	Sub-Protocol Discriminator	Sub-Protocol Discriminator	М	V	1/2
		subclause 10.3.1			
	CTS AFA Monitoring	Message Type	М	V	1
	Command Message Type	subclause 10.4			
	AFA Monitoring Frequency List	Frequency list	М	LV	
	-	GSM 04.08 subclause 10.5.2.13			
	NAMC	AFA Monitoring Cycles	М	V	2
		- '			

## 9.1.3 CTS AFA monitoring enquiry

This message is sent on the main DCCH by the CTS-FP to the CTS-MS to request for AFA monitoring results report.

Message type: CTS AFA MONITORING ENQUIRY

Significance: dual

Direction: CTS-FP to CTS-MS

Table 9.1.4/GSM 04.56: CTS AFA MONITORING ENQUIRY message content

IEI	Information element	Type / Reference	Presence	Format	Length
	RR management	Protocol Discriminator	M	V	1/2
	Protocol Discriminator	subclause 10.2			
	Sub-Protocol Discriminator	Sub-Protocol Discriminator subclause 10.3.1	M	V	1/2
	CTS AFA Monitoring	Message Type	М	V	1
	Enquiry Message Type	subclause 10.4			

# 9.1.4 CTS AFA monitoring report

This message is sent on the main DCCH by the CTS-MS to the CTS-FP to report AFA monitoring results.

Message type: CTS AFA MONITORING REPORT

Significance: dual

Direction: CTS-MS to CTS-FP

Table 9.1.5/GSM 04.56: CTS AFA MONITORING REPORT message content

IEI	Information element	Type / Reference	Presence	Format	Length
	RR management	Protocol Discriminator	М	V	1/2
	Protocol Discriminator	subclause 10.2			
	Sub-Protocol Discriminator	Sub-Protocol Discriminator subclause 10.3.1	М	V	1/2
	CTS AFA Monitoring	Message Type	М	V	1
	Report Message Type	subclause 10.4			
	AFA Interference Level	AFA Interference Level	М	LV	
	NAMC real	AFA Monitoring Cycles	М	V	2

### 9.1.5 CTS BCCH detection command

This message is sent on the main DCCH by the CTS-FP to the CTS-MS to instruct the CTS-MS to perform as soon as possible the BCCH detection procedure.

Message type: CTS BCCH DETECTION COMMAND

Significance: dual

Table 9.1.7/GSM 04.56: CTS BCCH DETECTION COMMAND message content

IEI	Information element	Type / Reference	Presence	Format	Length
	RR management	Protocol Discriminator	M	V	1/2
	Protocol Discriminator	subclause 10.2			
	Sub-Protocol Discriminator	Sub-Protocol Discriminator	M	V	1/2
		subclause 10.3.1			
	CTS BCCH Detection	Message Type	M	V	1
	Command Message Type	subclause 10.4			
	BCCH Detection	Frequency list	M	LV	
	Frequency List	GSM 04.08 subclause 10.5.2.13			

## 9.1.6 CTS BCCH detection enquiry

This message is sent on the main DCCH by the CTS-FP to the CTS-MS to request for a BCCH detection report.

Message type: CTS BCCH DETECTION ENQUIRY

Significance: dual

Direction: CTS-FP to CTS-MS

Table 9.1.8/GSM 04.56: CTS BCCH DETECTION ENQUIRY message content

IEI	Information element	Type / Reference	Presence	Format	Length
	RR management	Protocol Discriminator	М	V	1/2
	Protocol Discriminator	subclause 10.2			
	Sub-Protocol Discriminator	Sub-Protocol Discriminator	М	V	1/2
		subclause 10.3.1			
	CTS BCCH Detection	Message Type	М	V	1
	Enquiry Message Type	subclause 10.4			

# 9.1.7 CTS BCCH detection report

This message is sent on the main DCCH by the CTS-MS to the CTS-FP to report the table of BCCH detection status.

Message type: CTS BCCH DETECTION REPORT

Significance: dual

Direction: CTS-MS to CTS-FP

Table 9.1.9/GSM 04.56: CTS BCCH DETECTION REPORT message content

IEI	Information element	Type / Reference	Presence	Format	Length
	RR management	Protocol Discriminator	М	V	1/2
	Protocol Discriminator	subclause 10.2			
	Sub-Protocol Discriminator	Sub-Protocol Discriminator	М	V	1/2
		subclause 10.3.1			
	CTS BCCH Detection	Message Type	М	V	1
	Report Message Type	subclause 10.4			
	BCCH Detection Status	BCCH Detection Status	М	LV	

### 9.1.8 CTS beacon channel synchronisation burst information

This message is sent on the CTSBCH-SB. Its purpose is to . It does not follow the basic format. Its length is 25 bits.

Message type: BEACON CHANNEL SYNCHRONISATION BURST

Significance: dual

Direction: CTS-FP to CTS-MSs

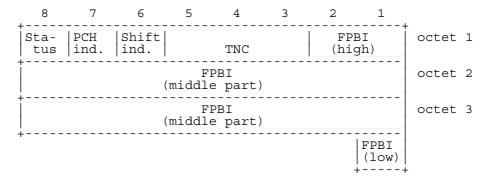


Figure 9.1.2/GSM 04.56: Beacon Channel synchronisation burst information element

Table 9.1.10/GSM 04.56: Beacon Channel synchronisation burst information element

```
Status (octet 1 bit 8)
Bits
8
0
   Idle
   Busy
PCH indicator (octet 1 bit 7)
Bits
   No CTSPCH to decode
   CTSPCH to decode
Shifting indicator (octet 1 bit 6)
Bits
   Shifting
0
  No shifting
TNC (octet 1 bit 5 to 3)
Bits
  4
X X
      X CTS control channel timeslot number
FPBI
```

# 9.1.9 CTS channel mode modify

This message is sent on the main DCCH from the CTS-FP to the CTS-MS to request the setting of the mode for the indicated channel. See table 9.6/GSM 04.08.

Message type: CTS CHANNEL MODE MODIFY

Significance: local

## 9.1.10 CTS channel mode modify acknowledge

This message is sent on the main DCCH from the CTS-MS to the CTS-FP to indicate the successful or unsuccessful execution of a channel mode modify request. See table 9.7/GSM 04.08.

Message type: CTS CHANNEL MODE MODIFY ACKNOWLEDGE

Significance: local

Direction: CTS-FP to CTS-MS

### 9.1.11 CTS channel release

This message is sent on the main DCCH from the CTS-FP to the CTS-MS to initiate deactivation of the dedicated channel. . See table  $9.1.11/GSM\ 04.56$ .

Message type: CTS CHANNEL RELEASE

Significance: dual

Direction: CTS-FP to CTS-MS

Table 9.1.11/GSM 04.56: CTS CHANNEL RELEASE message content

IEI	Information element	Type / Reference	Presence	Format	Length
	RR management	Protocol Discriminator	М	V	1/2
	Protocol Discriminator	subclause 10.2			
	Sub-Protocol Discriminator	Sub-Protocol Discriminator subclause 10.3.1	M	V	1/2
	CTS Channel Release	Message Type	М	V	1
	Message Type	subclause 10.4			
	RR Cause	RR Cause GSM 04.08 subclause 10.5.2.31	M	V	1

# 9.1.12 CTS ciphering mode command

This message is sent on the main DCCH from the CTS-FP to the CTS-MS to indicate that the CTS-FP has started deciphering and that enciphering and deciphering shall be started in the mobile station, or to indicate that ciphering will not be performed. See table 9.1.12/GSM 04.56.

Message type: CTS CIPHERING MODE COMMAND

Significance: dual

Table 9.1.12/GSM 04.56: CTS CIPHERING MODE COMMAND message content

IEI	Information element	Type / Reference	Presence	Format	Length
	RR management	Protocol Discriminator	М	V	1/2
	Protocol Discriminator	subclause 10.2			
	Sub-Protocol Discriminator	Sub-Protocol Discriminator	М	V	1/2
		subclause 10.3.1			
		Message Type	М	V	1
	Message Type	subclause 10.4			
	Ciphering Mode Setting	Cipher Mode Setting	М	V	1/2
		GSM 04.08 subclause 10.5.2.9			
	Cipher Response	Cipher Response	М	V	1/2
		GSM 04.08 subclause 10.5.2.10			

## 9.1.13 CTS ciphering mode complete

This message is sent on the main DCCH from the CTS-MS to the CTS-FP to indicate that enciphering and deciphering has been started in the MS. See table 9.1.13/GSM 04.56

Message type: CTS CIPHERING MODE COMPLETE

Significance: dual

Direction: CTS-MS to CTS-FP

Table 9.1.13/GSM 04.56: CTS CIPHERING MODE COMPLETE message content

IEI	Information element	Type / Reference	Presence	Format	Length
	RR management	Protocol Discriminator	M	V	1/2
	Protocol Discriminator	subclause 10.2			
	Sub-Protocol Discriminator	Sub-Protocol Discriminator subclause 10.3.1	М	V	1/2
	CTS Cipher Mode Complete Message Type	Message Type subclause 10.4	М	V	1
17	Mobile Equipment Identity	Mobile Identity	0	TLV	3-11

# 9.1.14 CTS classmark change

This message is sent on the main DCCH by the CTS-MS to the CTS-FP to indicate a classmark change or a response to a classmark enquiry. See table 9.12/GSM 04.08.

Message type: CTS CLASSMARK CHANGE

Significance: dual

Direction: CTS-MS to CTS-FP

# 9.1.15 CTS classmark enquiry

This message is sent on the main DCCH by the CTS-FP to the CTS-MS to request classmark information. See table 9.12a/GSM 04.08.

Message type: CTS CLASSMARK ENQUIRY

Significance: dual

Direction: CTS-FP to CTS-MS

# 9.1.16 CTS frequency hopping definition

This message is sent on the main DCCH by the CTS-FP to the CTS-MS to indicate the frequency list and the frequency hopping parameters to be used. See table 9.1.14/GSM 04.56.

Message type: CTS FREQUENCY HOPPING REDEFINITION

Significance: dual

Table 9.1.14/GSM 04.56: CTS FREQUENCY HOPPING DEFINITION message content

IEI	Information element	Type / Reference	Presence	Format	Length
	RR management	Protocol Discriminator	М	V	1/2
	Protocol Discriminator	subclause 10.2			
	Sub-Protocol Discriminator	Sub-Protocol Discriminator	M	V	1/2
		subclause 10.3.1			
	CTS Frequency definition	Message Type	M	V	1
	Message Type	subclause 10.4			
	Reference Time	Starting Time	М	V	3
		GSM 04.08			
	TFH Current Parameters	TFH Current Parameters	M	V	8-n
	TFH General Parameter	TFH General Parameters	0	V	10
	TFH List	Frequency list	0	V	3-n
		GSM 04.08 subclause 10.5.2.13			

#### 9.1.16.1 Reference time

The reference time information element indicates the time when the values given by the TFH current parameters IE are relevant.

# 9.1.17 CTS group alerting request

This message is sent on the CTSPCH by the CTS-FP to the mobile stations in order to initiate a connectionless group alerting procedure. The mobile stations are identified by their connectionless group CTSMSI. See table 9.1.15/GSM 04.56.

Message type: CTS GROUP ALERTING REQUEST

Significance: dual

Direction: CTS-FP to CTS-MS

Table 9.1.15/GSM 04.56: CTS GROUP ALERTING REQUEST message content

IEI	Information element	Type / Reference	Presence	Format	Length
	L2 Pseudo Length	L2 Pseudo Length	M	V	1
		subclause 10.5.2.19			
	RR management	Protocol Discriminator	M	V	1/2
	Protocol Discriminator	subclause 10.2			
	Sub-Protocol Discriminator	Sub-Protocol Discriminator	M	V	1/2
		subclause 10.3.1			
	CTS Group Alerting Request	Message Type	M	V	1
	Message Type	subclause 10.4			
	Connectionless Group	CTSMSI	M	LV	
	CTS Mobile Subscriber Identity	subclause 10.5.2.x			
	Information Transfer Capability	Information Transfer Capability	M	V	1/2
	Spare Half Octet	Spare Half Octet	M	V	1/2
		GSM 04.08 subclause 10.5.1.8			
	Calling Party BCD Number	Calling Party BCD Number	M	LV	
		GSM 04.08 subclause 10.5.4.9			
	Rest Octets	Rest Octets	M	V	
		subclause 10.5.2.23			

#### 9.1.17.1 Rest Octets

The sum of the length of this IE and the L2 Pseudo Length of the message equals 22.

# 9.1.18 CTS hunting request

This message is sent on the CTSPCH by the CTS-FP to mobile stations to make a group of mobile station alert for location purpose. The mobile station are identified by their Connectionless Group CTSMSI See table 9.16/GSM 04.56.

Message type: CTS HUNTING REQUEST

Significance: dual

Direction: CTS-FP to CTS-MS

Table 9.1.16/GSM 04.56: CTS HUNTING REQUEST message content

IEI	Information element	Type / Reference	Presence	Format	Length
	L2 Pseudo Length	L2 Pseudo Length subclause 10.5.2.19	М	V	1
	RR management Protocol Discriminator	Protocol Discriminator subclause 10.2	М	V	1/2
	Sub-Protocol Discriminator	Sub-Protocol Discriminator subclause 10.3.1	М	V	1/2
	CTS Hunting Request Message Type	Message Type subclause 10.4	М	V	1
	Connectionless Group CTS Mobile Subscriber Identity	CTSMSI subclause 10.5.2.x	М	V	3
	Rest Octets	Rest Octets subclause 10.5.2.23	М	V	17

#### 9.1.18.1 Rest Octets

The sum of the length of this IE and the L2 Pseudo Length of the message equals 22.

# 9.1.19 CTS immediate assignment

This message is sent on the CTSAGCH by the CTS-FP to the CTS-MS in idle mode to change the channel configuration to a dedicated configuration. See table  $9.1.17/GSM\ 04.56$ .

Message type: CTS IMMEDIATE ASSIGNMENT

Significance: dual

Table 9.1.17/GSM 04.56: CTS IMMEDIATE ASSIGNMENT message content

IEI	Information element	Type / Reference	Presence	Format	Length
	CTS L1 information	CTS L1 information	М	V	3
	L2 Pseudo Length	L2 Pseudo Length GSM 04.08 subclause 10.5.2.19	М	V	1
	RR management Protocol Discriminator	Protocol Discriminator subclause 10.2	М	V	1/2
	Sub-Protocol Discriminator	Sub-Protocol Discriminator subclause 10.3.1	М	V	1/2
	CTS Immediate Assignment Message Type	Message Type subclause 10.4	М	V	1
	Channel Description	CTS Channel Description	М	V	3
	Access Request Reference	CTS Access Request Reference	М	V	4
	Rest Octets	Rest Octets	М	V	10

## 9.1.20 CTS immediate assignment extended

This message is sent on the hopping CTSAGCH by the CTS-FP to two CTS-MSs in idle mode to change their channel configurations to a dedicated configurations. See table 9.1.18/GSM 04.56.

This message has a L2 Pseudo Length of 16.

Message type: CTS IMMEDIATE ASSIGNMENT EXTENDED

Significance: dual

Direction: CTS-FP to CTS-MSs

Table 9.1.18/GSM 04.56: CTS IMMEDIATE ASSIGNMENT EXTENDED message content

IEI	Information element	Type / Reference	Presence	Format	Length
	CTS L1 Information	CTS L1 Information	М	V	3
	L2 Pseudo Length	L2 Pseudo Length GSM 0408 subclause 10.5.2.19	М	V	1
	RR management Protocol Discriminator	Protocol Discriminator subclause 10.2	М	V	1/2
	Sub-Protocol Discriminator	Sub-Protocol Discriminator subclause 10.3.1	М	V	1/2
	CTS Immediate Assignment Message Type	Message Type subclause 10.4	M	V	1
	Channel Description 1	CTS Channel Description	М	V	3
	Access Request Reference 1	CTS Access Request Reference	М	V	4
	Channel Description 2	CTS Channel Description	М	V	3
	Access Request Reference 2	CTS Access Request Reference	М	V	4
	Rest Octets	Rest Octets	М	V	3

# 9.1.21 CTS immediate assignment reject

This message is sent on the CTSAGCH by the CTS-FP to up to three CTS-MSs to indicate that no channel is available for assignment. See table 9.1.19/GSM 04.56.

This message has a L2 Pseudo Length of 22.

Message type: CTS IMMEDIATE ASSIGNMENT REJECT

Significance: dual

Table 9.1.19/GSM 04.56: CTS IMMEDIATE ASSIGNMENT REJECT message content

IEI	Information element	Type / Reference	Presence	Format	Length
	CTS L1 information	CTS L1 information	М	V	3
	L2 Pseudo Length	L2 Pseudo Length GSM 0408 subclause 10.5.2.19	М	V	1
	RR management Protocol Discriminator	Protocol Discriminator subclause 10.2	М	V	1/2
	Sub-Protocol Discriminator	Sub-Protocol Discriminator subclause 10.3.1	М	V	1/2
	CTS Immediate Assignment Message Type	Message Type subclause 10.4	М	V	1
	Access Request Reference 1	CTS Access Request Reference	М	V	4
	Wait Indication 1	Wait Indication GSM 04.08 subclause 10.5.2.43	М	V	1
	Access Request Reference 2	CTS Access Request Reference	М	V	4
	Wait Indication 2	Wait Indication GSM 04.08 subclause 10.5.2.43	М	V	1
	Access Request Reference 3	CTS Access Request Reference	М	V	4
	Wait Indication 3	Wait Indication GSM 04.08 subclause 10.5.2.43	М	V	1
	Rest Octets	Rest octets	М	V	2

### 9.1.21.1 Use of Indexes

An Access Request information element and the following Wait Indication information element refer to the same CTS-MS.

### 9.1.21.2 Filling of the message

If necessary, the Access Request Reference information element and the wait indication information element should be duplicated to fill the message

### 9.1.22 CTS intracell handover command

This message is sent on the main DCCH by the CTS-FP to the CTS-MS to change the dedicated channel configuration

Message type: CTS INTRACELL HANDOVER COMMAND

Significance: dual

Table 9.1.20/GSM 04.56: CTS INTRACELL HANDOVER COMMAND message content

IEI	Information element	Type / Reference	Presence	Format	Length
	RR management	Protocol Discriminator	M	V	1/2
	Protocol Discriminator	subclause 10.2			
	Sub-Protocol Discriminator	Sub-Protocol Discriminator	М	V	1/2
		subclause 10.3.1			
	CTS Immediate Assignment	Message Type	M	V	1
	Message Type	subclause 10.4			
	Channel Description	CTS Channel Description	М	V	3
	Starting Time	Starting Time	М	V	3
		GSM 04.08 subclause 10.5.2.38			
	Channel Mode	Channel Mod	0	V	2
		GSM 04.08 subclause 10.5.2.6			

# 9.1.23 CTS intracell handover complete

This message is sent on the main DCCH by the CTS-MS to the CTS-FP to indicate that the CTS-MS has established the main signalling link.

Message type: CTS INTRACELL HANDOVER COMPLETE

Significance: dual

Direction: CTS-FP to CTS-MS

Table 9.1.21/GSM 04.56: CTS INTRACELL HANDOVER COMPLETE message content

IEI	Information element	Type / Référence	Presence	Format	Length
	RR management	Protocol Discriminator	M	V	1/2
	Protocol Discriminator	subclause 10.2			
	Sub-Protocol Discriminator	Sub-Protocol Discriminator subclause 10.3.1	М	V	1/2
	CTS Immediate Assignment	Message Type	М	V	1
	Message Type	subclause 10.4			
	RR Cause	RR Cause	M	V	2
		GSM 04.08 subclause 10.5.2.31			

### 9.1.24 CTS intracell handover failure

This message is sent on the main DCCH by the CTS-MS to the CTS-FP to indicate that the CTS-MS has failed to seize the new channel.

Message type: CTS INTRACELL HANDOVER COMMAND

Significance: dual

Table 9.1.22/GSM 04.56: CTS INTRACELL HANDOVER COMMAND message content

IEI	Information element	Type / Reference	Presence	Format	Length
	RR management	Protocol Discriminator	М	V	1/2
	Protocol Discriminator	subclause 10.2			
	Sub-Protocol Discriminator	Sub-Protocol Discriminator	М	V	1/2
		subclause 10.3.1			
	CTS Immediate Assignment	Message Type	М	V	1
	Message Type	subclause 10.4			
	Channel Description	CTS Channel Description	М	V	3
	Starting Time	Starting Time	M	V	2
		GSM 04.08 subclause 10.5.2.38			

### 9.1.25 CTS measurement report

This message is sent on the SACCH by the CTS-MS to the CTS-FP to report measurement results about the dedicated channel. See table  $9.1.23/GSM\ 04.56$ .

Message type: CTS MEASUREMENT REPORT

Significance: dual

Direction: CTS-MS to CTS-FP

Table 9.1.23/GSM 04.56: CTS SYSTEM INFORMATION TYPE 1 message content

IEI	Information element	Type / Reference	Presence	Format	Length
	RR management	Protocol Discriminator	M	V	1/2
	Protocol Discriminator	subclause 10.2			
	Sub-Protocol Discriminator	Sub-Protocol Discriminator	М	V	1/2
		subclause 10.3.1			
	CTS Measurement Report	Message Type	М	V	1
	Message Type	subclause 10.4			
	Measurement Results	Measurement Results	М	V	16
		GSM 04.08 subclause 10.5.2.20			

### 9.1.25.1 Measurement results

For CTS purpose, the NO-NCELL-M field (number of neighbouring cell measurements) shall be set to *No neighbour cell measurement result* (000) in the Measurement Result IEI and therefore, RXLEV-NCELLi, BS-FREQ-NCELLi and BSISC-NCELLi field (1 <= i <= 6) shall be coded with a "0" in each bit.

### 9.1.26 CTS OFO measurement command

This message is sent on the main DCCH by the CTS-FP to the CTS-MS to instruct the CTS-MS to perform as soon as possible OFO measurements.

Message type: CTS OFO MEASUREMENT COMMAND

Significance: dual

Table 9.1.24/GSM 04.56: CTS OFO MEASUREMENT COMMAND message content

IEI	Information element	Type / Reference	Presence	Format	Length
	RR management	Protocol Discriminator	M	V	1/2
	Protocol Discriminator	subclause 10.2			
	Sub-Protocol Discriminator	Sub-Protocol Discriminator	M	V	1/2
		subclause 10.3.1			
	CTS OFO Measurement	Message Type	M	V	1
	Command Message Type	subclause 10.4			
	OFO Measurement BCCH	Frequency list	M	LV	
	Frequency List	GSM 04.08 subclause 10.5.2.13			

### 9.1.27 CTS OFO measurement enquiry

This message is sent on the main DCCH by the CTS-FP to the CTS-MS to request for OFO measurement results report.

Message type: CTS OFO MEASUREMENT ENQUIRY

Significance: dual

Direction: CTS-FP to CTS-MS

Table 9.1.25/GSM 04.56: CTS OFO MEASUREMENT ENQUIRY message content

IEI	Information element	Type / Reference	Presence	Format	Length
	RR management	Protocol Discriminator	M	V	1/2
	Protocol Discriminator	subclause 10.2			
	Sub-Protocol Discriminator	Sub-Protocol Discriminator	M	<b>V</b>	1/2
		subclause 10.3.1			
	CTS OFO Measurement	Message Type	М	V	1
	Enquiry Message Type	subclause 10.4			

# 9.1.28 CTS OFO Measurement report

This message is sent on the main DCCH by the CTS-MS to the CTS-FP to report AFA monitoring results.

Message type: CTS OFO MEASUREMENT REPORT

Significance: dual

Direction: CTS-MS to CTS-FP

Table 9.1.26/GSM 04.56: CTS OFO MEASUREMENT REPORT message content

IEI	Information element	Type / Reference	Presence	Format	Length
	RR management	Protocol Discriminator	M	V	1/2
	Protocol Discriminator	subclause 10.2			
	Sub-Protocol Discriminator	Sub-Protocol Discriminator subclause 10.3.1	М	V	1/2
	CTS OFO Measurement Report Message Type	Message Type subclause 10.4	М	V	1
	OFO Measurement Results	OFO Measurement Result	М	LV	

## 9.1.29 CTS paging request

This message is sent on the CTSPCH by the CTS-FP to CTS-MSs. It may be sent to a CTS-MS in idle mode to trigger channel access. The CTS-MS are identified by their CTSMSIs. See table 9.x/GSM 04.56.

This message has a L2 Pseudo Length of 19.

Message type: CTS PAGING REQUEST

Significance: dual

Direction: CTS-FP to CTS-MS

Table 9.1.27/GSM 04.56: CTS PAGING REQUEST message content

IEI	Information element	Type / Reference	Presence	Format	Length
	L2 Pseudo Length	L2 Pseudo Length subclause 10.5.2.19	М	V	1
	RR management Protocol Discriminator	Protocol Discriminator subclause 10.2	М	V	1/2
	Sub-Protocol Discriminator	Sub-Protocol Discriminator subclause 10.3.1	М	V	1/2
	CTS Paging Request Message Type	Message Type subclause 10.4	М	V	1
	Mobile Identity 1	CTSMSI subclause 10.5.2.1	М	V	3
	Mobile Identity 2	CTSMSI subclause 10.5.2.1	М	V	3
	Mobile Identity 3	CTSMSI subclause 10.5.2.1	М	V	3
	Mobile Identity 4	CTSMSI subclause 10.5.2.1	М	V	3
	Paging type 1	Paging type subclause 10.5.2.12	М	V	1
	Paging type 2	Paging type subclause 10.5.2.12	М	V	1
	Paging type 3	Paging type subclause 10.5.2.12	М	V	1
	Paging type 4	Paging type subclause 10.5.2.12	М	V	1
	Rest Octets		М	V	4

### 9.1.29.1 Paging type

The Paging type x Information Element is related to the Mobile Identity x Information Element.

# 9.1.30 CTS paging response

This message is sent on the main DCCH by the CTS-MS to the CTS-FP in connection with establishment of the main signalling link as a response to the paging request message. See table 9.1.28/GSM 04.56.

Message type: CTS PAGING RESPONSE

Significance: dual

Direction: CTS-MS to CTS-FP

Table 9.1.28/GSM 04.56: CTS PAGING RESPONSE message content

IEI	Information element	Type / Reference	Presence	Format	Length
	RR management	Protocol Discriminator	M	V	1/2
	Protocol Discriminator	subclause 10.2			
	Sub-Protocol Discriminator	Sub-Protocol Discriminator	M	V	1/2
		subclause 10.3.1			
	CTS Paging Response	Message Type	M	V	1
	Message Type	subclause 10.4			
	Ciphering Key Sequence	Ciphering Key Sequence	M	V	1/2
	Number	Number			
		GSM 04.08 subclause 10.5.1.2			
	Spare Half Octet	Spare Half Octet	M	V	1/2
		subclause 10.5.1.8			
	Mobile Station	Mobile Station	M	LV	4
	Classmark	Classmark 2			
		GSM 0408 subclause 10.5.1.6			
	Mobile Identity	Mobile Identity	M	LV	2-9
		GSM 04.08 subclause 10.5.1.4			

### 9.1.30.1 Ciphering Key Sequence

For CTS purpose, the key sequence value shall be set to *No key is available* (1 1 1) value in the Ciphering key Sequence IEI by the CTS-MS.

# 9.1.31 CTS system information type 1

This message is sent on the CTSPCH by the CTS-FP to all the CTS-MSs within the cell giving information about the TFH List to be used. See table 9.1.29/GSM 04.56.

Message type: CTS SYSTEM INFORMATION TYPE 1

Significance: dual

Direction: CTS-FP to CTS-MSs

Table 9.1.29/GSM 04.56: CTS SYSTEM INFORMATION TYPE 1 message content

IEI	Information element	Type / Reference	Presence	Format	Length
	L2 Pseudo Length	L2 Pseudo Length	M	V	1
		subclause 10.5.2.19			
	RR management	Protocol Discriminator	M	V	1/2
	Protocol Discriminator	subclause 10.2			
	Sub-Protocol Discriminator	Sub-Protocol Discriminator	M	V	1/2
		subclause 10.3.1			
	CTS System Info. Type 1	Message Type	M	V	1
	Message Type	subclause 10.4			
	Starting Time	Starting Time	M	V	2
		GSM 04.08 subclause 10.5.2.38			
	TFH List	Frequency List	M	LV	
	Rest Octet		M		

### 9.1.31.1 Starting Time

The starting time information element indicates when the new TFH list apply.

## 9.1.32 CTS system information type 2

This message is sent on the CTSPCH by the CTS-FP to all the CTS-MSs within the cell giving information about the hopping parameters to be used. See table 9.1.30/GSM 04.56.

Message type: CTS SYSTEM INFORMATION TYPE 2

Significance: dual

Direction: CTS-FP to CTS-MSs

Table 9.1.30/GSM 04.56: CTS SYSTEM INFORMATION TYPE 2 message content

IEI	Information element	Type / Référence	Presence	Format	Length
	RR management	Protocol Discriminator	M	V	1/2
	Protocol Discriminator	subclause 10.2			
	Sub-Protocol Discriminator	Sub-Protocol Discriminator subclause 10.3.1	М	V	1/2
	CTS System Info. Type 2 Message Type	Message Type subclause 10.4	М	V	1
	Starting Time	Starting Time GSM 04.08 subclause 10.5.2.38	М	V	2
	TFH New Current Parameters	TFH Current parameters	М	LV	
	Rest Octet		М		

# 9.1.33 CTS system information type 3

This message is sent on the CTSPCH by the CTS-FP to all the CTS-MSs in order to invalidate the hopping parameters used by the CTS-MSs and to detach all the CTS-MSs. See table 9.1.31/GSM 04.56.

Message type: CTS SYSTEM INFORMATION TYPE 3

Significance: dual

Direction: CTS-FP to CTS-MSs

Table 9.1.31/GSM 04.56: CTS SYSTEM INFORMATION TYPE 3 message content

IEI	Information element	Type / Référence	Presence	Format	Length
	RR management	Protocol Discriminator	M	V	1/2
	Protocol Discriminator	subclause 10.2			
	Sub-Protocol Discriminator	Sub-Protocol Discriminator	M	V	1/2
		subclause 10.3.1			
	CTS System Info. Type 2	Message Type	M	V	1
	Message Type	subclause 10.4			
	Starting Time	Starting Time	M	V	2
		GSM 04.08 subclause 10.5.2.38			
	Rest Octet		M		

# 9.1.34 CTS RR parameters update

This message is sent by the fixed part to the mobile station to provide RR parameters. See table 9.1.32/GSM 04.56

Message type: CTS RR PARAMETERS UPDATE

Significance: dual

Direction: fixed part to mobile station

Table 9.1.32/GSM 04.56: CTS RR PARAMETERS UPDATE message content

IEI	Information element	Type / Reference	Presence	Format	Length
	RR management	Protocol discriminator	M	V	1/2
	Protocol discriminator	subclause 10.2			
	Sub-Protocol Discriminator	Sub-Protocol Discriminator subclause 10.3.1	М	V	1/2
	CTS RR parameters update Message type	Message type subclause 10.4	М	V	1
74	CTS selection parameters	CTS selection parameters subclause 10.5.3.12	0	TV	3
75	CTS RR parameters	CTS RR parameters subclause 10.5.3.13	0	TV	5
76	Timeslot shifting parameters	Timeslot shifting parameters subclause 10.5.3.14	0	TV	4

# 9.2 Messages for mobility management

Table 9.2.1/GSM 04.56 summarises the messages for mobility management.

Table 9.2.1/GSM 04.56: Messages for mobility management

Attach/detach messages:	Reference
CTS ATTACH REQUEST	9.2.1
CTS ATTACH ACCEPT	9.2.2
CTS ATTACH REJECT	9.2.3
CTS DETACH INDICATION	9.2.4
Enrolment messages:	Reference
CTS ENROLMENT REQUEST	9.2.7
CTS ENROLMENT ACCEPT	9.2.8
CTS ENROLMENT REJECT	9.2.9
CTS DE-ENROLMENT INDICATION	9.2.10
Authentication messages:	Reference
CTS MS AUTHENTICATION REQUEST	9.2.11
CTS MS AUTHENTICATION RESPONSE	9.2.12
CTS FP AUTHENTICATION RESPONSE	9.2.13
CTS MS AUTHENTICATION REJECT	9.2.14
Identity messages:	Reference
CTSMSI UPDATE COMMAND	9.2.15
CTSMSI UPDATE COMPLETE	9.2.16

# 9.2.1 CTS attach request

This message is sent by the mobile station to the fixed part to indicate to request attachment on this fixed part. See table  $9.2.2/GSM\ 04.56$ .

Message type: CTS ATTACH REQUEST

Significance: dual

Direction: mobile station to fixed part

Table 9.2.2/GSM 04.56: CTS ATTACH REQUEST message content

IEI	Information element	Type / Reference	Presence	Format	Length
	CTS mobility management	Protocol discriminator	M	V	1/2
	Protocol discriminator	subclause 10.2			
	Sub-Protocol Discriminator	Sub-Protocol Discriminator	M	٧	1/2
		subclause 10.3.1			
	CTS attach request	Message type	M	V	1
	Message type	subclause 10.4			
	CTS Ciphering Key Sequence	Ciphering Key Sequence	M	V	1/2
	Number	Number			
		GSM 04.08 subclause 10.5.1.2			
	Attach type	Attach type	M	V	1/2
		subclause 10.5.3.11			
	Mobile Station	Mobile Station	M	V	1
	Classmark	Classmark 1			
		GSM 04.08 subclause 10.5.1.5			
	Mobile identity	Mobile identity	M	LV	2 - 9
	-	subclause 10.5.1.1			

# 9.2.2 CTS attach accept

This message is sent by the fixed part to the mobile station to indicate that the requested attachment has been accepted. See table 9.2.3/GSM 04.56

Message type: CTS ATTACH ACCEPT

Significance: dual

Direction: fixed part to mobile station

Table 9.2.3/GSM 04.56: CTS ATTACH ACCEPT message content

IEI	Information element	Type / Reference	Presence	Format	Length
	CTS mobility management protocol discriminator	Protocol discriminator subclause 10.2	М	V	1/2
	Sub-Protocol Discriminator	Sub-Protocol Discriminator subclause 10.3.1	М	V	1/2
	CTS attach accept message type	Message type subclause 10.4	М	V	1
	TC3252	TC3252 subclause 10.5.3.10	М	V	1
01	CTS mobile group list	CTS mobile group list subclause 10.5.3.7	0	TLV	5 - 26
02	Access right identity	Access right identity subclause 10.5.3.9	0	TV	4
A1	Follow on proceed	Follow on proceed GSM 04.08 subclause 10.5.3.7	0	Т	1

# 9.2.3 CTS attach reject

This message is sent by the fixed part to the mobile station to indicate that the requested attachment has been rejected. See table 9.2.4/GSM 04.56.

Message type: CTS ATTACH REJECT

Significance: dual

Direction: fixed part to mobile station

Table 9.2.4/GSM 04.56: CTS ATTACH REJECT message content

IEI	Information element	Type / Reference	Presence	Format	Length
	CTS mobility management protocol discriminator	Protocol discriminator subclause 10.2	М	V	1/2
	Sub-Protocol Discriminator	Sub-Protocol Discriminator subclause 10.3.1	М	V	1/2
	CTS attach reject message type	Message type subclause 10.4	М	V	1
	Fixed part identity	Fixed part identity subclause 10.5.3.6	М	LV	2 - 10
	Reject cause	Reject cause GSM 04.08 subclause 10.5.3.6	М	V	1

## 9.2.4 CTS detachment indication

This message is sent by the mobile station to the fixed part to indicate the detachment of this fixed part. See table 9.2.5/GSM 04.56.

Message type: CTS DETACH INDICATION

Significance: dual

Direction: mobile station to fixed part

Table 9.2.5/GSM 04.56: CTS DETACH INDICATION message content

IEI	Information element	Type / Reference	Presence	Format	Length
	CTS mobility management	Protocol discriminator	M	V	1/2
	protocol discriminator	subclause 10.2			
	Sub-Protocol Discriminator	Sub-Protocol Discriminator	M	V	1/2
		subclause 10.3.1			
	CTS detach indication	Message type	M	V	1
	message type	subclause 10.4			
	Mobile Station	Mobile Station	M	V	1
	Classmark	Classmark 1			
		GSM 04.08 subclause 10.5.1.5			
	Mobile identity	Mobile identity	M	LV	2 - 9
		subclause 10.5.1.1			

## 9.2.5 CTS enrolment request

This message is sent by the mobile station to the fixed part to indicate to request enrolment on this fixed part. See table 9.2.8/GSM 04.56.

Message type: CTS ENROLMENT REQUEST

Significance: dual

Direction: mobile station to fixed part

Table 9.2.8/GSM 04.56: CTS ENROLMENT REQUEST message content

IEI	Information element	Type / Reference	Presence	Format	Length
	CTS mobility management	Protocol discriminator	M	V	1/2
	protocol discriminator	subclause 10.2			
	Sub-Protocol Discriminator	Sub-Protocol Discriminator subclause 10.3.1	М	V	1/2
	CTS enrolment request message type	Message type subclause 10.4	M	V	1
	Mobile Station Classmark	Mobile Station Classmark 1 GSM 04.08 subclause 10.5.1.5	М	V	1
	Mobile identity	Mobile identity subclause 10.5.1.1	М	LV	2 - 9
A2	Following attach request	Following attach request subclause 10.5.3.8	0	T	1

## 9.2.6 CTS enrolment accept

This message is sent by the fixed part to the mobile station to indicate that the requested enrolment has been accepted. See table 9.2.9/GSM 04.56

Message type: CTS ENROLMENT ACCEPT

Significance: dual

Direction: fixed part to mobile station

Table 9.2.9/GSM 04.56: CTS ENROLMENT ACCEPT message content

IEI	Information element	Type / Reference	Presence	Format	Length
	CTS mobility management protocol discriminator	Protocol discriminator subclause 10.2	М	V	1/2
	Sub-Protocol Discriminator	Sub-Protocol Discriminator subclause 10.3.1	M	V	1/2
	CTS enrolment accept message type	Message type subclause 10.4	M	>	1
	Fixed part identity	Fixed part identity subclause 10.5.3.6	М	LV	2 - 10
	Mobile identity	Mobile identity subclause 10.5.1.1	M	LV	2 - 9

## 9.2.7 CTS enrolment reject

This message is sent by the fixed part to the mobile station to indicate that the requested enrolment has been rejected. See table 9.2.10/GSM 04.56.

Message type: CTS ENROLMENT REJECT

Significance: dual

Table 9.2.10/GSM 04.56: CTS ENROLMENT REJECT message content

IEI	Information element	Type / Reference	Presence	Format	Length
	CTS mobility management	Protocol discriminator	M	V	1/2
	protocol discriminator	subclause 10.2			
	Sub-Protocol Discriminator	Sub-Protocol Discriminator	M	V	1/2
		subclause 10.3.1			
	CTS enrolment reject	Message type	M	V	1
	message type	subclause 10.4			
	Fixed part identity	Fixed part identity	M	LV	2 - 10
		subclause 10.5.3.6			
	Reject cause	Reject cause	M	V	1
		GSM 04.08 subclause 10.5.3.6			

#### 9.2.8 CTS de-enrolment indication

This message is sent by the fixed part to the mobile station to indicate that the mobile station is no more enrolled on this fixed part. See table 9.2.11/GSM 04.56.

Message type: CTS DE-ENROLMENT INDICATION

Significance: dual

Direction: fixed part to mobile station

Table 9.2.11/GSM 04.56: CTS DE-ENROLMENT INDICATION message content

IEI	Information element	Type / Reference	Presence	Format	Length
	CTS mobility management	Protocol discriminator	M	V	1/2
	protocol discriminator	subclause 10.2			
	Sub-Protocol Discriminator	Sub-Protocol Discriminator	M	V	1/2
		subclause 10.3.1			
	CTS de-enrolment indication	Message type	M	V	1
	message type	subclause 10.4			
	Fixed part identity	Fixed part identity	M	LV	2 - 10
		subclause 10.5.3.6			
	Reject cause	Reject cause	M	V	1
		GSM 04.08 subclause 10.5.3.6			

## 9.2.9 CTS MS authentication request

This message is sent by the fixed part to request authentication of the mobile station. See table 9.2.12/GSM 04.56.

Message type: CTS MS AUTHENTICATION REQUEST

Significance: dual

Table 9.2.12/GSM 04.56: CTS MS AUTHENTICATION REQUEST message content

IEI	Information element	Type / Reference	Presence	Format	Length
	CTS mobility management protocol discriminator	Protocol discriminator subclause 10.2	М	V	1/2
	Sub-Protocol Discriminator	Sub-Protocol Discriminator subclause 10.3.1	М	V	1/2
	CTS MS authentication request message type	Message type subclause 10.4	M	V	1
	Ciphering key sequence number	Ciphering key sequence number GSM 04.08 subclause 10.5.1.2	M	V	1/2
	Spare half octet	Spare half octet GSM 04.08 subclause 10.5.1.8	M	V	1/2
	Authentication parameter CH1	Auth. parameter CH subclause 10.5.3.3	М	V	16
03	Authentication parameter RIMS	Auth. parameter RIMS subclause 10.5.3.1	0	TV	9

## 9.2.10 CTS MS authentication response

This message is sent by the mobile station to the fixed part to deliver a calculated response to the fixed part and to request authentication of the fixed part. See table 9.2.13/GSM 04.56.

Message type: CTS MS AUTHENTICATION RESPONSE

Significance: dual

Direction: mobile station to fixed part

Table 9.2.13/GSM 04.56: CTS MS AUTHENTICATION RESPONSE message content

IEI	Information element	Type / Reference	Presence	Format	Length
	CTS mobility management	Protocol discriminator	М	V	1/2
	Protocol discriminator	subclause 10.2			
	Sub-Protocol Discriminator	Sub-Protocol Discriminator subclause 10.3.1	M	V	1/2
	CTS MS authentication Response message type	Message type subclause 10.4	M	V	1
	Authentication Parameter SRES1	Auth. parameter XRES subclause 10.5.3.4	M	V	16
	Authentication Parameter CH2	Auth. parameter CH subclause 10.5.3.3	M	V	16
04	Authentication Parameter RIFP	Auth. parameter RIFP subclause 10.5.3.2	0	TV	9

## 9.2.11 CTS FP authentication response

This message is sent by the fixed part to the mobile station to deliver a calculated response to the mobile station. See table 9.2.14/GSM 04.56.

Message type: CTS FP AUTHENTICATION RESPONSE

Significance: dual

Table 9.2.14/GSM 04.56: CTS FP AUTHENTICATION RESPONSE message content

IEI	Information element	Type / Reference	Presence	Format	Length
	CTS mobility management	Protocol discriminator	M	V	1/2
	Protocol discriminator	subclause 10.2			
	Sub-Protocol Discriminator	Sub-Protocol Discriminator	M	V	1/2
		subclause 10.3.1			
	CTS FP authentication response	Message type	M	V	1
	Message type	subclause 10.4			
	Authentication	Auth. parameter XRES	M	V	16
	Parameter SRES2	subclause 10.5.3.4			

### 9.2.12 CTS MS authentication reject

This message is sent by the fixed part to the mobile station to indicate that the authentication has failed (and that the receiving mobile station shall abort all activities). See table 9.2.15/GSM 04.56.

Message type: CTS MS AUTHENTICATION REJECT

Significance: dual

Direction: fixed part to mobile station

Table 9.2.15/GSM 04.56: CTS MS AUTHENTICATION REJECT message content

IEI	Information element	Type / Reference	Presence	Format	Length
	CTS mobility management	Protocol discriminator	М	V	1/2
	Protocol discriminator	subclause 10.2			
	Sub-Protocol Discriminator	Sub-Protocol Discriminator	M	V	1/2
		subclause 10.3.1			
	CTS MS authentication reject	Message type	M	V	1
	Message type	subclause 10.4			
	Fixed part identity	Fixed part identity	М	LV	2 - 10
	·	subclause 10.5.3.6			

## 9.2.13 CTSMSI update command

This message is sent by the fixed part to the mobile station to update the CTSMSI. See table 9.2.16/GSM 04.56.

Message type: CTSMSI UPDATE COMMAND

Significance: dual

Table 9.2.16/GSM 04.56: CTS MSI UPDATE COMMAND message content

IEI	Information element	Type / Reference	Presence	Format	Length
	CTS mobility management	Protocol discriminator	М	V	1/2
	Protocol discriminator	subclause 10.2			
	Sub-Protocol Discriminator	Sub-Protocol Discriminator	М	V	1/2
		subclause 10.3.1			
	CTSMSI update command	Message type	М	V	1
	Message type	subclause 10.4			
	Mobile identity	Mobile identity	М	LV	2 - 9
	-	subclause 10.5.1.1			

#### 9.2.14 CTSMSI update complete

This message is sent by the mobile station to the fixed part to indicate that the update of the CTSMSI has taken place. See table 9.2.17/GSM 04.56.

Message type: CTSMSI UPDATE COMPLETE

Significance: dual

Direction: mobile station to fixed part

Table 9.2.17/GSM 04.56: CTSMSI UPDATE COMPLETE message content

IEI	Information element	Type / Reference	Presence	Format	Length
	CTS mobility management Protocol discriminator	Protocol discriminator subclause 10.2	М	V	1/2
	Sub-Protocol Discriminator	Sub-Protocol Discriminator subclause 10.3.1	M	V	1/2
	CTSMSI update complete Message type	Message type subclause 10.4	M	V	1

## 10 General message format and information elements coding

The figures and text in this clause describe the Information Elements contents.

#### 10.1 Overview

See corresponding subclause in GSM 04.08.

#### 10.2 Protocol Discriminator

The Protocol Discriminator (PD) and its use are defined in GSM 04.07 [20].

#### 10.3 Sub-Protocol Discriminator and transaction identifier

#### 10.3.1 Sub-Protocol Discriminator

Bits 5 to 8 of the first octet of every CTS Radio Resource management and CTS Mobility Management message contains the Sub-Protocol Discriminator. The Sub-Protocol Discriminator (SPD) and its use are defined in GSM 04.07.

#### 10.3.2 Transaction identifier

See GSM 04.08.

## 10.4 Message Type

The message type IE and its use are defined in GSM 04.07 [20]. Tables 10.1/GSM 04.56, and 10.1/GSM 04.08 define the value part of the message type IE used in the Radio Resource management protocol, the Mobility Management protocol, the Call Control protocol, and Session management protocol.

Table 10.1/GSM 04.56: Message types for Radio Resource management

```
8 7 6 5 4 3 2 1
0 0 1 1 1 - - - Channel establishment messages:
                1 1 1 - CTS IMMEDIATE ASSIGNMENT
0 0 1 - CTS IMMEDIATE ASSIGNMENT EXTENDED
0 1 0 - CTS IMMEDIATE ASSIGNMENT REJECT
0 0 1 1 0 - - - Ciphering messages:
                1 0 1 - CTS CIPHERING MODE COMMAND 0 1 0 - CTS CIPHERING MODE COMPLETE
0 0 1 0 1 - - - Handover messages:
                0 1 1 - CTS INTRACELL HANDOVER COMMAND
1 0 0 - CTS INTRACELLHANDOVER COMPLETE
                0 0 0 - CTS INTRACELLHANDOVER FAILURE
0 0 0 0 1 - - - Channel release messages: 1 0 1 - CTS CHANNEL RELEASE
0 0 1 0 0 - - -
                          Paging messages:
                0 0 1 - CTS PAGING REQUEST
0 1 0 - CTS GROUP ALERTING
1 0 0 - CTS HUNTING
                          - CTS PAGING RESPONSE
0 0 0 1 1 - - -
                          System information messages:
                0 0 1 - CTS SYSTEM INFORMATION TYPE 1 0 1 0 - CTS SYSTEM INFORMATION TYPE 2
                          - CTS SYSTEM INFORMATION TYPE 3
0 0 0 1 0 - - - Miscellaneous messages:
                0 0 0 - CTS CHANNEL MODE MODIFY 0 1 0 - CTS RR STATUS
                1 1 1 - CTS CHANNEL MODE MODIFY ACKNOWLEDGE
1 0 0 - CTS FREQUENCY REDEFINITION
1 0 1 - CTS MEASUREMENT REPORT
1 1 0 - CTS CLASSMARK CHANGE
0 1 1 - CTS CLASSMARK ENQUIRY
```

Bit 8 is reserved for possible future use as an extension bit, see GSM 04.07.

Table 10.2/GSM 04.56: Message types for Mobility Management

```
8 7 6 5 4 3 2 1
                          Registration messages:
0 x 0 0 - - - -
             0 0 0 1
                         - ČTS DETACH INDICĂTION
- CTS ATTACH ACCEPT
               1 0 0 - CTS ATTACH REJECT
                          - CTS ATTACH REQUEST
- CTS RE-ATTACH REQUEST
             1 0 0 0
             1 1 0 1
             1 1 1 0 - CTS RE-ATTACH ACCEPT
0 x 0 1 - - - -
                          Security messages:
            0 0 0 1 - CTS MS AUTHENTICATION REJECT
0 0 1 0 - CTS MS AUTHENTICATION REQUEST
0 1 0 0 - CTS MS AUTHENTICATION RESPONSE
0 1 0 1 - CTS FP AUTHENTICATION RESPONSE
1 0 1 0 - CTSMSI UPDATE COMMAND
                          - CTSMSI UPDATE COMPLETE
                          Enrolment messages:
0 x 1 0 - - - -
             0 0 0 1 - CTS ENROLMENT REQUEST
0 0 1 0 - CTS ENROLMENT RESPONSE
            0 0 1 1 - CTS ENROLMENT REJECT
0 1 0 0 - CTS DE-ENROLMENT INDICATION
```

Bit 8 is reserved for possible future use as an extension bit, see GSM 04.07.

Bit 7 is reserved for the send sequence number in messages sent from the mobile station. In messages sent from the network, bit 7 is coded with a "0". See GSM 04.07.

#### 10.5 Other information elements

See corresponding subclause in GSM 04.08.

#### 10.5.1 Common information elements.

#### 10.5.1.1 Mobile Identity

The purpose of the *Mobile Identity* information element is to provide either the international mobile subscriber identity, IMSI, or the international mobile equipment identity, IMEI, or the international mobile equipment identity together with the software version number, IMEISV or the CTS Mobile Subscriber Identity CTSMSI (see GSM 03.03).

The *Mobile Identity* information element is coded as shown in figure 10.5/GSM 04.08, table 10.8/GSM 04.08 and table 10.4/GSM 04.56.

Table 10.4/GSM 04.56: Mobile Identity information element

```
Type of identity (octet 3)
Bits
0 0 1
           IMSI
0 1 0
           TMET
            IMEISV
  1 1
           CTSMSI
All other values are defined in GSM 04.08 or reserved.
Identity digits (octet 3 etc. figure 10.5 GSM 04.08) For CTSMSI, this field is coded using hexadecimal coding. The 22 bits of the CTSMSI are padded with 6
leading zeroes for having a 5 hexadecimal digits
identity as follow:
  original CTSMSI:
                                XX XXXX XXXX XXXX XXXX
   padded CTSMSI: 0000 00xx xxxx xxxx xxxx xxxx xxxx
hex coded CTSMSI:
                       H1
                              H2
                                     Н3
The Odd/even indication shall be set to odd for
CTSMSI identity.
```

### 10.5.2 Radio Resource management information elements

#### 10.5.2.1 CTSMSI

The purpose of the CTSMSI information element is to provide the CTS-MS Subscriber Identity for paging purposes.

The CTSMSI information element is coded as shown in figure 10.1/GSM 04.56.

The CTSMSI is a type 3 information element with 3 octets length.

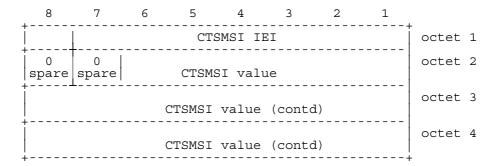


Figure 10.1/GSM 04.56: CTSMS/ information element

Table 10.5/GSM 04.56: CTSMSI information element

CTSMSI value (octet 2, 3 and 4)

Bit 6 of octet 2 is the most significant bit and bit 1 of octet 4 is the least significant bit. The coding of the CTSMSI shall be done according to GSM 03.03. The length is 22 bits.

NOTE: For purposes other than paging the CTSMSI should be provided using the mobile identity information element.

#### 10.5.2.2 TFH General Parameters

The purpose of the *TFH General Parameters* information element is to provide the VA and VV vectors used in the hopping sequence.

+	 	TFH	Genera	al Para	ameter	 s IEI		octet	1
+     v15	v14	v13	v12	v11	v10	v9	v8	octet	2
+	v6	v5	v4	v3	v2	v1	v0	octet	3
+	 6	a15			 6	a14		octet	4
+	 6	a13				a12		octet	5
+	 6	a11			·	a10		octet	6
+	 6	a9			·	a8		octet	7
+	 6	a7			·	a6		octet	8
+	 6	a5			·	a4		octet	9
+	 6	a3			·	a2		octet	10
+	 6	a15				a0		octet	11

Figure 10.2/GSM 04.56: TFH General Parameters information element

#### 10.5.2.3 TFH Current Parameters

The purpose of the *TFH Current Parameters* information element is to provide the CSR value, the TFH Counter 1 value, the TFH Counter 2 values, and the VC vector used in the hopping sequence.

	8	7	6	5	4	3	2	1		
			TFH	Curren	t Par	rameters	IEI		octet	1
Ī	Len	gth of	TFH C	urrent (high	Para part)	meters	conte	nts	octet	2
				CSI (high )					octet	3
+				CSI (low pa					octet	4
				Coun (high )					octet	5
				Coun (low page		-			octet	6
Ī				Coun (high )					octet	7
				Coun		?			octet	8
				V	C				octet	9
•								<del></del> _	  - 	
+				ν(	 C				octet	n

Figure 10.3/GSM 04.56: TFH Current Parameters information element

#### Table 10.6/GSM 04.56: TFH Current Parameters information element

```
CSR (octets 3 and 4)
Current value of the shift register

Counter 1 (octets 5 and 6)
Current value of the counter 1 padded to a 16 bits value

Counter 1 (octets 7 and 8)
Current value of the counter 8 padded to a 16 bits value

VC (octets 9 to n)
Base sequence for the hopping sequence. See GSM 05.02
```

#### 10.5.2.4 CTS Channel Description

The purpose of the CTS Channel Description information element is to provide a description of an allocable channel together with its SACCH.

The *CTS Channel Description* information element is coded as shown in figure 10.19/GSM 04.08, table 10.23/GSM 04.08 and table 10.5x/GSM 04.56.

#### Table 10.7/GSM 04.56: CTS Channel Description information element

Channel Type and TDMA offset (octet 2) shall be set to TCH/F and ACCHs by the CTS-FP. CTS-MSs shall also support all value defined in table 10.23/GSM 04.08.

TSC (octet 3) shall be set to 0 by the CTS-FP and ignored by the CTS-MSs.

HSN (octet 4 bit 6 to 1) shall be set to 0 by the CTS-FP and ignored by the CTS-MS

#### 10.5.2.5 CTS Access Request Reference

The purpose of the CTS Access Request Reference information element is to provide the access request information used in the CTSARCH channel.

The CTS Access Request information elements coded as shown in figure 10.4/GSM 04.56 and table 10.8/GSM 04.56.

The CTS Access Request is a type 3 information element with 5 octets length.

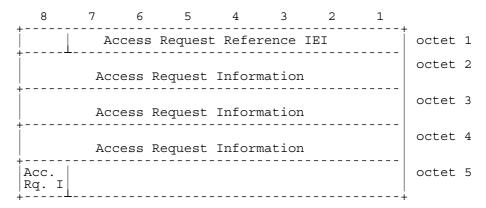


Figure 10.4/GSM 04.56: Access request Reference information element

Table 10.8/GSM 04.08: Access request Reference information element

Access Request Information

This is an unformatted 25 bits field. Typically the contents of this field are coded the same as the CTS ACCESS REQUEST message.

#### 10.5.2.6 CTS L1 information

The purpose of the CTS L1 information information element is to provide the TDMA frame number of the last burst containing the message.

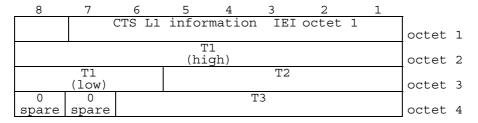


Figure 10.5/GSM 04.56: CTS L1 information information element

#### Table 10.5GSM 04.56: CTS L1 information information element

```
T1 (octet 2 and 3):
It is coded as the binary representation of FN div(26*51). Bit 8 of octet 2 is the most significant bit and bit 7 of octet 3 is the least significant bit.

T2 (octet 3):
It is coded as the binary representation of FN mod 26.

T3 (octet 4):
It is coded as the binary representation of FN mod 51.

The computation of the FN is given in GSM 05.10.
```

#### 10.5.2.7 Information Transfert Capability

The purpose of the *Information Transfert Capability* information element is to convey the information transfert capability. See figure 10.x/GSM 04.56 and table 10.72/GSM 04.08.




Figure 10.6/GSM 04.56: Information Transfert Capability information element

#### 10.5.2.8 BCD Display

The purpose of the BCD Display information element is to convey a BCD coded telephone number.

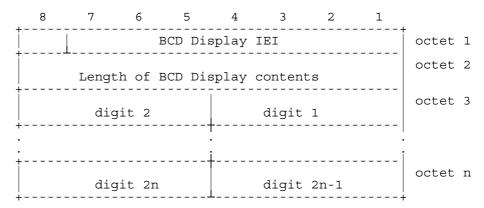


Figure 10.7/GSM 04.56: BCD Display information element

Table 10.9/GSM 04.08: BCD Display information element

```
Digits are encoded as described in table 10.81/GSM 04.08 except for digit 1110:

Bits
4 3 2 1
1 1 1 0 + (plus sign)
```

#### 10.5.2.9 AFA Interference Level

The purpose of the *AFA Interference Level* information element is to provide the results of the interference measurements made by the CTS-MS on the current serving CTS-cell.

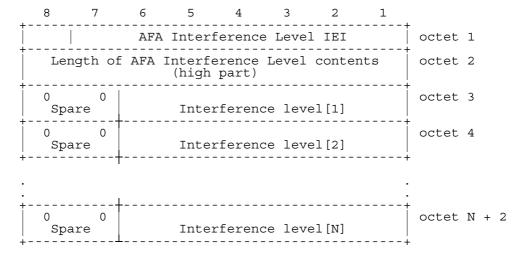


Figure 10.8/GSM 04.56: AFA Interference Level information element

#### Table 10.10/GSM 04.56: AFA Interference Level information element

Interference level[k] (octet k + 2)
Received interference level for the k<sup>th</sup> carrier of the AFA monitoring frequency list (see GSM 05.08).

#### 10.5.2.10 AFA Monitoring Cycles

The purpose of the AFA Monitoring Cycles information element is to specify a number of AFA monitoring cycles.

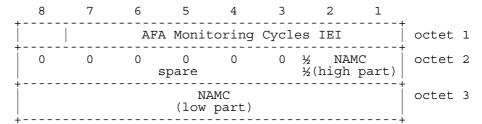


Figure 10.10/GSM 04.56: AFA Monitoring Cycles information element

Table 10.11/GSM 04.56: AFA Monitoring Cycles information element

```
NAMC (octet 2 and 3)
Number of AFA monitoring cycles (see GSM 05.08).
```

#### 10.5.2.11 OFO Measurement Results

The purpose of the *OFO Measurement Results* is to provide the results of the OFO measurements made by the CTS-MS on the current serving CTS-cell. If, due to octet boundaries, some bits are not used at the end of the last octet, these bits must be set to 0.

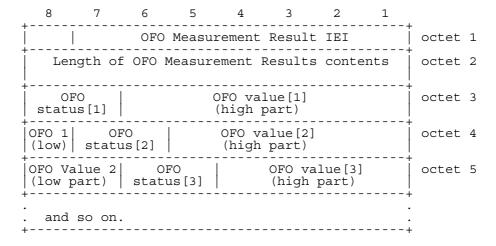


Figure 10.11/GSM 04.56: OFO Measurement Results information element

Table 10.12/GSM 04.56: OFO Measurement Results information element

```
OFO value[k]
OFO measurement value for the k<sup>th</sup> carrier of the OFO measurement BCCH list (see GSM 05.08).

OFO status[k]
OFO measurement status of the k<sup>th</sup> BCCH carrier:
Bits
2 1
0 0 measurement OK
0 1 measurement failed
1 0 measurement not performed
```

#### 10.5.2.12 Paging type

The purpose of the Paging type information element is to provide the CTS-MS Subscriber Identity for paging purposes.

The Paging type information element is coded as shown in figure 10.1/GSM 04.56.

The Paging type is a type 3 information element with 2 octets length.




Figure 10.1/GSM 04.56: Paging type information element

Table 10.5/GSM 04.56: Paging type information element

```
AC field (octet 2, bits 8,7 and 6)
000 Start paging procedure
100 Start Alive Check procedure
other values are reserved for future use

Octet 2, bits 5 to 1 are spare bits.
```

#### 10.5.2.13 CTS selection parameters

The purpose of the CTS selection parameters information element is to provide the value of the parameters needed for the FP selection procedure.

The CTS selection parameters information element is coded as shown in figure 10.22/GSM 04.56 and table 10.22/GSM 04.56.

The CTS selection parameters is a type 3 information element with 3 octets length.




Figure 10.22/GSM 04.56 CTS selection parameters information element

#### Table 10.22GSM 04.56: CTS selection parameters information element

```
CTS MS MAX TXPWR (octet 2):
It is coded as the binary representation of the maximum authorised output power control level a CTS-MS shall use with this CTS-FP.

Range: 0 to 31 (See GSM 05.08)

CTS RXLEV ACCESS MIN (octet 3):
It is coded as the binary representation of the minimum received signal level at the MS for which it is permitted to access the CTS FP.

Range: 0 to 63 (See GSM 05.08)
```

#### 10.5.2.14 CTS RR parameters

The purpose of the CTS RR parameters information element is to provide the value of the parameters needed for the CTS dedicated and idle modes.

The CTS RR parameters information element is coded as shown in figure 10.23/GSM 04.56 and table 10.23/GSM 04.56.

The CTS RR parameters is a type 3 information element with 5 octets length.

8	7	6	5	4	3	2	1				
CTS selection parameters IEI											
0	0		CTS CE	LL RESE	LECT OF	FSET					
spare	spare							octet	2		
0	0	0	0	CTS RADIO LINK TIMEOUT							
spare	spare	spare	spare					octet	3		
0	0	0	0	0	Number	r of p	aging				
spare	spare	spare	spare	spare		groups	5	octet	4		
	•			•							
			CTSPCH	DECOD				octet	5		

Figure 10.23/GSM 04.56: CTS RR parameters information element

#### Table 10.23GSM 04.56: CTS RR parameters information element

```
CTS CELL RESELECT OFFSET (octet 2):
It is coded as the binary representation of the offset in dB to be applied for the C2 CTS criterion.
Range: 0 to 63 (See GSM 05.08)
CTS RADIO LINK TIMEOUT (octet 3):
It is coded as the binary representation of the maximum value of
the radio link counter.
Range: 0(4 SACCH blocks) to 15(64 SACCH blocks) (See GSM 05.08)
Number of paging groups (octet 4):
It is coded as the representation of the number of
multiframes period for transmission of CTS PAGING REQUEST to the
same paging subgroup (see GSM 05.02)
Range: 0 to 7 with 0 means 2 multiframes period and 2 means 9 multiframes period (refer to GSM 04.08 table 10.29)
CTSPCH DECOD (octet 5)
It is coded as the binary representation of the number of
non-decoded paging messages before declaring a downlink paging
failure (see GSM 05.08).
Range: 1 to 255; 0 is a reserved value and shall not be sent by
the CTS-FP
```

#### 10.5.2.15 Timeslot shifting parameters

The purpose of the Timeslot shifting parameters information element is to provide the value of the parameters

The Timeslot shifting parameters information element is coded as shown in figure 10.24/GSM 04.56 and table 10.24/GSM 04.56.

The Timeslot shifting parameters is a type 3 information element with 5 octets length.

8	7	6	5	4	3	2	1	_
	Times	lot	shift:	ing para	ameter	s IEI		octet 1
TNSCO	0	0	0	0	0	0	0	7
				spare	9			octet 2
0		x0		0		x1		7
spare				spare				octet 3
0		x2		0		x3		1
spare				spare				octet 4

Figure 10.24/GSM 04.56: Timeslot shifting parameters information element

Table 10.24GSM 04.56: Timeslot shifting parameters information element

```
TNSCO, TNS Couple Order (octet 2):
Bit
8
0
       see GSM 05.03
1
       see GSM 05.03
x0 (octet 3):
It is coded as the binary value of the parameter x0 needed to form
the timeslot shifting sequence Range: 0 to 7 (see GSM 05.02)
x1 (octet 3):
It is coded as the binary value of the parameter x1 needed to form the timeslot shifting sequenceRange: 0 to 7 Range: 0 to 7 (see GSM 05.02)
x2 (octet 4):
It is coded as the binary value of the parameter x2 needed to form the timeslot shifting sequence Range: 0 to 7 (see GSM 05.02)
x3 (octet 4):
It is coded as the binary value of the parameter x3 needed to form the timeslot shifting sequence Range: 0 to 7 (see GSM 05.02)
```

## 10.5.3 Mobility management information elements

#### 10.5.3.1 Authentication parameter RIMS

The purpose of the *Authentication Parameter RIMS* information element is to provide the mobile station with a non-predictable number to be used to calculate the mutual initial key Kinit.

The Authentication Parameter RIMS information element is coded as shown in figure 10.12/GSM 04.56 and table 10.13/GSM 04.56.

The Authentication Parameter RIMS is a type 3 information element with 9 octets length.

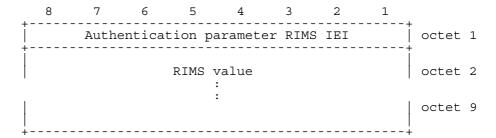


Figure 10.12/GSM 04.56: Authentication Parameter RIMS information element

#### Table 10.13/GSM 04.56: Authentication Parameter RIMS information element

```
RIMS value (octet 2, 3,... and 9)
The RIMS value consists of 64 bits. Bit 8 of octet
2 is the most significant bit while bit 1 of octet
9 is the least significant bit.
```

#### 10.5.3.2 Authentication parameter RIFP

The purpose of the *Authentication Parameter RIFP* information element is to provide the fixed part with a non-predictable number to be used to calculate the mutual initial key Kinit.

The Authentication Parameter RIFP information element is coded as shown in figure 10.13/GSM 04.56 and table 10.14/GSM 04.56.

The Authentication Parameter RIFP is a type 3 information element with 9 octets length.

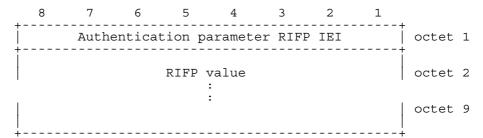


Figure 10.13/GSM 04.56: Authentication Parameter RIFP information element

#### Table 10.14/GSM 04.56: Authentication Parameter RIFP information element

```
RIFP value (octet 2, 3,... and 9)
The RIFP value consists of 64 bits. Bit 8 of octet
2 is the most significant bit while bit 1 of octet
9 is the least significant bit.
```

#### 10.5.3.3 Authentication parameter CH

The purpose of the *Authentication Parameter CH* information element is to provide the mobile station or the fixed part with a non-predictable number to be used to calculate the authentication response signature XRES and the ciphering key Kc.

The Authentication Parameter CH information element is coded as shown in figure 10.14/GSM 04.56 and table 10.15/GSM 04.56.

The Authentication Parameter CH is a type 3 information element with 17 octets length.

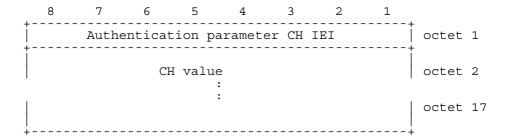


Figure 10.14/GSM 04.56: Authentication Parameter CH information element

#### Table 10.15/GSM 04.56: Authentication Parameter CH information element

```
CH value (octet 2, 3,... and 17)
The CH value consists of 128 bits. Bit 8 of octet
2 is the most significant bit while bit 1 of octet
17 is the least significant bit.
```

#### 10.5.3.4 Authentication parameter XRES

The purpose of the *authentication parameter XRES* information element is to provide the fixed part or the mobile station with the authentication response signature calculated in the mobile station or in the fixed part.

The Authentication Parameter XSRES information element is coded as shown in figure 10.15/GSM 04.56 and table 10.16/GSM 04.56.

The Authentication Parameter XRES is a type 3 information element with 17 octets length.

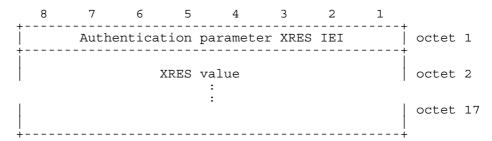


Figure 10.15/GSM 04.56: Authentication Parameter XRES information element

Table 10.16/GSM 04.56: Authentication Parameter XRES information element

```
XRES value (octet 2, 3,... and 17)
The XRES value consists of 128 bits. Bit 8 of octet
2 is the most significant bit while bit 1 of octet
17 is the least significant bit.
```

#### 10.5.3.5 Authentication parameter Kax

The purpose of the *Authentication Parameter Kax* information element is to provide the mobile station with the authentication key.

The Authentication Parameter Kax information element is coded as shown in figure 10.16/GSM 04.56 and table 10.17/GSM 04.56.

The Authentication Parameter Kax is a type 3 information element with 17 octets length.

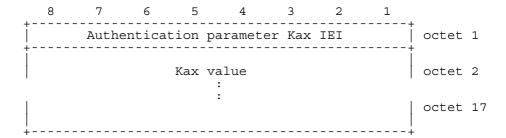


Figure 10.16/GSM 04.56: Authentication Parameter Kax information element

#### Table 10.17/GSM 04.56: Authentication Parameter Kax information element

```
Kax value (octet 2, 3,... and 17)
The Kax value consists of 128 bits. Bit 8 of octet
2 is the most significant bit while bit 1 of octet
17 is the least significant bit.
```

#### 10.5.3.6 Fixed part Identity

The purpose of the *Fixed part Identity* information element is to provide either the international fixed part subscriber identity, IFPSI or the international fixed part equipment identity, IFPEI.

The IFPSI shall not exceed 15 digits, the IFPEI is composed of 16 digits (see GSM 03.03).

The Fixed part Identity information element is coded as shown in figure 10.17/GSM 04.56 and table 10.18/GSM 04.56.

The Fixed part Identity is a type 4 information element with a minimum length of 3 octets and 11 octets length maximal.

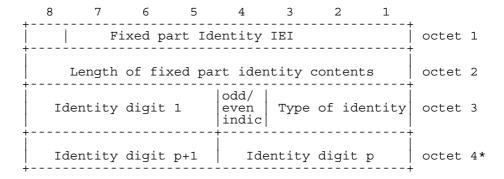


Figure 10.17/GSM 04.56: Fixed part Identity information element

#### Table 10.18/GSM 04.56: Fixed part Identity information element

```
Type of identity (octet 3)
Bits
3 2 1
0 0 1
         IFPSI
0 1 0
         IFPEI
All other values are reserved.
Odd/even indication (octet 3)
Bit
4
         even number of identity digits and also when
0
1
         odd number of identity digits
Identity digits (octet 3 etc)
For the IFPSI, IFPEI this field is coded using BCD
coding. If the number of identity digits is even then
      5 to 8 of the last octet shall be filled with
an end mark coded as "1111".
```

#### 10.5.3.7 CTS mobile group list

The purpose of the CTS mobile group list information element is to provide a list containing up to 8 CTSMSI.The CTS mobile group list information element is coded as shown in figure 10.18/GSM 04.56 and table 10.19/GSM 04.56.

The CTS mobile group list is a type 4 information element with a minimum length of 5 octets and 26 octets length maximal.

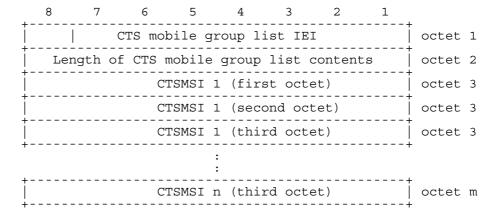


Figure 10.18/GSM 04.56: CTS mobile group list information element

Table 10.19/GSM 04.56: CTS mobile group list information element

```
CTSMSI (octets 2, 3, and n)
Each CTSMSI consists of 3 octets. They are defined in subclause 10.5.2.1.
The first one corresponds to octet 2 in 10.5.2.1, the second one to octet 3 and the third one to octet 4.
```

#### 10.5.3.8 Following attach request

The purpose of the *Following attach request* information element is to indicate that an attach request may be done on an existing RR connection.

The Following attach request information element is coded as shown in figure 10.19/GSM 04.56.

The *Following attach request* is a type 2 information element.




Figure 10.19/GSM 04.56: Following attach request information element

#### 10.5.3.9 Access right identity

The purpose of the *Access right identity* information element is to provide the FPBI and the length of its significant part for access to this fixed part.

The Access right identity information element is coded as shown in figure 10.20/GSM 04.56 and table 10.20/GSM 04.56.

The Access right identity is a type 3 information element with 4 octets length.

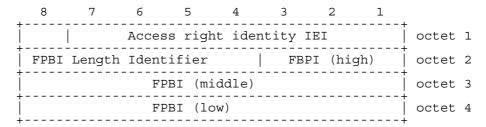


Figure 10.20/GSM 04.56: Access right identity information element

#### Table 10.20/GSM 04.56: Access right identity information element

```
FBPI Length Indicator (octet 2 bit 8 to 4)
The FLI is the length in bits of the FPBI significant part.
FBPI (octet 2 bit 3 to 1 and octets 3 and 4)
The FPBI value consists of 19 bits. Bit 3 of octet 2 is the most significant bit while bit 1 of octet 4 is the least significant bit.
```

#### 10.5.3.10 TC3252

The purpose of the *TC3252* information element is to provide the value of the timer TC3252.

The TC3252 information element is coded as shown in figure 10.21/GSM 04.5656 and table 10.21/GSM 04.56.

The TC3252 is a type 3 information element with 2 octets length.




Figure 10.21/GSM 04.56: TC3252 information element

Table 10.21GSM 04.56: TC3252 information element

```
TC3252 value
It is the value in deciminutes (6 seconds) of the timer TC3252.
```

#### 10.5.3.11 Attach type

The purpose of the Attach type information element is to indicate whether a normal attach or a reattach is wanted. It may also indicate that a follow-on request has been received from the mobile station CM layer.

The Attach type information element is coded as shown in figure 10.22/GSM 04.56 and table 10.22/GSM 04.56.

The Attach type is a type 1 information element.




Figure 10.22/GSM 04.56: Attach type information element

#### Table 10.22/GSM 04.56: Attach type information element

```
FOR
    (octet 1):
Bit 4
       No Follow On Request pending
0
       Follow On Request pending
1
Attach type (octet 2)
2
0
  0
       Normal attach procedure
0
  1
       Re-attach procedure
1
  0
       Reserved
       Reserved
```

#### 10.5.4 Call control information elements

Call Control Information Elements are defined in GSM 04.08. The few exceptions for CTS specific procedures are defined in the following subclauses.

#### 10.5.4.1 Called party BCD number

The called party BCD number information element is modified in order to support the CTS internal call procedure. See table 10.22/GSM 04.56.

Table 10.22/GSM 04.56: Called party BCD number

```
Numbering plan identification (octet 3)
Number plan (applies for type of number = 000, 001, 010 and 100)
Bits
  3 2
          see GSM 04.08
  0 0 1
          see GSM 04.08
  0
          see GSM 04.08
    1
      1
  1
    0
      0
          see GSM 04.08
  0
    0
      0
          see
              GSM 04.08
  0 0 1
              GSM 04.08
          see
  0
    1
      1
          CTS
              internal numbering plan
  1 1 1
          see GSM 04.08
All other values are reserved.
```

#### 10.5.4.2 Calling party BCD number

The calling party BCD number information element is modified in order to support the CTS internal call procedure. See table 10.23/GSM 04.56.

#### Table 10.23/GSM 04.56: Calling party BCD number

```
Numbering plan identification (octet 3)

Number plan (applies for type of number = 000, 001, 010 and 100)

Bits
4 3 2 1
0 0 0 0 see GSM 04.08
0 0 0 1 see GSM 04.08
0 1 0 0 see GSM 04.08
0 1 0 0 see GSM 04.08
1 0 0 0 see GSM 04.08
1 0 1 1 cTs internal numbering plan
1 1 1 1 see GSM 04.08

All other values are reserved.
```

#### 10.5.4.3 Keypad facility

The purpose of the keypad facility information element is to convey IA5 characters, e.g. entered by means of a terminal keypad. A specific character is defined for CTS to transmit the hook flash request. This character is not used in the standard IA5 sense.

The keypad facility information element is coded as shown in figure 10.22/GSM 04.56 and table 10.24/GSM 04.56.

The keypad facility is a type 3 information element with 2 octets length.




Figure 10.22/GSM 04.56: Keypad facility information element

NOTE: In CTS this information element is only used to transfer one DTMF digit (0, 1, ..., 9, A, B, C, D, \*, #) or a hook flash request as one IA5 character.

Table 10.24/GSM 04.56: Keypad information

```
Keypad information is encoded as described in ITU-T T.50/ISO 646 except for the following value:
Bits
7 6 5 4 3 2 1
0 0 1 0 1 0 1 hook flash (registry call)
```

## 11 List of system parameters

The description of timers in the following table should be considered a brief summary. The precise details are found in clauses 3 to 6, which should be considered the definitive descriptions.

## 11.1 Timers and counters for radio resource management

#### 11.1.1 Timers on the MS side

TC3150 This timer is started after sending the maximum allowed CTS ACCESS REQUEST message during an immediate assignment procedure. Its value is 5 s.

TC3151 This timer is used to delay the channel deactivation (see GSM 04.08 11.1.1 T3110).

#### 11.1.2 Timers on the CTS-FP side

TC3101	This timer is started when the CTS-FP send a CTS PAGING REQUEST(CTSMSI, AliveCheck flag) for an Alive check procedure, and stopped when receiving a valid CTS ACCESS REQUEST. Its value is manufacturer dependent.
TC3102	Hunting maximal duration timer. Its value is manufacturer dependent, but should be less than $120\ \mathrm{s}.$
TC3103	This timer is started when a channel is allocated with a CTS IMMEDIATE ASSIGN message. It is stopped when the CTS-MS has correctly seized the channels. Its value is manufacturer dependent, but should be greater than 1 s.

TC3104 This timer is started when the CTS-FP has sent a CTS PAGING REQUEST message and is stopped when the CTS-FP has received the CTS PAGING RESPONSE. Its value is manufacturer dependent.

TC3105 This timer is started when the CTS-FP has sent a CTS INTRACELL HANDOVER COMMAND message and is stopped when the CTS-MS has correctly seized the new channel. Its value is manufacturer dependent.

TC3106 See GSM 04.08 11.1.2 T3109 TC3107 See GSM 04.08 11.1.2 T3111

#### 11.1.3 Other parameters

MCTS The maximum number of retransmission for the CTS ACCESS REQUEST message. Its value is 7.

## 11.2 Timers of mobility management

#### 11.2.1 Timers on the MS side

TC3250	This timer is started when the mobile station has sent a CTS ATTACH REQUEST message and it
	is normally stopped when the mobile station receives a CTS ATTACH COMPLETE message or a
	CTS ATTACH REJECT message. At its expiry, the mobile station shall start TC3251.
	Its value is 20 s.

- TC3251 This timer is started when the timer TC3250 expires. Its value is 5 minutes.
- TC3252 This timer is started when the mobile station enters the CTS MM IDLE state and it is normally stopped when the mobile station leaves this state. At its expiry, the mobile station shall start the CTS re-attach procedure.

Its value is provided by the fixed part during the CTS attach procedure and is greater than TC3201 + NC300 \* TC3101 and should be less than TC3201 + 2\* NC300 \* TC3101.

- TC3253 This timer is started when the mobile station has sent a CTS DETACH INDICATION message and it is normally stopped when the RR connection is released.

  Its value is 5 s.
- TC3254 This timer is started when the mobile station has sent a CTS ENROLMENT REQUEST message and it is normally stopped when a CTS ENROLMENT ACCEPT message is received. Its value is 45 s.
- TC3255 This timer is started when the mobile station has sent a CTS RE-ATTACH REQUEST message and it is normally stopped when a CTS RE-ATTACH RESPONSE message is received. Its value is 5 s.

TC3256 This timer is started when the mobile station has received a CTS ATTACH REJECT with a fixed part identity. At its expiry, the mobile station may re-attempt an attachment on a fixed part having the same FPBI.

Its value is 10 minutes.

TC3257 This timer is started when the mobile station has received a CTS ATTACH REJECT from the

expected fixed part with a cause different of NOT ENROLLED. At its expiry, the mobile station

may re-attempt an attachment on that fixed part.

Its value is 5 minutes.

TC3260 This timer is started when the mobile station has sent a CTS MS AUTHENTICATION

RESPONSE message and it is normally stopped when a CTS FP AUTHENTICATION

RESPONSE message is received.

Its value is 5 s.

#### 11.2.2 Timers on the CTS-FP side

TC3201 This timer is started when the fixed part enters the MM IDLE state and it is normally stopped

when the fixed part leaves the MM IDLE state. At its expiry, the MM sublayer shall trigger the

alive check procedure.

Its value is manufacturer dependent, but greater than 15 s.

TC3202 This timer is started when the fixed part has sent a CTSMSI UPDATE COMMAND message and

it is normally stopped when a CTSMSI UDPATE COMPLETE message is received.

Its value is 5 s.

TC3211 This timer is started when the fixed part has sent a CTS MS AUTHENTICATION REQUEST

message and it is normally stopped when a CTS MS AUTHENTICATION RESPONSE message

is received.

Its value is 5 s.

#### 11.2.3 Other parameters

NC320 The maximum number of alive check procedures allowed before changing the CTSMSI. Its value

is manufacturer dependent.

#### 11.3 Timers of circuit-switched call control

See GSM 04.08, subclause 11.3

## Annex A (informative): Default Codings of Information Elements

The information in this annex does NOT define the value of any IEI for any particular message. This annex exists to aid the design of new messages.

## A.1 Common information elements

For the common information elements types listed below, the default coding of information element identifier bits is summarised in table A.1/GSM 04.56.

Table A.1/GSM 04.56: Default information element identifier coding for common information elements

									Reference subclause
8	7	6	5	4	3	2	1		
1	:	:	:	-	_	-	-	Type 1 info elements	
	1	1	1	-	-	-	-	Reserved	
0	:	:	:	:	:	:	:	Type 3 & 4 info elements	
	0	0	1	0	1	1	1	Mobile Identity	10.5.1.1
	0	1	0	0	0	0	0	Mobile Station classmark 3	GSM 04.08 10.5.1.3
	Δ.	11	O.t	-ha	۵r	772	2 ] 11	es are reserved	

## A.2 Radio Resource management information elements

For the Radio Resource management information elements listed below, the default coding of the information element identifier bits is summarised in table A.2/GSM 04.56.

Table A.2/GSM 04.56: Default information element identifier coding for Radio Resource management information elements

									Reference subclause
8	7	6	5	4	3	2	1		
1								Type 1 info elements	
	0	0	1	-	-	-	-	Cipher Mode Setting	
	0	1	0	-	-	-	-	Cipher Response	
	0	1	1	-	-	-	-	Note	
	1	0	1	-	-	-	-	Synchronisation Indication	
	1	1	0	-	-	-	-	Channel Needed	
0								Type 3 & 4 info elements	
	0	0	0	0	0	1	0	Frequency Short List	
	0	0	0	0	1	0	1	Frequency List	
	1	1	0	0	0	0	1	Note	
	1	1	0	0	0	1	0	Cell Channel Description	
	1	1	0	0	0	1	1	Channel Mode	
	1	1	0	0	1	0	0	Channel Description	
	1	1	0	0	1	1	0	Channel Mode 2	
	1	1	0	1	0	0	0	Note	
	1	1	0	1	0	0	1	Frequency Channel Sequence	
	1	1	0	1	0	1	0	Note	
	1	1	0	1	0	1	1	Note	
	1	1	1	0	0	0	1	Note	
	1	1	1	0	0	1	0	Mobile Allocation	
	1	1	1	0	0	1	1	BA range	
	1	1	1	0	1	0	0	CTS selection parameters	
	1	1	1	0	1	0	1	CTS RR parameters	
	1	1	1	0	1	1	0	Timeslot shifting parameters	

## A.3 Mobility management information elements

For the mobility management information elements listed below, the default coding of the information element identifier bits is summarised in table A.3/GSM 04.56.

Table A.3/GSM 04.56: Default information element identifier coding for mobility management information elements

									Reference subclause
8	7	6	5	4	3	2	1		
1	:	:	:	-	-	-	-	Type 1 info elements	
	0	0	1	-	-	-	-		
	0	1	0	-	-	-	-		
	0	1	1	-	-	-	-		
	1	0	1	-	-	-	-		
	1	1	0	-	-	-	-		
1	0	1	0	-	-	-	-	Type 2 info elements	
				0	0	0	1	Follow-on proceed	GSM 04.08 10.5.3.7
				0	0	1	0	Following attach request	10.5.3.8
0	:	:	:	:	:	:	:	Type 3 & 4 info elements	
	0	0	0	0	0	0	1	CTS mobile group list	
	0	0	0	0	0	1	0	Access right identity	10.5.3.7
	0	0	0	0	0	1	1	Authentication parameter RIMS	10.5.3.9
	0	0	0	0	1	0	0	Authentication parameter RIFP	10.5.3.1
									10.5.3.2

## A.4 Call control information elements

For the call control information elements listed below, the default coding of the information element identifiers is defined in table  $A.4/GSM\ 04.\ 08.$ 

# Annex B (informative): Change history

CN#	SPEC	CR	PHASE	VERS	NEW_VERS	SUBJECT
S31				7.1.0	8.0.0	Specification release upgrade for R1999/ V8.0.0
				8.0.0	8.0.1	Version update to 8.0.1 for Publication
CN#11	44.056		Rel-4	8.0.1	4.0.0	Release 4 after CN#11
NP-16	44.056		Rel-5	4.0.0	5.0.0	Plenary decision to make this TS also for Rel-5. ETSI/MCC additionally made editorial cleanup.
NP-26	44.056		Rel-6	5.0.0	6.0.0	Plenary decision to make this TS also for Rel-6.
				6.0.0	7.0.0	Plenary decision to make this TS also for Rel-7.

## History

	Document history								
V8.0.0	January 2009	Publication							