


Table 1-Record your findings here

Issue	How you fixed it
Servo Motor's Negative line is wrong	Now, Negative line is connected correctly on the breadboard's (-).
Servo Motor's Positive line is wrong	Now, Positive line is connected correctly on the breadboard's (+).
Servo Motor's Signal line is wrong	Now, Signal line is connected correctly on the breadboard's Arduino's Digital PWN pin-5.
Slide switch not connected with signal and power lines	Move the slide switch to other side for make the proper connection with board.
In the code's Void Setup: pinMode(POT_PIN, OUTPUT) is wrong.	Because,potentiometer should be connected to the A0 so we need to use INPUT.
In the code's Void Setup: pinMode(SWITCH_PIN, OUTPUT) is wrong.	Because, 10K ohm resister used in here, so I have changed INPUT_PULLUP.
Potentiometer Signal Line connected wrongly	Now, signal line connected to A0 pin that according to the given code

In the code: This line is wrong. <code>int switchRead = digitalWrite(8);</code>	Because, digitalWrite is not suitable, write means output so I have changed like this, <code>int switchRead = digitalRead(8);</code>
---	---

(Feel free to add more rows if you need to)

TinkerCAD DESIGN

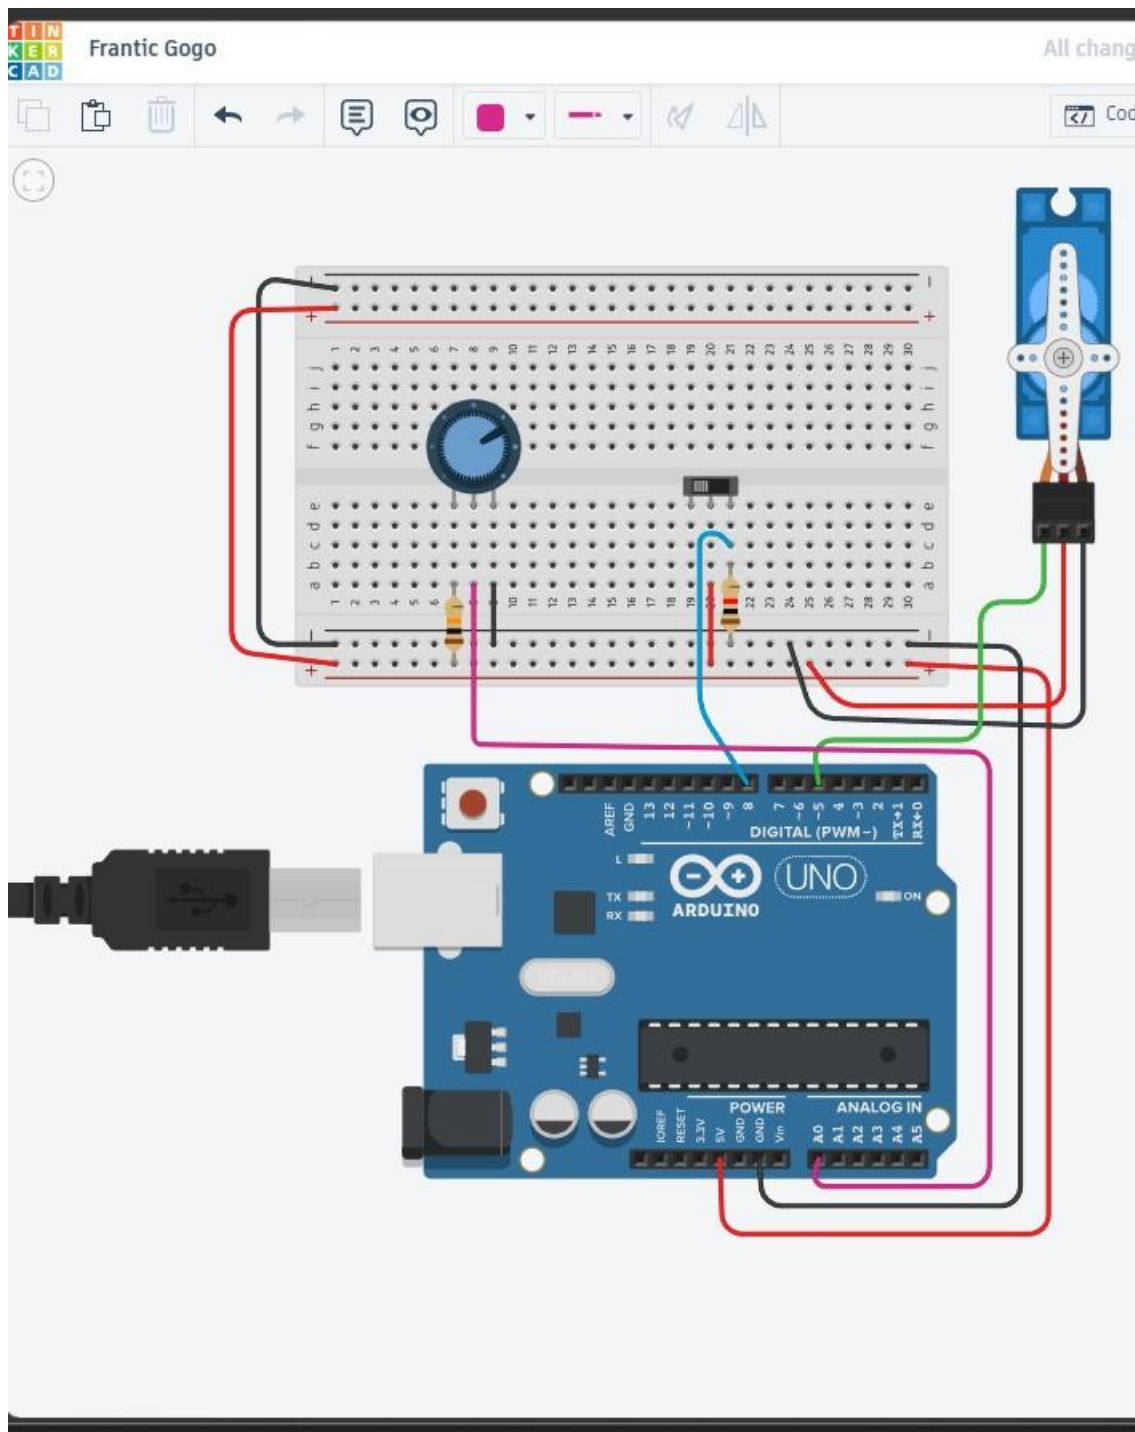

My TinkerCAD Link:

<https://www.tinkercad.com/things/kSQmygaxVw1/editel?returnTo=%2Fdashboard&sharecode=RMY1poKBKttkpvpPFcsCH43tbecrdaAh7XqKkIkoTTDA>

Corrected TINKERCAD CODE with Serial Monitor:



The screenshot displays the Tinkercad IDE interface. At the top, a status bar indicates "All changes saved". Below it, the "Simulator time: 00:04:30" is shown. The main code editor contains the following C++ code:

```
1 // C++ code
2 //
3
4 #include <Servo.h>
5 Servo servo;
6
7 const int SERVO_PIN = 5;
8 const int POT_PIN = A0;
9 const int SWITCH_PIN = 8;
10
11
12 void setup()
13 {
14   pinMode(POT_PIN, INPUT);
15   pinMode(8, INPUT_PULLUP);
16   servo.attach(SERVO_PIN);
17   Serial.begin(9600);
18 }
19
20 void loop()
21 {
22   int switchRead = digitalRead(8);
23   int potRead = analogRead(POT_PIN);
24   int angle;
25
26   if(switchRead == 1)
27   {
28     angle = map(potRead, 600, 1200, 60, 120);
29   }
30   servo.write(angle);
31
32   Serial.print("Switch State " + String(switchRead));
33   Serial.println(" Servo Angle : " + String(angle));
34   delay(300);
35 }
36
```

Below the code editor, the "Serial Monitor" window is open, showing the output of the program:

```
Switch State 0 Servo Angle : 28
Switch State 0 Servo Angle : 28
Switch State 0 Servo Angle : 28
Switch State 0 Servo Angle : 28
Switch State 0 Servo Angle : 28
Switch State 0 Servo Angle : 28
Switch State 0 Servo Angle : 28
```

At the bottom right of the Serial Monitor, there are buttons for "Send", "Clear", and a waveform icon.