5G V2V Collision Warning - CHN

Instrument Cluster Interface Specification (Based on CDC)

FNV

Approved by (dept, name, phone)	Issued by (dept, name, phone)
China DI/Cluster	ADAS/DAT, Dandan Chen(dchen97)

1.0 5G V2V Collision Warning - CHN Cluster/CDC

1.1 Functional Description

This STSS handles the functions associated with the 5G V2V Collision Warning - CHN feature, hereafter called V2V feature or V2V.

V2V feature is intended to assist the driver in driving situations that provides an imminent risk for collision. If V2V feature is enabled to display warnings, when there is some risk for collision, there is a collision warning message popup on cluster and chime to inform driver.

Note: The V2V system shall have the same priority level as the FCW system, which is the highest HMI priority of all systems in the vehicle. FCW shall occupy V2V if both activate at the same time or V2V activates earlier.

1.2 Interfaces

1.2.1 Interface Context Diagram (I/O Block Diagram)

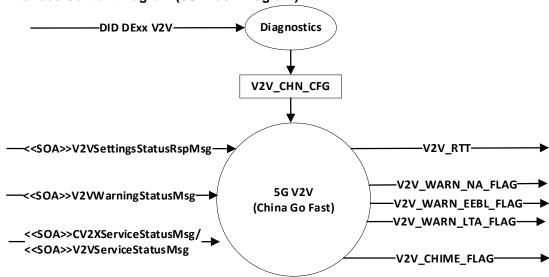


Figure 2.1 V2V Context Diagram

Note: Only one of <<SOA>>CV2XServiceStatusMsg and <<SOA>>V2VServiceStatusMsg exists.

1.2.2 Inputs

SOA messages inputs are from V2V application SW on TCU, details could be found in SPSS.

1.2.2.1 CV2XServiceStatusMsg

This is provided by TCU C-V2X Service Server, it is used to provide the CV2X TCU module status to subscribers. The CV2X System Server publishes this data On Change with the following data structure.

	Method Type	On Change								
	QoS Level	Default								
	Retained	Yes								
R/O	Name		Type	Literals	Value	Description				
Request (_Rq)										
-	-		-	-	-	N/A				
Respo	nse (_Rsp)									
R	msgID		uint8		0-255					
R	status				0 - 4	0=n/a				
						1=normal				
			uint8			2=Standby				
			uiiito			3=Failure-temp				
						4=Failure-				
						permanent				

1.2.2.2 V2VSettingsStatusRspMsg

The full message is defined in the table below. The minimum set of data that will always be included is:

- Current Saved V2V Feature/Warning on/off Setting Status
- Current Saved V2V Sensitivity high/normal/low Setting Status

	Method Type	On change								
	QoS Level	Default								
	Retained	Yes								
R/O	Name		Type	Literals	Value	Description				
Reque	Request (_St)									
R	system_time		uint64	-	-	Vehicle system time in				
						milliseconds				
R	v2v_warn_on_off	_setting	uint32	-	_	0 - inactive; $1 - on$; $2 - off$				
R	v2v_warn_sensiti	vity_setting	unit32	-	-	0 - inactive; $1 - low$; $2 - normal$;				
						3 - high				
R	v2v_bsm_tx_on_e	off_setting	uint32	-	-	0 - inactive; $1 - on$; $2 - off$				
	(reserved)									
R	v2v_sub_features	_on_off_setti	uint32	-	-	Bit 0: reserved				
	ng					Bit 1: EEBL				
	(reserved)					Bit 2: LTA				
						Bit 3: IMA				
						Bit 4 – Bit 31: reserved				
						0x0: off				
						0x1: on				
R	v2v_reserved_set	ting	uint32	-	-	reserved				
	(reserved)									

1.2.2.3 V2VWarningStatusMsg

The full message is defined in the table below. The minimum set of data that will always be included is:

- V2V Warning Type

	Method Type	Event Periodic				
	QoS Level	Default				
	Retained	No				
R/O	Name	Type	Literals	Value	Description	
Reque	est (_St)					
R	system_time	uint64	-		Vehicle system time in	
					milliseconds	
О	protocol_version	uint32	-	-	0 – initial version	
R	v2v_warn_type	uint32	-	-	0 – No warning; 1- EEBL; 2 –	
					LTA; 3 – IMA L (reserved); 4 –	
					IMA R (reserved)	

1.2.2.4 V2VServiceStatusMsg

The full message is defined in the table below. The minimum set of data that will always be included is:

- Status

	Method Type	OnChange				
	QoS Level	Default				
	Retained	Yes				
R/O	Name		Type	Literals	Value	Description
Reques	st (_Rq)					
-	-		-	-	-	N/A
Respon	ise (_Rsp)					
R	system_time		uint64	-	-	Vehicle system time
						in milliseconds
R	status			-	-	0=n/a
						1=normal
			uint8			2=Standby
			unito			3=Failure-temp
						4=Failure-
						permanent

1.2.3 Outputs

Table 2.1 State Chart for V2V RTT, Warning Display and Chime

]	Inputs			Output	ts																							
Operational-Mode	V2V_CHN_CFG	< <soa>>V2VSettingsStatusRspMsg with data v2v_warn_on_off_setting</soa>	< <soa>>CV2XServiceStatusMsg/ V2VServiceStatusMsg with data status</soa>	< <soa>>V2VWarningStatusMsg with data v2v_warn_type</soa>	V2V_RTT	V2V_WARN_NA_FLAG	V2V_WARN_EEBL_FLAG	V2V_WARN_LTA_FLAG	V2V_CHIME_FLAG																					
		d 1=on _	4=failure- permanent	X	ON - RED(0x3)	ACT	Ina	Ina	Ina																					
Jk.			1=on	1=on _	1=on	1=on	1=on	1=on	1=on	1=on	1=on	1=on	NOT 1 or 4	X	ON-AMBER(0x2)	Ina	Ina	Ina	Ina											
	F 11 1												1=on	1=on	1=on	1=on	1=on	1=on	1=on	1=on	1=on	1=on	1=on	1=on	1=normal	NOT 0, 1 or 2	ON-AMBER(0x2)	Ina	Ina	Ina
 al/(Enabled											1=normal	1=EEBL	ON-GREEN(0x1)	Ina	ACT	Ina	ACT												
Normal/Crank	(0x1)		1=normal	2=LTA	ON-GREEN(0x1)	Ina	Ina	ACT	ACT																					
Ĭ			1=normal	0=No warning	ON-GREEN(0x1)	Ina	Ina	Ina	Ina																					
		Not 1 or 2	X	X	ON-AMBER(0x2)	Ina	Ina	Ina	Ina																					
		All C	Other Cases	·	OFF(0x0)	Ina	Ina	Ina	Ina																					

X = Don't Care Ina = INACTIVE (0x0) ACT = ACTIVE (0x1)

Note: Only one of <<SOA>>CV2XServiceStatusMsg and <<SOA>>V2VServiceStatusMsg exists.

Table 2.2 Parameters of V2V Warning

Parameter Name	MC WARNING MESSAGE ID	Text	Default Value
V2V_WARN_EEBL_FLAG	W992493V2VCHN	"Attention! Front Emergency Braking. " "注意! 前车急刹"	Ina
V2V_WARN_LTA_FLAG	W992492V2VCHN	"Attention! Vehicle oncoming. " "注意! 前方来车"	Ina
V2V_WARN_NA_FLAG	W999999V2VCHN	"V2X not available, please go to the dealer for maintenance." "车车协同故障,请联系经销商维修。"	Ina

1.3 Function/Performance

1.3.1 Operational Modes

Table 3.1 Operational Modes

	Tubic of Coperational incurs
Mode	Differentiating Vehicle Conditions
Sleep Mode	5G V2V Cluster Information Disabled
Limited Mode	5G V2V Cluster Information Disabled
Normal Mode	5G V2V Cluster Information – ability to change the
	settings and display warnings, RTTs & Chime Enabled /
	Disabled
Crank Mode	5G V2V Cluster Information – ability to change the
	settings and display warnings, RTTs & Chime Enabled /
	Disabled

1.3.2 Voltage Levels

None

1.3.3 Human-Machine Interface

1.3.3.1 Visual

1.3.3.1.1 Indicator Graphics / Display Format

RTTs (examples, for reference only, final HMI to be provided by HMI UX/UI team):







Warnings displays (examples, for reference only, final HMI to be provided by HMI UX/UI team):



Table 3.2 Alerts definition

ID	Seq.	System Name	Warn Type	Time Out	LM	Icon	Message Color	Chime Type: (Reference Only) (Yes/No)
W992493V2VCHN (EEBL)	21	V2V Collision V2V_WARN_EEBL	RGA	n/a	No	TBD	Red	Yes
W992492V2VCHN (LTA)	21	V2V Collision V2V_WARN_LTA	RGA	n/a	No	TBD	Red	Yes

Note: W992493V2VCHN(EEBL) and W992492V2VCHN(LTA) should have the priority just after W3296 FCW_WARN. If global alerts list uses the same sequence number as W992493V2VCHN(EEBL) and W992492V2VCHN(LTA) someday, then the sequence number of W992493V2VCHN and W992492V2VCHN should be updated according to the new alerts.

Table 3.3 Warnings definition

ID	Seq. #	System Name	Warn Type	Time Out		Icon	Message Color	Chime Type: (Reference Only) (Yes/No)
W999999V2VCHN (NA)	3299	V2V Collision V2V_WARN_NA	SC*	n/a	No	TBD	Amber	No

Note: If global warning list used the same sequence number as W999999V2VCHN someday, then the sequence number of W999999V2VCHN should be updated accordingly to the new warnings.

1.3.3.1.2 Indicator Color Coordinates

None.

1.3.3.2 Audio

Arbitration Sequence	Warning	Chime status flag	Brand_Cfg	Last Chime Sounded	Priority	Concurrency	InfoCAN Signal: Chime_Directionality	InfoCAN Signal: Chime_Time_Criticality	InfoCAN Signal: Chime_ Vol_Level	InfoCAN Signal: IPC_Attn_Info_Audio	InfoCAN Signal: Off_Time_Btwn_Chime	InfoCAN Signal: Chime_Occurence	InfoCAN Signal: Chime	InfoCAN Signal: AdjustableChimeVol_Rq	InfoCAN Signal: ChimeId_No_Rq
589	V2V Collision Avoidance	V2V_Chime _Status_Flag	X	22	0x6	0x0	0x2	0x1	0x0	0x6	0x1	0x1	0x 17	0x0	OxFE

Note: EEBL and LTA share the same chime as FCW. The IPC shall arbitrate and generate sound warning to alert the driver and send the chime request to the audio system. The audio shall be used to alert the driver of an impending collision, at the same time as the visual warning. Please be noted that Chimeld_No_Rq should be unique for V2V Chime.

1.3.3.3 Switch Control Logic

There is an 'OK' button for the V2V not available warning message. The V2V not available warning message will be displayed on the cluster, and the driver could minimize the V2V not available warning message by clicking the 'OK' button.

If the failure is not repaired, the V2V permanent failure warning message will be displayed again for certain time before driver minimizes it through the 'OK' button on the new ignition cycle.

"OK" button is not needed for EEBL and LTA warning message.

1.3.4 System Accuracy

- 1. RTT and warning display should be displayed within 100ms after corresponding SoA message received by IVI.
- 2. Chime should be generated synchronized with corresponding V2V Collision (EEBL & LTA) warning display (within 70ms after corresponding signal received).
- 3. Once V2V and FCW activate at the same time, the HMI shall respond to the FCW system as higher priority.

1.3.5 Operation: Performance and Functional

1.3.5.1 5G V2V Flowchart

Figure 3.1 shows the display and chime on cluster logic for 5G V2V.

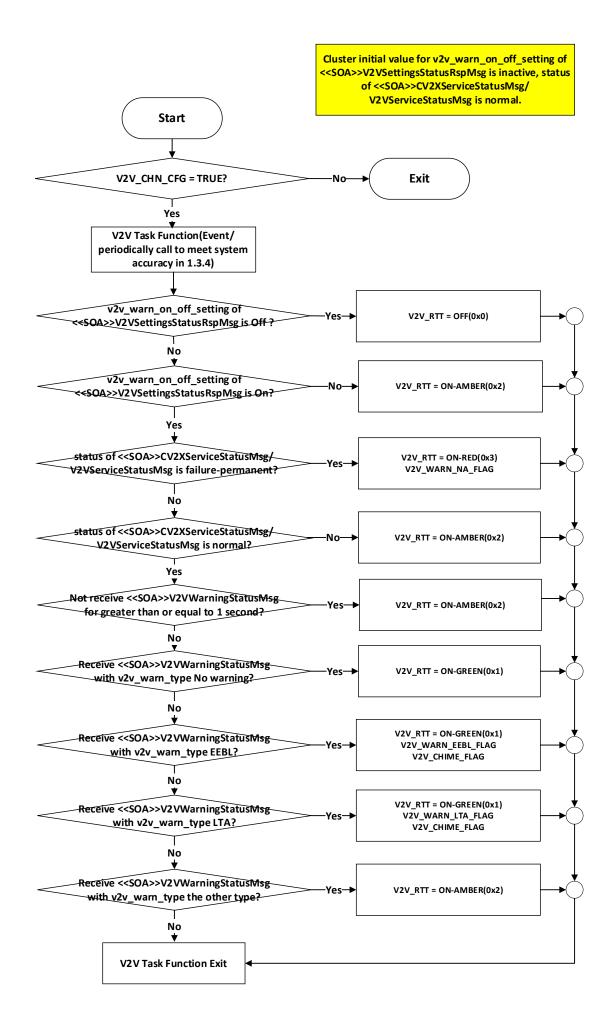


Figure 3.1 Display and chime on cluster logic for 5G V2V

1.3.5.2 Operation Description (supports algorithm flowchart)

V2V settings are at IVI instead of cluster.

1.3.5.3 Personalization Feature Number Definition:

None

1.3.5.4 Function Safety Classification (EMC)

Class B.

1.3.5.5 Memory Storage

None.

1.3.5.6 Prove Out

None.

1.3.5.7 Reconfigurable Telltale

Refer to 1.3.3.1

1.3.5.8 Message Center Msg

Refer to table 3.1 and table 3.2, alerts and warnings definition.

1.4 Error Handling

1.4.1 Missing Message Strategy

If event periodic SOA message V2VWarningStatusMsg is not received in 1s, then amber RTT is generated.

1.5 Diagnostics

1.5.1 Self Test

None.

1.5.2 Engineering Test Mode

Not Applicable.

1.5.3 Part II Performance

1.5.3.1 DID \$DExx

Block Num	Block Description	Size (bits)	Byte(s)	Bit(s)	State: Description	"0"	"1"	Default	Comments/ Information
PA	CKETED BLOCKS								
\$0A	Option Content (B&A)	1	42	2	V2V_CHN_CFG	Disabled	Enabled	0	Disabled means the feature is not present in the vehicle.
\$0A	Option Content (B&A)	1	42	1	V2V_CHN_CFG_EEBL (reserved)	Disabled	Enabled	0	Reserved
\$0A	Option Content (B&A)	1	42	0	V2V_CHN_CFG_LTA (reserved)	Disabled	Enabled	0	Reserved
\$0A	Option Content (B&A)	1	43	7	V2V_CHN_CFG_IMA (reserved)	Disabled	Enabled	0	Reserved
	*Byte and bit location t	o be identi	fied in Par	t II Speci	fication for this cluster.				

Note: please be aligned with file/workbook "China CDC Config" DE0A sheet.

1.5.3.2 Supported Diagnostic Trouble Codes (DTCs)

None.

1.6 Reference Specification

1. 5G V2V Collision Warning - CHN SPSS

- China CDC Config
 Audio Generated DNA Chimes- Cluster Chime Arbitrator CGEA v8.28
 Global_Msg_List_ver108_Released_3_31_2022.xlsx

1.7 **Revision History**

Revision Level	Name	Change Description	Date
1.0	Chen Dandan (dchen97)	Initial release.	April 29, 2022
1.1	Chen Dandan (dchen97) Zheng Dong (dzheng14)	 Changed feature name from "5G V2V (China Go Fast)" to "5G V2V Collision Warning - CHN". Updated Seq# in table 3.2 and 3.3 to integers. Added note for V2V task function execution period. Updated DIDs. 	October 27, 2022
1.2	Chen Dandan (dchen97) Zheng Dong (dzheng14)	Added V2VServiceStatusMsg definition, updated it in figure 2.1 and table2.1 added it in figure 3.1. Table 2.1: Corrected failure-permanent value of CV2XServiceStatusMsg/ V2VServiceStatusMsg. Figure 3.1: Added V2VWarningStatusMsg timeout handling and invalid V2VSettingsStatusRspMsg handling.	March 13, 2023
1.3	Chen Dandan (dchen97) Zheng Dong (dzheng14)	1. Table 2.1: Added v2v_warn_on_off_setting invalid handling. 2. 1.3.4 Specified SoA message received by IVI. 3. Figure 3.1: No RTT/warning/chime for v2v_warn_on_off_setting off; Event/periodic optional for task function implementation; Removed v2v_warn_on_off_setting timeout handling, used invalid initial value to implement such error handling.	April 04, 2023