



LOOPER WORKSTATION

Owners Manual

Stereo looper with tape-style speed and reverse, time-stretch, undo, a lo-fi Crush effect, and 99 memory slots on a microSD card.

FIRMWARE 1.6.6 · TWOSEAM EFFECTS

CONTENTS

01 Front panel

02 Connections & power-up

03 Quick start

04 Looping

05 Loop length

06 Undo / redo

07 One-shot

08 Speed & direction

09 Time-stretch

10 Level & Crush

11 Memory slots

12 Menu

13 FX2 mode

14 LED guide


15 Display guide

16 The microSD card

17 Data Manager web app

18 Troubleshooting

19 Specifications

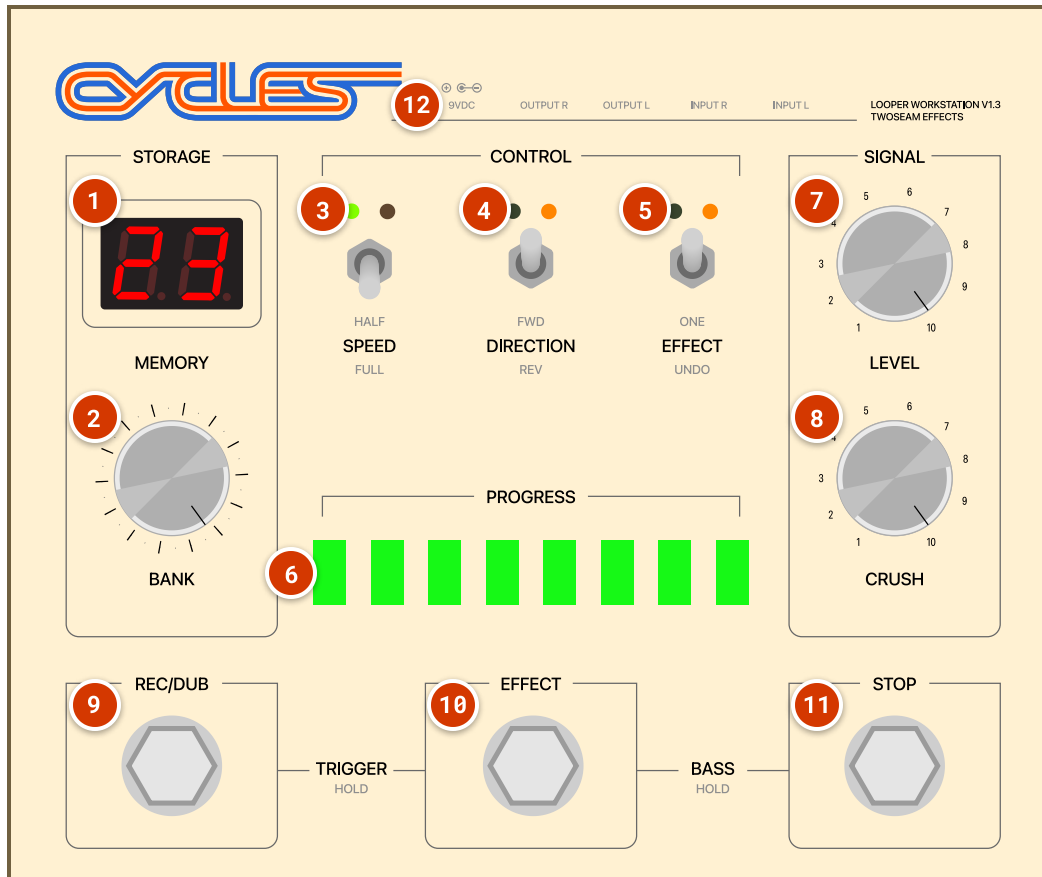

- 1 MEMORY display**

Two digits. Normally shows the current memory slot (01–99). Also shows knob values, the record timer, and short codes. See Display guide.
- 2 BANK encoder (turn + push)**

Turn to pick a memory slot. Click to load and save. Hold and turn for time-stretch. Hold 2 seconds for the menu.
- 3 SPEED toggle — FULL / HALF**

Tape-style speed. Tempo and pitch move together. Display shows **FS** or **HS** when flipped.
- 4 DIRECTION toggle — FWD / REV**

Plays the loop forward or backward. Display shows **FF** or **rr**.

5 EFFECT toggle — ONE / UNDO

Chooses what the EFFECT footswitch does: one-shot or undo/redo. Display shows **1S** or **Ur**. It also sets the maximum loop length — see Loop length.

6 PROGRESS LEDs

Eight lights. Show where you are in the loop, and what the pedal is doing, by colour. See LED guide.

7 LEVEL knob

Loop volume. Fully clockwise is full volume. Your live guitar is never turned down.

8 CRUSH knob

Lo-fi tape/bit-crush on the loop only. **Fully clockwise is clean.** Turn counter-clockwise for more crush.

9 REC/DUB footswitch

Record, play, overdub.

10 EFFECT footswitch

One-shot or undo/redo, set by the EFFECT toggle.

11 STOP footswitch

Stop. Double-tap and hold to clear the loop.

12 Jacks (top edge)

9V DC, OUTPUT R, OUTPUT L, INPUT R, INPUT L.

NOTE

The TRIGGER and BASS legends between the footswitches are reserved. They are not active in firmware 1.6.6.

CONNECTIONS

- **INPUT L / INPUT R** — instrument or stereo source in.
- **OUTPUT L / OUTPUT R** — to your amp, interface, or next pedal.
- **9V DC** — power. Match the polarity symbol printed on the pedal.
- **microSD card** — insert **before** powering on. The pedal only looks for the card at start-up.

Your live signal always passes through the pedal. The loop is mixed on top of it.

POWER-UP

- 1 A colour sweep runs across the LEDs while the display spins.
- 2 The LEDs fade in and out once:  **red** = Manual record mode,  **blue** = Auto record mode.
- 3 The pedal is ready. LEDs off, display shows the slot number, no loop loaded.

IMPORTANT

The loop you are playing is **not** kept when power is removed. Save it to a memory slot first.

All LEDs solid red with  for two seconds at start-up means the card could not be read. You can still loop, but you cannot save or load.

03 · QUICK START

- 1 Tap **REC/DUB**. LEDs sweep red. Play.
- 2 Tap **REC/DUB** again. The loop plays. A green bar shows your place.
- 3 Tap **REC/DUB** again to overdub. Orange flash. Tap once more to finish.
- 4 Tap **STOP** to stop. Tap **REC/DUB** to play from the top.
- 5 To clear: double-tap **STOP** and hold the second tap for 1.5 seconds. Two red blinks.

WHAT EACH FOOTSWITCH DOES

PEDAL IS...	REC/DUB	EFFECT	STOP
Empty ■ LEDs off	Start recording	—	—
Recording ■ red sweep	Close the loop and play	—	Close the loop and stop. Take is kept.
Playing ■ green bar	Start overdub	One-shot, or undo/redo	Stop and rewind
Overdubbing ■ orange over green	Finish overdub, keep playing	—	Finish overdub and stop
Stopped ■ slow dim green	Play from the top	One-shot, or undo/redo	—

WHILE RECORDING

- The display counts seconds. At each minute, the minute number blinks.
- In the last 15 seconds before the length limit, it counts down **15** → **00**.
- At the limit, the loop closes itself and starts playing.

OVERDUBBING

- New playing is added on top. Nothing is erased.
- The bar turns orange over the part you have covered. Green is not yet covered.
- You can overdub with SPEED or DIRECTION flipped. For the cleanest result, overdub at the speed the loop was recorded at.

CLEARING THE LOOP

- 1 Tap **STOP**.
- 2 Within half a second, press **STOP** again and hold for 1.5 seconds. LEDs go solid red.
- 3 Two quick red blinks = cleared. Let go early to cancel.

RECORD ORDER – MODE A / MODE B

- **Mode A:** Record → Play → Overdub.
- **Mode B:** Record → Overdub → Play. The second REC tap goes straight into overdub.
- To switch: hold **REC/DUB + STOP** together for 2 seconds while empty, playing, or stopped. Press STOP a hair first.
- The LEDs show the new order, left to right: ■ record, ■ play, ■ overdub. They flash twice to confirm.
- This choice is remembered on the card.

AUTO RECORD

- Turn on in the menu (A2).
- Tap **REC/DUB** to arm. LEDs breathe blue.
- Recording starts the moment you play.
- Tap REC/DUB again, or STOP, to disarm.

05 · LOOP LENGTH

The **EFFECT toggle** position at the moment you start recording sets the maximum length.

EFFECT TOGGLE AT RECORD START	STEREO	MONO	UNDO
UNDO	1:30	3:00	Yes
ONE	3:00	6:00	Only if the loop ends up 1:30 or shorter (3:00 mono)

- Stereo or mono is chosen in the menu (A1).
- Mono blends left and right into one channel and doubles the recording time.

- Set the EFFECT toggle to **UNDO**.
- Tap **EFFECT**: the last overdub is removed. ■ Blue flash.
- Tap again: it comes back. ■ Green flash.
- One level. One step = one overdub, from REC in to REC out.
- The first recording cannot be undone.
- Works while playing or stopped.

GOOD TO KNOW

- Undo is not available on loops longer than 1:30 stereo / 3:00 mono. You get a red flash.
- If you undo a layer and then start a **new** overdub, the undone layer comes back for good.
- If you save while a layer is undone, the saved loop still includes it.
- Loading a slot clears the undo history.

- Set the EFFECT toggle to **ONE**.
- Tap **EFFECT**: the loop jumps to the start, plays once, and stops. ■ Purple flash, purple bar.
- With DIRECTION on REV, it starts from the end and plays backward.
- Tap again any time to re-trigger. Good for stabs and samples.
- Tap **REC/DUB** during a one-shot to cancel it. The loop keeps looping.

SPEED

Works like tape. The SPEED position when you **start recording** is "normal" for that loop.

RECORDED AT	FLIP TO	YOU HEAR
FULL	HALF	Half speed, one octave down
HALF	FULL	Double speed, one octave up

- The change is instant.
- A loaded memory slot treats the SPEED position at load time as normal.
- SPEED is ignored while time-stretch is on.

DIRECTION

- Flip to **REV** to play the loop backward. Instant.
- The progress bar runs the other way.

Changes the tempo **without** changing the pitch.

- 1 While a loop is playing forward, press and hold the **BANK** encoder.
- 2 Start turning within 2 seconds. (If you wait, the menu opens instead.)
- 3 Clockwise = faster. Counter-clockwise = slower. Nine steps each way, about 8% per step.
- 4 Let go. The new tempo stays.

- Display: **1 9** faster, **-1 -9** slower, **00** normal.
- Full range: half tempo to double tempo.
- To turn it off: hold the encoder, turn back to **00**, let go.
- A new recording, clearing, or loading a slot also resets it.
- Not available in reverse (red flash) or on stream slots.

BAKE — MAKE THE NEW TEMPO PERMANENT

- With stretch on, tap **REC/DUB**.
- The pedal rewrites the loop at the new tempo and goes straight into overdub. No gap in the sound.
- What you play during the bake is kept.
- The new loop takes over at the next loop start. Stretch returns to **00**.
- REC taps are ignored until that happens.

GOOD TO KNOW

- **A bake cannot be undone.** Save to a slot first if you want the original.
- Bake needs the loop — before and after — to fit in 1:30 stereo / 3:00 mono. If not, REC just starts a normal overdub at the original tempo.

LEVEL

- Loop volume, silent to full. Your live signal is not affected.
- While turning:  yellow bar, display shows 0–100 ( = 100).

CRUSH

- Lo-fi on the loop only: narrowed tone, lowered sample rate and bit depth, compression, soft saturation, and a slow tape warble.
- **Fully clockwise = clean** (true bypass). Counter-clockwise = more crush.
- While turning:  white bar. The display follows the knob, so  (100) is clean and  is fully crushed.
- Three strengths — Light, Normal, Heavy — in the menu (A3).

NOTE

Level and Crush are playback only. They are never recorded into overdubs or saved to slots. To print Crush into a file, export from the web app.

99 slots on the microSD card. Turn **BANK** to choose one. Every encoder click gives a short blue flash.

LOAD A SLOT

- 1 Turn BANK to the slot.
- 2 **Double-click** the encoder. The number blinks.
- 3 **Click once more** to confirm. (STOP cancels. It also gives up after 10 seconds.)
- 4  Blue bar fills, then a  green flash. The loop is loaded and stopped.
- 5 Tap **REC/DUB** to play.

 Red flash = the slot is empty or could not be read.

SAVE TO A SLOT

- 1 Turn BANK to the slot.
- 2 **Click once, then press again and hold** for 3 seconds.
- 3 While holding, the LEDs breathe  **yellow** (empty slot) or  **red** (you will overwrite). Let go early to cancel.
- 4 A bar fills, then two flashes. Saved. The loop is stopped.

- You cannot save or load while recording or overdubbing.
- The pedal does not show which slots are full. The save colour (yellow/red) tells you.
- Slots are deleted in the web app, not on the pedal.
- After a save, wait a moment before removing power.


STREAM SLOTS

Long tracks (backing tracks, full songs) loaded with the web app play straight from the card.

- Any length. Load almost instantly.
- Play-only: no overdub, no undo, no save, no time-stretch.
- REC/DUB = play. STOP = stop and rewind.
- EFFECT toggle on UNDO: the EFFECT footswitch is **pause / resume**.
- SPEED, DIRECTION, and one-shot work. Expect a brief gap when flipping direction or re-triggering.

Every setting is one move: **HOLD** a footswitch, **MOVE** a control. The display and LEDs show the result right away.

GETTING IN AND OUT

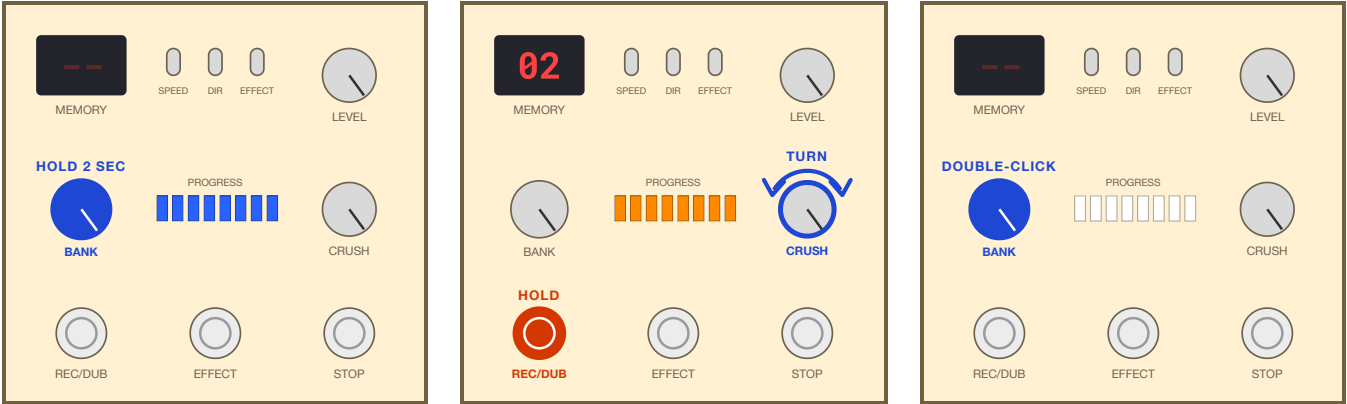

1 Hold **BANK** for 2 seconds. LEDs breathe blue. Playback stops; your loop is kept.

2 **HOLD** a footswitch and **MOVE** a control. Changes apply right away.

3 Double-click **BANK** to save and exit. LEDs breathe white.

SETTINGS



A1 Record format

Hold **REC/DUB**, turn **BANK**.

on Stereo **DEFAULT**
↻ clockwise

0F Mono — doubles the recording time
↻ counter-clockwise



A2 Record mode

Hold **REC/DUB**, turn **LEVEL**.

on



Auto — recording starts when you play
↻ clockwise

0F



Manual — recording starts on the
tap **DEFAULT**
↻ counter-clockwise



A3 Crush strength

Hold **REC/DUB**, turn **CRUSH**.

01



Light
↻ counter-clockwise

02



Normal **DEFAULT**
middle

03



Heavy
↻ clockwise



A4 Card space used

Hold **REC/DUB**, press and hold **BANK**. Look only — nothing changes.

42



How full the card is — 00 to 99 %. The
green bar fills to match.



B3 LED brightness

Hold **EFFECT**, turn **CRUSH**. The LEDs change as you turn.

99 [Progress bar with 8 white segments] **Full brightness** DEFAULT
↻ clockwise

0 [Progress bar with 8 grey segments] **All LEDs off**
↻ counter-clockwise



c1 Overdub end

Hold **STOP**, turn **BANK**.

on [Progress bar with 8 orange segments] **Overdub ends itself at the loop end**
↻ clockwise

0F [Progress bar with 8 green segments] **Overdub runs until you tap** DEFAULT
↻ counter-clockwise



c3 STOP footswitch role

Hold **STOP**, turn **CRUSH**.

on [Progress bar with 8 purple segments] **FX2 — STOP becomes a second effect switch**
↻ clockwise

0F [Progress bar with 8 red segments] **Stop — normal stop switch** DEFAULT
↻ counter-clockwise

TIPS

- Holding REC/DUB alone shows the A1 value. Read a knob setting while the knob is still moving.
- The knobs are live. Re-set LEVEL and CRUSH after you leave the menu.
- Settings are stored on the card when you exit. A red flash on exit means they were not stored.

FACTORY RESET



HOLD **REC/DUB + STOP** while you plug in the power.

- 1 Hold **REC/DUB + STOP** while powering on.
- 2 The display counts **05** → **01**. Keep holding to the end.
- 3 Menu settings return to defaults. Let go early to cancel.

Memory slots and the Mode A/B choice are not touched.

Turns the STOP footswitch into a second effect switch. Turn on in the menu (C3).

STOP FOOTSWITCH IN FX2 MODE

- **Single tap:** its effect. (Default: reverse.)
- **Double-tap:** stop.
- **Double-tap and hold 1.5 s:** clear the loop.

EFFECTS YOU CAN ASSIGN

EFFECT	WHAT A TAP DOES
Classic	Follows the EFFECT toggle (one-shot or undo)
Speed latch	Flips speed. Tap again to release.
Reverse latch	Flips direction. Tap again to release.
Undo / redo	Same as Undo
One-shot	Same as One-shot

- While a latch is on, the matching toggle is ignored.
- Latches reset on a new loop, a clear, or a slot load.

ASSIGNING

- 1
- Enter the menu, with C3 set to
- 
- .
-
- 2
- Hold
- EFFECT**
- or
- STOP**
- the footswitch you want to set.
-
- 3
- Flip a toggle:
- SPEED**
- = speed latch.
- DIRECTION**
- = reverse latch.
- EFFECT**
- = classic.

If both footswitches are set to classic, the pedal splits them: the one you just set becomes one-shot, the other becomes undo/redo.

YOU SEE	IT MEANS
■ Off	Empty. No loop.
■ Red sweep, back and forth	Recording
■ Green bar filling	Playing
■ Orange flash, then orange over green	Overdubbing
■ Slow dim green breathing	Stopped, loop loaded
■ Purple flash, purple bar	One-shot
■ Blue flash / ■ green flash	Undo / redo
■ Solid red	STOP is held
■ Two quick red blinks	Loop cleared
■ Short red flash	"Not now" — see below
■ Slow blue breathing	Auto record armed
■ Short blue flash	Encoder click
■ Blue breathing, growing	Holding toward the menu / in the menu
□ White breathing	Menu saved
■ Yellow / ■ red breathing	Save hold: empty slot / overwrite
Bar fills, then two flashes	Saving, saved
■ Blue bar, then ■ green flash	Loading, loaded
■ Yellow bar / □ white bar	LEVEL / CRUSH being turned
Colour sweep, then ■ red or ■ blue fade	Power-up (red = Manual, blue = Auto)
■ All red for 2 s + 	Card could not be read at start-up

THE SHORT RED FLASH MEANS ONE OF

- The slot is empty, or the load failed.
- Nothing to save, or the save failed.
- Overdub tried on a stream slot.
- Undo tried on a loop that is too long.
- Time-stretch tried in reverse.
- Menu settings could not be stored.

15 · DISPLAY GUIDE

DISPLAY	MEANING
01 — 99 steady	Current memory slot
Number blinking	Load waiting for your confirming click
Counting up	Record time in seconds. Blinking number = minutes.
15 → 00	Seconds left before the length limit
0 ... 00	Knob value, 0 to 100
3 / -3 / 00	Time-stretch step
FS HS	Full speed / half speed
FF rr	Forward / reverse
1S Ur	One-shot / undo-redo
on OF	Menu setting on / off
Spinning segments	Start-up, menu idle, or clear-hold
05 → 01 at power-on	Factory reset countdown

- Format: **FAT32**. Name the card **CYCLES** (the web app checks the name).
- Insert before power-on. Swapping cards while running is not supported — power off first.
- The pedal creates its folders on first start.

ON THE CARD	WHAT IT IS
Cycles/Memory_Slots/Mem_NN.raw	Stereo loop in slot NN
Cycles/Memory_Slots/Mem_NN_mono.raw	Mono loop
Cycles/Memory_Slots/Mem_NN_stream.raw	Stereo stream (play-only, any length)
Cycles/Settings.bin	Menu settings
Cycles/Mode.bin	Mode A / B
Cycles/diag.log	Diagnostic log for support

Audio is stored as raw 24-bit, 48 kHz. Use the web app to get loops in and out — don't rename files by hand. Don't use slot 00.

cycleslooper.com manages the card from your computer. Use desktop **Chrome** or **Edge**. Phones can only preview the stock tracks.

CONNECT

- Put the card in your computer. Click **Connect CYCLES Card** and choose the card.
- No card handy? Click **Look around without a card**.

IMPORT

- Drop in WAV, MP3, or other audio. It is converted to 48 kHz and levelled automatically.
- WAV is best for loops. MP3 adds tiny gaps that can throw off loop timing.
- Up to 1:30 goes in as a normal stereo loop. Longer files ask you to choose a format:

FORMAT	MAX LENGTH	OVERDUB	UNDO
Stereo	1:30	Yes	Yes
Stereo long	3:00	Yes	No
Mono	3:00	Yes	Yes
Mono long	6:00	Yes	No
Stereo stream	Any	No	No

IMPORTANT

For long tracks choose **stereo stream**. Firmware 1.6.6 cannot play mono stream files — the slot will look empty on the pedal.

MEMORY SLOTS

- Drag a tile to move it to another slot. Dropping on a full slot asks first.
- Hover a tile and click × to delete. **Delete All Slots** wipes everything. Both ask first.

STOCK TRACKS

- Backing tracks you can preview and send to a slot. Click to import, or drag onto a slot.

PREVIEW AND EXPORT

- Audition any slot with speed (0.5× / 1× / 2×), direction, Crush, loop, and one-shot. Space bar = play / pause.
- **Export** saves a WAV with your speed and direction applied.
- **Apply Effects = Yes** also prints Crush into the file.
- Preview settings never change what is on the card.

PROBLEM	TRY THIS
Red flash on every save and load	Card missing or not seated. Power off, re-seat the card, power on.
All LEDs red +  at start-up	Card could not be read. Check it is FAT32.
A slot loaded from the web app looks empty	It may be a mono stream, or longer than 3:00 stereo / 6:00 mono. Re-import as stereo stream.
Undo gives a red flash	The loop is over 1:30 stereo / 3:00 mono. Record with the EFFECT toggle on UNDO to stay in range.
All LEDs are dark but audio works	LED brightness (menu B3) is at 0. Enter the menu, hold EFFECT, turn CRUSH.
Encoder hold opens the menu instead of stretch	Start turning sooner — within 2 seconds of pressing.
SPEED toggle does nothing	Time-stretch is on. Hold the encoder and turn back to  .
Level or Crush changed after the menu	The knobs are live. Set them again.
Loop gone after power-off	Normal. Save to a slot before unplugging.
Hum or noise in a high-gain amp's FX loop	Try the pedal in front of the amp, or use an isolated power supply.

Audio	Stereo in / stereo out, 48 kHz
Storage format	24-bit PCM, raw, on microSD (FAT32)
Loop length	1:30 / 3:00 stereo · 3:00 / 6:00 mono · streams unlimited
Memory slots	99
Undo	1 level
Time-stretch	½× to 2× tempo, ±9 steps, pitch preserved
Loop seam	10 ms crossfade
Controls	3 footswitches, 3 toggles, 2 knobs, push encoder
Indicators	2-digit display, 8 RGB LEDs
Processor	Electrosmith Daisy Seed
Power	9V DC

FIRMWARE UPDATES

Updates are installed over USB from the Chrome browser. Step-by-step instructions will be posted here with the first update.