



FIELD DOCUMENT
REV A • 07/2026 • DEPLOYMENT SOLUTIONS

FIELD SETUP GUIDE • DRONESENSE

SETTING UP THE DJI DOCK 3 FOR DRONESENSE

A plain-language, step-by-step guide for the person on site
— from crate to a dock that's live in DroneSense Remote.
Twelve steps, in order.



WE'RE HERE. WE KNOW. WE'RE READY.

PREPARED FOR: DXD OPS TEAM

BEFORE ANYTHING ELSE

READ THIS FIRST

This is the Deus X Defense install procedure for docks running on **DroneSense Remote**. **You are the installer.** Work through this guide top to bottom — mounting, hookup, connecting the dock to DroneSense, and the first flight. The only time you need outside help is if a brand-new power circuit has to be installed (Step 5). Everything else is your crew.

1 → 12

DO THE STEPS IN ORDER

Each step builds on the last one.
Don't skip ahead.

!

RED BOXES = CAREFUL

Boxes with a red border are
safety warnings. Read every one.

×

UNSURE? STOP.

If something looks wrong, stop
and call DXD Ops. Nobody will
be mad.

WHAT YOU'RE SETTING UP



A real DXD dock on site — antenna mast beside it. The dock opens, lets the drone fly out, then closes to charge and protect it. It stays plugged into power and internet all the time. The DroneTag detects our drone and drones nearby.

WORDS YOU'LL SEE IN THIS GUIDE

RTK ANTENNA — a super-accurate GPS. It tells the drone where it is, down to about an inch.

EXPANSION BOLT — a bolt that swells inside a drilled hole so it grips the concrete.

MQTT GATEWAY — the server address that tells the dock where to phone home to DroneSense.

DRONESENSE REMOTE — the DroneSense cloud platform the dock connects to. You set up the dock in it from a computer.

DEVICE SN — the dock's serial number. You read it off the dock and register it with DroneSense.

LAUNCH SITE — the dock's physical location, entered in DroneSense so it knows where the drone flies from.

GIMBAL — the moving mount that holds the drone's camera steady.

RJ45 — the plastic plug on the end of a network (Ethernet) cable.

GFCI OUTLET — an outlet with a built-in safety switch that cuts power if water gets in.

RETURN-TO-HOME — the button that makes the drone stop and fly straight back to the dock.

GATHER YOUR GEAR

Check every box before install day. Hunting for a cable or a password mid-setup wastes hours.

ON THE GROUND

- ☐ **The Dock 3 crate + the Matrice 4TD.** The dock weighs 121 lb (55 kg) — plan at least two people to carry it. Don't remove the yellow transit braces yet.
- ☐ **Hand tools.** Adjustable wrench, 2.5 mm hex key, screwdriver, claw hammer, digital level, vacuum or blower.
- ☐ **Hammer drill** with a 12 mm masonry bit (concrete mounts only), plus goggles and a dust mask.
- ☐ **Power at the spot.** A dedicated 110 V outlet, or plans for a new circuit (Step 5).
- ☐ **Ethernet at the spot.** A wired, outdoor-rated network cable that reaches the dock.

ON YOUR PHONE / COMPUTER


- ☐ **DJI Enterprise app** on the RC+ controller, or on an Android phone, plus the USB-C to USB-C cable from the accessory kit. This is how you deploy the dock. Get it at dji.com/downloads.
- ☐ **DJI Assistant 2 (Enterprise)** on a laptop — used to update firmware when asked.
- ☐ **A DroneSense Remote account** with access to the right server — **East or West**. This is the cloud you set the dock up in (Step 9).
- ☐ **Your DroneSense login**, written down, and (if you use one) the **media storage URL** — an AWS S3 bucket or MinIO endpoint.

1

PICK THE SPOT

Where the dock will live. Get this right — it's hard to move later.

BIRD'S-EYE VIEW OF A GOOD SPOT

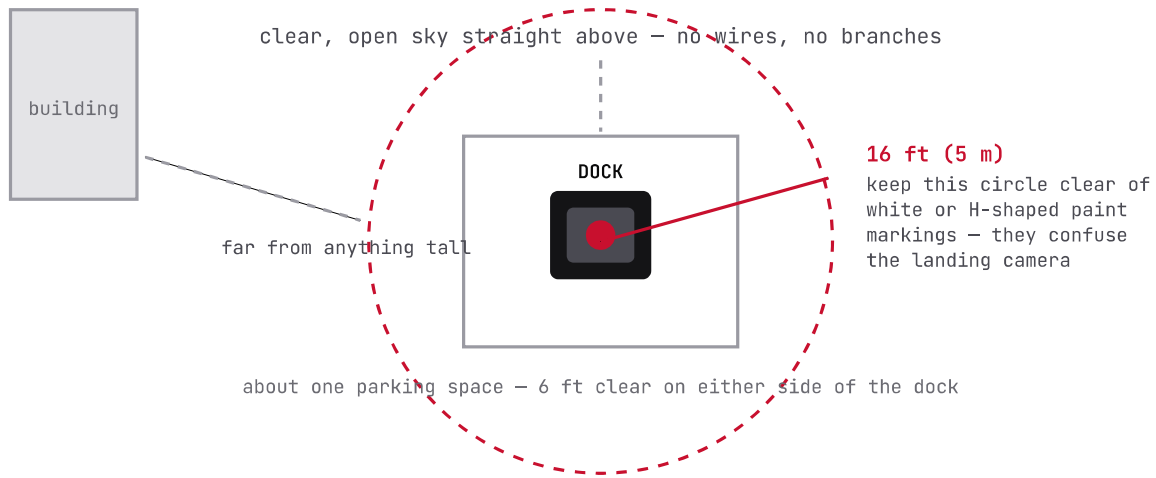

Give the dock a parking-space of room, with at least 6 ft clear on either side for you to work.

✓ A GOOD SPOT HAS

- Flat, level ground — barely any slope
- Clear, open sky straight above
- Room all around — about a parking space, with at least 6 ft clear on either side of the dock
- A short path to power and internet

✗ A BAD SPOT HAS

- Tall buildings or trees close by
- White or H-shaped paint within 16 ft (5 m)
- Ground that floods, shifts, or washes out
- Strong wind blowing straight at the weather sensor all day


FROM THE DJI MANUAL: the site must be below 14,700 ft (4,500 m) altitude, with steady power and internet. If the dock ends up tilted more than 5°, it will refuse to launch the drone.

2

CHECK THE MOUNTING SURFACE

What's under the dock decides how we mount it. Sort this out before install day.

SIDE VIEW — THE THREE WAYS THE DOCK CAN SIT

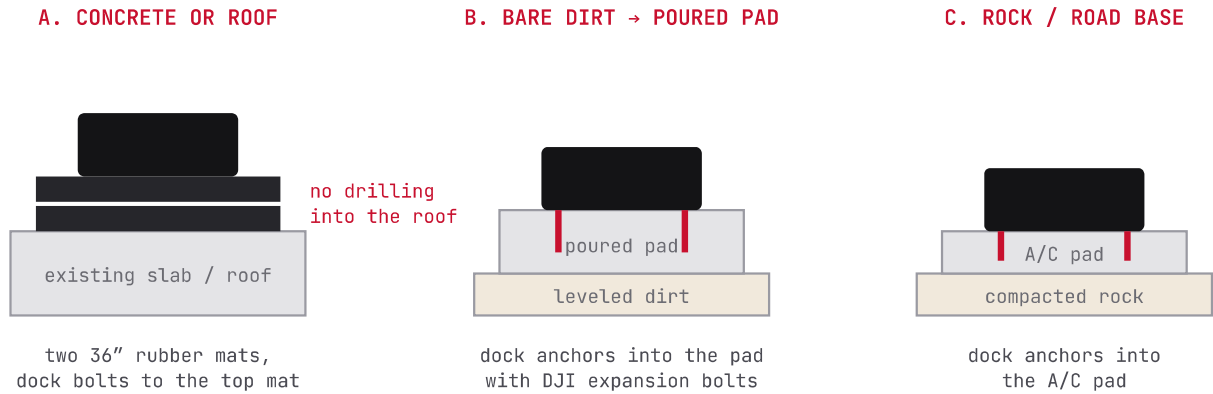

Black block = the dock. Red marks = expansion bolts. We never drill the client's roof or existing slab — only mats, pads, or a base we poured.

- **Concrete or a roof:** already solid. Lay one 36" × 36" horse-stall rubber mat flat, bolt the dock to a second mat, and set it on top.
- **Bare dirt or rock:** the client levels it first — a base that won't wash away, or a small poured concrete pad. If it's only leveled rock or road base, we set the dock on a 36" × 36" concrete A/C pad.

CAREFUL — CONFIRM THE BASE WITH THE CLIENT EARLY

A poured pad needs **several days to cure (harden)** before install day. A base that shifts or washes out throws the dock off level and ruins landings.

3


UNBOX AND ATTACH THE PARTS

A few parts ship separately and bolt onto the dock during setup.

1. **Open the crate carefully.** Take out the manuals and the triangular key from under the lid. Lift with enough people — the dock is heavy.
2. **Check everything is in the box:** the aircraft, the accessory kit, the weather (wind) meter, and the expansion bolts — they hide *under the sealant box*. Missing something? Photograph it and call DXD Ops.
3. **Open the covers by hand to inspect inside.** Press and hold the manual release button, hold the cover by its arm, and lower each side slowly — never let a cover drop. Remove all packaging foam. Keep the yellow transit braces ON until power-up.
4. **Attach the weather meter.** Use the 2.5 mm hex key to remove the two screws on its base, plug the dock's signal cable into the port underneath, then seat the meter into its mount on the dock cover and screw it down.
5. **Attach the RTK antenna** to its mount on top of the dock, next to the electrical cabinet cover.
6. **Leave the waterproof port covers on** until the moment you connect each cable.

CAREFUL — HANDLE THE RTK ANTENNA GENTLY

The RTK antenna gives the drone its exact position. Seat it correctly and don't knock it — a loose or damaged RTK means bad positioning and bad landings. Never lift or push the dock by the antenna.

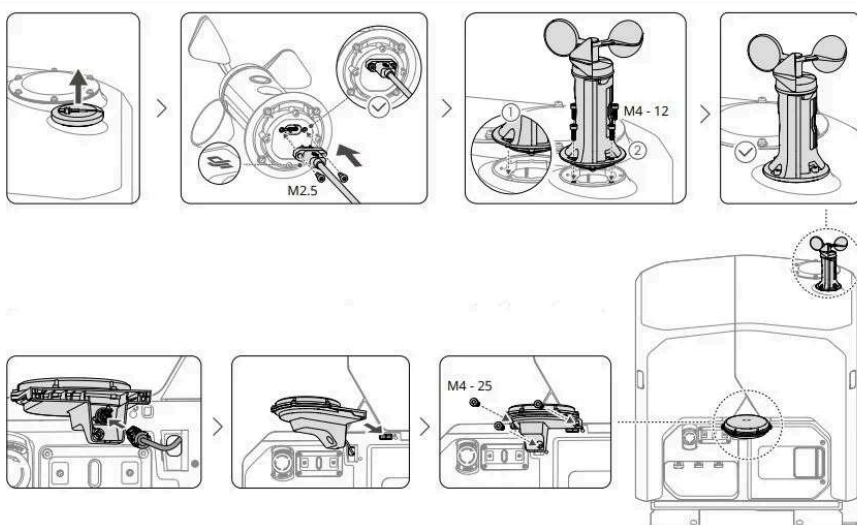

Official DJI diagram — weather meter and RTK antenna install (steps 4–5).

4


MOUNT AND SECURE THE DOCK

Mark the holes with the DJI drill template card first. How you anchor depends on the base.


Onto a rubber mat: bolt the dock to the top mat with its own bolts and washers. No drilling into concrete, no expansion anchors. Skip to the leveling check below.

Onto an A/C pad or poured concrete base — use the DJI expansion bolts:

EXPANSION BOLT — FOUR MOVES

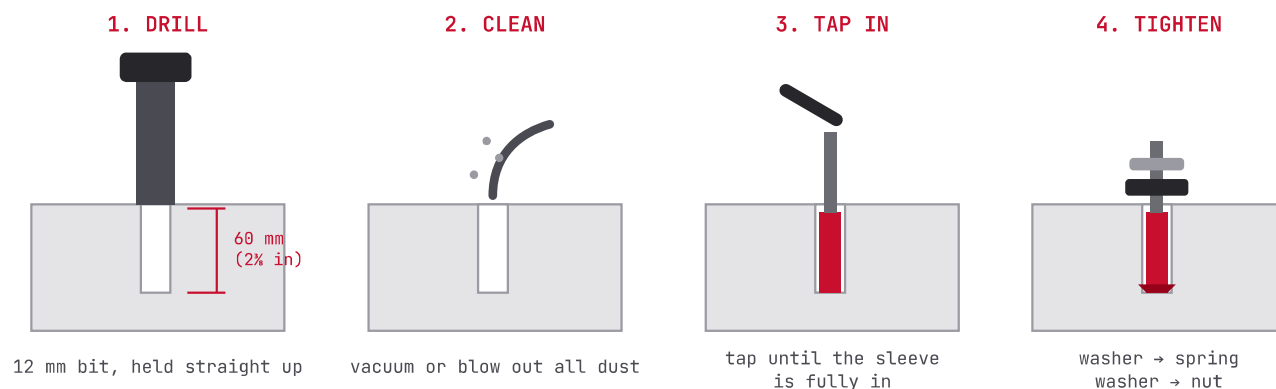

The sleeve swells as the nut tightens and grips the concrete — that's what holds the dock down in a storm.

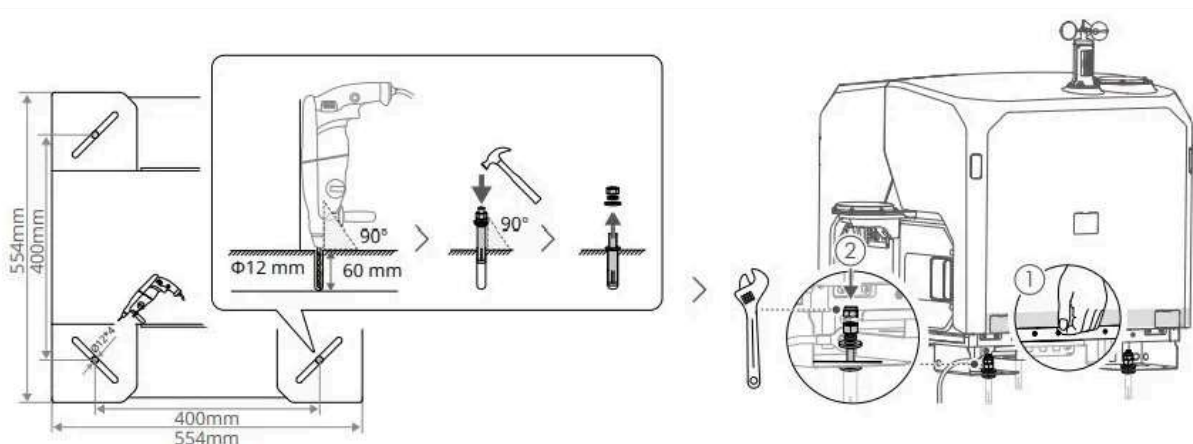

Official DJI diagram — expansion bolt drilling and anchoring.

1. Tape the DJI template card down and hammer-drill the four holes: **12 mm bit, 55–60 mm (about 2 3/8 in) deep**, drill held straight up and down.
2. Keep each hole at least **2 in (5 cm) from any edge** of the pad, and clean all dust out of each hole.
3. Drop in each expansion bolt and tap it with a claw hammer until the sleeve is fully seated, then tighten until it grips. Take the nut and washers back off.

4. With at least two people (never hands under the brackets!), lower the dock so its four bracket holes land on the bolts.
5. Set a digital level on top of the dock. If it's off, shim the low bracket with metal gaskets until it reads **within 3° of level**.
6. Stack flat washer → spring washer → nut on each bolt and tighten with a wrench. Then rock-test the dock: **no movement at all**.

CAREFUL — NEVER DRILL INTO A ROOF

On a roof or existing slab, use the rubber-mat method — we only ever drill the mat, the A/C pad, or a base we poured. Wear goggles and a dust mask when drilling. An unlevel dock ruins landings and RTK accuracy.


5

GIVE IT POWER


Its own dedicated outlet or circuit — then seal the connection so no water gets in.

The dock accepts 100–240 V AC and pulls up to **800 W** while charging — about as much as a microwave. That's why it gets a circuit all to itself.

- **Client outlet (most common):** a dedicated 110 V outlet; we fit the plug on the dock's cable. Outdoors it must be a weatherproof GFCI outlet.
- **New circuit:** a licensed electrician installs a dedicated circuit to code. This is the one job that isn't yours.

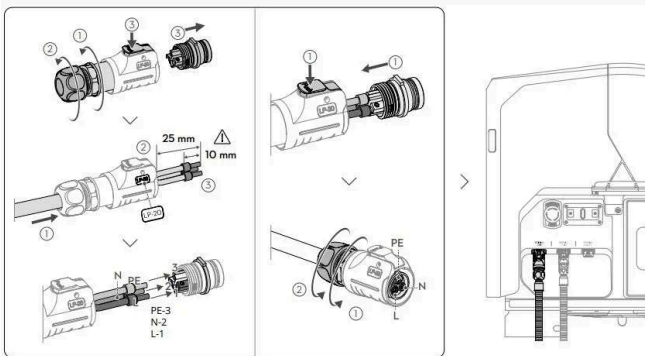

Official DJI diagram — earth wire, power cable, and cabinet routing.

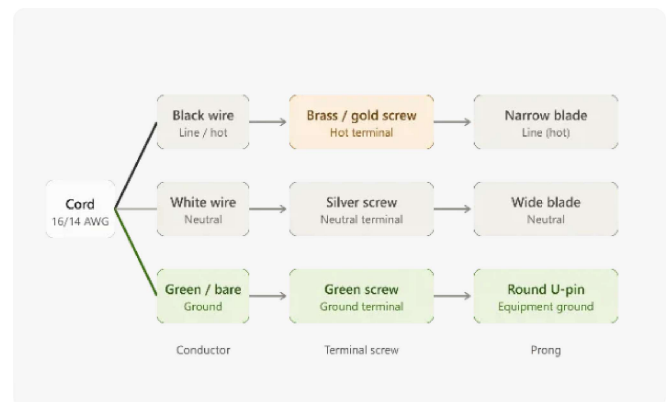


Wiring the 3-prong plug — for the 110 V client-outlet option.

CONNECT THE POWER CABLE (PER DJI)

1. **Kill the power first.** Turn off the upstream main switch in the distribution box, and hang a sign on it: *do not turn on*.
2. **Take the power connector apart** as shown in the DJI diagram.
3. **Lead the power cable through the connector.** Measure the cable and wires with the ruler pattern printed on the accessory box, then strip the outer and inner insulation to expose the conductors — don't nick the insulation. We use 12/2 AWG wire, so the solid conductors go straight into the terminals.
4. **Wire it up.** Loosen the screws on the inner component and insert the wires: **L (live) → terminal 1**, **N (neutral) → terminal 2**, **PE (earth) → terminal 3**. Double-check before tightening — wire colors vary by country.
5. **Reassemble.** Insert the internal component into the outer casing, then tighten the tail sleeve and the tail nut, in that order.
6. **Plug the connector in until you hear a click.** Check the connector-to-cable joint isn't damaged — that seal is what keeps water out.

POWER ON AND CHECK IT'S RUN CORRECTLY

- 1. Turn the upstream main switch back on in the distribution box, then turn on the dock's AC power switch.
- 2. Watch the electrical cabinet status indicators. Within 30 seconds they should match the DJI diagram below. If they don't, stop and troubleshoot before going any further.

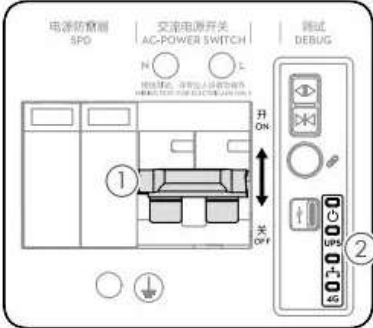

The diagram shows the interior of an electrical cabinet. On the left, there's a section labeled '电源防触电 SPD' (Power anti-electric shock SPD). In the center, there's an '交流电源开关 AC-POWER SWITCH' with 'ON' and 'OFF' positions. To the right, there's a '调试 DEBUG' (Debug) section with several indicator lights and switches. A circled '1' points to the AC power switch, and a circled '2' points to the status indicators.

Status Indicators	Normal States	Description
 Power Indicator	Solid red	AC power supply is normal.
UPS Backup Battery Indicator	Solid blue Blinks blue slowly	Backup battery is full or is supplying power to the dock. Backup battery is charging.
 Wired Network Indicator	Blinks green quickly	The Ethernet cable is connected and has data transfer with the dock.
4G 4G Network Indicator	Blinks green quickly	4G network is connected and has data transfer with the dock.

Official DJI diagram — correct cabinet status indicators after power-on.

CAREFUL — TREAT EVERY WIRE AS LIVE

Nothing else shares the circuit — the dock pulls hard while charging. Never work on wiring until you've personally checked the circuit is dead.

GOOD TO KNOW: the dock has a backup battery that keeps its brain alive for over 4 hours in a power cut — but it can't charge the drone or run the heater on backup. If site power dies, get it restored quickly.


6

GIVE IT INTERNET


Wired Ethernet only, no cellular — then seal the plug so no water gets in.

Run one network cable from the client's router or switch to the dock. The dock's port handles 10/100/1000 Mbps. Use outdoor-rated cable outside, and add a network switch on long runs so the cable stays within spec (about 300 ft / 90 m per run).

SEALING THE NETWORK PLUG — SLIDE THE PARTS ON IN THIS ORDER

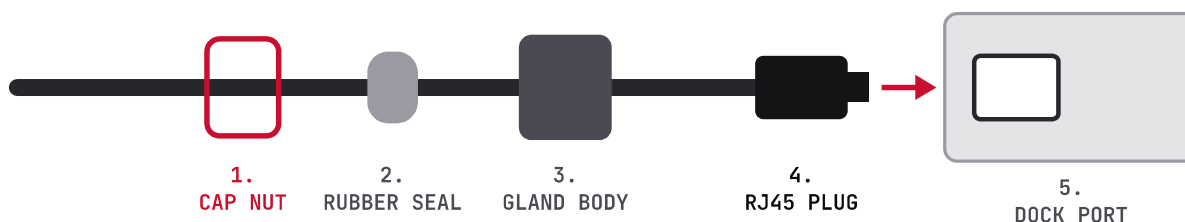

If you plug in the RJ45 before sliding the gland parts on, you'll have to cut the plug off and start over. Parts on first, plug second.

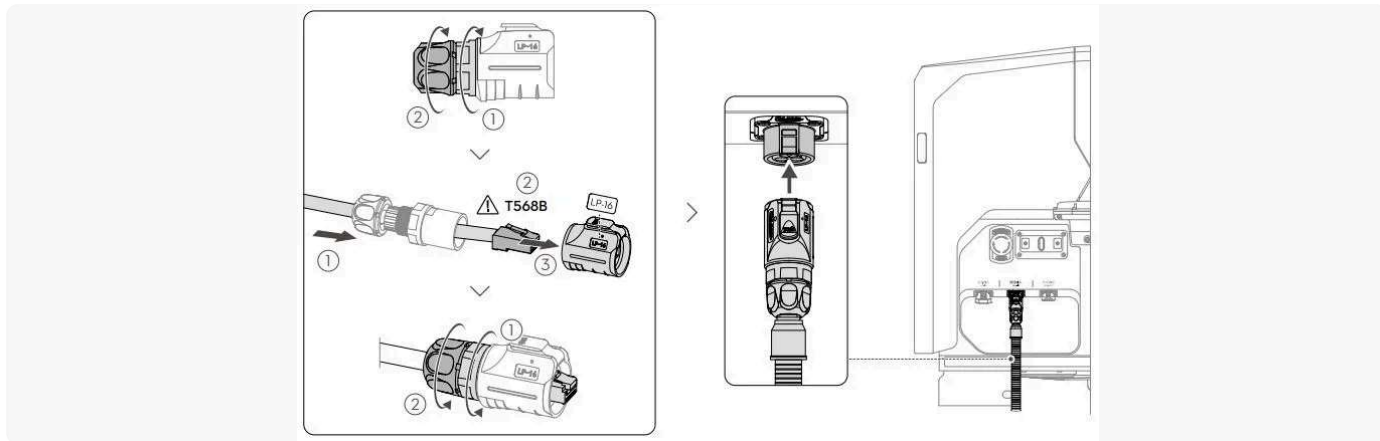

Official DJI diagram — RJ45 gland assembly and network port.

1. Slide the parts onto the cable in order: **cap nut** → **rubber seal** → **gland body**.
2. Plug the RJ45 into the dock's network port until it clicks.
3. Thread the gland body onto the port, then tighten the cap nut so the rubber squeezes the cable.
4. **Tug-test it.** The cable shouldn't slide. Do all of this with the power off, then check the link light before moving on.

CAREFUL — WIRED ONLY, NO CELLULAR

DXD docks run on wired Ethernet. A sealed, solid cable connection is what keeps the dock online for 24/7 operations.

7

POWERING ON THE DRONE

Wake the Matrice 4TD up and get its firmware right. Handle it by the body — never the camera.

1. **Prepare the aircraft** per the manual in its packaging: remove the gimbal (camera) cover and every protective sticker. The arms are fixed — nothing to unfold.
2. **Slide the battery in until it clicks.** The click means it's locked. No click = not seated — pull it out and try again. A loose battery is unsafe.
3. **Power it on next to the dock:** press the power button once, then press and hold it.
4. **Update the drone's firmware.** Connect the drone to your laptop by USB-C, open DJI Assistant 2 (Enterprise), and update to the **latest firmware supported by DroneSense Remote**. Newest isn't always right — check what DroneSense supports first. Let it finish completely.

CHARGING: the drone charges once it's linked to the dock. Keep the covers closed while charging, and keep the landing pad clear of any metal objects — they heat up.

CAREFUL — LISTEN FOR THE CLICK



The battery makes a clear click when it's locked in. A drone that drops its battery mid-flight doesn't come back.

8

POWER ON THE DOCK & GRAB ITS SERIAL NUMBER

The dock wakes up, and you capture the one number DroneSense needs.

1. **Update firmware first, with DJI Assistant 2 (Enterprise).** Connect the dock to your laptop by USB-C and update to the **latest version supported by DroneSense Remote**. Newest isn't always right — check what DroneSense supports first. Let every update finish completely. **Never cut the power mid-update.**
2. **Connect your control device.** Plug the **RC+ controller** (or an Android phone with the DJI Enterprise app) into the USB-C port on the dock panel, in the electrical cabinet. The DJI Enterprise app launches automatically.
3. **Confirm the dock connects.** The **Dock screen** appears on its own. On a first-time setup it shows a **Deploy** button — that's expected. You'll deploy in Step 10, after DroneSense is set up.
4. **Capture the Device SN.** Tap the **Dock dropdown** and take a screenshot of the **Device SN** field. This is the number you register with DroneSense.

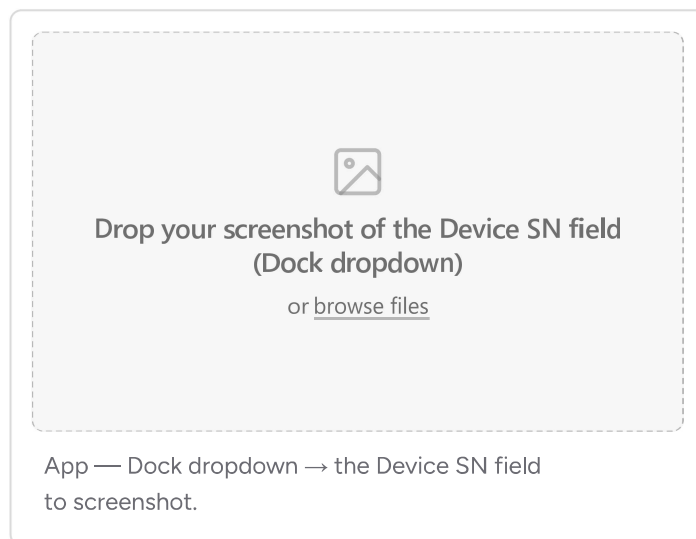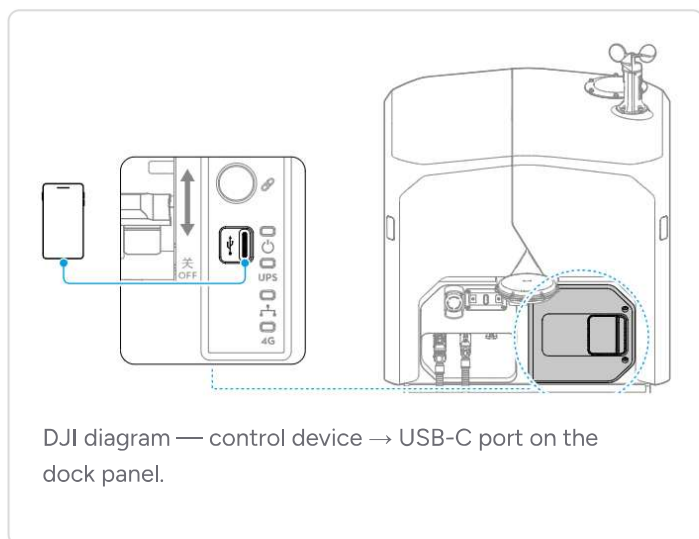

SAVE YOUR DEVICE SN: keep it somewhere you can reach from a computer — you'll type it into DroneSense in Step 9, and you may need it again if the dock isn't recognized.

9

SET UP THE DOCK IN DRONESENSE REMOTE

On a computer, in a web browser — not on the dock. Do this before you deploy in Step 10.

Each dock's Serial Number has to be registered by DroneSense before it will work. If DroneSense doesn't recognize your SN when you add the dock below, email support@dronesense.com to have it added to the server, then continue.

9.1 ADD A LAUNCH SITE

1. **Log in to DroneSense Remote** at remote.dronesense.com, on your assigned server — **East or West**.
2. **Add a launch site** in the launch-site management area. Place it at the dock's **exact physical location** — accurate coordinates matter, because the drone flies from here. ([DroneSense: adding a launch site](#).)
3. **Save** the launch site before moving on.

9.2 ADD THE DOCK

4. Go to **Remote Drones** and select **Add Dock**.
5. **Enter the dock details:**
 - **Device SN** — the number you captured in Step 8
 - **Dock name** — a descriptive name
 - **Launch site** — link it to the site you just made
 - **Media storage** (optional) — your AWS S3 bucket or MinIO URL
6. **Save the dock.** A pop-up shows the **SSL server address**, generated from your location. Note it — you'll confirm your East/West server at the dock in Step 10.



Drop a screenshot of DroneSense Remote — Remote Drones → Add Dock

or [browse files](#)

DroneSense Remote — Add Dock: Device SN, name, launch-site association, media storage.



DEPLOY, CONNECT & CALIBRATE

Back at the dock — deploy it to DroneSense, then calibrate and finish.

10.1 DEPLOY THE DOCK

1. **Reconnect to the dock.** Plug back into the USB-C port on the dock panel; DJI Enterprise launches automatically.
2. **Open dock settings.** From the Dock screen, tap the **tool icon** in the lower-right corner.
3. **Tap Deploy DOCK**, follow the on-screen prompts, then choose **Fixed-Mounted Deployment**. This walks you through linking the aircraft and the rest of the setup.
4. **Run the installation check** as prompted — confirm every step is correctly installed and connected.
5. **Configure the network.** The wired link should show **Connected (Gigabit Ethernet)**. Never use these ranges for the DNS, IP, or gateway address — the dock reserves them: 192.168.41.xxx, .42.xxx, .43.xxx, .50.xxx, .100.xxx, .5.xxx.

10.2 CLOUD SERVICE CONFIGURATION

When the deployment reaches the **Cloud Service Configuration** screen, this is the part that connects the dock to DroneSense. Select **Service** from the dropdown (it may show as **3rd Party Service**), then enter these values exactly:

FIELD	WHAT TO ENTER
MQTT Gateway — East	ssl://512x7m-dfrdock2.dronesense.com:1337
MQTT Gateway — West	ssl://x86z42-dfrdock3.dronesense.com:1337
MQTT account	dronesense
MQTT password	dronesense
OrgID	dronesense
Binding Code	dronesense
Dock / Aircraft name	leave blank

Tap the blue **Connect** button and wait for a successful connection to the DroneSense server. Then tap **Continue** in the lower-right corner.

9:41

< Cloud Service Configuration

Cloud Service DJI FlightHub 2

Org ID

Binding code

Dock name Dock 01

Aircraft name Aircraft name


App — Cloud Service Configuration screen.

CAREFUL — MATCH YOUR SERVER, AND TYPE IT EXACTLY

Use the East *or* West gateway that matches your DroneSense account — not both. A wrong address or a single typo in the MQTT gateway is the most common reason the connection fails.

10.3 CALIBRATE & FINISH

1. **Calibrate the RTK antenna.** Make sure nothing blocks the RTK module and stand clear of the dock. Follow the prompts (Custom Network RTK) and wait until it reads **converged and fixed**. It stays valid — recalibrate only if the dock is ever moved.
2. **Connect the aircraft** if it isn't already linked. With the drone powered on (Step 7), follow the linking prompts. Don't power the drone off right after linking.
3. **Set the alternate landing area** if it isn't set yet, using the on-screen tools.
4. **Calibrate the aircraft compass.** Follow the prompts and physically rotate the aircraft as instructed.
5. **Tap Complete Setup.** The dock is now configured and integrated with DroneSense Remote.
6. **Wrap up:** disconnect the USB-C cable, then close and lock the electrical cabinet door with a screwdriver.

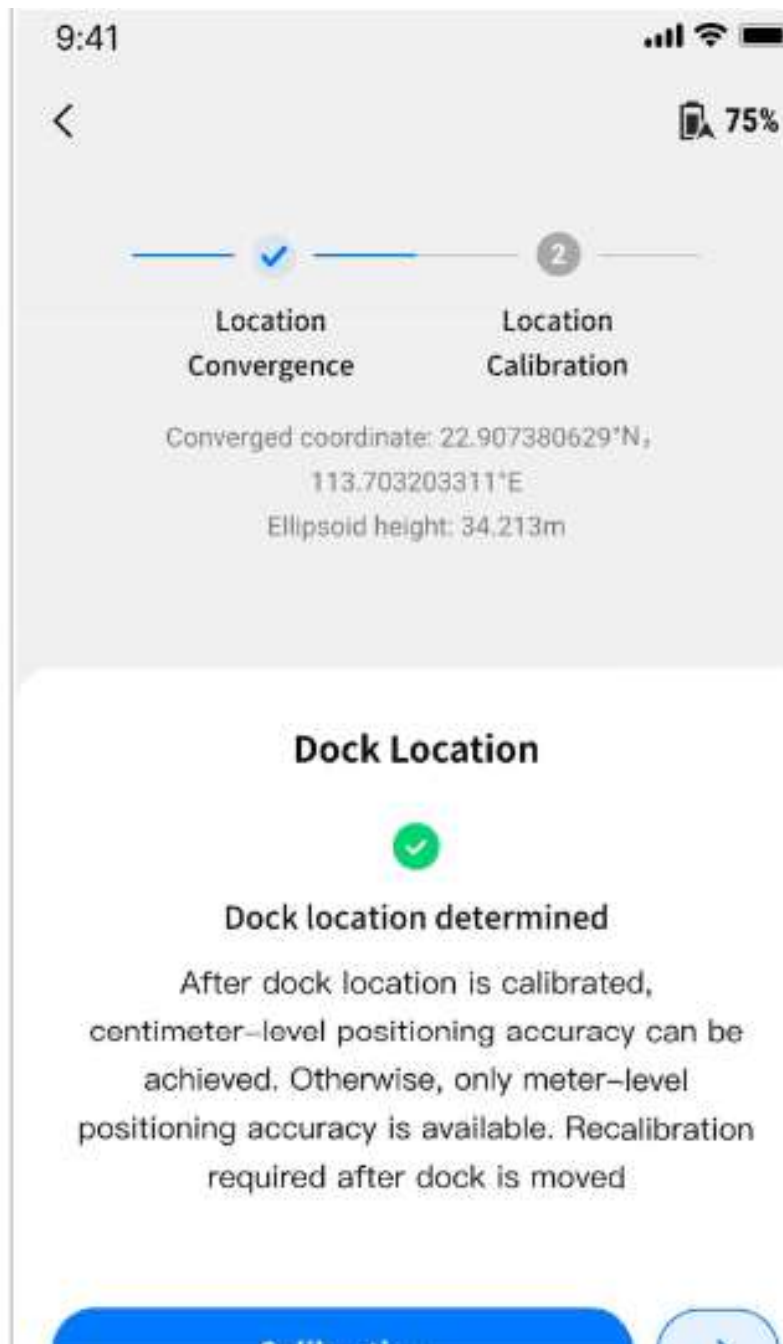

App — RTK / dock location calibration.

VERIFY IN DRONESENSE REMOTE: back on a computer, check that the dock shows **Online** and that telemetry is coming in. If it doesn't, see the troubleshooting card near the end of this guide.

CAREFUL — STAND CLEAR OF THE COVERS

Keep a safe distance when the app opens the dock cover. If you need it to stop, press the emergency stop button on the dock. And once a fixed dock is configured, **do not move it** — a site change means reconfiguring from scratch.

REGISTER THE DRONE WITH THE FAA

Required by law before the first flight. Do this once the drone is powered on and you can read its Remote ID serial.

Any drone over 0.55 lb (250 g) must be registered before its first outdoor flight. Because DXD flies in support of operations, this is a **Part 107** registration — not recreational. **Rob Robertson** holds the Deus X Defense DroneZone account for all DXD authorizations; every aircraft registers under that one account.

HAVE READY BEFORE YOU START

- DroneZone login: **rl.robertson@deusxdefense.com** — get the password from your password manager or Rob (never write it in this document)
- DXD address on file: **15305 Dallas Parkway, Suite 1200, Addison, TX 75001**
- The DXD **ramp card** for the \$5 registration fee
- The aircraft's **Remote ID serial number** (from the drone / DJI)

1. **Use the official portal only** — faadronezone-access.faa.gov. Never a lookalike site; scams charge \$50+ for the same \$5 registration. Check the URL before entering anything.
2. **Log in as Rob's org account** (rl.robertson@deusxdefense.com). Don't create a new account — every DXD drone lives in this one Part 107 inventory.
3. **Add the aircraft to the UAS inventory**. Enter the drone make, model, and its **Remote ID serial number**. Each drone's serial is tied to its own registration record.
4. **Pay the \$5 fee** with the DXD ramp card. Registration is valid for three years.
5. **Download the FAA registration certificate** and keep a copy on file for the site. A copy (paper or digital) must be available whenever the drone flies.

THEN LABEL THE DRONE — REQUIRED BEFORE FLIGHT

WHAT THE LABEL SAYS

The FAA registration number exactly as issued — format **FA** followed by digits (e.g. FA3X1234567).
Number only; no extra text needed.

WHERE TO PLACE IT

On an **exterior surface, readable without tools** — the top of the aircraft body or an upper arm. Flat, clean, dry. Keep clear of vents, sensors, propeller paths, and the RTK antenna; press firmly so it won't peel.

CAREFUL — NO FIRST FLIGHT UNTIL IT'S REGISTERED AND LABELED

Flying an unregistered or unlabeled drone is a federal violation. The Dock 3 aircraft broadcasts Remote ID from the factory (required under Part 89). Registration expires after three years — set a reminder to renew under the same account.

12

THE FIRST TEST FLIGHT

The last step. A person must watch the whole time.

1. **Run the pre-flight checklist** in DroneSense Remote. Don't skip items. Weather clear, area clear of people, TFRs and NOTAMs checked.
2. **Start the trial flight** from DroneSense Remote. The covers open, the drone takes off in about 10 seconds, flies a short check, and returns.
3. **Watch it the entire time** — eyes on the drone and on the screen. Stand back from the dock covers.
4. **Be ready to stop it.** If anything looks wrong, trigger Return-to-Home immediately. The dock also has a physical emergency stop button.

CAREFUL — AUTOMATIC DOES NOT MEAN UNATTENDED

A trained operator stays in control of every flight. Human-in-the-loop is a DXD requirement, no exceptions.

ALWAYS-REMEMBER SAFETY RULES



27 mph

WIND LIMIT

Don't fly above 12 m/s wind — the weather meter on the dock is watching it for you.

Light rain only

RAIN LIMIT

No flying in more than light rain (about 2 mm per hour).

Hands off

PROPELLERS

Never touch a drone that could power on. Stand clear of the dock covers when they move.

Every flight

SOMEONE WATCHES

A trained person monitors every flight. No exceptions.

Dead, then touch

POWER SAFETY

Outlet confirmed dead before wiring. Weatherproof GFCI outdoors. Its own circuit, always.

Stop

WHEN IN DOUBT

Stop the flight (Return-to-Home or the emergency stop button), then call DXD Ops.

YOU DID IT

QUICK RECAP

1. Pick the spot
2. Check the mounting surface
3. Unbox & attach the parts
4. Mount & secure the dock
5. Power — connect & seal
6. Internet — connect & seal
7. Power on the drone
8. Power on dock & capture the SN
9. Set up in DroneSense Remote
10. Deploy, connect & calibrate
11. Register the drone with the FAA
12. Test flight — watched, always

STOP AND CALL DXD OPS IF:

- The app shows a red error you don't understand
- The drone won't take off or land cleanly
- The dock won't close, or looks damaged
- Anything feels unsafe — trust that feeling

IF DRONESENSE SETUP WON'T COOPERATE

PROBLEM	LIKELY CAUSE	FIX
Dock doesn't auto-connect	USB-C cable not fully seated	Reseat the cable, relaunch DJI Enterprise
No "Deploy" button	Dock was configured before	Check prior setup; re-deploy if needed
MQTT connection fails	Wrong server address or no internet	Verify the East/West SSL address; confirm the wired link
SN not accepted in DroneSense	SN not yet registered by DroneSense	Email support@dronesense.com to add it, then retry
Aircraft not detected	Drone not powered on or not linked	Power on the drone and follow the linking prompts

DroneSense support: support@dronesense.com · Portal: remote.dronesense.com

NUMBERS WORTH KEEPING

WHAT	THE NUMBER	IN PLAIN WORDS
Dock weight	55 kg / 121 lb	Two people minimum to carry
Power draw	max 800 W	Like a microwave — needs its own circuit
Drill holes	12 mm × 55–60 mm	Bit width × depth, 4 holes
Level tolerance	within 3°	Past 5°, the dock refuses to launch
Wind limit	12 m/s / 27 mph	No flying above this
Rain limit	2 mm/h	Light rain only
Temperature range	-22 °F to 122 °F	Dock heats and cools itself
Weather sealing	IP56 / IP55	Dock / drone — built for storms, not floods
Recharge time	~27 min	15% → 95%, ready to fly again
Flight time	up to 54 min	Real missions: plan for ~30–40
Backup battery	> 4 h	Keeps the dock's brain alive in a power cut

WE'RE HERE. WE KNOW. WE'RE READY.

DEUS X DEFENSE · DEPLOYMENT SOLUTIONS · DALLAS, TX