



- 2.  $\langle \overline{AA} \rangle \rightarrow \langle \overline{DK} \rangle$  (A) Remove and discard safety clips; loosen turnbuckle on cable run 31 at STA 1274.
- 2.  $(DL) \rightarrow (A)$  Remove and discard safety clips; loosen turnbuckle on cable run 31 at STA 1184.
- 3.  $\overline{(AA)} \rightarrow \overline{(DK)}$  (A) Remove and discard safety clips; remove turnbuckle from cable run 32 at STA 1344.
- 3.  $\langle \overline{DL} \rangle \rightarrow$  (A) Remove and discard safety clips; remove turnbuckle from cable run 32 at STA 1136.

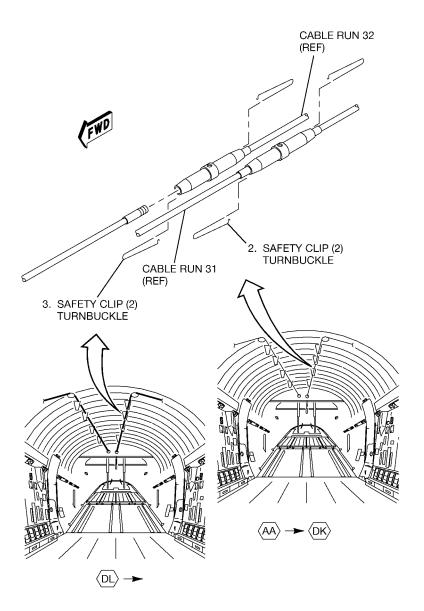


ICN-88277-G2742154-003-01

- 4. (A) Remove grommets on fairlead for cable run 32 at STA 1300, 1420, and 1490.
- 5. (A) Remove bolts, washers, pressure seal cover, and bushings at STA 1620.

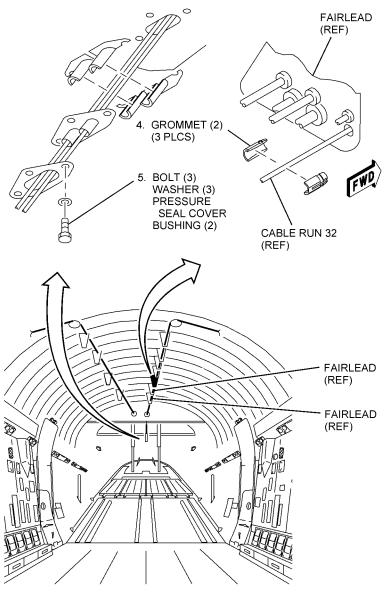


ICN-88277-G2742326-005-01

6. (A) Remove guard pins from cable pulley.

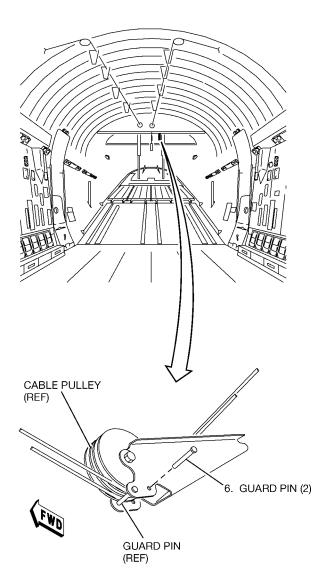


ICN-88277-G2742161-003-01

- 7. (A) Remove grommets on fairlead for cable run 32.
- 8. (A) Remove guard pin from cable pulley.

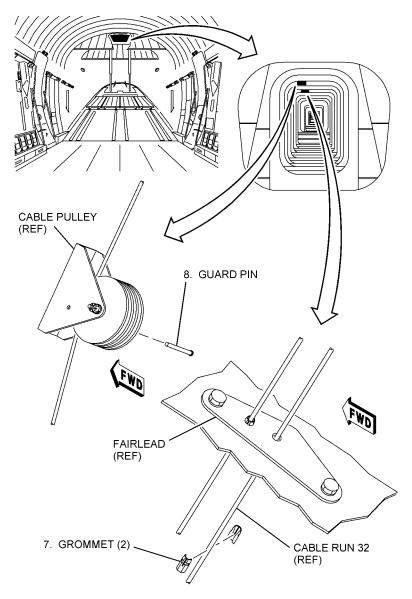

ICN-88277-G2742156-006-01

- 9. (A) Remove cotter pin, nut, washer, and bolt from crank.
- 10. (A,B) Attach nylon utility cord on cable assembly; remove cable and untie cord.

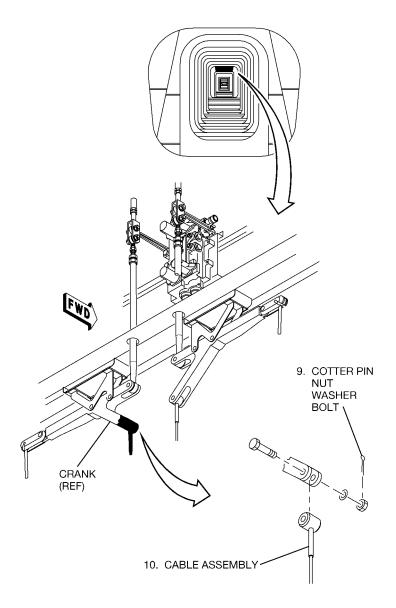

ICN-88277-G2742157-003-01

27-42-13-2 2-201/(2-202 blank)