


Step 1. Click "Add Controllers By Searching" and select the access controller, then right-click. Choose "Password 4/6/8 Check (V8.90 above)", and choose the digits of the password you want to set.

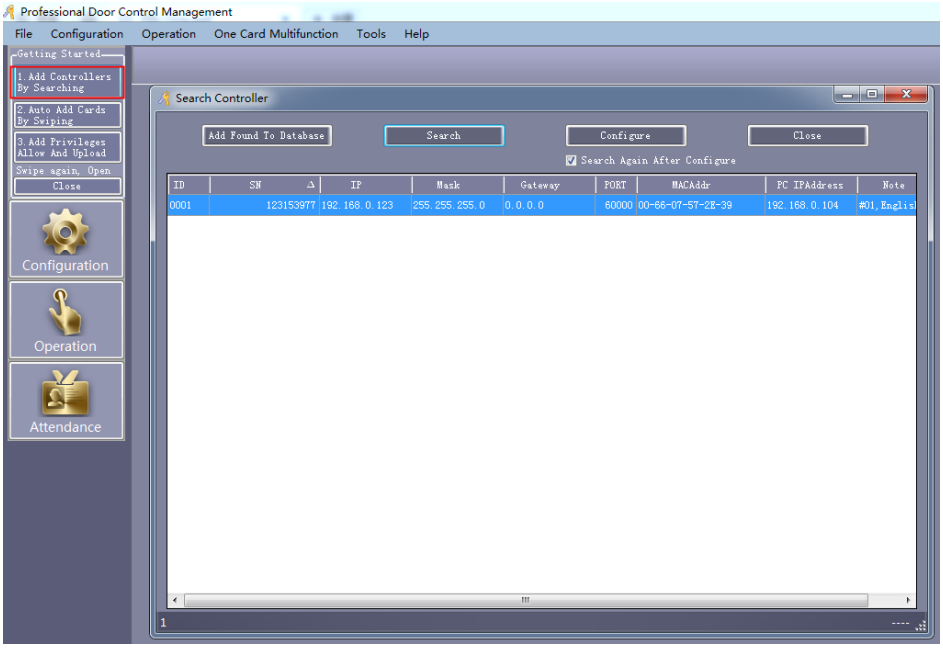

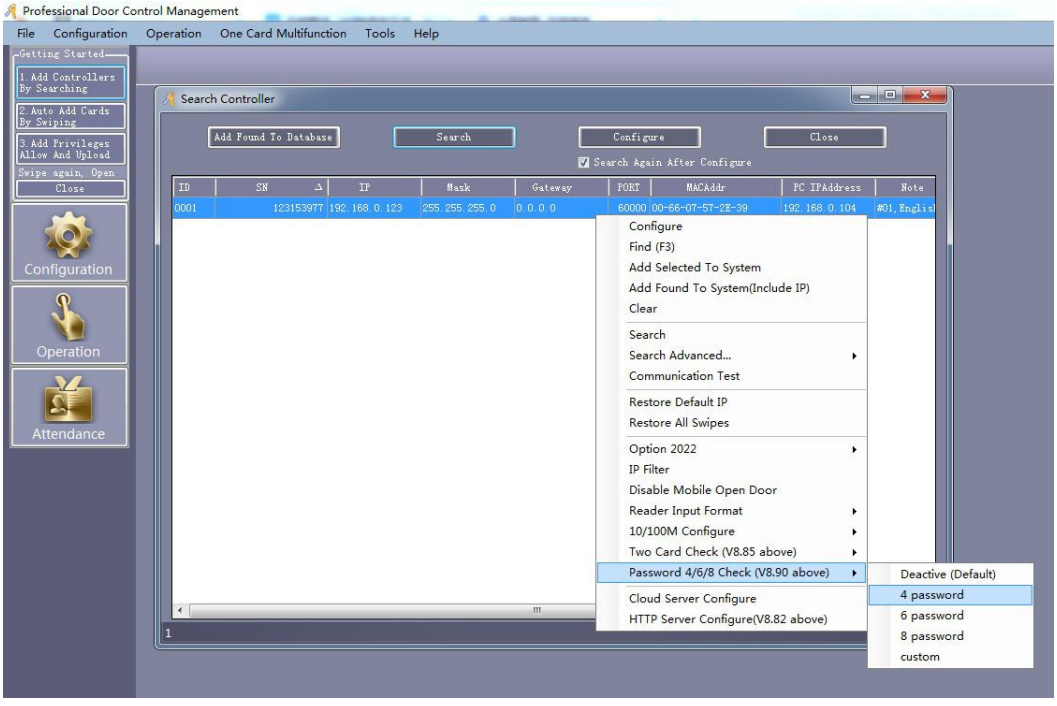


For example, we choose "4 Password" here and click "OK".

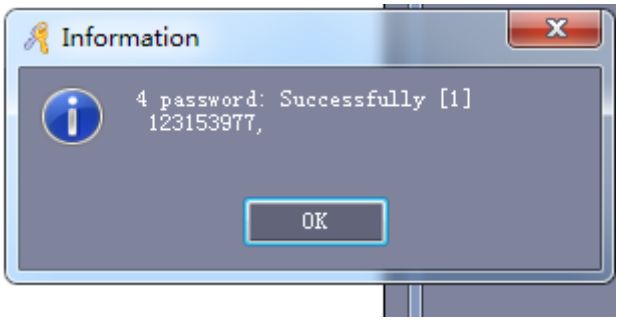


Step 2. Click【Configuration】> 【Personnel】from the menu bar.

Click "Add" and input the name and card number. Then click "OK".

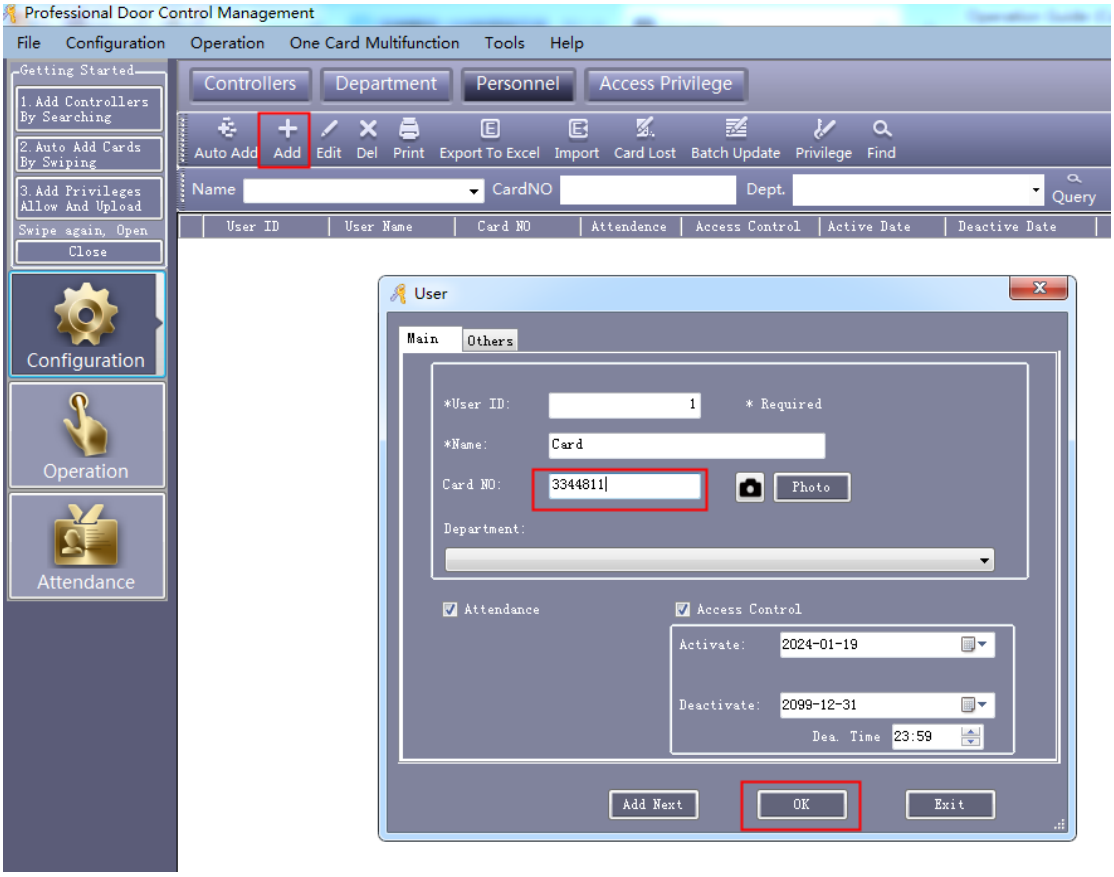


Click "Add" and input the name and card number. The card number needs to be the code you want to set. For example, the code we set is 1259. Then click "OK".

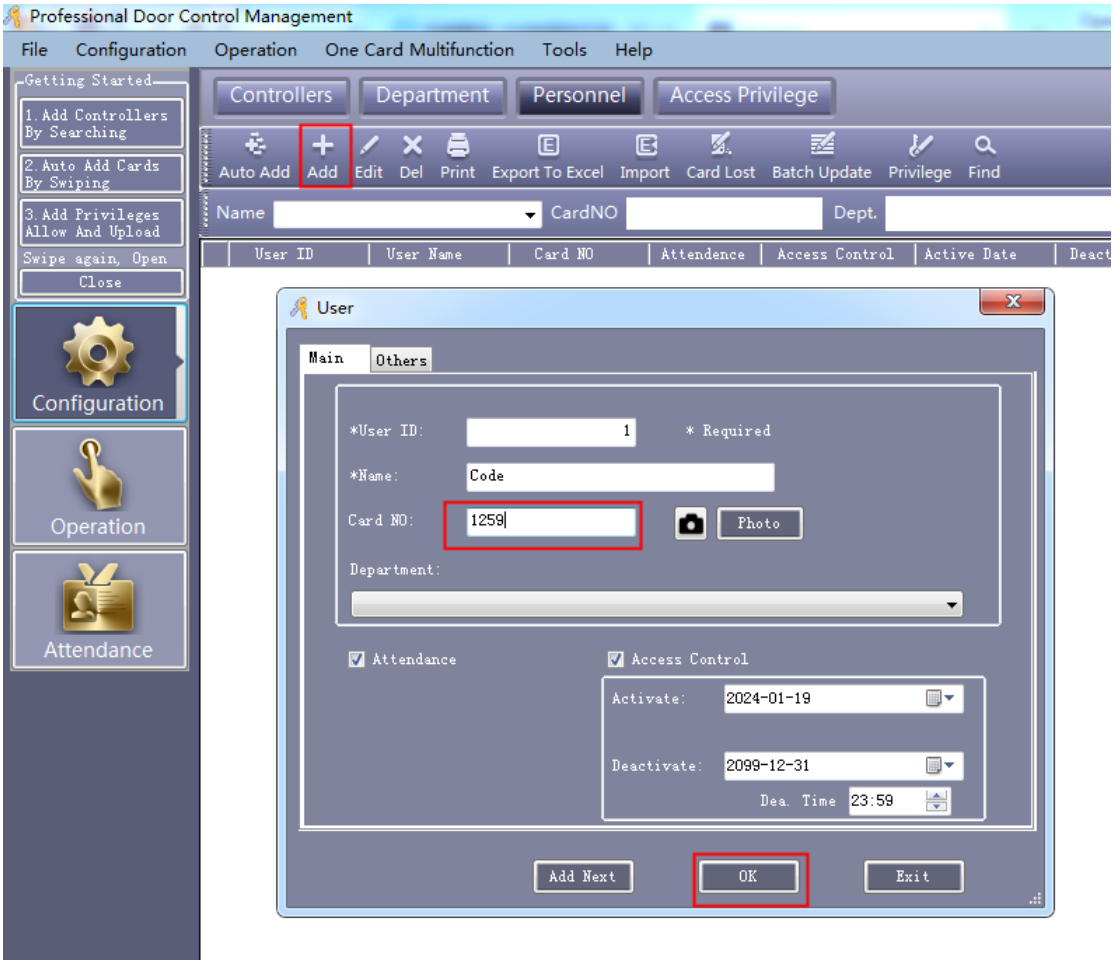

Step 3. Click【Configuration】>【Access Privilege】from the menu bar.

Click "Change Privilege", and then click  to authorize the users. Then click "Allow and Upload".

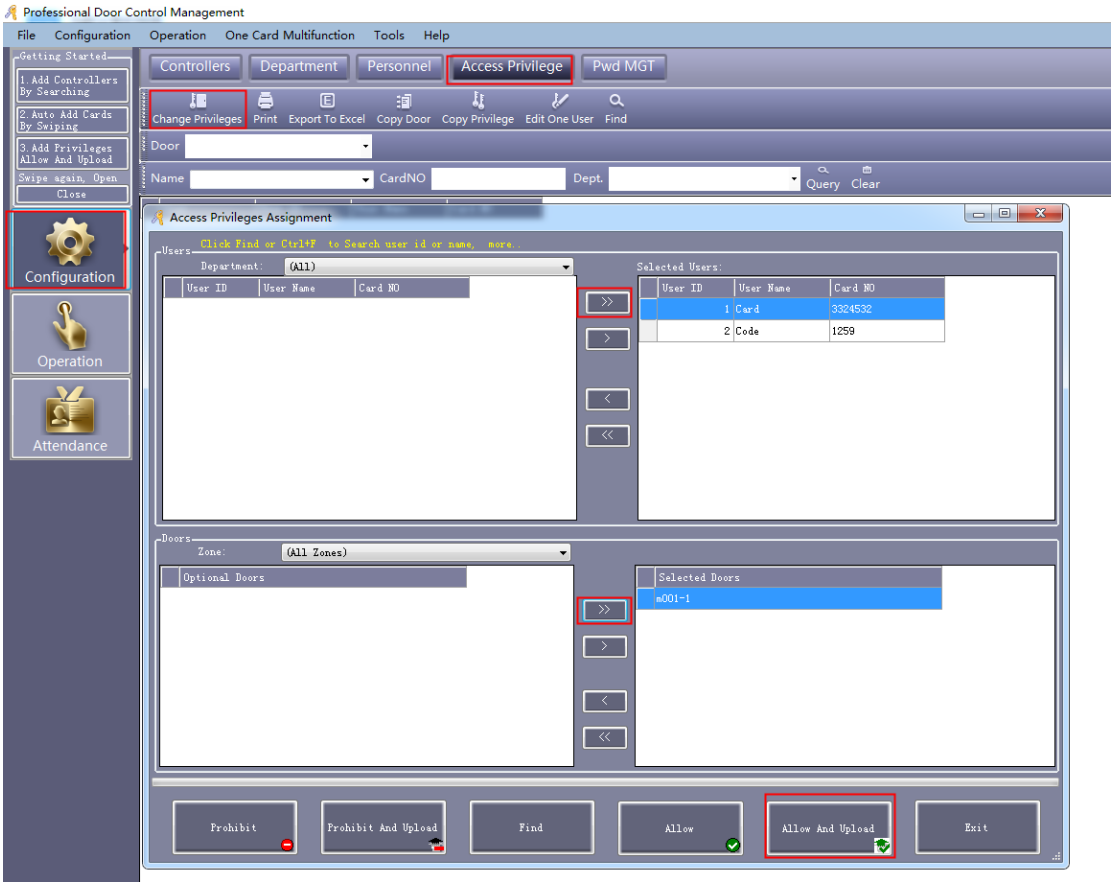

Step 6. Click【Operation】 from the menu bar.

Choose the door and click "Upload", and Click "OK".

