

YAMAHA CP300 SERVICE MANUAL



Quick Links

[Disassembly Procedure \(分解手順\)](#)

Table of Contents

Table of Contents

IMPORTANT NOTICE FOR THE UNITED KINGDOM

SAVING DATA

SPECIFICATIONS

PANEL LAYOUT (パネルレイアウト)

DISASSEMBLY PROCEDURE (分解手順)

Control Panel Unit

Power Switch Assembly

Front Rail Assembly

Keyboard Assembly

Disassembling the Keyboard

Assembling the Keyboard

LSI PIN DESCRIPTION (LSI端子機能表)

IC BLOCK DIAGRAM (ICブロック図)

CIRCUIT BOARDS (シート基板図)

DM Circuit Board

MA80S Circuit Board

PNL Circuit Board

PNR Circuit Board

HP Circuit Board

MASTER EQUALIZER

AJACK Circuit Board

FU60 Circuit Board

TEST PROGRAM (テストプログラム)

MASTER VOLUME

FACTORY SET (ファクトリーセット

BulkDump All

バルクダンプ (データのバックアップ

MESSAGE LIST (メッセージ一覧

MIDI IMPLEMENTATION CHART

MIDI DATA FORMAT

Parameters controlled by RPN (Registered Parameter Numbers)

MIDI PARAMETER CHANGE TABLE

MIDI Parameter Change table (XG SYSTEM)

MIDI Parameter Change table (EFFECT1)

MIDI Parameter Change table (EFFECT2)

System Exclusive Messages

CONTENTS (目次

PARTS LIST

OVERALL ASSEMBLY (総組立

KEYBED ASSEMBLY (棚板 Assy

CONTROL PANEL UNIT (CP ユニット

SPEAKER BOX ASSEMBLY (SP. Box Assy

WHEEL ASSEMBLY (ホイール Assy

PITCH BEND

MA80S ASSEMBLY (MA80S Assy

KEYBOARD ASSEMBLY (GHD EBUS 鍵盤

PEDAL ASSEMBLY (ペダル Assy

ELECTRICAL PARTS (電気部品

Other ManualsLib Projects

STAGE PIANO *CP300*

SERVICE MANUAL



■ CONTENTS(目次)

SPECIFICATIONS(総合仕様)	3
PANEL LAYOUT(パネルレイアウト)	4
DISASSEMBLY PROCEDURE(分解手順)	7
LSI PIN DESCRIPTION(LSI端子機能表)	18
IC BLOCK DIAGRAM(ICブロック図)	23
CIRCUIT BOARDS(シート基板図)	23
TEST PROGRAM(テストプログラム)	38/46
FACTORY SET(ファクトリーセット)	54/56
BALK DUMP(BACKING UP THE DATA) (バルクダンプ(データのバックアップ))	58/63
MESSAGE LIST(メッセージ一覧)	68/72
MIDI IMPLEMENTATION CHART	76
MIDI DATA FORMAT	77
PARTS LIST	
BLOCK DIAGRAM(ブロックダイアグラム)	
CIRCUIT BOARD LAYOUT & WIRING (ユニットレイアウト&結線図)	
OVERALL CIRCUIT DIAGRAM(総回路図)	

IMPORTANT NOTICE

This manual has been provided for the use of authorized Yamaha Retailers and their service personnel. It has been assumed that basic service procedures inherent to the industry, and more specifically Yamaha Products, are already known and understood by the users, and have therefore not been restated.

WARNING : Failure to follow appropriate service and safety procedures when servicing this product may result in personal injury, destruction of expensive components and failure of the product to perform as specified. For these reasons, we advise all Yamaha product owners that all service required should be performed by an authorized Yamaha Retailer or the appointed service representative.

IMPORTANT : This presentation or sale of this manual to any individual or firm does not constitute authorization, certification, recognition of any applicable technical capabilities, or establish a principal-agent relationship of any form.

The data provided is believed to be accurate and applicable to the unit (s) indicated on the cover. The research engineering, and service departments of Yamaha are continually striving to improve Yamaha products. Modifications are, therefore, inevitable and changes in specification are subject to change without notice or obligation to retrofit. Should any discrepancy appear to exist, please contact the distributor's Service Division.

WARNING : Static discharges can destroy expensive components. Discharge any static electricity your body may have accumulated by grounding yourself to the ground bus in the unit (heavy gauge black wires connect to this bus).

IMPORTANT : Turn the unit OFF during disassembly and parts replacement. Recheck all work before you apply power to the unit.

WARNING : CHEMICAL CONTENT NOTICE !

The solder used in the production of this product contains LEAD. In addition, other electrical/electronic and/or plastic (where applicable) components may also contain traces of chemicals found by the California Health and Welfare Agency (and possibly other entities) to cause cancer and/or birth defects or other reproductive harm.

DO NOT PLACE SOLDER, ELECTRICAL/ELECTRONIC OR PLASTIC COMPONENTS IN YOUR MOUTH FOR ANY REASON WHAT SO EVER!

Avoid prolonged, unprotected contact between solder and your skin! When soldering, do not inhale solder fumes or expose eyes to solder/flux vapor!

If you come in contact with solder or components located inside the enclosure of this product, wash your hands before handling food.

IMPORTANT NOTICE FOR THE UNITED KINGDOM

Connecting the Plug and Cord

IMPORTANT . The wires in this mains lead are coloured in accordance with the following code:

BLUE: NEUTRAL

BROWN: LIVE

As the colours of the wires in the mains lead of this apparatus may not correspond with the coloured markings identifying the terminals in your plug proceed as follows:

The wire which is coloured BLUE must be connected to the terminal which is marked with the letter N or coloured BLACK.

The wire which is coloured BROWN must be connected to the terminal which is marked with the letter L or coloured RED.

Making sure that neither core is connected to the earth terminal of the three pin plug.

■ WARNING

Components having special characteristics are marked  and must be replaced with parts having specification equal to those originally installed.

 印の部品は、安全を維持するために重要な部品です。交換する場合は、安全のために必ず指定の部品をご使用ください。

■ SAVING DATA

Saving and backing up your data

- Current data is lost when you turn off the power to the instrument. Save the data to the storage memory/external device such as a computer.

Saved data may be lost due to malfunction or incorrect operation. Save important data to external device such as a computer.

■ データの保存

作成したデータの保存とバックアップ

カレントメモリーデータは電源を切ると消えてしまいます。保存しておきたいデータは、楽器本体やコンピューターなどの外部機器に保存してください。

また、保存したデータは故障や誤操作などのために失われることがあります。大切なデータは、コンピューターなどの外部機器に保存してください。

■ SPECIFICATIONS


Item	CP300
Keyboard	GH keyboard 88 keys (A-1 – C7)
Sound Source	AWM Dynamic Stereo Sampling
Polyphony (max.)	128
Voice Selection	Presets: 50 Voices XG Voices: 480 Voices + 12 Drum kits
Performance	64 Performances x 56 files (max.)
Effect	Reverb, Chorus, Master Equalizer, Variation effect, Insertion effect x 3
Controller	Master Volume Dial, Pitch Bend Wheel, Modulation Wheel, Master Equalizer Slider, Zone Control Slider, Song Volume Slider
Display	24 characters x 2 lines, LCD with back-light
Recording/Playback	16-track recording/playback, Tempo adjustment, max. capacity: 1.4 MB, 140,000 notes
Jacks/Connectors	MIDI (IN/OUT/THRU), PHONES, INPUT (L/MONO, R), OUTPUT (L/MONO, R), OUTPUT (L/R), ASSIGNABLE FOOT PEDAL (SUSTAIN/SOSTENUTO/SOFT/AUX), USB TO HOST, AC INLET
Main Amplifiers	30 W x 2
Speakers	13 cm x 2
Dimensions (W x D x H)	1391 x 460 x 170mm (54-3/4" x 18-1/8" x 6-15/16")
Weight	32.5 kg (71 lbs., 10 oz)
Accessories	AC Power Cord, Foot Pedal FC3, Owner's Manual

■ 総合仕様


項目	内容
鍵盤	GH鍵盤88鍵
音源	AWMダイナミックステレオサンプリング
最大同時発音数	128
ボイス数	手弾き用パネルボイス: 50 XGボイス: 480+12ドラムキット
パフォーマンス	64パフォーマンス×56ファイル
効果	リバーブ、コーラス、マスターイコライザー、バリエーションエフェクト、インサーションエフェクト×3
コントローラー	マスターボリュームダイヤル、ピッチベンドホイール、モジュレーションホイール、 マスターイコライザー-slider、ゾーンコントロールスライダー、ソングボリュームスライダー
画面	24文字×2行、バックライト付LCD
録音/再生	16トラック録音/再生、テンポ調節、最大容量1.4MB、140,000ノート
付属端子	MIDI IN/OUT/THRU、PHONES (ステレオ標準フォンジャック)、INPUT L/MONO R (標準フォンジャック)、OUTPUT L/MONO R (標準フォンジャック)、OUTPUT L R (XLR 端子)、ASSIGNABLE FOOT PEDAL (SUSTAIN/SOSTENUTE/SOFT/AUX)、USB TO HOST、AC INLET
メインアンプ	30W ×2
スピーカー	13cm ×2
定格電源	100V
消費電力	48W
寸法(間口×奥行き×高さ) (ペダルユニットを除く)	1391 ×460 ×170mm
質量(ペダルユニットを除く)	32.5kg
付属品	電源コード、フットペダルFC3、取扱説明書、保証書

■ PANEL LAYOUT (パネルレイアウト)

Front Panel(フロントパネル)

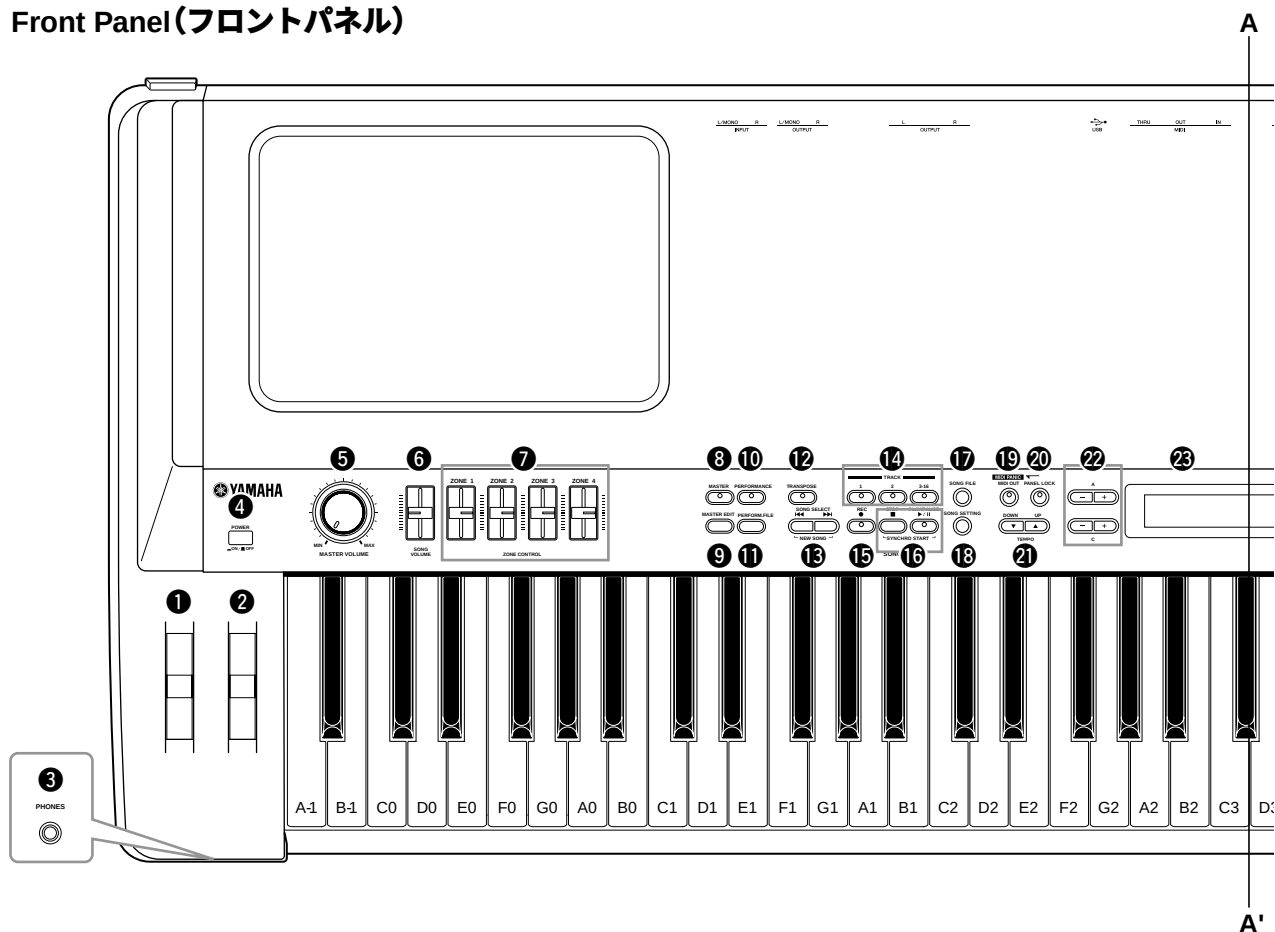


- | | |
|--------------------------------------|--|
| ① Pitch Bend wheel | ① ピッチベンドホイール |
| ② Modulation wheel | ② モジュレーションホイール |
| ③ [PHONES] jack | ③ [PHONES] (フォーンズ)端子 |
| ④ [POWER] switch | ④ [POWER] (パワー)スイッチ |
| ⑤ [MASTER VOLUME] dial | ⑤ [MASTER VOLUME] (マスターボリューム)ダイヤル |
| ⑥ [SONG VOLUME] slider | ⑥ [SONG VOLUME] (ソングボリューム)スライダー |
| ⑦ [ZONE CONTROL] sliders | ⑦ [ZONE CONTROL] (ゾーンコントロール)スライダー |
| ⑧ [MASTER] button | ⑧ [MASTER] (マスター)ボタン |
| ⑨ [MASTER EDIT] button | ⑨ [MASTER EDIT] (マスターエディット)ボタン |
| ⑩ [PERFORMANCE] button | ⑩ [PERFORMANCE] (パフォーマンス)ボタン |
| ⑪ [PERFORM.FILE] button | ⑪ [PERFORM.FILE] (パフォーマンスファイル)ボタン |
| ⑫ [TRANPOSE] button | ⑫ [TRANPOSE] (トランスポーズ)ボタン |
| ⑬ SONG SELECT [◀][▶] buttons | ⑬ SONG SELECT (ソングセレクト) [◀][▶] ボタン |
| ⑭ TRACK [1], [2], and [3-16] buttons | ⑭ TRACK (トラック) [1]、[2]、[3-16] ボタン |
| ⑮ SONG [REC] button | ⑮ SONG (ソング) [REC] (レコード) ボタン |
| ⑯ SONG [PLAY/PAUSE], [STOP] buttons | ⑯ SONG (ソング) [PLAY/PAUSE](プレイポーズ)、[STOP] (ストップ)ボタン |
| ⑰ [SONG FILE] button | ⑰ [SONG FILE] (ソングファイル)ボタン |
| ⑱ [SONG SETTING] button | ⑱ [SONG SETTING] (ソングセッティング)ボタン |
| ⑲ [MIDI OUT] button | ⑲ [MIDI OUT] (ミディアウト)ボタン |
| ⑳ [PANEL LOCK] button | ⑳ [PANEL LOCK] (パネルロック)ボタン |
| ㉑ TEMPO [UP]/[DOWN] buttons | ㉑ TEMPO (テンポ)[UP](アップ)/[DOWN](ダウン)ボタン |
| ㉒ A to D [-]/[+] buttons | ㉒ A to D [-]/[+] ボタン |
| ㉓ Display | ㉓ 画面 |

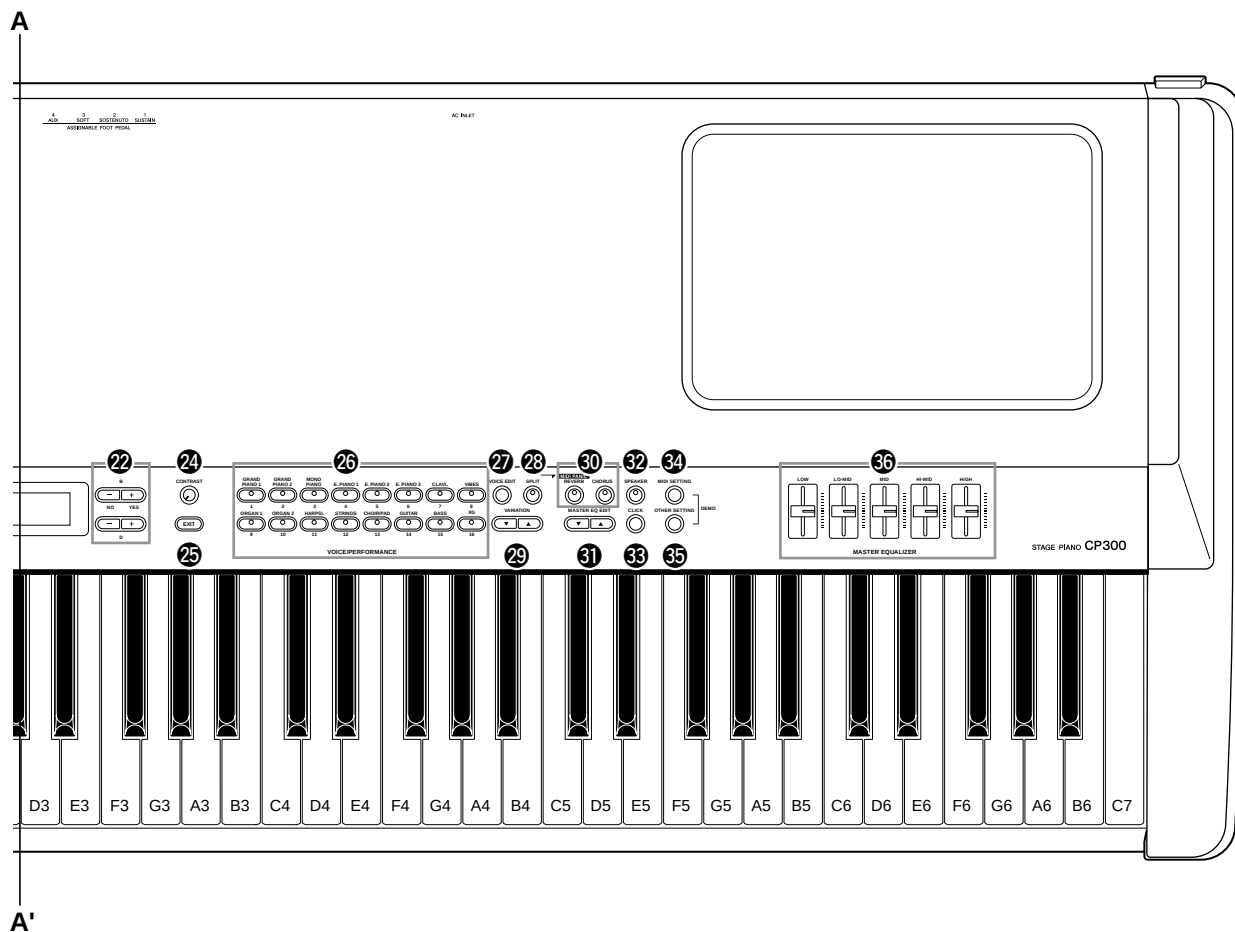

- | | |
|----------------------------------|---|
| 24 [CONTRAST] knob | 24 [CONTRAST] (コントラスト)つまみ |
| 25 [EXIT] button | 25 [EXIT] (エグジット)ボタン |
| 26 Voice group buttons | 26 ボイスグループボタン |
| 27 [VOICE EDIT] button | 27 [VOICE EDIT] (ボイスエディット)ボタン |
| 28 [SPLIT] button | 28 [SPLIT] (スプリット)ボタン |
| 29 VARIATION [▼][▲] buttons | 29 VARIATION (バリエーション)[▼][▲] ボタン |
| 30 [REVERB], [CHORUS] buttons | 30 [REVERB] (リバーブ)、[CHORUS] (コーラス)ボタン |
| 31 MASTER EQ EDIT [▼][▲] buttons | 31 MASTER EQ EDIT (マスターイコライザーエディット)[▼][▲] ボタン |
| 32 [SPEAKER] button | 32 [SPEAKER] (スピーカー)ボタン |
| 33 [CLICK] button | 33 [CLICK] (クリック)ボタン |
| 34 [MIDI SETTING] button | 34 [MIDI SETTING] (ミディセッティング)ボタン |
| 35 [OTHER SETTING] button | 35 [OTHER SETTING] (アザーセッティング)ボタン |
| 36 [MASTER EQUALIZER] sliders | 36 [MASTER EQUALIZER] (マスターイコライザー)スライダー |

Rear Panel(リアパネル)

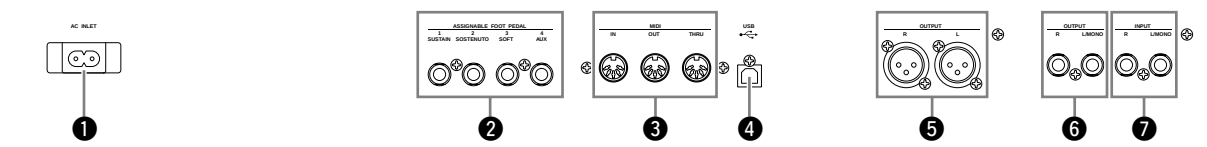

- ❶ [AC INLET] jack
- ❷ [ASSIGNABLE FOOT PEDAL] jacks
- ❸ MIDI [IN][OUT][THRU] connectors
- ❹ [USB] connector
- ❺ OUTPUT [L][R] jacks
- ❻ OUTPUT [L/MONO][R] jacks
- ❼ INPUT [L/MONO][R] jacks

- ❶ [AC INLET] (エーシーインレット)端子
- ❷ [ASSIGNABLE FOOT PEDAL] (アサイナブルフットペダル)端子
- ❸ MIDI (ミディ) [IN](イン)[OUT](アウト)[THRU](スルー)端子
- ❹ [USB] (ユーエスビー)端子
- ❺ OUTPUT (アウトプット) [L][R] 端子
- ❻ OUTPUT (アウトプット) [L/MONO][R] 端子
- ❼ INPUT (インプット) [L/MONO][R] 端子


■ DISASSEMBLY PROCEDURE (分解手順)

Caution:


1. Be sure to attach the removed filament tape just as it was before removal.
2. Pay attention not to insert and install the cable to the connector inversely. (Fig. A)

注意事項

1. フィラメントテープは、取り外す前と同じように取り付けてください。
2. フラットケーブルの表・裏を逆に差し込まないように注意して取り付けてください。(図A)

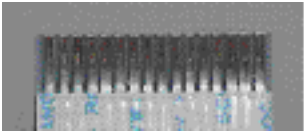

Front Side (Printed Side)
表面(印刷面)

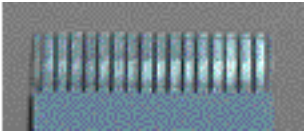

Back Side
裏面

Fig. A (図A)

1. Control Panel Unit


(Time required: About 2 minutes)

- 1-1 Remove the six (6) screws marked [240] located under the keybed. (Fig. 1)
- 1-2 Open the control panel unit with side covers by lifting the front of side covers. (Fig. 1-1)
- 1-3 Remove the two (2) screws marked [220A]. The control panel unit with side covers can then be removed from the keybed. (Fig. 2)

1. CPユニット (所要時間:約2分)

- 1-1 棚板下より、[240] のネジ6本を外します。(図1)
- 1-2 腕木の手前を持ち上げてCPユニットを開けます。(図1-1)
- 1-3 [220A]のネジ2本を外し、棚板からCPユニット(腕木と一緒に)を外します。(図2)

<Bottom view> (底面)

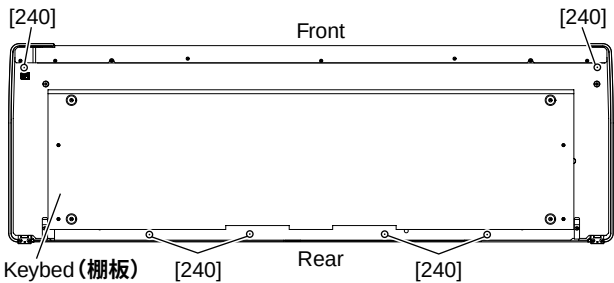

[240]: Pan Head Screw (尖り先+PAN) 5.0X25 MFZN2B3 PW (WE984200)

Fig. 1 (図1)


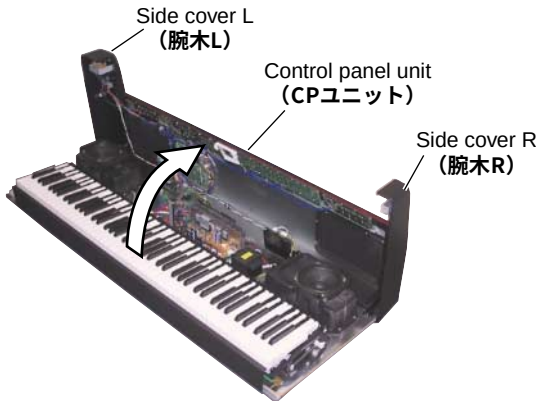


Fig. 1-1 (図1-1)

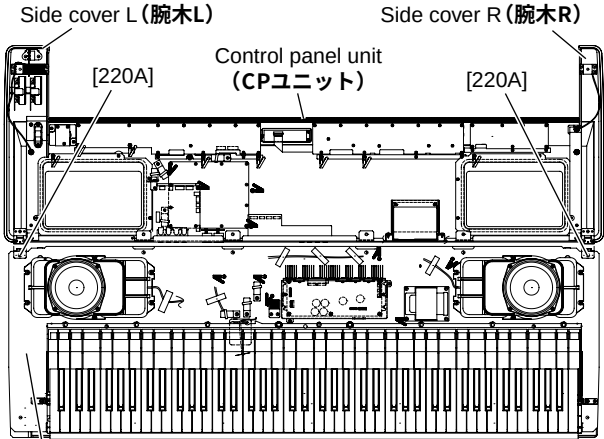

Keybed (棚板)

[220A]: Bind Head Screw (小ネジ+BIND) 4.0X14 MFZN2W3 (WE968700)

Fig. 2 (図2)

2. Circuit Boards & Assemblies

(Time required: About 4~5 minutes each)

- 2-1 Remove the control panel unit. (See procedure 1)
 2-2 Each circuit board and assembly can be removed by removing its fixing screws as listed below.

2. 基板とアッセンブリ

(所要時間:各約4~5分)

- 2-1 CPユニットを外します。(1項参照)
 2-2 次のネジを外すことにより、基板・アッセンブリを外すことができます。

< Main Unit / メインユニット部 >

Circuit board and Assembly	Ref. No.	Screw	QTY	Fig.
MA Cover (U model only)	170A	Bind Head Tapping Screw-1 (TP#1+BIND) 3.5X12 MFZN2W3 (WE970900)	2	3
MA80S Assembly	170B	Bind Head Tapping Screw-1 (TP#1+BIND) 3.5X12 MFZN2W3 (WE970900)	2	3
Power Transformer (U model) (電源トランス)	220B	Bind Head Screw (小ネジ+BIND) 4.0X14 MFZN2W3 (WE968700)	4	3
	330	Flat Washer (平座みがき丸) 4.0X12X1.0 MFZN2W3 (WF578800)	4	3
Power Transformer (J,E,B,A,K models)(電源トランス)	220B	Bind Head Screw (小ネジ+BIND) 4.0X14 MFZN2W3 (WE968700)	4	3
Speaker Box Assembly L (SP. Box Ass'y L)	180A	Cup Head Screw (小ネジ+CUP) 4.0X18 MFZN2W3 (WE995400)	6	3
Speaker Box Assembly R (SP. Box Ass'y R)	180B	Cup Head Screw (小ネジ+CUP) 4.0X18 MFZN2W3 (WE995400)	6	3

< Control Panel Unit / CPユニット部 >

Circuit board and Assembly	Ref. No.	Screw	QTY	Fig.
Side Cover L (腕木 L)	740A	PW Head Tapping Screw-B (Bタイト+PWH) 3.0X12 MFZN2W3 (WF002100)	4	4
Side Cover R (腕木 R)	740B	PW Head Tapping Screw-B (Bタイト+PWH) 3.0X12 MFZN2W3 (WF002100)	4	4
Wheel Assembly (PITCH)	300A	Bind Head Tapping Screw-B (Bタイト+BIND) 3.0X8 MFZN2B3 (WE774400)	2	4
Wheel Assembly (MODULATION)	300B	Bind Head Tapping Screw-B (Bタイト+BIND) 3.0X8 MFZN2B3 (WE774400)	2	4
MV2	520	Bind Head Tapping Screw-B (Bタイト+BIND) 3.0X8 MFZN2B3 (WE774400)	3	4
	—	Volume Knob (Vツマミ) (VU432400)	1	4-1
LCD	120	Bind Head Tapping Screw-B (Bタイト+BIND) 2.6X10 MFZN2W3 SP (WG719800)	3	4
PNL *1	510A	Bind Head Tapping Screw-B (Bタイト+BIND) 3.0X6 MFZN2W3 (WE936300)	14	4
	—	Slide Knob (スライドツマミ) (VN133200)	5	4-1
PNR *1	510B	Bind Head Tapping Screw-B (Bタイト+BIND) 3.0X6 MFZN2W3 (WE936300)	16	4
PN-EQ *1	510C	Bind Head Tapping Screw-B (Bタイト+BIND) 3.0X6 MFZN2W3 (WE936300)	7	4
	—	Slide Knob (スライドツマミ) (VN133200)	5	4-2
Speaker Grille Assembly L (SPグリルAss'y L)	510D	Bind Head Tapping Screw-B (Bタイト+BIND) 3.0X6 MFZN2W3 (WE936300)	5	4
Speaker Grille Assembly R (SPグリルAss'y R)	510E	Bind Head Tapping Screw-B (Bタイト+BIND) 3.0X6 MFZN2W3 (WE936300)	5	4
A-JACK Assembly *1 (AジャックAss'y)	250A	Bind Head Tapping Screw-B (Bタイト+BIND) 3.0X6 MFZN2W3 (WE936300)	2	4
	300C	Bind Head Tapping Screw-B (Bタイト+BIND) 3.0X8 MFZN2B3 (WE774400)	2	5
XLR	300D	Bind Head Tapping Screw-B (Bタイト+BIND) 3.0X8 MFZN2B3 (WE774400)	4	5
DJACK *1	300E	Bind Head Tapping Screw-B (Bタイト+BIND) 3.0X8 MFZN2B3 (WE774400)	4	5
	280	Bind Head Screw (小ネジ+BIND) 3.0X5 MFZN2B3 (WE961800)	1	5
FU60 Assembly with FU cover (U model only)	250B	Bind Head Tapping Screw-B (Bタイト+BIND) 3.0X6 MFZN2W3 (WE936300)	4	4-3
FU60 Assembly (J,E,B,K,A models)	250B	Bind Head Tapping Screw-B (Bタイト+BIND) 3.0X6 MFZN2W3 (WE936300)	4	4-3

*1 When mounting the PNR, PNL, PN-EQ, DJACK circuit boards and A-JACK assembly, always start by tightening screws ①, ② in sequence.

*1 PNR, PNL, PN-EQ, DJACKシート, AジャックAss'yを取り付ける際、まず最初に①、②のネジを順に締めます。

● Main Unit (メインユニット)

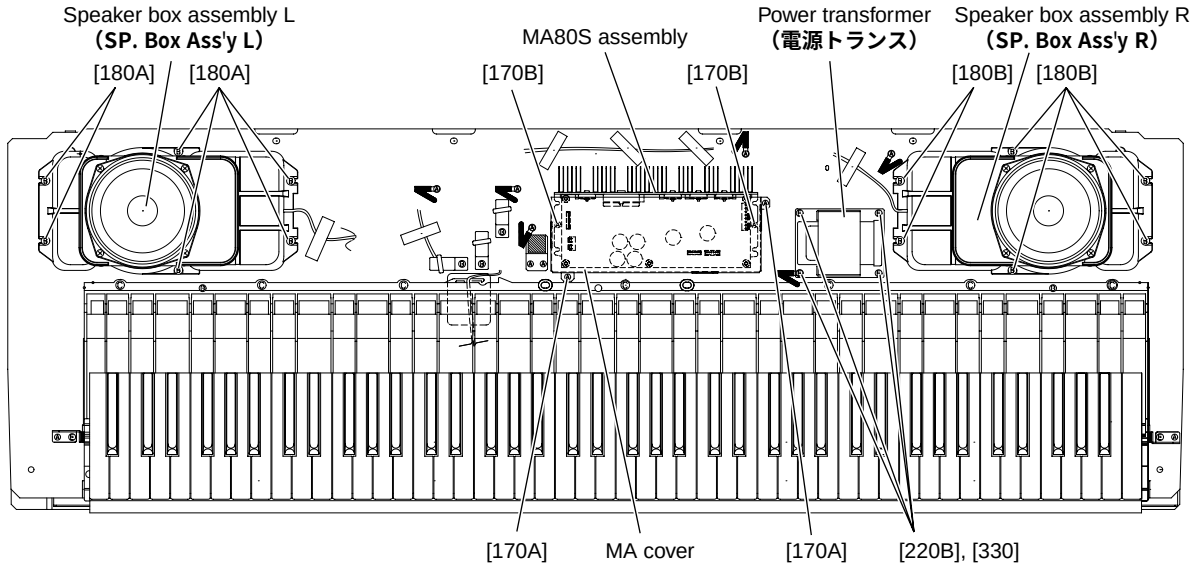


Fig. 3 (図3)

● Control Panel Unit (CPユニット)

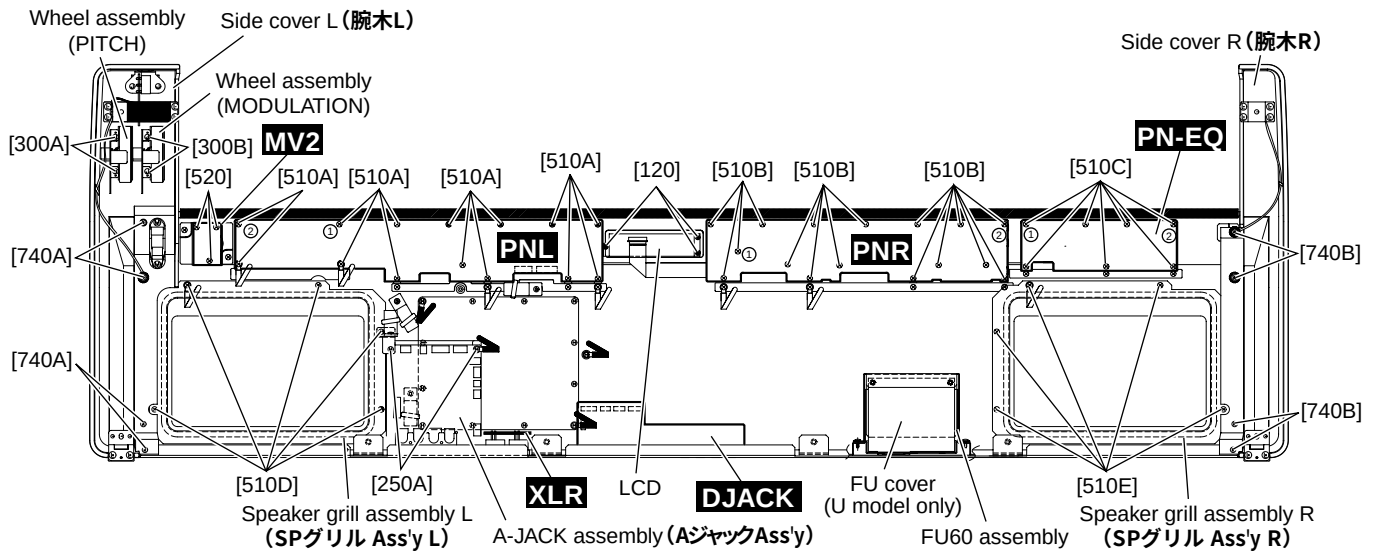


Fig. 4 (図4)

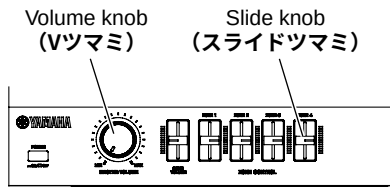


Fig. 4-1 (図4-1)

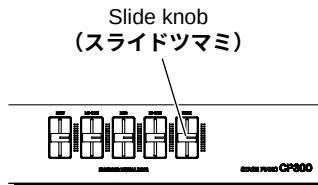


Fig. 4-2 (図4-2)

● FU60 Assembly

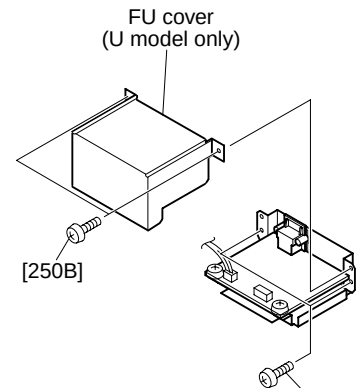


Fig. 4-3 (図4-3)

<Rear view>(背面)

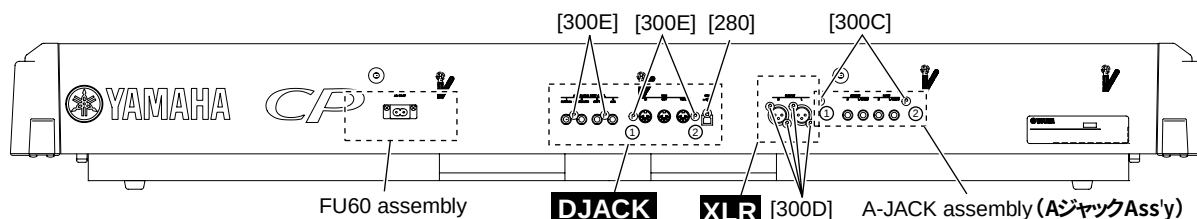


Fig. 5 (図5)

3. AJACK Circuit Board

(Time required: About 5 minutes)


- 3-1 Remove the control panel unit. (See procedure 1)
- 3-2 Remove the A-JACK assembly. (See procedure 2)
- 3-3 Remove the two (2) screws marked [80c]. The AJACK circuit board can then be removed from the jack angle-A. (Fig. 6)

* When mounting the AJACK circuit board, always start by tightening screws ①, ② in sequence.

4. FU60 Circuit Board

(Time required: About 5 minutes)

- 4-1 Remove the control panel unit. (See procedure 1)
- 4-2 Remove the FU60 assembly. (See procedure 2)
- 4-3 Remove the two (2) screws marked [F1] and the two (2) screws marked [F6]. The FU60 circuit board can then be removed. (Fig. 7)

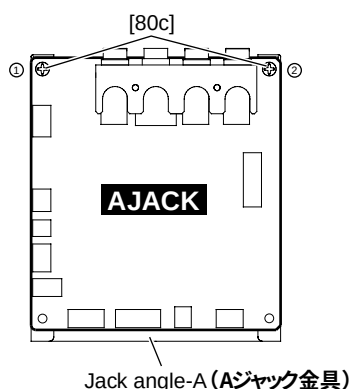● A-JACK Assembly (AジャックAss'y)

[80c]: Bind Head Tapping Screw-B (Bタイト+BIND)
3.0X6 MFZN2W3 (WE936300)


Fig. 6 (図6)

3. AJACKシート (所要時間:約5分)

- 3-1 CPユニットを外します。(1項参照)
 - 3-2 AジャックAss'yを外します。(2項参照)
 - 3-3 [80c]のネジ2本を外し、AJACKシートをAジャック金具から外します。(図6)
- ※ AJACKシートを取り付ける際、まず最初に①、②のネジを順に締めます。

4. FU60シート (所要時間:約5分)

- 4-1 CPユニットを外します。(1項参照)
- 4-2 FU60 Ass'yを外します。(2項参照)
- 4-3 [F1]のネジ2本と[F6]のネジ2本を外し、FU60シートを外します。(図7)

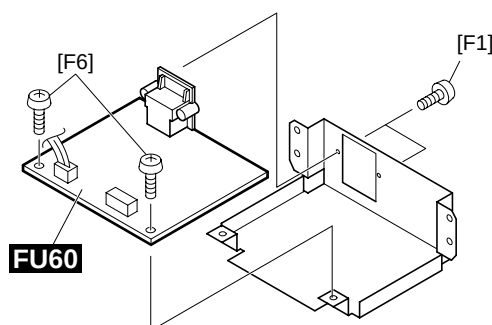● FU60 Assembly (FU60 Ass'y)

[F1]: Bind Head Tapping Screw-B (Bタイト+BIND)
3.0X8 MFZN2B3 (WE774400)

[F6]: Bind Head Tapping Screw-B (Bタイト+BIND)
3.0X12 MFZN2W3 (WE987400)

Fig. 7 (図7)

5. DM Assembly, WML Circuit Board, WMH Circuit Board (Time required: About 7 minutes)

- 5-1 Remove the control panel unit. (See procedure 1)
- 5-2 Remove the A-JACK assembly. (See procedure 2)
- 5-3 Remove the twelve (12) screws marked [250C]. The DM assembly can then be removed. (Fig. 8)


5. DM Ass'y, WHLシート、WMHシート (所要時間:約7分)

- 5-1 CPユニットを外します。(1項参照)
- 5-2 AジャックAss'yを外します。(2項参照)
- 5-3 [250C]のネジ12本を外し、DM Ass'yを外します。(図8)

- 5-4 Remove the screw marked [D2A]. The WMH circuit board can then be removed by pulling it out from the connector. (Fig. 8)
- 5-5 Remove the screw marked [D2B]. The WML circuit board can then be removed by pulling it out from the connector. (Fig. 8)

* **DM circuit board has internal DIP switch for switching the display in Japanese or in English (SW1).**

● DM Assembly (DM Ass'y)

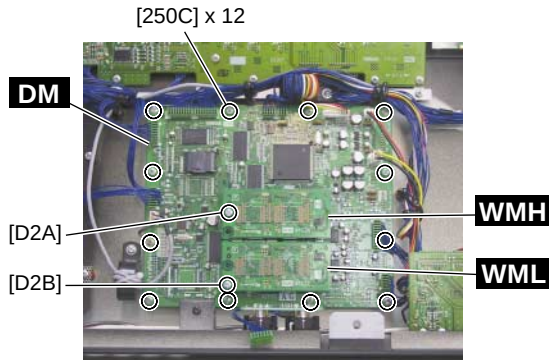


- [250C]: Bind Head Tapping Screw-B (Bタイト+BIND)
3.0X6 MFZN2W3 (WE936300)
- [D2A], [D2B]: Bind Head Screw (小ネジ+BIND)
3.0X6 MFZN2W3 (WE774000)

Fig. 8 (図8)

- 5-4 [D2A]のネジ1本を外し、コネクタを外してWMHシートを外します。(図8)
- 5-5 [D2B]のネジ1本を外し、コネクタを外してWMLシートを外します。(図8)
- ※ DMシート内には、日本語と英語の表示切替え用(SW1)のディップスイッチがあります。

● DIP Switch (ディップスイッチ)

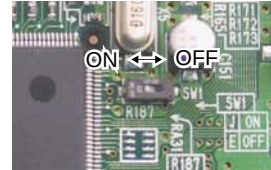

	OFF	ON
SW1	English (U,E,B,A,K models)	Japanese (J model)

6. MA80S Circuit Board


(Time required: About 5 minutes)

- 6-1 Remove the control panel unit. (See procedure 1)
- 6-2 Remove the MA cover. (See procedure 2) (U model only)
- 6-3 Remove the MA80S assembly. (See procedure 2)
- 6-4 Remove the five (5) screws marked [1], the three (3) screws marked [2] and the screw marked [3]. The MA80S circuit board can then be removed. (Fig. 9)

6. MA80Sシート (所要時間:約5分)

- 6-1 CPユニットを外します。(1項参照)
- 6-2 MAカバーを外します。(2項参照)(Uモデルのみ)
- 6-3 MA80S Ass'yを外します。(2項参照)
- 6-4 [1]のネジ5本と[2]のネジ3本と[3]のネジ1本を外し、MA80Sシートを外します。(図9)

● MA80S Assembly (MA80S Ass'y)

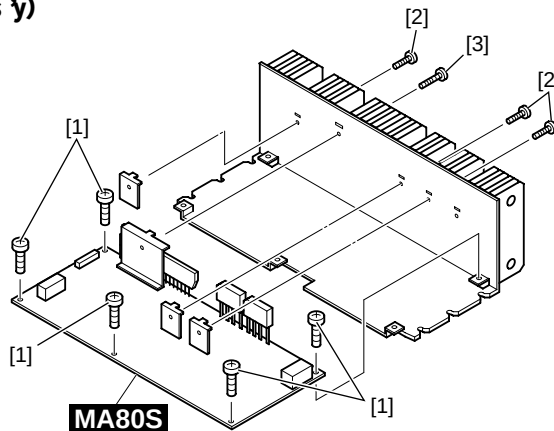

- [1]: Bind Head Tapping Screw-B (Bタイト+BIND) 4.0X8 MFZN2W3 (WE974600)
- [2]: Bind Head Tapping Screw-B (Bタイト+BIND) 3.0X10 MFZN2W3 (WE774200)
- [3]: Bind Head Tapping Screw-B (Bタイト+BIND) 3.0X16 MFZN2W3 (WE973400)

Fig. 9 (図9)

7. Speakers

(Time required: About 5 minutes)


- 7-1 Remove the control panel unit. (See procedure 1)
- 7-2 Remove the speaker box assembly L or R.
(See procedure 2)
- 7-3 Remove the four (4) screws marked [40]. The speaker can then be removed. (Fig. 10)

* *The left and right speaker each can then be removed in the same manner.*

7. スピーカ (所要時間:約5分)

- 7-1 CPユニットを外します。(1項参照)
- 7-2 SP. Box Ass'y LまたはRを外します。(2項参照)
- 7-3 [40]のネジ4本を外し、スピーカを外します。(図10)
- ※ 左右のスピーカは、それぞれ同じ方法で外すことができます。

● Speaker Box Assembly (SP. Box Ass'y)

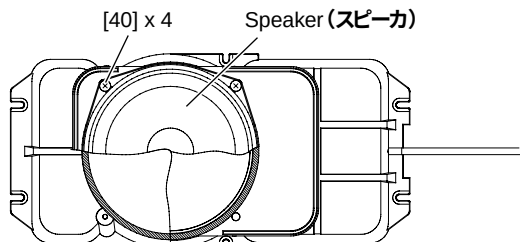

[40]: Bind Head Tapping Screw-P (Pタイト+バインド) 4.0X30 MFZN2W3 (WG284700)



Fig. 10 (図10)

8. Headphones Jack Assembly, HP Circuit Board (Time required: About 6 minutes)

- 8-1 Remove the control panel unit. (See procedure 1)
- 8-2 Remove the four (4) screws marked [750] and the two (2) screws marked [250D]. The side cover holder L can then be removed. (Fig. 11)
- 8-3 Remove the two (2) screws marked [300F]. The headphones jack assembly can then be removed. (Fig. 11)
- 8-4 Remove the hexagonal nut marked [660b]. The HP circuit board can then be removed from the headphones jack holder. (Fig. 11-1)

8. H.P. Ass'y, HPシート (所要時間:約6分)

- 8-1 CPユニットを外します。(1項参照)
- 8-2 [750]のネジ4本と[250D]のネジ2本を外し、取付金具Lを外します。(図11)
- 8-3 [300F]のネジ2本を外し、H.P. Ass'yを外します。(図11)
- 8-4 [660b]のナット特殊を外し、H.P.取付金具からHPシートを外します。(図11-1)

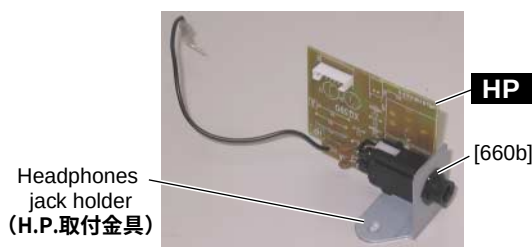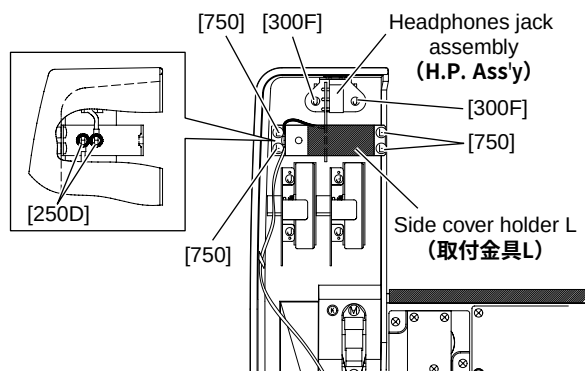

[660b]: Hexagonal nut (ナット特殊) M12X14X2 P=1.0 (WF559900)

Fig. 11-1 (図11-1)

[250D]: Bind Head Tapping Screw-B (Bタイト+BIND) 3.0X6 MFZN2W3 (WE936300)

[300F]: Bind Head Tapping Screw-B (Bタイト+BIND) 3.0X8 MFZN2B3 (WE774400)

[750]: Bind Head Tapping Screw-B (Bタイト+BIND) 4.0X12 MFZN2B3 (WE998600)

Fig. 11 (図11)


9. Power Switch Assembly

(Time required: About 5 minutes)

- 9-1 Remove the control panel unit. (See procedure 1)
- 9-2 Remove the side cover L. (See procedure 2)
- 9-3 Remove the two (2) screws marked [610d]. The power switch assembly (with push switch) can then be removed. (Fig. 12)

9. PSW束線(電源スイッチ付) (所要時間:約5分)

- 9-1 CPユニットを外します。(1項参照)
- 9-2 腕木Lを外します。(2項参照)
- 9-3 [610d]のネジ2本を外し、PSW束線(電源スイッチ付)を外します。(図12)

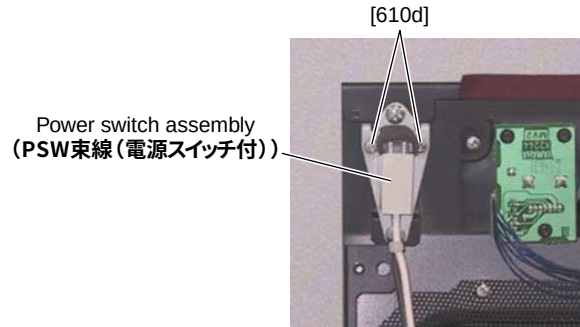

[610d]: Bind Head Tapping Screw-C (Cタイト+BIND) 3.0X6 MFZN2W3 (WE974100)

Fig. 12 (図12)

10. Front Rail Assembly

(Time required: About 6 minutes)


- 10-1 Remove the control panel unit. (See procedure 1)
- 10-2 Remove the eight (8) screws marked [230] under the keyboard. The front rail assembly with the keyboard holder assembly can then be removed. (Fig. 13)
- 10-3 Remove the three (3) screws marked [250E]. The keyboard holder assembly can then be removed from the front rail assembly. (Fig. 13-1)

* **When mounting the front rail assembly with the keyboard holder assembly, always start by tightening screws ①, ② in sequence. (Fig. 13)**

10. 口金Ass'y (所要時間:約6分)

- 10-1 CPユニットを外します。(1項参照)
- 10-2 棚板下側から、[230]のネジ8本を外し、鍵盤前金具Ass'yと一緒に口金Ass'yを外します。(図13)
- 10-3 [250E]のネジ3本を外し、口金Ass'yから鍵盤前金具Ass'yを外します。(図13-1)
- ※ 口金Ass'y(鍵盤前金具Ass'y付)を取り付ける際、まず最初に①、②のネジを順に締めます。(図13)


<Bottom view> (底面)

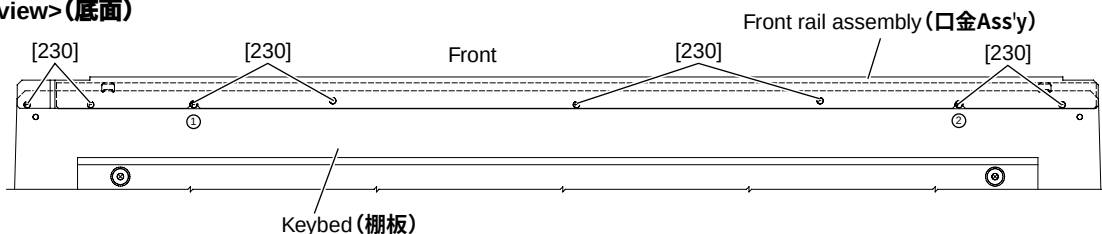

[230]: Bind Head Tapping Screw-1 (TP#1+BIND) 3.5X14 MFZN2B3 (WE971000)

Fig. 13 (図13)

<Side view> (側面)

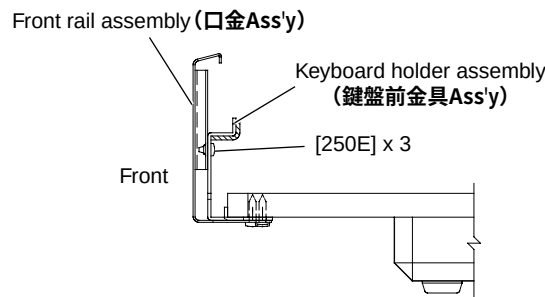


[250E]: Bind Head Tapping Screw-B (Bタイト+BIND) 3.0X6 MFZN2W3 (WE936300)

Fig. 13-1 (図13-1)

11. Keyboard Assembly

(Time required: About 5 minutes)

- 11-1 Remove the control panel unit. (See procedure 1)
- 11-2 After removing the screw marked [170C] and the screw marked [220C], remove either right or left keyboard siderail assembly. (Fig. 14)
- 11-3 Remove the seven (7) screws marked [200] and the three (3) screws marked [210]. The keyboard assembly can then be removed. (Fig. 14)

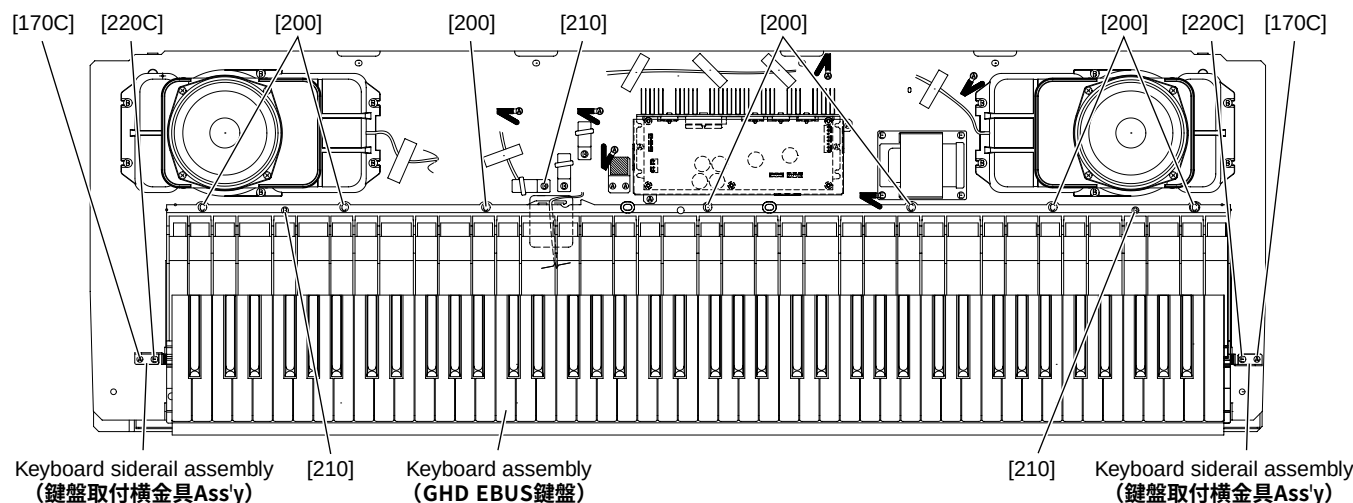

- [170C]: Bind Head Tapping Screw-1 (TP#1+BIND) 3.5X12 MFZN2W3 (WE970900)
 [200]: Pan Head Screw (小ネジ+PAN) 5.0X25 MFZN2W3 SW (WF001500)
 [210]: Bind Head Tapping Screw-1 (TP#1+BIND) 4.0X14 MFZN2W3 (WE971900)
 [220C]: Bind Head Screw (小ネジ+BIND) 4.0X14 MFZN2W3 (WE968700)

Fig. 14 (図14)

12. Disassembling the Keyboard

- * After inserting a round stick (Rod: TX000670) between the frame and the keys, remove the circuit boards. (Fig. 15)

12. GHD EBUS鍵盤の分解

- ※ シートははずす前に、接点ゴムを歪ませないように、フレームとハンマーの間に丸棒(ロッド:TX000670)を挿入しておきます。(図15)

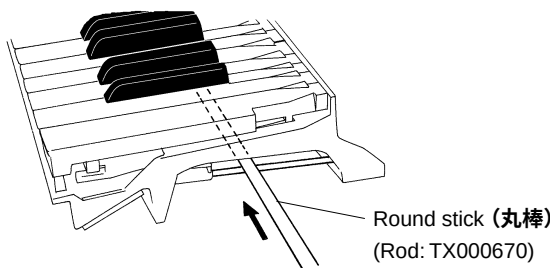


Fig. 15 (図15)

12-1 GHD EBUS L, MK SUB Circuit Board

(Time required: About 7 minutes)

Remove the seven (7) screws marked [260A]. The GHD EBUS L and MK SUB circuit boards can then be removed. (Fig. 16, 16-1)

12-2 GHD M Circuit Board

(Time required: About 7 minutes)

Remove the five (5) screws marked [260B] and the screw marked [262]. The GHD M circuit board can then be removed. (Fig. 16)

12-1 GHD EBUS L, MK SUBシート(所要時間:約7分)

[260A]のネジ7本を外し、GHD EBUS L, MK SUBシートを外します。(図16、16-1)

12-2 GHD Mシート(所要時間:約7分)

[260B]のネジ5本と[262]のネジ1本を外し、GHD Mシートを外します。(図16)

12-3 GHD H Circuit Board

(Time required: About 7 minutes)

Remove the four (4) screws marked [260C] and the screw marked [262]. The GHD H circuit board can then be removed. (Fig. 16)

* *Keys can be removed without removing the circuit boards.*


* *After removing the GHD EBUS L, GHD M and GHD H circuit boards, and the rubbers can then be removed.*

12-3 GHD Hシート(所要時間:約7分)

[260C]のネジ4本と[262]のネジ1本を外し、GHD Hシートを外します。(図16)

※ 白鍵と黒鍵は、GHD EBUS Lシート、GHD Mシート、GHD Hシートを外さなくても、外すことができます。

※ GHD EBUS Lシート、GHD Mシート、GHD Hシートを外すと、接点ゴムを外すことができます。

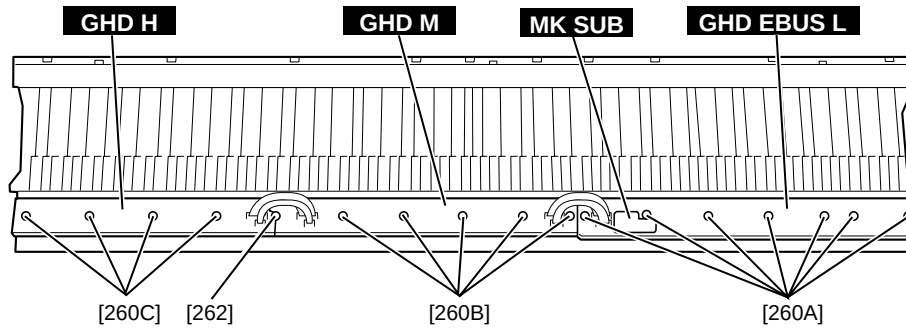

[260]: Bind Head Tapping Screw-P (Pタイト+BIND) 3.0x10 MFZN2W3 (WF001000)

[262]: PW Head Tapping Screw-P (Pタイト+PWH) 3.0x10-10 ZMC2W3 (WF765500)

Fig. 16 (図16)

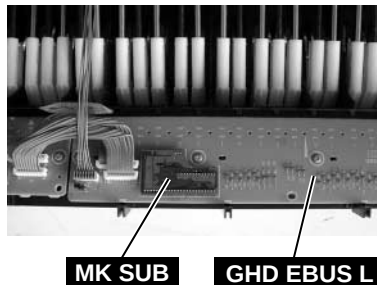


Fig. 16-1 (図16-1)

12-4 Rubber contact

Remove the GHD circuit board for the involved key. The rubber contacts can then be removed. (Fig. 17, 18)

12-4 接点ゴム

該当する鍵盤のGHDシートを外して、接点ゴムを外します。(図17、18)

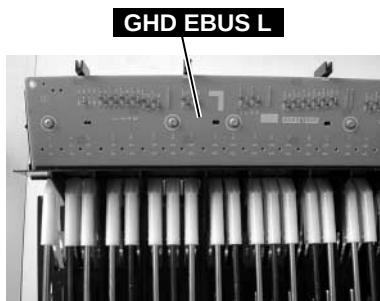


Fig. 17 (図17)

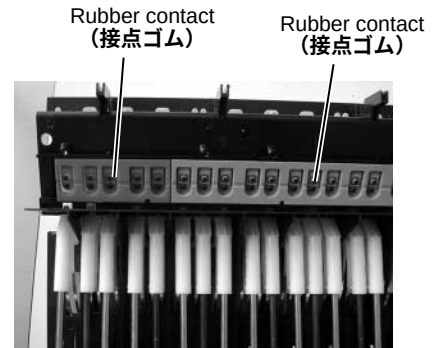


Fig. 18 (図18)

12-5 White key

In order to release the white key from the stopper, insert a thin plate between the white keys (gap in the direction indicated by the triangle mark, near the fulcrum of the key), press down the stopper marked [A] and move the white key forward. Then the white key being released from the stopper lifts up. (Fig. 19, 20)

* **Use special care not to move the white key forward so much as to cause damage to the key spring.**

12-6 In this state, move the white key rearward a little. Then the white key can be removed. (Fig. 20)

12-7 Black key

The black key can be removed after the white keys on either side have been removed.

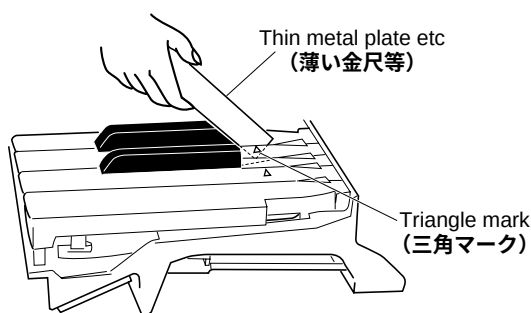


Fig. 19 (図19)

12-8 Hammer, White Key

After a key has been removed, push a key spring down once to take it out of the hook. (Fig. 21)

Place the keyboard assembly upside-down and peel the stopper away. The hammer of the white key can then be removed. (Fig. 22)

* **The hammer of the black key can then be removed in the same manner.**

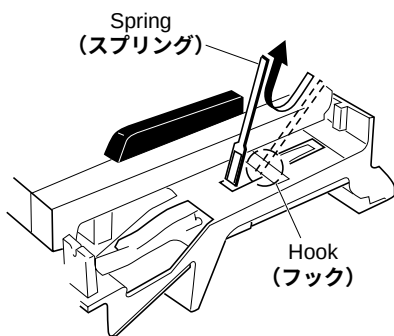


Fig. 21 (図21)

12-5 白鍵

白鍵をストッパーから外すために、薄い金尺状のものを鍵盤の間に挿入して(三角マークの示す方向側の隙:白鍵盤支点付近)、[A]のストッパーを下げ、白鍵を前方にずらします。外れると白鍵が浮きます。(図19, 20)

※ このとき、白鍵を前方にずらしすぎてスプリングを傷めないように十分注意して作業をしてください。

12-6 この状態から、白鍵を後方に少しずらし、白鍵を外します。(図20)

12-7 黒鍵

黒鍵は、両隣の白鍵を外すと、外すことができます。

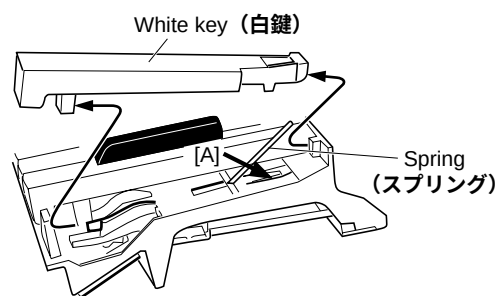


Fig. 20 (図20)

12-8 ハンマー白鍵

白鍵を外し、スプリングを一度下に押し込み、フックから取り外します。(図21)

鍵盤を裏側にし、ストッパー(L88_W)をはがしてハンマー白鍵を外します。(図22)

※ ハンマー黒鍵もハンマー白鍵と同じようにして外すことができます。

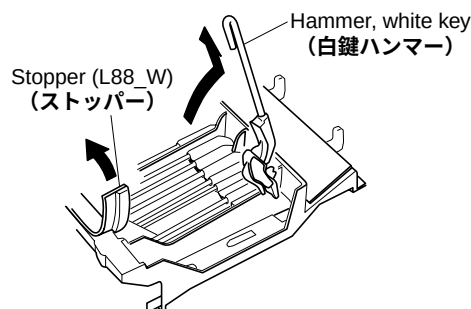


Fig. 22 (図22)

13. Assembling the Keyboard

13-1 Hammer, White Key (Hammer, Black Key)

Place the keyboard assembly upside-down, insert a hammer assembly into the frame, and put the stopper (L88_W) on. (Fig. 23)

* **There are four (4) kinds of hammers that differ in weight.**

13. GHD EBUS鍵盤の組立

13-1 ハンマー白鍵(ハンマー黒鍵)

GHD EBUS鍵盤の裏側より、ハンマー白鍵(黒鍵)をフレームに差し込み、ストッパー(L88_W)を取り付けます。(図23)

※ 重りの違いにより四種類のハンマーがあります。取り付けの際に気をつけてください。

13-2 Spring

Place the keyboard assembly right side up. Fix key springs on the frame by setting one at each slit and pushing down once on each key spring. (Fig. 24)

- * **Be careful of the direction of the spring. It should be installed with its projecting end facing upward.** (Fig. 24-1)

13-3 Assembling the White Key (Black Key)

After a key has been fit to part [C] and key guide, make sure that the spring is fixed to the key and then press down part [B] of the key. (Fig. 25)

13-4 GHD EBUS L, MK SUB Circuit Board

Tighten the seven (7) screws marked [260A] to fix the GHD EBUS L, MK SUB circuit boards. (Fig. 16)

13-5 GHD M Circuit Board

Tighten the five (5) screws marked [260B] and the screw marked [262] to fix the GHD M circuit board. (Fig. 16)

13-6 GHD H Circuit Board

Tighten the four (4) screws marked [260C] and the screw marked [262] to fix the GHD H circuit board. (Fig. 16)

- * **When installing the circuit boards, set it under hooks to align the triangle marks of the circuit board and projection parts of the frame as shown in figure 26.**

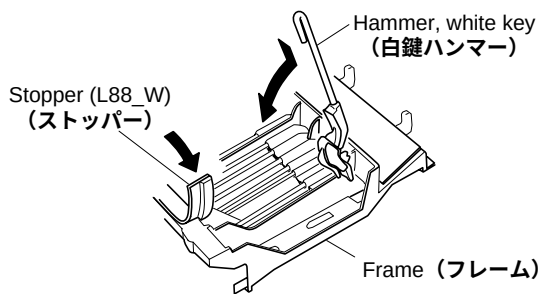


Fig. 23 (図23)

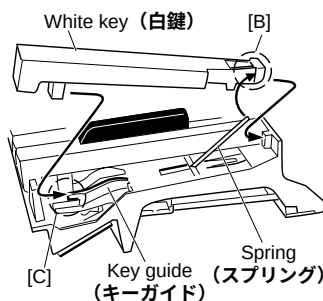


Fig. 25 (図25)

13-2 スプリング

GHD EBUS鍵盤を表側にして、端が二本に分かれているスプリングの先をハンマー白鍵(黒鍵)の切り込みに合わせて、一度下に押し込んでフレームのフックに取り付けます。(図24)

- ※ スプリングの向きに注意してください。スプリングは、図24-1のように上側が凸になるように取り付けます。

13-3 白鍵(黒鍵)組立

[C]部とキーガイドに白鍵(黒鍵)を加えさせ、鍵盤の支点内側のばね受け部に、スプリングが確実に入っていることを確認したら、[B]部の上を下方方向にゆっくり押し込んで取り付けます。(図25)

13-4 GHD EBUS L, MK SUBシート

GHD EBUS LシートとMK SUBシートを取り付け、[260A]のネジ7本を取り付けます。(図16)

13-5 GHD Mシート

GHD Mシートを取り付け、[260B]のネジ5本と[262]のネジ1本を取り付けます。(図16)

13-6 GHD Hシート

GHD Hシートを取り付け、[260C]のネジ4本と[262]のネジ1本を取り付けます。(図16)

- ※ GHD M/GHD EBUS Lシートを取り付ける際は、フレーム裏側にあるフック位置と基板の△マークが一致していることを確認してください。(図26)

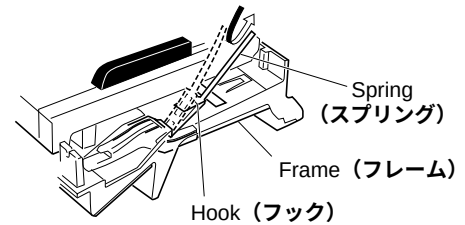


Fig. 24 (図24)

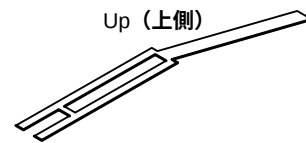


Fig. 24-1 (図24-1)

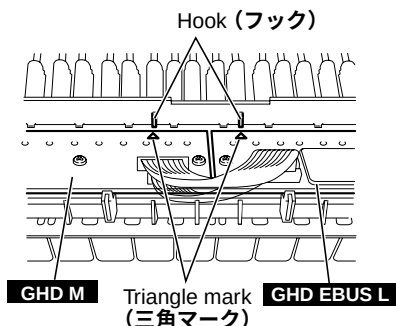


Fig. 26 (図26)

■ LSI PIN DESCRIPTION (LSI 端子機能表)

AK4393VF-E2 (XW029A00) DAC (Digital to Analog Converter)	22
HD6417709SHF200B (X2687A00) CPU (SH3)	19
HD6417709SHF200BV (X2687B00) CPU (SH3)	19
M66291GP (X2156A00) USB Controller	22
PCM1730E-1/2K (X2077A00) DAC (Digital to Analog Converter)	22
T8F02TB-0102 (X0060A00) SWP50 (Tone Generator)	20
μPD780031AYGK-N01 (XZ916100) E-PNS2a (LED/Switch Driver)	18
μPD780031AYGK-N05 (XZ916200) E-PNS2a (LED/Switch Driver)	18
μPD780031AYGK-N04 (X0031200) LKS	18

- μPD780031AYGK-N04 (X0031200) LKS
- μPD780031AYGK-N01 (XZ916100) E-PNS2a (LED/Switch Driver)
- μPD780031AYGK-N05 (XZ916200) E-PNS2a (LED/Switch Driver)

MK SUB: IC001
PN-EQ: IC010
PN-EQ: IC010, PNL: IC10

PIN NO.	NAME	I/O	FUNCTION	PIN NO.	NAME	I/O	FUNCTION
1	P50/A8	I/O	Port 5 / Higher address bus	33	P10/ANIO	I	Port 1 / A/D converter analog input
2	P51/A9	I/O		34	AV _{REF}	I	A/D converter reference voltage input
3	P52/A10	I/O		35	AV _{DD}	-	Analog power supply
4	P53/A11	I/O		36	RESET	I	System reset input
5	P54/A12	I/O		37	XT2	-	Subsystem clock oscillation
6	P55/A13	I/O		38	XT1	I	
7	P56/A14	I/O		39	IC	-	Internally connected
8	P57/A15	I/O		40	X2	-	Main system clock oscillation
9	V _{SS0}	-	Ground	41	X1	I	
10	V _{DD0}	-	Power supply	42	V _{SS1}	-	Ground
11	P30	I/O	Port 3	43	P00/INTP0	I/O	Port 0 / External interrupt request input
12	P31	I/O		44	P01/INTP1	I/O	
13	P32/SDA0	I/O	Port 3 / Serial data input/output	45	P02/INTP2	I/O	Port 0 / External interrupt request input / Trigger signal input
14	P33/SCL0	I/O	Port 3 / Serial clock input/output	46	P03/INTP3/ADTRG	I/O	
15	P34	I/O	Port 3	47	P70/TI00/TO0	I/O	Port 7 / External count clock input / 16-bit timer/event counter 0 output
16	P35	I/O		48	P71/TI01	I/O	Port 7 / Capture trigger input
17	P36	I/O		49	P72/TI50/TO50	I/O	Port 7 / External count clock input / 8-bit timer/event counter 50 output
18	P20/SI30	I/O	Port 2 / Serial data input	50	P73/TI51/TO51	I/O	Port 7 / External count clock input / 8-bit timer/event counter 51 output
19	P21/SO30	I/O	Port 2 / Serial data output	51	P74/PCL	I/O	Port 7 / Clock output
20	P22/SCK30	I/O	Port 2 / Serial clock input/output	52	P75/BUZ	I/O	Port 7 / Buzzer output
21	P23RxD0	I/O	Port 2 / Serial data input	53	P64/RD	I/O	Port 6 / Strobe signal output for reading
22	P24/TxD0	I/O	Port 2 / Serial data output	54	P65/WR	I/O	Port 6 / Strobe signal output for writing
23	P25/ASCK0	I/O	Port 2 / Serial clock input/output	55	P66/WAIT	I/O	Port 6 / Wait insertion
24	V _{DD1}	-	Power supply	56	P67/ASTB	I/O	Port 6 / Strobe output
25	AV _{SS}	-	Ground	57	P40/AD0	I/O	Port 4 / Lower address/data bus
26	P17/ANI7	I	Port 1 / A/D converter analog input	58	P41/AD1	I/O	
27	P16/ANI6	I		59	P42/AD2	I/O	
28	P15/ANI5	I		60	P43/AD3	I/O	
29	P14/ANI4	I		61	P44/AD4	I/O	
30	P13/ANI3	I		62	P45/AD5	I/O	
31	P12/ANI2	I		63	P46/AD6	I/O	
32	P11/ANI1	I		64	A47/AD7	I/O	

- HD6417709SHF200B (X2687A00) CPU (SH3)
- HD6417709SHF200BV (X2687B00) CPU (SH3)

DM: IC014

PIN NO.	NAME	I/O	FUNCTION	PIN NO.	NAME	I/O	FUNCTION
1	MD1	I	Mode control	105	CKE/PTK5	I/O	CK enable / Port K
2	MD2	I		106	RAS3L/PTJ0	I/O	DRAM row address strobe / Port J
3	Vcc(RTC)	-		107	RAS2L/PTJ1	I/O	DRAM row address strobe / Port J
4	XTAL2	O	Crystal oscillator	108	CASLL/PTJ2	I/O	Column address strobe (low) / Port J
5	EXTAL2	I		109	VssQ	-	Ground
6	Vss(RTC)	-		110	CASLH/PTJ3	I/O	Column address strobe (high) / Port J
7	NMI	I	Non-maskable interrupt request	111	VccQ	-	Power supply +3.3
8	IRQ0/IRLO/PTH0	I	Interrupt request / Port H	112	CASHL/PTJ4	I/O	HL Column address strobe / Port J
9	IRQ1/IRL1/PTH1	I		113	CASHH/PTJ5	I/O	HH Column address strobe / Port J
10	IRQ2/IRL2/PTH2	I		114	DACK0/PTD5	I/O	DMA acknowledge transfer strobe / Port D
11	IRQ3/IRL3/PTH3	I		115	DACK1/PTD7	I/O	
12	IRQ4/PTH4	I		116	CAS2L/PTE6	I/O	Column address strobe (low) / Port E
13	D31/PTB7	I/O	Data bus / Port B	117	CAS2H/PTE3	I/O	Column address strobe (high) / Port E
14	D30/PTB6	I/O		118	RAS3U/PTE2	I/O	DRAM row address strobe / Port E
15	D29/PTB5	I/O		119	RAS2U/PTE1	I/O	DRAM row address strobe / Port E
16	D28/PTB4	I/O		120	TDO/PTE0	I/O	Test data / Port E
17	D27/PTB3	I/O		121	BACK	O	Bus acknowledge
18	D26/PTB2	I/O	Ground	122	BREQ	I	Bus request
19	VssQ	-		123	WAIT	I	Hardware wait request
20	D25/PTB1	I/O		124	RESETM	I	Manual reset
21	VccQ	-	Data bus / Port B	125	ADTRG/PTH5	I	Analog trigger / Port H
22	D24/PTB0	I/O	Data bus / Port B	126	IOIS16/PTG7	I	Write protect / Port G
23	D23/PTA7	I/O	Data bus / Port A	127	ASEMD0/PTG6	I	ASE mode / Port G
24	D22/PTA6	I/O		128	ASEBRKAK/PTG5	I/O	ASE break acknowledge / Port G
25	D21/PTA5	I/O		129	PTG4/CKIO2	I/O	Port G / Clock output
26	D20/PTA4	I/O		130	AUDATA3/PTG3	I/O	AUD data / Port G
27	Vss	-		131	AUDATA2/PTG2	I/O	
28	D19/PTA3	I/O	Data bus / Port A	132	Vss	-	Ground
29	Vcc	-	Power supply +1.8 V	133	AUDATA1/PTG1	I/O	AUD data / Port G
30	D18/PTA2	I/O	Data bus / Port A	134	Vcc	-	Power supply +1.8 V
31	D17/PTA1	I/O		135	AUDATA0/PTG0	I/O	AUD data / Port G
32	D16/PTA0	I/O		136	TRST/PTF/PINT15	I	Test reset / Port F / Port interruption
33	VssQ	-	Ground	137	TMS/PTF6/PINT14	I	Test mode switch / Port F / Port interruption
34	D15	I/O	Data bus	138	TDI/PTF5/PINT13	I	Test data / Port F / Port interruption
35	VccQ	-	Power supply +3.3 V	139	TCK/PTF4/PINT12	I	Test clock / Port F / Port interruption
36	D14	I/O	Data bus	140	IRLS3/PTF3/PINT11	I	Interrupt request / Port F / Port interruption
37	D13	I/O		141	IRL2/PTF2/PINT10	I	
38	D12	I/O		142	IRLS1/PTF1/PINT9	I	
39	D11	I/O		143	IRLS0/PTF0/PINT8	I	
40	D10	I/O		144	MD0	I	Mode control
41	D9	I/O	Ground	145	Vcc(PLL1)	-	Power supply +1.8 V
42	D8	I/O		146	CAP1	-	PLL1 Capacitor
43	D7	I/O		147	Vss(PLL1)	-	Ground
44	D6	I/O		148	Vss(PLL2)	-	Ground
45	VssQ	-		149	CAP2	-	PLL2 Capacitor
46	D5	I/O	Data bus	150	VCC(PLL2)	-	Power supply +1.8 V
47	VccQ	-	Power supply +3.3 V	151	AUDCK/PTH6	I	AUD clock / Port H
48	D4	I/O	Data bus	152	Vss	-	Ground
49	D3	I/O		153	Vss	-	
50	D2	I/O		154	Vcc	-	
51	D1	I/O		155	XTAL1	O	Crystal oscillator
52	D0	I/O		156	EXTAL1	I	
53	A0	O	Address bus	157	STATUS0/PTJ6	I/O	Processor status / Port J
54	A1	O		158	STATUS1/PTJ7	I/O	
55	A2	O		159	TCLK/PTH7	I/O	Timer clock / Port H
56	A3	O		160	/IRQOUT	O	Interrupt request output
57	VssQ	-	Ground	161	VssQ	-	Ground
58	A4	O	Address bus	162	CKIO	I/O	System clock input / output
59	VccQ	-	Power supply +3.3 V	163	VccQ	-	Power supply +3.3 V
60	A5	O	Address bus	164	TXD0/SCPT0	O	Data transmission / SCI port
61	A6	O		165	SCK0/SCPT1	I/O	Serial clock / SCI port
62	A7	O		166	TXD1/SCPT2	O	Data transmission / SCI port
63	A8	O		167	SCK1/SCPT3	I/O	Serial clock / SCI port
64	A9	O		168	TXD2/SCPT4	O	Data transmission / SCI port
65	A10	O	Address bus	169	SCK2/SCPT5	I/O	Serial clock / SCI port
66	A11	O		170	RTS2/SCPT6	I/O	Transmit request / SCI port
67	A12	O		171	RXD0/SCPT0	I	Data reception / SCI port
68	A13	O		172	RXD1/SCPT2	I	
69	VssQ	-		173	Vss	-	
70	A14	O	Address bus	174	RXD2/SCPT4	I	Data reception / SCI port
71	VccQ	-	Power supply +3.3 V	175	Vcc	-	Power supply +1.8 V
72	A15	O	Address bus	176	CTS2/IRQ5/SCPT7	I	Transmit clear / Interrupt request / SCI port
73	A16	O		177	MCS7/PTC7/PINT7	I/O	Mask ROM chip select / Port C / Port interruption
74	A17	O		178	MCS6/PTC6/PINT6	I/O	
75	A18	O		179	MCS5/PTC5/PINT5	I/O	
76	A19	O		180	MCS4/PTC4/PINT4	I/O	Ground
77	A20	O	Ground	181	VssQ	-	
78	A21	O		182	WAKEUP/PTD3	I/O	Standby mode Interrupt request output / Port D
79	Vss	-		183	VccQ	-	Power supply +3.3 V
80	A22	O	Address bus	184	RESETOUT/PTD2	I/O	Reset output / Port D
81	Vcc	-	Power supply +1.8 V	185	MCS3/PTC3/PINT3	I/O	Mask ROM chip select / Port C / Port interruption
82	A23	O	Address bus	186	MCS2/PTC2/PINT2	I/O	
83	VssQ	-	Ground	187	MCS1/PTC1/PINT1	I/O	
84	A24	O	Address bus	188	MCS0/PTC0/PINT0	I/O	DMA acknowledge / Port D
85	VccQ	-	Power supply +3.3 V	189	DRAK0/PTD1	I/O	
86	A25	O	Address bus	190	DRAK1/PTD0	I/O	
87	BS/PTK4	I/O	Bus cycle signal start / Port K	191	DREQ0/PTD4	I	DMA request / Port D
88	RD	O	Read strobe	192	DREQ1/PTD6	I	
89	WE0/DQMLL	O	Select signal (D7-D0) / D QM (SDRAM)	193	RESETP	I	Power on reset
90	WE1/DQMLLWE	O	Select signal (D15-D8) / D QM (SDRAM) / Write enable	194	CA	I	Chip active
91	WE2/DQMLLQDRPTK6	I/O	Select signal (D23-D16) / D QM (SDRAM) / I/O read / Port K	195	MD3	I	Mode control
92	WE3/DQMLLQDRPTK7	I/O	Select signal (D31-D24) / D QM (SDRAM) / I/O write / Port K	196	MD4	I	
93	RD/WR	O	Read / Write	197	MD5	I	
94	AUDSYNC/PTF7	I/O	AUD cycle / Port E	198	AVss	-	Analog ground
95	VssQ	-	Ground	199	AN0/PTL0	I	Analog input / Port L
96	CS0/MCS0	O	Chip select / Mask ROM chip select	200	AN1/PTL1	I	
97	VccQ	-	Power supply +3.3V	201	AN2/PTL2	I	
98	CS2/PTK0	I/O	Chip select / Port K	202	AN3/PTL3	I	
99	CS3/PTK1	I/O		203	AN4/PTL4	I	
100	CS4/PTK2	I/O		204	AN5/PTL5	I	Analog power supply +3.3 V
101	CS5/CE1A/PTK3	I/O	Chip select / Chip enable / Port K	205	AVcc	-	
102	CS6/CE1B	O	Chip select / Chip enable	206	AN6/DA1/PTL6	I/O	Analog input / Analog output / Port L
103	CE2A/PTF4	I/O	Chip enable / Port E	207	AN7/DA0/PTL7	I/O	
104	CE2B/PTF5	I/O		208	AVss	-	

● T8F02TB-0102 (X0060A00) SWP50 (Tone Generator)

DM: IC012

PIN NO.	OUTER NO.	NAME	I/O	FUNCTION	PIN NO.	OUTER NO.	NAME	I/O	FUNCTION
1	E5	VSS2	-	Ground	106	E22	VSS2	-	Ground
2	D4	VDDC	-	Power supply +1.5 V	107	D23	VDDC	-	Power supply +1.5 V
3	C3	CD15	I/O	Data bus of internal register	108	C24	HMA15	O	Wave memory address bus
4	B2	CD13	I/O		109	B25	HMA16	O	
5	A1	CD14	I/O		110	A26	HMA22	O	
6	D5	CD6	I/O		111	E23	HMA25	O	
7	E6	CD2	I/O		112	F22	VDD5	-	Power supply +3 V
8	C4	CD9	I/O	Data bus of internal register	113	D24	HMA27	O	
9	B3	CD11	I/O		114	C25	HMA0	O	Wave memory address bus
10	A2	CD12	I/O		115	B26	HMA23	O	
11	A3	CD10	I/O		116	C26	HMA24	O	
12	D6	CD1	I/O	Ground	117	F23	VDD5	-	Power supply +3 V
13	E7	VSS	-		118	G22	HMA26	O	
14	C5	CD5	I/O		119	E24	HMA30	O	Wave memory address bus
15	B4	CD8	I/O		120	D25	HMA28	O	
16	A4	CD7	I/O		121	D26	HMA29	O	
17	D7	VSS2	-	Ground	122	G23	LMA17	O	Wave memory address bus (Lower data memory)
18	C6	CD0	I/O	Data bus of internal register	123	F24	LMA19	O	
19	E8	VSS	-	Ground	124	H22	VSS	-	Ground
20	D8	VDD5	-	Power supply +3 V	125	H23	VDD5	-	Power supply +3 V
21	B5	CD4	I/O	Data bus of internal register	126	E25	LMA20	O	Wave memory address bus (Lower data memory)
22	A5	CD3	I/O		127	E26	LMA21	O	
23	C7	CA2	I		128	G24	LMA9	O	
24	B6	CA0	I		129	F25	LMA18	O	
25	E9	CA8	I		130	J22	LMA12	O	
26	D9	CA9	I	Address bus of internal register	131	J23	LMA4	O	
27	C8	CA5	I		132	H24	LMA6	O	
28	A6	CA1	I		133	F26	LMA8	O	
29	B7	CA3	I		134	G25	LMA7	O	
30	A7	CA4	I		135	G26	LMA10	O	
31	E10	VSS2	-	Ground	136	K22	VSS2	-	Ground
32	D10	VDDC	-	Power supply +1.5 V	137	K23	VDDC	-	Power supply +1.5 V
33	C9	CA10	I	Address bus of internal register	138	J24	LMA13	O	Wave memory address bus (Lower data memory)
34	B8	CA6	I		139	H25	LMA11	O	
35	A8	CA7	I		140	H26	LMA5	O	
36	B9	CA11	I		141	J25	LMA3	O	
37	E11	CA14	I		142	L22	LMA16	O	
38	D11	CA15	I	Chip select	143	L23	LMA0	O	
39	C10	CA13	I		144	K24	LMA2	O	
40	A9	CA12	I		145	J26	LMA14	O	
41	B10	CSN0	I		146	K25	LMA15	O	
42	A10	CSN1	I		147	K26	LMA1	O	
43	E12	VSS	-	Ground	148	M22	VSS	-	Ground
44	D12	VDD5	-	Power supply +3 V	149	M23	VDD5	-	Power supply +3 V
45	C11	WRN	I	Write strobe	150	L24	LMA22	O	Wave memory address bus (Lower data memory)
46	B11	RDN	I	Read strobe	151	L25	LMA23	O	
47	A11	WAIT0	O	Hardware wait request	152	L26	LMA24	O	
48	C12	IRQ0	O	Interrupt request	153	M24	LMA27	O	
49	B12	DREQ0	O	Test pin	154	M25	LMA28	O	
50	E13	TCK	I		155	N22	LMA25	O	
51	D13	TRST	I		156	N23	LMA26	O	
52	C13	VSS	-		157	N24	LMA30	O	
53	A12	XO	O		158	M26	LMA29	O	
54	B13	XI	I	Crystal osc. output	159	N25	MOEN	O	Wave memory output enable
55	A13	VDD5	-	Crystal osc. input	160	N26	MWEN	O	Wave memory write enable
56	A14	SLAVE	I	Power supply +3 V	161	P26	LMD15	I/O	Wave memory data bus (Lower 16 bit)
57	E14	TMS	I	Master/Slave select	162	P22	VSS	-	Ground
58	D14	TDO	O	Test pin	163	P23	VDD5	-	Power supply +3 V
59	C14	ICN	I		164	P24	LMD13	I/O	Wave memory data bus (Lower 16 bit)
60	B14	RFCLK0	O		165	P25	LMD14	I/O	
61	B15	PLL_TSTN	I		166	R25	LMD11	I/O	
62	C15	PLL_BP	I		167	R24	LMD10	I/O	
63	D15	VDD5	-	Power supply +3 V	168	R23	VDD5	-	Power supply +3 V
64	E15	VSS	-	Ground	169	R22	VSS	-	
65	A15	RFCLK1	I	PLL Clock	170	R26	LMD12	I/O	Wave memory data bus (Lower 16 bit)
66	A16	VDDC	I	Power supply +1.5 V	171	T26	LMD9	I/O	
67	B16	TMODE	I	Test pin	172	T25	LMD8	I/O	
68	C16	PLL_AVD	-	Power supply (PLL)	173	T24	LMD7	I/O	
69	D16	NC	-	Not used	174	T23	VSS2	-	Ground
70	E16	NC	-	Not used	175	T22	VSS	-	
71	A17	PLL_AVS	I	Power supply (PLL)	176	U26	LMD6	I/O	Wave memory data bus (Lower 16 bit)
72	B17	TEST1	I	Test pin	177	U25	LMD5	I/O	
73	A18	VSS	-	Ground	178	V26	LMD3	I/O	
74	C17	SY1	I	Sync. clock	179	U24	LMD4	I/O	
75	D17	VDDC	-	Power supply +1.5 V	180	U23	VDDC	-	Power supply +3 V
76	E17	VSS2	-	Ground	181	U22	VSS2	-	Ground
77	B18	KONTRG0	O	Key on data	182	V25	LMD2	I/O	Wave memory data bus (Lower 16 bit)
78	A19	KONTRG1	O		183	W26	LMD0	I/O	
79	C18	CK512	O		184	V24	LMD1	I/O	
80	B19	CK128	O		185	W25	DCSL0	O	
81	D18	BCLK	O		186	V23	VDD5	-	Power supply +3 V
82	E18	SY0	O	Master clock (64 Fs)	187	V22	VDDC	-	Power supply +1.5 V
83	C19	HMA20	O	Wave memory address bus	188	W24	DCSL1	O	MASK signal
84	A20	HMA21	O		189	Y26	DQML3	O	
85	B20	HMA19	O		190	Y25	DQML1	O	
86	C20	HMA18	O		191	Y24	DMAL14	O	
87	D19	VDD5	-		192	W23	VDD5	-	Address bus (DIMM, SDRAM)
88	E19	VSS	-	Power supply +1.5 V	193	W22	VSS	-	Power supply +3 V
89	A21	HMA9	O	Ground	194	AA26	DMAL13	O	Ground
90	B21	HMA7	O		195	AA25	DMAL12	O	
91	A22	HMA6	O		196	AB26	DMAL9	O	
92	D20	HMA8	O		197	Y23	VSS	-	
93	C21	HMA10	O		198	AA24	DMAL11	O	
94	E20	HMA17	O	Power supply +1.5 V	199	Y22	VSS	-	Address bus (DIMM, SDRAM)
95	D21	VDD5	-		200	AA23	DMAL10	O	Address bus (DIMM, SDRAM)
96	B22	HMA11	O		201	AB25	DMAL8	O	
97	A23	HMA4	O		202	AC26	DMAL6	O	
98	C22	HMA5	O		203	AB24	DMAL7	O	
99	B23	HMA13	O	Ground	204	AC25	DMAL5	O	Ground
100	E21	VSS	-		205	AA22	VSS2	-	
101	D22	HMA12	O		206	AB23	VSS	-	
102	C23	HMA3	O		207	AC24	DMAL4	O	
103	A24	HMA14	O		208	AD26	DMAL3	O	Address bus (DIMM, SDRAM)
104	B24	HMA2	O	Wave memory address bus	209	AD25	DMAL2	O	
105	A25	HMA1	O		210	AE26	DMAL0	O	

PIN NO.	OUTER NO.	NAME	I/O	FUNCTION	PIN NO.	OUTER NO.	NAME	I/O	FUNCTION
211	AB22	VSS2	-	Ground	316	AB5	VSS2	-	Ground
212	AC23	VDDC	-	Power supply +1.5 V	317	AC4	VDDC	-	Power supply +1.5 V
213	AD24	DMAL1	O	Address bus (DIMM, SDRAM)	318	AD3	MELI6	I	MEL wave data input
214	AE25	DCSL2	O		319	AE2	MELI7	I	
215	AF26	DRAS0	O		320	AF1	ADLR	O	Power supply +3 V
216	AC22	DCAS0	O		321	AB4	DITO	O	
217	AB21	VDD5	-	Power supply +3 V	322	AA5	VSS	-	Ground
218	AD23	DCLKIN	I		323	AC3	AFRM	I/O	
219	AE24	DQML2	O	MASK signal	324	AD2	ACLK	I/O	
220	AF25	DCSL3	O		325	AE1	ADIR	O	
221	AF24	DQML0	O	MASK signal	326	AD1	ADAT0	I/O	Data bus (ABUS)
222	AC21	VDD5	-	Power supply +3 V	327	AA4	VDD5	-	Power supply +3 V
223	AB20	VSS	-	Ground	328	Y5	ADAT9	I/O	
224	AD22	DWEN0	O		329	AB3	ADAT3	I/O	
225	AE23	DCLK0	O		330	AC2	ADAT1	I/O	Data bus (ABUS)
226	AF23	DCLK1	O		331	AC1	ADAT2	I/O	
227	AC20	DCLK2	O		332	Y4	ADAT10	I/O	
228	AD21	HMD13	I/O	Wave memory data bus (Upper data memory)	333	AA3	ADAT6	I/O	
229	AB19	VSS	-	Ground	334	W5	VSS	-	Ground
230	AC19	VDD5	-	Power supply +3 V	335	W4	VDD5	-	Power supply +3 V
231	AE22	HMD15	I/O	Wave memory data bus (Upper data memory)	336	AB2	ADAT4	I/O	Data bus (ABUS)
232	AF22	HMD14	I/O		337	AB1	ADAT5	I/O	
233	AD20	HMD10	I/O		338	Y3	ADAT11	I/O	
234	AE21	HMD12	I/O		339	AA2	ADAT7	I/O	
235	AB18	VDDC	-	Power supply +1.5 V	340	V5	ADAT14	I/O	
236	AC18	VDD5	-	Power supply +3 V	341	V4	ADAT15	I/O	
237	AD19	HMD7	I/O	Wave memory data bus (Upper data memory)	342	W3	ADAT13	I/O	
238	AF21	HMD11	I/O		343	AA1	ADAT8	I/O	
239	AE20	HMD9	I/O		344	Y2	ADAT12	I/O	
240	AF20	HMD8	I/O		345	Y1	TDI	I	
241	AB17	VSS2	-	Ground	346	U5	VSS2	-	Ground
242	AC17	VDDC	-	Power supply +1.5 V	347	U4	VDDC	-	Power supply +1.5 V
243	AD18	HMD4	I/O	Wave memory data bus (Upper data memory)	348	V3	HRD13	I/O	DRAM data bus
244	AE19	HMD6	I/O		349	W2	HRD15	I/O	
245	AF19	HMD5	I/O		350	W1	HRD14	I/O	
246	AE18	HMD3	I/O		351	V2	HRD12	I/O	
247	AB16	VSS	-	Ground	352	T5	HRD7	I/O	
248	AC16	VSS2	-	Ground	353	T4	HRD6	I/O	
249	AD17	HMD1	I/O	Wave memory data bus (Upper data memory)	354	U3	HRD10	I/O	
250	AF18	HMD2	I/O		355	V1	HRD11	I/O	
251	AE17	HMD0	I/O		356	U2	HRD9	I/O	
252	AF17	DCSH0	O		357	U1	HRD8	I/O	
253	AB15	VSS	-	Ground	358	R5	VSS	-	Ground
254	AC15	VDD5	-	Power supply +3 V	359	R4	VDD5	-	Power supply +3 V
255	AD16	DCSH1	O		360	T3	HRD5	I/O	DRAM data bus
256	AE16	DQMH3	O	MASK signal	361	T2	HRD4	I/O	
257	AF16	DQMH1	O		362	T1	HRD3	I/O	
258	AD15	DMAH14	O	Address bus (DIMM, SDRAM)	363	R3	HRD2	I/O	
259	AE15	DMAH13	O		364	R2	HRD1	I/O	
260	AB14	VSS	-	Ground	365	P5	VDD5	-	Power supply +3 V
261	AC14	VSS2	-	Ground	366	P4	HRD0	I/O	DRAM data bus
262	AD14	DMAH11	O	Address bus (DIMM, SDRAM)	367	P3	RWEN	O	DRAM write enable
263	AF15	DMAH12	O		368	R1	RQML	O	
264	AE14	DMAH10	O		369	P2	RCAS	O	DRAM column address strobe (RAS signal)
265	AF14	DMAH9	O		370	P1	RRAS	O	DRAM row address strobe (RAS signal)
266	AF13	DMAH8	O		371	N1	RA13	O	DRAM address bus
267	AB13	VDD5	-	Power supply +3 V	372	N5	VDD5	-	Power supply +3 V
268	AC13	VDD5	-	Power supply +3 V	373	N4	VDD5	-	Power supply +3 V
269	AD13	DMAH6	O	Address bus (DIMM, SDRAM)	374	N3	RA10	O	DRAM address bus
270	AE13	DMAH7	O		375	N2	RA12	O	
271	AE12	DMAH4	O		376	M2	RA1	O	
272	AD12	DMAH3	O		377	M3	RA2	O	
273	AC12	VDD5	-	Power supply +1.5 V	378	M4	VDD5	-	Power supply +3 V
274	AB12	VSS	-	Ground	379	M5	VSS	-	Ground
275	AF12	DMAH5	O	Address bus (DIMM, SDRAM)	380	M1	RA0	O	DRAM address bus
276	AF11	DMAH2	O		381	L1	RA3	O	
277	AE11	DMAH1	O		382	L2	RA4	O	
278	AD11	DMAH0	O		383	L3	RA5	O	
279	AC11	VSS	-	Ground	384	L4	VSS2	-	Ground
280	AB11	VSS	-	Ground	385	L5	VSS	-	Ground
281	AF10	DRAS1	O		386	K1	RA6	O	DRAM address bus
282	AE10	DCSH2	O		387	K2	RA7	O	
283	AF9	DQMH2	O	MASK signal	388	J1	RA9	O	
284	AD10	DCSH3	O		389	K3	RA8	O	
285	AC10	VDDC	-	Power supply +1.5 V	390	K4	VDDC	-	Power supply +1.5 V
286	AB10	VSS2	-	Ground	391	K5	VSS2	-	Ground
287	AE9	DQMH0	O	MASK signal	392	J2	RA11	O	DRAM address bus
288	AF8	DWEN1	O		393	H1	RCLK	O	
289	AD9	DCAS1	O		394	J3	RCLKE	O	
290	AE8	DCLK2	O		395	H2	RCLKIN	I	
291	AC9	VDD5	-	Power supply +3 V	396	J4	VDD5	-	Power supply +3 V
292	AB9	VDDC	-	Power supply +1.5 V	397	J5	VDDC	-	Power supply +1.5 V
293	AD8	DCLK3	O		398	H3	RQMH	O	
294	AF7	MEL00	O	MEL wave data output	399	G1	LRD15	I/O	DRAM data bus (Lower data)
295	AE7	MEL01	O		400	G2	LRD14	I/O	
296	AD7	MEL02	O		401	G3	LRD13	I/O	
297	AC8	VDD5	-		402	H4	VDD5	-	Power supply +3 V
298	AB8	VSS	-	Ground	403	H5	VSS	-	Ground
299	AF6	MEL03	O	MEL wave data output	404	F1	LRD12	I/O	DRAM data bus (Lower data)
300	AE6	MEL04	O		405	F2	LRD11	I/O	
301	AF5	MEL05	O		406	E1	LRD8	I/O	
302	AC7	MEL06	O		407	G4	VDD5	-	Ground
303	AD6	MEL07	O		408	F3	LRD10	I/O	DRAM data bus (Lower data)
304	AB7	WCLK0	O	For DAC LR clock	409	G5	VDD5	-	Ground
305	AC6	WCLK1	O		410	F4	LRD9	I/O	DRAM data bus (Lower data)
306	AE5	EIRQ	O		411	E2	LRD7	I/O	
307	AF4	EICN	I		412	D1	LRD5	I/O	
308	AD5	ESDA	I/O		413	E3	LRD6	I/O	
309	AE4	ESCL	I/O		414	D2	LRD4	I/O	
310	AB6	MELI0	I	MEL wave data input	415	F5	VSS2	-	Ground
311	AC5	MELI1	I		416	E4	VSS	-	Ground
312	AD4	MELI2	I		417	D3	LRD3	I/O	DRAM data bus (Lower data)
303	AF3	MELI3	I		418	C1	LRD2	I/O	
314	AE3	MELI4	I		419	C2	LRD1	I/O	
315	AF2	MELI5	I		420	B1	LRD0	I/O	

● M66291GP (X2156A00) USB Controller

DM: IC002

PIN NO.	NAME	I/O	FUNCTION	PIN NO.	NAME	I/O	FUNCTION
1	Core Vcc		Core power supply	25	D2	I/O	Data bus
2	GND		Ground	26	D3	I/O	
3	D-	I/O	USB data (-)	27	D4	I/O	
4	D+	I/O	USB data (+)	28	D5	I/O	
5	Vbus	I	V bus input	29	D6	I/O	
6	Tr ON	O	Tr ON output	30	D7	I/O	
7	TEST	I	TEST input	31	D8/P0	I/O	I/O power supply
8	/Dack1	I	DMA reception signal 1	32	D9/P1	I/O	
9	/Dreq1	O	DMA request 1	33	D10/P2	I/O	
10	/TC1	I	TC input	34	D11/P3	I/O	
11	/INT1/SOF	O	Interrupt 1/SOF output	35	IOVcc		Ground
12	IOVcc		I/O power supply	36	GND		
13	Xout	O	Output for oscillation	37	D12/P4	I/O	Data bus
14	Xin	I	Input for oscillation	38	D13/P5	I/O	
15	GND		Ground	39	D14/P6	I/O	
16	Core Vcc		Core power supply	40	D15/A0	I/O	Highlight strobe/bus width select
17	A1	I	Address bus	41	/HWR/BYTE	I	
18	A2	I		42	/INT0	O	
19	A3	I		43	/RD	I	
20	A4	I		44	/LWR	I	Interrupt 0
21	A5	I		45	/CS	I	
22	A6	I	Data bus	46	/RST	I	
23	D0	I/O		47	/Dreq0	O	
24	D1	I/O		48	/Dack0	I	DMA reception signal 0

● PCM1730E-1/2K (X2077A00) DAC (Digital to Analog Converter)

DM: IC029

PIN NO.	NAME	I/O	FUNCTION	PIN NO.	NAME	I/O	FUNCTION
1	/RST	I	Reset	15	MUTE	I	Analog output mute control
2	ZEROL	O	Zero flag for L-channel	16	IOUTR-	O	R-channel analog current output -
3	ZEROR	O	Zero flag for R-channel	17	IOUTR+	O	R-channel analog current output +
4	LRCK	I	Left and right clock	18	AGND1	-	Analog ground
5	DATA	I	Serial audio data input	19	VCOM1	-	Internal bias de-coupling pin
6	BCK	I	Bit clock input	20	VCOM2	-	Common voltage for I/V
7	SCKI	I	System clock input	21	IREF	-	Output current reference bias pin
8	DGND	-	Digital ground	22	VCOM3	-	Internal bias de-coupling pin
9	VDD	-	Digital supply, +3.3V	23	VCC1	-	Analog supply, +5 V
10	DEPMPO	I	De-emphasis control	24	VCC2	-	Analog supply, +5 V
11	DEMP1	I		25	IOUTL+	O	L-channel analog current output +
12	FMT0	I	Audio data format select	26	IOUTL-	O	L-channel analog current output -
13	FMT1	I		27	AGND2	I	Analog ground
14	FMT2	I		28	VCC3	I	Analog power supply, +5 V


● AK4393-VF-E2 (XW029A00) DAC (Digital to Analog Converter)

DM: IC027


PIN NO.	NAME	I/O	FUNCTION	PIN NO.	NAME	I/O	FUNCTION
1	DVSS	-	Digital ground	15	BVSS	-	Substrate ground
2	DVDD	-	Digital power supply	16	VREFL	I	Low level voltage reference
3	MCLK	I	Master clock	17	VREFH	I	High level voltage reference
4	/PD	I	Power down mode	18	AVDD	-	Analog power supply +5 V
5	BICK	I	Audio serial data clock	19	AVSS	-	Analog ground
6	SDATA	I	Audio serial data input	20	AOUTR-	O	Rch negative analog output
7	LRCK	I	L/R clock	21	AOUTR+	O	Rch positive analog output
8	SMUTE/CS	I	Soft mute	22	AOUTL-	O	Lch negative analog output
9	DFS	I	Double speed sampling mode	23	AOUTL+	O	Lch positive analog output
10	DEM0/CCLK	I	De-emphasis enable	24	VCOM	O	Common voltage output
11	DEM1/CDTI	I		25	P/S	I	Parallel/serial select
12	DIF0	I	Digital input format	26	CKS0	I	Master clock select
13	DIF1	I		27	CKS1	I	
14	DIF2	I		28	CKS2	I	

■ IC BLOCK DIAGRAM (IC ブロック図)


- **TC74VHC14FT** (XV890B00)
Hex Inverter
DM: IC006

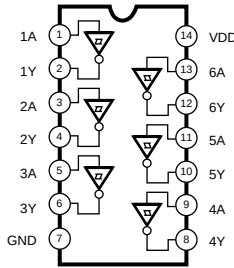


- **TC74VHC32FT** (XY945A00)
TC74VHC32FT (EL, K) (XY945B00)
Quad 2 Input OR
DM: IC007

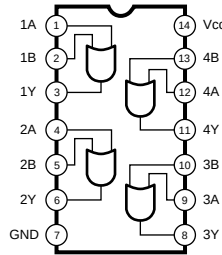


- **TC74VHCT245AFT (E, K)** (XT744B00)
Octal 3-State Bus Transceiver
DM: IC009, 010

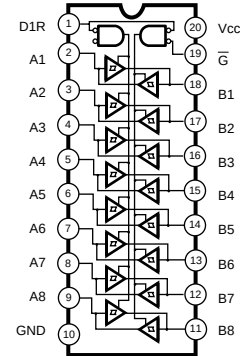


- **TC7WH32FU(TE12L, F)** (XY364A00)
Dual 2 Input OR Gate
DM: IC013

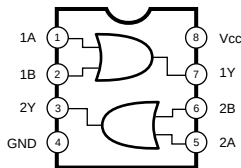

- **μPC4570G2-E1-A** (X7351A00)
μPC4570G2-T1-A (XF291A00)
NJM4556AD (XQ824A00)
Dual Operational Amplifier
DM: IC017, 033-035
PN-EQ: IC100
AJACK: IC1, 2, 5, 101, 102, 301

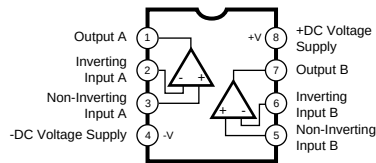

- **NE5532DR** (X5482A00)
Dual Operational Amplifier
PNL: IC73

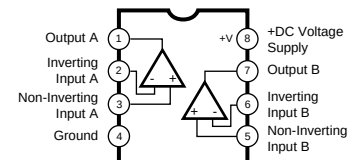

■ CIRCUIT BOARDS (シート基板図)

AJACK (X7132C0)	32
DJACK (X7113C0)	33
DM (XZ592J0)	24/25
FU60 (XQ395B0)	34
GHD EBUS L (XZ138D0)	35
GHD H (X2218A0)	37
GHD M (X2217A0)	36
HP (XQ390A0)	30
MA80S (X4384E0)	26/27



MK SUB (XZ142B0)	34
MV2 (X2244B0)	30
PN-EQ (X2507C0)	31
PNL (X7124D0)	28/29
PNR (X2244B0)	30/31
WMH (X2248A0)	34
WML (X2248A0)	34
XLR (X7132C0)	34

Note : See parts list for details of circuit board component parts.

(注：シートの部品詳細は、パーツリストをご参照ください。)

● DM Circuit Board

A SETUP OF LANGUAGE
(言語設定)

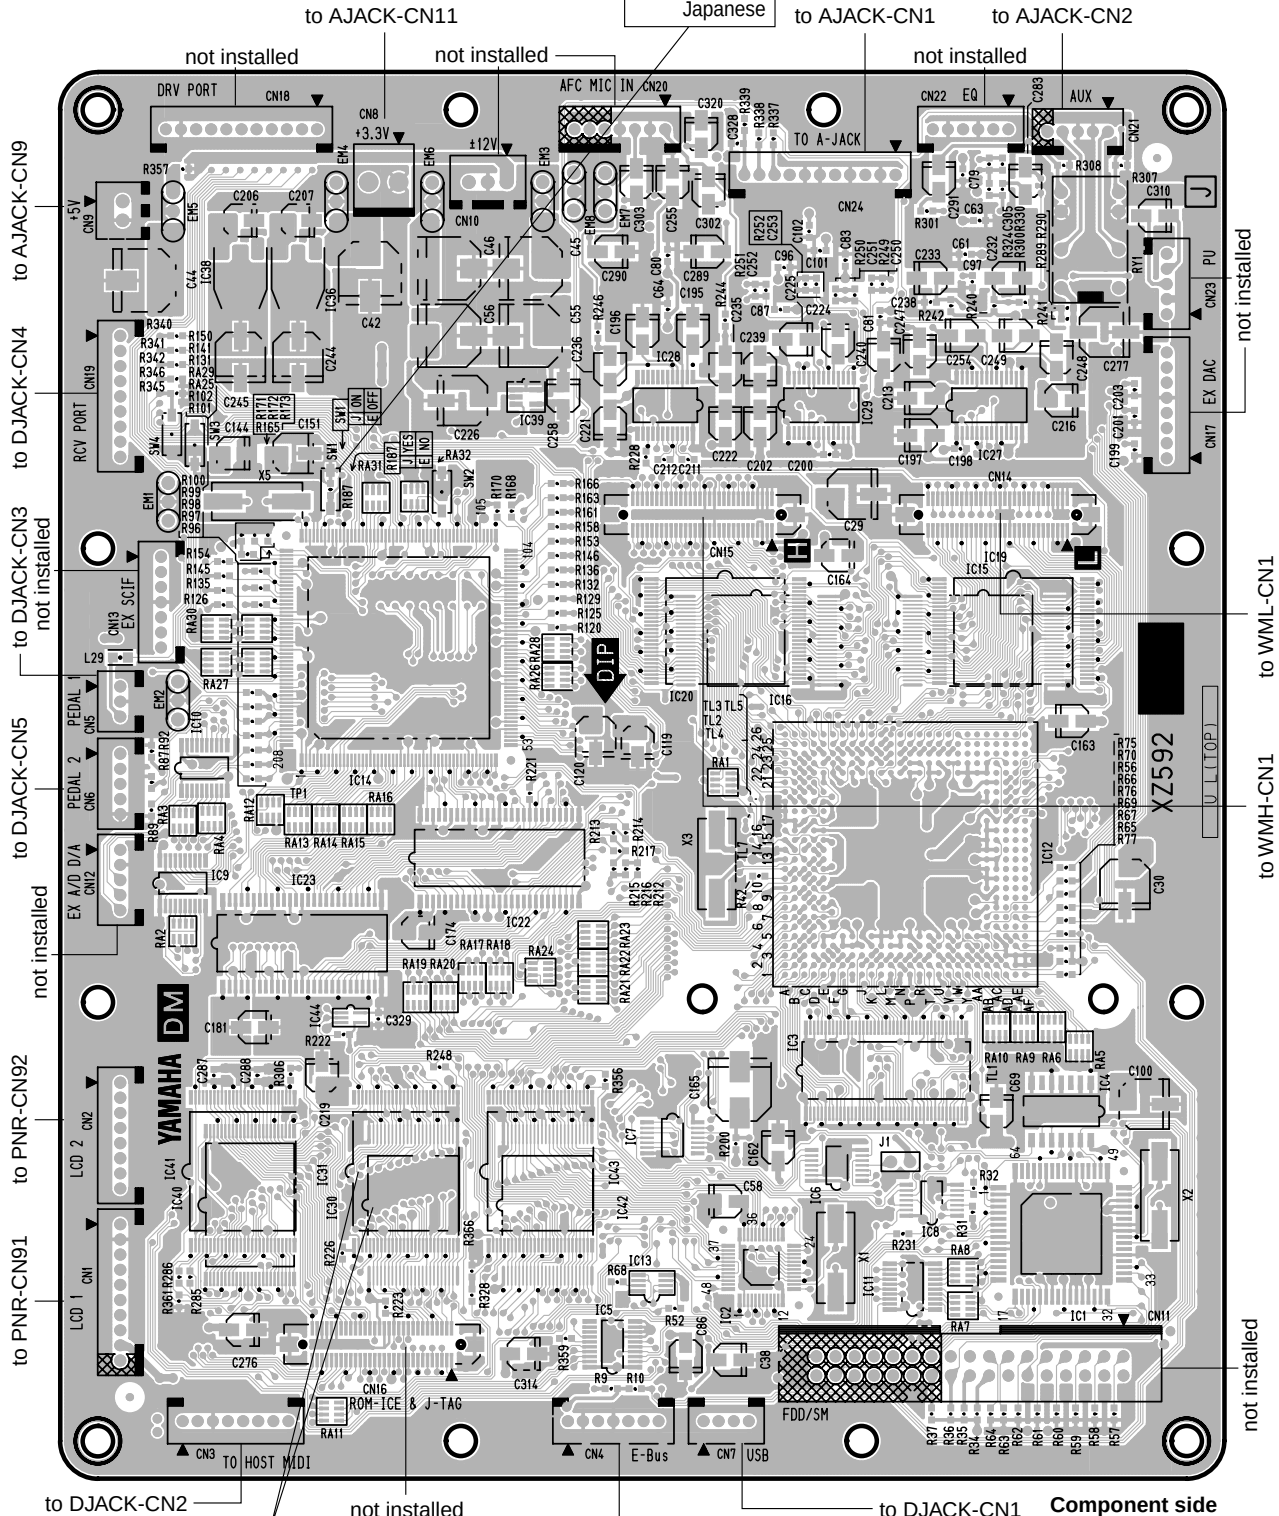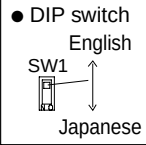

* Install either IC30 or IC31.

(IC30 または IC31 のどちらかを実装します。)

First lot: IC31 (X7447C00) FLASH ROM 64M MAIN


Second lot -: IC30 (X7447200) MASK ROM 64M MAIN

Note : See parts list for mounting of parts.

(注 : 部品実装は、パーツリストを参照してください。)

Component side
(部品側)

● DM Circuit Board

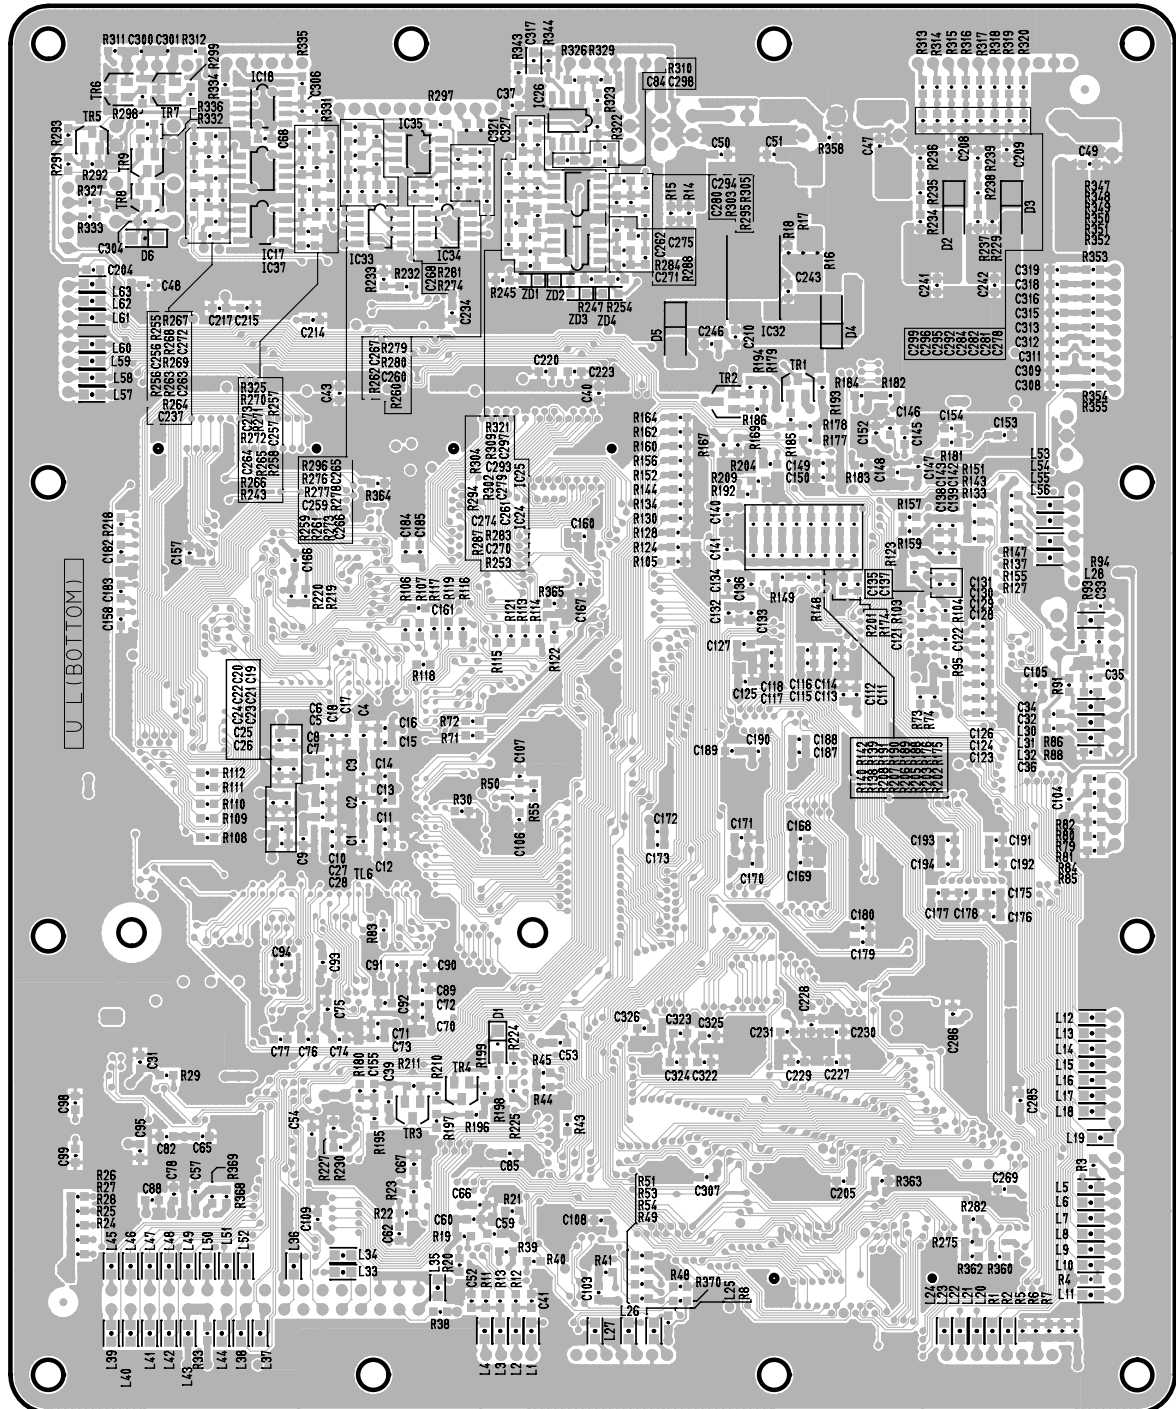


Pattern side
(パターン側)

Note : See parts list for mounting of parts.

(注：部品実装は、パーツリストを参照してください。)


● MA80S Circuit Board

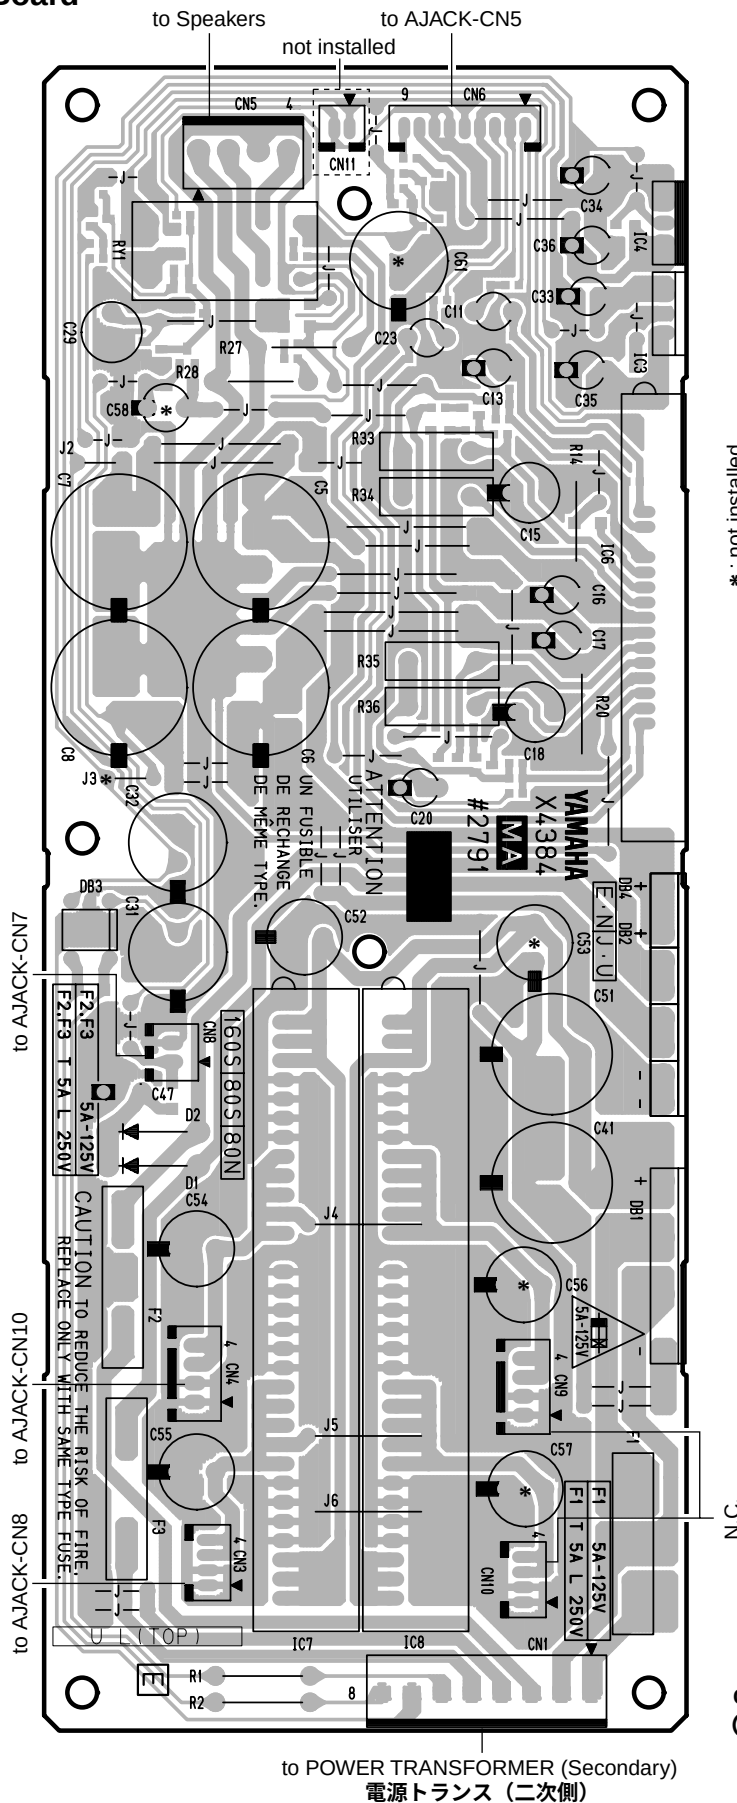

*** : not installed**

**CAUTION: REPLACE WITH SAME TYPE
5A 125V FUSE.**


ATTENTION: UTILISER UN FUSIBLE DE
RECHANGE DE MÊME TYPE DE 5A 125V.

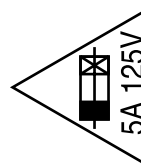

NOTE : The symbol () shows Slow operating fuse.



Component side
(部品側)

● MA80S Circuit Board


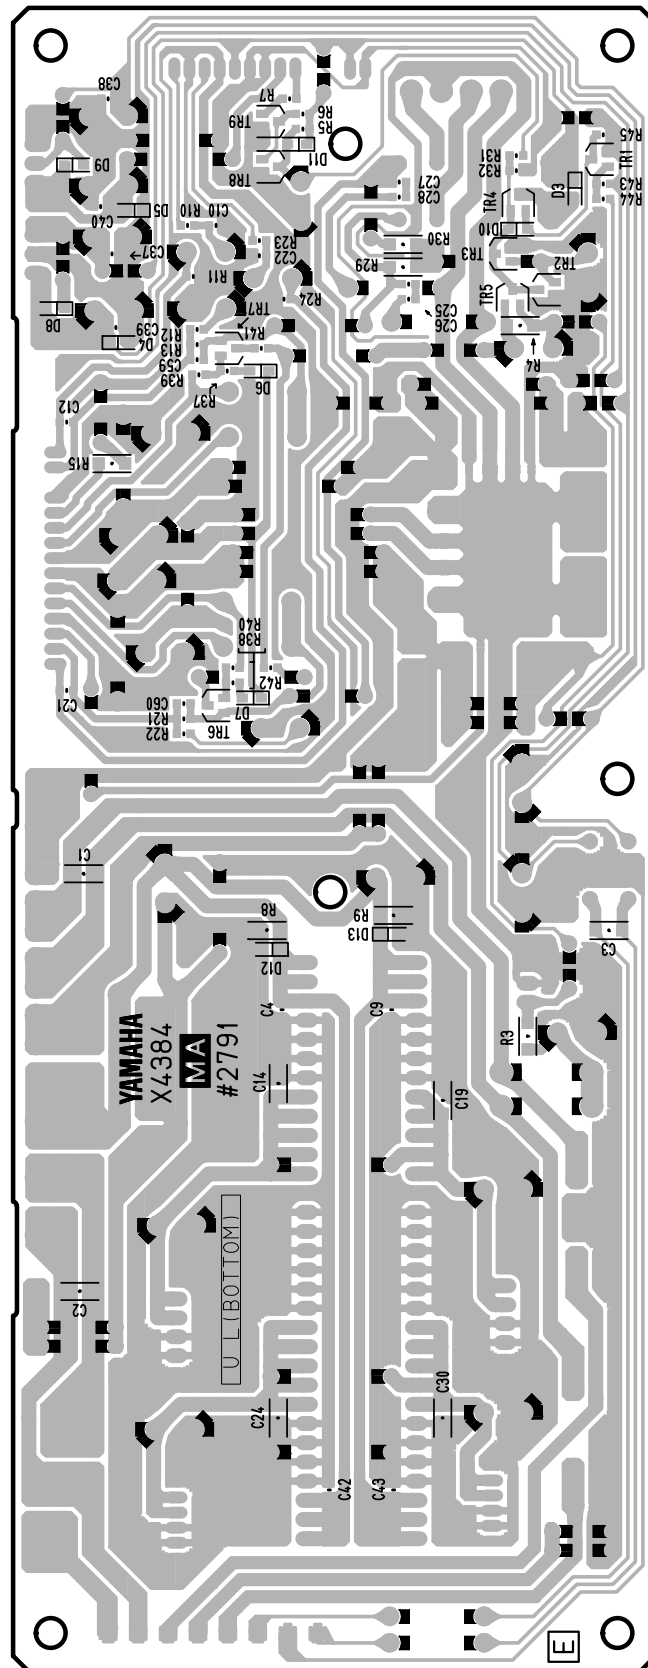


Pattern side
(パターン側)

● PNL Circuit Board

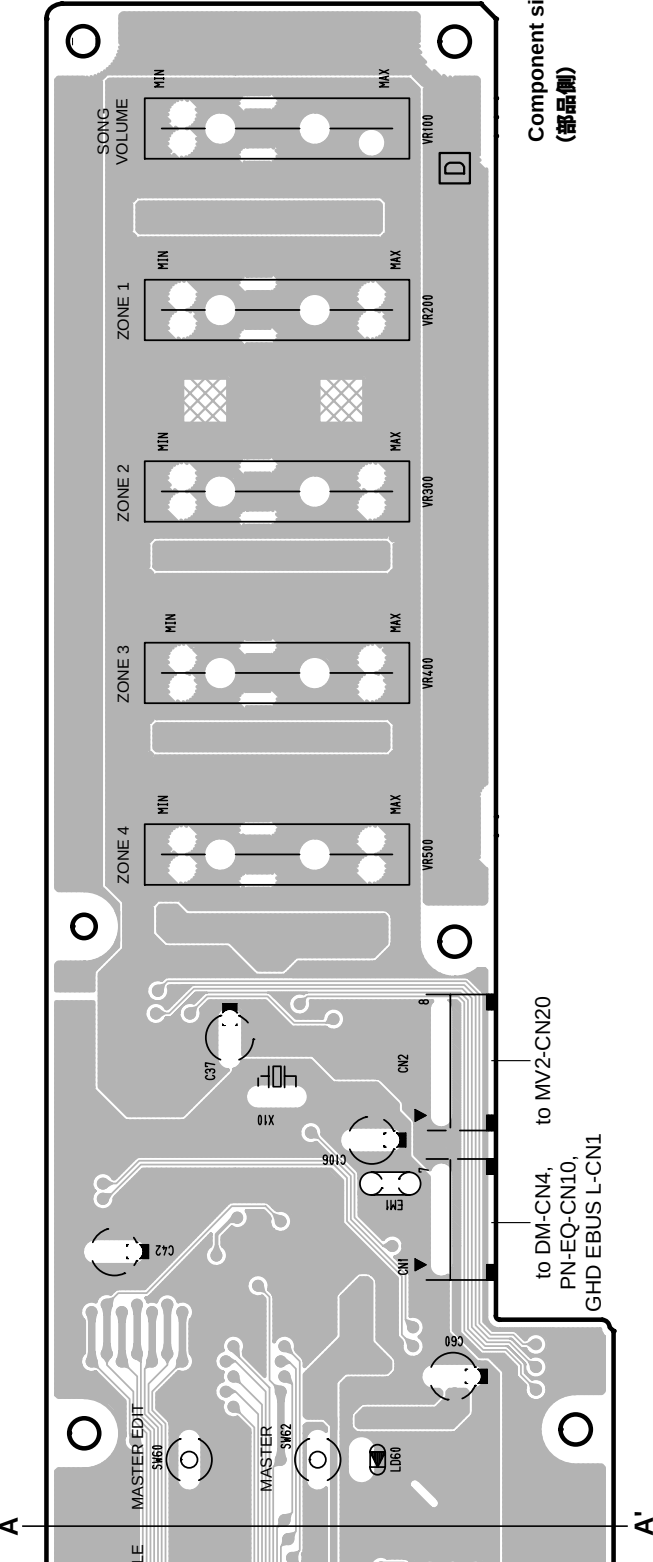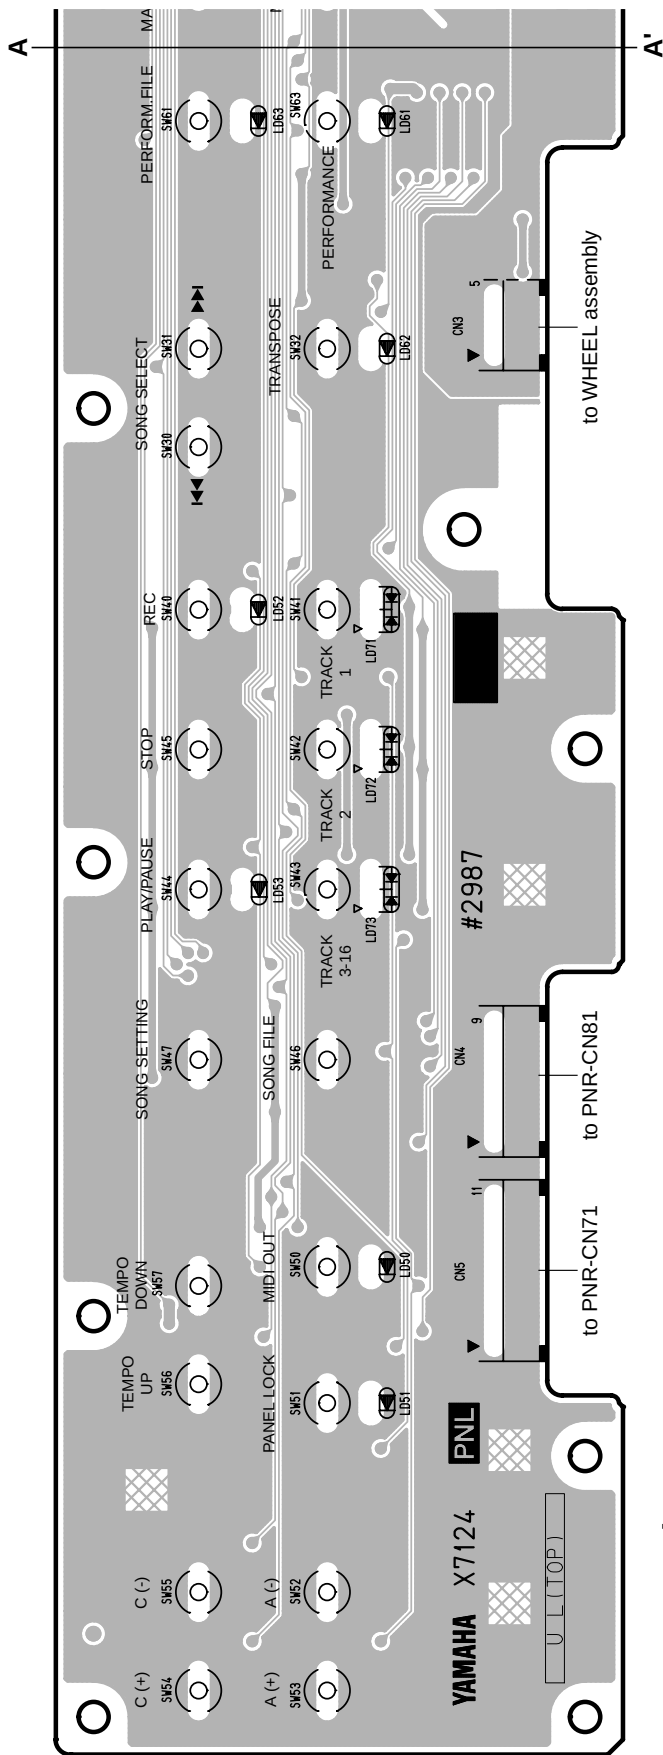


● PNL Circuit Board

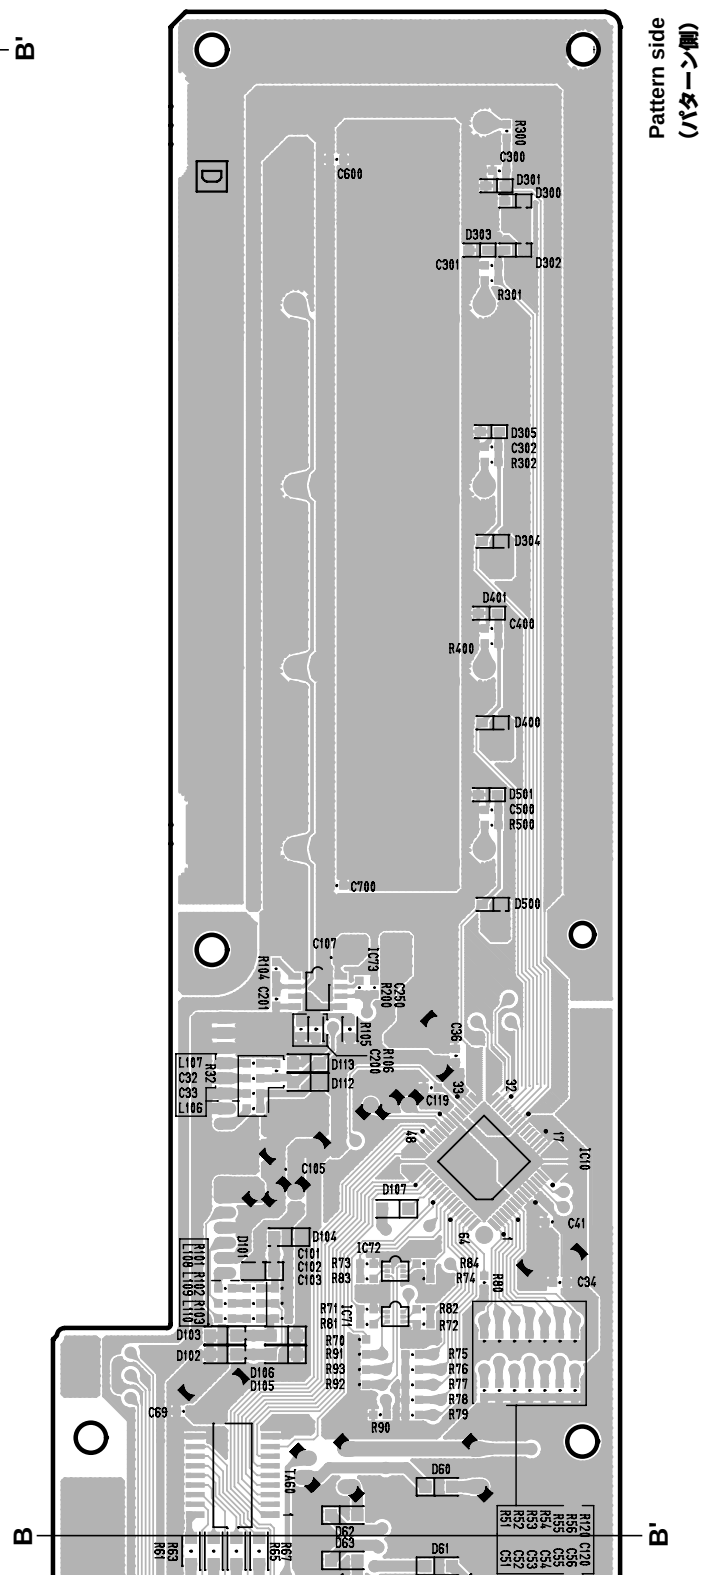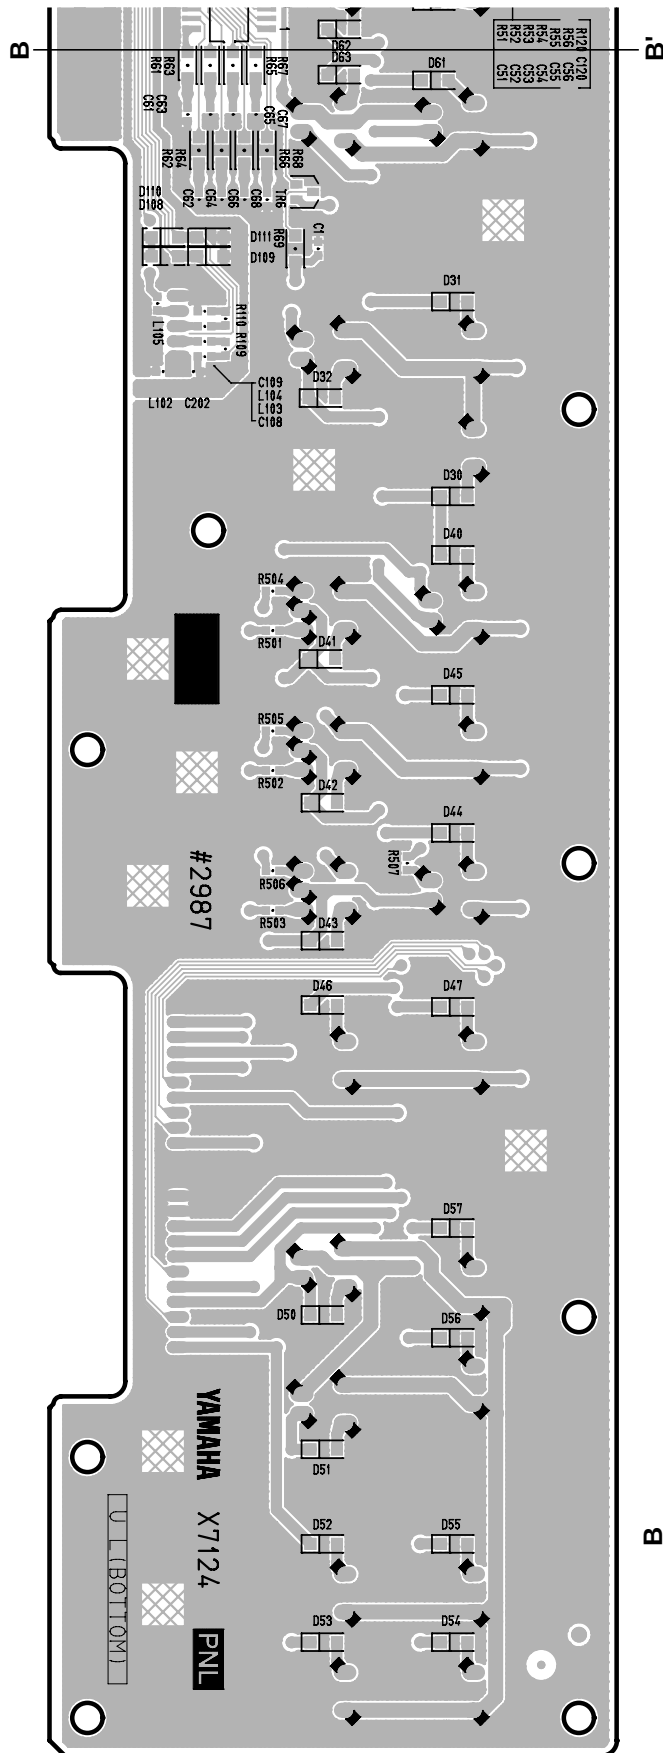


Pattern side
(パターン側)

● PNR Circuit Board

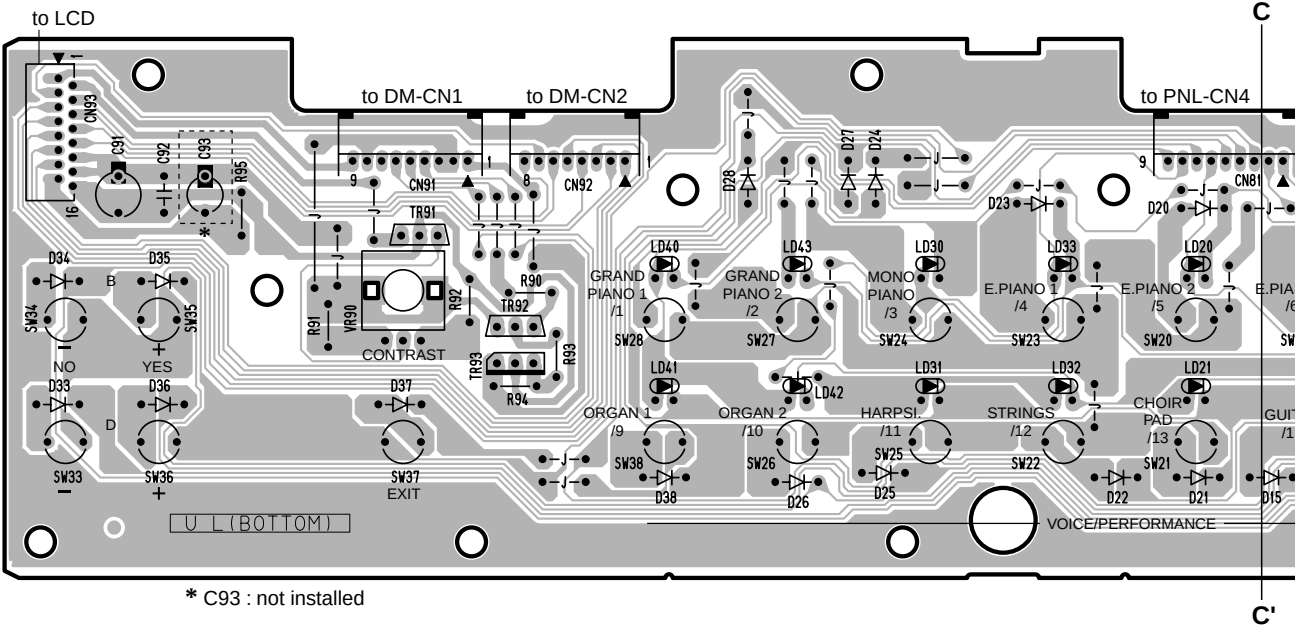


● MV2 Circuit Board

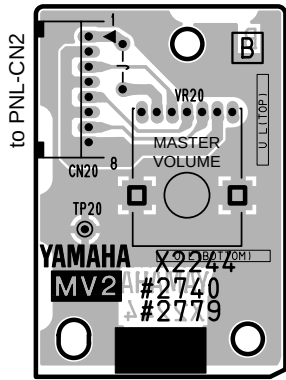

Component side
(部品側)


● HP Circuit Board

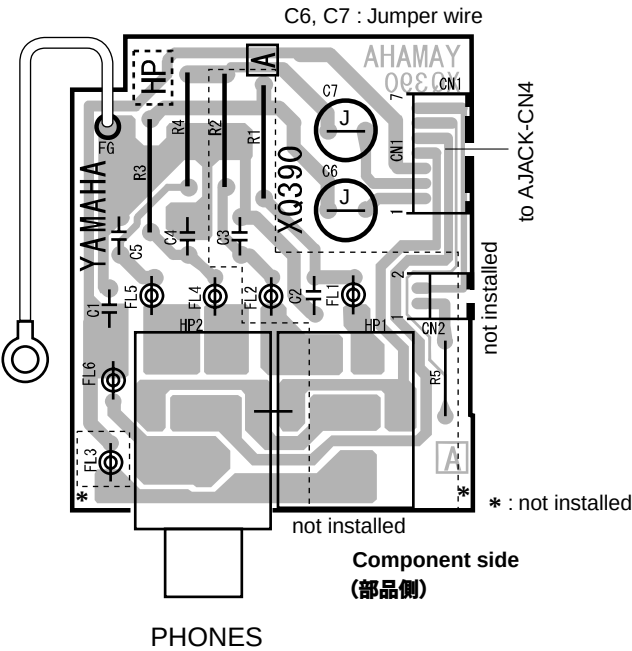



Component side
(部品側)

PNR, MV2: 2NA-V845520 
HP: 2NA-V004770 

● PNR Circuit Board


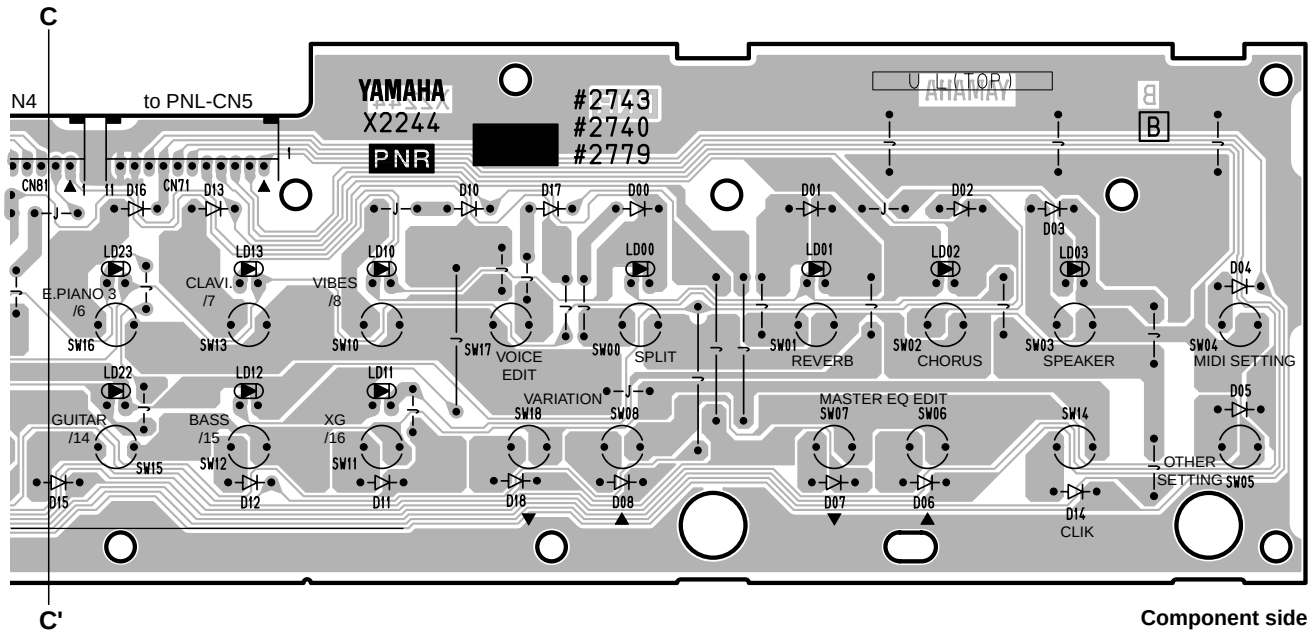


● PN-EQ Circuit Board

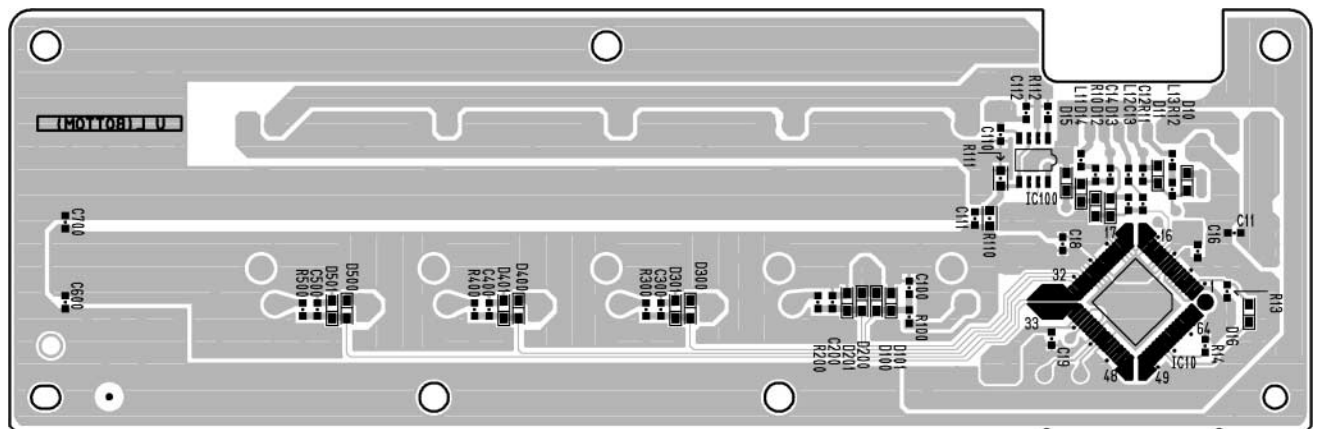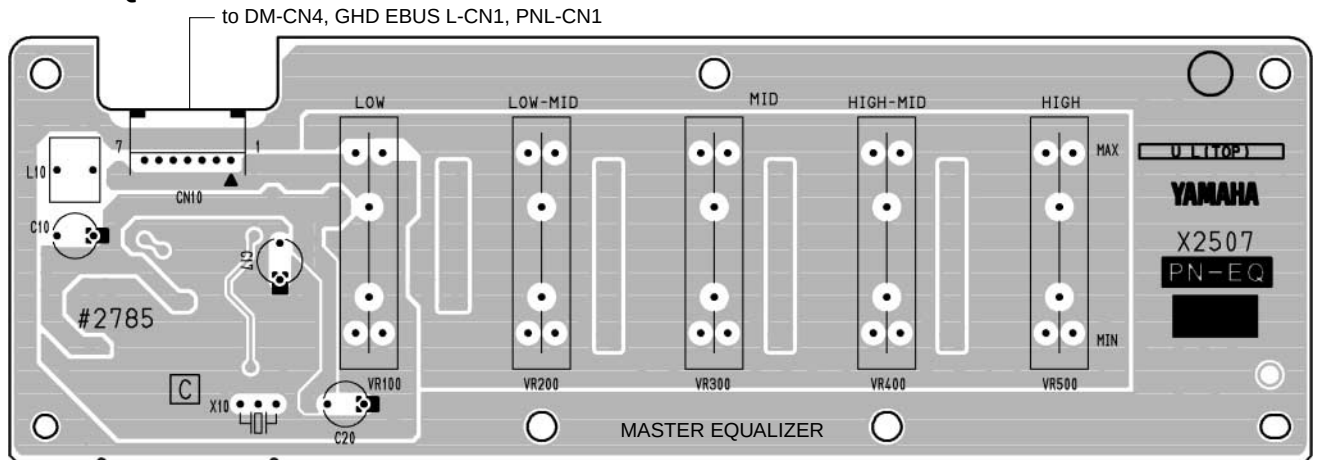



PNR: 2NA-V845520 
 PN-EQ: 2NA-V944340 

● AJACK Circuit Board

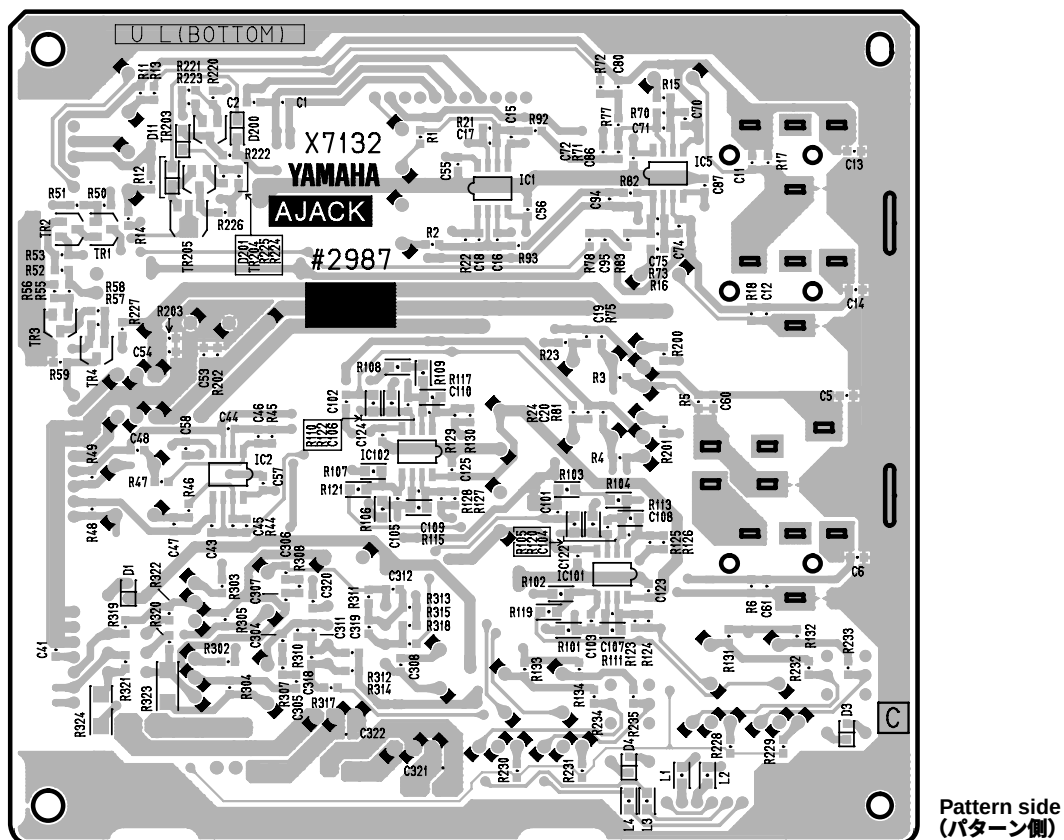
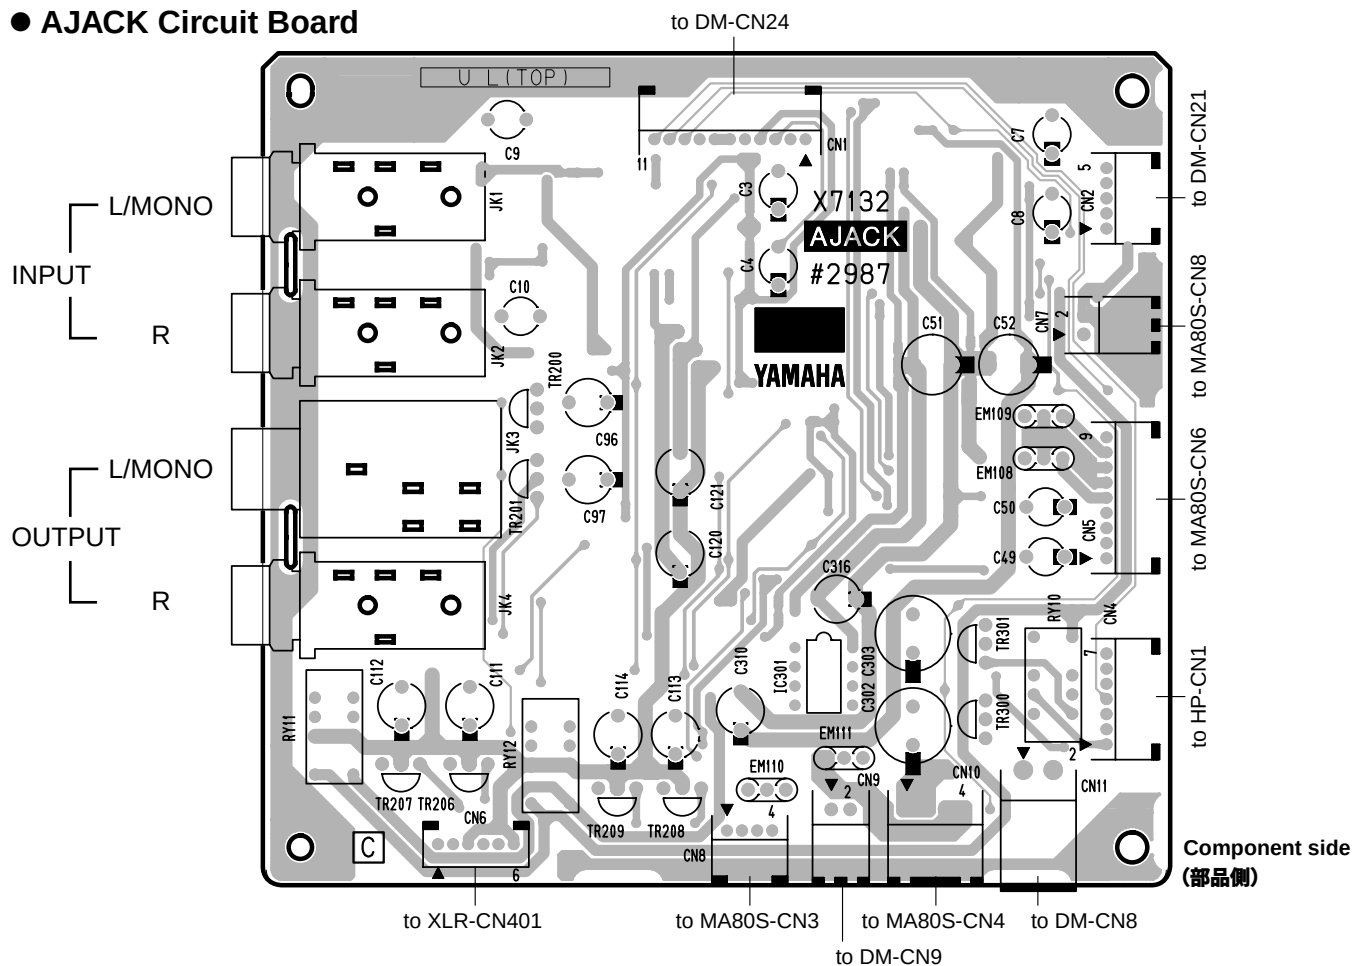


● DJACK Circuit Board


ASSIGNABLE
FOOT PEDAL

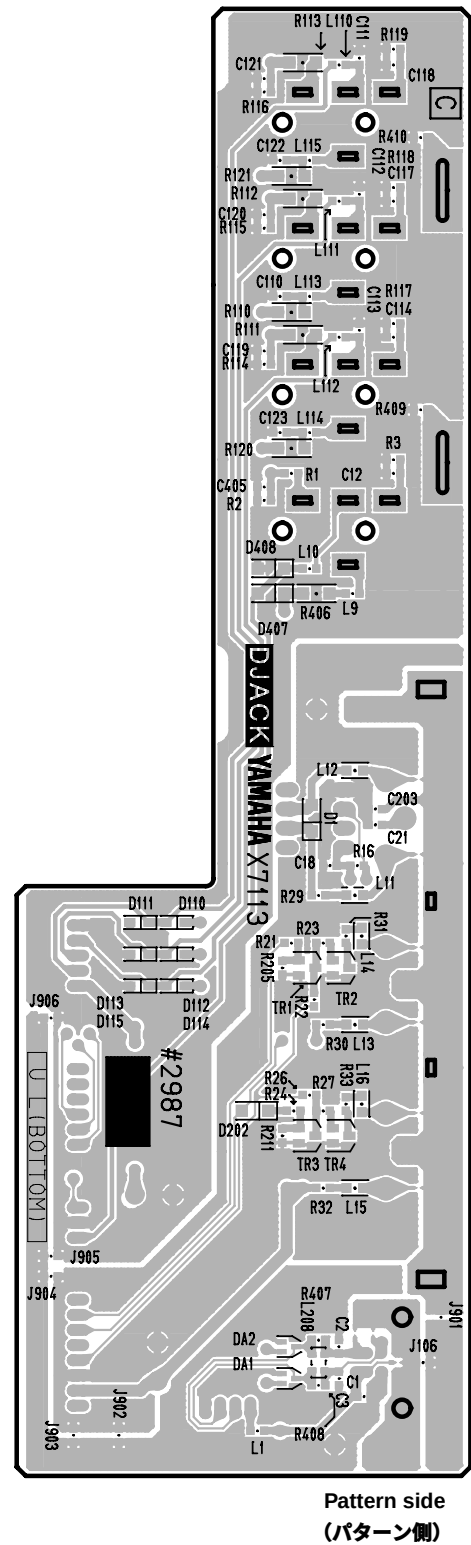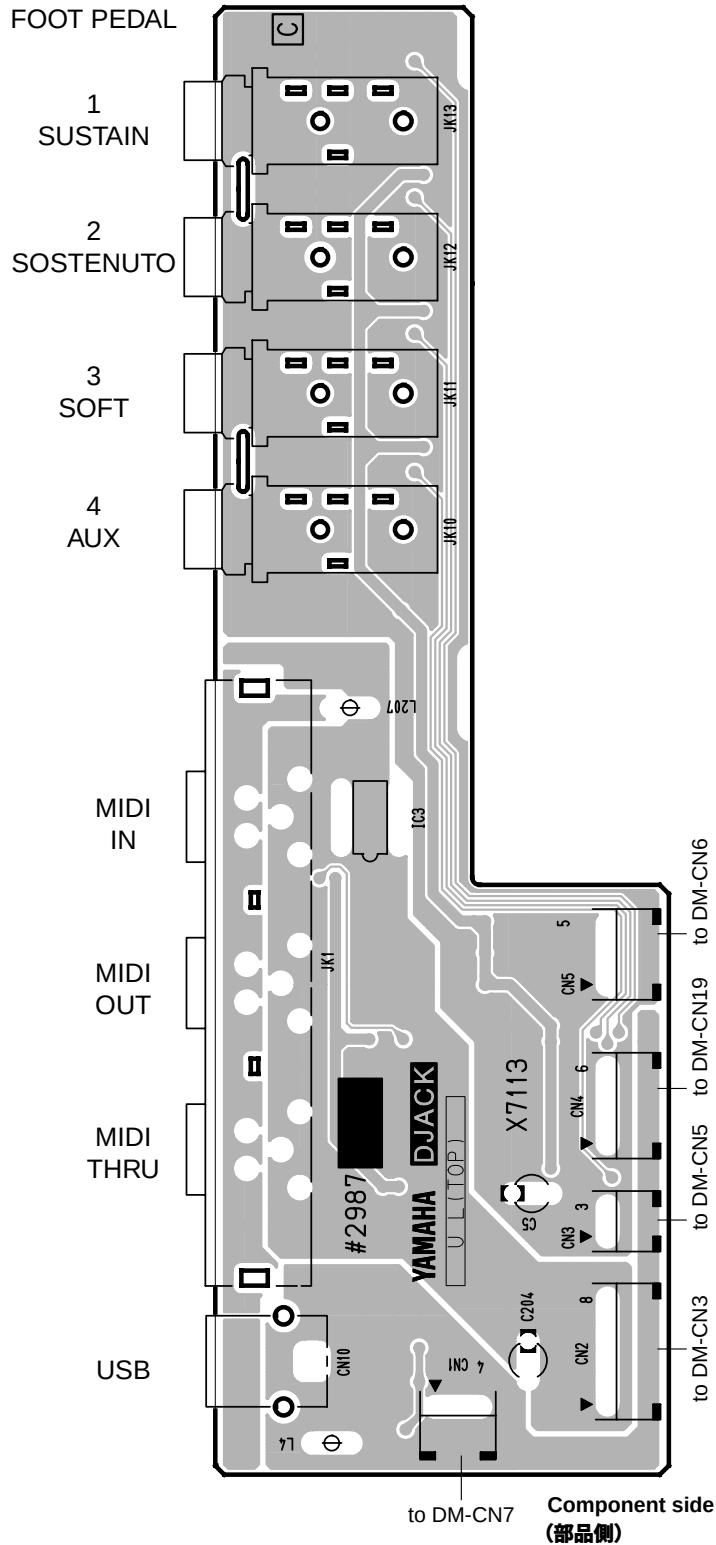

● XLR Circuit Board

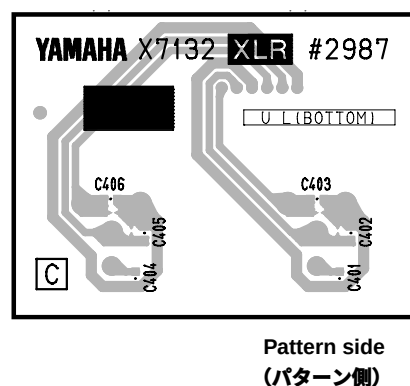
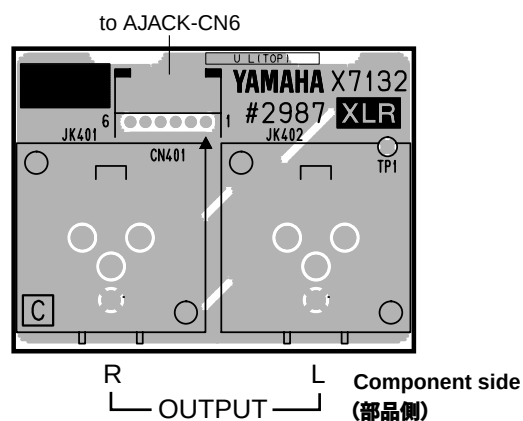


● FU60 Circuit Board

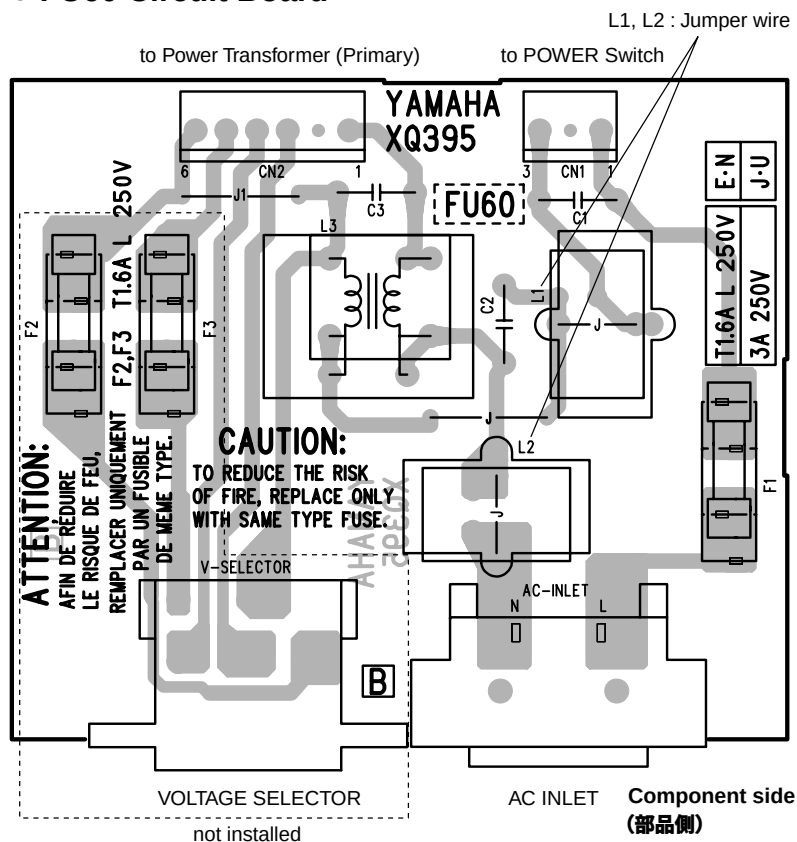



● WMH Circuit Board

● WML Circuit Board

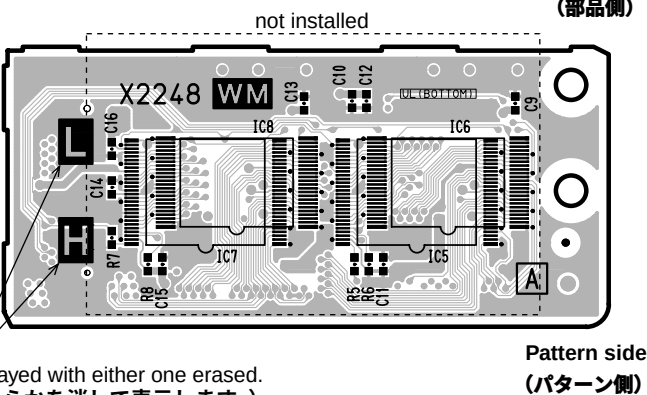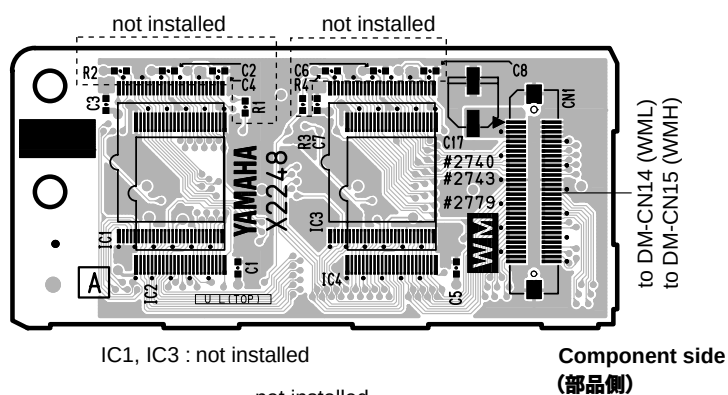



Displayed with either one erased.
(どちらかを消して表示します。)

● MK SUB Circuit Board

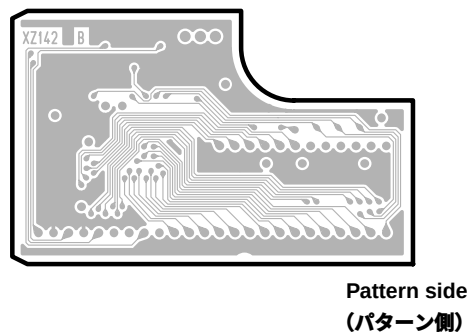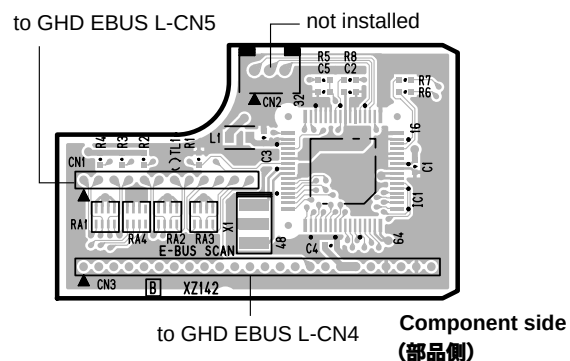



XLR: 2NA-WG41670
FU60: 2NA-VT47830
WMH, WML: 2NA-V856300
MK SUB: 2NA-V658810

● GHD EBUS L Circuit Board

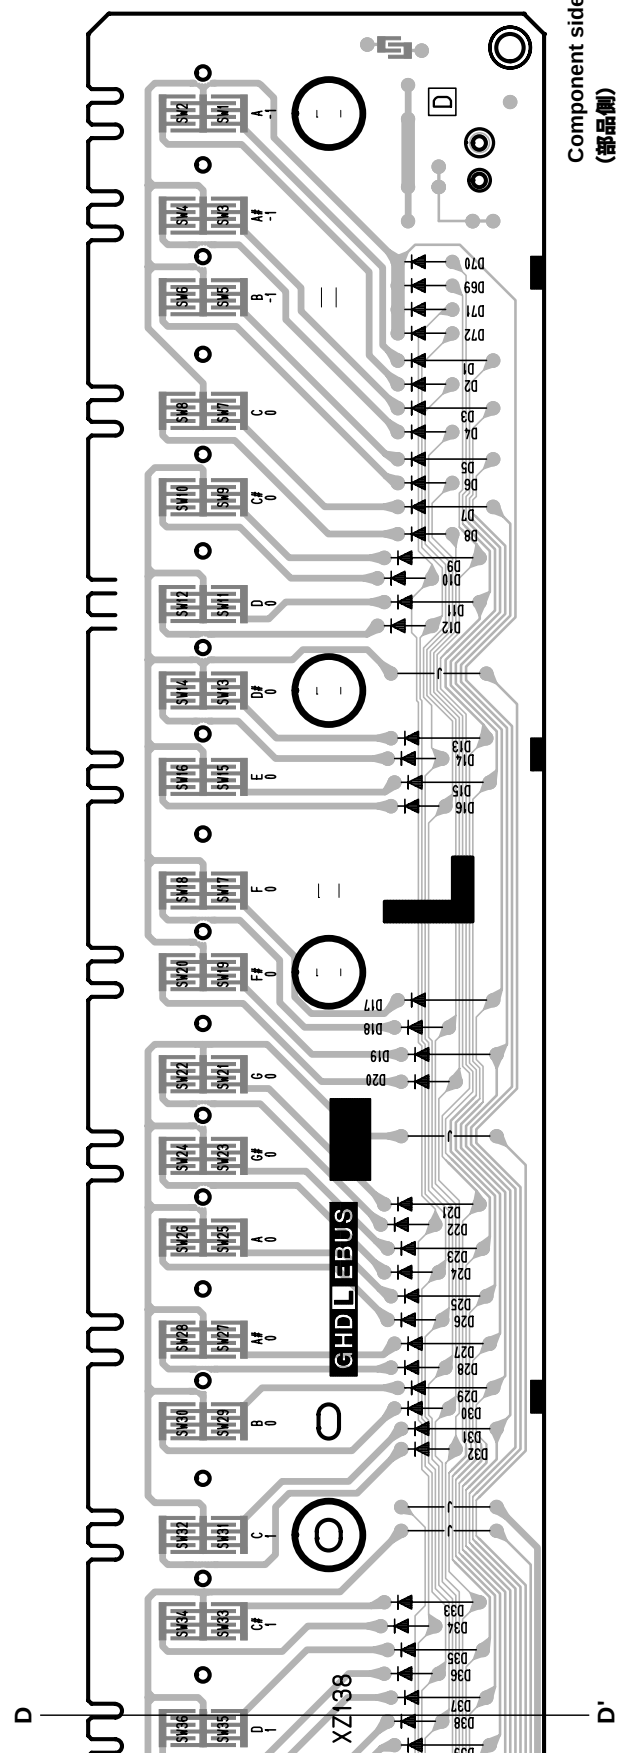
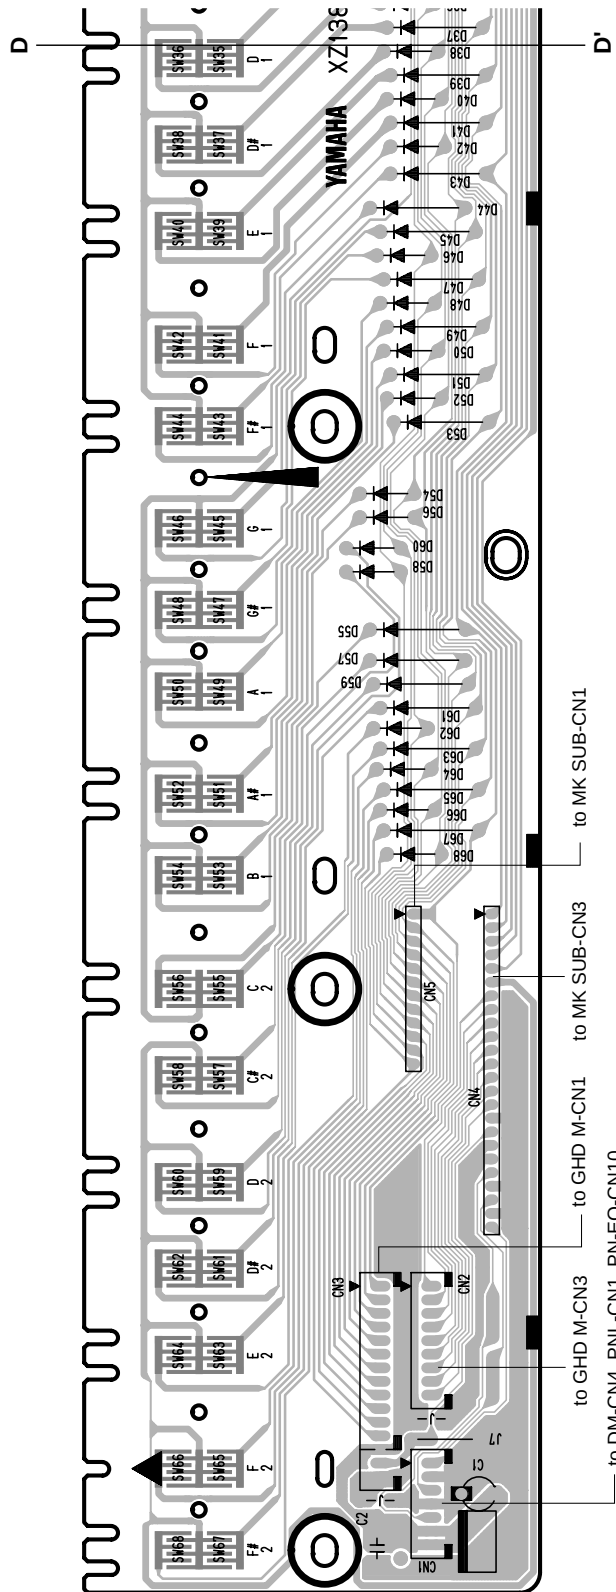


Component side
(部品側)

● GHD M Circuit Board

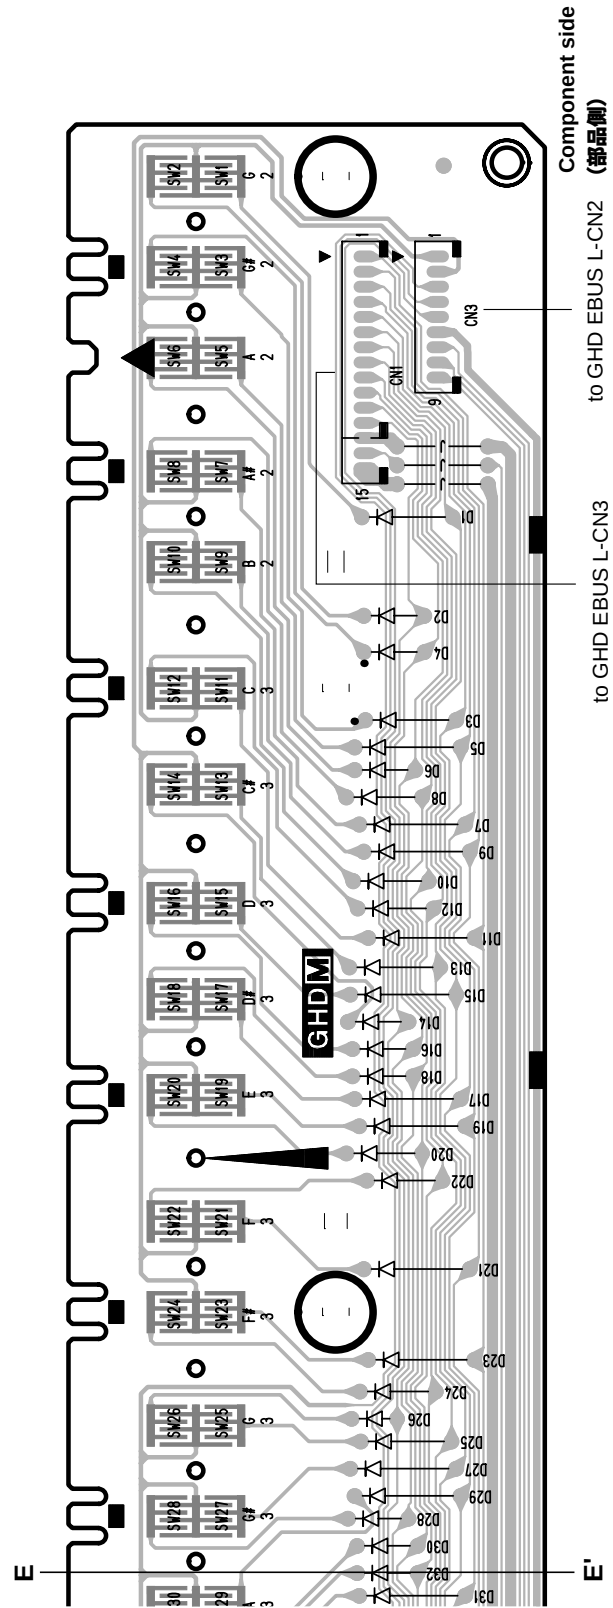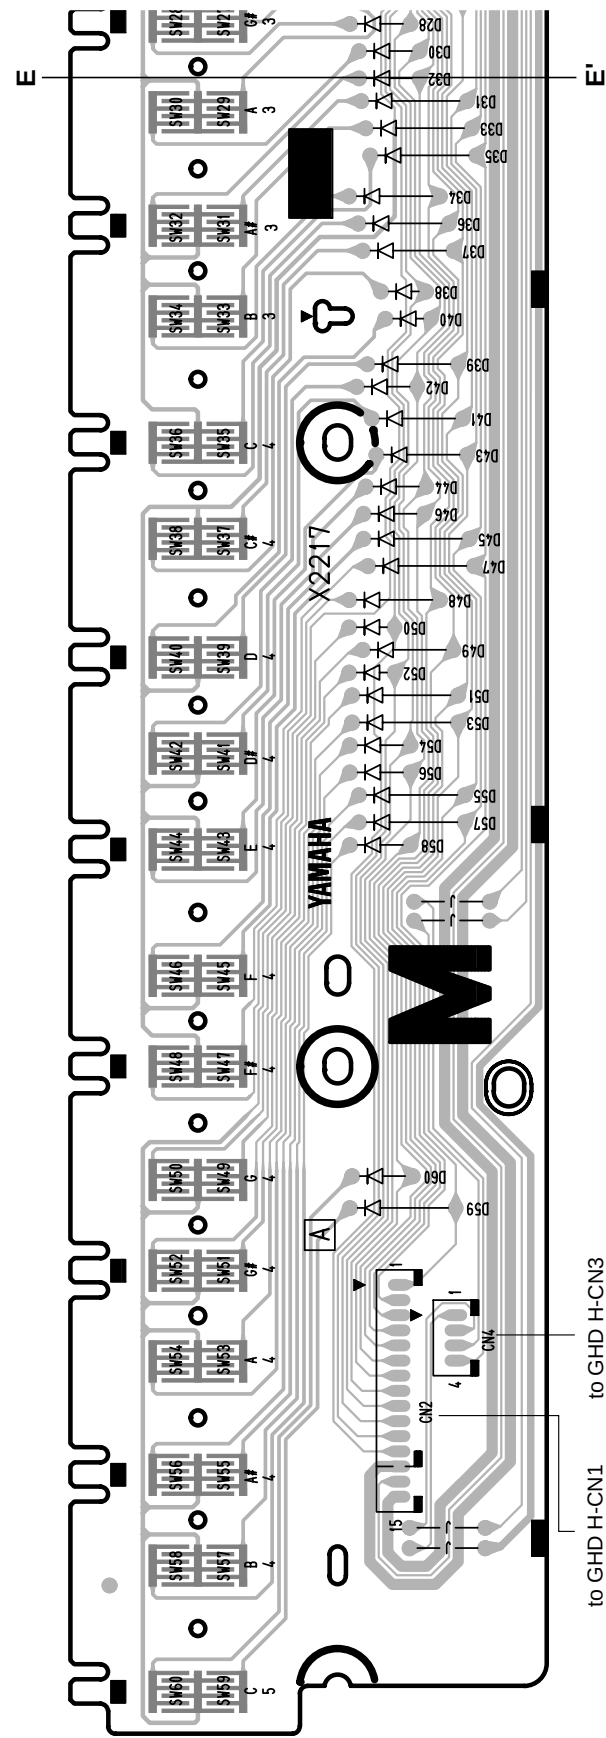

● GHD H Circuit Board

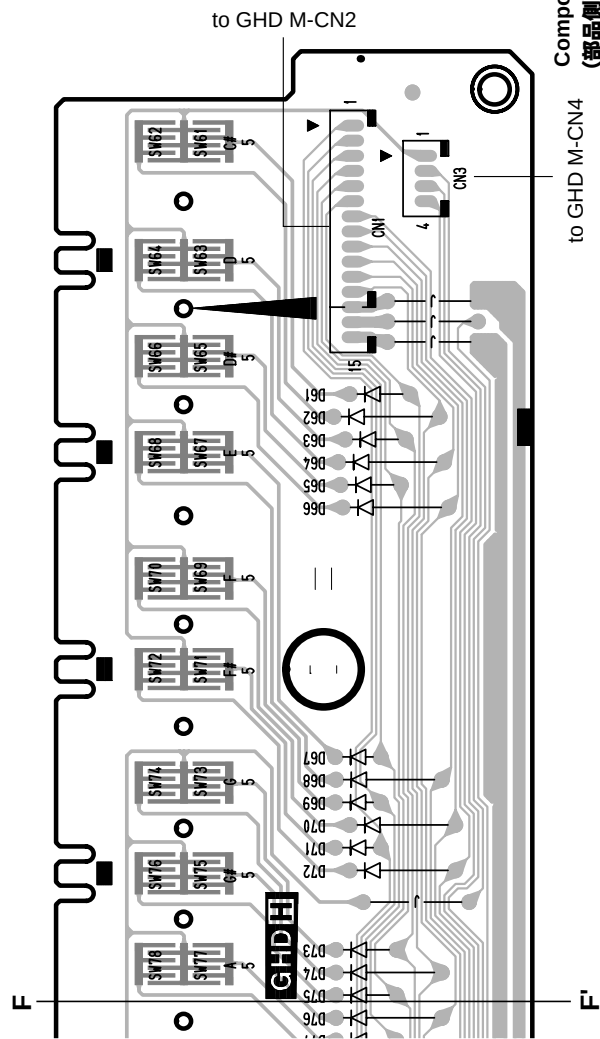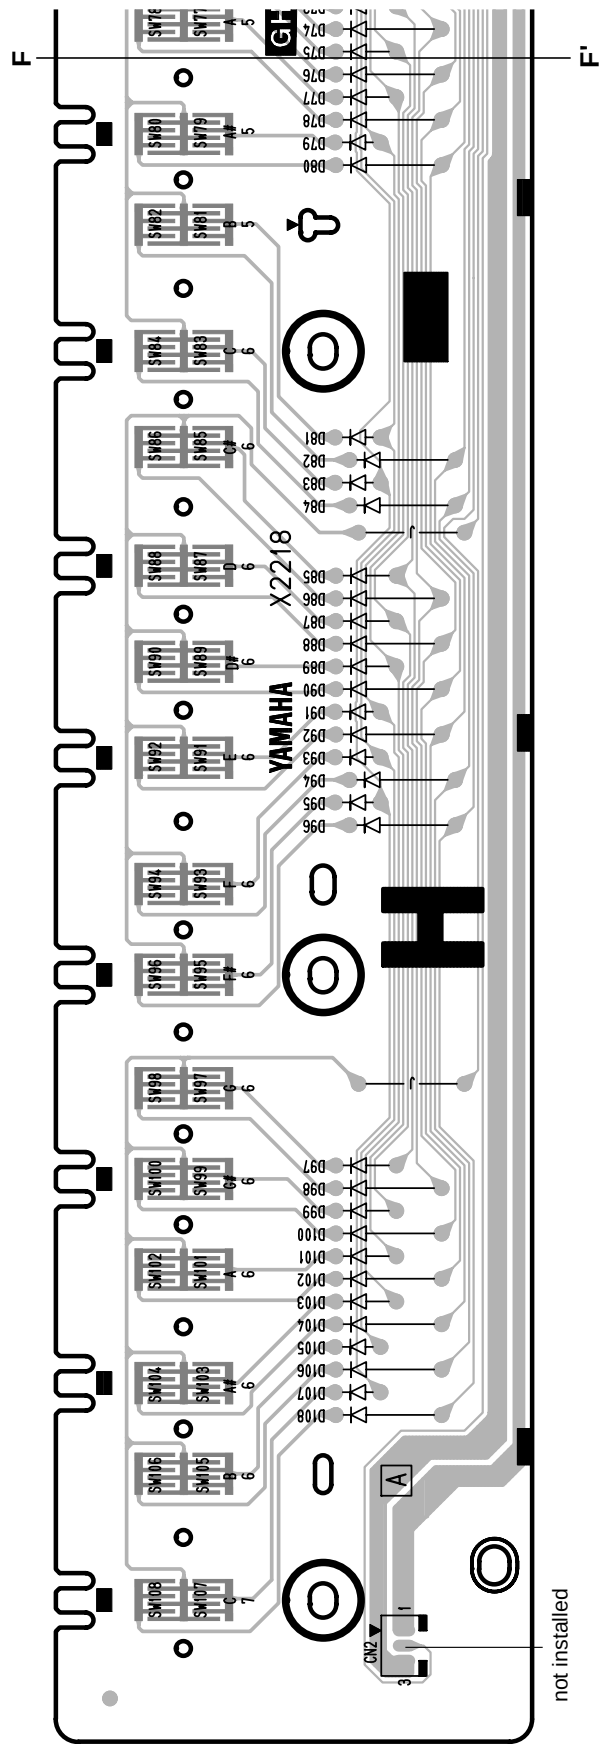

Component side
(部品側)

■ TEST PROGRAM

1. Preparation

1) Measuring instruments: Frequency counter, level meter (with JIS-C filter)


Note) [PHONES] jack: 33Ω load

[AUX OUT] jack: $10k\Omega$ load

[XLR OUT] jack: 600Ω load

Measurement of XLR L, R output jacks (when input of the measuring instrument is unbalanced)

Connect XLR L, R output terminals of the main unit as shown below.

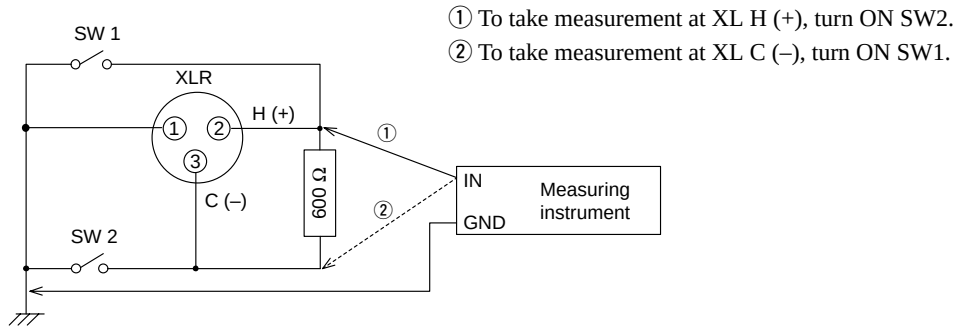

2) Jig: MIDI cable, USB cable (A-B type), PC (personal computer), foot pedal (FC3 or FC4), foot controller (FC7)

3) Set each control knob as follows unless otherwise specified.

[MODULATION]: Min

MASTER EQ. [LOW]–[HIGH]: Center

ZONE CONTROL [ZONE 1]–[ZONE 4]: Center

[SONG VOLUME]: Center

[MASTER VOLUME]: Max (for Test 10, 11 only)

* Use appropriate sound volume for testing.

When headphones are connected, no sound is output through the speaker.

4) To connect the PC and CP300, it is necessary to install the USB-MIDI driver.

Download the USB-MIDI driver from the following URL.

http://www.global.yamaha.com/download/usb_midi/


5) Executing Factory Set (Test No.42) will erase the user data.

Be sure to make a backup of the data in advance. (See page 58)

2. How to enter the Test Program

● When using the manual mode

While pressing the [C#2], [F2] and [G#2] keys, turn on the [POWER] switch.

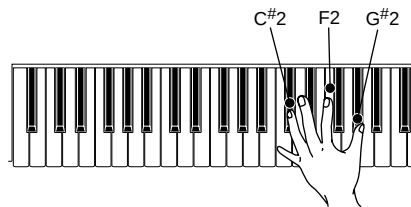

● When using the MIDI mode

After turning on the power to CP300, wait for a few seconds and confirm that the play mode screen (normal mode) appears. Then input the test code “F0 43 73 01 60 00 F7”, and the TEST program will start.

3. Proceeding through the Test Program

● When using the manual mode


When the test program is activated, the sign “TEST CP300” appears on the LCD display.

Select the test program item by pressing the [UP] or [DOWN] button of [TEMPO].

Press the [MIDI OUT] button to execute testing.

When the test result is OK, press the [MIDI OUT] button to return to the screen of test items for selection. Select the next test item by pressing the [UP] or [DOWN] button of [TEMPO]. When the test result is OK, an asterisk (*) is added in front of its item name on display.

When the test result is NG, press the [SONG SELECT] button of [◀ (REW)] to return to the screen of test items for selection and then turn off the [POWER] switch to end the test program.

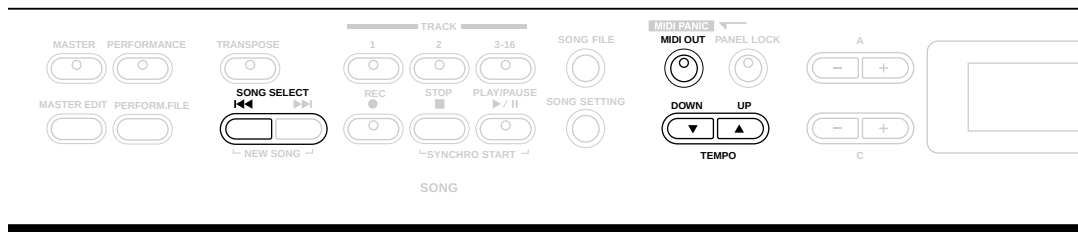

● When using the MIDI mode

Each test is executed by inputting the test code.

When the test result is OK, input the MIDI code “A2 00 00” to have the item select screen displayed and then input the next test code. For the test item which resulted in “OK”, an asterisk (*) appears at the beginning of each item name.

When the test result is NG, input the MIDE code “A2 00 00” to have the item select screen displayed. Then turn off the [POWER] switch to end the Test program.


4. Test program list

No.	LCD	MIDI test code	Test Function and Judgment criteria
1	001: Main Version	A0 01 00	Displays the Main ROM version. The ROM (Program) version is displayed. Example of display for OK: “Program: 1.00” Display for NG: “Program:Err”
2	002: Wave Version	A0 02 00	Displays the Wave ROM version. The Wave ROM version is displayed. Example of display for OK: “Wave: 1.00” Display for NG: “Wave:Err”
3	003: Main Rom Chk1 Display while testing: “Main Rom Chk1--”	A0 03 00	Checks checksum of ROM that is connected to the CPU bus. (simple check) [DM: IC30 or IC31] Outputs the C4 sine wave when the check result is OK and “Main Rom Chk1 OK” is displayed on the LCD display. Display for NG: “Main Rom Chk1 NG”
4	004: Main Ram Chk1 Display while testing: “Main Ram Chk1 --”	A0 04 00	Checks wire connection of RAMs that are connected to the CPU bus. (simple check) [DM: IC22, 23] Outputs the C4 sine wave when the check result is OK and “Main Ram Chk1 OK” is displayed on the LCD display. Display for NG: “Main Ram Chk1 NG”

No.	LCD	MIDI test code	Test Function and Judgment criteria
5	005: FlashRom Chk1 Display while testing: "FlashRom Chk1 --"	A0 05 00	Checks wire connection of the flash memory that is connected to the CPU bus. (simple check) [DM: IC40] Outputs the C4 sine wave when the check result is OK and "Flash Chk1 OK" is displayed on the LCD display. Display for NG: "Flash Chk1 NG"
6	006: WaveRom Chk1 Display while testing: "WaveRom Chk1 --"	A0 06 00	Performs simple check of WAVE ROMs checksum. [WMH: IC2, 4 WML: IC2, 4] Outputs the C4 sine wave when the check result is OK and "WaveRom Chk1 OK" is displayed on the LCD display. Display for NG: "WaveRom Chk1 NG"
7	007: EffectRam Chk Display while testing: "EffectRam Chk --"	A0 07 00	Performs simple check of effect RAM. [DM: IC3] Outputs the sine wave (C4) when the check result is OK and displays "EffectRam Chk OK" is displayed on the LCD display. Display for NG: "EffectRam Chk NG"
8	008: TG Chk Display while testing: "TG Chk --"	A0 08 00	Checks the Sound Source (Autoscale). Sequentially outputs the sine wave by changing the tone of the sound source from the low keys (from C2 to G4). Check by hearing that the produced sound is free from noise and abnormal sound. "TG1 Chk End" appears on the LCD display when testing is completed.
9	009: Pitch Chk Display while testing: "Pitch Chk --"	A0 09 00	Checks the pitch. Connect the frequency counter to the [PHONES] jack. Outputs the sine wave at $440.5 \pm 0.2\text{Hz}$ (PAN = Center) when the test is executed. Sound production stops when returning to selection screen with the [MIDI OUT] button.
10	010: Output R Display while testing: "Output R --"	A0 0A 00	Checks the R channel output. * Once testing is started, [MASTER VOLUME] does not work (Setting is fixed at the position set before starting the test.) Be careful as the sound at a high level may be output. Connect the level meter (with a JIS-C filter) to each output terminal. Set the [MASTER VOLUME] at the MAX. position and check the output level of the R channel. (1kHz sine wave, PAN = R) PHONES L: -34.5dBu or less OUTPUT L/MONO: -49.0dBu or less OUTPUT XLR L+: -49.0dBu or less OUTPUT XLR L-: -49.0dBu or less PHONES R: +0.5dBu $\pm$ 2dB OUTPUT R: +11.0dBu $\pm$ 2dB OUTPUT XLR R+: +11.0dBu $\pm$ 2dB OUTPUT XLR R-: +11.0dBu $\pm$ 2dB
11	011: Output L Display while testing: "Output L --"	A0 0B 00	Checks the L channel output. * Once testing is started, [MASTER VOLUME] does not work (Setting is fixed at the position set before starting the test.) Be careful as the sound at a high level may be output. Connect the level meter (with a JIS-C filter) to each terminal. Set the [MASTER VOLUME] at the MAX. position and check the output level of the L channel. (1kHz sine wave, PAN = R) PHONES L: +0.5dBu $\pm$ 2dB OUTPUT L/MONO: +11.0dBu $\pm$ 2dB OUTPUT XLR L+: +11.0dBu $\pm$ 2dB OUTPUT XLR L-: +11.0dBu $\pm$ 2dB PHONES R: -34.5dBu or less OUTPUT R: -49.0dBu or less OUTPUT XLR R+: -49.0dBu or less OUTPUT XLR R-: -49.0dBu or less
12	012: EQ Low Display while testing: "EQ Low --"	A0 0C 00	<Usually, this test can be omitted.> Checks the EQ-LOW frequency. Confirm that about 65.4 Hz (C1) sine wave sound is produced. (PAN = Center) When the test item is ended with the [MIDI OUT] button, the sound stops.

No.	LCD	MIDI test code	Test Function and Judgment criteria
13	013: EQ Mid Display while testing: "EQ Mid --"	A0 0D 00	<Usually, this test can be omitted.> Checks the EQ-MID frequency. Check that the sine wave of about 523 Hz (C4) sounds. (PAN = Center) When the test item is ended with the [MIDI OUT] button, the sound stops.
14	014: EQ High Display while testing: "EQ High --"	A0 0E 00	<Usually, this test can be omitted.> Checks the EQ-HIGH frequency. Confirm that about 4186Hz (C7) sine wave sound is produced. (PAN = Center) When the test item is ended with the [MIDI OUT] button, the sound stops.
15	015: D/A Noise Display while testing: "D/A Noise --"	A0 0F 00	Press the any key on the keyboard. At this time, confirm that there is no distortion and noise. Press the [MIDI OUT] button to terminate the test item.
16	016: SW, LED Chk Example of display while testing: "Push MASTER"	A0 10 00	Checks the switches on the panel and LED. Press the switches as their names are indicated on the LCD. When each switch is pressed, its pre-assigned note is output. (See Table 1 on p. 45.) When the switch with LED is pressed, that LED will light up at the same time. Upon completion of checking all switches, "SW, LED Chk OK" is displayed on the LCD display.
17	017: All LED On Display while testing: "All LED On --"	A0 11 00	Check that all LEDs light up.
18	018: Red LED On Display while testing: "Red LED On --"	A0 12 00	Check that all red LEDs light up.
19	019: Green LED On Display while testing: "Green LED On --"	A0 13 00	Check that all green LEDs light up.
20	020: Orange LED On Display while testing: "Orange LED On --"	A0 14 00	Check that all orange LEDs light up.
21	021: All LCD On 	A0 15 00	Check that all LCD dots light up.
22	022: All LCD Off 	A0 16 00	Check that all LCD dots go off.
23	023: Pedal3 Chk Display while testing: • "Pedal 3 Max" when the pedal is detected • "Pedal 3 Min" when Max is detected • "Pedal 3 Out" when Min is detected	A0 17 00	Checks the soft pedal. Connect foot pedal (FC3 or FC4) to the FOOT PEDAL 3 [SOFT] terminal. Perform the test. Confirm that C3 sounds when the pedal is pressed and G3 sounds when the pedal is released. After this, confirm that C4 sounds when the cable is removed from the terminal and that "Pedal3 Chk OK" is displayed on the LCD display. "No Pedal" appears when the pedal cannot be detected.
24	024: Pedal2 Chk Display while testing: • "Pedal 2 Max" when the pedal is detected • "Pedal 2 Min" when Max is detected • "Pedal 2 Out" when Min is detected	A0 18 00	Checks the sostenute pedal. Connect foot pedal (FC3 or FC4) to the FOOT PEDAL 2 [SOSTENUTO] terminal. Perform the test. Confirm that C3 sounds when the pedal is pressed and G3 sounds when the pedal is released. After this, confirm that C4 sounds when the cable is removed from the terminal and that "Pedal2 Chk OK" is displayed on the LCD display. "No Pedal" appears when the pedal cannot be detected.

No.	LCD	MIDI test code	Test Function and Judgment criteria
25	025: Pedal1 Chk Display while testing: • “Pedal 1 Max” when the pedal is detected • “Pedal 1 Min” when Max is detected • “Pedal 1 Out” when Min is detected	A0 19 00	Checks the sustain pedal. Connect foot pedal (FC3 or FC4) to the FOOT PEDAL 1 [SUSTAIN] terminal. Perform the test. Confirm that C3 sounds when the pedal is pressed and G3 sounds when the pedal is released. After this, confirm that C4 sounds when the cable is removed from the terminal and that “Pedal1 Chk OK” is displayed on the LCD display. “No Pedal” appears when the pedal cannot be detected.
26	026: Pedal4 Chk Display while testing: • “Pedal 4 Max” when the pedal is detected • “Pedal 4 Min” when Max is detected • “Pedal 4 Out” when Min is detected	A0 1A 00	Checks the aux pedal. Connect the foot controller (FC7) to the FOOT PEDAL 4 [AUX] terminal. Perform the test. Confirm that C3 sounds when the pedal is depressed and G3 sounds when the pedal is released. After this, confirm that C4 sounds when the cable is disconnected from the terminal and “Pedal 4 Chk OK” is displayed on the LCD display. “No Pedal” appears when the pedal cannot be detected.
27	027: P.B Wheel Chk Display while testing: • “P.B. Wheel Down” when waiting for Min detection • “P.B. Wheel Up” when Min is detected • “P.B. Wheel Center” when Max is detected	A0 1B 00	Checks the pitch bent wheel. Perform the test and confirm the following: C3 sounds when the [PITCH] wheel is turned forward (DOWN), G3 sounds when it is turned to the rear (UP) and C4 sounds when it is returned to center (CENTER). Confirm that “P.B Wheel Chk OK 064” is displayed on the LCD display.
28	028: P.B Center Chk Display while testing: “P.B Center Chk --”	A0 1C 00	Checks the pitch bent center. Perform the test and confirm that “P.B Center Chk OK 064” is displayed on the LCD display. (Do not touch the wheel once the test has started.) Display for NG: “P.B. Wheel Chk NG xxx”
29	029: Mod Wheel Chk Display while testing: • “Mod Wheel Up” when waiting for Max detection • “Mod Wheel Down” when Max is detected	A0 1D 00	Checks the modulation wheel. Place the [MODULATION] wheel in the center position (CENTER) before starting the test. Perform the test and confirm that C3 sounds when the [MODULATION] wheel is turned to the rear (UP) and that C4 sounds when it is turned forward (DOWN). Confirm that “Mod Wheel Chk OK” is displayed on the LCD display.
30	030: Song Volume Chk Display while testing: • “Song volume Min” when waiting for Min detection • “Song Volume Max” when Min is detected	A0 1E 00	Checks the song volume. Place the [SONG VOLUME] slider in the center position (CENTER) before starting the test. Perform the test and confirm that C3 sounds when the [SONG VOLUME] slider is moved forward (MIN) and that G3 sounds when it is moved to the rear (MAX). Confirm that “Song Volume Chk OK” is displayed on the LCD display.
31	031: Zone Slider Chk Example of display while testing: • “Zone1 Min” when waiting for ZONE 1 Min detection • “Zone 1 Max” when ZONE 1 Min is detected • “Zone 1 Center” when ZONE 1 Max is detected • “Zone 2 Min” when ZONE 1 Center is detected	A0 1F 00	Checks the zone slider (with center click). Place the [ZONE 1]–[ZONE 4] ZONE CONTROL sliders in the center position (CENTER) before starting the test. Perform the test and confirm the following: C3 sounds when the [ZONE 1] ZONE CONTROL slider is moved forward (MIN), G3 sounds when it is moved to the rear (MAX), and C4 sounds when it is set the center position (CENTER). In the same manner as [ZONE 1], check the others in the following sequence: [ZONE 2], [ZONE 3], [ZONE 4]. When the [ZONE 4] check is completed, confirm that “Zone Slider Chk OK” is displayed on the LCD display.

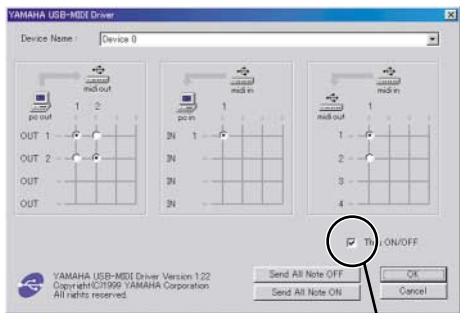No.	LCD	MIDI test code	Test Function and Judgment criteria
32	032: EQ Slider Chk Example of display while testing: • “LOW Min” when waiting for LOW Min detection • “LOW Max” when LOW Min is detected • “LOW Center” when LOW Max is detected • “LO-MID Min” when LOW Center is detected	A0 20 00	Checks the master equalizer slider (with center click). Place the [LOW]–[HIGH] MASTER EQUALIZER sliders in the center position (CENTER) before starting the test. Perform the test and confirm the following: C3 sounds when the [LOW] MASTER EQUALIZER slider is moved forward (MIN), G3 sounds when it is moved to the rear (MAX), and C4 sounds when it is set the center position (CENTER). In the same manner as [LOW], check the others in the following sequence: [LOW-MID], [MID], [HI-MID], [HIGH]. When the [HIGH] check is completed, confirm that “EQ Slider Chk OK” is displayed on the LCD display.
33	033: Master Volume Chk Display while testing: • “Master Volume Min” when waiting for Min detection • “Master Volume Max” when Min is detected	A0 21 00	Checks the master volume. Place the [MASTER VOLUME] control is set to the center position (CENTER) before starting the test. Perform the test and confirm that C3 sounds when the [MASTER VOLUME] control is set to the “MIN” position and that G3 sounds when it is set to the “MAX” position. Confirm that “Master Volume Chk OK” is displayed on the LCD display.
34	034: Midi Chk Display while testing: “Midi Chk --”	A0 22 00	Checks the midi. Connect the [MIDI IN] jack and the [MIDI OUT] jack with a MIDI cable. Perform the test and confirm that C4 sounds and that “Midi Chk OK” is displayed on the LCD display. Remove the MIDI cable when the test is over. Display for NG: “Midi Chk NG”
35	035: USB Chk	A0 23 00	Checks the USB jack. Connect the [USB] jack and the PC (personal computer) with a USB cable, and then set the MIDI-USB driver of PC as though. Open the control panel of the PC and make settings as shown below by clicking  .  Enter a check mark for Thru ON/OFF. “USB Chk--” appears when the test is performed. Then “USB Chk Out” appears when the USB cable is disconnected. Confirm that “USB Chk In” appears when the USB cable is inserted, C4 sounds after some seconds and “USB Chk OK” appears on the LCD display. Disconnect the USB cable when testing is over. Display for NG: “USB Chk NG”

No.	LCD	MIDI test code	Test Function and Judgment criteria
36	032: Keyboard Type Chk	A0 24 00	Checks the keyboard type. Perform the test and confirm that C4 sounds and that “KeyType OK (GHD)” is displayed on the LCD display. Display for NG: “Keyboard Type Chk NG”
37	037: Main Rom Chk2 Display while testing: “Main Rom Chk2 --”	A0 25 00	<Usually, this check can be omitted.> Checks the ROM that is connected to the CPU bus. Outputs the C4 sine wave when the check result is OK and “Main Rom Chk2 OK” is displayed on the LCD display. Display for NG: “Main Rom Chk2 NG”
38	038: Main Ram Chk2 Display while testing: “Main Ram Chk2 --”	A0 26 00	<Usually, this check can be omitted.> Checks all the RAMs that are connected to the CPU bus. Outputs the C4 sine wave when the check result is OK and “Main Ram Chk2 OK” is displayed on the LCD display. It takes about 5 seconds. Display for NG: “Main Ram Chk2 NG”
39	039: Flash Rom Chk2 Display while testing: “FlashRom Chk2 --”	A0 27 00	<Usually, this check can be omitted.> Checks the flash memory that is connected to the CPU bus. Outputs the C4 sine wave when the check result is OK and “Flash Chk2 OK” is displayed on the LCD display. It takes about 40 seconds. Display for NG: “Flash Chk2 NG”
40	040: WaveRom Chk2 Display while testing: “WaveRom Chk2 --”	A0 28 00	<Usually, this check can be omitted.> Checks the WAVE ROMs. Outputs the C4 sine wave when the check result is OK and “Wave Rom Chk2 OK” is displayed on the LCD display. It takes about 25 seconds. Display for NG: “WaveRom Chk2 NG”
41	041: EffectRam Chk2 Display while testing: “EffectRam Chk2 --”	A0 29 00	<Usually, this check can be omitted.> Checks the Effect RAM. Outputs the C4 sine wave when the check result is OK and “Effect Ram Chk2 OK” is displayed on the LCD display. It takes about 15 seconds. Display for NG: “EffectRam Chk2 NG”
42	042: Factory Set Display while testing: “Factory Set --”	A0 2A 00	When this test is executed, the factory preset data will be set in the Flash ROM. Check that “Factory Set OK” is displayed on the LCD display. It takes about 15 seconds. * After performing this Factory Set function, be sure to execute No.43 “Test Exit”. At this time, do not turn off the power until “Grand Piano 1” appears on the LCD display.
43	043: Test Exit	A0 2B 00	To end the test program and reset to the normal mode (for restarting).

Table 1

Order	Switch Name	LED	Note	Order	Switch Name	LED	Note
1	MASTER	R	G1	29	GRAND PIANO1	O	B3
2	PERFORMANCE	O	G#1	30	GRAND PIANO2	O	C4
3	TRANPOSE	O	A1	31	MONO PIANO	O	C#4
4	MASTER EDIT		A#1	32	E.PIANO1	O	D4
5	PERFORM.FILE		B1	33	E.PIANO2	O	D#4
6	SONG SELECT ◀◀ (REW)		C2	34	E.PIANO3	O	E4
7	SONG SELECT ▶▶ (FWD)		C#2	35	CLAVI.	O	F4
8	TRACK 1	R/G	D2	36	VIBES	O	F#4
9	TRACK 2	R/G	D#2	37	ORGAN1	O	G4
10	TRACK 3-16	R/G	E2	38	ORGAN2	O	G#4
11	REC	R	F2	39	HARPSI.	O	A4
12	STOP		F#2	40	STRINGS	O	A#4
13	PLAY/PAUSE	G	G2	41	CHOIR/PAD	O	B4
14	SONG FILE		G#2	42	GUITAR	O	C5
15	SONG SETTING		A2	43	BASS	O	C#5
16	MIDI OUT	O	A#2	44	XG	O	D5
17	PANEL LOCK	R	B2	45	VOICE EDIT		D#5
18	TEMPO ▼ (DOWN)		C3	46	SPLIT	O	E5
19	TEMPO ▲ (UP)		C#3	47	REVERB	O	F5
20	LCD A –		D3	48	CHORUS	O	F#5
21	LCD A +		D#3	49	VARIATION ▼		G5
22	LCD C –		E3	50	VARIATION ▲		G#5
23	LCD C +		F3	51	MASTER EQ EDIT ▼		A5
24	LCD B –		F#3	52	MASTER EQ EDIT ▲		A#5
25	LCD B +		G3	53	SPEAKER	R	B5
26	LCD D –		G#3	54	MIDI SETTING		C6
27	LCD D +		A3	55	CLICK		C#6
28	EXIT		A#3	56	OTHER SETTING		D6

R: Red O: Orange G: Green

● Inspections of the others

1. MASTER VOLUME

Usually, it judges by feeling inspection, and when there is a doubt, it judges in measured value.

The amount of change should be the following value.

Test program item: Output Level R Check/

Output Level L Check

Maximum attenuation: Not less than 80 dB

2. AUX IN

Input a sine wave (1kHz, 0dBu) into the INPUT L/ MONO terminal. With the phone jack inserted to R ch and no signal inputted, confirm that the output level at each terminal is as follows.

OUTPUT L/MONO: +2.5dBu ± 2dB

OUTPUT R: less than – 57.5dBu

PHONES L: – 6.5 dBu ± 2dB

PHONES R: less than – 41.5 dBu

OUTPUT XLR L + : + 3.0 dBu ± 2dB

OUTPUT XLR L – : + 3.0 dBu ± 2dB

OUTPUT XLR R + : less than – 57.0 dBu

OUTPUT XLR R – : less than – 57.0 dBu

3. NOISE

When nothing is pronounced, L and R ch should become below the following value.

PHONES L, R: less than -85 dBu

● Factory set

- MASTER VOLUME: MIN.
- TEST PROGRAM: Factory Set
- SONG VOLUME: MAX.
- MODURATION: MIN.
- MASTER EQ. [LOW]–[HIGH] CENTER
- ZONE CONTROL [ZONE 1]–[ZONE 4]: MAX.

■ テストプログラム


1. 準備

1) 測定器: 周波数カウンタ、レベルメーター(JIS-C フィルター使用)

注) [PHONES] 端子: 33 Ω 負荷、
[AUX OUT] 端子: 10 k Ω 負荷、
[XLR OUT] 端子: 600 Ω 負荷

XLR L, Rの測定(測定器の入力がアンバランスの場合)

本体のXLR L, R出力端子
下図のように接続します。

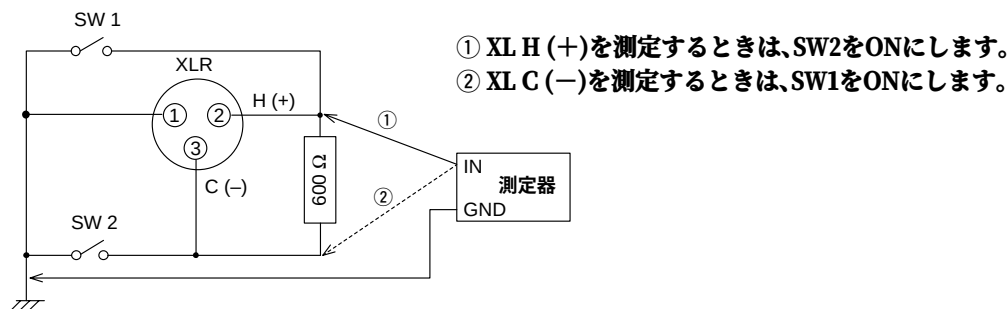

2) 治具: MIDI ケーブル、USBケーブル(A-Bタイプ)、PC(パーソナルコンピュータ)、
フットペダル(FC3またはFC4)、フットコントローラー(FC7)

3) 各ボリュームは、特に指示のない場合は下記の状態にしておきます。

- [MODULATION]: 最小
 - MASTER EQ [LOW]—[HIGH]: 中央
 - ZONE CONTROL [ZONE 1]—[ZONE 4]: 中央
 - [SONG VOLUME]: 中央
 - [MASTER VOLUME]: 最大(Test 10, 11のみ)
- *適当な音量でテストを行ってください。

ヘッドホンを接続している場合は、スピーカーから音が出ません。


4) PCとCP300を接続する為にはUSB-MIDIドライバーをインストールする必要があります。
USB-MIDIドライバーは下記のURLからダウンロードしてください。
http://www.yamaha.co.jp/download/usb_midi/

5) Factory Set(テストNo.42)を行うとユーザのデータが消去されます。
事前にデータバックアップを行ってください。(63ページ参照)

2. テストプログラムの起動

● マニュアルモードの場合

[C#2] と [F2] と [G#2] の鍵盤を同時に押さえながら、[POWER] スイッチをON にします。

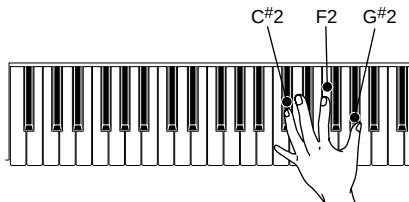

● MIDIモードの場合

CP300の電源を上げた後、数秒待ってプレイモードの画面(通常モード)になったことを確認します。
その後、テストコード“F0 43 73 01 60 00 F7”を送るとテストプログラムに入ります。

3. テストの進め方

● マニュアルモードの場合

テストプログラムが起動されると、LCD に“ TEST CP300 ”と表示されます。

[TEMPO] の [UP]、[DOWN] ボタンを押して、テストプログラムの項目を選択します。

[MIDI OUT] ボタンを押して、テストを実行します。


テスト結果が OK の場合は、再度 [MIDI OUT] ボタンを押して項目選択表示に戻します。

[TEMPO] の [UP]、[DOWN] ボタンを押して、次のテスト項目を選択します。

テスト結果が OK だった項目には、項目名の先頭に“ * ”(アスタリスク)が表示されます。

テスト結果が NG の場合は、[SONG SELECT] の [◀◀ (REW)] ボタンを押して、項目選択表示に戻します。

その後、[POWER] スイッチを OFF にして、テストプログラムを終了します。

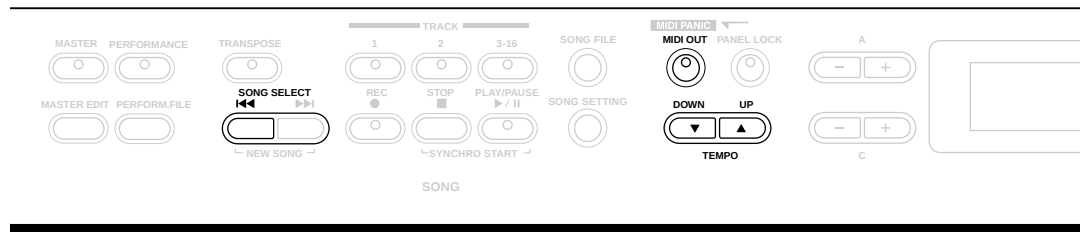

● MIDIモードの場合

テストコードを送ることにより、各テストが行われます。

テスト結果が OK の場合は、MIDIコード“ A2 00 00 ”を送り、項目選択表示に戻した後、次のテストコードを送ります。

テスト結果が OK だった項目には、項目名の先頭に“ * ”(アスタリスク)が表示されます。

テスト結果が NG の場合は、MIDIコード“ A2 00 00 ”を送り、項目選択表示に戻します。

その後、[POWER] スイッチを OFF にして、テストプログラムを終了します。

4. テスト一覧

No.	LCD 表示	MIDI テストコード	テスト内容及び判定条件など
1	001: Main Version	A0 01 00	Main ROM のバージョン表示 ROM (Program) のバージョンを表示します。 OKの場合の表示例：“ Program:1.00 ” NGの場合の表示：“ Program:Err ”
2	002: Wave Version	A0 02 00	Wave ROM のバージョン表示 Wave ROM のバージョンを表示します。 OKの場合の表示例：“ Wave:1.00 ” NGの場合の表示：“ Wave:Err ”
3	003: Main Rom Chk1 テスト中の表示： “ Main Rom Chk1 -- ”	A0 03 00	CPU のバスに接続されているROM のチェックサム検査をします。 (簡易チェック) [DM: IC30またはIC31] チェックの結果がOKの場合は、C4の正弦波を発音して、LCD に “ Main Rom Chk1 OK ”と表示されます。 NGの場合の表示：“ Main Rom Chk1 NG ”
4	004: Main Ram Chk1 テスト中の表示： “ Main Ram Chk1 -- ”	A0 04 00	CPU のバスに接続されているRAM の結線検査をします。 (簡易チェック) [DM: IC22, 23] チェックの結果がOKの場合は、C4の正弦波を発音して、LCD に “ Main Ram Chk1 OK ”と表示されます。 NGの場合の表示：“ Main Ram Chk1 NG ”

No.	LCD 表示	MIDI テストコード	テスト内容及び判定条件など
5	005: FlashRom Chk1 テスト中の表示： “ FlashRom Chk1 -- ”	A0 05 00	CPU のバスに接続されているフラッシュメモリの結線検査をします。(簡易チェック) [DM: IC40] チェックの結果がOKの場合は、C4の正弦波を発音して、LCD に “ Flash Chk1 OK ”と表示されます。 NGの場合の表示：“ Flash Chk1 NG ”
6	006: WaveRom Chk1 テスト中の表示： “ WaveRom Chk1 -- ”	A0 06 00	WAVE ROMの簡易チェックサム検査をします。 [WMH: IC2, 4 WML: IC2, 4] チェックの結果がOKの場合は、C4の正弦波を発音して、LCD に “ WaveRom Chk1 OK ”と表示されます。 NGの場合の表示：“ WaveRom Chk1 NG ”
7	007: EffectRam Chk テスト中の表示： “ EffectRam Chk -- ”	A0 07 00	エフェクト用RAMの簡易チェックをします。 [DM: IC3] チェックの結果がOKの場合は、C4の正弦波を発音して、LCD に “ EffectRam Chk OK ”と表示されます。 NGの場合の表示：“ EffectRam Chk NG ”
8	008: TG Chk テスト中の表示： “ TG Chk -- ”	A0 08 00	音源 チェック(オートスケール) 音源の音色を順番に切り替えながら、正弦波を低音から順次発音します。(C2 からG4まで)異音、ノイズが無いことを確認します。テスト終了時、LCD に“ TG1 Chk End ”と表示されます。
9	009: Pitch Chk テスト中の表示： “ Pitch Chk -- ”	A0 09 00	ピッチチェック：[PHONES] 端子に周波数カウンターを接続します。 テストを実行すると正弦波(440.5 $\pm$ 0.2 Hz)を発音します。 (PAN=センター) [MIDI OUT] ボタンにて選択画面に戻る際、発音が止まります。
10	010: Output R テスト中の表示： “ Output R -- ”	A0 0A 00	R チャンネル出力チェック * テストがスタートすると[MASTER VOLUME]が効きません(テスト開始前の位置に固定)ので大音量に注意してください。 各出力端子にレベルメーター(JIS- C フィルター使用)を接続します。 [MASTER VOLUME] を最大にして、R チャンネルの出力レベルをチェックします。(1 kHz 正弦波, PAN = R) PHONES L: - 34.5 dBu 以下 PHONES R: + 0.5 dBu $\pm$ 2 dB OUTPUT L/MONO: - 49.0 dBu 以下 OUTPUT R: + 11.0 dBu $\pm$ 2 dB OUTPUT XLR L +: - 49.0 dBu 以下 OUTPUT XLR R +: + 11.0 dBu $\pm$ 2 dB OUTPUT XLR L -: - 49.0 dBu 以下 OUTPUT XLR R -: + 11.0 dBu $\pm$ 2 dB
11	011: Output L テスト中の表示： “ Output L -- ”	A0 0B 00	L チャンネル出力チェック * テストがスタートすると[MASTER VOLUME]が効きません(テスト開始前の位置に固定)ので大音量に注意してください。 各出力端子にレベルメーター(JIS-C フィルター使用)を接続します。 [MASTER VOLUME] を最大にして、L チャンネルの出力レベルをチェックします。(1 kHz 正弦波, PAN = R) PHONES L: + 0.5 dBu $\pm$ 2 dB PHONES R: - 34.5 dBu 以下 OUTPUT L/MONO: + 11.0 dBu $\pm$ 2 dB OUTPUT R: - 49.0 dBu 以下 OUTPUT XLR L +: + 11.0 dBu $\pm$ 2 dB OUTPUT XLR R +: - 49.0 dBu 以下 OUTPUT XLR L -: + 11.0 dBu $\pm$ 2 dB OUTPUT XLR R -: - 49.0 dBu 以下
12	012: EQ Low テスト中の表示： “ EQ Low -- ”	A0 0C 00	<通常、この検査は省略可能です。> EQ - LOW 周波数チェック 約65.4 Hz (C1)の正弦波が発音されることを確認します。 (PAN =センター) テスト項目を終了する際、[MIDI OUT] ボタンで発音が止まります。
13	013: EQ Mid テスト中の表示： “ EQ Mid -- ”	A0 0D 00	<通常、この検査は省略可能です。> EQ - MID 周波数チェック 約523 Hz (C4)の正弦波が発音されることを確認します。 (PAN =センター) テスト項目を終了する際、[MIDI OUT] ボタンで発音が止まります。

No.	LCD 表示	MIDI テストコード	テスト内容及び判定条件など
14	014: EQ High テスト中の表示： “ EQ High -- ”	A0 0E 00	＜通常、この検査は省略可能です。＞ EQ - HIGH 周波数チェック 約4186 Hz (C7)の正弦波が発音されることを確認します。 (PAN =センター) テスト項目を終了する際、[MIDI OUT]ボタンで発音が止まります。
15	015: D/A Noise テスト中の表示： “ D/A Noise -- ”	A0 0F 00	押鍵発音時、ビット落ちノイズ等が無いことを確認します。 テスト項目を終了する際、[MIDI OUT]ボタンを押します。
16	016: SW, LED Chk テスト中の表示例： “ Push MASTER ”	A0 10 00	パネルスイッチ、LED チェック LCD に表示されるスイッチ名を見てそのスイッチを順にON すると、それぞれ決められた音程で発音します。(P. 53 の表1 参照)また、LED のあるスイッチの場合は、LED も点灯します。 すべてのスイッチを押し終えると、LCD に“ SW,LED Chk OK ”と表示されます。
17	017: All LED On テスト中の表示： “ All LED On -- ”	A0 11 00	すべてのLED が点灯することを確認します。
18	018: Red LED On テスト中の表示： “ Red LED On -- ”	A0 12 00	すべての赤色LED が点灯することを確認します。
19	019: Green LED On テスト中の表示： “ Green LED On -- ”	A0 13 00	すべての緑色LED が点灯することを確認します。
20	020: Orange LED On テスト中の表示： “ Orange LED On -- ”	A0 14 00	すべてのオレンジ色LED が点灯することを確認します。
21	021: All LCD On 	A0 15 00	すべてのLCD ドットが点灯することを確認します。
22	022: All LCD Off 	A0 16 00	すべてのLCD ドットが消灯することを確認します。
23	023: Pedal3 Chk テスト中の表示： ・ペダル検出時 “ Pedal 3 Max ” ・Max 検出時 “ Pedal 3 Min ” ・Min 検出時 “ Pedal 3 Out ”	A0 17 00	ソフトペダルチェック FOOT PEDAL 3 [SOFT] 端子にフットペダル(FC3またはFC4)を接続します。 テストを実行して、ペダルを踏むとC3 を発音し、離すとG3 を発音することを確認します。その後、ケーブルを端子から抜くとC4 を発音し、LCD に“ Pedal3 Chk OK ”と表示されることを確認します。 ペダルが検出できない場合は、“ No Pedal ”と表示されます。
24	024: Pedal2 Chk テスト中の表示： ・ペダル検出時 “ Pedal 2 Max ” ・Max 検出時 “ Pedal 2 Min ” ・Min 検出時 “ Pedal 2 Out ”	A0 18 00	ソステヌートペダルチェック FOOT PEDAL 2 [SOSTENUTO] 端子にフットペダル(FC3またはFC4)を接続します。 テストを実行して、ペダルを踏むとC3 を発音し、離すとG3 を発音することを確認します。その後、ケーブルを端子から抜くとC4 を発音し、LCD に“ Pedal2 Chk OK ”と表示されることを確認します。 ペダルが検出できない場合は、“ No Pedal ”と表示されます。

No.	LCD 表示	MIDI テストコード	テスト内容及び判定条件など
25	025: Pedal1 Chk テスト中の表示： ・ペダル検出時 “ Pedal 1 Max ” ・Max 検出時 “ Pedal 1 Min ” ・Min 検出時 “ Pedal 1 Out ”	A0 19 00	サステインペダルチェック FOOT PEDAL 1 [SUSTAIN] 端子にフットペダル(FC3またはFC4) を接続します。 テストを実行して、ペダルを踏むとC3 を発音し、離すとG3 を発音することを確認します。その後、ケーブルを端子から抜くとC4 を発音し、LCD に“ Pedal1 Chk OK ”と表示されることを確認します。 ペダルが検出できない場合は、“ No Pedal ”と表示されます。
26	026: Pedal4 Chk テスト中の表示： ・ペダル検出時 “ Pedal 4 Max ” ・Max 検出時 “ Pedal 4 Min ” ・Min 検出時 “ Pedal 4 Out ”	A0 1A 00	AUXペダルチェック FOOT PEDAL 4 [AUX] 端子にフットコントローラー(FC7)を接続します。 テストを実行して、ペダルを踏むとC3 を発音し、戻すとG3 を発音することを確認します。その後、ケーブルを端子から抜くとC4 を発音し、LCD に“ Pedal4 Chk OK ”と表示されることを確認します。 ペダルが検出できない場合は、“ No Pedal ”と表示されます。
27	027: P.B Wheel Chk テスト中の表示： ・Min 検出待ち “ P.B Wheel Down ” ・Min 検出時 “ P.B Wheel Up ” ・Max 検出時 “ P.B Wheel Center ”	A0 1B 00	ピッチベントホイールチェック テストを実行して、[PITCH] ホイールを手前(DOWN)に回すとC3 を発音し、奥(UP)に回すとG3 を発音し、中央(CENTER)に戻すとC4 を発音することを確認します。 LCD に“ P.B Wheel Chk OK 064 ”と表示されることを確認します。
28	028: P.B Center Chk テスト中の表示： “ P.B Center Chk -- ”	A0 1C 00	ピッチベントセンターチェック テストを実行して、LCD に“ P.B Center Chk OK 064 ”と表示されることを確認します。 (テストに入ったら、[PITCH]ホイールには触れないでください。) NGの場合の表示：“ P.B Wheel Chk NG xxx ”
29	029: Mod Wheel Chk テスト中の表示： ・Max 検出待ち “ Mod Wheel Up ” ・Max 検出時 “ Mod Wheel Down ”	A0 1D 00	モジュレーションホイールチェック テストに入る前に、[MODULATION] ホイールを中央(センター)にしておきます。 テストを実行し、[MODULATION] ホイールを奥(UP)に回すとC3 を発音し、手前(DOWN)に回すとC4 を発音することを確認します。 LCD に“ Mod Wheel Chk OK ”と表示されることを確認します。
30	030: Song Volume Chk テスト中の表示： ・Min 検出待ち “ Song Volume Min ” ・Min 検出時 “ Song Volume Max ”	A0 1E 00	ソングボリュームチェック テストに入る前に、[SONG VOLUME] スライダーを中央(センター)にしておきます。 テストを実行し、[SONG VOLUME]スライダーを手前側(Min)にするとC3 を発音し、奥側(Max)にするとG3 を発音することを確認します。 LCD に“ Song Volume Chk OK ”と表示されることを確認します。
31	031: Zone Slider Chk テスト中の表示例： ・ZONE 1 Min 検出待ち “ Zone1 Min ” ・ZONE 1 Min 検出時 “ Zone1 Max ” ・ZONE 1 Max 検出時 “ Zone1 Center ” ・ZONE 1 Center 検出時 “ Zone2 Min ”	A0 1F 00	ゾーンスライダー(センタークリック付)チェック テストに入る前に、ZONE CONTROLの[ZONE 1], [ZONE 2], [ZONE 3], [ZONE 4] スライダーを中央(センター)にしておきます。 テストを実行し、[ZONE 1]スライダーを手前側(Min)にするとC3 を発音し、奥側(Max)にするとG3 を発音し、中央(Center)にするとC4を発音します。続いて[ZONE 1]と同様のチェック方法で[ZONE 2], [ZONE 3], [ZONE 4]の順番でチェックを行います。 [ZONE 4]まで終わると、LCD に“ Zone Slider Chk OK ”と表示されることを確認します。

No.	LCD 表示	MIDI テストコード	テスト内容及び判定条件など
32	032: EQ Slider Chk テスト中の表示例： ・ LOW Min 検出待ち “ LOW Min ” ・ LOW Min 検出時 “ LOW Max ” ・ LOW Max 検出時 “ LOW Center ” ・ LOW Center 検出時 “ LO-MID Min ”	A0 20 00	EQスライダー(センタークリック付)チェック テストに入る前に、MASTER EQUALIZERの[LOW], [LO-MID], [MID], [HI-MID], [HIGH] スライダーを中央(センター)にしておきます。 テストを実行し、[LOW]スライダーを手前側(Min)にするとC3を発音し、奥側(Max)にするとG3を発音し、中央(Center)にするとC4を発音します。続いて[LOW]と同様のチェック方法で[LO-MID], [MID], [HI-MID], [HIGH]の順番でチェックを行います。 [HIGH]まで終わると、LCD に“ EQ Slider Chk OK ”と表示されることを確認します。
33	033: Master Volume Chk テスト中の表示： ・ Min 検出待ち “ Master Volume Min ” ・ Min 検出時 “ Master Volume Max ”	A0 21 00	マスターボリュームチェック テストに入る前に、[MASTER VOLUME] ツマミを中央(センター)にしておきます。 テストを実行し、[MASTER VOLUME] ツマミを最小(Min)にするとC3を発音し、最大(Max)にするとG3を発音することを確認します。 LCD に“ Master Volume Chk OK ”と表示されることを確認します。
34	034: Midi Chk テスト中の表示： “ Midi Chk -- ”	A0 22 00	MIDI端子チェック [MIDI IN] 端子と[MIDI OUT] 端子をMIDI ケーブルで接続します。 テストを実行すると、C4を発音して、LCD に“ Midi Chk OK ”と表示されることを確認します。テスト終了時にMIDIケーブルを外してください。 NGの場合の表示：“ Midi Chk NG ”
35	035: USB Chk	A0 23 00	USB端子チェック [USB] 端子とPC(パーソナルコンピューター)をUSB ケーブルで接続した後、PC側のMIDI-USBドライバーをスルーに設定します。 テストを実行すると、“ USB Chk -- ”が表示されます。その後、USB ケーブルを外すと“ USB Chk Out ”が表示されます。 USBケーブルを挿入すると“ USB Chk In ”が表示され、数秒後にC4を発音して、LCD に“ USB Chk OK ”と表示されることを確認します。テスト終了時にUSBケーブルを外してください。 NGの場合の表示：“ USB Chk NG ”

No.	LCD 表示	MIDI テストコード	テスト内容及び判定条件など
36	036: Keyboard Type Chk	A0 24 00	鍵盤種類をチェック テストを実行すると、C4を発音して、LCDに“ KeyType OK (GHD) ”と表示されることを確認します。 NGの場合の表示: “ Keyboard Type Chk NG ”
37	037: Main Rom Chk2 テスト中の表示: “ Main Rom Chk2 -- ”	A0 25 00	<通常、この検査は省略可能です。> CPU のバスに接続されているROM をチェックします。 チェックの結果がOKの場合は、C4の正弦波を発音して、LCDに“ Main Rom Chk2 OK ”と表示されます。 NGの場合の表示: “ Main Rom Chk2 NG ”
38	038: Main Ram Chk2 テスト中の表示: “ Main Ram Chk2 -- ”	A0 26 00	<通常、この検査は省略可能です。> CPU のバスに接続されているすべてのRAM をチェックします。 チェックの結果がOKの場合は、C4の正弦波を発音して、LCDに“ Main Ram Chk2 OK ”と表示されます。(約5秒かかります。) NGの場合の表示: “ Main Ram Chk2 NG ”
39	039: FlashRom Chk2 テスト中の表示: “ FlashRom Chk2 -- ”	A0 27 00	<通常、この検査は省略可能です。> CPU のバスに接続されているフラッシュメモリをチェックします。 チェックの結果がOKの場合は、C4の正弦波を発音して、LCDに“ Flash Chk2 OK ”と表示されます。(約40秒かかります。) NGの場合の表示: “ Flash Chk2 NG ”
40	040: WaveRom Chk2 テスト中の表示: “ WaveRom Chk2 -- ”	A0 28 00	<通常、この検査は省略可能です。> WAVE ROM をチェックします。 チェックの結果がOKの場合は、C4の正弦波を発音して、LCDに“ WaveRom Chk2 OK ”と表示されます。(約25秒かかります。) NGの場合の表示: “ WaveRom Chk2 NG ”
41	041: EffectRam Chk2 テスト中の表示: “ EffectRam Chk2 -- ”	A0 29 00	<通常、この検査は省略可能です。> Effect RAM をチェックします。 チェックの結果がOKの場合は、C4の正弦波を発音して、LCDに“ EffectRam Chk2 OK ”と表示されます。(約15秒かかります。) NGの場合の表示: “ EffectRam Chk2 NG ”
42	042: Factory Set テスト中の表示: “ Factory Set -- ”	A0 2A 00	テストを実行すると、Flash ROM を工場出荷状態のデータにセットします。LCDに“ Factory Set OK ”と表示されることを確認します。(約15秒かかります。) ※ このFactory Setを実行した後、必ずテストNo.43の“ Test Exit ”を実施してください。このとき、LCDに“ Grand Piano 1 ”と表示されるまで電源を切らないでください。
43	043: Test Exit	A0 2B 00	テストプログラムを終了し、再起動します。(通常モードに戻ります)

表1

Order	Switch Name	LED	Note	Order	Switch Name	LED	Note
1	MASTER	R	G1	29	GRAND PIANO1	O	B3
2	PERFORMANCE	O	G#1	30	GRAND PIANO2	O	C4
3	TRANPOSE	O	A1	31	MONO PIANO	O	C#4
4	MASTER EDIT		A#1	32	E.PIANO1	O	D4
5	PERFORM.FILE		B1	33	E.PIANO2	O	D#4
6	SONG SELECT ◀◀ (REW)		C2	34	E.PIANO3	O	E4
7	SONG SELECT ▶▶ (FWD)		C#2	35	CLAVI.	O	F4
8	TRACK 1	R/G	D2	36	VIBES	O	F#4
9	TRACK 2	R/G	D#2	37	ORGAN1	O	G4
10	TRACK 3-16	R/G	E2	38	ORGAN2	O	G#4
11	REC	R	F2	39	HARPSI.	O	A4
12	STOP		F#2	40	STRINGS	O	A#4
13	PLAY/PAUSE	G	G2	41	CHOIR/PAD	O	B4
14	SONG FILE		G#2	42	GUITAR	O	C5
15	SONG SETTING		A2	43	BASS	O	C#5
16	MIDI OUT	O	A#2	44	XG	O	D5
17	PANEL LOCK	R	B2	45	VOICE EDIT		D#5
18	TEMPO ▼ (DOWN)		C3	46	SPLIT	O	E5
19	TEMPO ▲ (UP)		C#3	47	REVERB	O	F5
20	LCD A –		D3	48	CHORUS	O	F#5
21	LCD A +		D#3	49	VARIATION ▼		G5
22	LCD C –		E3	50	VARIATION ▲		G#5
23	LCD C +		F3	51	MASTER EQ EDIT ▼		A5
24	LCD B –		F#3	52	MASTER EQ EDIT ▲		A#5
25	LCD B +		G3	53	SPEAKER	R	B5
26	LCD D –		G#3	54	MIDI SETTING		C6
27	LCD D +		A3	55	CLICK		C#6
28	EXIT		A#3	56	OTHER SETTING		D6

R: Red O: Orange G: Green

● その他の検査

1. MASTER VOLUME

通常は官能試験で判断し、疑義がある場合は測定値にて判定します。

変化量は下記の値であることを確認します。

テスト項目: Output Level R Check/
Output Level L Check

減衰量: 80 dB以上

2. AUX IN

INPUT L/MONO に 1kHz 正弦波 0dBu を入力し、R ch にホーンジャックを挿入して無入力とした時、各端子出力は以下の値になることを確認します。

OUTPUT L/MONO: +2.5 dBu ±2 dB

OUTPUT R: – 57.5 dBu 以下

PHONES L: – 6.5 dBu ±2 dB

PHONES R: – 41.5 dBu 以下

OUTPUT XLR L+: +3.0 dBu ±2 dB

OUTPUT XLR L–: +3.0 dBu ±2 dB

OUTPUT XLR R+: – 57.0 dBu 以下

OUTPUT XLR R–: – 57.0 dBu 以下

3. NOISE

何も発音のないときは、L, R ch共に以下の値になることを確認します。

PHONES L, R: – 85 dBu以下

● 出荷設定

- MASTER VOLUME: MIN.
- TEST PROGRAM: Factory Set
- SONG VOLUME: MAX.
- MODURATION: MIN.
- MASTER EQ [LOW]–[HIGH]: CENTER
- ZONE CONTROL [ZONE 1]–[ZONE 4]: MAX.


■ FACTORY SET

It is possible to execute the factory set function even without using the test program.
The CP300 has a Factory Set function for restoring your CP300’s memory to the factory default settings.
This lets you restore the CP300’s default Voices and Performances, as well as its System and other settings.


There are two ways you can restore the CP300’s memory to the factory default settings: 1) Set the “Factory Set” parameter in the Other Settings menu, or 2) Turn the power off and turn the power on again while holding the C7 key (rightmost key on the keyboard).

Method 1

1 Press the [OTHER SETTING] button to access the Other Settings menu.

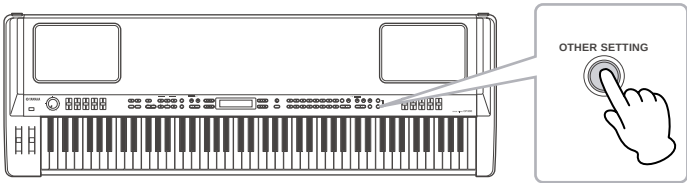


2 Press the [OTHER SETTING] button repeatedly or use the A [-][+] buttons to call up “Factory Set” in the display.

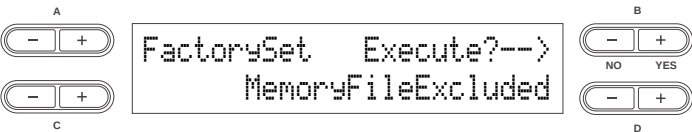

3 Use the D [-][+] buttons to select either “Memory File Excluded” or “Memory File Included.”

Storage memory selections:
Memory File Excluded..... Memory files are maintained.
Memory File Included Memory files are erased.

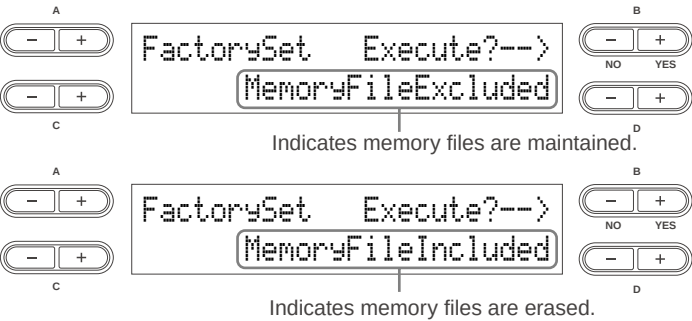

NOTE
The “Character Code” parameter in the Song File menu does not change.

4 Press the B [+ (YES)] button to execute the job.

After the job has been completed, a “Completed” message appears and operation returns to the original display.

CAUTION

For Factory Set operations that take longer to process, you will see the message “Executing” during processing.

Do not switch the power off while this message is on the display. Turning the power off in this state may cause the system to freeze.


Terminology

File: A file contains various data in a group. A file includes both Performance data and Song data.

Method 2


Simultaneously hold down the white key on the right end of the keyboard (C7), and press the [POWER] switch to turn on the power to the CP300.

In this case, the Memory files saved in the storage memory are not erased.

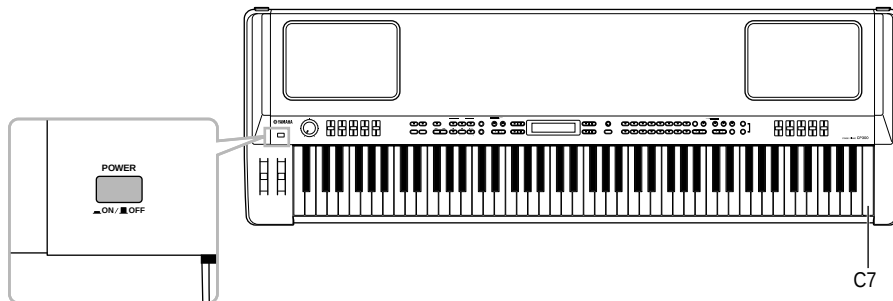

If you wish to erase Memory files at this time, simultaneously hold down the rightmost white key (C7) and black key (B^b6) together and press the [POWER] switch to turn on the power to the CP300.

(Same as the Test program 42 “Factory Set”)

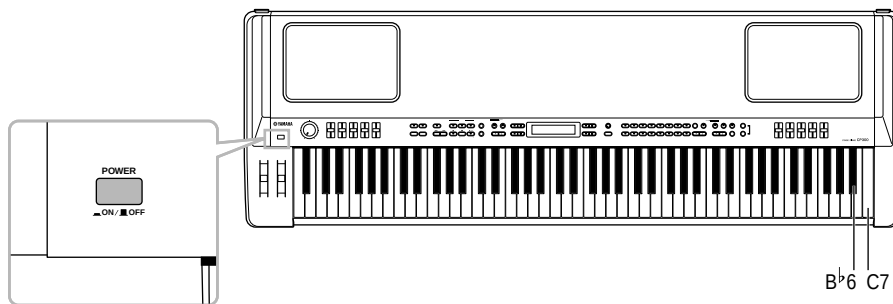

Terminology

Storage memory: This memory area enables you to save Performance files and recorded Songs.

■ ファクトリーセット

テストプログラム上でなくてもファクトリーセットを行うことができます。


CP300には、工場出荷時の状態(初期設定)に戻るファクトリーセットという機能があります。

CP300では、さまざまなボイス、パフォーマンスが内蔵されています。また、ボイス、パフォーマンスごとに細かい設定ができます。誤って設定を変更してしまったときなどファクトリーセットを実行すれば、工場出荷時の状態(初期設定)に戻すことができます。


工場出荷時の状態(初期設定)に戻る方法は2つあります。方法1は、その他の設定[OTHER SETTING]の「FactorySet」を使う方法、方法2は電源を入れ直す方法です。

方法1

1 [OTHER SETTING] ボタンを押して、その他の設定に入る

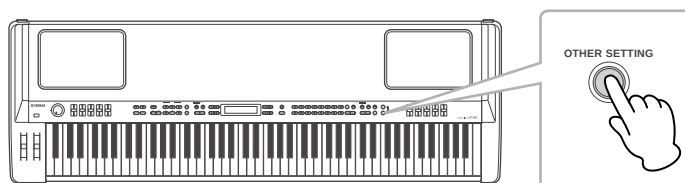

2 [OTHER SETTING] ボタンまたはA [-] [+] ボタンを何度か押して「FactorySet」を選ぶ

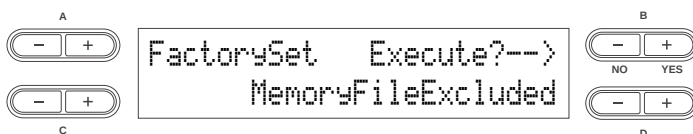


3 D[-] [+] ボタンを押して、保存用メモリーのファイルを消去する/しないを選ぶ

保存用メモリーのファイルについての選択:

MemoryFileExcluded(メモリーファイルエクスクルーデッド).....消去しない

MemoryFileIncluded(メモリーファイルインクルーデッド).....消去する

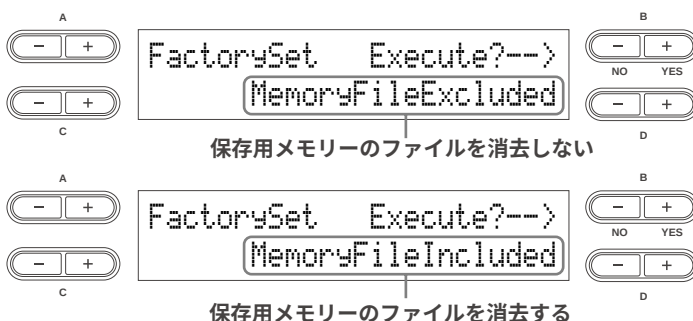

NOTE

[SONG FILE] ボタンの「CharCode」の設定は変わりません。

4 B[+(YES)] ボタンを押すと、ファクトリーセットが実行される

画面に「Completed」が表示されるとファクトリーセットが終了し、実行前の表示に戻ります。

注意


画面に「Excuting」が表示されている間は、絶対に電源を切らないでください。電源を切ると、故障の原因になります。

用語: ファイルとは


あるデータのまとまりを1つの単位として保存したものです。ファイルには、パフォーマンスファイルやソングファイルなどがあります。

方法2

右端の白鍵(C7)を押したまま[POWER]スイッチを押しても、工場出荷時に状態(初期設定)に戻すことができます。この場合、保存用メモリーに保存したファイルは消去されません。

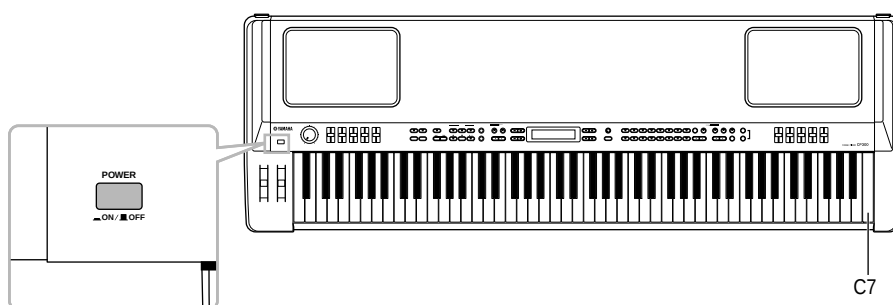

保存用メモリーの中のファイルも同時に消去したい場合は、右端の白鍵(C7)と黒鍵(B^b6)を押したまま[POWER]スイッチを押します。(テストプログラム42“ Factory Set ”と同じです)

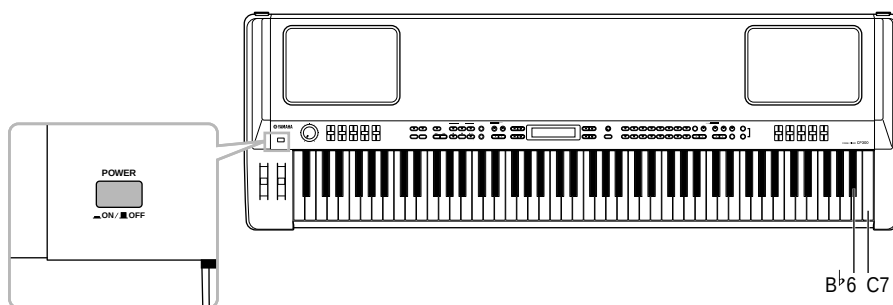

用語: 保存用メモリーとは

長期的にパフォーマンスファイルやソングファイルを保存しておくための領域

■ BULK DUMP (BACKING UP THE DATA)

- * Prepare a MIDI data filer (MDF3) or a sequencer.
For the explanation purpose here, a MIDI/Audio Sequence Software “SQ01” is used.


Using a USB cable, connect CP 300 and the computer.

To communicate with the computer using the USB cable, it is necessary to install the USB-MIDI driver to the computer.

Download the USB-MIDI driver from the following URL.


http://www.global.yamaha.com/download/usb_midi/

● Connection of CP300 and computer

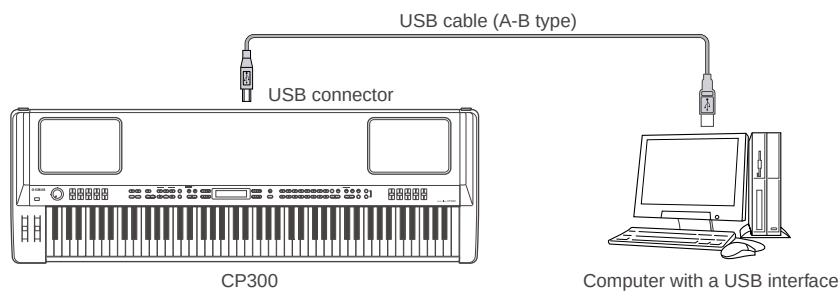


● Connection between CP300 and MIDI data filer (MDF3) (Example)

When using a MIDI data filer (MDF3), make connection as shown below.

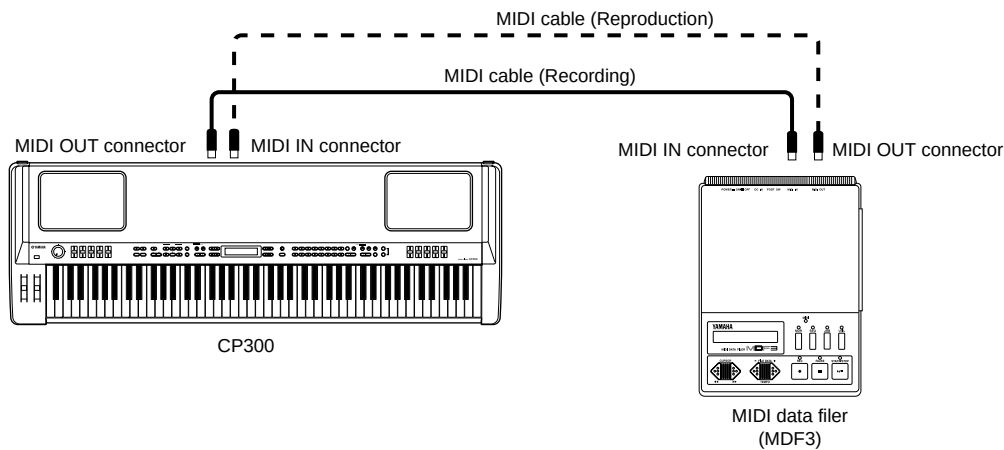



1 Preparation


- ① Start up “SQ01”.
- ② Select MIDI.

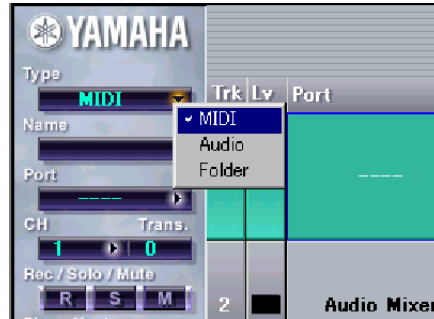

- ③ Select Set up, MIDI and Device in that order.

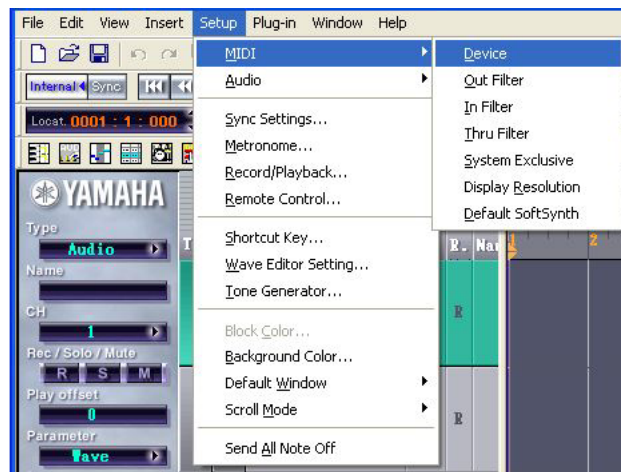


- ④ Select [YAMAHA USB IN 0-1] for Input and [YAMAHA USB OUT 0-1] for Output and click  .

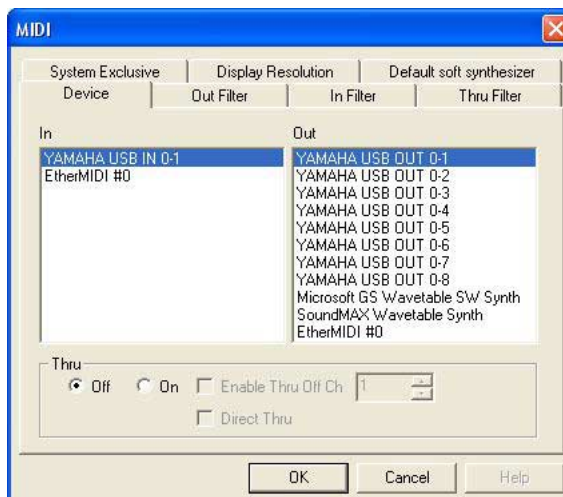


2 Recording


- ① Click Rec(R) to activate the function (lighting in red).
- ② Click  (Record) and then  (Play).

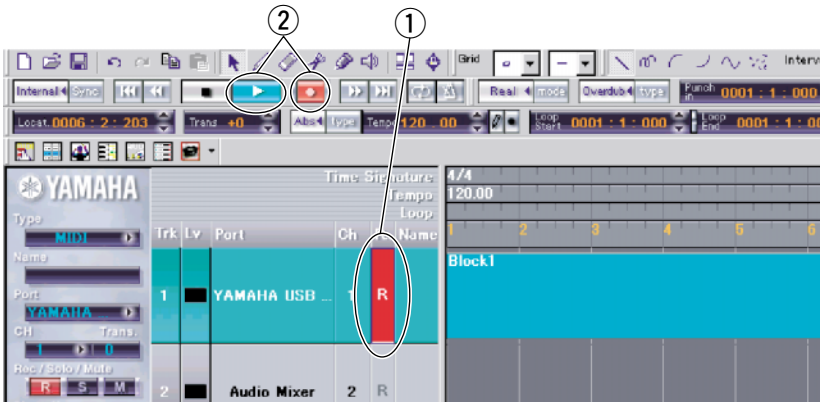

- ③ Use the following procedure to send the bulk data from CP300.
- ③-1 Press the [MIDI SETTING] button to call up the MIDI Settings menu.

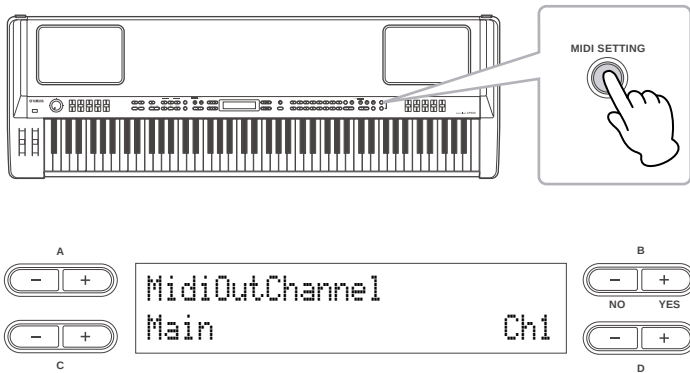

- ③-2 Press the [MIDI SETTING] button repeatedly or by use the A [-][+] buttons to call up “Bulk Dump” in the display.

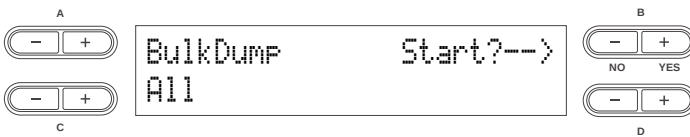

- ③-3 Use the C [-][+] buttons to select a target item (Type of data).

Type of data:

Current	The data is set on the panel
Performance	The data saved to the Performance
Voice	The Voice data saved using Voice Edit
MemorySong/Perf.File	The Performance file, the data saved to the Song file.
ALL	Send each bulk in sequence.

Default setting: Current

- ③-4 Press the B [+ (YES)] button to execute the job.

Press the B [+ (YES)] button to call up the confirmation prompt (“Sure?”). Press the B [+ (YES)] button once again to actually execute the job. An “Executing” message appears and the data is saved. When the operation is complete, a “Completed” message appears.

To cancel the operation, press the B [– (NO)] button instead of the B [+ (YES)] button.

Bulk data cannot be transmitted in the following situations:

- Song record/playback
- Song recording standby
- When selecting recording tracks
- Demo Song playback

If the Performance file has 56 files, or the Song file has 112 Songs (1.4 MB), the data transfer will take at least 3 minutes if you are using the USB connection, or 21 minutes if you are using the MIDI connection.

NOTE

If you’ve changed the “Character Code” setting since naming a Song and the Song name does not display correctly, bulk data cannot be transmitted.


NOTE

Press the B [– (NO)] button or [EXIT] button to cancel the transmission.

CAUTION

Never attempt to turn off the power while bulk data is being transmitted. Turning the power off in this state results in loss of all user data.

- ④ When data transfer is completed, click  (Stop).
After that, click Rec (R) which was clicked in Step ① (lighting in blue).
- ⑤ The data is saved.

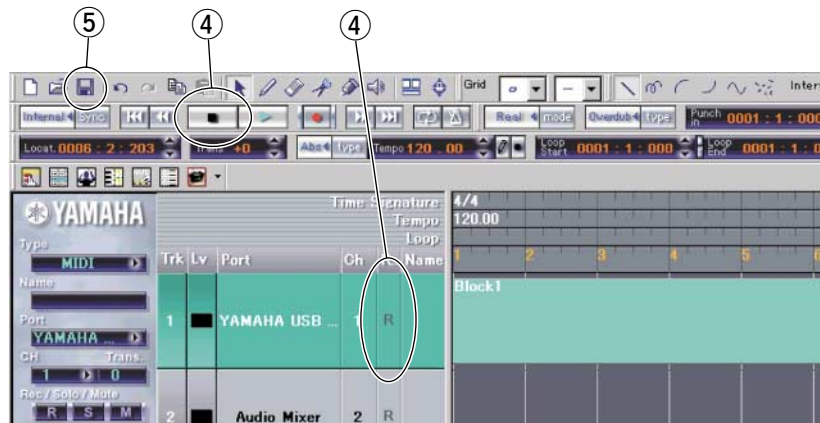

- ⑥ Press the [EXIT] button to exit the MIDI Settings menu.

3 Reproduction

- ① Start up “SQ01” and open the saved data.
- ② Confirm that the power to CP300 is turned on.
- ③ Click  (Play).



- ④ The bulk data is received by CP300.
The operation is complete when “BulkDataReceiving Completed” message appears on the LCD display of CP300.

```
BulkDataReceiving
Completed
```

Bulk data cannot be received in the following situations:

- Song record/playback
- Song recording standby
- When selecting recording tracks
- Demo Song playback
- When transmitting bulk data
- When the message “Receiving bulk data has failed” appears

■ バルクダンプ(データのバックアップ)


- ※ MIDIデータファイラー(MDF3)またはシーケンサーを準備してください。
ここでは、MIDI/オーディオシーケンスソフトウェア“SQ01”を使用した場合で説明します。

CP300とコンピューターをUSBケーブルで接続します。

USBケーブルを使ってコンピューターと通信するためには、コンピューターにUSB-MIDIドライバーをインストールする必要があります。USB-MIDIドライバーは以下のURLからダウンロードしてください。


http://www.yamaha.co.jp/download/usb_midi/

● CP300とコンピューターの接続

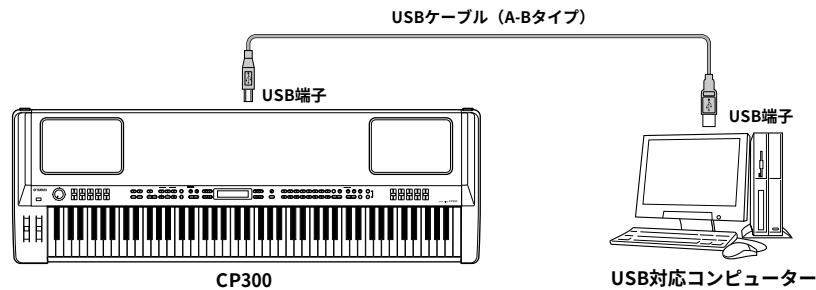

● CP300とMIDIデータファイラー(MDF3)の接続(例)

MIDIデータファイラー(MDF3)を使用する場合は、下図の様に接続してください。

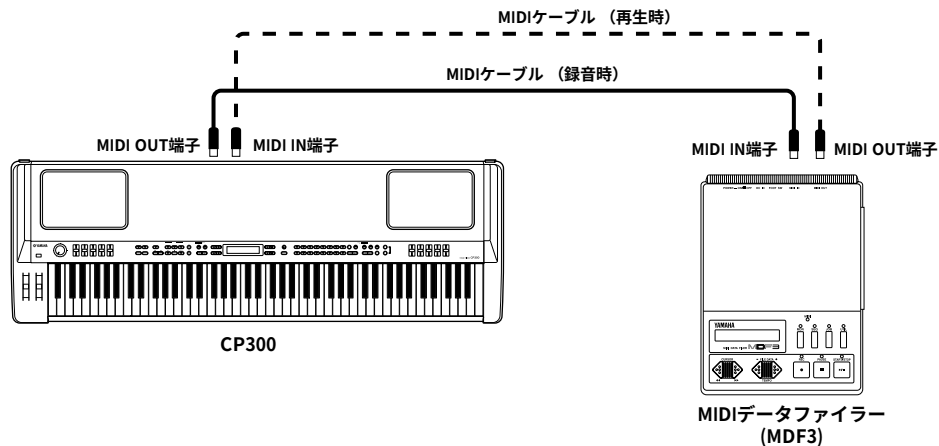


1 準備

- ① “SQ01”を起動します。
- ② MIDIを選択します。



- ③ 設定→MIDI→デバイスを選択します。




- ④ 入力に[YAMAHA USB IN 0-1]、出力に[YAMAHA USB OUT 0-1]を選択して、をクリックします。



2 録音


① Rec (R)をクリックしてアクティブにします。(赤色になります。)

②  (録音)をクリックした後、 (プレイ)をクリックします。

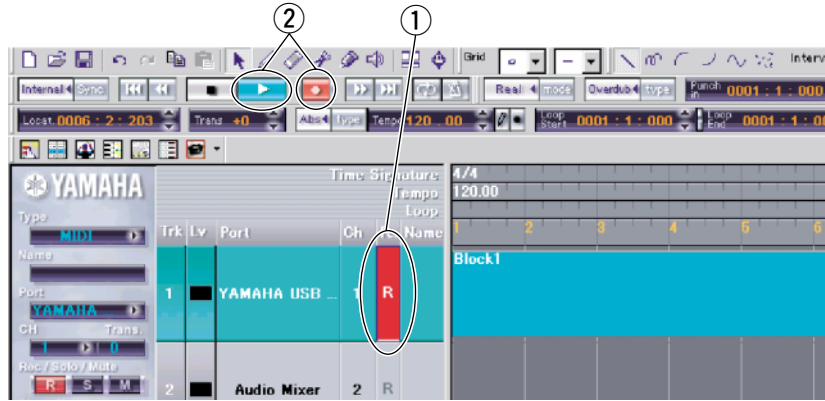


③ 以下の手順に従って、CP300からバルクデータを送ります。

③-1 [MIDI SETTING] ボタンを押して、MIDI セットアップの設定に入ります。

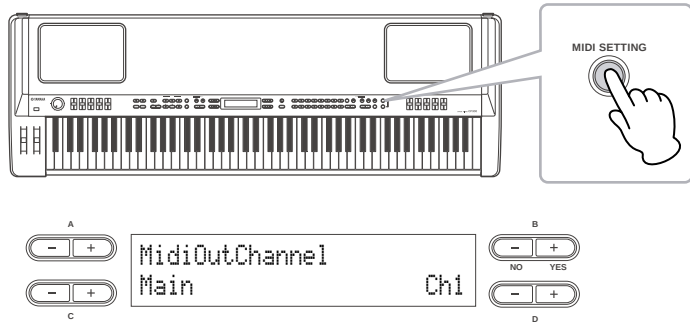

③-2 [MIDI SETTING] ボタンまたはA [-] [+] ボタンを何度か押して、「Bulk Dump」を選びます。



③-3 C [-] [+] ボタンを押して、設定対象(データの種類)を選択します。

データの種類

Current (カレント)	パネルに設定されているデータ
Performance (パフォーマンス)	パフォーマンスに保存されたデータ
Voice (ボイス)	[VOICE EDIT] に保存されたボイスのデータ
MemorySong/Perf.File (メモリーソング/ パフォーマンスファイル)	パフォーマンスファイル、ソングファイルに保存されたデータ
All (オール)	各バルクを連続して行なう

初期設定: Current

③-4 B [+ (YES)] ボタンを押して、実行します。

B [+ (YES)] ボタンを押すと「Sure? - - >」(いいですか?)と確認表示が出ます。

もう一度B [+ (YES)] ボタンを押すと「Executing」(実行中)の表示になり、実行が完了すると「Completed」(完了)の表示が出ます。

中止する場合は「Sure? - - >」のところでB [- (NO)] ボタンまたは[EXIT] ボタンを押します。

下記の状態のときは、バルクデータ送信できません。

- ソングの録音/再生中
- ソングの録音待機中
- 録音トラックの選択中
- デモ曲再生中

パフォーマンスファイルが56 ファイル、またはソングファイルが112 曲(1.4MB)ある場合、バルク送信に最大以下の時間がかかります。

MIDI 端子使用時:約21分

USB 端子使用時:約3分

NOTE

「Character Code」の設定が名前を付けたときの設定と違う場合、表示されない文字を使ったファイルは、バルク送信できません。

NOTE

送信を中止する場合は、B [- (NO)] ボタンまたは[EXIT] ボタンを押してください。

注意

バルクデータ送受信中は、電源を切らないでください。

データが壊れるおそれがあります。

- ④ データ転送が終了したら  (ストップ)をクリックします。
その後、①でクリックしたRec (R)をクリックします。(青色になります。)
- ⑤ データを保存します。



- ⑥ [EXIT] ボタンを押して、MIDI セッティングの設定を抜けます。

3 再生

- ① “SQ01”を起動して、保存したデータを開きます。
- ② CP300の電源が入っていることを確認します。
- ③  (プレイ)をクリックします。



- ④ CP300にバルクデータが受信されます。
CP300のLCD画面に、「BulkDataReceiving Completed」の表示が出たら完了です。

```
BulkDataReceiving
Completed
```

下記の状態のときは、バルクデータ受信できません。

- ソングの録音/再生中
- ソングの録音待機中
- 録音トラックの選択中
- デモ曲再生中
- バルクデータ送信中
- 画面にバルクデータ受信に失敗したというメッセージが表示されている間

■ MESSAGE LIST

The messages are listed in alphabetical order.

Message	Description
BulkDataReceiving Completed	Bulk data reception has been completed. This is shown following the “Bulk Data Receiving Voice” message. This indicates that the instrument finished receiving bulk data, and that you can go on to the next step.
BulkDataReceiving Error	Bulk data reception has failed. Check that the cable connection is secure and try again.
BulkDataReceiving	The instrument is receiving bulk data while this message is displayed. Wait until the message closes, then go on to the next step.
BulkDump Error	The instrument failed to transmit the bulk data. If this message appears, make sure that the power of your computer has not been turned off, that the cable is connected correctly, and that the driver on your computer is functioning correctly. Then try transmitting the data once again.
Canceled	This is shown when the operation has been canceled.
Completed	The operation is completed. This is shown following the “Executing” message. The instrument’s internal processing is complete. You can go on to the next step.
DataFmtErr	The file format is invalid. This message appears when the Performance file selected via “Load From Mem.” is invalid and cannot be called up.
DuplicatedName	The Song name or Performance name is duplicated. You tried to save a Song file after changing its name using the “Rename Song”, or a Performance file after changing its name using the “Rename File” parameter, but a Song or Performance with the same name already exists in memory. The instrument returns to the previous display after three seconds. Rename the Song correctly.
Execute?-->	Do you wish to execute the operation? This message prompts you to execute a file-related operation. Press the B [+ (YES)] button to save the settings. Press the B [- (NO)] or [EXIT] button to cancel.
Executing	The instrument is processing the data internally. Wait until the message closes, then proceed to the next step.
FactorySet Completed MemoryFileExcluded	The factory default settings, excepting files stored to storage memory (refer to “Factory Set”), have been restored. This message also appears if you press and hold down the C7 key and turn on the power to the instrument.
FactorySet Completed MemoryFileIncluded	The factory default settings, including files stored to storage memory (refer to “Factory Set”), have been restored. This message also appears if you press and hold down the C7 and B16 keys and turn on the power to the instrument.

Message	Description
FlashMemoryLifeTime Exit-->	The instrument's flash memory (storage memory) has expired. If this message appears, the instrument will not be able to back up the Songs, Performance files and settings in memory. Press the [EXIT] button to return to the original display.
HostError	There is a problem with the USB connector. The power to the computer is turned off, the cables are connected incorrectly, or the driver or MIDI application on the computer is working incorrectly. In this situation, turn the power off to both the instrument and the computer, and check the cable connection. Then, turn on the power to the computer and the instrument in this order and check to see if the driver and MIDI application on the computer work properly. This message is also shown if the USB cable is connected to the instrument without being connected to your computer. When you wish to use the instrument alone, turn off the power of the instrument, disconnect the USB cable from the instrument, then turn the power on again. If the cable is left connected in this condition, the instrument may not function properly.
LastPowerOffIllegal MemoryFileChecking	The power was incorrectly turned off the previous time. The instrument is checking the internal memory. You turned off the power to the instrument while it was writing data to storage memory. This message appears next time you turn on the power. The internal memory is being checked while this message is displayed. If it has been confirmed that any files in the storage memory are corrupted, all the files will be deleted.
LastPowerOffIllegal MemoryFileErrorRecovered	Some files in the storage memory have been restored. This message appears following the message "Last Power Off Illegal / Memory File Checking," indicating that the instrument recovered as much data in the storage memory as possible.
LastPowerOffIllegal MemoryFileErased	Files on the storage memory have been deleted. This message appears following the message "Last Power Off Illegal / Memory File Checking," indicating that the instrument could not recover data in the storage memory and that all memory files were deleted.
MemoryError	A memory problem has occurred. While a Song or a Performance file was being loaded, the instrument detected defects in memory. Reset the instrument to its normal (factory default) settings with "Memory File Included" after you back up all Song data.
MemoryError	There may be a memory problem. 1. This message indicates that there may be a problem with the memory when selecting a Song or Performance file. If the message appears repeatedly when you continue using the instrument, back up the Song data, then restore the default setting by using "Memory File Included" in "Factory Set". 2. This message will appear if a different "Character Code" is selected than was when you assigned the Performance file name. In this case, switch the "Character Code," re-select the Performance file.
MemoryFull	There is no more available space in storage memory. There is not enough memory space left and you cannot save any more Songs or Performance files. Delete some Songs or Performance files in the storage memory, then save the new data to memory.
NoSong9	There is no Song to be saved. This message will appear if there is no Song for the "Save To Memory" operation to save. In this case, no Song will be saved.
NoFileToDelete	There is no file to be deleted. You tried to delete a file that does not exist in the storage memory. You cannot delete the file.
NoSongToDelete	There is no Song to be deleted. You tried to delete a Song that does not exist in the storage memory. The Song cannot be deleted.

Message	Description
OverWrite?	Do you want to overwrite the data? This message prompts you to select whether you wish to overwrite the existing data with new data. Press the B [+ (YES)] button to allow overwriting. Press the B [- (NO)] button to cancel.
PleaseWait	Please wait. You tried to start playing a Song or perform another operation right after selecting the Song. Wait until the message closes.
ProtectedFile	This is a protected file. You tried to copy or delete data in internally-protected files (such as commercially available music data). You cannot write to, copy, or delete such files.
ProtectedSong	This is a protected Song. This message appears when you try to change the name of an internally-protected Song (Preset Song). You cannot change the name of such Songs.
Set?-->	Is the setting maintained? This message prompts you to select whether you wish to save the edited settings or not. Press the B [+ (YES)] button to save the settings. Press the [EXIT] button to cancel.
SongChanged Save?	The Song has been changed. Do you wish to save the Song? You tried to perform another operation before saving the recorded Song to storage memory. If you continue the operation, the recorded Song will be lost. To delete the new recording, press the B [- (NO)] button. To keep the recording, press the B [+ (YES)] button. The "Save To Memory" parameter is shown in the display. Save the Song then try the operation again.
SongError	An error has been found in the Song data. 1. The instrument has found some defects in the selected (or playing) Song. Select the Song and play it again. If you still see this message, the Song data may be damaged. 2. This message will appear if a different "Character Code" is selected than was when you assigned the Song name. In this case, switch the "Character Code," re-select the Song, and play it back.
SongError	
SongTooBig	The Song data is too large. 1. The Current memory space has become full during recording. Recording stops automatically. The data recorded up to that point remains. This message also appears when you try to enter recording mode to perform additional recording but the Song data has already filled the current memory. In this case, you cannot perform additional recording. Use the "Channel Clear" parameter to delete unnecessary tracks (if any) to make more room in memory. 2. The size of the selected Song is larger than the current memory. The instrument cannot load/play the selected Song. Select another Song. 3. This message is shown when you edit a Song if that Song is larger than the capacity of the current memory. This Song cannot be edited on the instrument.
SongTooBig	
Start?-->	Do you wish to start the operation? This message prompts you to start the operation. To start, press the B [+ (YES)] button. Press the [EXIT] button to cancel the operation.
Sure?-->	Are you sure? This message prompts you to confirm the execution. Press the B [+ (YES)] button to continue. Press the B [- (NO)] button to cancel.
Transmitting	MIDI bulk data is being transmitted. This message appears when the instrument receives a bulk request from a computer. This message appears while the bulk data is being transmitted. Wait until the message closes, then go on to the next step. Please wait.
Transmitting Completed	Bulk data transmission has been completed. This is shown following the "Transmitting" message. It is displayed when the transmission of the bulk data has been completed. You can go on to the next step.

Message	Description
Transmitting Error	MIDI Bulk data is being transmitted. This message appears when the instrument receives a bulk request from a computer. The instrument has failed to transmit Voice bulk data. Check the cable connection and repeat the procedure from the beginning.
WrongName	The Song name or Performance file name is not appropriate. 1. This message appears when you have used a period or space at the beginning of a Song name/Performance file (while handling a Song/Performance file), or you have tried to change a Song name by including a character (or characters) not supported by the instrument. The instrument returns to previous display after three seconds. Make sure to enter a valid name. 2. This message will appear if a different "Character Code" is selected than was when you assigned the Song name or Performance file name. In this case, switch the "Character Code," re-select the Song or Performance file.

■ メッセージ一覧

ABC順に掲載しています。

メッセージ	説明
BulkDataReceiving Completed バルクデータレシーピング コンプリーテッド	「バルクデータの受信が完了しました」 「BulkDataReceiving Voice」のメッセージに続いて表示されます。バルクデータの受信が完了したときに表示されます。このメッセージを確認したら、次の操作に移れます。
BulkDataReceiving Error バルクデータレシーピング エラー	「バルクデータ受信に失敗しました」 バルクデータの受信に失敗したというメッセージです。この場合はケーブルの接続を確認して、もう一度受信操作をやり直してください。
BulkDataReceiving バルクデータレシーピング	「バルクデータを受信しています」 バルクデータを受信している間、表示されます。この間は次の操作に移ることはできません。しばらくお待ちください。
BulkDump Error バルクダンプエラー	「バルクデータ送信に失敗しました」 バルクデータの送信に失敗したというメッセージです。この場合は、コンピューターの電源が切れていないか、ケーブルが正しく接続されているか、コンピューター側のドライバが正しく機能しているか確認してから、もう一度送信操作をやり直してください。
Canceled キャンセルド	「キャンセルされました」 作業が中止された場合に、中止されたことを確認するメッセージです。
Completed コンプリーテッド	「完了しました」 「Executing(実行中)」のメッセージに続いて表示されます。保存用メモリーへの書き込みや操作の実行が、完了したときに表示されます。このメッセージを確認したら、次の操作に移れます。
DataFmtErr データフォーマットエラー	「ファイルフォーマットが不正です」 「LoadFromMem.」でパフォーマンスファイルを呼び出したときに、ファイルのフォーマットが不正なため、呼び出しができない場合に表示されます。
DuplicatedName デュプリケートネーム	「曲名またはパフォーマンスファイル名が重複しています」 「RenameSong」で曲名、「RenameFile」でパフォーマンスファイル名を変更して保存しようとした場合、保存用メモリーに既に同じ名前の曲または同じパフォーマンスファイルがある場合に表示されます。表示3秒後に元の画面に戻りますので、名前を付け直してください。
Execute?--> エクセキュート?-->	「実行しますか？」 各種ファイル操作で、実行を促すメッセージです。実行する場合はB [+ (YES)]ボタンを、中止する場合はB [- (NO)]ボタンまたは[EXIT]ボタンを押してください。
Executing エクセキューティング	「実行中です」 CP300の内部で処理を実行している間、表示されます。この間は次の操作に移ることはできません。しばらくお待ちください。

メッセージ	説明
<pre>FactorySet Completed MemoryFileExcluded</pre> ファクトリーセット コンプリート メモリーソングエクスクルード	「初期設定に戻しました(保存用メモリーのファイル以外)」 「FactorySet」の実行(保存用メモリーのファイル以外)が完了したというメッセージです。 「C7の鍵盤を押したまま電源をオンにする」操作でも表示されます。
<pre>FactorySet Completed MemoryFileIncluded</pre> ファクトリーセット コンプリート メモリーソングインクルード	「初期設定に戻しました(保存用メモリーのファイルを含む)」 「FactorySet」の実行(保存用メモリーのファイルを含む)が完了したというメッセージです。 「C7とB6の鍵盤を押したまま電源をオンにする」操作でも表示されます。
<pre>FlashMemoryLifeTime Exit--></pre> フラッシュメモリーライフタイム エグジット-->	「保存用メモリーの寿命が来ています」 CP300の保存用メモリーの寿命が来ていることを示しています。このメッセージが表示された場合、保存用メモリーの曲や各種設定はバックアップされません。[EXIT]ボタンを押すと元の画面に戻ります。
<pre>HostError</pre> ホストエラー	「USB端子に関する不具合です」 ● CP300をコンピューターと接続してお使いの場合 コンピューターの電源が切れているか、ケーブルが正しく接続されていない、または、コンピューター側のドライバーやMIDIアプリケーションが正しく機能していません。この場合は、いったんCP300とコンピューターの電源を切り、ケーブルの接続を確認してください。その後、コンピューター→CP300の順番で電源を入れ直し、コンピューター側のドライバーやMIDIアプリケーションが正しく機能しているか確認してください。 ● CP300を単独でお使いの場合 CP300のUSB端子にケーブルが接続されたままになっていると、このメッセージが表示されることがあります。この場合は、CP300の電源を切った上でケーブルを抜き、再度電源を入れてください。ケーブルを接続したままだと、CP300が正常に動作しないことがあります。
<pre>LastPowerOffIllegal MemoryFileChecking</pre> ラストパワーオフイリーガル メモリーファイルチェック	「前回不正に電源がオフされました。楽器の内部をチェックしています」 曲を保存用メモリーに保存している途中や、楽器設定を保存している途中に電源を切り、もう一度電源を入れたときに表示されます。この表示が出ている間は楽器のメモリーがチェックされています。チェックの結果、保存用メモリーのファイルが破損している場合は、メモリーファイルはすべて削除されます。
<pre>LastPowerOffIllegal MemoryFileErrorRecovered</pre> ラストパワーオフイリーガル メモリーファイルエラーリカバード	「保存用メモリーのファイルは可能な分だけ修復されました」 「LastPowerOffIllegal/MemoryFileChecking」に続いて表示されます。この場合は、保存用メモリーの修復作業の結果、保存用メモリーの修復が可能なファイルだけ修復されたことを示します。
<pre>LastPowerOffIllegal MemoryFileErased</pre> ラストパワーオフイリーガル メモリーファイルイレース	「保存用メモリーのファイルは削除されました」 「LastPowerOffIllegal/MemoryFileChecking」に続いて表示されます。この場合は、保存用メモリーの修復が不可能だったため、メモリーのファイルがすべて削除されたことを示します。
<pre>MemoryError</pre> メモリーエラー	「メモリーに不具合があります」 曲やパフォーマンスファイルを読み込むとき、メモリーの不具合が発見された場合に表示されます。このような場合は、曲データのバックアップを取ってから「FactorySet」の「MemoryFileIncluded」を実行してください。
<pre>MemoryError</pre> メモリーエラー	「メモリーに不具合がある可能性があります」 1. 曲やパフォーマンスファイルを選んだときなどに、メモリーに不具合がある可能性がありますと表示されます。そのまま操作しても何度も表示される場合は、曲とパフォーマンスファイルのデータのバックアップを取ってから「FactorySet」の「MemoryFileIncluded」を実行してください。 2. パフォーマンスファイル名を付けたときと違う「CharCode」が設定されている場合に表示されます。この場合、「CharCode」を切り替えてからパフォーマンスファイルを選び直してください。

メッセージ	説明
MemoryFull メモリーフル	「メモリーがいっぱいです」 保存用メモリーの残り容量が少ないため、曲やパフォーマンスファイルが保存できないときに表示されます。この場合、すでにある保存用メモリーの曲やパフォーマンスファイルを削除してから、改めて保存用メモリーに保存してください。
NoSong ノーソング	「保存する曲がありません」 「SaveToMemory」で保存対象となる曲がない場合に表示されます。この場合、曲の保存はできません。
NoFileToDelete ノーファイルトゥデリート	「削除するファイルがありません」 「DeleteFile」で、削除対象となるファイルがない場合に表示されます。この場合、ファイルの削除はできません。
NoSongToDelete ノーソングトゥデリート	「削除する曲がありません」 「DeleteSong」で、削除対象となる曲(メモリーソング)がない場合に表示されます。この場合、曲の削除はできません。
OverWrite? オーバーライト?	「上書きしますか?」 既存のデータに上書きするかどうか確認を求めるメッセージです。上書きする場合はB [+ (YES)]ボタンを、中止する場合はB [- (NO)]ボタンを押してください。
PleaseWait プリーズウェイト	「お待ちください」 曲を選んだすぐ、読み込み中に曲をスタートさせようとしたり、他の操作をしようとしたときに表示されます。このメッセージが消えるまでお待ちください。
ProtectedFile プロテクトドファイル	「保護されているファイルです」 内部的に保護されているファイルに対して、上書きや削除などをしようとした場合に表示されます。そのファイルに対して、上書きや削除などはできません。
ProtectedSong プロテクトドソング	「保護されている曲です」 内部的に保護されている曲(プリセットソング)に対して、曲名を変更しようとした場合に表示されます。その曲に対して、曲名を変更することはできません。
Set?--> セット?-->	「記憶させますか?」 各種セッティング操作で、設定を記憶させるかどうかを確認するメッセージです。実行する場合はB [+ (YES)]ボタンを、中止する場合は[EXIT]ボタンを押してください。
SongChanged Save? ソングチェンジド セーブ?	「曲が書き替えられています。保存しますか?」 曲を録音したあと、保存する前にほかの操作をしようとした場合、その操作をするとその曲が消えてしまうときに表示されます。消していいいときはB [- (NO)]ボタンを押します。保存しておきたいときは、B [+ (YES)]ボタンを押すと「SaveToMemory」の画面に移ります。曲を保存してから操作し直してください。
SongError SongError ソングエラー	「曲データの不具合が発見されました」 - 曲を選んだときや曲の再生中に、曲データの不具合が発見された場合に表示されます。この場合、もう一度曲を選び直し、再生してみてください。それでもこのメッセージが出る場合は、曲データが壊れている可能性があります。 - 曲名を付けたときと違う「CharacterCode」が設定されている場合に表示されます。この場合、「CharacterCode」を切り替えてから曲を選び直し、再生してください。

メッセージ	説明
SongTooBig ソングトゥービッグ SongTooBig	「曲データが大きすぎます」 - 録音中にカレントメモリーの容量がいっぱいになってしまった場合に表示されます。そこで自動的に録音がストップします。それまで録音したデータは残ります。追加録音しようとして録音作業に入ろうとしたときに、その曲の容量がすでにカレントメモリーの容量いっぱいになっている場合にも表示されます。その場合は、追加録音はできません。既に録音した不要なトラックがある場合は「ChannelClear」で不要なトラックを削除すると、その容量分さらに録音できるようになります。 - 曲を選んだときに、その曲がカレントメモリーの容量より大きい読み込みできない場合に表示されます。その曲はCP300では読み込めず、再生できません。ほかの曲を選んでください。 - 曲を編集したときに、その曲がカレントメモリーの容量より大きい編集できない場合に表示されます。その曲はCP300では編集できません。
Start?--> スタート?-->	「スタートしますか?」 各種セッティング操作で、スタートを促すメッセージです。スタートする場合はB [+ (YES)]ボタンを、中止する場合は[EXIT]ボタンを押してください。
Sure?--> シュア?-->	「いいですか?」 処理実行の確認を求めるメッセージです。実行してよい場合はB [+ (YES)]ボタンを、中止する場合はB [- (NO)]ボタンを押してください。
Transmitting トランスミッティング	「バルクデータを送信しています」 コンピューターからバルクデータの要求があった場合に表示されます。バルクデータを送信している間、表示されます。この間は次の操作に移ることはできません。しばらくお待ちください。
Transmitting Completed トランスミッティング コンプリーテッド	「バルクデータを送信が完了しました」 「Transmitting」のメッセージに続いて表示されます。バルクデータの送信が完了したときに表示されます。このメッセージを確認したら、次の操作に移れます。
Transmitting Error トランスミッティング エラー	「バルクデータを送信しています」 バルクデータの送信に失敗したというメッセージです。個の場合はケーブルの接続を確認して、もう一度送信操作をやり直してください。
WrongName ロングネーム	「曲名またはパフォーマンスファイル名が不適切です」 - 曲やパフォーマンスファイル操作中に曲名やパフォーマンス名の先頭にピリオドやスペースが使われた場合や、CP300が対応していない文字が使われている既存の曲の曲名を変更したとき、内部的に処理ができず不適になってしまう場合に表示されます。表示3秒後に元の画面に戻りますので、名前を付け直してください。 - 曲名やパフォーマンスファイル名を付けたときと違う「CharacterCode」が設定されている場合に表示されます。この場合、「CharacterCode」を切り替えてから曲やパフォーマンスファイルを選び直してください。

■ MIDI IMPLEMENTATION CHART

YAMAHA [Stage Piano]
CP300 MIDI Implementation Chart

Date :1-NOV-2005
Version : 1.0

Function...		Transmitted	Recognized	Remarks
Basic Channel	Default Changed	1 - 16 1 - 16	1 - 16 1 - 16	
Mode	Default Messages Altered	3 X *****	3 X X	
Note Number : True voice		0 - 127 *****	0 - 127 0 - 127	
Velocity	Note ON Note OFF	○ 9nH, v=1-127 X 9nH, v=0	○ 9nH, v=1-127 X	
After Touch	Key's Ch's	X X	○ ○	
Pitch Bend		○	○ 0 - 24 semi	
Control Change	0, 32 1 5 7, 10, 11 6, 38 64, 66, 67 65 71, 74 72, 73 84, 94 91, 93 96-97 98-99 100-101 1-119	○ ○ X ○ ○ ○ X ○ X X X ○ X X ○ ○ (Assignable)	○ ○ ○ ○ ○ ○ ○ ○ ○ ○ ○ ○ ○ ○ X	Bank Select Modulation Portamento Time Data Entry Portamento Sound Controller Sound Controller RPN Inc, Dec NRPN LSB, MSB RPN LSB, MSB *1
Prog Change : True #		○ 0 - 127 *****	○ 0 - 127	
System Exclusive		○	○	
Common : Song Pos. : Song Sel. : Tune		X X X	X X X	
System : Clock Real Time : Commands		○ ○	X ○	
Aux : All Sound Off : Reset All Cntrls : Local ON/OFF Mes- : All Notes OFF sages: Active Sense : Reset		X X X X ○ X	○ (120, 126, 127) ○ (121) X (122) ○ (123-125) ○ X	
Note : *1= Transmission only				

MIDI DATA FORMAT

Many MIDI messages listed in the MIDI Data Format are expressed in decimal numbers, binary numbers and hexadecimal numbers. Hexadecimal numbers may include the letter "H" as a suffix.

Also, "n" can freely be defined as any whole number. To enter data/values, refer to the table below.

Decimal	Hexa-decimal	Binary
0	00	0000 0000
1	01	0000 0001
2	02	0000 0010
3	03	0000 0011
4	04	0000 0100
5	05	0000 0101
6	06	0000 0110
7	07	0000 0111
8	08	0000 1000
9	09	0000 1001
10	0A	0000 1010
11	0B	0000 1011
12	0C	0000 1100
13	0D	0000 1101
14	0E	0000 1110
15	0F	0000 1111
16	10	0001 0000
17	11	0001 0001
18	12	0001 0010
19	13	0001 0011
20	14	0001 0100
21	15	0001 0101
22	16	0001 0110
23	17	0001 0111
24	18	0001 1000
25	19	0001 1001
26	1A	0001 1010
27	1B	0001 1011
28	1C	0001 1100
29	1D	0001 1101
30	1E	0001 1110
31	1F	0001 1111

Decimal	Hexa-decimal	Binary
32	20	0010 0000
33	21	0010 0001
34	22	0010 0010
35	23	0010 0011
36	24	0010 0100
37	25	0010 0101
38	26	0010 0110
39	27	0010 0111
40	28	0010 1000
41	29	0010 1001
42	2A	0010 1010
43	2B	0010 1011
44	2C	0010 1100
45	2D	0010 1101
46	2E	0010 1110
47	2F	0010 1111
48	30	0011 0000
49	31	0011 0001
50	32	0011 0010
51	33	0011 0011
52	34	0011 0100
53	35	0011 0101
54	36	0011 0110
55	37	0011 0111
56	38	0011 1000
57	39	0011 1001
58	3A	0011 1010
59	3B	0011 1011
60	3C	0011 1100
61	3D	0011 1101
62	3E	0011 1110
63	3F	0011 1111

Decimal	Hexa-decimal	Binary
64	40	0100 0000
65	41	0100 0001
66	42	0100 0010
67	43	0100 0011
68	44	0100 0100
69	45	0100 0101
70	46	0100 0110
71	47	0100 0111
72	48	0100 1000
73	49	0100 1001
74	4A	0100 1010
75	4B	0100 1011
76	4C	0100 1100
77	4D	0100 1101
78	4E	0100 1110
79	4F	0100 1111
80	50	0101 0000
81	51	0101 0001
82	52	0101 0010
83	53	0101 0011
84	54	0101 0100
85	55	0101 0101
86	56	0101 0110
87	57	0101 0111
88	58	0101 1000
89	59	0101 1001
90	5A	0101 1010
91	5B	0101 1011
92	5C	0101 1100
93	5D	0101 1101
94	5E	0101 1110
95	5F	0101 1111

Decimal	Hexa-decimal	Binary
96	60	0110 0000
97	61	0110 0001
98	62	0110 0010
99	63	0110 0011
100	64	0110 0100
101	65	0110 0101
102	66	0110 0110
103	67	0110 0111
104	68	0110 1000
105	69	0110 1001
106	6A	0110 1010
107	6B	0110 1011
108	6C	0110 1100
109	6D	0110 1101
110	6E	0110 1110
111	6F	0110 1111
112	70	0111 0000
113	71	0111 0001
114	72	0111 0010
115	73	0111 0011
116	74	0111 0100
117	75	0111 0101
118	76	0111 0110
119	77	0111 0111
120	78	0111 1000
121	79	0111 1001
122	7A	0111 1010
123	7B	0111 1011
124	7C	0111 1100
125	7D	0111 1101
126	7E	0111 1110
127	7F	0111 1111

- Except the table above, for example 144-159 (decimal)/9nH/1001 0000-1001 1111 (binary) denotes the Note On Message for each channel (1-16). 176-191/BnH/1011 0000-1011 1111 denotes the Control Change Message for each channel (1-16). 192-207/CnH/1100 0000-1100 1111 denotes the Program Change Message for each channel (1-16). 240/FOH/1111 0000 denotes the start of a System Exclusive Message. 247/F7H/1111 0111 denotes the end of a System Exclusive Message.
- aaH (hexidecimal)/0aaaaaaa (binary) denotes the data address. The address contains High, Mid, and Low.
- bbH/0bbbbbbb denotes the byte count.
- ccH/0ccccccc denotes the check sum.
- ddH/0ddddd denotes the data/value.

MIDI CHANNEL MESSAGE (1)

MIDI Events	Status byte		1st Data byte		2nd Data byte		MIDI Reception (respond/ignore)			MIDI Transmission (generated data)			REC
	Status		Data (HEX)	Parameter	Data (HEX)	Parameter	Song	Main Layer Left Layer	Keyboard	Panel (main generation method)	Song	Midi	Recorded from panel
Key Off	8nH	(n: Channel Number)	kk	Key no. (0 – 127)	vv	Velocity (0 – 127)	○	○	○	×	○	×	×
Key On	9nH	(n: Channel Number)	kk	Key no. (0 – 127)	vv	Key On: vv=1 – 127 Key Off: vv=0	○	○	○	○ (Keyboard)	○	×	○
Control Change	BnH	(n: Channel Number)	0 (00H)	Bank Select MSB	0 64 126 127 (00H) (40H) (7EH) (7FH)	Normal SFX Voice SFX kit Drum kit	○	○	×	○ (Voice)	○	×	○
			1 (01H)	Modulation	0 – 127 (00H... 7FH)	Data	○	○	○ (All manually played parts)	○ (Modulation Wheel)	○	×	○
			5 (05H)	Portamento Time	0 – 127 (00H... 7FH)	Data	○	○	○ (All manually played parts)	×	○	×	×
			6 (06H)	Data Entry MSB	0 – 127 (00H... 7FH)	Data	○	○	○ (All manually played parts)	○ (VOICE EDIT)	○	×	○
			7 (07H)	Main Volume	0 – 127 (00H... 7FH)	Data	○	○	○ (All manually played parts)	○ (VOICE EDIT)	○	×	○
			10 (0AH)	Panpot	0 – 127 (00H... 7FH)	L64	○	○	○ (All manually played parts)	○ (VOICE EDIT)	○	×	○
			11 (0BH)	Expression	0 – 127 (00H... 7FH)	Data	○	○	○ (All manually played parts)	○ (Pedal1 – 4, Modulation Wheel)	○	×	○
			32 (20H)	Bank Select LSB	0 – 127 (00H... 7FH)	Data	○	○	×	○ (Voice)	○	×	○
			38 (26H)	Data Entry LSB	0 – 127 (00H... 7FH)	Data	○	○	○ (All manually played parts)	○ (VOICE EDIT)	○	×	○
			64 (40H)	Sustain (Damper)	0 – 127 (00H... 7FH)	Data	○	○	○ (All manually played parts)	○ (Pedal1 – 4)	○	×	○
			65 (41H)	Portamento	0 – 127 (00H... 7FH)	0...63, 64...127 (OFF, ON)	○	○	○ (All manually played parts)	×	○	×	×
			66 (42H)	Sostenuto	0 – 127 (00H... 7FH)	0...63, 64...127 (OFF, ON)	○	○	○ (All manually played parts)	○ (Pedal1 – 4)	○	×	○
			67 (43H)	Soft Pedal	0 – 127 (00H... 7FH)	0...63, 64...127 (OFF, ON)	○	○	○ (All manually played parts)	○ (Pedal1 – 4)	○	×	○
			71 (47H)	Harmonic Content	0 – 127 (00H... 7FH)	-64...0...+63	○	○	○ (All manually played parts)	○ (Pedal4, Modulation Wheel, VOICE EDIT)	○	×	○
			72 (48H)	Release Time	0 – 127 (00H... 7FH)	-64...0...+63	○	○	○ (All manually played parts)	×	○	×	×
			73 (49H)	Attack Time	0 – 127 (00H... 7FH)	-64...0...+63	○	○	○ (All manually played parts)	×	○	×	×
			74 (4AH)	Brightness	0 – 127 (00H... 7FH)	-64...0...+63	○	○	○ (All manually played parts)	○ (Pedal4, Modulation Wheel, VOICE EDIT)	○	×	○
			84 (54H)	Portamento Control	0 – 127 (00H... 7FH)	Key no. (0 – 127)	○	○	×	×	○	×	×
			91 (5BH)	Effect1 Depth (Reverb Send Level)	0 – 127 (00H... 7FH)	Data	○	○	○ (All manually played parts)	○ (Pedal4, Modulation Wheel, VOICE EDIT)	○	×	○
			93 (5DH)	Effect3 Depth (Chorus Send Level)	0 – 127 (00H... 7FH)	Data	○	○	○ (All manually played parts)	○ (Pedal4, Modulation Wheel, VOICE EDIT)	○	×	○
			94 (5EH)	Effect4 Depth (Variation Send Level)	0 – 127 (00H... 7FH)	Data	○	×	×	×	○	×	×
			96 (60H)	RPN Increment	– –	The data byte is ignored.	○	○	×	×	○	×	×
			97 (61H)	RPN Decrement	– –	The data byte is ignored.	○	○	×	×	○	×	×
			98 (62H)	NRPN LSB	0 – 127 (00H... 7FH)	Data	○	○	×	×	○	×	×
			99 (63H)	NRPN MSB	0 – 127 (00H... 7FH)	Data	○	○	×	×	○	×	×
			100 (64H)	RPN LSB	0 – 127 (00H... 7FH)	Data	○	○	○ (All manually played parts)	○ (VOICE EDIT)	○	×	○
			101 (65H)	RPN MSB	0 – 127 (00H... 7FH)	Data	○	○	○ (All manually played parts)	○ (VOICE EDIT)	○	×	○
			0 – 119 (00H... 7FH)	(Assignable)	0 – 127 (00H... 7FH)	Data	×	×	×	○ (Pedal4, Modulation Wheel)	×	×	×
Mode Message	BnH	(n: Channel Number)	120 (78H)	All Sound Off	0 (00H)	Data	○	○	○ (All manually played parts)	×	○	×	×
			121 (79H)	Reset All Controllers	0 (00H)	Data	○	×	×	×	○	×	×
			123 (7BH)	All Note Off	0 (00H)	Data	○	○	○ (All manually played parts)	×	○	×	×
			124 (7CH)	Omni Off	0 (00H)	Data	○	×	×	×	×	×	×
			125 (7DH)	Omni On	0 (00H)	Data	○	×	×	×	×	×	×
			126 (7EH)	Mono	0 – 16 (00H... 10H)	Data	○	×	×	×	○	×	×
Program Change	CnH	(n: Channel Number)	127 (7FH)	Poly	0 (00H)	Data	○	×	×	×	○	×	×
			pp (00H... 7FH)	Voice number (0 – 127)	– –	–	○	○	×	○ (Voice)	○	×	○

MIDI Events	Status byte		1st Data byte		2nd Data byte		MIDI Reception (respond/ignore)			MIDI Transmission (generated data)			REC
	Status		Data (HEX)	Parameter	Data (HEX)	Parameter	Song	Main Layer Left Layer	Keyboard	Panel (main generation method)	Song	Midi	Recorded from panel
Channel After Touch	DnH	(n: Channel Number)	vv (00H...7FH)	Data	— —	—	○	○	○ (All manually played parts)	○ (Pedal4, Modulation Wheel)	○	×	×
Polyphonic After Touch	AnH	(n: Channel Number)	kk (00H...7FH)	Key no. (0 – 127)	vv (00H...7FH)	Data	○	×	×	×	○	×	×
Pitch Bend Change	EnH	(n: Channel Number)	cc (00H...7FH)	LSB	dd (00H...7FH)	MSB	○	○	○ (All manually played parts)	○ (Pitch Bend Wheel)	○	×	○
Realtime Message	F8H	MIDI Clock	—	—	—	—			×	×	○	×	×
	FAH	Start	—	—	—	—			×	×			×
	FBH	Continue	—	—	—	—			×	×			×
	FCH	Stop	—	—	—	—			×	×			×
	FEH	Active Sense	—	—	—	—			○	○			×
	FFH	System Reset	—	—	—	—			×	×			×

MIDI CHANNEL MESSAGE (2)

Parameters controlled by NRPN (Non-Registered Parameter Numbers)

NRPN		Data Entry		Parameter	Data Range	MIDI Reception (respond/ignore)			MIDI Transmission (generated data)			REC
MSB	LSB	MSB	LSB			Song	Main Layer Left Layer	Keyboard	Panel (main generation method)	Song	Midi	Recorded from panel
01H	08H	mmH	—	Vibrato Rate	mm: 00H-40H-7FH (-64...0...+63)	○	○	×	×	○	×	×
01H	09H	mmH	—	Vibrato Depth	mm: 00H-40H-7FH (-64...0...+63)	○	○	×	×	○	×	×
01H	0AH	mmH	—	Vibrato Delay	mm: 00H-40H-7FH (-64...0...+63)	○	○	×	×	○	×	×
01H	20H	mmH	—	Low Pass Filter Cutoff Frequency	mm: 00H-40H-7FH (-64...0...+63)	○	×	×	×	○	×	×
01H	21H	mmH	—	Low Pass Filter Resonance	mm: 00H-40H-7FH (-64...0...+63)	○	×	×	×	○	×	×
01H	30H	mmH	—	EQ BASS	mm: 00H-40H-7FH (-64...0...+63)	○	×	×	×	○	×	×
01H	31H	mmH	—	EQ TREBLE	mm: 00H-40H-7FH (-64...0...+63)	○	×	×	×	○	×	×
01H	34H	mmH	—	EQ BASS Frequency	mm: 04H-28H (32...2.0k[Hz])	○	×	×	×	○	×	×
01H	35H	mmH	—	EQ TREBLE Frequency	mm: 1CH-3AH (500...16.0k[Hz])	○	×	×	×	○	×	×
01H	63H	mmH	—	EG Attack Time	mm: 00H-40H-7FH (-64...0...+63)	○	×	×	×	○	×	×
01H	64H	mmH	—	EG Decay Time	mm: 00H-40H-7FH (-64...0...+63)	○	○	×	×	○	×	×
01H	66H	mmH	—	EG Release	mm: 00H-40H-7FH (-64...0...+63)	○	×	×	×	○	×	×
14H	rrH	mmH	—	Drum Low Pass Filter Cutoff Frequency	rr: drum instrument note number mm: 00H-40H-7FH (-64...0...+63)	○	×	×	×	○	×	×
15H	rrH	mmH	—	Drum Low Pass Filter Resonance	rr: drum instrument note number mm: 00H-40H-7FH (-64...0...+63)	○	×	×	×	○	×	×
16H	rrH	mmH	—	Drum EG Attack Rate	rr: drum instrument note number mm: 00H-40H-7FH (-64...0...+63)	○	×	×	×	○	×	×
17H	rrH	mmH	—	Drum EG Decay Rate	rr: drum instrument note number mm: 00H-40H-7FH (-64...0...+63)	○	×	×	×	○	×	×
18H	rrH	mmH	—	Drum Pitch Coarse	rr: drum instrument note number mm: 00H-40H-7FH (-64...0...+63)	○	×	×	×	○	×	×
19H	rrH	mmH	—	Drum Pitch Fine	rr: drum instrument note number mm: 00H-40H-7FH (-64...0...+63)	○	×	×	×	○	×	×
1AH	rrH	mmH	—	Drum Level	rr: drum instrument note number mm: 00H-7FH (0...127)	○	×	×	×	○	×	×
1CH	rrH	mmH	—	Drum Pan	rr: drum instrument note number mm: 00H, 01H-40H-7FH (RND, L63...C...R63)	○	×	×	×	○	×	×
1DH	rrH	mmH	—	Drum Reverb Send Level	rr: drum instrument note number mm: 00H-7FH (0...127)	○	×	×	×	○	×	×
1EH	rrH	mmH	—	Drum Chorus Send Level	rr: drum instrument note number mm: 00H-7FH (0...127)	○	×	×	×	○	×	×
1FH	rrH	mmH	—	Drum Variation Send Level	rr: drum instrument note number mm: 00H-7FH (0...127) (Variation Connection = SYSTEM) mm: 00H, 01H-7FH (OFF, ON) (Variation Connection = INSERTION)	○	×	×	×	○	×	×

NRPN MSB: 14H-1FH (for drums) message is accepted as long as the channel is set with a drum Voice.

Data Entry LSB: Ignored.

Parameters controlled by RPN (Registered Parameter Numbers)

RPN		Data Entry		Parameter	Data Range	MIDI Reception (respond/ignore)			MIDI Transmission (generated data)			REC
MSB	LSB	MSB	LSB			Song	Main Layer Left Layer	Keyboard	Panel (main generation method)	Song	Midi	Recorded from panel
00H	00H	mmH	—	Pitch Bend Sensitivity	mm: 00H-18H (0...+24[semitones])	○	○	○ (All manually played parts)	○ (Other Setting)	○	×	○
00H	01H	mmH	llH	Fine Tune	mm I: 00H 00H -100 [cent] ... mm II: 40H 00H 0 [cent] ... mm II: 7FH 7FH 100 [cent]	○	○	○ (All manually played parts)	○ (VOICE EDIT)	○	×	○
00H	02H	mmH	—	Coarse Tune	mm: 28H-40H-58H (-24...0...+24 [semitones])	○	○	○ (All manually played parts)	×	○	×	×
7FH	7FH	—	—	Null	—	○	○	○ (All manually played parts)	×	○	×	×

MIDI PARAMETER CHANGE TABLE

*Not Received when Receive Parameter SysEx is set to off.
*Not transmitted when Transmit Parameter SysEx is set to off.

MIDI Parameter Change table (XG SYSTEM)

Address (H)			Size (H)	Data (H)	Parameter	Description	XG Default (H)	MIDI Reception (respond/ignore)			MIDI Transmission (generated data)			REC Recorded from panel
								Song	Main Layer Left Layer	Keyboard	Panel (main generation method)	Song	Midi	
00	00	00 01 02 03	4	00-0F 00-0F 00-0F 00-0F	MASTER TUNE	-102.4...0...+102.3 [cent] 1st bit 3-0 → bit 15-12 2nd bit 3-0 → bit 11-8 3rd bit 3-0 → bit 7-4 4th bit 3-0 → bit 3-0	*Panel setting value	○			×	○	×	×
		04	1	00-7F	MASTER VOLUME	0...127	7F	○	×	×	×	○	×	×
		05	1	00-7F	MASTER ATTENUATOR	0...127	00	×	×	×	×	×	×	×
		06	1	28-58	TRANSPOSE	-24...0...+24 [semitones]	40	○	×	×	×	○	×	×
		7D	1	N	DRUM SETUP RESET	N: Drum setup number	—	○	×	×	×	○	×	×
		7E	1	00	XG SYSTEM ON	00=XG system ON	—	○	×	×	×	○	×	○
		7F	1	00	ALL PARAMETER RESET	00=ON	—	○	×	×	×	○	×	×

TOTAL SIZE 07

MIDI Parameter Change table (SYSTEM INFORMATION)

Address (H)			Size (H)	Data (H)	Parameter	Description	MIDI Reception (respond/ignore)			MIDI Transmission (generated data)			REC Recorded from panel
							Song	Main Layer Left Layer	Keyboard	Panel (main generation method)	Song	Midi	
01	00	00 ... 0D	E	20-7F ... 20-7F	Model Name 1 ... Model Name 14	32...127 (ASCII CHARACTER) ... 32...127 (ASCII CHARACTER)	—	—	—	×	×	○	×
		0E	1		NOT USED								
		0F	1		NOT USED								

TOTAL SIZE 10
Transmitted in response to Dump Request. Not received.

MIDI Parameter Change table (EFFECT1)

Address (H)			Size (H)	Data (H)	Parameter	Description	XG Default (H)	MIDI Reception (respond/ignore)			MIDI Transmission (generated data)			REC Recorded from panel
								Song	Main Layer Left Layer	Keyboard	Panel (main generation method)	Song	Midi	
02	01	00	2	00-7F 00-7F	REVERB TYPE MSB REVERB TYPE LSB	Refer to Effect Parameter List :	01 (=HALL1) 00	○			○ (VOICE EDIT)	○	×	○
		02	1	00-7F	REVERB PARAMETER 1	:	Depends on Reverb type	○ (*Depends on Reverb type)			×	○	×	×
		03	1	00-7F	REVERB PARAMETER 2	:	Depends on Reverb type	○ (*Depends on Reverb type)			×	○	×	×
		04	1	00-7F	REVERB PARAMETER 3	:	Depends on Reverb type	○ (*Depends on Reverb type)			×	○	×	×
		05	1	00-7F	REVERB PARAMETER 4	:	Depends on Reverb type	○ (*Depends on Reverb type)			×	○	×	×
		06	1	00-7F	REVERB PARAMETER 5	:	Depends on Reverb type	○ (*Depends on Reverb type)			×	○	×	×
		07	1	00-7F	REVERB PARAMETER 6	:	Depends on Reverb type	○ (*Depends on Reverb type)			×	○	×	×
		08	1	00-7F	REVERB PARAMETER 7	:	Depends on Reverb type	○ (*Depends on Reverb type)			×	○	×	×
		09	1	00-7F	REVERB PARAMETER 8	:	Depends on Reverb type	○ (*Depends on Reverb type)			×	○	×	×
		0A	1	00-7F	REVERB PARAMETER 9	:	Depends on Reverb type	○ (*Depends on Reverb type)			×	○	×	×
		0B	1	00-7F	REVERB PARAMETER 10	:	Depends on Reverb type	○ (*Depends on Reverb type)			×	○	×	×
		0C	1	00-7F	REVERB RETURN	---dB...0dB...+6dB (0...64...127)	40	○			×	○	×	×
		0D	1	01-7F	REVERB PAN	L63...C...R63	40	○			×	○	×	×

TOTAL SIZE 0E

02	01	10	1	00-7F	REVERB PARAMETER 11	Refer to Effect Parameter List	Depends on Reverb type	○ (*Depends on Reverb type)			×	○	×	×
		11	1	00-7F	REVERB PARAMETER 12	:	Depends on Reverb type	○ (*Depends on Reverb type)			×	○	×	×
		12	1	00-7F	REVERB PARAMETER 13	:	Depends on Reverb type	○ (*Depends on Reverb type)			×	○	×	×
		13	1	00-7F	REVERB PARAMETER 14	:	Depends on Reverb type	○ (*Depends on Reverb type)			×	○	×	×
		14	1	00-7F	REVERB PARAMETER 15	:	Depends on Reverb type	○ (*Depends on Reverb type)			×	○	×	×
		15	1	00-7F	REVERB PARAMETER 16	:	Depends on Reverb type	○ (*Depends on Reverb type)			×	○	×	×

TOTAL SIZE 06

Address (H)			Size (H)	Data (H)	Parameter	Description	XG Default (H)	MIDI Reception (respond/ignore)			MIDI Transmission (generated data)			REC
								Song	Main Layer Left Layer	Keyboard	Panel (main generation method)	Song	Midi	
02	01	20	2	00-7F 00-7F	CHORUS TYPE MSB CHORUS TYPE LSB	Refer to Effect Parameter List :	41 (=CHORUS1) 00	○			○ (VOICE EDIT)	○	×	○
		22	1	00-7F	CHORUS PARAMETER 1			:	Depends on Chorus Type	○ (*Depends on Chorus Type)			×	○
		23	1	00-7F	CHORUS PARAMETER 2	:	Depends on Chorus Type	○ (*Depends on Chorus Type)			×	○	×	×
		24	1	00-7F	CHORUS PARAMETER 3	:	Depends on Chorus Type	○ (*Depends on Chorus Type)			×	○	×	×
		25	1	00-7F	CHORUS PARAMETER 4	:	Depends on Chorus Type	○ (*Depends on Chorus Type)			×	○	×	×
		26	1	00-7F	CHORUS PARAMETER 5	:	Depends on Chorus Type	○ (*Depends on Chorus Type)			×	○	×	×
		27	1	00-7F	CHORUS PARAMETER 6	:	Depends on Chorus Type	○ (*Depends on Chorus Type)			×	○	×	×
		28	1	00-7F	CHORUS PARAMETER 7	:	Depends on Chorus Type	○ (*Depends on Chorus Type)			×	○	×	×
		29	1	00-7F	CHORUS PARAMETER 8	:	Depends on Chorus Type	○ (*Depends on Chorus Type)			×	○	×	×
		2A	1	00-7F	CHORUS PARAMETER 9	:	Depends on Chorus Type	○ (*Depends on Chorus Type)			×	○	×	×
		2B	1	00-7F	CHORUS PARAMETER 10	:	Depends on Chorus Type	○ (*Depends on Chorus Type)			×	○	×	×
		2C	1	00-7F	CHORUS RETURN	~<dB...0dB...+6dB (0...64...127)	40	○			×	○	×	×
		2D	1	01-7F	CHORUS PAN	L63...C...R63	40	○			×	○	×	×
		2E	1	00-7F	SEND CHORUS TO REVERB	~<dB...0dB...+6dB (0...64...127)	00	○			×	○	×	×

TOTAL SIZE 0F

02	01	30	1	00-7F	CHORUS PARAMETER 11	Refer to Effect Parameter List	Depends on Chorus Type	○ (*Depends on Chorus Type)			×	○	×	×
		31	1	00-7F	CHORUS PARAMETER 12	:	Depends on Chorus Type	○ (*Depends on Chorus Type)			×	○	×	×
		32	1	00-7F	CHORUS PARAMETER 13	:	Depends on Chorus Type	○ (*Depends on Chorus Type)			×	○	×	×
		33	1	00-7F	CHORUS PARAMETER 14	:	Depends on Chorus Type	○ (*Depends on Chorus Type)			×	○	×	×
		34	1	00-7F	CHORUS PARAMETER 15	:	Depends on Chorus Type	○ (*Depends on Chorus Type)			×	○	×	×
		35	1	00-7F	CHORUS PARAMETER 16	:	Depends on Chorus Type	○ (*Depends on Chorus Type)			×	○	×	×

TOTAL SIZE 06

Address (H)			Size (H)	Data (H)	Parameter	Description	XG Default (H)	MIDI Reception (respond/ignore)			MIDI Transmission (generated data)			REC
								Song	Main Layer Left Layer	Keyboard	Panel (main generation method)	Song	Midi	
02	01	40	2	00-7F	VARIATION TYPE MSB	Refer to Effect Parameter List	05 (=DELAY L, C, R) 00	○			×	○	×	×
				00-7F	VARIATION TYPE LSB			:	○					
		42	2	00-7F	VARIATION PARAMETER 1 MSB	:	Depends on Variation Type	○ (*Depends on Variation Type)			×	○	×	×
				00-7F	VARIATION PARAMETER 1 LSB	:		○ (*Depends on Variation Type)						
		44	2	00-7F	VARIATION PARAMETER 2 MSB	:	Depends on Variation Type	○ (*Depends on Variation Type)			×	○	×	×
				00-7F	VARIATION PARAMETER 2 LSB	:		○ (*Depends on Variation Type)						
		46	2	00-7F	VARIATION PARAMETER 3 MSB	:	Depends on Variation Type	○ (*Depends on Variation Type)			×	○	×	×
				00-7F	VARIATION PARAMETER 3 LSB	:		○ (*Depends on Variation Type)						
		48	2	00-7F	VARIATION PARAMETER 4 MSB	:	Depends on Variation Type	○ (*Depends on Variation Type)			×	○	×	×
				00-7F	VARIATION PARAMETER 4 LSB	:		○ (*Depends on Variation Type)						
		4A	2	00-7F	VARIATION PARAMETER 5 MSB	:	Depends on Variation Type	○ (*Depends on Variation Type)			×	○	×	×
				00-7F	VARIATION PARAMETER 5 LSB	:		○ (*Depends on Variation Type)						
		4C	2	00-7F	VARIATION PARAMETER 6 MSB	:	Depends on Variation Type	○ (*Depends on Variation Type)			×	○	×	×
				00-7F	VARIATION PARAMETER 6 LSB	:		○ (*Depends on Variation Type)						
		4E	2	00-7F	VARIATION PARAMETER 7 MSB	:	Depends on Variation Type	○ (*Depends on Variation Type)			×	○	×	×
				00-7F	VARIATION PARAMETER 7 LSB	:		○ (*Depends on Variation Type)						
		50	2	00-7F	VARIATION PARAMETER 8 MSB	:	Depends on Variation Type	○ (*Depends on Variation Type)			×	○	×	×
				00-7F	VARIATION PARAMETER 8 LSB	:		○ (*Depends on Variation Type)						
		52	2	00-7F	VARIATION PARAMETER 9 MSB	:	Depends on Variation Type	○ (*Depends on Variation Type)			×	○	×	×
				00-7F	VARIATION PARAMETER 9 LSB	:		○ (*Depends on Variation Type)						
		54	2	00-7F	VARIATION PARAMETER 10 MSB	:	Depends on Variation Type	○ (*Depends on Variation Type)			×	○	×	×
				00-7F	VARIATION PARAMETER 10 LSB	:		○ (*Depends on Variation Type)						
		56	1	00-7F	VARIATION RETURN	~∞dB...0dB...+6dB (0...64...127)	40	○			×	○	×	×
		57	1	01-7F	VARIATION PAN	L63...C...R63	40	○			×	○	×	×
		58	1	00-7F	SEND VARIATION TO REVERB	~∞dB...0dB...+6dB (0...64...127)	00	○			×	○	×	×
		59	1	00-7F	SEND VARIATION TO CHORUS	~∞dB...0dB...+6dB (0...64...127)	00	○			×	○	×	×
		5A	1	00-01	VARIATION CONNECTION	INSERTION, SYSTEM	00	○			×	○	×	×
		5B	1	00-7F	VARIATION PART NUMBER	Reception: Part1...16 (0...15) Transmission: Part1...16 (0...15) OFF (127)	7F	○			×	○	×	×
		5C	1	00-7F	MW VARIATION CONTROL DEPTH	-64...0...+63	40	○			×	○	×	×
		5D	1	00-7F	BEND VARIATION CONTROL DEPTH	-64...0...+63	40	○			×	○	×	×
		5E	1	00-7F	CAT VARIATION CONTROL DEPTH	-64...0...+63	40	○			×	○	×	×
		5F	1	00-7F	AC1 VARIATION CONTROL DEPTH	-64...0...+63	40	○			×	○	×	×
		60	1	00-7F	AC2 VARIATION CONTROL DEPTH	-64...0...+63	40	○			×	○	×	×

TOTAL SIZE 21

02	01	70	1	00-7F	VARIATION PARAMETER 11	Refer to Effect Parameter List	Depends on Variation Type	○ (*Depends on Variation Type)			×	○	×	×
		71	1	00-7F	VARIATION PARAMETER 12	:	Depends on Variation Type	○ (*Depends on Variation Type)			×	○	×	×
		72	1	00-7F	VARIATION PARAMETER 13	:	Depends on Variation Type	○ (*Depends on Variation Type)			×	○	×	×
		73	1	00-7F	VARIATION PARAMETER 14	:	Depends on Variation Type	○ (*Depends on Variation Type)			×	○	×	×
		74	1	00-7F	VARIATION PARAMETER 15	:	Depends on Variation Type	○ (*Depends on Variation Type)			×	○	×	×
		75	1	00-7F	VARIATION PARAMETER 16	:	Depends on Variation Type	○ (*Depends on Variation Type)			×	○	×	×

TOTAL SIZE 06

MIDI Parameter Change table (MULTI EQ)

Address (H)			Size (H)	Data (H)	Parameter	Description		MIDI Reception (respond/ignore)			MIDI Transmission (generated data)			REC
								Song	Main Layer Left Left Layer	Keyboard	Panel (main generation method)	Song	Midi	
02	40	00	1	00-04	EQ TYPE	flat, jazz, pops, rock, classic	*MULTI EQ is not reset by the XG System On.		○		×	×	×	×
		01	1	34-4C	EQ GAIN 1	-12...0...+12 [dB]			○		×	×	×	×
		02	1	04-28	EQ FREQUENCY 1	32...2.0k [Hz]			○		×	×	×	×
		03	1	01-78	EQ Q 1	0.1...12.0			○		×	×	×	×
		04	1	00-01	EQ SHAPE 1	shelving, peaking			○		×	×	×	×
		05	1	34-4C	EQ GAIN 2	-12...0...+12 [dB]			○		×	×	×	×
		06	1	0E-36	EQ FREQUENCY 2	100...10.0k [Hz]			○		×	×	×	×
		07	1	01-78	EQ Q 2	0.1...12.0			○		×	×	×	×
		08	1		NOT USED				—		—	—	—	—
		09	1	34-4C	EQ GAIN 3	-12...0...+12 [dB]			○		×	×	×	×
		0A	1	0E-36	EQ FREQUENCY 3	100...10.0k [Hz]			○		×	×	×	×
		0B	1	01-78	EQ Q 3	0.1...12.0			○		×	×	×	×
		0C	1		NOT USED				—		—	—	—	—
		0D	1	34-4C	EQ GAIN4	-12...0...+12 [dB]			○		×	×	×	×
		0E	1	0E-36	EQ FREQUENCY 4	100...10.0k [Hz]			○		×	×	×	×
		0F	1	01-78	EQ Q 4	0.1...12.0			○		×	×	×	×
		10	1		NOT USED				—		—	—	—	—
		11	1	34-4C	EQ GAIN 5	-12...0...+12 [dB]			○		×	×	×	×
		12	1	1C-3A	EQ FREQUENCY 5	0.5k...16.0k [Hz]			○		×	×	×	×
		13	1	01-78	EQ Q 5	0.1...12.0			○		×	×	×	×
		14	1	00-01	EQ SHAPE 5	shelving, peaking			○		×	×	×	×

TOTAL SIZE 15

MIDI Parameter Change table (EFFECT2)

Address (H)			Size (H)	Data (H)	Parameter	Description		MIDI Reception (respond/ignore)			MIDI Transmission (generated data)			REC
								Song	Main Layer Left Left Layer	Keyboard	Panel (main generation method)	Song	Midi	
03	n	00	2	00-7F 00-7F	INSERTION EFFECT TYPE MSB INSERTION EFFECT TYPE LSB	Refer to Effect Parameter List :			○		○ (VOICE EDIT)	○	×	○
		02	1	00-7F	INSERTION EFFECT PARAMETER 1	:			○ (*Depends on Insertion Type)		○ (VOICE EDIT)	○	×	○
		03	1	00-7F	INSERTION EFFECT PARAMETER 2	:			○ (*Depends on Insertion Type)		×	○	×	×
		04	1	00-7F	INSERTION EFFECT PARAMETER 3	:			○ (*Depends on Insertion Type)		○ (VOICE EDIT)	○	×	○
		05	1	00-7F	INSERTION EFFECT PARAMETER 4	:			○ (*Depends on Insertion Type)		×	○	×	×
		06	1	00-7F	INSERTION EFFECT PARAMETER 5	:			○ (*Depends on Insertion Type)		×	○	×	×
		07	1	00-7F	INSERTION EFFECT PARAMETER 6	:			○ (*Depends on Insertion Type)		×	○	×	×
		08	1	00-7F	INSERTION EFFECT PARAMETER 7	:			○ (*Depends on Insertion Type)		×	○	×	×
		09	1	00-7F	INSERTION EFFECT PARAMETER 8	:			○ (*Depends on Insertion Type)		×	○	×	×
		0A	1	00-7F	INSERTION EFFECT PARAMETER 9	:			○ (*Depends on Insertion Type)		×	○	×	×
		0B	1	00-7F	INSERTION EFFECT PARAMETER 10	:			○ (*Depends on Insertion Type)		○ (VOICE EDIT)	○	×	○
		0C	1	00-7F	INSERTION EFFECT PART NUMBER	Reception: Part1...16 (0...15) Transmission: Part1...16 (0...15) OFF (127)			○		○ (Voice)	○	×	○
		0D	1	00-7F	MW INSERTION CONTROL DEPTH	-64...0...+63			○		×	○	×	×
		0E	1	00-7F	BEND INSERTION CONTROL DEPTH	-64...0...+63			○		×	○	×	×
		0F	1	00-7F	CAT INSERTION CONTROL DEPTH	-64...0...+63			○		×	○	×	×
		10	1	00-7F	AC1 INSERTION CONTROL DEPTH	-64...0...+63			○		×	○	×	×
		11	1	00-7F	AC2 INSERTION CONTROL DEPTH	-64...0...+63			○		×	○	×	×

TOTAL SIZE 12

		20	1	00-7F	INSERTION EFFECT PARAMETER 11	Refer to Effect Parameter List			○ (*Depends on Insertion Type)		×	○	×	×
		21	1	00-7F	INSERTION EFFECT PARAMETER 12	:			○ (*Depends on Insertion Type)		×	○	×	×
		22	1	00-7F	INSERTION EFFECT PARAMETER 13	:			○ (*Depends on Insertion Type)		×	○	×	×
		23	1	00-7F	INSERTION EFFECT PARAMETER 14	:			○ (*Depends on Insertion Type)		×	○	×	×
		24	1	00-7F	INSERTION EFFECT PARAMETER 15	:			○ (*Depends on Insertion Type)		×	○	×	×
		25	1	00-7F	INSERTION EFFECT PARAMETER 16	:			○ (*Depends on Insertion Type)		○ (VOICE EDIT)	○	×	○

TOTAL SIZE 6

		30	2	00-7F 00-7F	INSERTION EFFECT PARAMETER 1 MSB INSERTION EFFECT PARAMETER 1 LSB	Refer to Effect Parameter List :			○ (*Depends on Insertion Type)		×	○	×	×
		32	2	00-7F 00-7F	INSERTION EFFECT PARAMETER 2 MSB INSERTION EFFECT PARAMETER 2 LSB	:			○ (*Depends on Insertion Type)		×	○	×	×
		34	2	00-7F 00-7F	INSERTION EFFECT PARAMETER 3 MSB INSERTION EFFECT PARAMETER 3 LSB	:			○ (*Depends on Insertion Type)		×	○	×	×
		36	2	00-7F 00-7F	INSERTION EFFECT PARAMETER 4 MSB INSERTION EFFECT PARAMETER 4 LSB	:			○ (*Depends on Insertion Type)		×	○	×	×
		38	2	00-7F 00-7F	INSERTION EFFECT PARAMETER 5 MSB INSERTION EFFECT PARAMETER 5 LSB	:			○ (*Depends on Insertion Type)		×	○	×	×
		3A	2	00-7F 00-7F	INSERTION EFFECT PARAMETER 6 MSB INSERTION EFFECT PARAMETER 6 LSB	:			○ (*Depends on Insertion Type)		×	○	×	×
		3C	2	00-7F 00-7F	INSERTION EFFECT PARAMETER 7 MSB INSERTION EFFECT PARAMETER 7 LSB	:			○ (*Depends on Insertion Type)		×	○	×	×
		3E	2	00-7F 00-7F	INSERTION EFFECT PARAMETER 8 MSB INSERTION EFFECT PARAMETER 8 LSB	:			○ (*Depends on Insertion Type)		×	○	×	×

		40	2	00-7F 00-7F	INSERTION EFFECT PARAMETER 9 MSB INSERTION EFFECT PARAMETER 9 LSB	:	○ (*Depends on Insertion Type)	×	○	×	×
		42	2	00-7F 00-7F	INSERTION EFFECT PARAMETER 10 MSB INSERTION EFFECT PARAMETER 10 LSB	:	○ (*Depends on Insertion Type)	○ (VOICE EDIT)	○	×	○

TOTAL SIZE 14

The EFFECT2 Parameter cannot be reset to its factory setting with XG SYSTEM ON.

The second byte of the address is considered as an Insertion effect number.

n: insertion effect number (n = 0 – 2)

For effect types that do not require MSB, the Parameters for Address 02 – 0B will be received and the Parameters for Address 30 – 42 will not be received.

For effect types that require MSB, the Parameters for Address 30 – 42 will be received and the Parameters for Address 02 – 0B will not be received.

When Bulk Dumps that include Effect Type data are transmitted, the Parameters for Address 02-0B will always be transmitted. But, effects that require MSB, when the bulk dump is received the Parameters for Address 02 – 0B will not be received.

MIDI Parameter Change table (MULTI PART)

Address (H)			Size (H)	Data (H)	Parameter	Description	XG Default (H)	MIDI Reception (respond/ignore)			MIDI Transmission (generated data)			REC
								Song	Main Layer Left Layer	Keyboard	Panel (main generation method)	Song	Midi	Recorded from panel
08	nn	00	1	00-20	NOT USED			×	×	×	×	×	×	×
		01	1	00-7F	BANK SELECT MSB	0...127	part10=7F, other parts=00	○	○	×	×	○	×	×
		02	1	00-7F	BANK SELECT LSB	0...127	00	○	○	×	×	○	×	×
		03	1	00-7F	PROGRAM NUMBER	1...128	00	○	○	×	×	○	×	×
		04	1	00-0F, 7F	Rcv CHANNEL	1...16, OFF	Part No.	○	×	×	×	○	×	×
		05	1	00-01	MONO/POLY MODE	MONO, POLY	01	○	×	×	×	○	×	×
		06	1	00-02	SAME NOTE NUMBER KEY ON ASSIGN	SINGLE, MULTI, INST (for Drum)	01	○	×	×	×	○	×	×
		07	1	00-03	PART MODE	NORMAL, DRUM, DRUMS1...2	part10=02, other parts=00	○	×	×	○ (Drum Voice)	○	×	○
		08	1	28-58	NOTE SHIFT	-24...0...+24 [semitones]	40	○	○	×	×	○	×	×
09 0A		2	00-0F 00-0F	DETUNE	-12.8...0...+12.7 [Hz] 1st bit3-0 → bit7-4 2nd bit3-0 → bit3-0		08 00	○	○	×	×	○	×	×
		0B	1	00-7F	VOLUME	0...127	64	○	○	×	×	○	×	×
		0C	1	00-7F	VELOCITY SENSE DEPTH	0...127	40	○	○	×	○ (VOICE EDIT)	○	×	○
		0D	1	00-7F	VELOCITY SENSE OFFSET	0...127	40	○	○	×	○ (VOICE EDIT)	○	×	○
		0E	1	00-7F	PAN	RND, L63...C...R63	40	○	○	×	×	○	×	×
		0F	1	00-7F	NOTE LIMIT LOW	C-2...G8	00	○	○	×	×	○	×	×
		10	1	00-7F	NOTE LIMIT HIGH	C-2...G8	7F	○	○	×	×	○	×	×
		11	1	00-7F	DRY LEVEL	0...127	7F	○	○	×	×	○	×	×
		12	1	00-7F	CHORUS SEND	0...127	00	○	○	×	×	○	×	×
		13	1	00-7F	REVERB SEND	0...127	28	○	○	×	×	○	×	×
		14	1	00-7F	VARIATION SEND	0...127	00	○	○	×	×	○	×	×
		15	1	00-7F	VIBRATO RATE	-64...0...+63	40	○	○	×	×	○	×	×
		16	1	00-7F	VIBRATO DEPTH	-64...0...+63	40	○	○	×	×	○	×	×
		17	1	00-7F	VIBRATO DELAY	-64...0...+63	40	○	○	×	×	○	×	×
		18	1	00-7F	FILTER CUTOFF FREQUENCY	-64...0...+63	40	○	○	×	×	○	×	×
		19	1	00-7F	FILTER RESONANCE	-64...0...+63	40	○	○	×	×	○	×	×
		1A	1	00-7F	EG ATTACK TIME	-64...0...+63	40	○	○	×	×	○	×	×
		1B	1	00-7F	EG DECAY TIME	-64...0...+63	40	○	○	×	×	○	×	×
		1C	1	00-7F	EG RELEASE TIME	-64...0...+63	40	○	○	×	×	○	×	×
		1D	1	28-58	MW PITCH CONTROL	-24...0...+24 [semitones]	40	○	○	×	×	○	×	×
		1E	1	00-7F	MW LOW PASS FILTER CONTROL	-9600...0...+9450 [cent]	40	○	○	×	×	○	×	×
		1F	1	00-7F	MW AMPLITUDE CONTROL	-100...0...+100 [%]	40	○	○	×	×	○	×	×
		20	1	00-7F	MW LFO PMOD DEPTH	0...127	0A	○	○	×	×	○	×	×
		21	1	00-7F	MW LFO FMOD DEPTH	0...127	00	○	○	×	×	○	×	×
		22	1	00-7F	MW LFO AMOD DEPTH	0...127	00	○	○	×	×	○	×	×
		23	1	28-58	BEND PITCH CONTROL	-24...0...+24 [semitones]	42	○	○	×	×	○	×	×
		24	1	00-7F	BEND LOW PASS FILTER CONTROL	-9600...0...+9450 [cent]	40	○	○	×	×	○	×	×
		25	1	00-7F	BEND AMPLITUDE CONTROL	-100...0...+100 [%]	40	○	○	×	×	○	×	×
		26	1	00-7F	BEND LFO PMOD DEPTH	0...127	00	○	○	×	×	○	×	×
		27	1	00-7F	BEND LFO FMOD DEPTH	0...127	00	○	○	×	×	○	×	×
		28	1	00-7F	BEND LFO AMOD DEPTH	0...127	00	○	○	×	×	○	×	×

TOTAL SIZE 29

Address (H)			Size (H)	Data (H)	Parameter	Description	XG Default (H)	MIDI Reception (respond/ignore)			MIDI Transmission (generated data)			REC
								Song	Main Layer Left Left Layer	Keyboard	Panel (main generation method)	Song	Midi	Recorded from panel
		30	1	00-01	Rcv PITCH BEND	OFF, ON	01	○	×	×	×	○	×	×
		31	1	00-01	Rcv CH AFTER TOUCH (CAT)	OFF, ON	01	○	×	×	×	○	×	×
		32	1	00-01	Rcv PROGRAM CHANGE	OFF, ON	01	○	×	×	×	○	×	×
		33	1	00-01	Rcv CONTROL CHANGE	OFF, ON	01	○	×	×	×	○	×	×
		34	1	00-01	Rcv POLY AFTER TOUCH (PAT)	OFF, ON	01	○	×	×	×	○	×	×
		35	1	00-01	Rcv NOTE MESSAGE	OFF, ON	01	○	×	×	×	○	×	×
		36	1	00-01	Rcv RPN	OFF, ON	01	○	×	×	×	○	×	×
		37	1	00-01	Rcv NRPN	OFF, ON	XGmode=01, GMmode=00	○	×	×	×	○	×	×
		38	1	00-01	Rcv MODULATION	OFF, ON	01	○	×	×	×	○	×	×
		39	1	00-01	Rcv VOLUME	OFF, ON	01	○	×	×	×	○	×	×
		3A	1	00-01	Rcv PAN	OFF, ON	01	○	×	×	×	○	×	×
		3B	1	00-01	Rcv EXPRESSION	OFF, ON	01	○	×	×	×	○	×	×
		3C	1	00-01	Rcv HOLD1	OFF, ON	01	○	×	×	×	○	×	×
		3D	1	00-01	Rcv PORTAMENTO	OFF, ON	01	○	×	×	×	○	×	×
		3E	1	00-01	Rcv SOSTENUTO	OFF, ON	01	○	×	×	×	○	×	×
		3F	1	00-01	Rcv SOFT PEDAL	OFF, ON	01	○	×	×	×	○	×	×
		40	1	00-01	Rcv BANK SELECT	OFF, ON	01	○	×	×	×	○	×	×
		41	1	00-7F	SCALE TUNING C	-63...0...+63 [cent]	40	○	○	×	○ (Other Setting)	○	×	○

Address (H)			Size (H)	Data (H)	Parameter	Description	XG Default (H)	MIDI Reception (respond/ignore)			MIDI Transmission (generated data)			REC
								Song	Main Layer Left Layer	Keyboard	Panel (main generation method)	Song	Midi	
		42	1	00-7F	SCALE TUNING C#	-63...0...+63 [cent]	40	○	○	×	○ (Other Setting)	○	×	○
		43	1	00-7F	SCALE TUNING D	-63...0...+63 [cent]	40	○	○	×	○ (Other Setting)	○	×	○
		44	1	00-7F	SCALE TUNING D#	-63...0...+63 [cent]	40	○	○	×	○ (Other Setting)	○	×	○
		45	1	00-7F	SCALE TUNING E	-63...0...+63 [cent]	40	○	○	×	○ (Other Setting)	○	×	○
		46	1	00-7F	SCALE TUNING F	-63...0...+63 [cent]	40	○	○	×	○ (Other Setting)	○	×	○
		47	1	00-7F	SCALE TUNING F#	-63...0...+63 [cent]	40	○	○	×	○ (Other Setting)	○	×	○
		48	1	00-7F	SCALE TUNING G	-63...0...+63 [cent]	40	○	○	×	○ (Other Setting)	○	×	○
		49	1	00-7F	SCALE TUNING G#	-63...0...+63 [cent]	40	○	○	×	○ (Other Setting)	○	×	○
		4A	1	00-7F	SCALE TUNING A	-63...0...+63 [cent]	40	○	○	×	○ (Other Setting)	○	×	○
		4B	1	00-7F	SCALE TUNING A#	-63...0...+63 [cent]	40	○	○	×	○ (Other Setting)	○	×	○
		4C	1	00-7F	SCALE TUNING B	-63...0...+63 [cent]	40	○	○	×	○ (Other Setting)	○	×	○
		4D	1	28-58	CAT PITCH CONTROL	-24...0...+24 [semitones]	40	○	○	×	×	○	×	×
		4E	1	00-7F	CAT LOW PASS FILTER CONTROL	-9600...0...+9450 [cent]	40	○	○	×	×	○	×	×
		4F	1	00-7F	CAT AMPLITUDE CONTROL	-100...0...+100 [%]	40	○	○	×	×	○	×	×
		50	1	00-7F	CAT LFO PMOD DEPTH	0...127	00	○	○	×	×	○	×	×
		51	1	00-7F	CAT LFO FMOD DEPTH	0...127	00	○	○	×	×	○	×	×
		52	1	00-7F	CAT LFO AMOD DEPTH	0...127	00	○	○	×	×	○	×	×
		53	1	28-58	PAT PITCH CONTROL	-24...0...+24 [semitones]	40	○	×	×	×	○	×	×
		54	1	00-7F	PAT LOW PASS FILTER CONTROL	-9600...0...+9450 [cent]	40	○	×	×	×	○	×	×
		55	1	00-7F	PAT AMPLITUDE CONTROL	-100...0...+100 [%]	40	○	×	×	×	○	×	×
		56	1	00-7F	PAT LFO PMOD DEPTH	0...127	00	○	×	×	×	○	×	×
		57	1	00-7F	PAT LFO FMOD DEPTH	0...127	00	○	×	×	×	○	×	×
		58	1	00-7F	PAT LFO AMOD DEPTH	0...127	00	○	×	×	×	○	×	×
		59	1	00-5F	AC1 CONTROLLER NUMBER	0...95	10	○	×	×	×	○	×	×
		5A	1	28-58	AC1 PITCH CONTROL	-24...0...+24 [semitones]	40	○	×	×	×	○	×	×
		5B	1	00-7F	AC1 LOW PASS FILTER CONTROL	-9600...0...+9450 [cent]	40	○	×	×	×	○	×	×
		5C	1	00-7F	AC1 AMPLITUDE CONTROL	-100...0...+100 [%]	40	○	×	×	×	○	×	×
		5D	1	00-7F	AC1 LFO PMOD DEPTH	0...127	00	○	×	×	×	○	×	×
		5E	1	00-7F	AC1 LFO FMOD DEPTH	0...127	00	○	×	×	×	○	×	×
		5F	1	00-7F	AC1 LFO AMOD DEPTH	0...127	00	○	×	×	×	○	×	×
		60	1	00-5F	AC2 CONTROLLER NUMBER	0...95	11	○	×	×	×	○	×	×
		61	1	28-58	AC2 PITCH CONTROL	-24...0...+24 [semitones]	40	○	×	×	×	○	×	×
		62	1	00-7F	AC2 LOW PASS FILTER CONTROL	-9600...0...+9450 [cent]	40	○	×	×	×	○	×	×
		63	1	00-7F	AC2 AMPLITUDE CONTROL	-100...0...+100 [%]	40	○	×	×	×	○	×	×
		64	1	00-7F	AC2 LFO PMOD DEPTH	0...127	00	○	×	×	×	○	×	×
		65	1	00-7F	AC2 LFO FMOD DEPTH	0...127	00	○	×	×	×	○	×	×
		66	1	00-7F	AC2 LFO AMOD DEPTH	0...127	00	○	×	×	×	○	×	×
		67	1	00-01	PORTAMENTO SWITCH	OFF, ON	00	○	○	×	×	○	×	×
		68	1	00-7F	PORTAMENTO TIME	0...127	00	○	○	×	×	○	×	×
		69	1	00-7F	PITCH EG INITIAL LEVEL	-64...0...+63	40	○	×	×	×	○	×	×
		6A	1	00-7F	PITCH EG ATTACK TIME	-64...0...+63	40	○	×	×	×	○	×	×
		6B	1	00-7F	PITCH EG RELEASE LEVEL	-64...0...+63	40	○	×	×	×	○	×	×
		6C	1	00-7F	PITCH EG RELEASE TIME	-64...0...+63	40	○	×	×	×	○	×	×
		6D	1	01-7F	VELOCITY LIMIT LOW	1...127	01	○	×	×	×	○	×	×
		6E	1	01-7F	VELOCITY LIMIT HIGH	1...127	7F	○	×	×	×	○	×	×

TOTAL SIZE 3F

	70	1		NOT USED		-	-	-	-	-	-	-	-
	71	1		NOT USED		-	-	-	-	-	-	-	-
	72	1	00-7F	EQ BASS GAIN	-12dB...+12dB	40	○	○	×	○ (VOICE EDIT)	○	×	○
	73	1	00-7F	EQ TREBLE GAIN	-12dB...+12dB	40	○	○	×	○ (VOICE EDIT)	○	×	○

TOTAL SIZE 04

	74	1		NOT USED		-	-	-	-	-	-	-	-
	75	1		NOT USED		-	-	-	-	-	-	-	-
	76	1	04-28	EQ BASS FREQUENCY	32...2.0k[Hz]	0C	○	○	×	○ (VOICE EDIT)	○	×	○
	77	1	1C-3A	EQ TREBLE FREQUENCY	500...16.0k[Hz]	36	○	○	×	○ (VOICE EDIT)	○	×	○
	78	1		NOT USED		-	-	-	-	-	-	-	-
	79	1		NOT USED		-	-	-	-	-	-	-	-
	7A	1		NOT USED		-	-	-	-	-	-	-	-
	7B	1		NOT USED		-	-	-	-	-	-	-	-
	7C	1		NOT USED		-	-	-	-	-	-	-	-
	7D	1		NOT USED		-	-	-	-	-	-	-	-
	7E	1		NOT USED		-	-	-	-	-	-	-	-
	7F	1		NOT USED		-	-	-	-	-	-	-	-

TOTAL SIZE 0C

nn = PART NUMBER
If there is a Drum Voice assigned to the part, the following parameters are ineffective.
• BANK SELECT LSB
• MONO/POLY MODE
• SCALE TUNING
• PORTAMENTO
• PITCH EG
• FILTER MODULATION DEPTH (FMOD DEPTH)
• AMPLITUDE MODULATION DEPTH (AMOD DEPTH)

MIDI Parameter Change table (DRUM SETUP)

Address (H)			Size (H)	Data (H)	Parameter	Description	XG Default (H)	MIDI Reception (respond/ignore)			MIDI Transmission (generated data)			REC
								Song	Main Layer Left Left Layer	Keyboard	Panel (main generation method)	Song	Midi	Recorded from panel
3n	rr	00	1	00-7F	PITCH COARSE	-64...0...+63	40	○	×	×	×	○	×	×
		01	1	00-7F	PITCH FINE	-64...0...+63 [cent]	40	○	×	×	×	○	×	×
		02	1	00-7F	LEVEL	0...127	Depends on the note	○	×	×	×	○	×	×
		03	1	00-7F	ALTERNATE GROUP	OFF, 1...127	Depends on the note	○	×	×	×	○	×	×
		04	1	00-7F	PAN	RND, L63...C...R63	Depends on the note	○	×	×	×	○	×	×
		05	1	00-7F	REVERB SEND	0...127	Depends on the note	○	×	×	×	○	×	×
		06	1	00-7F	CHORUS SEND	0...127	Depends on the note	○	×	×	×	○	×	×
		07	1	00-7F	VARIATION SEND	0...127	7F	○	×	×	×	○	×	×
		08	1	00-01	KEY ASSIGN	SINGLE, MULTI	00	○	×	×	×	○	×	×
		09	1	00-01	Rcv NOTE OFF	OFF, ON	Depends on the note	○	×	×	×	○	×	×
		0A	1	00-01	Rcv NOTE ON	OFF, ON	01	○	×	×	×	○	×	×
		0B	1	00-7F	LOW PASS FILTER CUTOFF FREQUENCY	-64...0...+63	40	○	×	×	×	○	×	×
		0C	1	00-7F	LOW PASS FILTER RESONANCE	-64...0...+63	40	○	×	×	×	○	×	×
		0D	1	00-7F	EG ATTACK RATE	-64...0...+63	40	○	×	×	×	○	×	×
		0E	1	00-7F	EG DECAY1 RATE	-64...0...+63	40	○	×	×	×	○	×	×
		0F	1	00-7F	EG DECAY2 RATE	-64...0...+63	40	○	×	×	×	○	×	×

TOTAL SIZE 10

		20	1	00-7F	EQ BASS GAIN	-12...+12 [dB]	40	○	×	×	×	○	×	×
		21	1	00-7F	EQ TREBLE GAIN	-12...+12 [dB]	40	○	×	×	×	○	×	×
		22	1		NOT USED		—	—	—	—	—	—	—	—
		23	1		NOT USED		—	—	—	—	—	—	—	—
		24	1	04-2B	EQ BASS FREQUENCY	32...2.0k [Hz]	0C	○	×	×	×	○	×	×
		25	1	1C-3A	EQ TREBLE FREQUENCY	500...16.0k [Hz]	36	○	×	×	×	○	×	×
		26	1		NOT USED		—	—	—	—	—	—	—	—
		27	1		NOT USED		—	—	—	—	—	—	—	—
		28	1		NOT USED		—	—	—	—	—	—	—	—
		29	1		NOT USED		—	—	—	—	—	—	—	—
		2A	1		NOT USED		—	—	—	—	—	—	—	—
		2B	1		NOT USED		—	—	—	—	—	—	—	—
		2C	1		NOT USED		—	—	—	—	—	—	—	—
		2D	1		NOT USED		—	—	—	—	—	—	—	—

TOTAL SIZE 0E

n: Drum Setup Number (0-1)

rr: note number (0D-5B)

In the following cases, the PF-500 will initialize all Drum Setups.

XG SYSTEM ON received

GM SYSTEM ON received

DRUM SETUP RESET received (only when in XG mode)

When a part to which a Drum Setup is assigned receives a program change, the assigned Drum Setup will be initialized.

If the same Drum Setup is assigned to two or more parts, changes in Drum Setup parameters (including program changes) will apply to all parts to which it is assigned.

System Exclusive Messages (1)

*Not Received when Receive Parameter SysEx is set to off.

*Not transmitted when Transmit Parameter SysEx is set to off.

System Exclusive Messages (Universal Realtime messages)

○: Available

MIDI Event	Data Format					MIDI Reception (effective or not for each part)			MIDI Reception (affecting the panel)	MIDI Transmission (generated data)			REC
						Song	Main Layer Left Layer	Keyboard		Panel (main generation method)	Song	Midi	
Master Volume	F0	7F	XN	04	01	SS	TT	F7					
	11110000	F0											
	01111111	7F											
	0xxxxnnnn	XN											
	00000100	04											
	00000001	01											
	0sssssss	SS											
	0ttttttt	TT											
	11110111	F7											

System Exclusive Messages (Universal Non Realtime messages)

MIDI Event	Data Format					MIDI Reception (effective or not for each part)			MIDI Reception (affecting the panel)	MIDI Transmission (generated data)			REC
						Song	Main Layer Left Layer	Keyboard		Panel (main generation method)	Song	Midi	
GM1 System On	F0	7E	XN	09	01	F7							
	11110000	F0											
	01111110	7E											
	0xxxxnnnn	XN											
	00001001	09											
	00000001	01											
	11110111	F7											

System Exclusive Messages (2)

*Not received when the Receive Parameter SysEx is set to off.

*Not transmitted when the Transmit Parameter SysEx is set to off.

System Exclusive Messages (XG)

MIDI Event	Data Format	MIDI Reception (effective or not for each part)			MIDI Reception (affecting the panel)	MIDI Transmission (generated data)		
		Song	Main Layer Left Layer	Keyboard		Panel (main generation method)	Song	Midi
XG Parameter Change	F0 43 1n 4C hh mm ll dd ... F7							
	11110000 F0 = Exclusive status							
	01000011 43 = YAMAHA ID							
	0001nnnn 1n = Device Number n = always 0 (when transmit), n = 0-F (when receive)							
	01001100 4C = Model ID							
	0hhhhhhh hh = Address High							
	0mmmmmmm mm = Address Mid							
	0lllllll ll = Address Low							
	0ddddddd dd = Data							
	: :							
	11110111 F7 = End of Exclusive							
			○		—	○		×
		*Refer to Parameter Change Table				*Refer to Parameter Change Table		
XG Bulk Dump	F0 43 0n 4C aa bb hh mm ll dd ... dd cc F7							
	11110000 F0 = Exclusive status							
	01000011 43 = YAMAHA ID							
	0000nnnn 0n = Device Number n = always 0 (when transmit), n = 0-F (when receive)							
	01001100 4C = Model ID							
	0aaaaaaa aa = Byte Count MSB							
	0bbbbbbb bb = Byte Count LSB							
	0hhhhhhh hh = Address High							
	0mmmmmmm mm = Address Mid							
	0lllllll ll = Address Low							
	0ddddddd dd = Data							
	: :							
	0ddddddd dd = Data							
	0ccccccc cc = Checksum							
	11110111 F7 = End of Exclusive							
			○		—	○		×
		*Refer to Parameter Change Table				*Refer to Parameter Change Table		
XG Parameter Request	F0 43 3n 4C hh mm ll F7							
	11110000 F0 = Exclusive status							
	01000011 43 = YAMAHA ID							
	0011nnnn 3n = Device Number n = always 0 (when transmit), n = 0-F (when receive)							
	01001100 4C = Model ID							
	0hhhhhhh hh = Address High							
	0mmmmmmm mm = Address Mid							
	0lllllll ll = Address Low							
	11110111 F7 = End of Exclusive							
			○		—		×	
		*Refer to Parameter Change Table						
XG Dump Request	F0 43 2n 4C hh mm ll dd F7							
	11110000 F0 = Exclusive status							
	01000011 43 = YAMAHA ID							
	0010nnnn 2n = Device Number n = always 0 (when transmit), n = 0-F (when receive)							
	01001100 4C = Model ID							
	0hhhhhhh hh = Address High							
	0mmmmmmm mm = Address Mid							
	0lllllll ll = Address Low							
	11110111 F7 = End of Exclusive							
			○		—		×	
		*Refer to Parameter Change Table						

System Exclusive Message (Preset Voice)

MIDI Event	Data Format											MIDI Reception (effective or not for each part)			MIDI Reception (affecting the panel)	MIDI Transmission (generated data)		
												Song	Main Layer Left Layer	Keyboard		Panel (main generation method)	Song	Midi
String Resonance Depth	F0 43 73 01 50 11 0n 02 dd F7											○	○	×	○ (Other Setting)	○ (Other Setting)	○	×
	11110000 F0 = Exclusive status																	
	01000011 43 = YAMAHA ID																	
	01110011 73 = Clavinova ID																	
	00000001 01 = Model ID (Clavinova common ID)																	
	01010000 50 = Sub ID																	
	00010001 11 = Sub ID																	
	0000nnnn 0n = Channel (00 – 0F)																	
	00000010 02 = Sub ID (String Resonance Depth)																	
	0ddddd dd = Depth (00 – 48)																	
11110111 F7 = End of Exclusive																		
Sustain Sampling Depth	F0 43 73 01 50 11 0n 03 dd F7											○	○	×	○ (Other Setting)	○ (Other Setting)	○	×
	11110000 F0 = Exclusive status																	
	01000011 43 = YAMAHA ID																	
	01110011 73 = Clavinova ID																	
	00000001 01 = Model ID (Clavinova common ID)																	
	01010000 50 = Sub ID																	
	00010001 11 = Sub ID																	
	0000nnnn 0n = Channel (00 – 0F)																	
	00000011 03 = Sub ID (Sustain Sampling Depth)																	
	0ddddd dd = Depth (00 – 48)																	
11110111 F7 = End of Exclusive																		
Key-off Sampling Depth	F0 43 73 01 50 11 0n 04 dd F7											○	○	×	○ (Other Setting)	○ (Other Setting)	○	×
	11110000 F0 = Exclusive status																	
	01000011 43 = YAMAHA ID																	
	01110011 73 = Clavinova ID																	
	00000001 01 = Model ID (Clavinova common ID)																	
	01010000 50 = Sub ID																	
	00010001 11 = Sub ID																	
	0000nnnn 0n = Channel (00 – 0F)																	
	00000100 04 = Sub ID (Key-off Sampling Depth)																	
	0ddddd dd = Depth (00 – 50)																	
11110111 F7 = End of Exclusive																		
Soft Pedal Depth	F0 43 73 01 50 11 0n 05 dd F7											○	○	×	○ (Other Setting)	○ (Other Setting)	○	×
	11110000 F0 = Exclusive status																	
	01000011 43 = YAMAHA ID																	
	01110011 73 = Clavinova ID																	
	00000001 01 = Model ID (Clavinova common ID)																	
	01010000 50 = Sub ID																	
	00010001 11 = Sub ID																	
	0000nnnn 0n = Channel (00 – 0F)																	
	00000101 05 = Sub ID (Soft Pedal Depth)																	
	0ddddd dd = Depth (00 – 7F)																	
11110111 F7 = End of Exclusive																		

*For each Depth value, the reset value is 40H = Voice parameter.

System Exclusive Message (Other)

MIDI Event	Data Format											MIDI Reception (effective or not for each part)			MIDI Reception (affecting the panel)	MIDI Transmission (generated data)		
												Song	Main Layer Left Layer	Keyboard		Panel (main generation method)	Song	Midi
MIDI Master Tuning	F0 43 1n 27 30 00 00 0m 0l cc F7																	
	11110000 F0 = Exclusive status																	
	01000011 43 = YAMAHA ID																	
	0001nnnn 1n n = always 0 (when transmit), n = 0-F (when receive)																	
	00100111 27 = Model ID of TG100																	
	00110000 30 = Address High																	
	00000000 00 = Address Mid											○		(Other Setting)	×	○	×	
	00000000 00 = Address Low																	
	0000mmmm 0m = Master Tune MSB																	
	0000llll 0l = Master Tune LSB																	
	0ccccccc cc = irrelevant																	
	11110111 F7 = End of Exclusive																	

System Exclusive Message (Data Bulk)

MIDI Event	Data Format	MIDI Reception (effective or not for each part)			MIDI Reception (affecting the panel)	MIDI Transmission (generated data)		
		Song	Main Layer Left Left Layer	Keyboard		Panel (main generation method)	Song	Midi
Data Bulk Dump	F0 43 0n xx yy zz aa bb cc dd hh mm ll dd ... dd sum F7							
	11110000 F0 = Exclusive status							
	01000011 43 = YAMAHA ID							
	0000nnnn 0n = Device Number n = always 0							
	0xxxxxxx 7F = Model ID High							
	0zzzzzzz 04 = Model ID Low							
	0aaaaaaa aa = Byte Count MSB							
	0bbbbbbb bb = Byte Count LSB							
	0ccccccc cc = The number of available MSB							
	0ddddddd dd = The number of available LSB							
Data Bulk Dump Request	0hhhhhhh hh = Address High							
	0mmmmmmm mm = Address Mid							
	0lllllll ll = Address Low							
	0ddddddd dd = Data							
	:							
	0ddddddd dd = Data							
	0ccccccc cc = Checksum							
Data Bulk Dump Request	F0 43 2n xx yy zz hh mm ll F7							
	11110000 F0 = Exclusive status							
	01000011 43 = YAMAHA ID							
	0000nnnn 2n = Device Number n = always 0							
	0xxxxxxx 7F = Model ID High							
	0zzzzzzz 04 = Model ID Low							
	0hhhhhhh hh = Address High							
	0mmmmmmm mm = Address Mid							
	0lllllll ll = Address Low							
Data Bulk Dump Request								

STAGE PIANO

CP300

PARTS LIST

■ CONTENTS (目次)

OVERALL ASSEMBLY (総組立)	2	MA80S ASSEMBLY (MA80S Ass y)	11
KEYBED ASSEMBLY (棚板 Ass y)	5	KEYBOARD ASSEMBLY (GHD EBUS 鍵盤)	12
CONTROL PANEL UNIT (CP ユニット)	6	PEDAL ASSEMBLY (ペダル Ass y)	14
SPEAKER BOX ASSEMBLY (SP. Box Ass y)	9	ELECTRICAL PARTS (電気部品)	15~34
WHEEL ASSEMBLY (ホイール Ass y)	10		

Notes : DESTINATION ABBREVIATIONS

A : Australian model	M : South African model
B : British model	O : Chinese model
C : Canadian model	Q : South-east Asia model
D : German model	T : Taiwan model
E : European model	U : U.S.A. model
F : French model	V : General export model (110V)
H : North European model	W : General export model (220V)
I : Indonesian model	N,X: General export model
J : Japanese model	Y : Export model
K : Korean model	

■ WARNING

Components having special characteristics are marked  and must be replaced with parts having specification equal to those originally installed.

 印の部品は、安全を維持するために重要な部品です。交換する場合は、安全のために必ず指定の部品をご使用ください。


- The numbers "QTY" show quantities for each unit.
- The parts with "--" in "PART NO." are not available as spare parts.
- This mark "}" in the REMARKS column means these parts are interchangeable.
- The second letter of the shaded () part number is O, not zero.
- The second letter of the shaded () part number is I, not one.
- 部品価格ランクは、変更になることがあります。
- QTY欄に記されている数字は、各ユニット当たりの使用個数です。
- PART NO.が"--"の部品は、サービス用部品として準備されておりません。
- REMARKS欄の「}」マークの部品は、併用部品です。
- 網掛けの付いたPART NO. の2番目の文字は「ゼロ」ではなく、「オー」です。
- 網掛けの付いたPART NO. の2番目の文字は「イチ」ではなく、「アイ」です。

OVERALL ASSEMBLY (総組立)

Wheel assembly: See page 10.

(ホイールAss'y)

Control panel unit: See page 6.
(CPユニット)

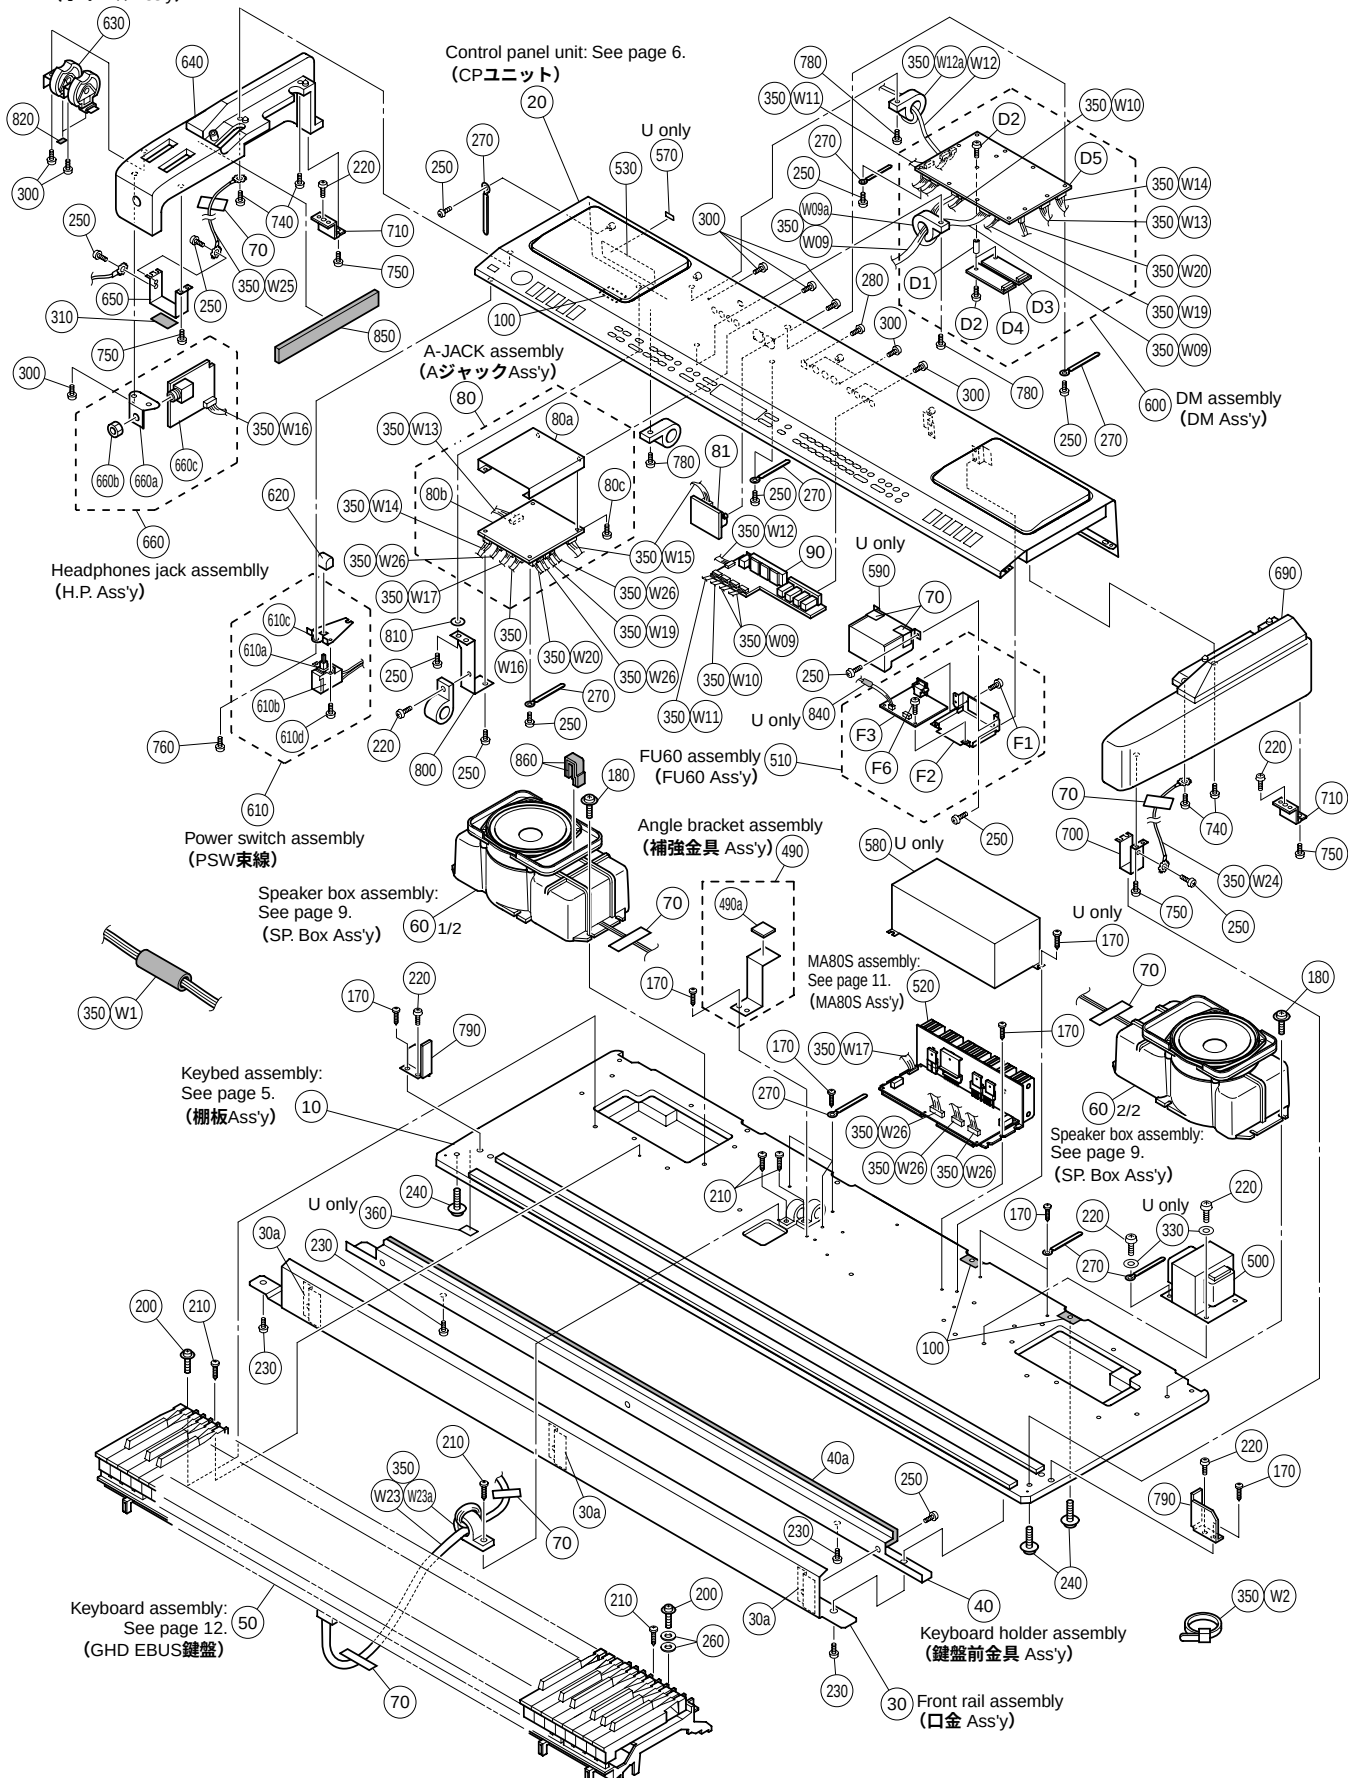

REF NO.	PART NO.	DESCRIPTION		部 品 名	REMARKS	QTY	RANK
	--	OVERALL ASSEMBLY		総 組 立	CP300		
	--	Overall Assembly		総 組 立 J	J (WG41320)		
	--	Overall Assembly		総 組 立 U	U (WG41330)		
	--	Overall Assembly		総 組 立 E	E,B (WG41340)		
	--	Overall Assembly		総 組 立 A U S	A (WG41350)		
	--	Overall Assembly		総 組 立 K	K (WG41360)		
	--	Composite Common Parts		共 通 部 品 構 成	(WG41370)		
A	--						
70	VP834600	Adhesive Tape	12X50	粘 着 テ ー プ	J,E,B,A,K	11	05
70	VP834600	Adhesive Tape	12X50	粘 着 テ ー プ	U	13	05
170	WE970900	Bind Head Tapping Screw-1	3.5X12 MFZN2W3	T P # 1 + B I N D	J,E,B,A,K	11	01
170	WE970900	Bind Head Tapping Screw-1	3.5X12 MFZN2W3	T P # 1 + B I N D	U	13	01
250	WE936300	Bind Head Tapping Screw-B	3.0X6 MFZN2W3	B タイ ト + B I N D	J,E,B,A,K	28	01
250	WE936300	Bind Head Tapping Screw-B	3.0X6 MFZN2W3	B タイ ト + B I N D	U	30	01
330	WF578800	Flat Washer	4.0X12X1.0 MFZN2W3	平 座 み が き 丸	U	4	01
350	--	Cable Assembly	OVERALL E	束 線 構 成 総 組 E	(WH42690)		
360	--	Graphic Mark		グ ラ フ ィ ッ ク マ ー ク	U (V229420)		
500	X6159A00	Power Transformer	J	電 源 ト ラ ン ス	J		13
500	X7755A00	Power Transformer	UL A	電 源 ト ラ ン ス	U		12
500	X6161A00	Power Transformer	IEC E	電 源 ト ラ ン ス	E,B,K		13
500	X6162A00	Power Transformer	IEC/EN60691 E	電 源 ト ラ ン ス	A		13
510	VT152000	FU60 Assembly		F U 6 0 A s s ' y	J		10
510	VT152100	FU60 Assembly		F U 6 0 A s s ' y	U		10
510	VT152200	FU60 Assembly		F U 6 0 A s s ' y	E,B,A,K		10
520	WC028900	MA80S Assembly		M A 8 0 S A s s ' y	J,U		17
520	WC029000	MA80S Assembly		M A 8 0 S A s s ' y	E,B,A,K		17
530	--	Name Plate		銘 板	J (WH64390)		
530	--	Name Plate		銘 板	U (WH64400)		
530	--	Name Plate		銘 板	E,B,K (WH64410)		
530	--	Name Plate		銘 板	A (WH64420)		
570	VA039300	Label		ラ ベ ル	U		03
580	--	MA Cover Assembly		M A カ バ ー A s s ' y	U (WE80740)		
590	--	Cover, FU		F U カ バ ー	U (WG74200)		
840	--	Cushion Black	PEFU 28X10XT1	ク ッ シ ョ ン	U (WH63520)		
	--	Composite Common Parts		共 通 部 品 構 成	(WG41370)		
10	--	Keybed Assembly		棚 板 A s s ' y	(WG41450)		
20	--	Control Panel Unit		C P ユ ニ ッ ト	(WG41460)		
30	V9642400	Front Rail Assembly		口 金 A s s ' y			11
30a	--	Angle Bracket		ア ン グ ル	(V990580)	3	
40	VV606200	Keyboard Holder Assembly	FRONT	鍵盤前金具 A s s ' y			10
40a	VZ300900	Cushion B, Keyboard	1170X20X2 JIS2	鍵盤クッション B			04
50	V8278501	Keyboard Assembly	GHD_EBUS A88 K6	G H D _ E B U S 鍵盤			51
60	--	Speaker Box Assembly		S P . B o x A s s ' y	(WG94730)		
80	--	A-JACK Assembly		A ジャ ッ ク A s s ' y	(WG41470)		
80a	WG427800	Jack Angle-A		A ジャ ッ ク 金 具		2	
80b	WG433100	Circuit Board	AJACK	A J A C K シ ー ト			
80c	WE936300	Bind Head Tapping Screw-B	3.0X6 MFZN2W3	B タイ ト + B I N D		2	01
81	WG433200	Circuit Board	XLR	X L R シ ー ト			
90	WG433000	Circuit Board	DJACK	D J A C K シ ー ト			
100	--	Cushion Black	ZE PEFU 50X30	ク ッ シ ョ ン Z E	(WH60890)	3	
180	WE995400	Cup Head Screw	4.0X18 MFZN2W3	小 ネ ジ + C U P		12	
200	WF001500	Pan Head Screw	5.0X25 MFZN2W3 SW	小 ネ ジ + P A N		7	01
210	WE971900	Bind Head Tapping Screw-1	4.0X14 MFZN2W3	T P # 1 + B I N D		5	01
220	WE968700	Bind Head Screw	4.0X14 MFZN2W3	小 ネ ジ + B I N D		9	01
230	WE971000	Bind Head Tapping Screw-1	3.5X14 MFZN2B3	T P # 1 + B I N D		8	01
240	WE984200	Pan Head Screw	5.0X25 MFZN2B3 PW	尖 り 先 + P A N		6	
260	WF556400	Flat Washer	5.0X12X0.8 MFZN2W3	平 座 み が き 丸		2	01
270	CB817510	Cord Binder	S-14B-E	束 線 止 め		10	03
280	WE961800	Bind Head Screw	3.0X5 MFZN2B3	小 ネ ジ + B I N D			01
300	WE774400	Bind Head Tapping Screw-B	3.0X8 MFZN2B3	B タイ ト + B I N D		16	01
310	--	Cushion Black		ク ッ シ ョ ン	(WH42990)		
490	VZ737500	Angle Bracket Assembly		補 強 金 具 A s s ' y			05
490a	--	Cushion		ク ッ シ ョ ン	(VS66750)		
600	WG434400	DM Assembly		D M A s s ' y			
610	V9644900	Power Switch Assembly	PSW VH 3P-1150	P S W 束 線			
610a	VC843500	Push Switch	SDDL813102 J.U.C.S	プ ッ シ ュ S W	POWER ON/OFF		03
610b	V5800800	Switch Cover Ivory/Black		パ ワ ー ス イ ッ チ カ バ ー			01
610c	VN134400	Power Switch Holder		P W . S W 取 付 金 具			04
610d	WE974100	Bind Head Tapping Screw-C	3.0X6 MFZN2W3	C タイ ト + B I N D		2	
620	VN129100	Power Switch Knob Black		パ ワ ー ス イ ッ チ ツ マ ミ	POWER ON/OFF		03

*: New Parts

RANK: Japan only

REF NO.	PART NO.	DESCRIPTION		部 品 名	REMARKS	QTY	RANK
630	--	Wheel Assembly		ホイール A s s ' y	(V964540)		
* 640	WH318300	Side Cover L	LEFT	腕 木 L 印 刷 品			
650	VZ738000	Side Cover Holder L	LEFT	取 付 金 具 L			05
660	--	Headphones Jack Assembly		H . P . A s s ' y	(WG94670)		
660a	VN132600	Headphones Jack Holder		H . P . 取 付 金 具			04
660b	WF559900	Hexagonal Nut	M12X14X2 P=1.0	ナ ッ ト 特 殊			01
* 660c	WG946400	Circuit Board	HP	H P シ ー ト			
690	VZ737700	Side Cover R	RIGHT	腕 木 R 塗 装 品			13
700	VZ738100	Side Cover Holder R	RIGHT	取 付 金 具 R			05
710	VZ738300	Hinge		蝶		2	06
740	WF002100	PW Head Tapping Screw-B	3.0X12 MFZN2W3	B タ イ ト + P W H		8	01
750	WE998600	Bind Head Tapping Screw-B	4.0X12 MFZN2B3	B タ イ ト + B I N D		12	01
760	WE974600	Bind Head Tapping Screw-B	4.0X8 MFZN2W3	B タ イ ト + B I N D		2	01
780	WF002600	PW Head Tapping Screw-B	3.0X8 MFZN2W3	B タ イ ト + P W H		3	01
790	--	Keyboard Siderail Assembly		鍵盤取付横金具 A s s ' y	(WH30430)	2	
800	--	A-JACK Supporter Assembly		Aジャック補強 A s s ' y	(WH43000)		
810	--	Cushion Black	SP	ク ッ シ ョ ン S P	(WH41870)		
820	--	Cushion Black	PEFU 13X5XT1	ク ッ シ ョ ン	(WH63510)	2	
850	--	Cushion Black	B1 PEFU 350X30XT1	ク ッ シ ョ ン B 1	(WH68210)		
860	--	Cushion Black	B2 PEFU 40X15XT2	ク ッ シ ョ ン B 2	(WH68220)	2	
	--	Cable Assembly	OVERALL E	束 線 構 成 総 組 E	(WH42690)		
W1	VP834600	Adhesive Tape	12X50	粘 着 テ ー プ		5	05
W2	V2023100	Cushion	PUR 80X50X3.0	ク ッ シ ョ ン (P U R)			03
W2	CB069250	Cord Holder	BK-1	インシュロックタイ		5	01
W09	--	Connector Assembly	DJK 5P/6P/9P-600	D J K 束 線 A s s ' y	(WG74220)		
W09a	VD947800	Data Line Filter	ESD-R-25D-B	データラインフィルタ			05
W10	VK107500	Connector Assembly	KRD-KRD 3P-350	K R D - K R D 束 線			
W11	--	Connector Assembly	KRD-KRD 8P-500	K R D - K R D 束 線	(VK11241)		
W12	WA603400	Connector Assembly	USB 4P	U S B 束 線 A s s ' y			05
W12a	VD947800	Data Line Filter	ESD-R-25D-B	データラインフィルタ			05
W13	VK110000	Connector Assembly	KRD-KRD 11P-400	K R D - K R D 束 線			06
W14	--	Connector Assembly	KRD-KRD 5P-350	K R D - K R D 束 線	(VJ98080)		
W15	--	Connector Assembly	KRD-KRD 6P-100	K R D - K R D 束 線	(VK09800)		
W16	--	Connector Assembly	AJHP 7P-1100	A J H P 束 線 A s s ' y	(WH58760)		
W17	--	Connector Assembly	AJMA 9P-500	A J M A 束 線 A s s ' y	(WH41120)		
W19	--	Connector Assembly	5D RELAY XH 2P-300	5 D 中 継 束 線	(WG74240)		
W20	--	Connector Assembly	3D RELAY VH 2P-300	3 D 中 継 束 線	(WG74250)		
W23	WA611100	Connector Assembly	EBUS2 KR 7P	E B U S 束 線 2			
W23a	VD947800	Data Line Filter	ESD-R-25D-B	データラインフィルタ			05
W24	--	GND Wire Black	Lug terminal X2 L=200	G N D 束 線	(WH39720)		
W25	--	GND Wire Black	Lug terminal X2 L=200	G N D 束 線	(WH39720)		
W26	--	Connector Assembly	PW 2P-750/4P-700	P W 束 線 A s s ' y	(WH41100)		
	VT152000	FU60 Assembly		F U 6 0 A s s ' y	J		10
	VT152100	FU60 Assembly		F U 6 0 A s s ' y	U		10
	VT152200	FU60 Assembly		F U 6 0 A s s ' y	E,B,A,K		10
F1	WE774400	Bind Head Tapping Screw-B	3.0X8 MFZN2B3	B タ イ ト + B I N D		2	01
F2	WB449600	Panel, AC Inlet	with Cushion	A C 金 具 集 成			05
F3	--	Circuit Board	FU60	F U 6 0 シ ー ト	J		
F3	--	Circuit Board	FU60	F U 6 0 シ ー ト	U		
F3	--	Circuit Board	FU60	F U 6 0 シ ー ト	E,B,A,K		
F6	WE987400	Bind Head Tapping Screw-B	3.0X12 MFZN2W3	B タ イ ト + B I N D		2	01
	WG434400	DM Assembly		D M A s s ' y			
D1	V8868000	Spacer	AR-312	ス ペ ー サ ー		2	01
D2	WE774000	Bind Head Screw	3.0X6 MFZN2W3	小 ネ ジ + B I N D		4	01
D3	--	Circuit Board	WML	W M L シ ー ト	(V856310)		
D4	--	Circuit Board	WMH	W M H シ ー ト	(V856320)		
D5	--	Circuit Board	DM	D M シ ー ト	(WG43430)		
	V8060400	ACCESSORIES		付 属 品			
	V2916900	Pedal Assembly	FC-3	ペ ダ ル A s s ' y			15
	V2915700	AC Cord	J 2P 2.5m 7A	電 源 コ ー ド セ ッ ト	J		05
	V2917000	AC Cord	J 2P 2.5m	電 源 コ ー ド セ ッ ト			05
	VT015800	AC Cord	U 2P 2.44m 7A	電 源 コ ー ド セ ッ ト	U		06
	VT015800	AC Cord	UC 2P 2.44m 7A	電 源 コ ー ド セ ッ ト			06
	V2917100	AC Cord	E 2P 2.5m 2.5A	電 源 コ ー ド セ ッ ト	E		05
	VT015900	AC Cord	E 2P 2.5m	電 源 コ ー ド セ ッ ト			05
	V3126500	AC Cord	B 2P 2.5m	電 源 コ ー ド セ ッ ト	B		

*: New Parts


RANK: Japan only

REF NO.	PART NO.	DESCRIPTION		部 品 名	REMARKS	QTY	RANK
△ *	WE670300	AC Cord	B 2P 2.5m	電 源 コ ー ド セ ッ ト	A K		07
△ *	WD057900	AC Cord	A 2P 2.5A	電 源 コ ー ド セ ッ ト			
△ *	WF730100	AC Cord	K 2P 2.5A	電 源 コ ー ド セ ッ ト			
		TOOL		工 具			
	TX000670	Rod		ロ ッ ド			99

*: New Parts

RANK: Japan only

■ KEYBED ASSEMBLY (棚板 Ass'y)

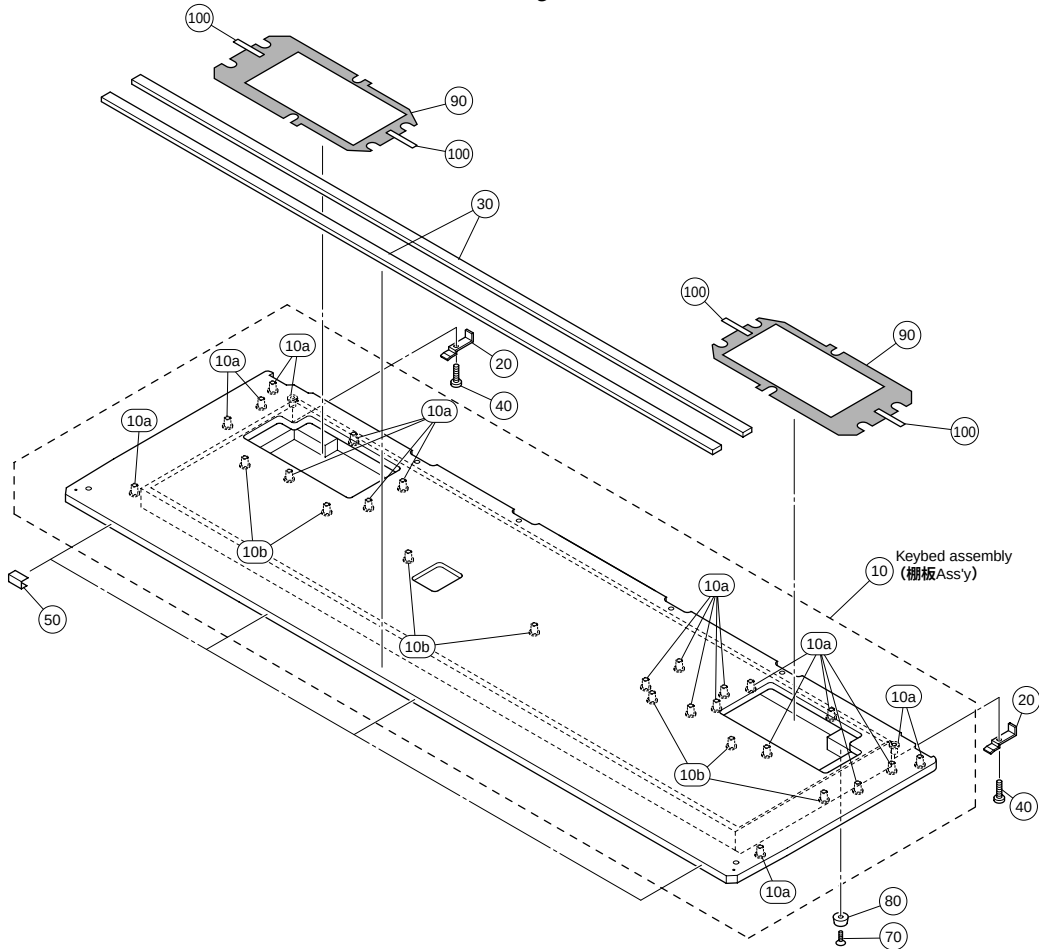


REF NO.	PART NO.	DESCRIPTION		部 品 名	REMARKS	QTY	RANK
		KEYBED ASSEMBLY		棚 板 A s s ' y	CP300		
	--	Keybed Assembly		棚 板 A s s ' y	(WG41450)		
10	--	Keybed Assembly		棚 板 A s s ' y 部 材 品	(WG69680)		
10a	WF694700	Nut	B 4.0X9.5 MFZN2W3	鬼 目 ナ ッ ト		22	
10b	WG913500	Nut	B 5.0X10 MFZN2W3	鬼 目 ナ ッ ト		7	
20	VN463500	Guide Angle		ガ イ ド 金 具		2	05
30	VZ750500	Cushion Black	GH	ク ッ シ ョ ン G H		2	06
40	WE983100	Bind Head Screw	4.0X14 MFZN2B3	小 ネ ジ + B I N D		2	01
50	--	Electrical Adhesive Tape	NO.7701 25X20m	導 電 性 粘 着 テ ー プ	(WH38050)		
70	WE972000	Bind Head Tapping Screw-1	4.0X16 MFZN2B3	T P # 1 + B I N D		4	01
80	V8082800	Foot	OK-24	ゴ シ ム 脚		4	03
90	WG942200	Shield Material Black		シ ー ル 材		2	
100	--	Adhesive Tape	12X50	粘 着 テ ー プ	(VP83460)	4	

*: New Parts

RANK: Japan only

■ CONTROL PANEL UNIT (CPユニット)

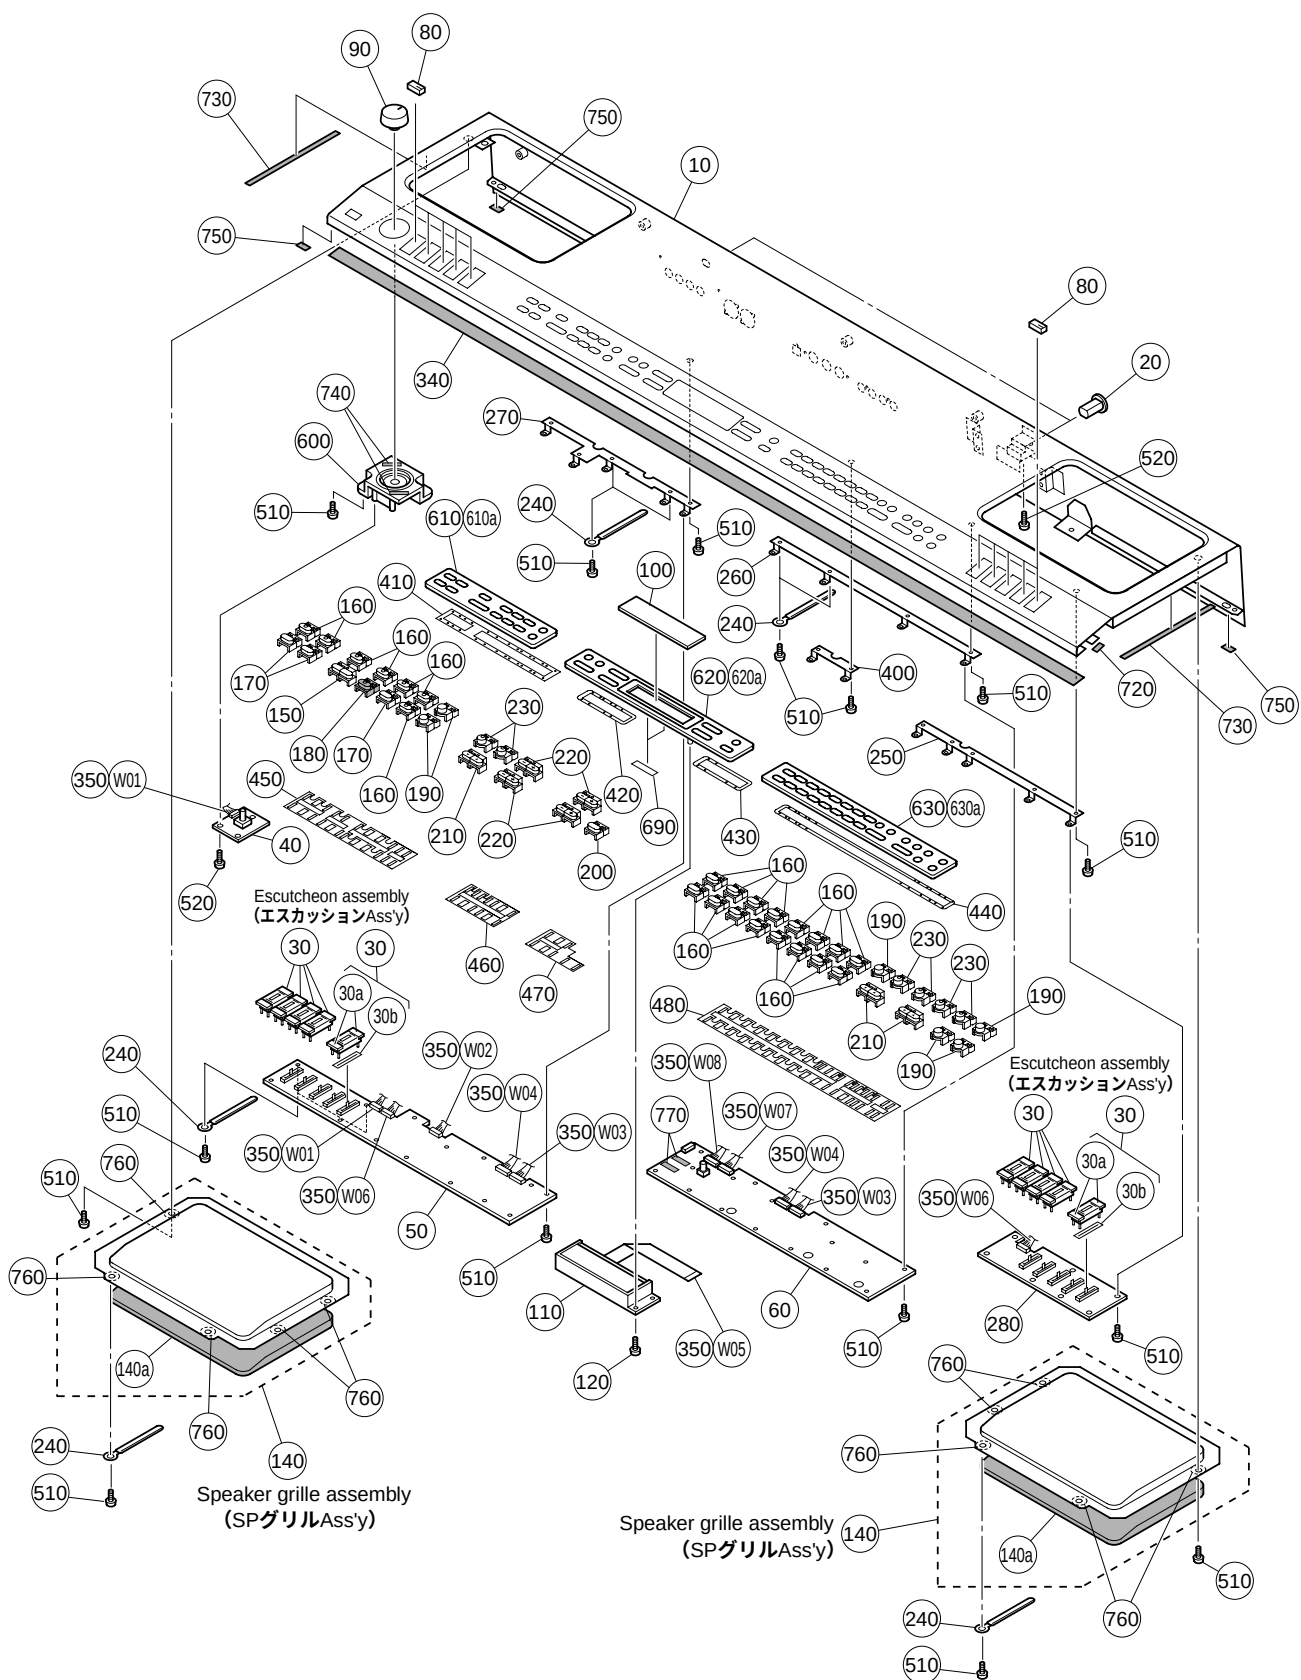

REF NO.	PART NO.	DESCRIPTION		部 品 名	REMARKS	QTY	RANK
	--	CONTROL PANEL UNIT		C P ユ ニ ッ ト	CP300		
	--	Control Panel Unit		C P ユ ニ ッ ト	(WG41460)		
* 10	WG422600	Control Panel		C P 印 刷 品			
20	VF179400	Bushing Black		譜 面 板 ブ ッ シ ュ		2	01
30	VS467900	Escutcheon Assembly Black	x1	エスカッション A s s ' y		10	05
30a	--	Vibration-proof Spacer	x1	防 振 ス ペ ー サ ー	(VS46850)	20	
30b	--	Dust Proof Cloth		防 塵 ク ロ ス	(VN44880)	10	
* 40	WG433500	Circuit Board	MV2	M V 2 シ ー ト			
* 50	WG407700	Circuit Board	PNL	P N L シ ー ト			
* 60	WG433400	Circuit Board	PNR	P N R シ ー ト			
80	VN133200	Slide Knob Black		ス ラ イ ド ツ マ ミ	SONG VOLUME,ZONE 1-4 <ZONE CONTROL>, LOW,LO-MID,MID,HI-MID, HIGH <MASTER EQUALIZER> MASTER VOLUME	10	03
90	VU432400	Volume Knob Black		V ツ マ ミ			01
100	V4937300	LCD Cover		L C D カ バ ー			05
110	V8811300	LCD	EW10209YMY-E9	液 晶 デ ィ ス プ レ イ			14
* 120	WG719800	Bind Head Tapping Screw-B	2.6X10 MFZN2W3 SP	B タ イ ト + B I N D		3	
140	V9642700	Speaker Grille Assembly		S P グ リ ル A s s ' y		2	09
140a	--	Nonwoven Fabric Cloth		不 織 布	(V973950)	2	
150	V8064400	Button Dark Gray	x2 (A) 1	ボ タ ン (A) 1	SONG SELECT ◀▶		01
160	V8065500	Button Dark Gray	x1 (B) 1 LENS	ボ タ ン (B) 1 レ ン ズ	MASTER,PERFORMANCE, TRANPOSE,TRACK 1,2,3-16, PLAY/PAUSE <SONG>, GRAND PIANO 1/1,...,XG/16 <VOICE/PERFORMANCE> MASTER EDIT,PERFORM.FILE, STOP <SONG> REC <SONG>	23	05
170	V8065100	Button Dark Gray	x1 (B) 1	ボ タ ン (B) 1	SONG FILE,SONG SETTING, VOICE EDIT,MIDI SETTING, CLICK,OTHER SETTING EXIT	3	04
180	V8670200	Button Red	x1 B LENS	ボ タ ン B ダ ル レ ッ ド レ ン ズ			01
190	V8066000	Button Dark Gray	x1 (D) 1	ボ タ ン (D) 1	SONG FILE,SONG SETTING, VOICE EDIT,MIDI SETTING, CLICK,OTHER SETTING EXIT	6	04
200	V8670700	Button Dark Gray	x1 (B) 1a	ボ タ ン (B) 1 a 印 刷 品	TEMPO DOWN,UP,VARIATION, MASTER EQ EDIT (▼,▲)		01
210	V8064900	Button Dark Gray	x2 (A) 1	ボ タ ン (A) 1 印 刷 品	LCD select A,B,C,D (+,-)	3	05
220	V8671200	Button Dark Gray	x2 (A) 1b	ボ タ ン (A) 1 b 印 刷 品	MIDI OUT,PANEL LOCK, SPLIT,REVERB,CHORUS, SPEAKER	4	01
230	V8066100	Button Dark Gray	x1 (D) 1 LENS	ボ タ ン (D) 1 レ ン ズ		6	05
240	CB817510	Cord Binder	S-14B-E	束 線 止 め		8	03
250	--	Holder, PCB	D	基 板 固 定 金 具 D	(WA33490)		
260	--	Holder Assembly, PCB	E	基板固定金具 E A s s ' y	(WA97410)		
270	--	Holder Assembly, PCB	FF	基板固定金具 F F A s s ' y	(WG70740)		
280	V9443500	Circuit Board	PN-EQ	P N - E Q シ ー ト			11
340	--	Felt Red	1228X10Xt1.0	フ ェ ル ト 部 材 上 り	(WH42880)		
350	--	Cable Assembly	CONTROL PANEL	束 線 構 成 C P	(WG72000)		
400	--	Holder, PCB	G	基 板 固 定 金 具 G	(WA80670)		
410	--	Nonwoven Fabric Cloth	AB	不 織 布 A B	(WG42490)		
420	--	Nonwoven Fabric Cloth	C	不 織 布 C	(V963760)		
430	--	Nonwoven Fabric Cloth	D	不 織 布 D	(V963770)		
440	--	Nonwoven Fabric Cloth	E	不 織 布 E	(V963780)		
450	--	Nonwoven Fabric Cloth	FG	不 織 布 F G	(WG42510)		
460	--	Nonwoven Fabric Cloth	HI	不 織 布 H I	(WG71440)		
470	--	Nonwoven Fabric Cloth	JK	不 織 布 J K	(WG71500)		
480	--	Nonwoven Fabric Cloth	LM	不 織 布 L M	(WG71510)		
510	WE936300	Bind Head Tapping Screw-B	3.0X6 MFZN2W3	B タ イ ト + B I N D		65	01
520	WE774400	Bind Head Tapping Screw-B	3.0X8 MFZN2B3	B タ イ ト + B I N D		5	01
* 600	WG424100	Escutcheon	VOL	エスカッション V O L			
* 610	WG424400	Escutcheon Assembly	L	エスカッション L A s s ' y			
610a	VE362400	Adhesive Tape	#500 W=3	粘 着 テ ー プ			04
620	WA061900	Escutcheon Assembly	3	エスカッション A s s ' y			03
620a	VE362400	Adhesive Tape	#500 W=3	粘 着 テ ー プ			04
630	WA062000	Escutcheon Assembly	4	エスカッション A s s ' y			03
630a	VE362400	Adhesive Tape	#500 W=3	粘 着 テ ー プ			04
690	--	Nonwoven Fabric Cloth	30X4Xt0.35	不 織 布	(WA04070)	2	
720	--	Nonwoven Fabric Cloth	30X10Xt0.25	不 織 布	(WB11050)		
730	--	Nonwoven Fabric Cloth	SA	不 織 布 S A	(WH41840)	2	
740	--	Nonwoven Fabric Cloth	SB	不 織 布 S B	(WH41850)	2	
750	--	Nonwoven Fabric Cloth	SC	不 織 布 S C	(WH41860)	3	
760	--	Cushion Black	SP	ク ッ シ ョ ン S P	(WH41870)	10	


*: New Parts

RANK: Japan only

[illegible]


*: New Parts

RANK: Japan only

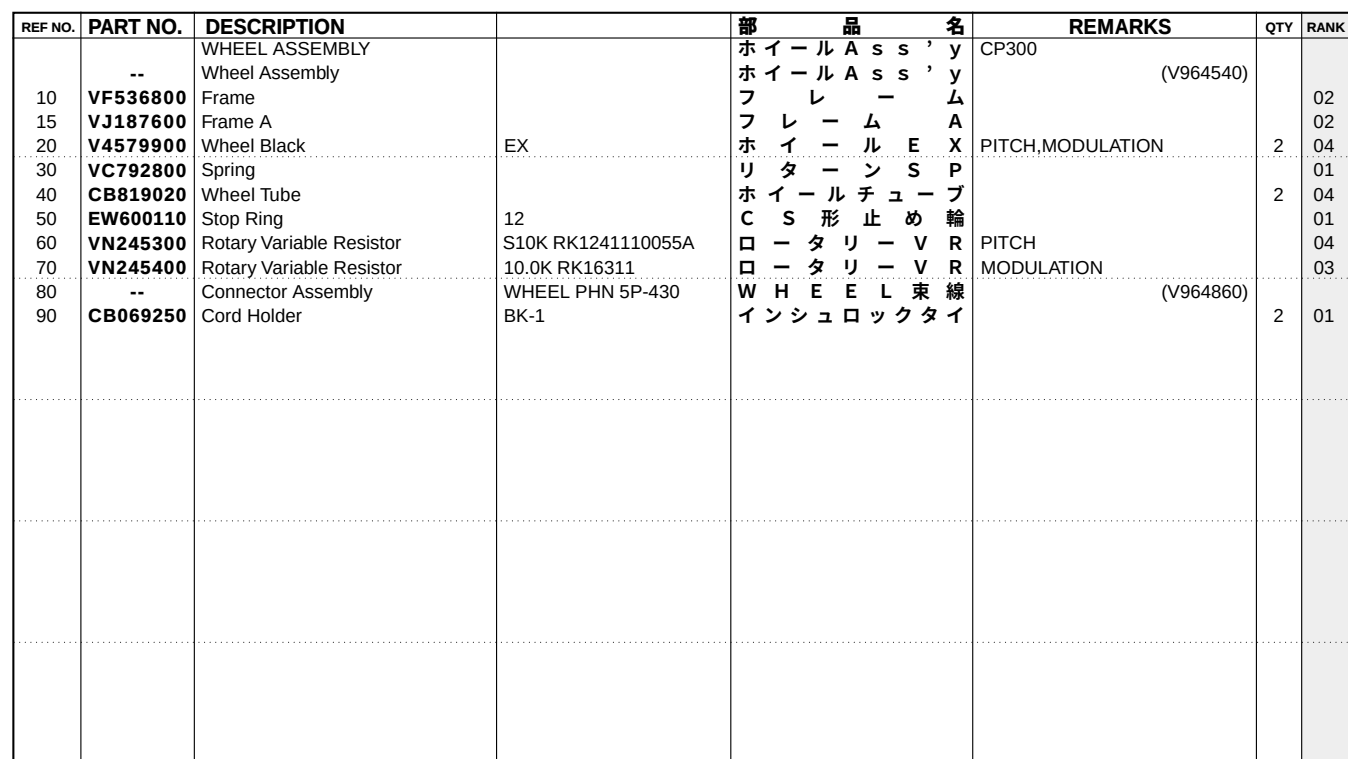

RANK: Japan only

■ MA80S ASSEMBLY (MA80S Ass'y)

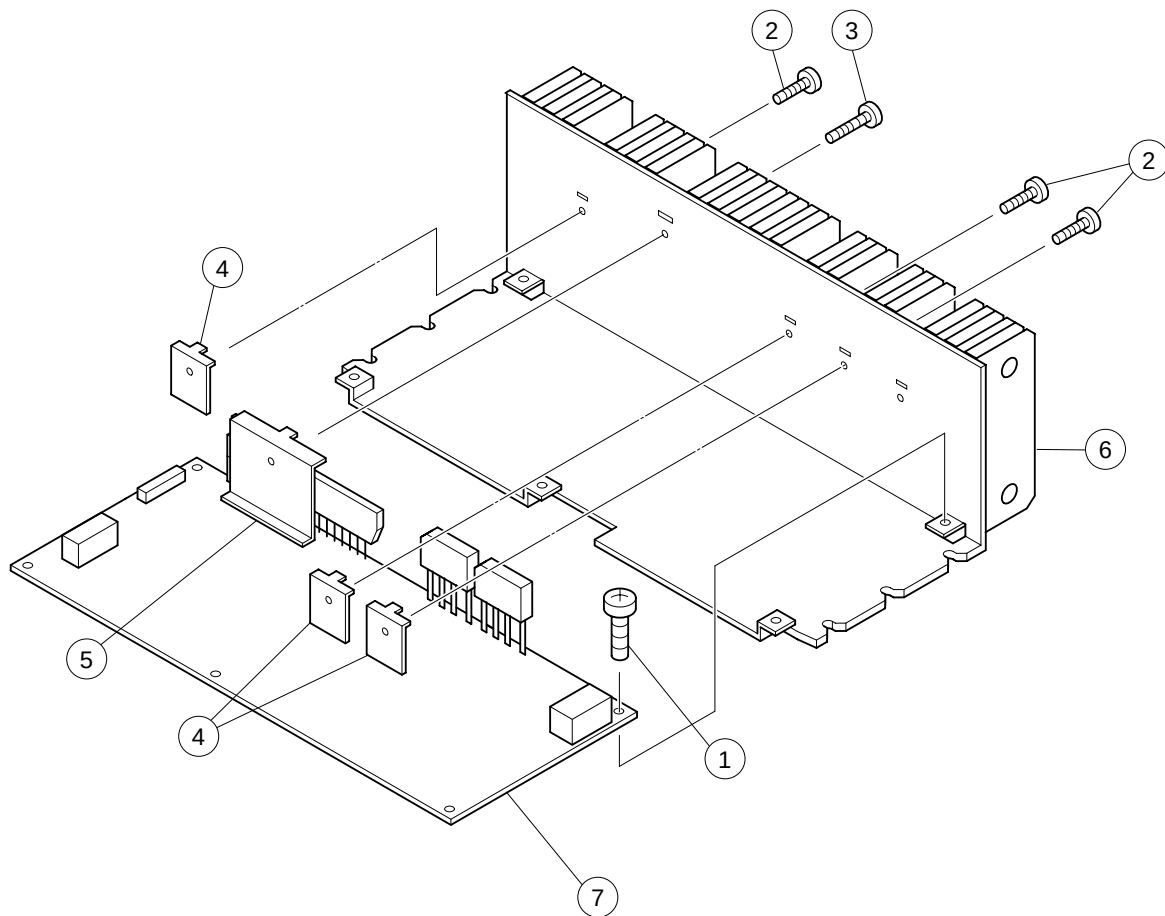[illegible]

*: New Parts

RANK: Japan only




REF NO.	PART NO.	DESCRIPTION		部 品 名	REMARKS	QTY	RANK
		KEYBOARD ASSEMBLY	GHD_EBUS A88 K6	G H D _ E B U S 鍵盤	CP300		
	V8278501	Keyboard Assembly	GHD_EBUS A88 K6	G H D _ E B U S 鍵盤			51
11	--	Frame	A88	GHDフレームAss'y	(VZ7054A)		
11a	VU342100	Stopper Felt	1229X12X14.8T U88	ストッパー U 8 8			09
11b	VY828500	Hammer Assembly, White Key	W1 A-1-F1	ドーム用ハンマーW1		13	05
11c	VY828600	Hammer Assembly, White Key	W2 G1-E3	ドーム用ハンマーW2		13	05
11d	VY828700	Hammer Assembly, White Key	W3 F3-D5	ドーム用ハンマーW3		13	05
11e	VY828800	Hammer Assembly, White Key	W4 E5-C7	ドーム用ハンマーW4		13	05
11f	VY828900	Hammer Assembly, Black Key	B1 A#-1-F#1	ドーム用ハンマーB1		9	05
11g	VY829000	Hammer Assembly, Black Key	B2 G#1-D#3	ドーム用ハンマーB2		9	05
11h	VY829100	Hammer Assembly, Black Key	B3 F#3-C#5	ドーム用ハンマーB3		9	05
11i	VY829200	Hammer Assembly, Black Key	B4 D#5-A#6	ドーム用ハンマーB4		9	05
24	--	GH Key Set		G H キーセット	(WC96140)		
24a	VU101301	White Key	F	白 鍵 F		7	05
24b	VU101401	White Key	G	白 鍵 G		7	05
24c	VU101501	White Key	A	白 鍵 A		7	05
24d	VU101601	White Key	B	白 鍵 B		8	05
24e	VU101001	White Key	C	白 鍵 C		7	05
24f	VU101101	White Key	D	白 鍵 D		7	05
24g	VU101201	White Key	E	白 鍵 E		7	05
24h	VU101701	White Key	A'	白 鍵 A ,			05
24i	VU101801	White Key	C'	白 鍵 C ,			05
24j	VU102101	Black Key		黒 鍵		36	05
24k	V2211300	Rubber 2	GH,GHD,HE	駆 動 ラ バ ー 2		88	03
24l	--	Grease	PG-661	グ リ ス	(VU34200)		
210	V7640100	Stopper Felt	1239.5X28X10.1T L88	ストッパー L 8 8 _ W			07
220	VY846700	Rubber Contact	OCTAVE 12KEYS D-C#	シーソードームD-C#	D0-C#1,D1-C#2,D2-C#3, D3-C#4,D4-C#5,D5-C#6	6	08
222	VY846800	Rubber Contact	OCTAVE 5KEYS A-C#	シーソードームA-C#	A-1-C#0		08
224	VY846900	Rubber Contact	OCTAVE 11KEYS D-C	シーソードームD-C	D6-C7		08
230	V8514800	Circuit Board	GHD EBUS L	GHD_EBUSシートL			13
235	V8521400	Circuit Board	GHD M	G H D シートM			08
240	V8521500	Circuit Board	GHD H	G H D シートH			08
260	WF001000	Bind Head Tapping Screw-P	3.0X10 MFZN2W3	P タイト + B I N D		16	01
262	WF765500	PW Head Tapping Screw-P	3.0X10-10 MFZN2W3	P タイト + P W H			01
270	V2798500	Spring	R WHITE/BLACK	ス プ リ ン グ R		88	
291	--	Grease	G-1006Y	グ リ ス	(V627430)		
296	--	Grease	PG-661	グ リ ス	(2341590)		
300	V8520500	Cable	12P L=106 P=2	ケ - ブ ル		2	01
305	V7766800	Cable	9P L=106 P=2	ケ - ブ ル			01
310	V8521000	Cable	4P L=106 P=2	ケ - ブ ル			01
		TOOL		工 具			
	TX000670	Rod		ロ ッ ド			99

*: New Parts

RANK: Japan only

■ PEDAL ASSEMBLY (ペダル Ass'y)

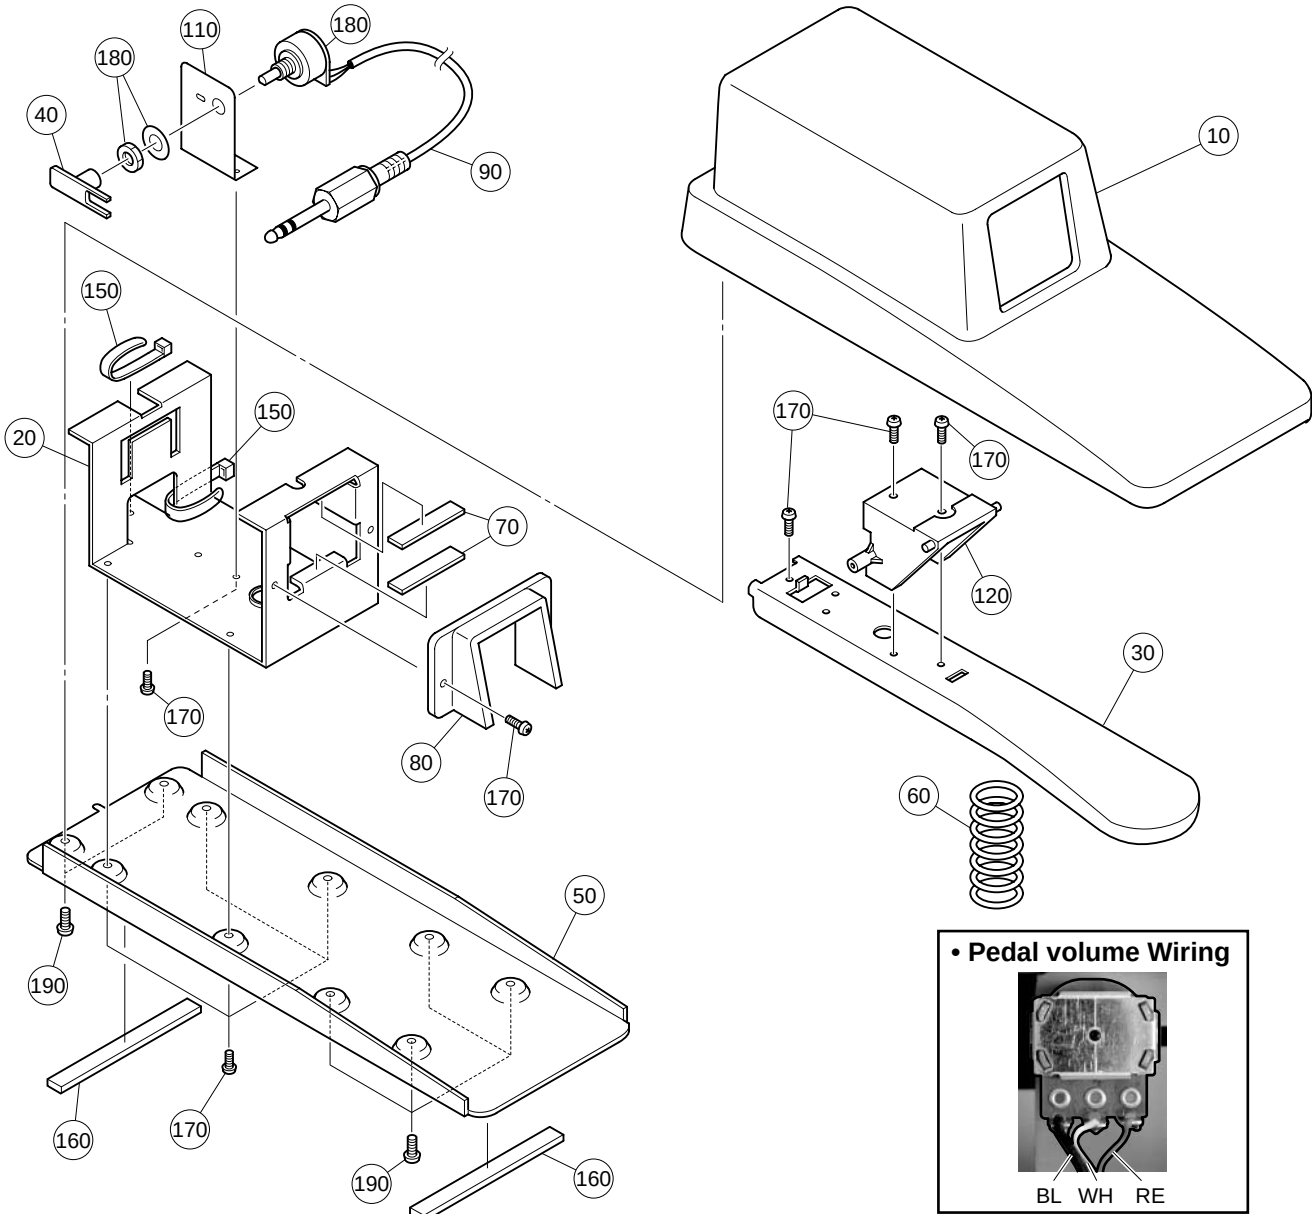

REF NO.	PART NO.	DESCRIPTION		部 品 名	REMARKS	QTY	RANK
		PEDAL ASSEMBLY	FC-3	ペダル Ass'y	CP300		15
	V8060400	Pedal Assembly	FC-3	ペダル Ass'y			
10	--	Pedal Box		ペダル B O X	(V805080)		
20	--	Pedal Frame		ペダル フ レ ー ム	(V807960)		
30	--	Pedal Piece C	CENTER	ペダル 本 体 (C)	(V847920)		
40	--	Actuator, VR	PEDAL	V R ア ク チ ュ エ ー タ	(V805100)		2
50	--	Pedal Base		ペダル ベ ー ス	(V807970)		
60	--	Pedal Spring	2.3 MFZN2	ペダル バ ネ	(V807990)		
70	--	Felt Black	PA	フ ェ ル ト P A	(VU34650)		
80	--	Shutter		シャ ッ タ ー	(V805110)		
90	V8570400	Pedal Cord	YAF11-1042N 1.9m	ペダル コ ー ド			03
100	--	Grease	G-31KA 50g	グ リ ス	(TX92028)(VE96850)		
110	--	Holder, VR	PEDAL	可 変 抵 抗 取 付 金 具	(V807980)		
120	--	Holder, VR	PEDAL	V R ボ ス	(V805090)		
150	--	Cord Holder	BK-1	インシュロックタイ	(CB06925)	2	
160	--	Foot Black	SJ-5808	フ ッ ト 黒	(V833890)	2	05
170	--	Bind Head Tapping Screw-B	3.0X8 MFZN2B3	B タイ ト + B I N D	(WE77440)	11	
180	HS412520	Rotary Variable Resistor	RK16Y11L0001A	ロ ー タ リ ー V R 1 連	Pedal volume		
190	--	Bind Head Tapping Screw-B	4.0X10 MFZN2B3	B タイ ト + B I N D	(WE97230)	6	

*: New Parts

RANK: Japan only

■ ELECTRICAL PARTS (電気部品)

REF NO.	PART NO.	DESCRIPTION	部 品 名	REMARKS	QTY	RANK
		ELECTRICAL PARTS	電 気 部 品	CP300		
* * *	WG433100	Circuit Board	A J A C K シ ー ト	(WG41670)(X7132C0)		
	WG433200	Circuit Board	X L R シ ー ト	(WG41670)(X7132C0)		
	WG433000	Circuit Board	D J A C K シ ー ト	(WG41640)(X7113C0)		
	--	Circuit Board	D M シ ー ト	(WG43430)(XZ592J0)		
	--	Circuit Board	F U 6 0 シ ー ト	J (VT15140)(VT15170)		
	--	Circuit Board	F U 6 0 シ ー ト	U (XQ395A0/B0)		
	--	Circuit Board	F U 6 0 シ ー ト	(VT15150)(VT15180)		
	--	Circuit Board	F U 6 0 シ ー ト	E,B,A,K (XQ395A0/B0)		
	V8514800	Circuit Board	G H D _ E B U S シ ー ト L	(XZ138D0)		13
	V6588200	Circuit Board	M K サ ブ シ ー ト	(V658810)(XZ142B0)		10
	V8521500	Circuit Board	G H D シ ー ト H	(X2218A0)		08
	V8521400	Circuit Board	G H D シ ー ト M	(X2217A0)		08
	WG946400	Circuit Board	H P シ ー ト	(WG94630)(XQ390A0)		
	--	Circuit Board	M A 8 0 S シ ー ト	J,U (WB55500)(WB55440)		
	--	Circuit Board	M A 8 0 S シ ー ト	(X4384D0/E0)		
	WG433500	Circuit Board	M V 2 シ ー ト	E,B,A,K (WC03050)(WC03060)		
	WG433400	Circuit Board	P N R シ ー ト	(X4384D0/E0)		
	V9443500	Circuit Board	P N - E Q シ ー ト	(WG43420)(X2244B0)		
	WG407700	Circuit Board	P N L シ ー ト	(WG43420)(X2244B0)		
	--	Circuit Board	W M H シ ー ト	(V944340)(X2507C0)		11
	--	Circuit Board	W M L シ ー ト	(X7124D0)		
	--	Circuit Board	W M L シ ー ト	(V856320)(V859520)		
	--	Circuit Board	W M L シ ー ト	(X2248A0)		
	--	Circuit Board	W M L シ ー ト	(V856310)(V856300)		
	--	Circuit Board	W M L シ ー ト	(X2248A0)		
* * *	WG433100	Circuit Board	A J A C K シ ー ト	(WG41670)(X7132C0)		
	WG433200	Circuit Board	X L R シ ー ト	(WG41670)(X7132C0)		
	--	Holder, Jack	J K ア ン グ ル	(WG73380)		
10	US065100	Ceramic Capacitor-F (chip)	チ ッ プ セ ラ F			
C1	US065100	Ceramic Capacitor-F (chip)	チ ッ プ セ ラ F			
C2	UR857470	Electrolytic Cap.	ケ ミ コ ン			01
C3	UR857470	Electrolytic Cap.	ケ ミ コ ン			01
C4	US063100	Ceramic Capacitor-B (chip)	チ ッ プ セ ラ (B)			01
C5	US063100	Ceramic Capacitor-B (chip)	チ ッ プ セ ラ (B)			01
C6	UR857470	Electrolytic Cap.	ケ ミ コ ン			01
C7	UR857470	Electrolytic Cap.	ケ ミ コ ン			01
C8	UN866470	Electrolytic Cap.-BP	B P ケ ミ コ ン			01
C9	UN866470	Electrolytic Cap.-BP	B P ケ ミ コ ン			01
C10	US063680	Ceramic Capacitor-B (chip)	チ ッ プ セ ラ (B)			01
C11	US063680	Ceramic Capacitor-B (chip)	チ ッ プ セ ラ (B)			01
C12	US063100	Ceramic Capacitor-B (chip)	チ ッ プ セ ラ (B)			01
C13	US063100	Ceramic Capacitor-B (chip)	チ ッ プ セ ラ (B)			01
C14	US062100	Ceramic Capacitor-SL(chip)	チ ッ プ セ ラ (S L)			01
C15	US062100	Ceramic Capacitor-SL(chip)	チ ッ プ セ ラ (S L)			01
-18	US062100	Ceramic Capacitor-SL(chip)	チ ッ プ セ ラ (S L)			01
C19	US063100	Ceramic Capacitor-B (chip)	チ ッ プ セ ラ (B)			01
C20	US063100	Ceramic Capacitor-B (chip)	チ ッ プ セ ラ (B)			01
C41	US064100	Ceramic Capacitor-B (chip)	チ ッ プ セ ラ (B)			01
C43	US062100	Ceramic Capacitor-SL(chip)	チ ッ プ セ ラ (S L)			01
C44	US062100	Ceramic Capacitor-SL(chip)	チ ッ プ セ ラ (S L)			01
C45	US061220	Ceramic Capacitor-CH(chip)	チ ッ プ セ ラ (C H)			01
C46	US061220	Ceramic Capacitor-CH(chip)	チ ッ プ セ ラ (C H)			01
C47	US062100	Ceramic Capacitor-SL(chip)	チ ッ プ セ ラ (S L)			01
C48	US062100	Ceramic Capacitor-SL(chip)	チ ッ プ セ ラ (S L)			01
C49	UR857470	Electrolytic Cap.	ケ ミ コ ン			01
C50	UR857470	Electrolytic Cap.	ケ ミ コ ン			01
C51	UR858220	Electrolytic Cap.	ケ ミ コ ン			01
C52	UR858220	Electrolytic Cap.	ケ ミ コ ン			01
C53	US065100	Ceramic Capacitor-F (chip)	チ ッ プ セ ラ F			
-58	US065100	Ceramic Capacitor-F (chip)	チ ッ プ セ ラ F			
C60	US062220	Ceramic Capacitor-SL(chip)	チ ッ プ セ ラ (S L)			01
C61	US062220	Ceramic Capacitor-SL(chip)	チ ッ プ セ ラ (S L)			01
C70	US062100	Ceramic Capacitor-SL(chip)	チ ッ プ セ ラ (S L)			01
C71	US062100	Ceramic Capacitor-SL(chip)	チ ッ プ セ ラ (S L)			01
C72	US063100	Ceramic Capacitor-B (chip)	チ ッ プ セ ラ (B)			01
C74	US062100	Ceramic Capacitor-SL(chip)	チ ッ プ セ ラ (S L)			01
C75	US062100	Ceramic Capacitor-SL(chip)	チ ッ プ セ ラ (S L)			01

*: New Parts

RANK: Japan only

REF NO.	PART NO.	DESCRIPTION	部 品 名	REMARKS	QTY	RANK
C80	US063100	Ceramic Capacitor-B (chip)	1000P 50V K RECT.	チ ッ プ セ ラ (B)		01
C86	US065100	Ceramic Capacitor-F (chip)	0.100 50V Z RECT.	チ ッ プ セ ラ F		
C87	US065100	Ceramic Capacitor-F (chip)	0.100 50V Z RECT.	チ ッ プ セ ラ F		
C94	US063100	Ceramic Capacitor-B (chip)	1000P 50V K RECT.	チ ッ プ セ ラ (B)		01
C95	US063100	Ceramic Capacitor-B (chip)	1000P 50V K RECT.	チ ッ プ セ ラ (B)		01
C96	UR857470	Electrolytic Cap.	47.00 35.0V RX TP	ケ ミ コ ン		01
C97	UR857470	Electrolytic Cap.	47.00 35.0V RX TP	ケ ミ コ ン		01
C101	US063100	Ceramic Capacitor-B (chip)	1000P 50V K RECT.	チ ッ プ セ ラ (B)		01
C102	US063100	Ceramic Capacitor-B (chip)	1000P 50V K RECT.	チ ッ プ セ ラ (B)		01
C103	US061220	Ceramic Capacitor-CH(chip)	22P 50V J RECT.	チ ッ プ セ ラ (C H)		01
-106	US061220	Ceramic Capacitor-CH(chip)	22P 50V J RECT.	チ ッ プ セ ラ (C H)		01
C107	US061470	Ceramic Capacitor-CH(chip)	47P 50V J RECT.	チ ッ プ セ ラ (C H)		01
-110	US061470	Ceramic Capacitor-CH(chip)	47P 50V J RECT.	チ ッ プ セ ラ (C H)		01
C111	UR857470	Electrolytic Cap.	47.00 35.0V RX TP	ケ ミ コ ン		01
-114	UR857470	Electrolytic Cap.	47.00 35.0V RX TP	ケ ミ コ ン		01
C120	UR838220	Electrolytic Cap.	220.00 16.0V RX TP	ケ ミ コ ン		01
C121	UR838220	Electrolytic Cap.	220.00 16.0V RX TP	ケ ミ コ ン		01
C122	US065100	Ceramic Capacitor-F (chip)	0.100 50V Z RECT.	チ ッ プ セ ラ F		
-125	US065100	Ceramic Capacitor-F (chip)	0.100 50V Z RECT.	チ ッ プ セ ラ F		
* C302	UR858330	Electrolytic Cap.	330.00 35.0V RX TP	ケ ミ コ ン		
* C303	UR858330	Electrolytic Cap.	330.00 35.0V RX TP	ケ ミ コ ン		
C304	US063220	Ceramic Capacitor-B (chip)	2200P 50V K RECT.	チ ッ プ セ ラ (B)		01
-307	US063220	Ceramic Capacitor-B (chip)	2200P 50V K RECT.	チ ッ プ セ ラ (B)		01
C308	US065100	Ceramic Capacitor-F (chip)	0.100 50V Z RECT.	チ ッ プ セ ラ F		
C310	UR857470	Electrolytic Cap.	47.00 35.0V RX TP	ケ ミ コ ン		01
C311	US062220	Ceramic Capacitor-SL(chip)	220P 50V J RECT.	チ ッ プ セ ラ (S L)		01
C312	US062220	Ceramic Capacitor-SL(chip)	220P 50V J RECT.	チ ッ プ セ ラ (S L)		01
C316	UR857470	Electrolytic Cap.	47.00 35.0V RX TP	ケ ミ コ ン		01
C320	US065100	Ceramic Capacitor-F (chip)	0.100 50V Z RECT.	チ ッ プ セ ラ F		
-322	US065100	Ceramic Capacitor-F (chip)	0.100 50V Z RECT.	チ ッ プ セ ラ F		
C401	US063100	Ceramic Capacitor-B (chip)	1000P 50V K RECT.	チ ッ プ セ ラ (B)		01
C402	US062220	Ceramic Capacitor-SL(chip)	220P 50V J RECT.	チ ッ プ セ ラ (S L)		01
C403	US062220	Ceramic Capacitor-SL(chip)	220P 50V J RECT.	チ ッ プ セ ラ (S L)		01
C404	US063100	Ceramic Capacitor-B (chip)	1000P 50V K RECT.	チ ッ プ セ ラ (B)		01
C405	US062220	Ceramic Capacitor-SL(chip)	220P 50V J RECT.	チ ッ プ セ ラ (S L)		01
C406	US062220	Ceramic Capacitor-SL(chip)	220P 50V J RECT.	チ ッ プ セ ラ (S L)		01
CN1	VB389600	Base Post Connector	PH 11P SE	ベ ー ス ポ ス ト		01
CN2	VB858400	Base Post Connector	PH 5P SE	ベ ー ス ポ ス ト		01
CN4	VB858600	Base Post Connector	PH 7P SE	ベ ー ス ポ ス ト		01
CN5	VB858800	Base Post Connector	PH 9P SE	ベ ー ス ポ ス ト		01
CN6	VB390200	Base Post Connector	PH 6P TE	ベ ー ス ポ ス ト		01
CN7	LB919020	Base Post Connector	XH 2P SE	ベ ー ス ツ キ ポ ス ト		01
CN8	VB858300	Base Post Connector	PH 4P SE	ベ ー ス ポ ス ト		01
CN9	LB919020	Base Post Connector	XH 2P SE	ベ ー ス ツ キ ポ ス ト		01
CN10	LB919040	Base Post Connector	XH 4P SE	ベ ー ス ツ キ ポ ス ト		01
CN11	LB933020	Base Post Connector	VH 2P SE	ベ ー ス ポ ス ト		01
CN401	VB858500	Base Post Connector	PH 6P SE	ベ ー ス ポ ス ト		01
D3	VR496500	Diode	MA111 FLAT TP	ダ イ オ ー ド		
D3	VT332900	Diode	1SS355 TE-17 TP	ダ イ オ ー ド		01
D4	VR496500	Diode	MA111 FLAT TP	ダ イ オ ー ド		
D4	VT332900	Diode	1SS355 TE-17 TP	ダ イ オ ー ド		01
D11	VR496500	Diode	MA111 FLAT TP	ダ イ オ ー ド		
D11	VT332900	Diode	1SS355 TE-17 TP	ダ イ オ ー ド		01
D200	VR496500	Diode	MA111 FLAT TP	ダ イ オ ー ド		
D200	VT332900	Diode	1SS355 TE-17 TP	ダ イ オ ー ド		01
D201	VR496500	Diode	MA111 FLAT TP	ダ イ オ ー ド		
D201	VT332900	Diode	1SS355 TE-17 TP	ダ イ オ ー ド		01
EM108	VD542700	LC Filter	DSS6NF31C223Q93A	L C フィルター E M I		01
-111	VD542700	LC Filter	DSS6NF31C223Q93A	L C フィルター E M I		01
IC1	X7351A00	IC	UPC4570G2-E1-A	I C	OP AMP	01
IC2	X7351A00	IC	UPC4570G2-E1-A	I C	OP AMP	01
IC5	X7351A00	IC	UPC4570G2-E1-A	I C	OP AMP	01
IC101	X7351A00	IC	UPC4570G2-E1-A	I C	OP AMP	01
IC102	X7351A00	IC	UPC4570G2-E1-A	I C	OP AMP	01
IC301	XQ824A00	IC	NJM4556AD	I C	OP AMP	02
JK1	VS115400	Phone Jack Black	LGR4609-7100F	ホ ー ン コ ネ ク タ (黒)	INPUT L/MONO	01
JK2	VS115400	Phone Jack Black	LGR4609-7100F	ホ ー ン コ ネ ク タ (黒)	INPUT R	01
JK3	VL080500	Phone Jack	YKB21-5076	ホ ー ン ジ ャ ッ ク	OUTPUT L/MONO	02
JK4	VS115400	Phone Jack Black	LGR4609-7100F	ホ ー ン コ ネ ク タ (黒)	OUTPUT R	01
JK401	V8865600	Cannon Connector	XLR JACK NC3MAV	キ ャ ノ ン コ ネ ク タ	OUTPUT R	04

*: New Parts

RANK: Japan only

REF NO.	PART NO.	DESCRIPTION	部 品 名	REMARKS	QTY	RANK
JK402	V8865600	Cannon Connector	XLR JACK NC3MAV	キ ャ ノ ン コ ネ ク タ	OUTPUT L	04
L1	VQ724900	Chip Inductance	BK2125HM601-T	チ ッ プ イ ン ダ ク タ		01
-4	VQ724900	Chip Inductance	BK2125HM601-T	チ ッ プ イ ン ダ ク タ		01
R1	RD356470	Carbon Resistor (chip)	4.7K 63M J RECT.	チ ッ プ 抵 抗		01
R2	RD356470	Carbon Resistor (chip)	4.7K 63M J RECT.	チ ッ プ 抵 抗		01
R3	RD355680	Carbon Resistor (chip)	680.0 63M J RECT.	チ ッ プ 抵 抗		01
R4	RD355680	Carbon Resistor (chip)	680.0 63M J RECT.	チ ッ プ 抵 抗		01
R5	RD356470	Carbon Resistor (chip)	4.7K 63M J RECT.	チ ッ プ 抵 抗		01
R6	RD356470	Carbon Resistor (chip)	4.7K 63M J RECT.	チ ッ プ 抵 抗		01
R13	RD357220	Carbon Resistor (chip)	22.0K 63M J RECT.	チ ッ プ 抵 抗		01
R14	RD357220	Carbon Resistor (chip)	22.0K 63M J RECT.	チ ッ プ 抵 抗		01
R15	RD357120	Carbon Resistor (chip)	12.0K 63M J RECT.	チ ッ プ 抵 抗		01
R16	RD357120	Carbon Resistor (chip)	12.0K 63M J RECT.	チ ッ プ 抵 抗		01
R17	RD357220	Carbon Resistor (chip)	22.0K 63M J RECT.	チ ッ プ 抵 抗		01
R18	RD357220	Carbon Resistor (chip)	22.0K 63M J RECT.	チ ッ プ 抵 抗		01
R21	RD357100	Carbon Resistor (chip)	10.0K 63M J RECT.	チ ッ プ 抵 抗		01
R22	RD357100	Carbon Resistor (chip)	10.0K 63M J RECT.	チ ッ プ 抵 抗		01
R23	RD355100	Carbon Resistor (chip)	100.0 63M J RECT.	チ ッ プ 抵 抗		01
R24	RD355100	Carbon Resistor (chip)	100.0 63M J RECT.	チ ッ プ 抵 抗		01
R44	RD357100	Carbon Resistor (chip)	10.0K 63M J RECT.	チ ッ プ 抵 抗		01
R45	RD357100	Carbon Resistor (chip)	10.0K 63M J RECT.	チ ッ プ 抵 抗		01
R46	RD355100	Carbon Resistor (chip)	100.0 63M J RECT.	チ ッ プ 抵 抗		01
R47	RD355100	Carbon Resistor (chip)	100.0 63M J RECT.	チ ッ プ 抵 抗		01
R48	RD357100	Carbon Resistor (chip)	10.0K 63M J RECT.	チ ッ プ 抵 抗		01
R49	RD357100	Carbon Resistor (chip)	10.0K 63M J RECT.	チ ッ プ 抵 抗		01
R50	RD356220	Carbon Resistor (chip)	2.2K 63M J RECT.	チ ッ プ 抵 抗		01
R51	RD357220	Carbon Resistor (chip)	22.0K 63M J RECT.	チ ッ プ 抵 抗		01
R52	RD356180	Carbon Resistor (chip)	1.8K 63M J RECT.	チ ッ プ 抵 抗		01
R53	RD356470	Carbon Resistor (chip)	4.7K 63M J RECT.	チ ッ プ 抵 抗		01
R55	RD356180	Carbon Resistor (chip)	1.8K 63M J RECT.	チ ッ プ 抵 抗		01
R56	RD356470	Carbon Resistor (chip)	4.7K 63M J RECT.	チ ッ プ 抵 抗		01
R57	RD357330	Carbon Resistor (chip)	33.0K 63M J RECT.	チ ッ プ 抵 抗		01
R58	RD357330	Carbon Resistor (chip)	33.0K 63M J RECT.	チ ッ プ 抵 抗		01
R59	RD357470	Carbon Resistor (chip)	47.0K 63M J RECT.	チ ッ プ 抵 抗		01
R70	RD357100	Carbon Resistor (chip)	10.0K 63M J RECT.	チ ッ プ 抵 抗		01
R71	RD355100	Carbon Resistor (chip)	100.0 63M J RECT.	チ ッ プ 抵 抗		01
R72	RD357220	Carbon Resistor (chip)	22.0K 63M J RECT.	チ ッ プ 抵 抗		01
R73	RD357100	Carbon Resistor (chip)	10.0K 63M J RECT.	チ ッ プ 抵 抗		01
R75	RD357470	Carbon Resistor (chip)	47.0K 63M J RECT.	チ ッ プ 抵 抗		01
R77	RD355100	Carbon Resistor (chip)	100.0 63M J RECT.	チ ッ プ 抵 抗		01
R78	RD357220	Carbon Resistor (chip)	22.0K 63M J RECT.	チ ッ プ 抵 抗		01
R81	RD357470	Carbon Resistor (chip)	47.0K 63M J RECT.	チ ッ プ 抵 抗		01
R82	RD355100	Carbon Resistor (chip)	100.0 63M J RECT.	チ ッ プ 抵 抗		01
R83	RD355100	Carbon Resistor (chip)	100.0 63M J RECT.	チ ッ プ 抵 抗		01
R92	RD356470	Carbon Resistor (chip)	4.7K 63M J RECT.	チ ッ プ 抵 抗		01
R93	RD356470	Carbon Resistor (chip)	4.7K 63M J RECT.	チ ッ プ 抵 抗		01
R101	VI197400	Metal Film Resistor (chip)	10.0K 1/10 D RECT.	チ ッ プ 金 被 抵 抗		01
R102	VI197400	Metal Film Resistor (chip)	10.0K 1/10 D RECT.	チ ッ プ 金 被 抵 抗		01
R103	VI195100	Metal Film Resistor (chip)	1.2K 1/10 D RECT.	チ ッ プ 金 被 抵 抗		01
R104	VI197400	Metal Film Resistor (chip)	10.0K 1/10 D RECT.	チ ッ プ 金 被 抵 抗		01
-107	VI197400	Metal Film Resistor (chip)	10.0K 1/10 D RECT.	チ ッ プ 金 被 抵 抗		01
R108	VI195100	Metal Film Resistor (chip)	1.2K 1/10 D RECT.	チ ッ プ 金 被 抵 抗		01
R109	VI197400	Metal Film Resistor (chip)	10.0K 1/10 D RECT.	チ ッ プ 金 被 抵 抗		01
-111	VI197400	Metal Film Resistor (chip)	10.0K 1/10 D RECT.	チ ッ プ 金 被 抵 抗		01
R113	VI197400	Metal Film Resistor (chip)	10.0K 1/10 D RECT.	チ ッ プ 金 被 抵 抗		01
R115	VI197400	Metal Film Resistor (chip)	10.0K 1/10 D RECT.	チ ッ プ 金 被 抵 抗		01
R117	VI197400	Metal Film Resistor (chip)	10.0K 1/10 D RECT.	チ ッ プ 金 被 抵 抗		01
R119	VI197600	Metal Film Resistor (chip)	12.0K 1/10 D RECT.	チ ッ プ 金 被 抵 抗		01
-122	VI197600	Metal Film Resistor (chip)	12.0K 1/10 D RECT.	チ ッ プ 金 被 抵 抗		01
R123	RD355150	Carbon Resistor (chip)	150.0 63M J RECT.	チ ッ プ 抵 抗		01
-130	RD355150	Carbon Resistor (chip)	150.0 63M J RECT.	チ ッ プ 抵 抗		01
R131	RD357470	Carbon Resistor (chip)	47.0K 63M J RECT.	チ ッ プ 抵 抗		01
-134	RD357470	Carbon Resistor (chip)	47.0K 63M J RECT.	チ ッ プ 抵 抗		01
R200	RD356470	Carbon Resistor (chip)	4.7K 63M J RECT.	チ ッ プ 抵 抗		01
R201	RD356470	Carbon Resistor (chip)	4.7K 63M J RECT.	チ ッ プ 抵 抗		01
R202	RD357100	Carbon Resistor (chip)	10.0K 63M J RECT.	チ ッ プ 抵 抗		01
R203	RD357100	Carbon Resistor (chip)	10.0K 63M J RECT.	チ ッ プ 抵 抗		01
R220	RD356220	Carbon Resistor (chip)	2.2K 63M J RECT.	チ ッ プ 抵 抗		01
R221	RD357330	Carbon Resistor (chip)	33.0K 63M J RECT.	チ ッ プ 抵 抗		01
R222	RD356220	Carbon Resistor (chip)	2.2K 63M J RECT.	チ ッ プ 抵 抗		01

*: New Parts

RANK: Japan only

REF NO.	PART NO.	DESCRIPTION	部 品 名	REMARKS	QTY	RANK
R223	RD356220	Carbon Resistor (chip)	2.2K 63M J RECT.	チ ッ プ 抵 抗		01
R224	RD358100	Carbon Resistor (chip)	100.0K 63M J RECT.	チ ッ プ 抵 抗		01
R225	RD357100	Carbon Resistor (chip)	10.0K 63M J RECT.	チ ッ プ 抵 抗		01
R226	RD356470	Carbon Resistor (chip)	4.7K 63M J RECT.	チ ッ プ 抵 抗		01
R227	RD358100	Carbon Resistor (chip)	100.0K 63M J RECT.	チ ッ プ 抵 抗		01
R232	RD350000	Carbon Resistor (chip)	0 63M J RECT.	チ ッ プ 抵 抗		01
-235	RD350000	Carbon Resistor (chip)	0 63M J RECT.	チ ッ プ 抵 抗		01
R302	RD356470	Carbon Resistor (chip)	4.7K 63M J RECT.	チ ッ プ 抵 抗		01
R303	RD356470	Carbon Resistor (chip)	4.7K 63M J RECT.	チ ッ プ 抵 抗		01
R304	RD357100	Carbon Resistor (chip)	10.0K 63M J RECT.	チ ッ プ 抵 抗		01
R305	RD357100	Carbon Resistor (chip)	10.0K 63M J RECT.	チ ッ プ 抵 抗		01
R307	RD355220	Carbon Resistor (chip)	220.0 63M J RECT.	チ ッ プ 抵 抗		01
R308	RD355220	Carbon Resistor (chip)	220.0 63M J RECT.	チ ッ プ 抵 抗		01
R310	RD356100	Carbon Resistor (chip)	1.0K 63M J RECT.	チ ッ プ 抵 抗		01
R311	RD356100	Carbon Resistor (chip)	1.0K 63M J RECT.	チ ッ プ 抵 抗		01
R312	RD357100	Carbon Resistor (chip)	10.0K 63M J RECT.	チ ッ プ 抵 抗		01
-315	RD357100	Carbon Resistor (chip)	10.0K 63M J RECT.	チ ッ プ 抵 抗		01
R317	RD357100	Carbon Resistor (chip)	10.0K 63M J RECT.	チ ッ プ 抵 抗		01
R318	RD357100	Carbon Resistor (chip)	10.0K 63M J RECT.	チ ッ プ 抵 抗		01
R319	RD350000	Carbon Resistor (chip)	0 63M J RECT.	チ ッ プ 抵 抗		01
-321	RD350000	Carbon Resistor (chip)	0 63M J RECT.	チ ッ プ 抵 抗		01
R323	VR453900	Carbon Resistor (chip)	33.0 1/2 J RECT.	チ ッ プ 抵 抗		01
R324	VR453900	Carbon Resistor (chip)	33.0 1/2 J RECT.	チ ッ プ 抵 抗		01
RY11	V8245600	Relay	DC ATXD203	リ ッ プ レ		04
RY12	V8245600	Relay	DC ATXD203	リ ッ プ レ		04
TR1	VV556400	Transistor	2SC2412K Q,R,S TP	ト ラ ン ジ ス タ		01
-3	VV556400	Transistor	2SC2412K Q,R,S TP	ト ラ ン ジ ス タ		01
TR4	VV556500	Transistor	2SA1037AK Q,R,S TP	ト ラ ン ジ ス タ		01
TR200	IC287820	Transistor	2SC2878 A,B TP	ト ラ ン ジ ス タ		01
TR201	IC287820	Transistor	2SC2878 A,B TP	ト ラ ン ジ ス タ		01
TR203	VJ927100	Transistor	2SC2712-Y(TE85R,F)	ト ラ ン ジ ス タ		01
TR204	VQ395600	Transistor	2SA1052MCTL-E C TE	ト ラ ン ジ ス タ		01
TR205	VG013300	Transistor	2SB1132 82-390 TP	ト ラ ン ジ ス タ		01
TR300	IC287820	Transistor	2SC2878 A,B TP	ト ラ ン ジ ス タ		01
TR301	IC287820	Transistor	2SC2878 A,B TP	ト ラ ン ジ ス タ		01
*						
	WG433000	Circuit Board	DJACK	D J A C K シ ー ト	(WG41640)(X7113C0)	
10	VU931500	Holder, Jack		J K ア ン グ ル		03
C1	US061220	Ceramic Capacitor-CH(chip)	22P 50V J RECT.	チ ッ プ セ ラ (C H)		01
-3	US061220	Ceramic Capacitor-CH(chip)	22P 50V J RECT.	チ ッ プ セ ラ (C H)		01
C5	UR838100	Electrolytic Cap.	100.00 16.0V RX TP	ケ ミ コ ン		01
C12	US064100	Ceramic Capacitor-B (chip)	0.0100 50V K RECT.	チ ッ プ セ ラ (B)		01
C18	US064100	Ceramic Capacitor-B (chip)	0.0100 50V K RECT.	チ ッ プ セ ラ (B)		01
C21	US064100	Ceramic Capacitor-B (chip)	0.0100 50V K RECT.	チ ッ プ セ ラ (B)		01
C120	US062100	Ceramic Capacitor-SL(chip)	100P 50V J RECT.	チ ッ プ セ ラ (S L)		01
C111	US064100	Ceramic Capacitor-B (chip)	0.0100 50V K RECT.	チ ッ プ セ ラ (B)		01
C112	US062100	Ceramic Capacitor-SL(chip)	100P 50V J RECT.	チ ッ プ セ ラ (S L)		01
C113	US062100	Ceramic Capacitor-SL(chip)	100P 50V J RECT.	チ ッ プ セ ラ (S L)		01
C114	US064100	Ceramic Capacitor-B (chip)	0.0100 50V K RECT.	チ ッ プ セ ラ (B)		01
C117	US064100	Ceramic Capacitor-B (chip)	0.0100 50V K RECT.	チ ッ プ セ ラ (B)		01
C118	US064100	Ceramic Capacitor-B (chip)	0.0100 50V K RECT.	チ ッ プ セ ラ (B)		01
C119	US062100	Ceramic Capacitor-SL(chip)	100P 50V J RECT.	チ ッ プ セ ラ (S L)		01
-123	US062100	Ceramic Capacitor-SL(chip)	100P 50V J RECT.	チ ッ プ セ ラ (S L)		01
C203	US064100	Ceramic Capacitor-B (chip)	0.0100 50V K RECT.	チ ッ プ セ ラ (B)		01
C204	UR827220	Electrolytic Cap.	22.00 10.0V RX TP	ケ ミ コ ン		01
C405	US062100	Ceramic Capacitor-SL(chip)	100P 50V J RECT.	チ ッ プ セ ラ (S L)		01
CN1	VB858300	Base Post Connector	PH 4P SE	ベ ー ス ポ ス ト		01
CN2	VB858700	Base Post Connector	PH 8P SE	ベ ー ス ポ ス ト		01
CN3	VB858200	Base Post Connector	PH 3P SE	ベ ー ス ポ ス ト		01
CN4	VB858500	Base Post Connector	PH 6P SE	ベ ー ス ポ ス ト		01
CN5	VB858400	Base Post Connector	PH 5P SE	ベ ー ス ポ ス ト		01
CN10	V9020800	USB Connector B	USB 4P SE	U S B コ ネ ク タ B	USB	02
D1	VV925900	Diode	RLS-73 TE-11 TP	ダ イ オ ー ド		01
D110	VR496500	Diode	MA111 FLAT TP	ダ イ オ ー ド		
-115	VR496500	Diode	MA111 FLAT TP	ダ イ オ ー ド		
D110	VT332900	Diode	1SS355 TE-17 TP	ダ イ オ ー ド		01
-115	VT332900	Diode	1SS355 TE-17 TP	ダ イ オ ー ド		01
D202	VV925900	Diode	RLS-73 TE-11 TP	ダ イ オ ー ド		01
D407	VV925900	Diode	RLS-73 TE-11 TP	ダ イ オ ー ド		01
D408	VV925900	Diode	RLS-73 TE-11 TP	ダ イ オ ー ド		01

*: New Parts

RANK: Japan only

REF NO.	PART NO.	DESCRIPTION		部 品 名	REMARKS	QTY	RANK
DA1	V9424900	Diode Array	1SS372 TE85L	ダイオードアレイ			01
DA2	V9424900	Diode Array	1SS372 TE85L	ダイオードアレイ			01
IC3	VD473200	Photo Coupler	6N137-000E	フォトカブラ			05
J106	RD350000	Carbon Resistor (chip)	0 63M J RECT.	チップ抵抗			01
JK1	VI466400	DIN Connector	3P YKF51-5046N	複合コネクタ	MIDI IN,OUT,THRU		04
JK10	VS115400	Phone Jack Black	LGR4609-7100F	ホーンコネクタ (黒)	4/AUX <ASSIGNABLE FOOT PEDAL>		01
JK11	VS115400	Phone Jack Black	LGR4609-7100F	ホーンコネクタ (黒)	3/SOFT <ASSIGNABLE FOOT PEDAL>		01
JK12	VS115400	Phone Jack Black	LGR4609-7100F	ホーンコネクタ (黒)	2/SOSTENUTO <ASSIGNABLE FOOT PEDAL>		01
JK13	VS115400	Phone Jack Black	LGR4609-7100F	ホーンコネクタ (黒)	1/SUSTAIN <ASSIGNABLE FOOT PEDAL>		01
L1	VY657200	Chip Inductance	600 BK1608HM601	チップインダクタ			01
L4	VB835000	Coil	FL05RD200AT 20uH	コイル 20U			01
L9	VY657200	Chip Inductance	600 BK1608HM601	チップインダクタ			01
L10	VY657200	Chip Inductance	600 BK1608HM601	チップインダクタ			01
L11	VQ724900	Chip Inductance	BK2125HM601-T	チップインダクタ			01
-16	VQ724900	Chip Inductance	BK2125HM601-T	チップインダクタ			01
L110	VY657200	Chip Inductance	600 BK1608HM601	チップインダクタ			01
-115	VY657200	Chip Inductance	600 BK1608HM601	チップインダクタ			01
L207	VB835000	Coil	FL05RD200AT 20uH	コイル 20U			01
R1	RD355220	Carbon Resistor (chip)	220.0 63M J RECT.	チップ抵抗			01
R2	RD357100	Carbon Resistor (chip)	10.0K 63M J RECT.	チップ抵抗			01
R3	RD356100	Carbon Resistor (chip)	1.0K 63M J RECT.	チップ抵抗			01
R16	RD356100	Carbon Resistor (chip)	1.0K 63M J RECT.	チップ抵抗			01
R21	RD357220	Carbon Resistor (chip)	22.0K 63M J RECT.	チップ抵抗			01
R22	RD357220	Carbon Resistor (chip)	22.0K 63M J RECT.	チップ抵抗			01
R23	RD356150	Carbon Resistor (chip)	1.5K 63M J RECT.	チップ抵抗			01
R24	RD357220	Carbon Resistor (chip)	22.0K 63M J RECT.	チップ抵抗			01
R26	RD357220	Carbon Resistor (chip)	22.0K 63M J RECT.	チップ抵抗			01
R27	RD356150	Carbon Resistor (chip)	1.5K 63M J RECT.	チップ抵抗			01
R29	RD355220	Carbon Resistor (chip)	220.0 63M J RECT.	チップ抵抗			01
-33	RD355220	Carbon Resistor (chip)	220.0 63M J RECT.	チップ抵抗			01
R110	RD154470	Carbon Resistor (chip)	47.0 1/4 J TP	チップ抵抗			01
R111	RD155220	Carbon Resistor (chip)	220.0 1/4 J TP	チップ抵抗			
-113	RD155220	Carbon Resistor (chip)	220.0 1/4 J TP	チップ抵抗			
R114	RD357100	Carbon Resistor (chip)	10.0K 63M J RECT.	チップ抵抗			01
-116	RD357100	Carbon Resistor (chip)	10.0K 63M J RECT.	チップ抵抗			01
R117	RD355220	Carbon Resistor (chip)	220.0 63M J RECT.	チップ抵抗			01
-119	RD355220	Carbon Resistor (chip)	220.0 63M J RECT.	チップ抵抗			01
R120	RD154470	Carbon Resistor (chip)	47.0 1/4 J TP	チップ抵抗			01
R121	RD154470	Carbon Resistor (chip)	47.0 1/4 J TP	チップ抵抗			01
R205	RD357100	Carbon Resistor (chip)	10.0K 63M J RECT.	チップ抵抗			01
R211	RD357100	Carbon Resistor (chip)	10.0K 63M J RECT.	チップ抵抗			01
R406	RD154220	Carbon Resistor (chip)	22.0 1/4 J TP	チップ抵抗			01
R407	RD350000	Carbon Resistor (chip)	0 63M J RECT.	チップ抵抗			01
-410	RD350000	Carbon Resistor (chip)	0 63M J RECT.	チップ抵抗			01
TR1	VV556400	Transistor	2SC2412K Q,R,S TP	トランジスタ			01
-4	VV556400	Transistor	2SC2412K Q,R,S TP	トランジスタ			01
	--	Circuit Board	DM	D M シ ー ト	(WG43430)(XZ592J0)		
C0001	US064100	Ceramic Capacitor-B (chip)	0.0100 50V K RECT.	チップセラ (B)			01
C0002	US062470	Ceramic Capacitor-SL(chip)	470P 50V J RECT.	チップセラ (S L)			01
C0003	US064100	Ceramic Capacitor-B (chip)	0.0100 50V K RECT.	チップセラ (B)			01
C0004	US062470	Ceramic Capacitor-SL(chip)	470P 50V J RECT.	チップセラ (S L)			01
C0005	US064100	Ceramic Capacitor-B (chip)	0.0100 50V K RECT.	チップセラ (B)			01
C0006	US062470	Ceramic Capacitor-SL(chip)	470P 50V J RECT.	チップセラ (S L)			01
C0007	US064100	Ceramic Capacitor-B (chip)	0.0100 50V K RECT.	チップセラ (B)			01
C0008	US062470	Ceramic Capacitor-SL(chip)	470P 50V J RECT.	チップセラ (S L)			01
C0009	US064100	Ceramic Capacitor-B (chip)	0.0100 50V K RECT.	チップセラ (B)			01
C0010	US062470	Ceramic Capacitor-SL(chip)	470P 50V J RECT.	チップセラ (S L)			01
C0011	US064100	Ceramic Capacitor-B (chip)	0.0100 50V K RECT.	チップセラ (B)			01
C0012	US062470	Ceramic Capacitor-SL(chip)	470P 50V J RECT.	チップセラ (S L)			01
C0013	US064100	Ceramic Capacitor-B (chip)	0.0100 50V K RECT.	チップセラ (B)			01
C0014	US062470	Ceramic Capacitor-SL(chip)	470P 50V J RECT.	チップセラ (S L)			01
C0015	US064100	Ceramic Capacitor-B (chip)	0.0100 50V K RECT.	チップセラ (B)			01
C0016	US062470	Ceramic Capacitor-SL(chip)	470P 50V J RECT.	チップセラ (S L)			01
C0017	US064100	Ceramic Capacitor-B (chip)	0.0100 50V K RECT.	チップセラ (B)			01
C0018	US062470	Ceramic Capacitor-SL(chip)	470P 50V J RECT.	チップセラ (S L)			01
C0019	US064100	Ceramic Capacitor-B (chip)	0.0100 50V K RECT.	チップセラ (B)			01
C0020	US062470	Ceramic Capacitor-SL(chip)	470P 50V J RECT.	チップセラ (S L)			01
C0021	US064100	Ceramic Capacitor-B (chip)	0.0100 50V K RECT.	チップセラ (B)			01
C0022	US062470	Ceramic Capacitor-SL(chip)	470P 50V J RECT.	チップセラ (S L)			01

*: New Parts

RANK: Japan only

REF NO.	PART NO.	DESCRIPTION	部 品 名	REMARKS	QTY	RANK
C0023	US064100	Ceramic Capacitor-B (chip)	0.0100 50V K RECT.	チップセラ (B)		01
C0024	US062470	Ceramic Capacitor-SL(chip)	470P 50V J RECT.	チップセラ (S L)		01
C0025	US064100	Ceramic Capacitor-B (chip)	0.0100 50V K RECT.	チップセラ (B)		01
C0026	US062470	Ceramic Capacitor-SL(chip)	470P 50V J RECT.	チップセラ (S L)		01
C0027	US064100	Ceramic Capacitor-B (chip)	0.0100 50V K RECT.	チップセラ (B)		01
C0028	US062470	Ceramic Capacitor-SL(chip)	470P 50V J RECT.	チップセラ (S L)		01
C0029	UF018100	Electrolytic Cap. (chip)	100 6.3V	チップケミコン		01
C0030	UF018100	Electrolytic Cap. (chip)	100 6.3V	チップケミコン		01
C0032	US062100	Ceramic Capacitor-SL(chip)	100P 50V J RECT.	チップセラ (S L)		01
-0036	US062100	Ceramic Capacitor-SL(chip)	100P 50V J RECT.	チップセラ (S L)		01
C0037	US135100	Ceramic Capacitor-F (chip)	0.1000 16V Z RECT.	チップセラ (F)		01
C0038	UF037100	Electrolytic Cap. (chip)	10 16V	チップケミコン		01
C0039	US135100	Ceramic Capacitor-F (chip)	0.1000 16V Z RECT.	チップセラ (F)		01
C0040	US135100	Ceramic Capacitor-F (chip)	0.1000 16V Z RECT.	チップセラ (F)		01
C0042	UF118220	Electrolytic Cap. (chip)	220 6.3V UUR0J2	チップケミコン		01
C0043	US135100	Ceramic Capacitor-F (chip)	0.1000 16V Z RECT.	チップセラ (F)		01
C0044	UF118220	Electrolytic Cap. (chip)	220 6.3V UUR0J2	チップケミコン		01
C0045	UF138220	Electrolytic Cap. (chip)	220 16V UUR1C2	チップケミコン		01
C0046	UF138220	Electrolytic Cap. (chip)	220 16V UUR1C2	チップケミコン		01
C0047	US135100	Ceramic Capacitor-F (chip)	0.1000 16V Z RECT.	チップセラ (F)		01
-0051	US135100	Ceramic Capacitor-F (chip)	0.1000 16V Z RECT.	チップセラ (F)		01
C0053	US135100	Ceramic Capacitor-F (chip)	0.1000 16V Z RECT.	チップセラ (F)		01
C0055	UF138220	Electrolytic Cap. (chip)	220 16V UUR1C2	チップケミコン		01
C0056	UF138220	Electrolytic Cap. (chip)	220 16V UUR1C2	チップケミコン		01
C0058	UF037100	Electrolytic Cap. (chip)	10 16V	チップケミコン		01
C0059	US064100	Ceramic Capacitor-B (chip)	0.0100 50V K RECT.	チップセラ (B)		01
C0060	US064100	Ceramic Capacitor-B (chip)	0.0100 50V K RECT.	チップセラ (B)		01
C0061	US135100	Ceramic Capacitor-F (chip)	0.1000 16V Z RECT.	チップセラ (F)		01
C0062	US061270	Ceramic Capacitor-CH(chip)	27P 50V J RECT.	チップセラ (C H)		01
C0063	US135100	Ceramic Capacitor-F (chip)	0.1000 16V Z RECT.	チップセラ (F)		01
C0066	US064100	Ceramic Capacitor-B (chip)	0.0100 50V K RECT.	チップセラ (B)		01
C0067	US061270	Ceramic Capacitor-CH(chip)	27P 50V J RECT.	チップセラ (C H)		01
C0069	UF037100	Electrolytic Cap. (chip)	10 16V	チップケミコン		01
C0070	US064100	Ceramic Capacitor-B (chip)	0.0100 50V K RECT.	チップセラ (B)		01
C0071	US062470	Ceramic Capacitor-SL(chip)	470P 50V J RECT.	チップセラ (S L)		01
C0072	US064100	Ceramic Capacitor-B (chip)	0.0100 50V K RECT.	チップセラ (B)		01
C0073	US062470	Ceramic Capacitor-SL(chip)	470P 50V J RECT.	チップセラ (S L)		01
C0074	US064100	Ceramic Capacitor-B (chip)	0.0100 50V K RECT.	チップセラ (B)		01
C0075	US062470	Ceramic Capacitor-SL(chip)	470P 50V J RECT.	チップセラ (S L)		01
C0076	US064100	Ceramic Capacitor-B (chip)	0.0100 50V K RECT.	チップセラ (B)		01
C0077	US062470	Ceramic Capacitor-SL(chip)	470P 50V J RECT.	チップセラ (S L)		01
C0081	US135100	Ceramic Capacitor-F (chip)	0.1000 16V Z RECT.	チップセラ (F)		01
C0083	US135100	Ceramic Capacitor-F (chip)	0.1000 16V Z RECT.	チップセラ (F)		01
C0085	US064100	Ceramic Capacitor-B (chip)	0.0100 50V K RECT.	チップセラ (B)		01
C0086	UF037100	Electrolytic Cap. (chip)	10 16V	チップケミコン		01
C0087	US135100	Ceramic Capacitor-F (chip)	0.1000 16V Z RECT.	チップセラ (F)		01
C0089	US064100	Ceramic Capacitor-B (chip)	0.0100 50V K RECT.	チップセラ (B)		01
C0090	US062470	Ceramic Capacitor-SL(chip)	470P 50V J RECT.	チップセラ (S L)		01
C0091	US064100	Ceramic Capacitor-B (chip)	0.0100 50V K RECT.	チップセラ (B)		01
C0092	US062470	Ceramic Capacitor-SL(chip)	470P 50V J RECT.	チップセラ (S L)		01
C0093	US064100	Ceramic Capacitor-B (chip)	0.0100 50V K RECT.	チップセラ (B)		01
C0094	US062470	Ceramic Capacitor-SL(chip)	470P 50V J RECT.	チップセラ (S L)		01
C0096	US135100	Ceramic Capacitor-F (chip)	0.1000 16V Z RECT.	チップセラ (F)		01
C0101	US135100	Ceramic Capacitor-F (chip)	0.1000 16V Z RECT.	チップセラ (F)		01
C0102	US135100	Ceramic Capacitor-F (chip)	0.1000 16V Z RECT.	チップセラ (F)		01
C0104	US135100	Ceramic Capacitor-F (chip)	0.1000 16V Z RECT.	チップセラ (F)		01
C0105	US135100	Ceramic Capacitor-F (chip)	0.1000 16V Z RECT.	チップセラ (F)		01
C0106	US061330	Ceramic Capacitor-CH(chip)	33P 50V J RECT.	チップセラ (C H)		01
C0107	US061330	Ceramic Capacitor-CH(chip)	33P 50V J RECT.	チップセラ (C H)		01
C0108	US135100	Ceramic Capacitor-F (chip)	0.1000 16V Z RECT.	チップセラ (F)		01
C0111	US062470	Ceramic Capacitor-SL(chip)	470P 50V J RECT.	チップセラ (S L)		01
C0112	US064100	Ceramic Capacitor-B (chip)	0.0100 50V K RECT.	チップセラ (B)		01
C0113	US062470	Ceramic Capacitor-SL(chip)	470P 50V J RECT.	チップセラ (S L)		01
C0114	US064100	Ceramic Capacitor-B (chip)	0.0100 50V K RECT.	チップセラ (B)		01
C0115	US062470	Ceramic Capacitor-SL(chip)	470P 50V J RECT.	チップセラ (S L)		01
C0116	US064100	Ceramic Capacitor-B (chip)	0.0100 50V K RECT.	チップセラ (B)		01
C0117	US062470	Ceramic Capacitor-SL(chip)	470P 50V J RECT.	チップセラ (S L)		01
C0118	US064100	Ceramic Capacitor-B (chip)	0.0100 50V K RECT.	チップセラ (B)		01
C0119	UF037100	Electrolytic Cap. (chip)	10 16V	チップケミコン		01
C0120	V9451300	Electrolytic Cap. (chip)	68.00 4.0V REFLOW	チップ O S ケミコン		03

*: New Parts

RANK: Japan only

REF NO.	PART NO.	DESCRIPTION	部 品 名	REMARKS	QTY	RANK
C0121	US062470	Ceramic Capacitor-SL(chip)	470P 50V J RECT.	チップセラ (S L)		01
C0122	US064100	Ceramic Capacitor-B (chip)	0.0100 50V K RECT.	チップセラ (B)		01
C0123	RD350000	Carbon Resistor (chip)	0 63M J RECT.	チ ッ プ 抵 抗		01
C0124	RD350000	Carbon Resistor (chip)	0 63M J RECT.	チ ッ プ 抵 抗		01
C0125	US062470	Ceramic Capacitor-SL(chip)	470P 50V J RECT.	チップセラ (S L)		01
C0126	RD350000	Carbon Resistor (chip)	0 63M J RECT.	チ ッ プ 抵 抗		01
C0127	US064100	Ceramic Capacitor-B (chip)	0.0100 50V K RECT.	チップセラ (B)		01
C0128	US135100	Ceramic Capacitor-F (chip)	0.1000 16V Z RECT.	チップセラ (F)		01
-0131	US135100	Ceramic Capacitor-F (chip)	0.1000 16V Z RECT.	チップセラ (F)		01
C0132	US062470	Ceramic Capacitor-SL(chip)	470P 50V J RECT.	チップセラ (S L)		01
C0133	US064100	Ceramic Capacitor-B (chip)	0.0100 50V K RECT.	チップセラ (B)		01
C0134	US062470	Ceramic Capacitor-SL(chip)	470P 50V J RECT.	チップセラ (S L)		01
C0135	US062470	Ceramic Capacitor-SL(chip)	470P 50V J RECT.	チップセラ (S L)		01
C0136	US064100	Ceramic Capacitor-B (chip)	0.0100 50V K RECT.	チップセラ (B)		01
C0137	US064100	Ceramic Capacitor-B (chip)	0.0100 50V K RECT.	チップセラ (B)		01
C0138	US062470	Ceramic Capacitor-SL(chip)	470P 50V J RECT.	チップセラ (S L)		01
C0139	US064100	Ceramic Capacitor-B (chip)	0.0100 50V K RECT.	チップセラ (B)		01
C0140	US062470	Ceramic Capacitor-SL(chip)	470P 50V J RECT.	チップセラ (S L)		01
C0141	US064100	Ceramic Capacitor-B (chip)	0.0100 50V K RECT.	チップセラ (B)		01
C0142	US064100	Ceramic Capacitor-B (chip)	0.0100 50V K RECT.	チップセラ (B)		01
C0143	US062470	Ceramic Capacitor-SL(chip)	470P 50V J RECT.	チップセラ (S L)		01
C0144	UF037100	Electrolytic Cap. (chip)	10 16V	チップケミコン		01
C0145	US062470	Ceramic Capacitor-SL(chip)	470P 50V J RECT.	チップセラ (S L)		01
C0146	US062470	Ceramic Capacitor-SL(chip)	470P 50V J RECT.	チップセラ (S L)		01
C0147	US064100	Ceramic Capacitor-B (chip)	0.0100 50V K RECT.	チップセラ (B)		01
C0148	US062470	Ceramic Capacitor-SL(chip)	470P 50V J RECT.	チップセラ (S L)		01
C0149	US062470	Ceramic Capacitor-SL(chip)	470P 50V J RECT.	チップセラ (S L)		01
C0150	US064100	Ceramic Capacitor-B (chip)	0.0100 50V K RECT.	チップセラ (B)		01
C0151	V9451300	Electrolytic Cap. (chip)	68.00 4.0V REFLOW	チップ O S ケミコン		03
C0152	US064100	Ceramic Capacitor-B (chip)	0.0100 50V K RECT.	チップセラ (B)		01
C0153	US060300	Ceramic Capacitor-CJ(chip)	3P 50V C RECT.	チップセラ (C J)		01
C0154	US061100	Ceramic Capacitor-CH(chip)	10P 50V D RECT.	チップセラ (C H)		01
C0155	US063100	Ceramic Capacitor-B (chip)	1000P 50V K RECT.	チップセラ (B)		01
C0162	UF046470	Electrolytic Cap. (chip)	4.7 25V UWX1E4	チップケミコン		01
C0165	UF118220	Electrolytic Cap. (chip)	220 6.3V UUR0J2	チップケミコン		01
C0168	US064100	Ceramic Capacitor-B (chip)	0.0100 50V K RECT.	チップセラ (B)		01
C0169	US062470	Ceramic Capacitor-SL(chip)	470P 50V J RECT.	チップセラ (S L)		01
C0170	US064100	Ceramic Capacitor-B (chip)	0.0100 50V K RECT.	チップセラ (B)		01
C0171	US062470	Ceramic Capacitor-SL(chip)	470P 50V J RECT.	チップセラ (S L)		01
C0172	US062470	Ceramic Capacitor-SL(chip)	470P 50V J RECT.	チップセラ (S L)		01
C0173	US064100	Ceramic Capacitor-B (chip)	0.0100 50V K RECT.	チップセラ (B)		01
C0174	UF037100	Electrolytic Cap. (chip)	10 16V	チップケミコン		01
C0175	US064100	Ceramic Capacitor-B (chip)	0.0100 50V K RECT.	チップセラ (B)		01
C0176	US062470	Ceramic Capacitor-SL(chip)	470P 50V J RECT.	チップセラ (S L)		01
C0177	US064100	Ceramic Capacitor-B (chip)	0.0100 50V K RECT.	チップセラ (B)		01
C0178	US062470	Ceramic Capacitor-SL(chip)	470P 50V J RECT.	チップセラ (S L)		01
C0179	US062470	Ceramic Capacitor-SL(chip)	470P 50V J RECT.	チップセラ (S L)		01
C0180	US064100	Ceramic Capacitor-B (chip)	0.0100 50V K RECT.	チップセラ (B)		01
C0181	UF037100	Electrolytic Cap. (chip)	10 16V	チップケミコン		01
C0187	US064100	Ceramic Capacitor-B (chip)	0.0100 50V K RECT.	チップセラ (B)		01
C0188	US062470	Ceramic Capacitor-SL(chip)	470P 50V J RECT.	チップセラ (S L)		01
C0189	US064100	Ceramic Capacitor-B (chip)	0.0100 50V K RECT.	チップセラ (B)		01
C0190	US062470	Ceramic Capacitor-SL(chip)	470P 50V J RECT.	チップセラ (S L)		01
C0191	US064100	Ceramic Capacitor-B (chip)	0.0100 50V K RECT.	チップセラ (B)		01
C0192	US062470	Ceramic Capacitor-SL(chip)	470P 50V J RECT.	チップセラ (S L)		01
C0193	US064100	Ceramic Capacitor-B (chip)	0.0100 50V K RECT.	チップセラ (B)		01
C0194	US062470	Ceramic Capacitor-SL(chip)	470P 50V J RECT.	チップセラ (S L)		01
C0197	UF037100	Electrolytic Cap. (chip)	10 16V	チップケミコン		01
C0198	US135100	Ceramic Capacitor-F (chip)	0.1000 16V Z RECT.	チップセラ (F)		01
C0200	US135100	Ceramic Capacitor-F (chip)	0.1000 16V Z RECT.	チップセラ (F)		01
C0202	UF037100	Electrolytic Cap. (chip)	10 16V	チップケミコン		01
C0205	US064100	Ceramic Capacitor-B (chip)	0.0100 50V K RECT.	チップセラ (B)		01
C0206	UF037100	Electrolytic Cap. (chip)	10 16V	チップケミコン		01
C0207	UF037100	Electrolytic Cap. (chip)	10 16V	チップケミコン		01
C0208	US135100	Ceramic Capacitor-F (chip)	0.1000 16V Z RECT.	チップセラ (F)		01
-0210	US135100	Ceramic Capacitor-F (chip)	0.1000 16V Z RECT.	チップセラ (F)		01
C0213	UF037100	Electrolytic Cap. (chip)	10 16V	チップケミコン		01
C0214	US135100	Ceramic Capacitor-F (chip)	0.1000 16V Z RECT.	チップセラ (F)		01
C0215	US135100	Ceramic Capacitor-F (chip)	0.1000 16V Z RECT.	チップセラ (F)		01
C0216	UF037100	Electrolytic Cap. (chip)	10 16V	チップケミコン		01

*: New Parts

RANK: Japan only

REF NO.	PART NO.	DESCRIPTION	部 品 名	REMARKS	QTY	RANK
C0217	US135100	Ceramic Capacitor-F (chip)	0.1000 16V Z RECT.	チ ッ プ セ ラ (F)		01
C0219	UF037100	Electrolytic Cap. (chip)	10 16V	チ ッ プ ケ ミ コ ン		01
C0224	UF037100	Electrolytic Cap. (chip)	10 16V	チ ッ プ ケ ミ コ ン		01
C0225	UF037100	Electrolytic Cap. (chip)	10 16V	チ ッ プ ケ ミ コ ン		01
C0226	UF018100	Electrolytic Cap. (chip)	100 6.3V	チ ッ プ ケ ミ コ ン		01
C0227	US064100	Ceramic Capacitor-B (chip)	0.0100 50V K RECT.	チ ッ プ セ ラ (B)		01
-0231	US064100	Ceramic Capacitor-B (chip)	0.0100 50V K RECT.	チ ッ プ セ ラ (B)		01
C0234	US135100	Ceramic Capacitor-F (chip)	0.1000 16V Z RECT.	チ ッ プ セ ラ (F)		01
C0239	UF037100	Electrolytic Cap. (chip)	10 16V	チ ッ プ ケ ミ コ ン		01
C0240	UF037100	Electrolytic Cap. (chip)	10 16V	チ ッ プ ケ ミ コ ン		01
C0241	US135100	Ceramic Capacitor-F (chip)	0.1000 16V Z RECT.	チ ッ プ セ ラ (F)		01
-0243	US135100	Ceramic Capacitor-F (chip)	0.1000 16V Z RECT.	チ ッ プ セ ラ (F)		01
C0244	UF018100	Electrolytic Cap. (chip)	100 6.3V	チ ッ プ ケ ミ コ ン		01
C0245	V9452200	Electrolytic Cap. (chip)	150.00 4.0V REFLOW	チ ッ プ O S ケ ミ コ ン		03
C0246	US064100	Ceramic Capacitor-B (chip)	0.0100 50V K RECT.	チ ッ プ セ ラ (B)		01
C0247	UF046470	Electrolytic Cap. (chip)	4.7 25V UWX1E4	チ ッ プ ケ ミ コ ン		01
-0249	UF046470	Electrolytic Cap. (chip)	4.7 25V UWX1E4	チ ッ プ ケ ミ コ ン		01
C0250	US063180	Ceramic Capacitor-B (chip)	1800P 50V K RECT.	チ ッ プ セ ラ (B)		01
-0253	US063180	Ceramic Capacitor-B (chip)	1800P 50V K RECT.	チ ッ プ セ ラ (B)		01
C0254	UF046470	Electrolytic Cap. (chip)	4.7 25V UWX1E4	チ ッ プ ケ ミ コ ン		01
C0256	US062820	Ceramic Capacitor-B (chip)	820P 50V K RECT.	チ ッ プ セ ラ (B)		01
C0257	US062820	Ceramic Capacitor-B (chip)	820P 50V K RECT.	チ ッ プ セ ラ (B)		01
C0258	UF046470	Electrolytic Cap. (chip)	4.7 25V UWX1E4	チ ッ プ ケ ミ コ ン		01
C0259	US063820	Ceramic Capacitor-B (chip)	8200P 50V K RECT.	チ ッ プ セ ラ (B)		01
C0260	US063820	Ceramic Capacitor-B (chip)	8200P 50V K RECT.	チ ッ プ セ ラ (B)		01
C0263	US062100	Ceramic Capacitor-SL(chip)	100P 50V J RECT.	チ ッ プ セ ラ (S L)		01
C0264	US062100	Ceramic Capacitor-SL(chip)	100P 50V J RECT.	チ ッ プ セ ラ (S L)		01
C0265	US063180	Ceramic Capacitor-B (chip)	1800P 50V K RECT.	チ ッ プ セ ラ (B)		01
-0268	US063180	Ceramic Capacitor-B (chip)	1800P 50V K RECT.	チ ッ プ セ ラ (B)		01
C0272	US062100	Ceramic Capacitor-SL(chip)	100P 50V J RECT.	チ ッ プ セ ラ (S L)		01
C0273	US062100	Ceramic Capacitor-SL(chip)	100P 50V J RECT.	チ ッ プ セ ラ (S L)		01
C0276	UF037100	Electrolytic Cap. (chip)	10 16V	チ ッ プ ケ ミ コ ン		01
C0283	UF046470	Electrolytic Cap. (chip)	4.7 25V UWX1E4	チ ッ プ ケ ミ コ ン		01
C0285	US064100	Ceramic Capacitor-B (chip)	0.0100 50V K RECT.	チ ッ プ セ ラ (B)		01
C0286	US064100	Ceramic Capacitor-B (chip)	0.0100 50V K RECT.	チ ッ プ セ ラ (B)		01
C0291	UF046470	Electrolytic Cap. (chip)	4.7 25V UWX1E4	チ ッ プ ケ ミ コ ン		01
C0300	US063820	Ceramic Capacitor-B (chip)	8200P 50V K RECT.	チ ッ プ セ ラ (B)		01
C0301	US063820	Ceramic Capacitor-B (chip)	8200P 50V K RECT.	チ ッ プ セ ラ (B)		01
C0313	RD350000	Carbon Resistor (chip)	0 63M J RECT.	チ ッ プ 抵 抗		01
C0315	RD350000	Carbon Resistor (chip)	0 63M J RECT.	チ ッ プ 抵 抗		01
C0316	RD358470	Carbon Resistor (chip)	470.0K 63M J RECT.	チ ッ プ 抵 抗		01
C0318	RD358470	Carbon Resistor (chip)	470.0K 63M J RECT.	チ ッ プ 抵 抗		01
C0319	RD358470	Carbon Resistor (chip)	470.0K 63M J RECT.	チ ッ プ 抵 抗		01
C0321	US064100	Ceramic Capacitor-B (chip)	0.0100 50V K RECT.	チ ッ プ セ ラ (B)		01
C0327	US064100	Ceramic Capacitor-B (chip)	0.0100 50V K RECT.	チ ッ プ セ ラ (B)		01
C0328	US064100	Ceramic Capacitor-B (chip)	0.0100 50V K RECT.	チ ッ プ セ ラ (B)		01
CN001	VB390500	Base Post Connector	PH 9P TE	ベ ー ス ポ ス ト		03
CN002	VB390400	Base Post Connector	PH 8P TE	ベ ー ス ポ ス ト		01
CN003	VB390400	Base Post Connector	PH 8P TE	ベ ー ス ポ ス ト		01
CN004	VB390300	Base Post Connector	PH 7P TE	ベ ー ス ポ ス ト		01
CN005	VB389900	Base Post Connector	PH 3P TE	ベ ー ス ポ ス ト		01
CN006	VB390100	Base Post Connector	PH 5P TE	ベ ー ス ポ ス ト		01
CN007	VB390000	Base Post Connector	PH 4P TE	ベ ー ス ポ ス ト		01
CN008	LB932020	Base Post Connector	VH 2P TE	ベ ー ス ポ ス ト		01
CN009	LB918020	Base Post Connector	XH 2P TE	ベ ー ス ツ キ ポ ス ト		01
CN014	V8389000	Connector	55091 60P TE	基 板 用 コ ネ ク タ		04
CN015	V8389000	Connector	55091 60P TE	基 板 用 コ ネ ク タ		04
CN019	VB390500	Base Post Connector	PH 9P TE	ベ ー ス ポ ス ト		03
CN021	VB390100	Base Post Connector	PH 5P TE	ベ ー ス ポ ス ト		01
CN024	VB390700	Base Post Connector	PH 11P TE	ベ ー ス ポ ス ト		01
D0001	VV925900	Diode	RLS-73 TE-11 TP	ダ イ オ ー ド		01
D0002	VS201100	Diode	D1F60 1A 600V TP	ダ イ オ ー ド		01
-0005	VS201100	Diode	D1F60 1A 600V TP	ダ イ オ ー ド		01
EM001	VD542700	LC Filter	DSS6NF31C223Q93A	L C フィルター E M I		01
EM002	VD542700	LC Filter	DSS6NF31C223Q93A	L C フィルター E M I		01
EM004	VD542700	LC Filter	DSS6NF31C223Q93A	L C フィルター E M I		01
EM005	VD542700	LC Filter	DSS6NF31C223Q93A	L C フィルター E M I		01
EM007	VD542700	LC Filter	DSS6NF31C223Q93A	L C フィルター E M I		01
EM008	VD542700	LC Filter	DSS6NF31C223Q93A	L C フィルター E M I		01
IC002	X2156A00	IC	M66291GIP	I C	USB CONTROLLER	09

*: New Parts

RANK: Japan only

REF NO.	PART NO.	DESCRIPTION	部 品 名	REMARKS	QTY	RANK
IC003	X0176B00	IC	W9864G2EH-7	I C	SDRAM 64M	08
IC006	XV890B00	IC	TC74VHC14FT(EL,K)	I C	INVERTER	01
IC007	XY945A00	IC	TC74VHC32FT	I C	OR	01
IC007	XY945B00	IC	TC74VHC32FT(EL,K)	I C		
IC009	XT744B00	IC	TC74VHCT245AFT(E,K)	I C	TRANSCEIVER	02
IC010	XT744B00	IC	TC74VHCT245AFT(E,K)	I C	TRANSCEIVER	02
IC012	X0060A00	IC	T8F02TB-0102	I C	SWP50	15
IC013	XY364A00	IC	TC7WH32FU(TE12L,F)	I C	OR	01
IC014	X2687A00	IC	HD6417709SHF200B	I C	CPU (SH3)	20
IC014	X2687B00	IC	HD6417709SHF200BV	I C		14
IC017	X7351A00	IC	UPC4570G2-E1-A	I C	OP AMP	01
* IC022	X2760C00	IC	K4S641632K-UC75000	I C	SDRAM 64M	
IC022	X5665A00	IC	M12L64164-7TG	I C		09
* IC022	X5665B00	IC	M12L64164A-7TG	I C		
* IC022	X7753A00	IC	IS42S16400C1-7TL	I C		
IC022	XZ414C00	IC	W9864G6EH-7	I C		07
* IC023	X2760C00	IC	K4S641632K-UC75000	I C	SDRAM 64M	
IC023	X5665A00	IC	M12L64164-7TG	I C		09
* IC023	X5665B00	IC	M12L64164A-7TG	I C		
* IC023	X7753A00	IC	IS42S16400C1-7TL	I C		
IC023	XZ414C00	IC	W9864G6EH-7	I C		07
IC027	XW029A00	IC	AK4393VF-E2	I C	DAC	07
IC029	X2077A00	IC	PCM1730E-1/2K	I C	DAC	07
* IC030	X7447200	IC	MX23L6410ATC-90G	I C	MASK ROM 64M MAIN (Second lot ~)	
* IC031	X7447C00	IC	JS28F640J3C115	I C	FLASH ROM 64M MAIN (First lot)	
IC032	XW674A00	IC	NJM7805DL1A(TE1)	I C	REGULATOR +5V	02
IC033	XF291A00	IC	UPC4570G2-T1-A	I C	OP AMP	03
-035	XF291A00	IC	UPC4570G2-T1-A	I C	OP AMP	03
IC033	X7351A00	IC	UPC4570G2-E1-A	I C		01
-035	X7351A00	IC	UPC4570G2-E1-A	I C		01
IC036	X0609A00	IC	LMS8117AMP-ADJ/NOP	I C	REGULATOR	03
IC038	X0609A00	IC	LMS8117AMP-ADJ/NOP	I C	REGULATOR	03
IC039	XZ642A00	IC	TAR5S33(TE85L,F)	I C	REGULATOR +3.3V	
IC040	XZ216A00	IC	MBM29LV160BE90TNE1	I C	FLASH ROM 16M	12
L0001	V8901200	Chip Solid Inductance	BLM21PG221SN1D	チップソリッドインダクタ		01
L0002	RD250000	Carbon Resistor (chip)	0.0 0.0 J RECT.	チ ッ プ 抵 抗		01
L0003	RD250000	Carbon Resistor (chip)	0.0 0.0 J RECT.	チ ッ プ 抵 抗		01
L0004	V8901200	Chip Solid Inductance	BLM21PG221SN1D	チップソリッドインダクタ		01
L0005	VR579900	Chip Inductance	BK2125HS601-T	チップインダクタ		01
-0009	VR579900	Chip Inductance	BK2125HS601-T	チップインダクタ		01
L0012	VR579900	Chip Inductance	BK2125HS601-T	チップインダクタ		01
-0032	VR579900	Chip Inductance	BK2125HS601-T	チップインダクタ		01
R0003	RD350000	Carbon Resistor (chip)	0 63M J RECT.	チ ッ プ 抵 抗		01
R0004	RD350000	Carbon Resistor (chip)	0 63M J RECT.	チ ッ プ 抵 抗		01
R0005	RD354330	Carbon Resistor (chip)	33.0 63M J RECT.	チ ッ プ 抵 抗		01
-0007	RD354330	Carbon Resistor (chip)	33.0 63M J RECT.	チ ッ プ 抵 抗		01
R0008	RD357100	Carbon Resistor (chip)	10.0K 63M J RECT.	チ ッ プ 抵 抗		01
R0009	RD356100	Carbon Resistor (chip)	1.0K 63M J RECT.	チ ッ プ 抵 抗		01
R0010	RD356100	Carbon Resistor (chip)	1.0K 63M J RECT.	チ ッ プ 抵 抗		01
R0011	RD356150	Carbon Resistor (chip)	1.5K 63M J RECT.	チ ッ プ 抵 抗		01
R0012	RD354270	Carbon Resistor (chip)	27.0 63M J RECT.	チ ッ プ 抵 抗		01
-0017	RD354270	Carbon Resistor (chip)	27.0 63M J RECT.	チ ッ プ 抵 抗		01
R0019	RD357100	Carbon Resistor (chip)	10.0K 63M J RECT.	チ ッ プ 抵 抗		01
-0021	RD357100	Carbon Resistor (chip)	10.0K 63M J RECT.	チ ッ プ 抵 抗		01
R0022	RD356120	Carbon Resistor (chip)	1.2K 63M J RECT.	チ ッ プ 抵 抗		01
R0023	RD359100	Carbon Resistor (chip)	1.0M 63M J RECT.	チ ッ プ 抵 抗		01
R0030	RD357100	Carbon Resistor (chip)	10.0K 63M J RECT.	チ ッ プ 抵 抗		01
R0042	V2747000	Chip Inductance	BLM18PG600SN1	チップインダクタ		
R0043	RD354680	Carbon Resistor (chip)	68.0 63M J RECT.	チ ッ プ 抵 抗		01
R0044	RD354680	Carbon Resistor (chip)	68.0 63M J RECT.	チ ッ プ 抵 抗		01
R0050	RD359100	Carbon Resistor (chip)	1.0M 63M J RECT.	チ ッ プ 抵 抗		01
R0052	RD354680	Carbon Resistor (chip)	68.0 63M J RECT.	チ ッ プ 抵 抗		01
R0055	RD355560	Carbon Resistor (chip)	560.0 63M J RECT.	チ ッ プ 抵 抗		01
R0056	RD354680	Carbon Resistor (chip)	68.0 63M J RECT.	チ ッ プ 抵 抗		01
R0065	RD357100	Carbon Resistor (chip)	10.0K 63M J RECT.	チ ッ プ 抵 抗		01
R0066	RD354680	Carbon Resistor (chip)	68.0 63M J RECT.	チ ッ プ 抵 抗		01
R0067	RD357100	Carbon Resistor (chip)	10.0K 63M J RECT.	チ ッ プ 抵 抗		01
R0069	RD354680	Carbon Resistor (chip)	68.0 63M J RECT.	チ ッ プ 抵 抗		01
R0070	RD357100	Carbon Resistor (chip)	10.0K 63M J RECT.	チ ッ プ 抵 抗		01
R0071	RD354680	Carbon Resistor (chip)	68.0 63M J RECT.	チ ッ プ 抵 抗		01

*: New Parts

RANK: Japan only

REF NO.	PART NO.	DESCRIPTION		部	品	名	REMARKS	QTY	RANK
R0072	RD354680	Carbon Resistor (chip)	68.0 63M J RECT.	チ	ッ	ブ 抵	抵抗		01
R0073	RD357100	Carbon Resistor (chip)	10.0K 63M J RECT.	チ	ッ	ブ 抵	抵抗		01
R0074	RD357100	Carbon Resistor (chip)	10.0K 63M J RECT.	チ	ッ	ブ 抵	抵抗		01
R0075	RD354680	Carbon Resistor (chip)	68.0 63M J RECT.	チ	ッ	ブ 抵	抵抗		01
R0076	RD354680	Carbon Resistor (chip)	68.0 63M J RECT.	チ	ッ	ブ 抵	抵抗		01
R0083	RD354680	Carbon Resistor (chip)	68.0 63M J RECT.	チ	ッ	ブ 抵	抵抗		01
R0087	RD358470	Carbon Resistor (chip)	470.0K 63M J RECT.	チ	ッ	ブ 抵	抵抗		01
R0089	RD358470	Carbon Resistor (chip)	470.0K 63M J RECT.	チ	ッ	ブ 抵	抵抗		01
R0092	RD358470	Carbon Resistor (chip)	470.0K 63M J RECT.	チ	ッ	ブ 抵	抵抗		01
R0094	RD358470	Carbon Resistor (chip)	470.0K 63M J RECT.	チ	ッ	ブ 抵	抵抗		01
R0095	RD358470	Carbon Resistor (chip)	470.0K 63M J RECT.	チ	ッ	ブ 抵	抵抗		01
R0099	RD356100	Carbon Resistor (chip)	1.0K 63M J RECT.	チ	ッ	ブ 抵	抵抗		01
-0102	RD356100	Carbon Resistor (chip)	1.0K 63M J RECT.	チ	ッ	ブ 抵	抵抗		01
R0103	RD357100	Carbon Resistor (chip)	10.0K 63M J RECT.	チ	ッ	ブ 抵	抵抗		01
-0105	RD357100	Carbon Resistor (chip)	10.0K 63M J RECT.	チ	ッ	ブ 抵	抵抗		01
R0106	RD350000	Carbon Resistor (chip)	0 63M J RECT.	チ	ッ	ブ 抵	抵抗		01
-0119	RD350000	Carbon Resistor (chip)	0 63M J RECT.	チ	ッ	ブ 抵	抵抗		01
R0121	RD354680	Carbon Resistor (chip)	68.0 63M J RECT.	チ	ッ	ブ 抵	抵抗		01
R0122	RD354680	Carbon Resistor (chip)	68.0 63M J RECT.	チ	ッ	ブ 抵	抵抗		01
R0123	RD357100	Carbon Resistor (chip)	10.0K 63M J RECT.	チ	ッ	ブ 抵	抵抗		01
R0128	RD357100	Carbon Resistor (chip)	10.0K 63M J RECT.	チ	ッ	ブ 抵	抵抗		01
R0129	RD354680	Carbon Resistor (chip)	68.0 63M J RECT.	チ	ッ	ブ 抵	抵抗		01
R0130	RD357100	Carbon Resistor (chip)	10.0K 63M J RECT.	チ	ッ	ブ 抵	抵抗		01
R0131	RD354680	Carbon Resistor (chip)	68.0 63M J RECT.	チ	ッ	ブ 抵	抵抗		01
R0132	RD354680	Carbon Resistor (chip)	68.0 63M J RECT.	チ	ッ	ブ 抵	抵抗		01
R0133	RD357100	Carbon Resistor (chip)	10.0K 63M J RECT.	チ	ッ	ブ 抵	抵抗		01
R0134	RD357100	Carbon Resistor (chip)	10.0K 63M J RECT.	チ	ッ	ブ 抵	抵抗		01
R0136	RD354680	Carbon Resistor (chip)	68.0 63M J RECT.	チ	ッ	ブ 抵	抵抗		01
R0138	RD357100	Carbon Resistor (chip)	10.0K 63M J RECT.	チ	ッ	ブ 抵	抵抗		01
R0139	RD354680	Carbon Resistor (chip)	68.0 63M J RECT.	チ	ッ	ブ 抵	抵抗		01
R0140	RD357100	Carbon Resistor (chip)	10.0K 63M J RECT.	チ	ッ	ブ 抵	抵抗		01
R0141	RD356100	Carbon Resistor (chip)	1.0K 63M J RECT.	チ	ッ	ブ 抵	抵抗		01
R0142	RD354680	Carbon Resistor (chip)	68.0 63M J RECT.	チ	ッ	ブ 抵	抵抗		01
R0143	RD357470	Carbon Resistor (chip)	47.0K 63M J RECT.	チ	ッ	ブ 抵	抵抗		01
R0144	RD357100	Carbon Resistor (chip)	10.0K 63M J RECT.	チ	ッ	ブ 抵	抵抗		01
R0146	RD354680	Carbon Resistor (chip)	68.0 63M J RECT.	チ	ッ	ブ 抵	抵抗		01
R0148	RD357100	Carbon Resistor (chip)	10.0K 63M J RECT.	チ	ッ	ブ 抵	抵抗		01
R0149	RD354680	Carbon Resistor (chip)	68.0 63M J RECT.	チ	ッ	ブ 抵	抵抗		01
R0150	RD354680	Carbon Resistor (chip)	68.0 63M J RECT.	チ	ッ	ブ 抵	抵抗		01
R0151	RD357100	Carbon Resistor (chip)	10.0K 63M J RECT.	チ	ッ	ブ 抵	抵抗		01
R0152	RD357100	Carbon Resistor (chip)	10.0K 63M J RECT.	チ	ッ	ブ 抵	抵抗		01
R0153	RD354680	Carbon Resistor (chip)	68.0 63M J RECT.	チ	ッ	ブ 抵	抵抗		01
R0156	RD357100	Carbon Resistor (chip)	10.0K 63M J RECT.	チ	ッ	ブ 抵	抵抗		01
R0157	RD354560	Carbon Resistor (chip)	56.0 63M J RECT.	チ	ッ	ブ 抵	抵抗		01
R0158	RD354680	Carbon Resistor (chip)	68.0 63M J RECT.	チ	ッ	ブ 抵	抵抗		01
R0159	RD357100	Carbon Resistor (chip)	10.0K 63M J RECT.	チ	ッ	ブ 抵	抵抗		01
R0160	RD357100	Carbon Resistor (chip)	10.0K 63M J RECT.	チ	ッ	ブ 抵	抵抗		01
R0161	RD354680	Carbon Resistor (chip)	68.0 63M J RECT.	チ	ッ	ブ 抵	抵抗		01
R0162	RD357100	Carbon Resistor (chip)	10.0K 63M J RECT.	チ	ッ	ブ 抵	抵抗		01
R0163	RD354680	Carbon Resistor (chip)	68.0 63M J RECT.	チ	ッ	ブ 抵	抵抗		01
R0164	RD357100	Carbon Resistor (chip)	10.0K 63M J RECT.	チ	ッ	ブ 抵	抵抗		01
R0165	RD354680	Carbon Resistor (chip)	68.0 63M J RECT.	チ	ッ	ブ 抵	抵抗		01
R0166	RD354680	Carbon Resistor (chip)	68.0 63M J RECT.	チ	ッ	ブ 抵	抵抗		01
R0167	RD357100	Carbon Resistor (chip)	10.0K 63M J RECT.	チ	ッ	ブ 抵	抵抗		01
R0168	RD354680	Carbon Resistor (chip)	68.0 63M J RECT.	チ	ッ	ブ 抵	抵抗		01
R0169	RD357100	Carbon Resistor (chip)	10.0K 63M J RECT.	チ	ッ	ブ 抵	抵抗		01
R0170	RD354680	Carbon Resistor (chip)	68.0 63M J RECT.	チ	ッ	ブ 抵	抵抗		01
R0171	RD357100	Carbon Resistor (chip)	10.0K 63M J RECT.	チ	ッ	ブ 抵	抵抗		01
R0173	RD357100	Carbon Resistor (chip)	10.0K 63M J RECT.	チ	ッ	ブ 抵	抵抗		01
R0174	RD355100	Carbon Resistor (chip)	100.0 63M J RECT.	チ	ッ	ブ 抵	抵抗		01
-0176	RD355100	Carbon Resistor (chip)	100.0 63M J RECT.	チ	ッ	ブ 抵	抵抗		01
R0177	RD355220	Carbon Resistor (chip)	220.0 63M J RECT.	チ	ッ	ブ 抵	抵抗		01
R0178	RD357100	Carbon Resistor (chip)	10.0K 63M J RECT.	チ	ッ	ブ 抵	抵抗		01
R0179	RD357100	Carbon Resistor (chip)	10.0K 63M J RECT.	チ	ッ	ブ 抵	抵抗		01
R0180	RD358470	Carbon Resistor (chip)	470.0K 63M J RECT.	チ	ッ	ブ 抵	抵抗		01
R0181	RD355330	Carbon Resistor (chip)	330.0 63M J RECT.	チ	ッ	ブ 抵	抵抗		01
R0182	RD357100	Carbon Resistor (chip)	10.0K 63M J RECT.	チ	ッ	ブ 抵	抵抗		01
R0183	RD358470	Carbon Resistor (chip)	470.0K 63M J RECT.	チ	ッ	ブ 抵	抵抗		01
R0184	RD357100	Carbon Resistor (chip)	10.0K 63M J RECT.	チ	ッ	ブ 抵	抵抗		01
R0185	RD356100	Carbon Resistor (chip)	1.0K 63M J RECT.	チ	ッ	ブ 抵	抵抗		01

*: New Parts

RANK: Japan only

REF NO.	PART NO.	DESCRIPTION		部	品	名	REMARKS	QTY	RANK
R0186	RD356100	Carbon Resistor (chip)	1.0K 63M J RECT.	チ	ッ	ブ	抵抗		01
R0189	RD354680	Carbon Resistor (chip)	68.0 63M J RECT.	チ	ッ	ブ	抵抗		01
-0192	RD354680	Carbon Resistor (chip)	68.0 63M J RECT.	チ	ッ	ブ	抵抗		01
R0193	RD355470	Carbon Resistor (chip)	470.0 63M J RECT.	チ	ッ	ブ	抵抗		01
R0194	RD357100	Carbon Resistor (chip)	10.0K 63M J RECT.	チ	ッ	ブ	抵抗		01
R0195	RD357220	Carbon Resistor (chip)	22.0K 63M J RECT.	チ	ッ	ブ	抵抗		01
R0196	RD358120	Carbon Resistor (chip)	120.0K 63M J RECT.	チ	ッ	ブ	抵抗		01
R0197	RD355100	Carbon Resistor (chip)	100.0 63M J RECT.	チ	ッ	ブ	抵抗		01
R0198	RD355100	Carbon Resistor (chip)	100.0 63M J RECT.	チ	ッ	ブ	抵抗		01
R0199	RD356100	Carbon Resistor (chip)	1.0K 63M J RECT.	チ	ッ	ブ	抵抗		01
R0200	RD359100	Carbon Resistor (chip)	1.0M 63M J RECT.	チ	ッ	ブ	抵抗		01
R0201	RD357100	Carbon Resistor (chip)	10.0K 63M J RECT.	チ	ッ	ブ	抵抗		01
-0204	RD357100	Carbon Resistor (chip)	10.0K 63M J RECT.	チ	ッ	ブ	抵抗		01
R0206	RD357100	Carbon Resistor (chip)	10.0K 63M J RECT.	チ	ッ	ブ	抵抗		01
-0211	RD357100	Carbon Resistor (chip)	10.0K 63M J RECT.	チ	ッ	ブ	抵抗		01
R0216	RD350000	Carbon Resistor (chip)	0 63M J RECT.	チ	ッ	ブ	抵抗		01
R0217	RD350000	Carbon Resistor (chip)	0 63M J RECT.	チ	ッ	ブ	抵抗		01
R0223	RD357100	Carbon Resistor (chip)	10.0K 63M J RECT.	チ	ッ	ブ	抵抗		01
R0224	RD350000	Carbon Resistor (chip)	0 63M J RECT.	チ	ッ	ブ	抵抗		01
R0226	RD350000	Carbon Resistor (chip)	0 63M J RECT.	チ	ッ	ブ	抵抗		01
R0230	RD354680	Carbon Resistor (chip)	68.0 63M J RECT.	チ	ッ	ブ	抵抗		01
R0232	RD356100	Carbon Resistor (chip)	1.0K 63M J RECT.	チ	ッ	ブ	抵抗		01
R0233	RD357150	Carbon Resistor (chip)	15.0K 63M J RECT.	チ	ッ	ブ	抵抗		01
R0234	RD356820	Carbon Resistor (chip)	8.2K 63M J RECT.	チ	ッ	ブ	抵抗		01
R0235	RD355220	Carbon Resistor (chip)	220.0 63M J RECT.	チ	ッ	ブ	抵抗		01
R0236	RD356120	Carbon Resistor (chip)	1.2K 63M J RECT.	チ	ッ	ブ	抵抗		01
R0237	RD356470	Carbon Resistor (chip)	4.7K 63M J RECT.	チ	ッ	ブ	抵抗		01
R0238	RD356100	Carbon Resistor (chip)	1.0K 63M J RECT.	チ	ッ	ブ	抵抗		01
R0239	RD356270	Carbon Resistor (chip)	2.7K 63M J RECT.	チ	ッ	ブ	抵抗		01
R0249	RD356180	Carbon Resistor (chip)	1.8K 63M J RECT.	チ	ッ	ブ	抵抗		01
-0252	RD356180	Carbon Resistor (chip)	1.8K 63M J RECT.	チ	ッ	ブ	抵抗		01
R0255	RD356470	Carbon Resistor (chip)	4.7K 63M J RECT.	チ	ッ	ブ	抵抗		01
-0258	RD356470	Carbon Resistor (chip)	4.7K 63M J RECT.	チ	ッ	ブ	抵抗		01
R0259	RD356220	Carbon Resistor (chip)	2.2K 63M J RECT.	チ	ッ	ブ	抵抗		01
-0262	RD356220	Carbon Resistor (chip)	2.2K 63M J RECT.	チ	ッ	ブ	抵抗		01
R0263	RD357150	Carbon Resistor (chip)	15.0K 63M J RECT.	チ	ッ	ブ	抵抗		01
R0264	RD350000	Carbon Resistor (chip)	0 63M J RECT.	チ	ッ	ブ	抵抗		01
R0265	RD357150	Carbon Resistor (chip)	15.0K 63M J RECT.	チ	ッ	ブ	抵抗		01
R0266	RD350000	Carbon Resistor (chip)	0 63M J RECT.	チ	ッ	ブ	抵抗		01
R0267	RD357150	Carbon Resistor (chip)	15.0K 63M J RECT.	チ	ッ	ブ	抵抗		01
R0268	RD356470	Carbon Resistor (chip)	4.7K 63M J RECT.	チ	ッ	ブ	抵抗		01
R0269	RD356470	Carbon Resistor (chip)	4.7K 63M J RECT.	チ	ッ	ブ	抵抗		01
R0270	RD357150	Carbon Resistor (chip)	15.0K 63M J RECT.	チ	ッ	ブ	抵抗		01
R0271	RD356470	Carbon Resistor (chip)	4.7K 63M J RECT.	チ	ッ	ブ	抵抗		01
R0272	RD356470	Carbon Resistor (chip)	4.7K 63M J RECT.	チ	ッ	ブ	抵抗		01
R0273	RD356220	Carbon Resistor (chip)	2.2K 63M J RECT.	チ	ッ	ブ	抵抗		01
R0274	RD356220	Carbon Resistor (chip)	2.2K 63M J RECT.	チ	ッ	ブ	抵抗		01
R0276	RD356220	Carbon Resistor (chip)	2.2K 63M J RECT.	チ	ッ	ブ	抵抗		01
R0277	RD355390	Carbon Resistor (chip)	390.0 63M J RECT.	チ	ッ	ブ	抵抗		01
R0278	RD355390	Carbon Resistor (chip)	390.0 63M J RECT.	チ	ッ	ブ	抵抗		01
R0279	RD356220	Carbon Resistor (chip)	2.2K 63M J RECT.	チ	ッ	ブ	抵抗		01
R0280	RD355390	Carbon Resistor (chip)	390.0 63M J RECT.	チ	ッ	ブ	抵抗		01
R0281	RD355390	Carbon Resistor (chip)	390.0 63M J RECT.	チ	ッ	ブ	抵抗		01
R0285	RD350000	Carbon Resistor (chip)	0 63M J RECT.	チ	ッ	ブ	抵抗		01
R0296	RD355100	Carbon Resistor (chip)	100.0 63M J RECT.	チ	ッ	ブ	抵抗		01
R0297	RD355100	Carbon Resistor (chip)	100.0 63M J RECT.	チ	ッ	ブ	抵抗		01
R0300	RD354470	Carbon Resistor (chip)	47.0 63M J RECT.	チ	ッ	ブ	抵抗		01
R0301	RD354470	Carbon Resistor (chip)	47.0 63M J RECT.	チ	ッ	ブ	抵抗		01
R0307	RD358100	Carbon Resistor (chip)	100.0K 63M J RECT.	チ	ッ	ブ	抵抗		01
R0308	RD358100	Carbon Resistor (chip)	100.0K 63M J RECT.	チ	ッ	ブ	抵抗		01
R0311	RD356100	Carbon Resistor (chip)	1.0K 63M J RECT.	チ	ッ	ブ	抵抗		01
R0312	RD356100	Carbon Resistor (chip)	1.0K 63M J RECT.	チ	ッ	ブ	抵抗		01
R0337	RD355100	Carbon Resistor (chip)	100.0 63M J RECT.	チ	ッ	ブ	抵抗		01
-0339	RD355100	Carbon Resistor (chip)	100.0 63M J RECT.	チ	ッ	ブ	抵抗		01
R0347	VY657200	Chip Inductance	600 BK1608HM601	チ	ッ	ブ	抵抗		01
-0349	VY657200	Chip Inductance	600 BK1608HM601	チ	ッ	ブ	抵抗		01
R0370	RD357220	Carbon Resistor (chip)	22.0K 63M J RECT.	チ	ッ	ブ	抵抗		01
RA001	RE047100	Resistor Array	10KX4	抵抗	抵抗	ア	レイ		01
RA002	RE044680	Resistor Array	68X4	抵抗	抵抗	ア	レイ		01
-004	RE044680	Resistor Array	68X4	抵抗	抵抗	ア	レイ		01

*: New Parts

RANK: Japan only

REF NO.	PART NO.	DESCRIPTION		部 品 名	REMARKS	QTY	RANK
RA005	RE047100	Resistor Array	10KX4	抵 抗 ア レ イ			01
RA006	RE047100	Resistor Array	10KX4	抵 抗 ア レ イ			01
RA009	RE047100	Resistor Array	10KX4	抵 抗 ア レ イ			01
RA010	RE047100	Resistor Array	10KX4	抵 抗 ア レ イ			01
RA012	RE047100	Resistor Array	10KX4	抵 抗 ア レ イ			01
RA013	RE044680	Resistor Array	68X4	抵 抗 ア レ イ			01
-026	RE044680	Resistor Array	68X4	抵 抗 ア レ イ			01
RA027	RE047100	Resistor Array	10KX4	抵 抗 ア レ イ			01
RA028	RE044680	Resistor Array	68X4	抵 抗 ア レ イ			01
RA029	RE044680	Resistor Array	68X4	抵 抗 ア レ イ			01
RA030	RE047100	Resistor Array	10KX4	抵 抗 ア レ イ			01
RA032	RE047100	Resistor Array	10KX4	抵 抗 ア レ イ			01
RO265	RD357150	Carbon Resistor (chip)	15.0K 63M J RECT.	チ ッ プ 抵 抗			01
SW001	V3026900	Jumper Switch	CHS-01 TA1	ジ ャ ン パ ー S W	J/E Select		02
TR001	VV925400	Transistor	2SC2712-GR(TE85L,F)	ト ラ ン ジ ス タ			01
-003	VV925400	Transistor	2SC2712-GR(TE85L,F)	ト ラ ン ジ ス タ			01
TR004	VJ927200	Transistor	2SA1162-Y(TE85R,F)	ト ラ ン ジ ス タ			01
X0001	V4093500	Quartz Crystal Unit	6MHz SMD-49	水 晶 振 動 子			03
X0003	VP864800	Quartz Crystal Unit	11.2896MHz SMD-49	水 晶 振 動 子			04
X0005	VP864900	Quartz Crystal Unit	16MHz SMD-49	水 晶 振 動 子			04
	--	Circuit Board	FU60	F U 6 0 シ ー ト	J (VT15140)(VT15170) (XQ395A0/B0)		
	--	Circuit Board	FU60	F U 6 0 シ ー ト	U (VT15150)(VT15180) (XQ395A0/B0)		
	--	Circuit Board	FU60	F U 6 0 シ ー ト	E,B,A,K (VT15160)(VT15190) (XQ395A0/B0)		
△	VT308100	AC Inlet	2P CCT9302-0101F	A C イ ン レ ッ ト 2 P	J,E,B,A,K AC INLET		02
△	VT308200	AC Inlet	2P CCT9302-0201F	A C イ ン レ ッ ト 2 P	U AC INLET		02
	LB201530	Fuse Holder	PC-FH1	ヒ ュ ー ズ ホ ル ダ			01
	--	Jumper Wire	0.55	ジ ャ ン パ ー 線	(VD04170)		
△	C0001	V7682800	Capacitor	規 格 認 定 コ ン K H			01
△	C0002	V7683000	Capacitor	規 格 認 定 コ ン K H			01
△	C0003	V7683000	Capacitor	規 格 認 定 コ ン K H			01
	CN001	LB932030	Base Post Connector	VH 3P TE	ベ ー ス ポ ス ト		01
	CN002	LB932060	Base Post Connector	VH 6P TE	ベ ー ス ポ ス ト		01
△	F0001	KB003590	Fuse	3.00A JU 250V	ヒ ュ ー ズ	J,U	01
△	F0001	WG493700	Fuse	3.00A JU	ヒ ュ ー ズ		01
△	F0001	KB003060	Fuse	1.60A S 250V	ヒ ュ ー ズ	E,B,A,K	01
	J0001	--	Jumper Wire	0.55	ジ ャ ン パ ー 線	(VD04170)	
	L0001	--	Jumper Wire	0.55	ジ ャ ン パ ー 線	(VD04170)	
	L0002	--	Jumper Wire	0.55	ジ ャ ン パ ー 線	(VD04170)	
	L0003	VF790900	Coil	SU10V-D20010 10uH	コ イ ル 1 0 U		03
	V8514800	Circuit Board	GHD EBUS L	G H D E B U S シ ー ト L	(XZ138D0)		13
	V6588200	Circuit Board	MK SUB	M K サ ブ シ ー ト	(XZ142B0)		10
	--	Nonwoven Fabric Cloth		不 織 布	(VU45960)		
C1	UI527470	Electrolytic Cap.	47.00 10.0V	ケ ミ コ ン			01
C2	VF611200	Monolithic Ceramic Cap.	0.100 50V Z RX TP	積 層 セ ラ コ ン			02
CN1	VB390300	Base Post Connector	PH 7P TE	ベ ー ス ポ ス ト			01
CN2	VK025300	Wire Trap	52147 9P TE	ワ イ ヤ ー ト ラ ッ プ			01
CN3	VK025600	Wire Trap	52147 12P TE	ワ イ ヤ ー ト ラ ッ プ			01
D1	VB941200	Diode	1SS133,1SS176 TE	ダ イ オ ー ド	A-1-F#2		01
-71	VB941200	Diode	1SS133,1SS176 TE	ダ イ オ ー ド			01
J	--	Jumper Wire	0.55	ジ ャ ン パ ー 線	(VA07890)		
J7	--	Jumper Wire	0.55	ジ ャ ン パ ー 線	(VA07890)		
	V6588200	Circuit Board	MK SUB	M K サ ブ シ ー ト	(V658810)(XZ142B0)		10
C0001	US135100	Ceramic Capacitor-F (chip)	0.1000 16V Z RECT.	チ ッ プ セ ラ (F)			01
-0004	US135100	Ceramic Capacitor-F (chip)	0.1000 16V Z RECT.	チ ッ プ セ ラ (F)			01
C0005	US063100	Ceramic Capacitor-B (chip)	1000P 50V K RECT.	チ ッ プ セ ラ (B)			01
CN005	V6954300	Connector	12P PFA105-122A01	中 継 タ ー ミ ナ ル			03
CN003	V6954400	Connector	24P PFA105-242A01	中 継 タ ー ミ ナ ル			03
IC001	X0031200	IC	UPD780031AYGK-N04	イ ン テ ギ テ ー ト	LKS		05
L0001	VR243700	Chip Inductance	56U LEM2520 T 560J	巻 線 チ ッ プ イ ン ダ ク タ			01
R0001	RD357100	Carbon Resistor (chip)	10.0K 63M J RECT.	チ ッ プ 抵 抗			01
R0005	RD356100	Carbon Resistor (chip)	1.0K 63M J RECT.	チ ッ プ 抵 抗			01
R0006	RD354470	Carbon Resistor (chip)	47.0 63M J RECT.	チ ッ プ 抵 抗			01
-0008	RD354470	Carbon Resistor (chip)	47.0 63M J RECT.	チ ッ プ 抵 抗			01
RA001	RE047100	Resistor Array	10KX4	抵 抗 ア レ イ			01

*: New Parts

RANK: Japan only

REF NO.	PART NO.	DESCRIPTION		部 品 名	REMARKS	QTY	RANK
-0004	RE047100	Resistor Array	10KX4	抵 抗 ア レ イ			01
X0001	V6150500	Ceramic Resonator	8.38MHz EFOS8384E5	セ ラ ミ ッ ク 振 動 子			01
	V8521500	Circuit Board	GHD H	G H D シ ー ト H	(X2218A0)		08
	--	Nonwoven Fabric Cloth		不 織 布	(V852160)		
CN1	VK025600	Wire Trap	52147 12P TE	ワ イ ヤ ー ト ラ ッ プ	C#5-C7		01
CN3	VK024800	Wire Trap	52147 4P TE	ワ イ ヤ ー ト ラ ッ プ			01
D61	VB941200	Diode	1SS133,1SS176 TE	ダ イ オ ー ド			01
-108	VB941200	Diode	1SS133,1SS176 TE	ダ イ オ ー ド			01
J	--	Jumper Wire	0.55	ジ ャ ン パ ー 線	(VA07890)		
	V8521400	Circuit Board	GHD M	G H D シ ー ト M	(X2217A0)		08
	--	Nonwoven Fabric Cloth		不 織 布	(V846990)		
CN1	VK025600	Wire Trap	52147 12P TE	ワ イ ヤ ー ト ラ ッ プ	G2-C5		01
CN2	VK025600	Wire Trap	52147 12P TE	ワ イ ヤ ー ト ラ ッ プ			01
CN3	VK025300	Wire Trap	52147 9P TE	ワ イ ヤ ー ト ラ ッ プ			01
CN4	VK024800	Wire Trap	52147 4P TE	ワ イ ヤ ー ト ラ ッ プ			01
D1	VB941200	Diode	1SS133,1SS176 TE	ダ イ オ ー ド			01
-60	VB941200	Diode	1SS133,1SS176 TE	ダ イ オ ー ド			01
J	--	Jumper Wire	0.55	ジ ャ ン パ ー 線	(VA07890)		
*	WG946400	Circuit Board	HP	H P シ ー ト	(WG94630)(XQ390A0)		
	--	Jumper Wire	0.55	ジ ャ ン パ ー 線	(VD04170)		
C0001	FG644100	Ceramic Capacitor-F	0.0100 50V Z RX TP	セ ラ コ ン (F)			01
C0004	FG644100	Ceramic Capacitor-F	0.0100 50V Z RX TP	セ ラ コ ン (F)			01
C0005	FG644100	Ceramic Capacitor-F	0.0100 50V Z RX TP	セ ラ コ ン (F)			01
C0006	--	Jumper Wire	0.55	ジ ャ ン パ ー 線	(VD04170)		
C0007	--	Jumper Wire	0.55	ジ ャ ン パ ー 線	(VD04170)		
CN001	VB390300	Base Post Connector	PH 7P TE	ベ ー ス ポ ス ト			01
FL004	VB835000	Coil	FL05RD200AT 20uH	コ イ ル 2 0 U	PHONES		01
-006	VB835000	Coil	FL05RD200AT 20uH	コ イ ル 2 0 U			01
FL004	VB971100	Coil	FL5R200QN 20uH	コ イ ル 2 0 U			01
-006	VB971100	Coil	FL5R200QN 20uH	コ イ ル 2 0 U			01
HP002	LB101870	Phone Jack	YKB21-5006	ホ ー ン コ ネ ク タ			03
R0003	--	Jumper Wire	0.55	ジ ャ ン パ ー 線	(VD04170)		
R0004	--	Jumper Wire	0.55	ジ ャ ン パ ー 線	(VD04170)		
WH001	--	GND Wire Black		ア ー ス 束 線	(WA11950)		
	--	Circuit Board	MA80S	M A 8 0 S シ ー ト	J,U (WB55500)(WB55440)		
	--	Circuit Board	MA80S	M A 8 0 S シ ー ト	E,B,A,K (WC03050)(WC03060)		
	VT740000	Support, PCB	3T-9 T=9	三 端 子 用 ス ペ ー サ ー	(X4384D0/E0)		
	--	Silicon Grease	X-113A G746	シ リ コ ン グ リ ス	(VA79810)		
	--	Insulation Sheet	PT-SS	放 熱 シ ー ト (P)	(WE75290)		
	--	Jumper Wire	0.55	ジ ャ ン パ ー 線	(VD04170)		
C0001	V7545000	Monolithic Ceramic Cap.	0.022 250V K RECT.	チ ッ プ 積 層 セ ラ コ ン			01
-0003	V7545000	Monolithic Ceramic Cap.	0.022 250V K RECT.	チ ッ プ 積 層 セ ラ コ ン			01
C0005	VL232400	Electrolytic Cap.	3300 35.0V	ケ ミ コ ン			04
-0008	VL232400	Electrolytic Cap.	3300 35.0V	ケ ミ コ ン			04
C0009	US145100	Ceramic Capacitor-F (chip)	0.1000 25V Z RECT.	チ ッ プ セ ラ (F)			01
C0010	US063100	Ceramic Capacitor-B (chip)	1000P 50V K RECT.	チ ッ プ セ ラ (B)			01
C0011	UN866100	Electrolytic Cap.-BP	1.00 50.0V RX TP	B P ケ ミ コ ン			01
C0012	US062220	Ceramic Capacitor-SL(chip)	220P 50V J RECT.	チ ッ プ セ ラ (S L)			01
C0013	UR838100	Electrolytic Cap.	100.00 16.0V RX TP	ケ ミ コ ン			01
C0015	UR868100	Electrolytic Cap.	100.00 50.0V RX TP	ケ ミ コ ン			01
C0016	UR867100	Electrolytic Cap.	10.00 50.0V RX TP	ケ ミ コ ン			01
C0017	UR867100	Electrolytic Cap.	10.00 50.0V RX TP	ケ ミ コ ン			01
C0018	UR868100	Electrolytic Cap.	100.00 50.0V RX TP	ケ ミ コ ン			01
C0019	V5333500	Ceramic Capacitor-B (chip)	10.0 6.3V K RECT.	チ ッ プ セ ラ (B)			01
C0020	UR838100	Electrolytic Cap.	100.00 16.0V RX TP	ケ ミ コ ン			01
C0021	US062220	Ceramic Capacitor-SL(chip)	220P 50V J RECT.	チ ッ プ セ ラ (S L)			01
C0022	US063100	Ceramic Capacitor-B (chip)	1000P 50V K RECT.	チ ッ プ セ ラ (B)			01
C0023	UN866100	Electrolytic Cap.-BP	1.00 50.0V RX TP	B P ケ ミ コ ン			01
C0025	US145100	Ceramic Capacitor-F (chip)	0.1000 25V Z RECT.	チ ッ プ セ ラ (F)			01
-0028	US145100	Ceramic Capacitor-F (chip)	0.1000 25V Z RECT.	チ ッ プ セ ラ (F)			01
C0029	UN838100	Electrolytic Cap.-BP	100.00 16.0V RX TP	B P ケ ミ コ ン			01
C0030	V5333500	Ceramic Capacitor-B (chip)	10.0 6.3V K RECT.	チ ッ プ セ ラ (B)			01
C0031	VL232300	Electrolytic Cap.	2200 25.0V FORM.	ケ ミ コ ン			03
C0032	VL232300	Electrolytic Cap.	2200 25.0V FORM.	ケ ミ コ ン			03

*: New Parts

RANK: Japan only

REF NO.	PART NO.	DESCRIPTION	部 品 名	REMARKS	QTY	RANK
C0033	UR866100	Electrolytic Cap.	1.00 50.0V RX TP	ケ ミ コ ン		01
-0036	UR866100	Electrolytic Cap.	1.00 50.0V RX TP	ケ ミ コ ン		01
C0037	US145100	Ceramic Capacitor-F (chip)	0.1000 25V Z RECT.	チ ッ プ セ ラ (F)		01
-0040	US145100	Ceramic Capacitor-F (chip)	0.1000 25V Z RECT.	チ ッ プ セ ラ (F)		01
C0041	VL232400	Electrolytic Cap.	3300 35.0V	ケ ミ コ ン		04
C0043	US145100	Ceramic Capacitor-F (chip)	0.1000 25V Z RECT.	チ ッ プ セ ラ (F)		01
C0047	UR866330	Electrolytic Cap.	3.30 50.0V RX TP	ケ ミ コ ン		01
C0051	VL232400	Electrolytic Cap.	3300 35.0V	ケ ミ コ ン		04
C0052	WB477000	Electrolytic Cap.	330.00 35.0V RX TP	ケ ミ コ ン Z L		01
C0052	WC303700	Electrolytic Cap.	330.00 35.0V RX TP	ケ ミ コ ン K Z E		01
C0054	WB476900	Electrolytic Cap.	470.00 16.0V RX TP	ケ ミ コ ン Z L		01
C0054	WC303600	Electrolytic Cap.	470.00 16.0V RX TP	ケ ミ コ ン K Z E		01
C0055	WB476900	Electrolytic Cap.	470.00 16.0V RX TP	ケ ミ コ ン Z L		01
C0055	WC303600	Electrolytic Cap.	470.00 16.0V RX TP	ケ ミ コ ン K Z E		01
C0059	US061270	Ceramic Capacitor-CH(chip)	27P 50V J RECT.	チ ッ プ セ ラ (C H)		01
C0060	US061270	Ceramic Capacitor-CH(chip)	27P 50V J RECT.	チ ッ プ セ ラ (C H)		01
CN001	LB932080	Base Post Connector	VH 8P TE	ベ ー ス ポ ス ト		01
CN003	VB390000	Base Post Connector	PH 4P TE	ベ ー ス ポ ス ト		01
CN004	LB918040	Base Post Connector	XH 4P TE	ベ ー ス ツ キ ポ ス ト		01
CN005	LB932040	Base Post Connector	VH 4P TE	ベ ー ス ポ ス ト		01
CN006	VB390500	Base Post Connector	PH 9P TE	ベ ー ス ポ ス ト		03
CN008	LB918020	Base Post Connector	XH 2P TE	ベ ー ス ツ キ ポ ス ト		01
CN009	LB918040	Base Post Connector	XH 4P TE	ベ ー ス ツ キ ポ ス ト		01
CN010	VB390000	Base Post Connector	PH 4P TE	ベ ー ス ポ ス ト		01
D0001	WB520600	Diode	10EDB40-TA2B5 TE-5	ダ イ オ ー ド		01
D0001	WD009700	Diode	10EDB40-TA1B2 TE-2	ダ イ オ ー ド		01
D0002	WB520600	Diode	10EDB40-TA2B5 TE-5	ダ イ オ ー ド		01
D0002	WD009700	Diode	10EDB40-TA1B2 TE-2	ダ イ オ ー ド		01
D0003	VT332900	Diode	1SS355 TE-17 TP	ダ イ オ ー ド		01
-0005	VT332900	Diode	1SS355 TE-17 TP	ダ イ オ ー ド		01
D0008	VT332900	Diode	1SS355 TE-17 TP	ダ イ オ ー ド		01
D0009	VT332900	Diode	1SS355 TE-17 TP	ダ イ オ ー ド		01
DB001	VQ111500	Diode Stack	D3SBA20-7103 4.0A	ダ イ オ ー ド ス タ ッ ク		03
DB002	VQ111500	Diode Stack	D3SBA20-7103 4.0A	ダ イ オ ー ド ス タ ッ ク		03
DB003	VR253700	Diode Stack	S1NB20 1.0A 200V	ダ イ オ ー ド ス タ ッ ク		02
F0001	WC050700	Fuse Clip	EYF52BCY	ヒ ュ ー ス ク リ ッ プ		01
-0003	WC050700	Fuse Clip	EYF52BCY	ヒ ュ ー ス ク リ ッ プ		01
FS1	KB003630	Fuse	5.00A JU 125V	ヒ ュ ー ズ	J,U	01
-3	KB003630	Fuse	5.00A JU 125V	ヒ ュ ー ズ	J,U	01
FS1	WG410400	Fuse	5A JU	ヒ ュ ー ズ		01
-3	WG410400	Fuse	5A JU	ヒ ュ ー ズ		01
FS1	KB003240	Fuse	5.00A S 250V	ヒ ュ ー ズ	E,B,A,K	01
-3	KB003240	Fuse	5.00A S 250V	ヒ ュ ー ズ	E,B,A,K	01
IC003	XJ602A00	IC	NJM78M12FA	イ	C	02
IC004	XD343A00	IC	NJM79M12FA	イ	C	03
IC006	X4375A00	IC	STK402-040S	イ	C	07
IC007	X4404A00	Hybrid IC	MPD6S004S	ハ イ ブ リ ッ ト	DC-DC CONVERTER	09
J0004	--	Jumper Wire	0.55	ジ ャ ン パ ー	(VD04170)	
-0006	--	Jumper Wire	0.55	ジ ャ ン パ ー	(VD04170)	
R0001	VU253100	Fuse Resistor	0.47 1/2 J	ヒ ュ ー ズ 抵 抗		01
R0002	VU253100	Fuse Resistor	0.47 1/2 J	ヒ ュ ー ズ 抵 抗		01
R0003	RD156100	Carbon Resistor (chip)	1.0K 1/4 J TP	チ ッ プ 抵 抗		01
R0005	RD356470	Carbon Resistor (chip)	4.7K 63M J RECT.	チ ッ プ 抵 抗		01
R0006	RD357100	Carbon Resistor (chip)	10.0K 63M J RECT.	チ ッ プ 抵 抗		01
R0007	RD356220	Carbon Resistor (chip)	2.2K 63M J RECT.	チ ッ プ 抵 抗		01
R0010	RD355560	Carbon Resistor (chip)	560.0 63M J RECT.	チ ッ プ 抵 抗		01
R0011	RD357100	Carbon Resistor (chip)	10.0K 63M J RECT.	チ ッ プ 抵 抗		01
R0012	RD355390	Carbon Resistor (chip)	390.0 63M J RECT.	チ ッ プ 抵 抗		01
R0013	RD357120	Carbon Resistor (chip)	12.0K 63M J RECT.	チ ッ プ 抵 抗		01
R0014	HW095100	Fuse Resistor	100.0 1/4 J	ヒ ュ ー ズ 抵 抗		01
R0015	RD157100	Carbon Resistor (chip)	10.0K 1/4 J TP	チ ッ プ 抵 抗		01
R0020	HW095100	Fuse Resistor	100.0 1/4 J	ヒ ュ ー ズ 抵 抗		01
R0021	RD357120	Carbon Resistor (chip)	12.0K 63M J RECT.	チ ッ プ 抵 抗		01
R0022	RD355390	Carbon Resistor (chip)	390.0 63M J RECT.	チ ッ プ 抵 抗		01
R0023	RD355560	Carbon Resistor (chip)	560.0 63M J RECT.	チ ッ プ 抵 抗		01
R0024	RD357100	Carbon Resistor (chip)	10.0K 63M J RECT.	チ ッ プ 抵 抗		01
R0027	VC742500	Metal Oxide Film Resistor	10.0 1W J	酸 化 金 属 被 膜 抵 抗		01
R0028	VC742500	Metal Oxide Film Resistor	10.0 1W J	酸 化 金 属 被 膜 抵 抗		01
R0029	RD157100	Carbon Resistor (chip)	10.0K 1/4 J TP	チ ッ プ 抵 抗		01
R0030	RD157100	Carbon Resistor (chip)	10.0K 1/4 J TP	チ ッ プ 抵 抗		01

*: New Parts

RANK: Japan only

REF NO.	PART NO.	DESCRIPTION		部 品 名	REMARKS	QTY	RANK
R0031	RD356120	Carbon Resistor (chip)	1.2K 63M J RECT.	チ ッ プ 抵 抗			01
R0032	RD357470	Carbon Resistor (chip)	47.0K 63M J RECT.	チ ッ プ 抵 抗			01
R0033	--	Jumper Wire	0.55	ジ ャ ン パ ー	(VD04170)		
-0036	--	Jumper Wire	0.55	ジ ャ ン パ ー	(VD04170)		
R0045	RD350000	Carbon Resistor (chip)	0 63M J RECT.	チ ッ プ 抵 抗			01
RY001	WB476400	Relay	DC G5PA-28 12V	リ レ ー 1 2 V			03
TR002	VV556400	Transistor	2SC2412K Q,R,S TP	ト ラ ン ジ ス タ			01
-004	VV556400	Transistor	2SC2412K Q,R,S TP	ト ラ ン ジ ス タ			01
TR008	VV556400	Transistor	2SC2412K Q,R,S TP	ト ラ ン ジ ス タ			01
TR009	VV556400	Transistor	2SC2412K Q,R,S TP	ト ラ ン ジ ス タ			01
* *	WG433500	Circuit Board	MV2	M V 2 シ ー ト	(WG43420)(X2244B0)		
	WG433400	Circuit Board	PNR	P N R シ ー ト	(WG43420)(X2244B0)		
	--	Jumper Wire	0.55	ジ ャ ン パ ー	(VD04170)		
C0091	UM378100	Electrolytic Cap.	100.00 10.0V RX TP	ケ ミ コ ン			01
C0092	VC694800	Semiconductive Cera. Cap.	0.1000 25V Z TATET	半 導 体 セ ラ コ ン			01
CN020	VB858700	Base Post Connector	PH 8P SE	ベ ー ス ポ ス ト			01
CN071	VB389600	Base Post Connector	PH 11P SE	ベ ー ス ポ ス ト			01
CN081	VB858800	Base Post Connector	PH 9P SE	ベ ー ス ポ ス ト			01
CN091	VB858800	Base Post Connector	PH 9P SE	ベ ー ス ポ ス ト			01
CN092	VB858700	Base Post Connector	PH 8P SE	ベ ー ス ポ ス ト			01
CN093	V5492000	FFC Connector	52807 16P SE	F F C コ ネ ク タ			01
D0000	VB941200	Diode	1SS133,1SS176 TE	ダ イ オ ー ド			01
-0008	VB941200	Diode	1SS133,1SS176 TE	ダ イ オ ー ド			01
D0000	VD631600	Diode	1SS133,176,HSS104	ダ イ オ ー ド			01
-0008	VD631600	Diode	1SS133,176,HSS104	ダ イ オ ー ド			01
D0010	VB941200	Diode	1SS133,1SS176 TE	ダ イ オ ー ド			01
-0018	VB941200	Diode	1SS133,1SS176 TE	ダ イ オ ー ド			01
D0010	VD631600	Diode	1SS133,176,HSS104	ダ イ オ ー ド			01
-0018	VD631600	Diode	1SS133,176,HSS104	ダ イ オ ー ド			01
D0020	VB941200	Diode	1SS133,1SS176 TE	ダ イ オ ー ド			01
-0028	VB941200	Diode	1SS133,1SS176 TE	ダ イ オ ー ド			01
D0020	VD631600	Diode	1SS133,176,HSS104	ダ イ オ ー ド			01
-0028	VD631600	Diode	1SS133,176,HSS104	ダ イ オ ー ド			01
D0033	VB941200	Diode	1SS133,1SS176 TE	ダ イ オ ー ド			01
-0038	VB941200	Diode	1SS133,1SS176 TE	ダ イ オ ー ド			01
D0033	VD631600	Diode	1SS133,176,HSS104	ダ イ オ ー ド			01
-0038	VD631600	Diode	1SS133,176,HSS104	ダ イ オ ー ド			01
LD000	V6309100	LED Orange	SEL6910A TP5 TP	L E D	SPLIT <VOICE/PERFORMANCE>		01
LD001	V6309100	LED Orange	SEL6910A TP5 TP	L E D	REVERB		01
LD002	V6309100	LED Orange	SEL6910A TP5 TP	L E D	CHORUS		01
LD003	VU067800	LED Red	SEL6210S-TP5	L E D	SPEAKER		01
LD010	V6309100	LED Orange	SEL6910A TP5 TP	L E D	VIBES/8 <VOICE/PERFORMANCE>		01
LD011	V6309100	LED Orange	SEL6910A TP5 TP	L E D	XG/16 <VOICE/PERFORMANCE>		01
LD012	V6309100	LED Orange	SEL6910A TP5 TP	L E D	BASS/15 <VOICE/PERFORMANCE>		01
LD013	V6309100	LED Orange	SEL6910A TP5 TP	L E D	CLAVI./7 <VOICE/PERFORMANCE>		01
LD020	V6309100	LED Orange	SEL6910A TP5 TP	L E D	E.PIANO 2/5 <VOICE/PERFORMANCE>		01
LD021	V6309100	LED Orange	SEL6910A TP5 TP	L E D	CHOIR/PAD/13 <VOICE/PERFORMANCE>		01
LD022	V6309100	LED Orange	SEL6910A TP5 TP	L E D	GUITAR/14 <VOICE/PERFORMANCE>		01
LD023	V6309100	LED Orange	SEL6910A TP5 TP	L E D	E.PIANO 3/6 <VOICE/PERFORMANCE>		01
LD030	V6309100	LED Orange	SEL6910A TP5 TP	L E D	MONO PIANO/3 <VOICE/PERFORMANCE>		01
LD031	V6309100	LED Orange	SEL6910A TP5 TP	L E D	HARPSI./11 <VOICE/PERFORMANCE>		01
LD032	V6309100	LED Orange	SEL6910A TP5 TP	L E D	STRINGS/12 <VOICE/PERFORMANCE>		01
LD033	V6309100	LED Orange	SEL6910A TP5 TP	L E D	E.PIANO 1/4 <VOICE/PERFORMANCE>		01
LD040	V6309100	LED Orange	SEL6910A TP5 TP	L E D	GRAND PIANO 1/1 <VOICE/PERFORMANCE>		01
LD041	V6309100	LED Orange	SEL6910A TP5 TP	L E D	ORGAN 1/9 <VOICE/PERFORMANCE>		01
LD042	V6309100	LED Orange	SEL6910A TP5 TP	L E D	ORGAN 2/10 <VOICE/PERFORMANCE>		01
LD043	V6309100	LED Orange	SEL6910A TP5 TP	L E D	GRAND PIANO 2/2 <VOICE/PERFORMANCE>		01
R0090	HF756100	Carbon Resistor	1.0K 1/4 J AX TP	カ ー ボ ン 抵 抗			01
R0091	HF756820	Carbon Resistor	8.2K 1/4 J AX TP	カ ー ボ ン 抵 抗			01
R0092	HF757270	Carbon Resistor	27.0K 1/4 J AX TP	カ ー ボ ン 抵 抗			01
R0093	HF756100	Carbon Resistor	1.0K 1/4 J AX TP	カ ー ボ ン 抵 抗			01
R0094	HF757270	Carbon Resistor	27.0K 1/4 J AX TP	カ ー ボ ン 抵 抗			01
R0095	HF756100	Carbon Resistor	1.0K 1/4 J AX TP	カ ー ボ ン 抵 抗			01
SW000	V8889300	Push Switch	EVQ 11Y 07K	プ ッ シ ュ S W	SPLIT		01
SW000	VV439800	Tact Switch	SKQNAJ	タ ク ト S W	<VOICE/PERFORMANCE>		01
SW001	V8889300	Push Switch	EVQ 11Y 07K	プ ッ シ ュ S W	REVERB		01
SW001	VV439800	Tact Switch	SKQNAJ	タ ク ト S W			01
SW002	V8889300	Push Switch	EVQ 11Y 07K	プ ッ シ ュ S W	CHORUS		01
SW002	VV439800	Tact Switch	SKQNAJ	タ ク ト S W			01

*: New Parts

RANK: Japan only

REF NO.	PART NO.	DESCRIPTION	部 品 名	REMARKS	QTY	RANK
SW003	V8889300	Push Switch	EVQ 11Y 07K	ブ ッ シ ュ S W	SPEAKER	01
SW003	VV439800	Tact Switch	SKQNAJ	タ ク ト S W		01
SW004	V8889300	Push Switch	EVQ 11Y 07K	ブ ッ シ ュ S W	MIDI SETTING	01
SW004	VV439800	Tact Switch	SKQNAJ	タ ク ト S W		01
SW005	V8889300	Push Switch	EVQ 11Y 07K	ブ ッ シ ュ S W	OTHER SETTING	01
SW005	VV439800	Tact Switch	SKQNAJ	タ ク ト S W		01
SW006	V8889300	Push Switch	EVQ 11Y 07K	ブ ッ シ ュ S W	MASTER EQ EDIT (▲)	01
SW006	VV439800	Tact Switch	SKQNAJ	タ ク ト S W		01
SW007	V8889300	Push Switch	EVQ 11Y 07K	ブ ッ シ ュ S W	MASTER EQ EDIT (▼)	01
SW007	VV439800	Tact Switch	SKQNAJ	タ ク ト S W		01
SW008	V8889300	Push Switch	EVQ 11Y 07K	ブ ッ シ ュ S W	VARIATION (▲)	01
SW008	VV439800	Tact Switch	SKQNAJ	タ ク ト S W	<VOICE/PERFORMANCE>	01
SW010	V8889300	Push Switch	EVQ 11Y 07K	ブ ッ シ ュ S W	VIBES/8	01
SW010	VV439800	Tact Switch	SKQNAJ	タ ク ト S W	<VOICE/PERFORMANCE>	01
SW011	V8889300	Push Switch	EVQ 11Y 07K	ブ ッ シ ュ S W	XG/16	01
SW011	VV439800	Tact Switch	SKQNAJ	タ ク ト S W	<VOICE/PERFORMANCE>	01
SW012	V8889300	Push Switch	EVQ 11Y 07K	ブ ッ シ ュ S W	BASS/15	01
SW012	VV439800	Tact Switch	SKQNAJ	タ ク ト S W	<VOICE/PERFORMANCE>	01
SW013	V8889300	Push Switch	EVQ 11Y 07K	ブ ッ シ ュ S W	CLAVI./7	01
SW013	VV439800	Tact Switch	SKQNAJ	タ ク ト S W	<VOICE/PERFORMANCE>	01
SW014	V8889300	Push Switch	EVQ 11Y 07K	ブ ッ シ ュ S W	CLICK	01
SW014	VV439800	Tact Switch	SKQNAJ	タ ク ト S W		01
SW015	V8889300	Push Switch	EVQ 11Y 07K	ブ ッ シ ュ S W	GUITAR/14	01
SW015	VV439800	Tact Switch	SKQNAJ	タ ク ト S W	<VOICE/PERFORMANCE>	01
SW016	V8889300	Push Switch	EVQ 11Y 07K	ブ ッ シ ュ S W	E.PIANO 3/6	01
SW016	VV439800	Tact Switch	SKQNAJ	タ ク ト S W	<VOICE/PERFORMANCE>	01
SW017	V8889300	Push Switch	EVQ 11Y 07K	ブ ッ シ ュ S W	VOICE EDIT	01
SW017	VV439800	Tact Switch	SKQNAJ	タ ク ト S W	<VOICE/PERFORMANCE>	01
SW018	V8889300	Push Switch	EVQ 11Y 07K	ブ ッ シ ュ S W	VARIATION (▼)	01
SW018	VV439800	Tact Switch	SKQNAJ	タ ク ト S W	<VOICE/PERFORMANCE>	01
SW020	V8889300	Push Switch	EVQ 11Y 07K	ブ ッ シ ュ S W	E.PIANO 2/5	01
SW020	VV439800	Tact Switch	SKQNAJ	タ ク ト S W	<VOICE/PERFORMANCE>	01
SW021	V8889300	Push Switch	EVQ 11Y 07K	ブ ッ シ ュ S W	CHOIR/PAD/13	01
SW021	VV439800	Tact Switch	SKQNAJ	タ ク ト S W	<VOICE/PERFORMANCE>	01
SW022	V8889300	Push Switch	EVQ 11Y 07K	ブ ッ シ ュ S W	STRINGS/12	01
SW022	VV439800	Tact Switch	SKQNAJ	タ ク ト S W	<VOICE/PERFORMANCE>	01
SW023	V8889300	Push Switch	EVQ 11Y 07K	ブ ッ シ ュ S W	E.PIANO 1/4	01
SW023	VV439800	Tact Switch	SKQNAJ	タ ク ト S W	<VOICE/PERFORMANCE>	01
SW024	V8889300	Push Switch	EVQ 11Y 07K	ブ ッ シ ュ S W	MONO PIANO/3	01
SW024	VV439800	Tact Switch	SKQNAJ	タ ク ト S W	<VOICE/PERFORMANCE>	01
SW025	V8889300	Push Switch	EVQ 11Y 07K	ブ ッ シ ュ S W	HARPSI./11	01
SW025	VV439800	Tact Switch	SKQNAJ	タ ク ト S W	<VOICE/PERFORMANCE>	01
SW026	V8889300	Push Switch	EVQ 11Y 07K	ブ ッ シ ュ S W	ORGAN 2/10	01
SW026	VV439800	Tact Switch	SKQNAJ	タ ク ト S W	<VOICE/PERFORMANCE>	01
SW027	V8889300	Push Switch	EVQ 11Y 07K	ブ ッ シ ュ S W	GRAND PIANO 2/2	01
SW027	VV439800	Tact Switch	SKQNAJ	タ ク ト S W	<VOICE/PERFORMANCE>	01
SW028	V8889300	Push Switch	EVQ 11Y 07K	ブ ッ シ ュ S W	GRAND PIANO 1/1	01
SW028	VV439800	Tact Switch	SKQNAJ	タ ク ト S W	<VOICE/PERFORMANCE>	01
SW033	V8889300	Push Switch	EVQ 11Y 07K	ブ ッ シ ュ S W	D (-)	01
SW033	VV439800	Tact Switch	SKQNAJ	タ ク ト S W		01
SW034	V8889300	Push Switch	EVQ 11Y 07K	ブ ッ シ ュ S W	B (-/NO)	01
SW034	VV439800	Tact Switch	SKQNAJ	タ ク ト S W		01
SW035	V8889300	Push Switch	EVQ 11Y 07K	ブ ッ シ ュ S W	B (+/YES)	01
SW035	VV439800	Tact Switch	SKQNAJ	タ ク ト S W		01
SW036	V8889300	Push Switch	EVQ 11Y 07K	ブ ッ シ ュ S W	D (+)	01
SW036	VV439800	Tact Switch	SKQNAJ	タ ク ト S W		01
SW037	V8889300	Push Switch	EVQ 11Y 07K	ブ ッ シ ュ S W	EXIT	01
SW037	VV439800	Tact Switch	SKQNAJ	タ ク ト S W		01
SW038	V8889300	Push Switch	EVQ 11Y 07K	ブ ッ シ ュ S W	ORGAN 1/9	01
SW038	VV439800	Tact Switch	SKQNAJ	タ ク ト S W	<VOICE/PERFORMANCE>	01
TR091	IC174020	Transistor	2SC1740S R,S TP	ト ラ ン ジ ス タ		01
TR092	IC174020	Transistor	2SC1740S R,S TP	ト ラ ン ジ ス タ		01
TR093	VP872600	Transistor	2SA1708 S,T TP	ト ラ ン ジ ス タ		01
VR020	WB124000	Rotary Variable Resistor	B 10K XV014111YGPV	二 連 ロ ー タ リ ー V R	MASTER VOLUME	02
VR090	VS368200	Rotary Variable Resistor	B10K RK09K1130BN7A	ロ ー タ リ ー V R 1 連	CONTRAST	01
	V9443500	Circuit Board	PN-EQ	P N - E Q シ ー ト	(V944340)(X2507C0)	11
C0010	VV020100	Electrolytic Cap.	220.00 10.0V TATET	ケ ミ コ ン K S		01
C0011	US064100	Ceramic Capacitor-B (chip)	0.0100 50V K RECT.	チ ッ プ セ ラ (B)		01
C0012	US061680	Ceramic Capacitor-SL(chip)	68P 50V J RECT.	チ ッ プ セ ラ (S L)		01

*: New Parts

RANK: Japan only

REF NO.	PART NO.	DESCRIPTION		部 品 名	REMARKS	QTY	RANK
-0014	US061680	Ceramic Capacitor-SL(chip)	68P 50V J RECT.	チップセラ (S L)			01
C0016	US064100	Ceramic Capacitor-B (chip)	0.0100 50V K RECT.	チップセラ (B)			01
C0017	UM378100	Electrolytic Cap.	100.00 10.0V RX TP	ケ ミ コ ン			01
C0018	US064100	Ceramic Capacitor-B (chip)	0.0100 50V K RECT.	チップセラ (B)			01
C0019	US064100	Ceramic Capacitor-B (chip)	0.0100 50V K RECT.	チップセラ (B)			01
C0020	UM378100	Electrolytic Cap.	100.00 10.0V RX TP	ケ ミ コ ン			01
C0100	US064100	Ceramic Capacitor-B (chip)	0.0100 50V K RECT.	チップセラ (B)			01
C0110	US064100	Ceramic Capacitor-B (chip)	0.0100 50V K RECT.	チップセラ (B)			01
C0111	US064100	Ceramic Capacitor-B (chip)	0.0100 50V K RECT.	チップセラ (B)			01
C0200	US064100	Ceramic Capacitor-B (chip)	0.0100 50V K RECT.	チップセラ (B)			01
C0300	US064100	Ceramic Capacitor-B (chip)	0.0100 50V K RECT.	チップセラ (B)			01
C0400	US064100	Ceramic Capacitor-B (chip)	0.0100 50V K RECT.	チップセラ (B)			01
C0500	US064100	Ceramic Capacitor-B (chip)	0.0100 50V K RECT.	チップセラ (B)			01
C0600	US064100	Ceramic Capacitor-B (chip)	0.0100 50V K RECT.	チップセラ (B)			01
C0700	US064100	Ceramic Capacitor-B (chip)	0.0100 50V K RECT.	チップセラ (B)			01
CN010	VB858600	Base Post Connector	PH 7P SE	ベ ー ス ポ ス ト			01
D0010	VT332900	Diode	1SS355 TE-17 TP	ダイ オ ー ド			01
-0016	VT332900	Diode	1SS355 TE-17 TP	ダイ オ ー ド			01
D0100	VT332900	Diode	1SS355 TE-17 TP	ダイ オ ー ド			01
D0101	VT332900	Diode	1SS355 TE-17 TP	ダイ オ ー ド			01
D0200	VT332900	Diode	1SS355 TE-17 TP	ダイ オ ー ド			01
D0201	VT332900	Diode	1SS355 TE-17 TP	ダイ オ ー ド			01
D0300	VT332900	Diode	1SS355 TE-17 TP	ダイ オ ー ド			01
D0301	VT332900	Diode	1SS355 TE-17 TP	ダイ オ ー ド			01
D0400	VT332900	Diode	1SS355 TE-17 TP	ダイ オ ー ド			01
D0401	VT332900	Diode	1SS355 TE-17 TP	ダイ オ ー ド			01
D0500	VT332900	Diode	1SS355 TE-17 TP	ダイ オ ー ド			01
D0501	VT332900	Diode	1SS355 TE-17 TP	ダイ オ ー ド			01
IC010	XZ916100	IC	UPD780031AYGK-N01	エ イ シ ュ	E-PNS2a LED/SWITCH DRIVER		05
IC010	XZ916200	IC	UPD780031AYGK-N05	エ イ シ ュ			05
IC100	X7351A00	IC	UPC4570G2-E1-A	エ イ シ ュ	OP AMP		01
L0010	GE901870	Coil	10U SN3-205 10uH	コ イ ル 1 0 U			03
L0011	VY657200	Chip Inductance	600 BK1608HM601	チップインダクタ			01
-0013	VY657200	Chip Inductance	600 BK1608HM601	チップインダクタ			01
R0010	RD356100	Carbon Resistor (chip)	1.0K 63M J RECT.	チップ抵抗			01
R0011	RD354470	Carbon Resistor (chip)	47.0 63M J RECT.	チップ抵抗			01
R0012	RD354470	Carbon Resistor (chip)	47.0 63M J RECT.	チップ抵抗			01
R0013	RD357100	Carbon Resistor (chip)	10.0K 63M J RECT.	チップ抵抗			01
R0014	RD357100	Carbon Resistor (chip)	10.0K 63M J RECT.	チップ抵抗			01
R0100	RD356100	Carbon Resistor (chip)	1.0K 63M J RECT.	チップ抵抗			01
R0110	VI197400	Metal Film Resistor (chip)	10.0K 1/10 D RECT.	チップ金被抵抗			01
R0111	VI197400	Metal Film Resistor (chip)	10.0K 1/10 D RECT.	チップ金被抵抗			01
R0112	RD355100	Carbon Resistor (chip)	100.0 63M J RECT.	チップ抵抗			01
R0200	RD356100	Carbon Resistor (chip)	1.0K 63M J RECT.	チップ抵抗			01
R0300	RD356100	Carbon Resistor (chip)	1.0K 63M J RECT.	チップ抵抗			01
R0400	RD356100	Carbon Resistor (chip)	1.0K 63M J RECT.	チップ抵抗			01
R0500	RD356100	Carbon Resistor (chip)	1.0K 63M J RECT.	チップ抵抗			01
VR100	VN136100	Slide Variable Resistor	B 10.0K	スライドVR	LOW <MASTER EQUALIZER> LO-MID <MASTER EQUALIZER> MID <MASTER EQUALIZER> HI-MID <MASTER EQUALIZER> HIGH <MASTER EQUALIZER>		03
VR200	VN136100	Slide Variable Resistor	B 10.0K	スライドVR			03
VR300	VN136100	Slide Variable Resistor	B 10.0K	スライドVR			03
VR400	VN136100	Slide Variable Resistor	B 10.0K	スライドVR			03
VR500	VN136100	Slide Variable Resistor	B 10.0K	スライドVR			03
X0010	V6091100	Ceramic Resonator	8.38MHz EFOMC8384T4	セラミック発振子			01
*	WG407700	Circuit Board	PNL	P N L シ ー ト	(X7124D0)		
C1	US062470	Ceramic Capacitor-SL(chip)	470P 50V J RECT.	チップセラ (S L)			01
C32	US064100	Ceramic Capacitor-B (chip)	0.0100 50V K RECT.	チップセラ (B)			01
-34	US064100	Ceramic Capacitor-B (chip)	0.0100 50V K RECT.	チップセラ (B)			01
C36	US064100	Ceramic Capacitor-B (chip)	0.0100 50V K RECT.	チップセラ (B)			01
C37	UM378100	Electrolytic Cap.	100.00 10.0V RX TP	ケ ミ コ ン			01
C41	US064100	Ceramic Capacitor-B (chip)	0.0100 50V K RECT.	チップセラ (B)			01
C42	UM378100	Electrolytic Cap.	100.00 10.0V RX TP	ケ ミ コ ン			01
C51	US062470	Ceramic Capacitor-SL(chip)	470P 50V J RECT.	チップセラ (S L)			01
-56	US062470	Ceramic Capacitor-SL(chip)	470P 50V J RECT.	チップセラ (S L)			01
C60	VV020100	Electrolytic Cap.	220.00 10.0V TATET	ケ ミ コ ン K S			01
C61	US062470	Ceramic Capacitor-SL(chip)	470P 50V J RECT.	チップセラ (S L)			01
-68	US062470	Ceramic Capacitor-SL(chip)	470P 50V J RECT.	チップセラ (S L)			01
C69	US064100	Ceramic Capacitor-B (chip)	0.0100 50V K RECT.	チップセラ (B)			01
C101	US061680	Ceramic Capacitor-SL(chip)	68P 50V J RECT.	チップセラ (S L)			01
-103	US061680	Ceramic Capacitor-SL(chip)	68P 50V J RECT.	チップセラ (S L)			01

*: New Parts

RANK: Japan only

REF NO.	PART NO.	DESCRIPTION	部 品 名	REMARKS	QTY	RANK
C105	US064100	Ceramic Capacitor-B (chip)	0.0100 50V K RECT.	チ ッ プ セ ラ (B)		01
C106	VV020100	Electrolytic Cap.	220.00 10.0V TATET	ケ ミ コ ン K S		01
C107	US064100	Ceramic Capacitor-B (chip)	0.0100 50V K RECT.	チ ッ プ セ ラ (B)		01
-109	US064100	Ceramic Capacitor-B (chip)	0.0100 50V K RECT.	チ ッ プ セ ラ (B)		01
C119	US064100	Ceramic Capacitor-B (chip)	0.0100 50V K RECT.	チ ッ プ セ ラ (B)		01
C120	US062470	Ceramic Capacitor-SL(chip)	470P 50V J RECT.	チ ッ プ セ ラ (S L)		01
C200	US064100	Ceramic Capacitor-B (chip)	0.0100 50V K RECT.	チ ッ プ セ ラ (B)		01
C202	US064100	Ceramic Capacitor-B (chip)	0.0100 50V K RECT.	チ ッ プ セ ラ (B)		01
C300	US064100	Ceramic Capacitor-B (chip)	0.0100 50V K RECT.	チ ッ プ セ ラ (B)		01
-302	US064100	Ceramic Capacitor-B (chip)	0.0100 50V K RECT.	チ ッ プ セ ラ (B)		01
C400	US064100	Ceramic Capacitor-B (chip)	0.0100 50V K RECT.	チ ッ プ セ ラ (B)		01
C500	US064100	Ceramic Capacitor-B (chip)	0.0100 50V K RECT.	チ ッ プ セ ラ (B)		01
CN1	VB858600	Base Post Connector	PH 7P SE	ベ ー ス ポ ス ト		01
CN2	VB858700	Base Post Connector	PH 8P SE	ベ ー ス ポ ス ト		01
CN3	VB858400	Base Post Connector	PH 5P SE	ベ ー ス ポ ス ト		01
CN4	VB858800	Base Post Connector	PH 9P SE	ベ ー ス ポ ス ト		01
CN5	VB389600	Base Post Connector	PH 11P SE	ベ ー ス ポ ス ト		01
D30	VV925900	Diode	RLS-73 TE-11 TP	ダ イ オ ー ド		01
-32	VV925900	Diode	RLS-73 TE-11 TP	ダ イ オ ー ド		01
D40	VV925900	Diode	RLS-73 TE-11 TP	ダ イ オ ー ド		01
-47	VV925900	Diode	RLS-73 TE-11 TP	ダ イ オ ー ド		01
D50	VV925900	Diode	RLS-73 TE-11 TP	ダ イ オ ー ド		01
-57	VV925900	Diode	RLS-73 TE-11 TP	ダ イ オ ー ド		01
D60	VV925900	Diode	RLS-73 TE-11 TP	ダ イ オ ー ド		01
-63	VV925900	Diode	RLS-73 TE-11 TP	ダ イ オ ー ド		01
D101	VV925900	Diode	RLS-73 TE-11 TP	ダ イ オ ー ド		01
-113	VV925900	Diode	RLS-73 TE-11 TP	ダ イ オ ー ド		01
D300	VR496500	Diode	MA111 FLAT TP	ダ イ オ ー ド		
-305	VR496500	Diode	MA111 FLAT TP	ダ イ オ ー ド		
D300	VT332900	Diode	1SS355 TE-17 TP	ダ イ オ ー ド		01
-305	VT332900	Diode	1SS355 TE-17 TP	ダ イ オ ー ド		01
D400	VR496500	Diode	MA111 FLAT TP	ダ イ オ ー ド		
D400	VT332900	Diode	1SS355 TE-17 TP	ダ イ オ ー ド		01
D401	VR496500	Diode	MA111 FLAT TP	ダ イ オ ー ド		
D401	VT332900	Diode	1SS355 TE-17 TP	ダ イ オ ー ド		01
D500	VR496500	Diode	MA111 FLAT TP	ダ イ オ ー ド		
D500	VT332900	Diode	1SS355 TE-17 TP	ダ イ オ ー ド		01
D501	VR496500	Diode	MA111 FLAT TP	ダ イ オ ー ド		
D501	VT332900	Diode	1SS355 TE-17 TP	ダ イ オ ー ド		01
EM1	VD542700	LC Filter	DSS6NF31C223Q93A	L C フィ ル タ ー E M I		01
IC10	XZ916200	IC	UPD780031AYGK-N05	I	E-PNS2a LED/SWITCH DRIVER	05
IC71	V8074800	FET	MCH6616-TL-E	F E T		02
IC72	V8074800	FET	MCH6616-TL-E	F E T		02
IC73	X5482A00	IC	NE5532DR	I	OP AMP	
L102	VY657200	Chip Inductance	600 BK1608HM601	チ ッ プ イ ン ダ ク タ		01
-110	VY657200	Chip Inductance	600 BK1608HM601	チ ッ プ イ ン ダ ク タ		01
LD50	V6309100	LED Orange	SEL6910A TP5 TP	L E D	MIDI OUT	01
LD51	VU067800	LED Red	SEL6210S-TP5	L E D	PANEL LOCK	01
LD52	VU067800	LED Red	SEL6210S-TP5	L E D	REC <SONG>	01
LD53	V6309000	LED Green	SEL6710K TP5	L E D	PLAY/PAUSE <SONG>	01
LD60	VU067800	LED Red	SEL6210S-TP5	L E D	MASTER	01
LD61	V6309100	LED Orange	SEL6910A TP5 TP	L E D	PERFORMANCE	01
LD62	V6309100	LED Orange	SEL6910A TP5 TP	L E D	TRANPOSE	01
LD71	V8066800	LED Green/Red	SML72423C TP15	L E D 2 色	TRACK 1 <SONG>	01
LD72	V8066800	LED Green/Red	SML72423C TP15	L E D 2 色	TRACK 2 <SONG>	01
LD73	V8066800	LED Green/Red	SML72423C TP15	L E D 2 色	TRACK 3-16 <SONG>	01
R32	RD356100	Carbon Resistor (chip)	1.0K 63M J RECT.	チ ッ プ 抵 抗		01
R51	RD357100	Carbon Resistor (chip)	10.0K 63M J RECT.	チ ッ プ 抵 抗		01
-56	RD357100	Carbon Resistor (chip)	10.0K 63M J RECT.	チ ッ プ 抵 抗		01
R61	RD154470	Carbon Resistor (chip)	47.0 1/4 J TP	チ ッ プ 抵 抗		01
-68	RD154470	Carbon Resistor (chip)	47.0 1/4 J TP	チ ッ プ 抵 抗		01
R69	RD155100	Carbon Resistor (chip)	100.0 1/4 J TP	チ ッ プ 抵 抗		01
R70	RD357100	Carbon Resistor (chip)	10.0K 63M J RECT.	チ ッ プ 抵 抗		01
-80	RD357100	Carbon Resistor (chip)	10.0K 63M J RECT.	チ ッ プ 抵 抗		01
R81	RD354470	Carbon Resistor (chip)	47.0 63M J RECT.	チ ッ プ 抵 抗		01
-84	RD354470	Carbon Resistor (chip)	47.0 63M J RECT.	チ ッ プ 抵 抗		01
R90	RD358470	Carbon Resistor (chip)	470.0K 63M J RECT.	チ ッ プ 抵 抗		01
-93	RD358470	Carbon Resistor (chip)	470.0K 63M J RECT.	チ ッ プ 抵 抗		01
R101	RD356100	Carbon Resistor (chip)	1.0K 63M J RECT.	チ ッ プ 抵 抗		01
R102	RD354470	Carbon Resistor (chip)	47.0 63M J RECT.	チ ッ プ 抵 抗		01

*: New Parts

RANK: Japan only


REF NO.	PART NO.	DESCRIPTION	部 品 名	REMARKS	QTY	RANK
R103	RD354470	Carbon Resistor (chip)	47.0 63M J RECT.	チ ッ プ 抵 抗		01
R104	RD355100	Carbon Resistor (chip)	100.0 63M J RECT.	チ ッ プ 抵 抗		01
R105	VI197400	Metal Film Resistor (chip)	10.0K 1/10 D RECT.	チ ッ プ 金 被 抵 抗		01
R106	VI197400	Metal Film Resistor (chip)	10.0K 1/10 D RECT.	チ ッ プ 金 被 抵 抗		01
R109	RD356100	Carbon Resistor (chip)	1.0K 63M J RECT.	チ ッ プ 抵 抗		01
R110	RD356100	Carbon Resistor (chip)	1.0K 63M J RECT.	チ ッ プ 抵 抗		01
R120	RD357100	Carbon Resistor (chip)	10.0K 63M J RECT.	チ ッ プ 抵 抗		01
R200	RD355100	Carbon Resistor (chip)	100.0 63M J RECT.	チ ッ プ 抵 抗		01
R300	RD356100	Carbon Resistor (chip)	1.0K 63M J RECT.	チ ッ プ 抵 抗		01
-302	RD356100	Carbon Resistor (chip)	1.0K 63M J RECT.	チ ッ プ 抵 抗		01
R400	RD356100	Carbon Resistor (chip)	1.0K 63M J RECT.	チ ッ プ 抵 抗		01
R500	RD356100	Carbon Resistor (chip)	1.0K 63M J RECT.	チ ッ プ 抵 抗		01
R501	RD350000	Carbon Resistor (chip)	0 63M J RECT.	チ ッ プ 抵 抗		01
-507	RD350000	Carbon Resistor (chip)	0 63M J RECT.	チ ッ プ 抵 抗		01
SW30	V8889300	Push Switch	EVQ 11Y 07K	ブ ッ シ ュ S W	SONG SELECT ►►	01
SW30	VV439800	Tact Switch	SKQNAJ	タ ク ト S W		01
SW31	V8889300	Push Switch	EVQ 11Y 07K	ブ ッ シ ュ S W	SONG SELECT ◀◀	01
SW31	VV439800	Tact Switch	SKQNAJ	タ ク ト S W		01
SW32	V8889300	Push Switch	EVQ 11Y 07K	ブ ッ シ ュ S W	TRANPOSE	01
SW32	VV439800	Tact Switch	SKQNAJ	タ ク ト S W		01
SW40	V8889300	Push Switch	EVQ 11Y 07K	ブ ッ シ ュ S W	REC <SONG>	01
SW40	VV439800	Tact Switch	SKQNAJ	タ ク ト S W		01
SW41	V8889300	Push Switch	EVQ 11Y 07K	ブ ッ シ ュ S W	TRACK 1 <SONG>	01
SW41	VV439800	Tact Switch	SKQNAJ	タ ク ト S W		01
SW42	V8889300	Push Switch	EVQ 11Y 07K	ブ ッ シ ュ S W	TRACK 2 <SONG>	01
SW42	VV439800	Tact Switch	SKQNAJ	タ ク ト S W		01
SW43	V8889300	Push Switch	EVQ 11Y 07K	ブ ッ シ ュ S W	TRACK 3-16 <SONG>	01
SW43	VV439800	Tact Switch	SKQNAJ	タ ク ト S W		01
SW44	V8889300	Push Switch	EVQ 11Y 07K	ブ ッ シ ュ S W	PLAY/PAUSE <SONG>	01
SW44	VV439800	Tact Switch	SKQNAJ	タ ク ト S W		01
SW45	V8889300	Push Switch	EVQ 11Y 07K	ブ ッ シ ュ S W	STOP <SONG>	01
SW45	VV439800	Tact Switch	SKQNAJ	タ ク ト S W		01
SW46	V8889300	Push Switch	EVQ 11Y 07K	ブ ッ シ ュ S W	SONG FILE	01
SW46	VV439800	Tact Switch	SKQNAJ	タ ク ト S W		01
SW47	V8889300	Push Switch	EVQ 11Y 07K	ブ ッ シ ュ S W	SONG SETTING	01
SW47	VV439800	Tact Switch	SKQNAJ	タ ク ト S W		01
SW50	V8889300	Push Switch	EVQ 11Y 07K	ブ ッ シ ュ S W	MIDI OUT	01
SW50	VV439800	Tact Switch	SKQNAJ	タ ク ト S W		01
SW51	V8889300	Push Switch	EVQ 11Y 07K	ブ ッ シ ュ S W	PANEL LOCK	01
SW51	VV439800	Tact Switch	SKQNAJ	タ ク ト S W		01
SW52	V8889300	Push Switch	EVQ 11Y 07K	ブ ッ シ ュ S W	A (-)	01
SW52	VV439800	Tact Switch	SKQNAJ	タ ク ト S W		01
SW53	V8889300	Push Switch	EVQ 11Y 07K	ブ ッ シ ュ S W	A (+)	01
SW53	VV439800	Tact Switch	SKQNAJ	タ ク ト S W		01
SW54	V8889300	Push Switch	EVQ 11Y 07K	ブ ッ シ ュ S W	C (+)	01
SW54	VV439800	Tact Switch	SKQNAJ	タ ク ト S W		01
SW55	V8889300	Push Switch	EVQ 11Y 07K	ブ ッ シ ュ S W	C (-)	01
SW55	VV439800	Tact Switch	SKQNAJ	タ ク ト S W		01
SW56	V8889300	Push Switch	EVQ 11Y 07K	ブ ッ シ ュ S W	TEMPO UP	01
SW56	VV439800	Tact Switch	SKQNAJ	タ ク ト S W		01
SW57	V8889300	Push Switch	EVQ 11Y 07K	ブ ッ シ ュ S W	TEMPO DOWN	01
SW57	VV439800	Tact Switch	SKQNAJ	タ ク ト S W		01
SW60	V8889300	Push Switch	EVQ 11Y 07K	ブ ッ シ ュ S W	MASTER EDIT	01
SW60	VV439800	Tact Switch	SKQNAJ	タ ク ト S W		01
SW61	V8889300	Push Switch	EVQ 11Y 07K	ブ ッ シ ュ S W	PERFORM.FILE	01
SW61	VV439800	Tact Switch	SKQNAJ	タ ク ト S W		01
SW62	V8889300	Push Switch	EVQ 11Y 07K	ブ ッ シ ュ S W	MASTER	01
SW62	VV439800	Tact Switch	SKQNAJ	タ ク ト S W		01
SW63	V8889300	Push Switch	EVQ 11Y 07K	ブ ッ シ ュ S W	PERFORMANCE	01
SW63	VV439800	Tact Switch	SKQNAJ	タ ク ト S W		01
TA60	V8566600	Transistor Array	TD62785FG-(5,EL)	トランジスタアレイ		05
TR6	VY677700	Digital Transistor	DTB123YK T146	デジタルトランジスタ		01
VR100	VN136000	Slide Variable Resistor	B 10.0K	ス ラ イ ド V R	SONG VOLUME	03
VR200	VN136100	Slide Variable Resistor	B 10.0K	ス ラ イ ド V R	ZONE 1 <ZONE CONTROL>	03
VR300	VN136100	Slide Variable Resistor	B 10.0K	ス ラ イ ド V R	ZONE 2 <ZONE CONTROL>	03
VR400	VN136100	Slide Variable Resistor	B 10.0K	ス ラ イ ド V R	ZONE 3 <ZONE CONTROL>	03
VR500	VN136100	Slide Variable Resistor	B 10.0K	ス ラ イ ド V R	ZONE 4 <ZONE CONTROL>	03
X10	V6091100	Ceramic Resonator	8.38MHz EFOMC8384T4	セ ラ ミ ッ ク 発 振 子		01
	--	Circuit Board	WMH	W M H シ ー ト	(V856320)(V859520)	

※: New Parts

RANK: Japan only

RANK: Japan only

■ CP300 BLOCK DIAGRAM (ブロックダイアグラム)

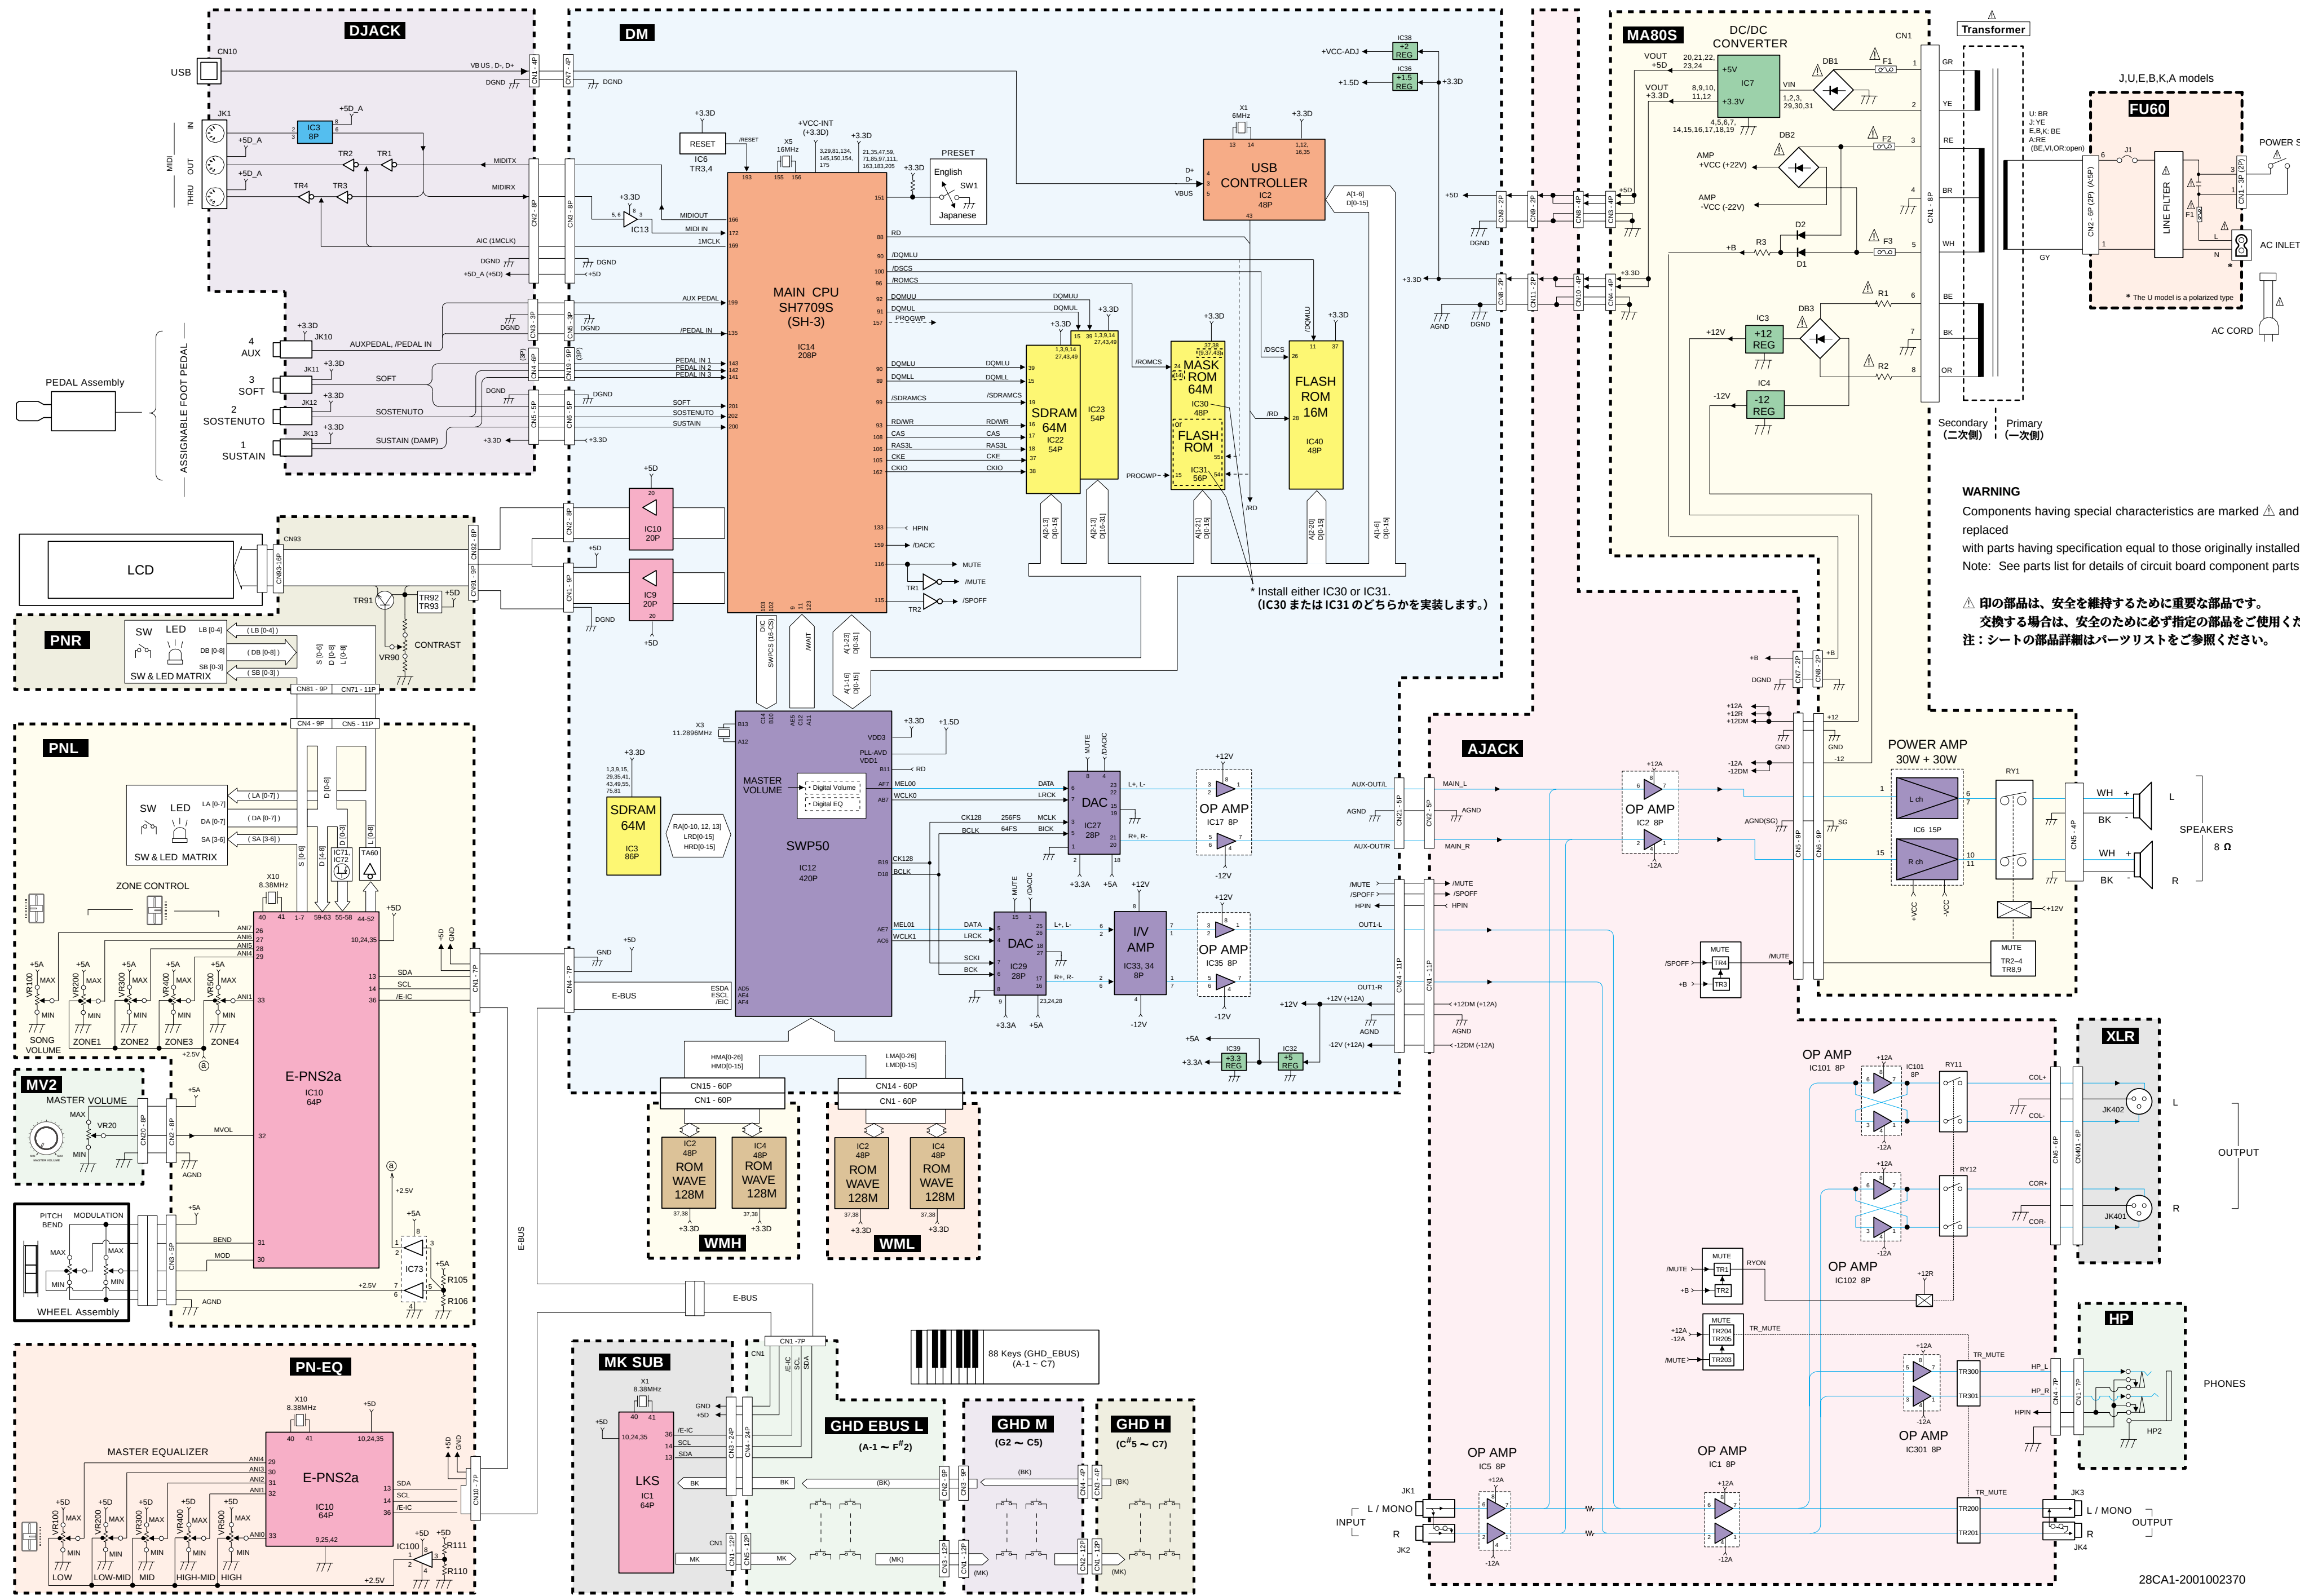

WARNING
Components having special characteristics are marked $\triangle$ and must be replaced with parts having specification equal to those originally installed.
Note: See parts list for details of circuit board component parts.

$\triangle$ 印の部品は、安全を維持するために重要な部品です。
交換する場合は、安全のために必ず指定の部品をご使用ください。
注：シートの部品詳細はパーツリストをご参照ください。

■ CP300 CIRCUIT BOARD LAYOUT & WIRING (ユニットレイアウト&結線図)

NOTE1) The symbol sign of union parts.

-  : Cable holder
-  : Insulation lock tie
-  : Filament tape
-  : Ferrite Core
-  : Sponge

結束部品のシンボル記号

- 束線止め
- インシュロックタイ
- フィラメントテープ
- フェライトコア
- スポンジ


NOTE2)   is careful so that a heatsink on PCB assembly MA80S may not be touch.

  はMA80Sシートの放熱板に当たらないように注意してください。

Location ロケーション	Part No. 部品番号	Part Name 名 称		Origin Of Connection Name	接続元 名称	Connection Place Name	接続先 名称	Note 備考
W01	(WH59130)	MV2 Wire Harness Assembly	MV2束線Ass'y	MV2-CN20		PNL-CN2		8P-300
W02	WA603100	KR-KR Wire Harness 1	KR-KR束線1	WHEEL Assembly		PNL-CN3		5P
W03	VK111300	KRD-KRD Wire Harness	KRD-KRD束線			PNR-CN71		11P-450
W04	(VK10991)	KRD-KRD Wire Harness	KRD-KRD束線			PNR-CN81		9P-400
W05	V9384800	FFC Cable	FFCケーブル	LCD		PNR-CN93		16P-110
W06	WH410500	EBUSE Wire Harness Assembly	EBUSE束線Ass'y	PNL-CN1/PN-EQ-CN10		DM-CN4		7P-1270
W07	VK109800	KRD-KRD Wire Harness	KRD-KRD束線			DM-CN2		8P-400
W08	(VK10991)	KRD-KRD Wire Harness	KRD-KRD束線			DM-CN1		9P-400
W09	(WG74220)	DJK Wire Harness Assembly	DJK束線Ass'y	DJACK-CN4		DM-CN19		6P/9P-600
W10	VK107500	KRD-KRD Wire Harness	KRD-KRD束線	DJACK-CN3		DM-CN5		3P-350
W11	(VK11241)	KRD-KRD Wire Harness	KRD-KRD束線	DJACK-CN2		DM-CN3		8P-500
W12	WA603400	USB Wire Harness Assembly	USB束線Ass'y	DJACK-CN1		DM-CN7		4P
W13	VK110000	KRD-KRD Wire Harness	KRD-KRD束線	AJACK-CN1		DM-CN24		11P-400
W14	(VJ98080)	KRD-KRD Wire Harness	KRD-KRD束線	AJACK-CN2		DM-CN21		5P-350
W15	(VK09800)	KRD-KRD Wire Harness	KRD-KRD束線	AJACK-CN6		XLR-CN6		6P-100
W16	(WH58760)	AJHP Wire Harness Assembly	AJHP束線Ass'y	AJACK-CN4		HP-CN1		7P-1100
W17	(WH41120)	AJMA Wire Harness Assembly	AJMA束線Ass'y	AJACK-CN5		MA80S-CN6		9P-500
W19	(WG74240)	5D Network Wire Harness	5D中継束線	AJACK-CN9		DM-CN9		2P-300
W20	(WG74250)	3D Network Wire Harness	3D中継束線	AJACK-CN11		DM-CN8		2P-300
W23	WA611100	EBUS Wire Harness 2	EBUS束線2	GHD EBUS L-CN1		DM-CN4/W06		7P
W24	(WH39720)	Earth Wire Harness	GND線	-		-		L=200
W25	(WH39720)	Earth Wire Harness	GND線	-		-		L=200
W26	(WH41100)	PW Wire Harness Assembly	PW束線Ass'y	AJACK-CN7 (XH-2PIN)		MA80S-CN8 (XH-2PIN)		2P-750
				AJACK-CN8 (PH-4PIN)		MA80S-CN3 (PH-4PIN)		4P-700
				AJACK-CN10 (XH-4PIN)		MA80S-CN4 (XH-4PIN)		4P-700

NOTE) The parts with "()" in "Part No." are not available as service parts.

NOTE) 上記束線のうち、部品No.に"()"がついている部品は、サービス部品として準備されていません。

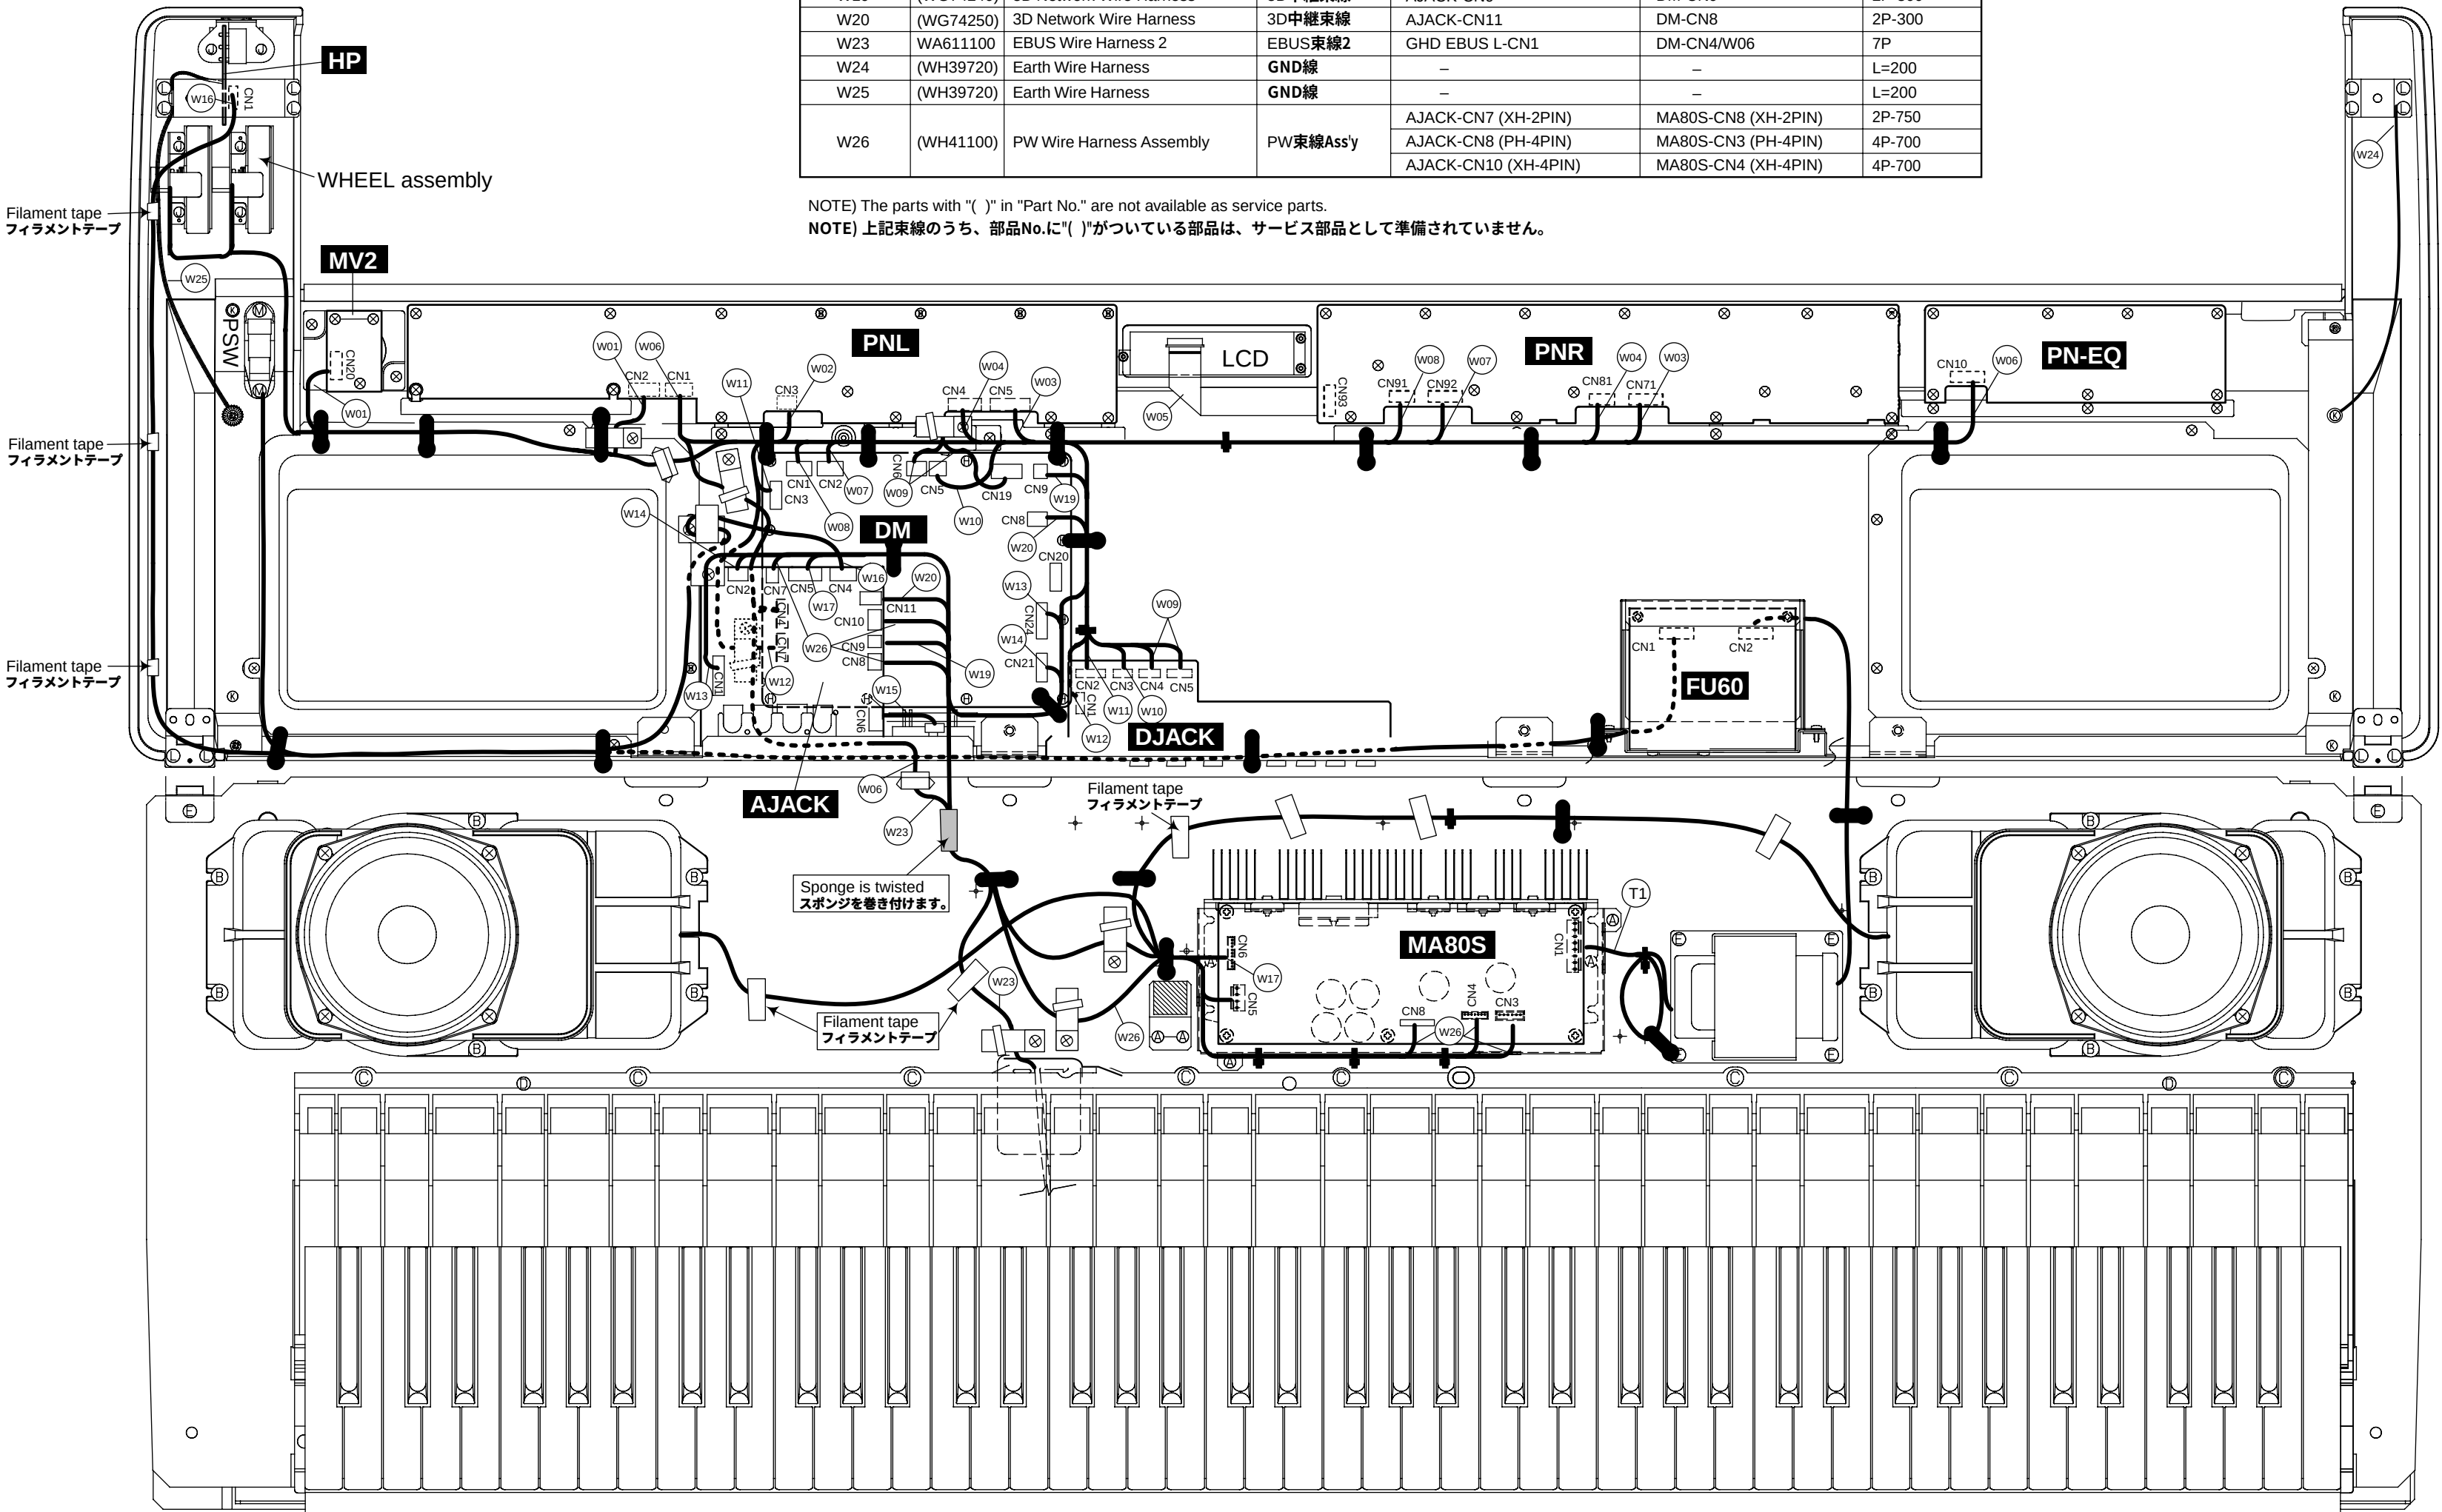

■ CONTENTS

CP300 OVERALL CIRCUIT DIAGRAM (総回路図索引)

AJACK	6
DJACK	5
DM	3
FU60	6
GHD EBUS L	4
GHD H	4
GHD M	4
HP	6
MA80S	6
MK SUB	4
MV2	5
PN-EQ	5
PNL	5
PNR	5
WMH	4
WML	4
XLR	6

Circuit diagram notational cautions

(Example)

to PNR - CN91

<Page 5 A-2>

Page 5 are the page of a circuit diagram.

A-2 is indicates the location of the counter inter-sheet connector.

(The alphabet indicates horizontal direction and the number indicates vertical direction)

回路図表記上の注意

(例)





to PNR - CN91

<Page 5 A-2>


Page 5 は回路図のページです。[5 ページ]

A-2 は対応するシート間コネクタのあるロケーションを示します。

(アルファベットが水平方向、数字が垂直方向)

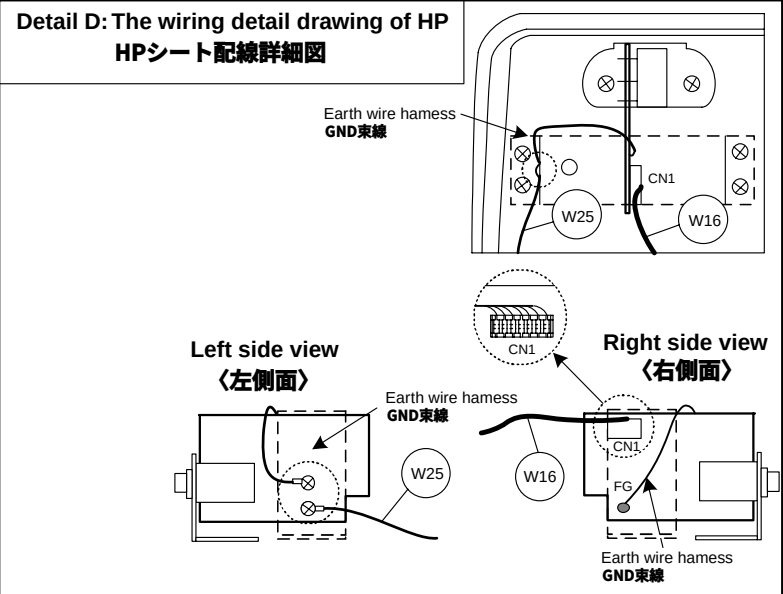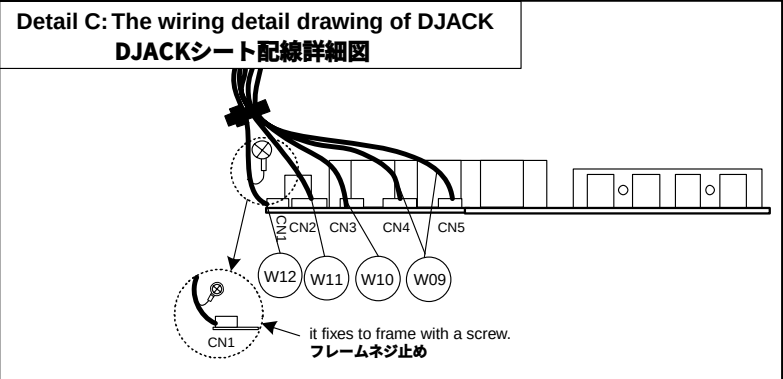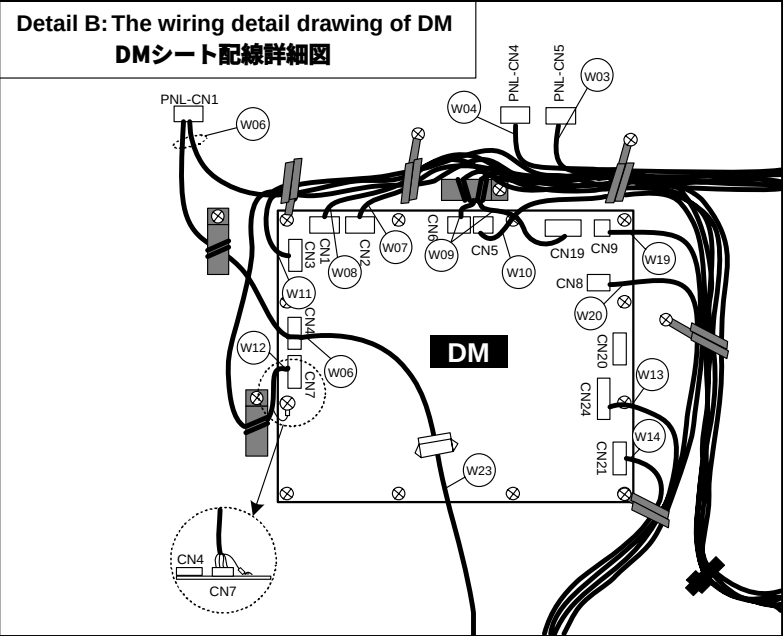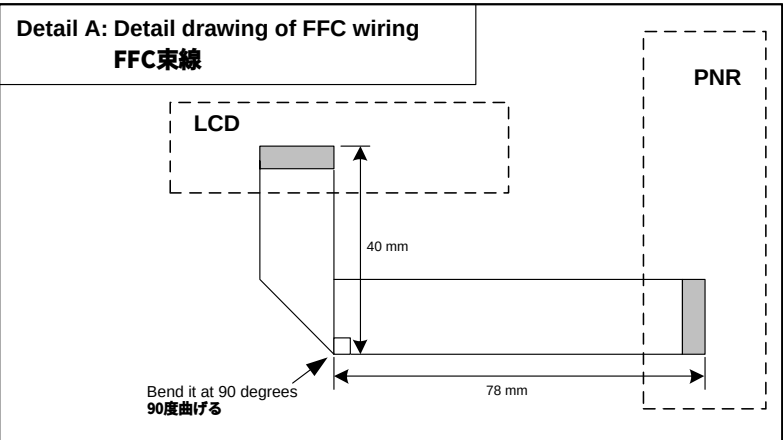

■ CP300 OVERALL CIRCUIT DIAGRAM 1/4 (DM)

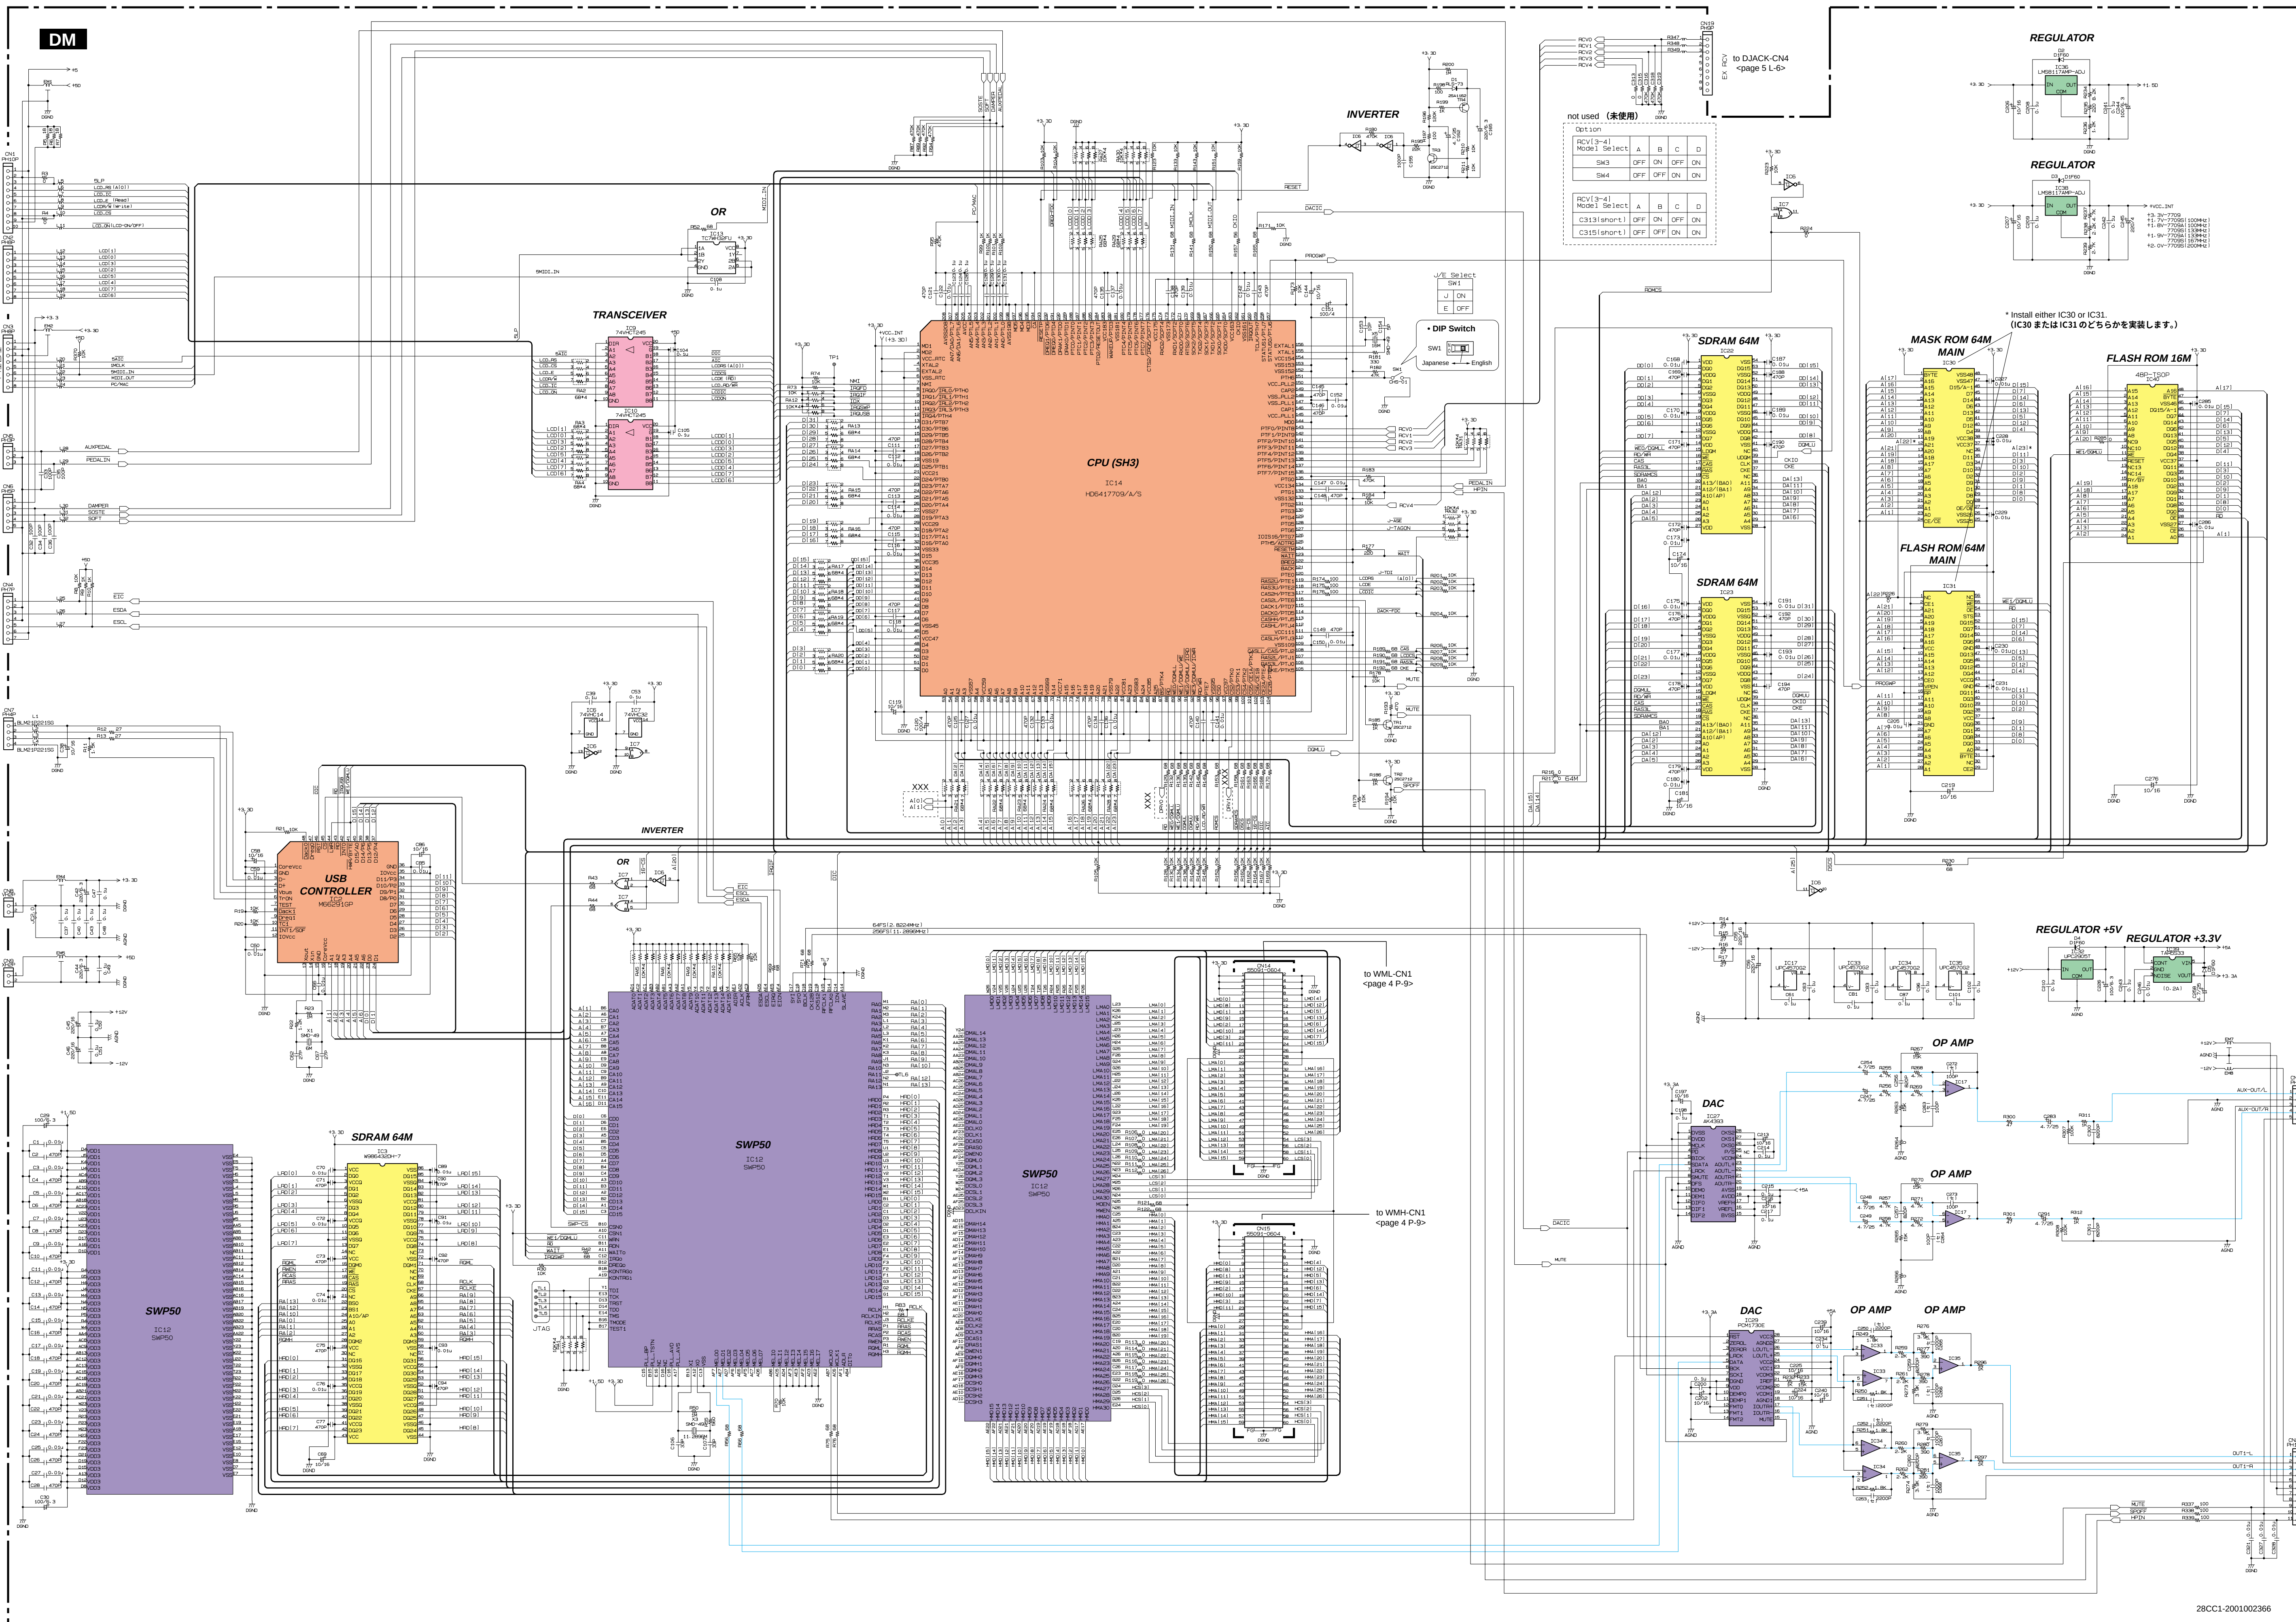






(セ) : Ceramic Capacitor (セラミックコンデンサー)
XXX : not connected (未接続)

Note : See parts list for details of circuit board component parts.
注 : シートの部品詳細はパーツリストをご参照ください。

28CC1-2001002366



CP300

■ CP300 OVERALL CIRCUIT DIAGRAM 2/4 (GHD EBUS L, GHD H, GHD M, MK SUB, WMH, WML)

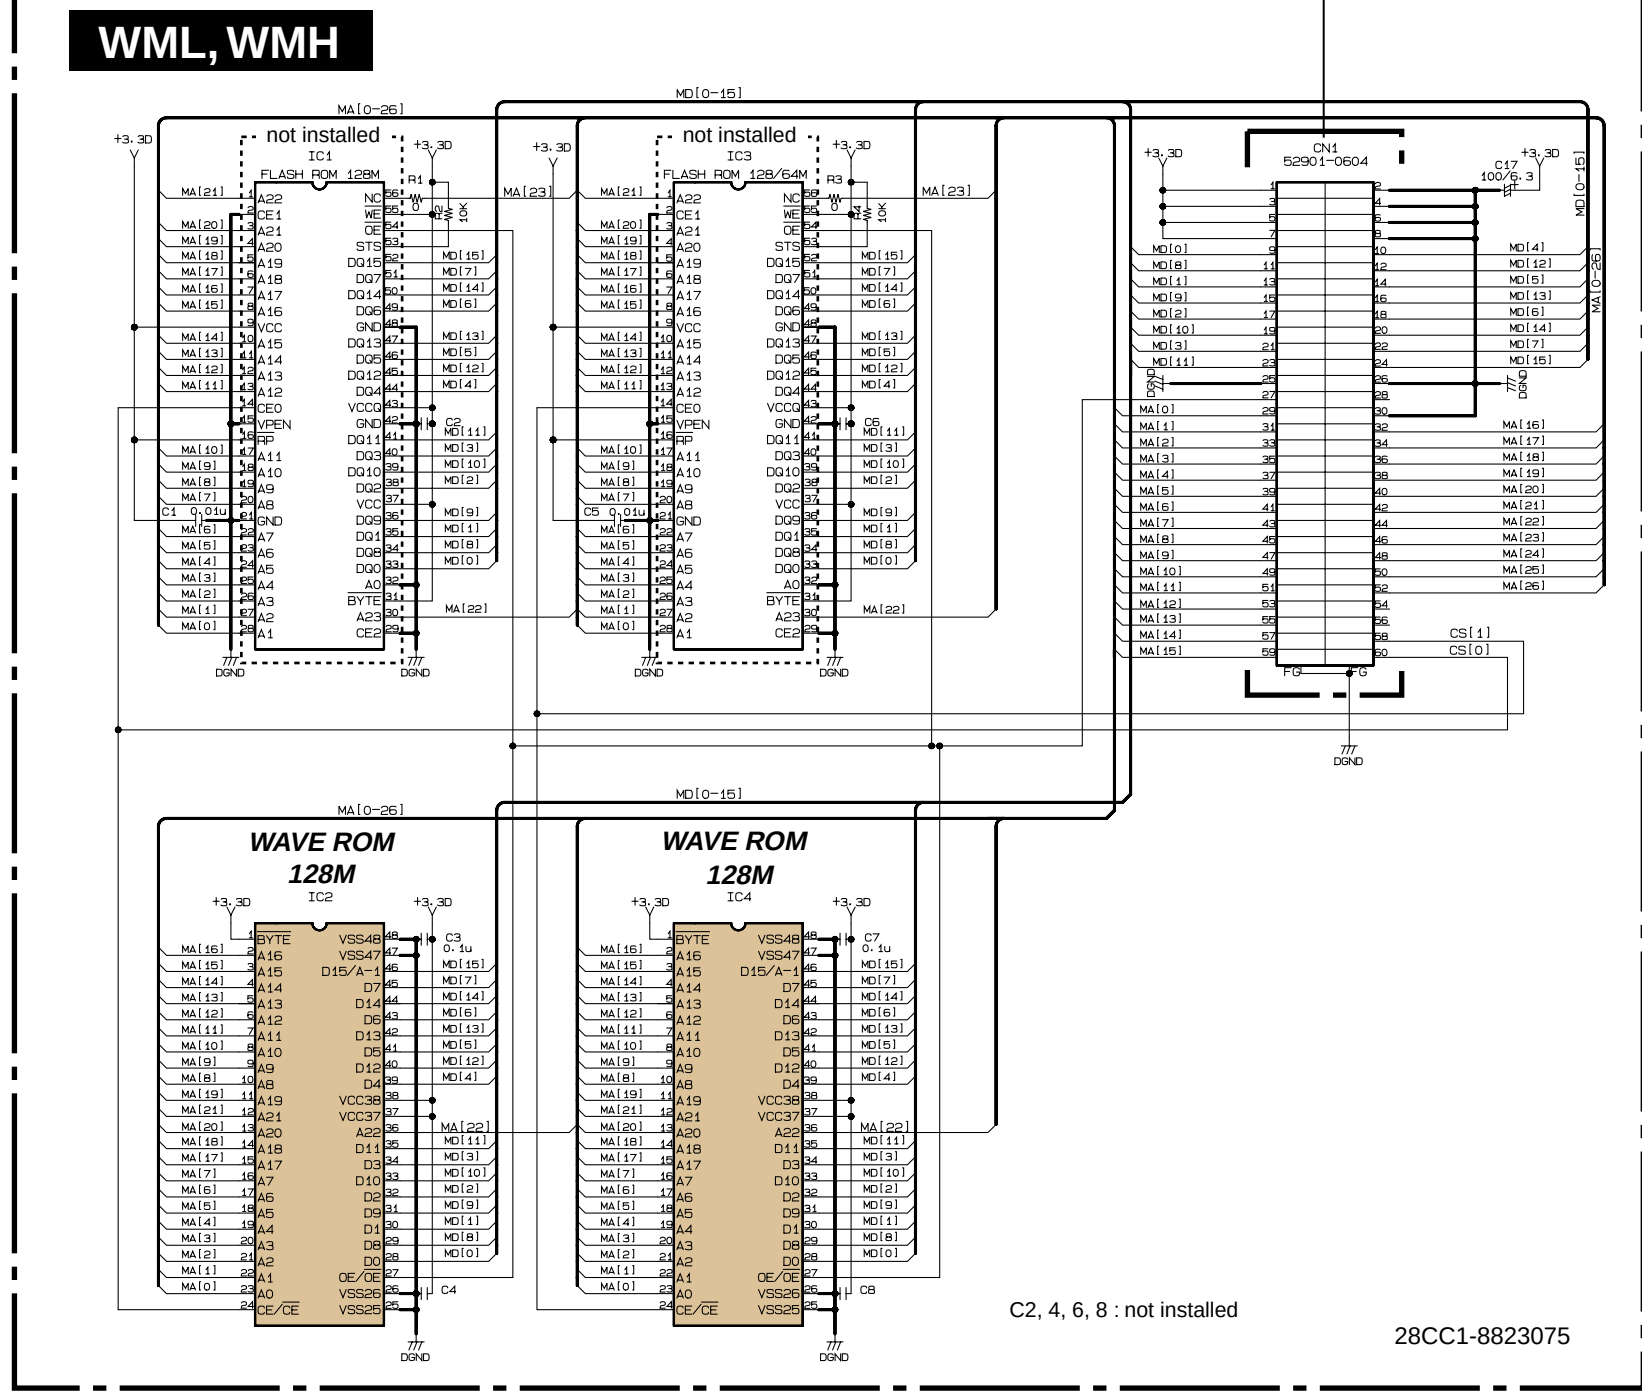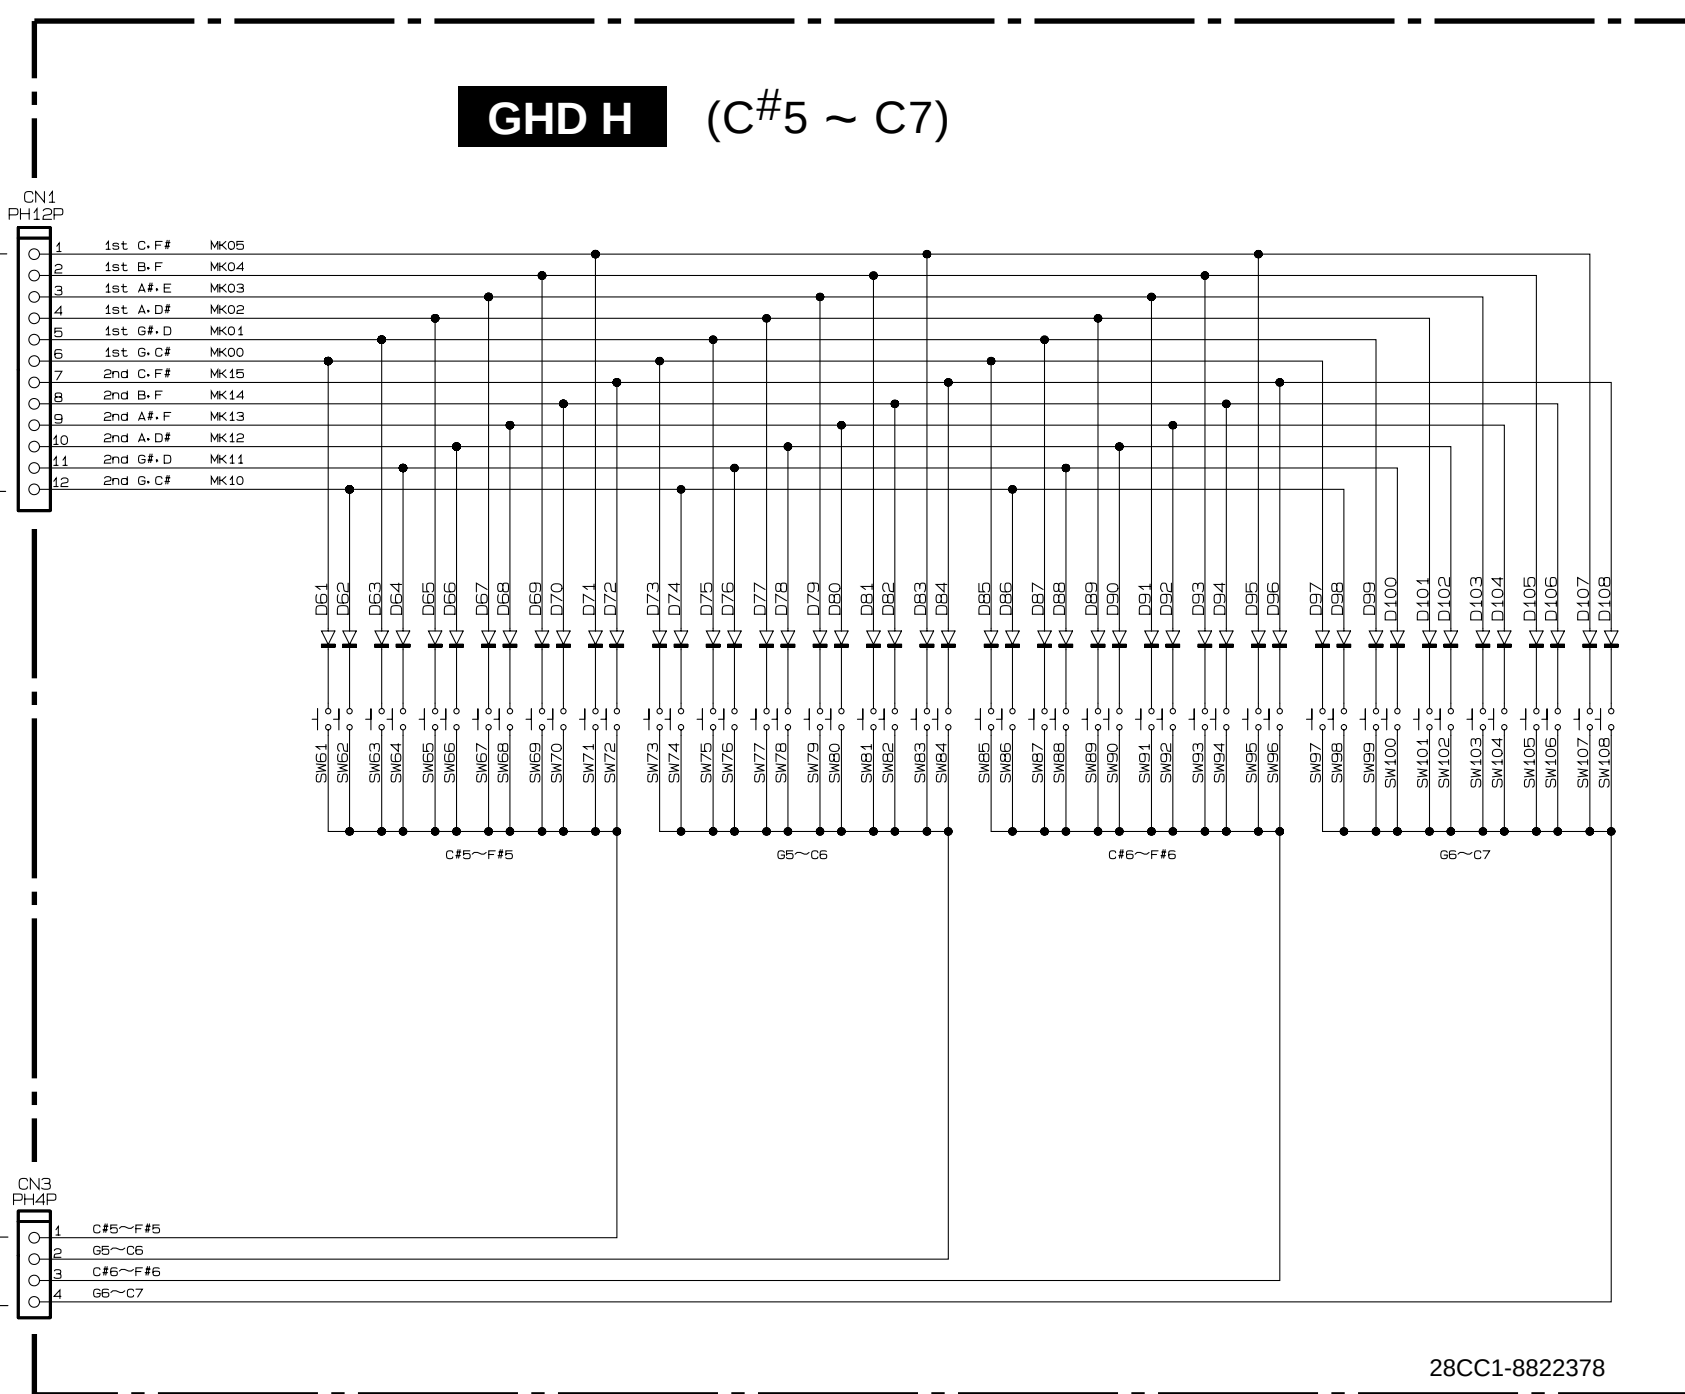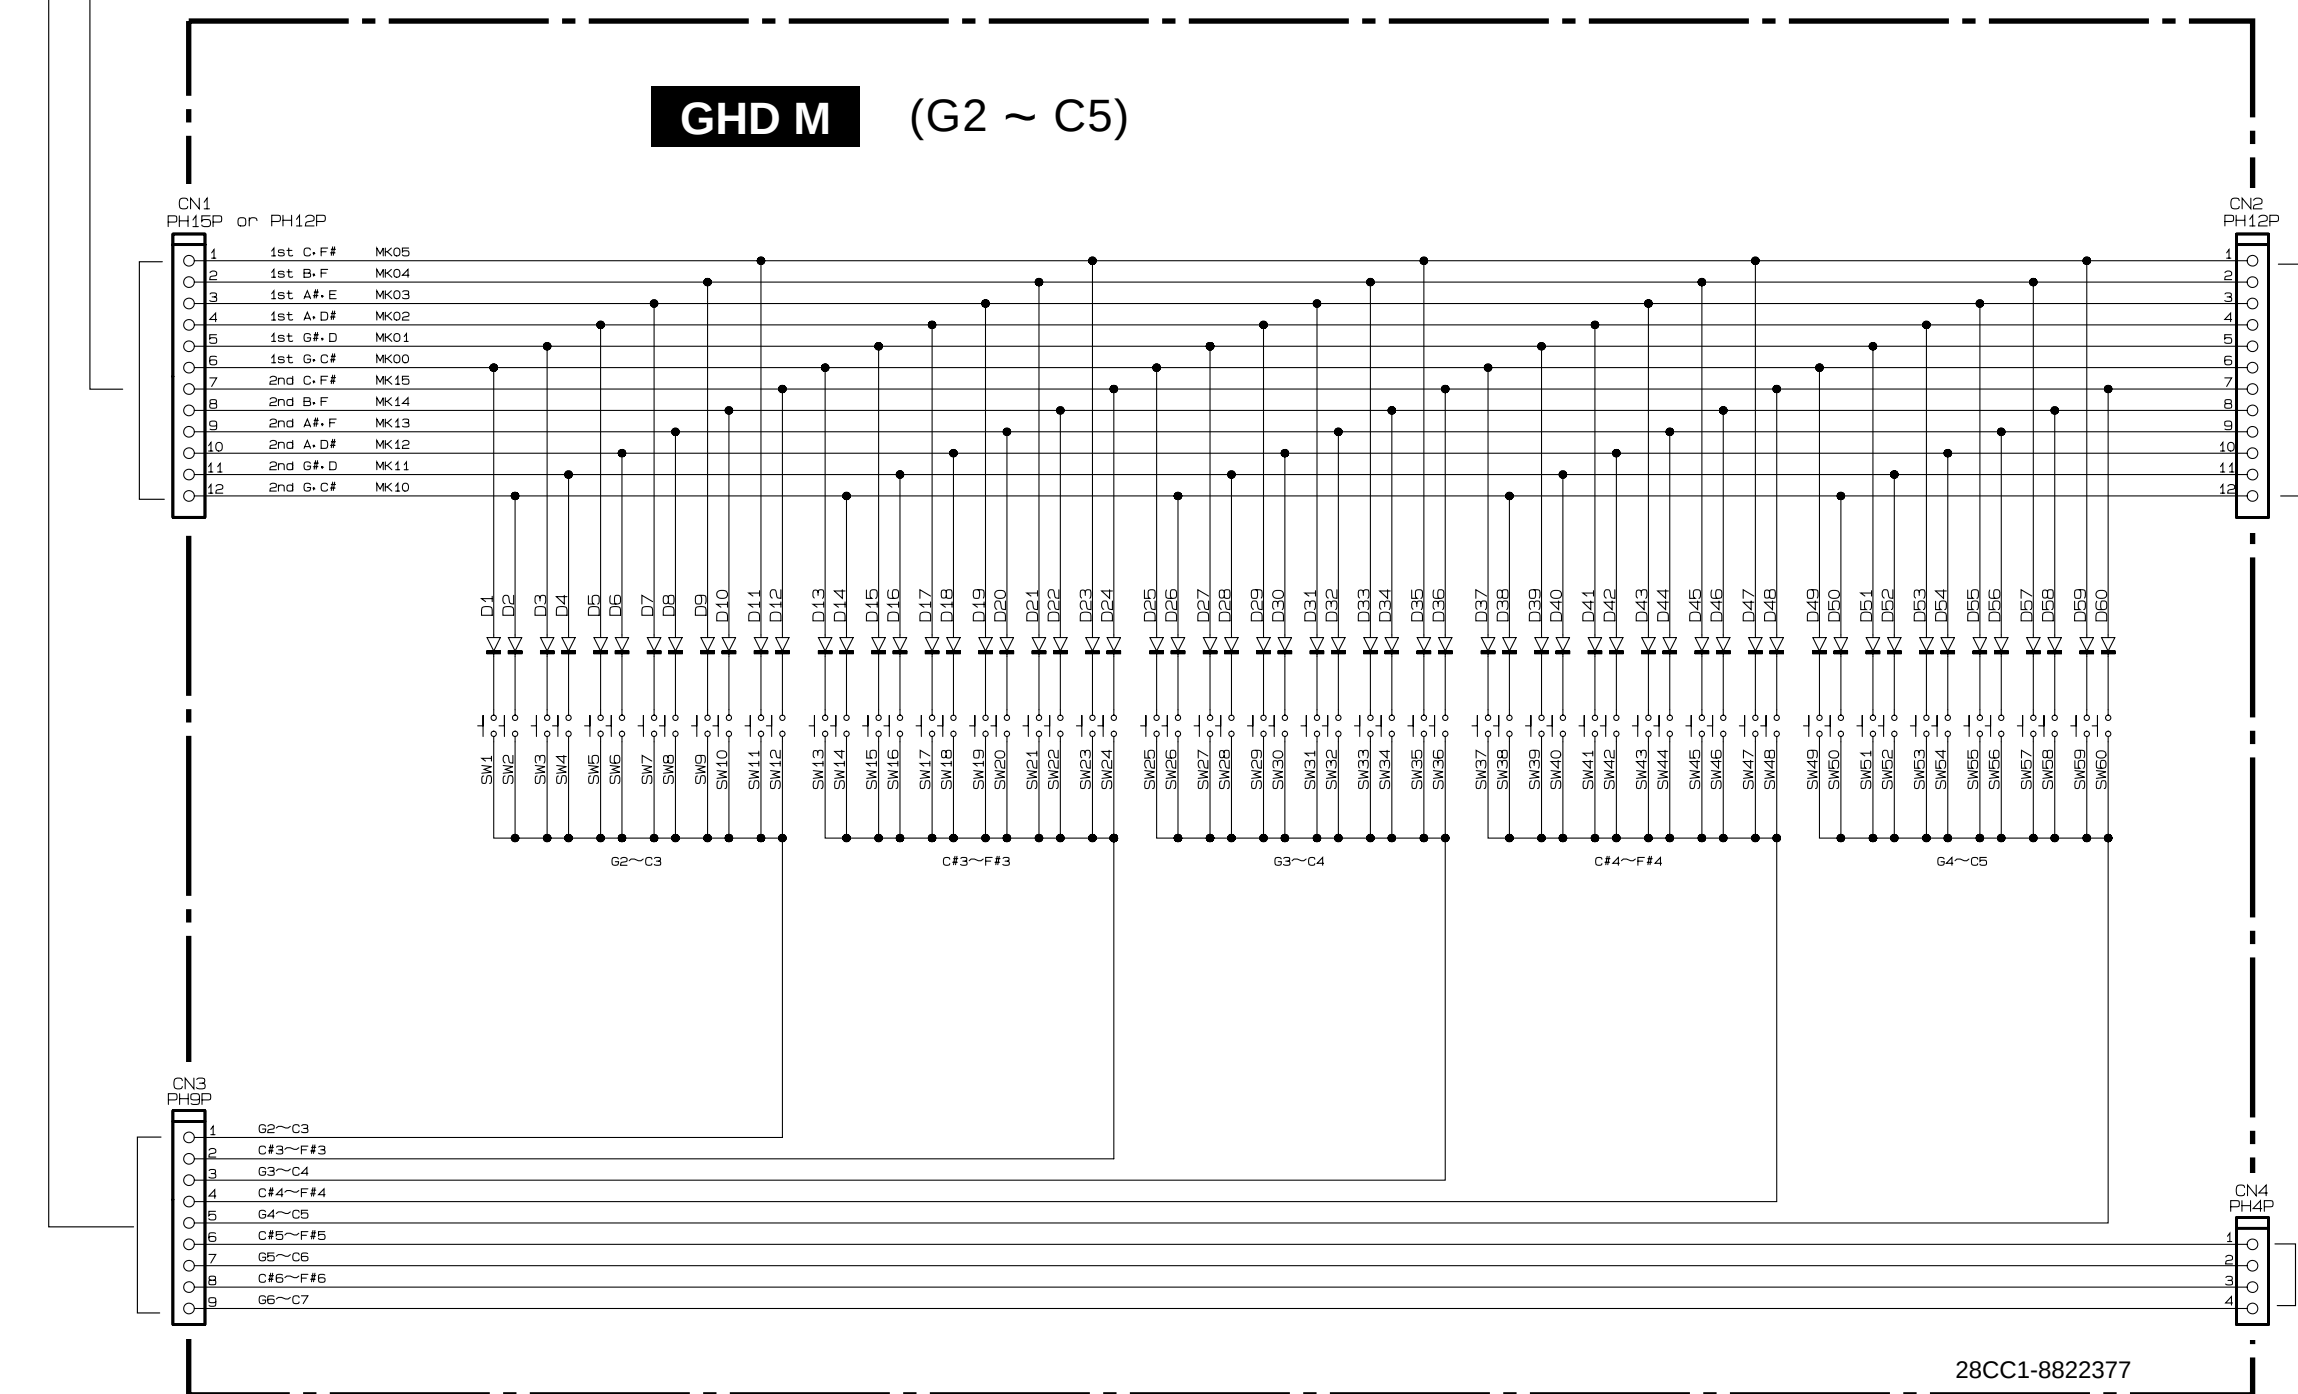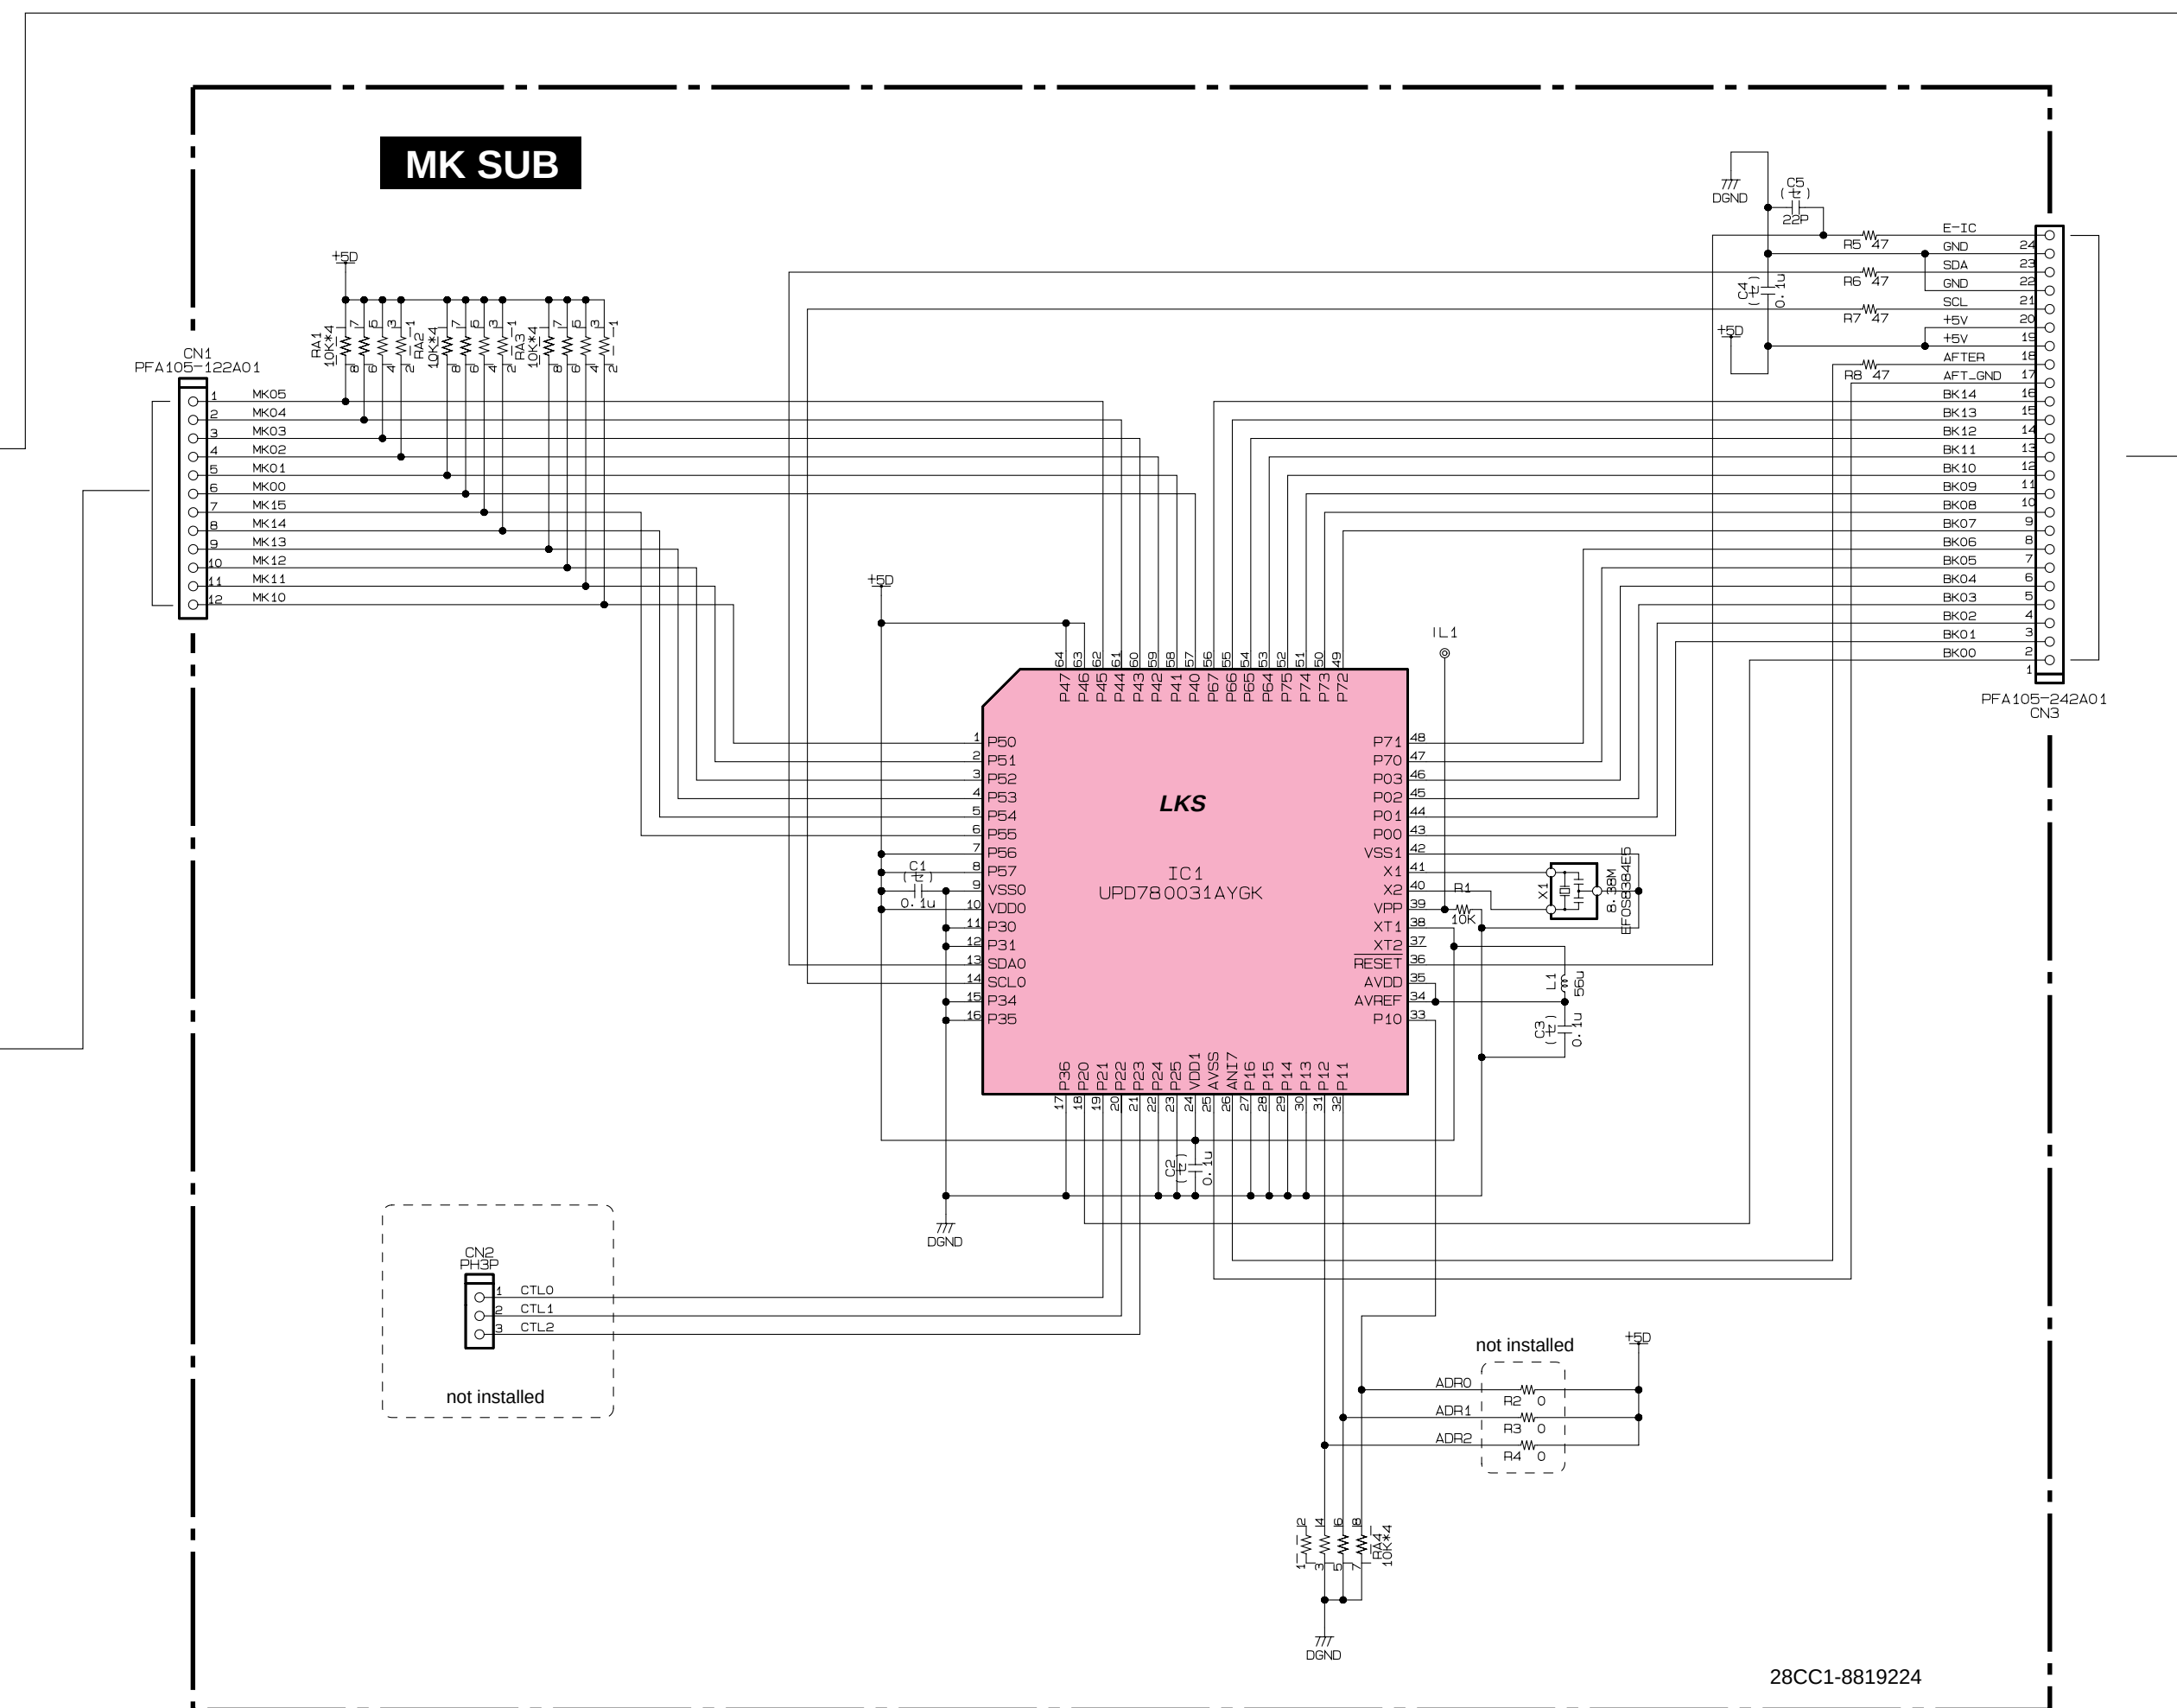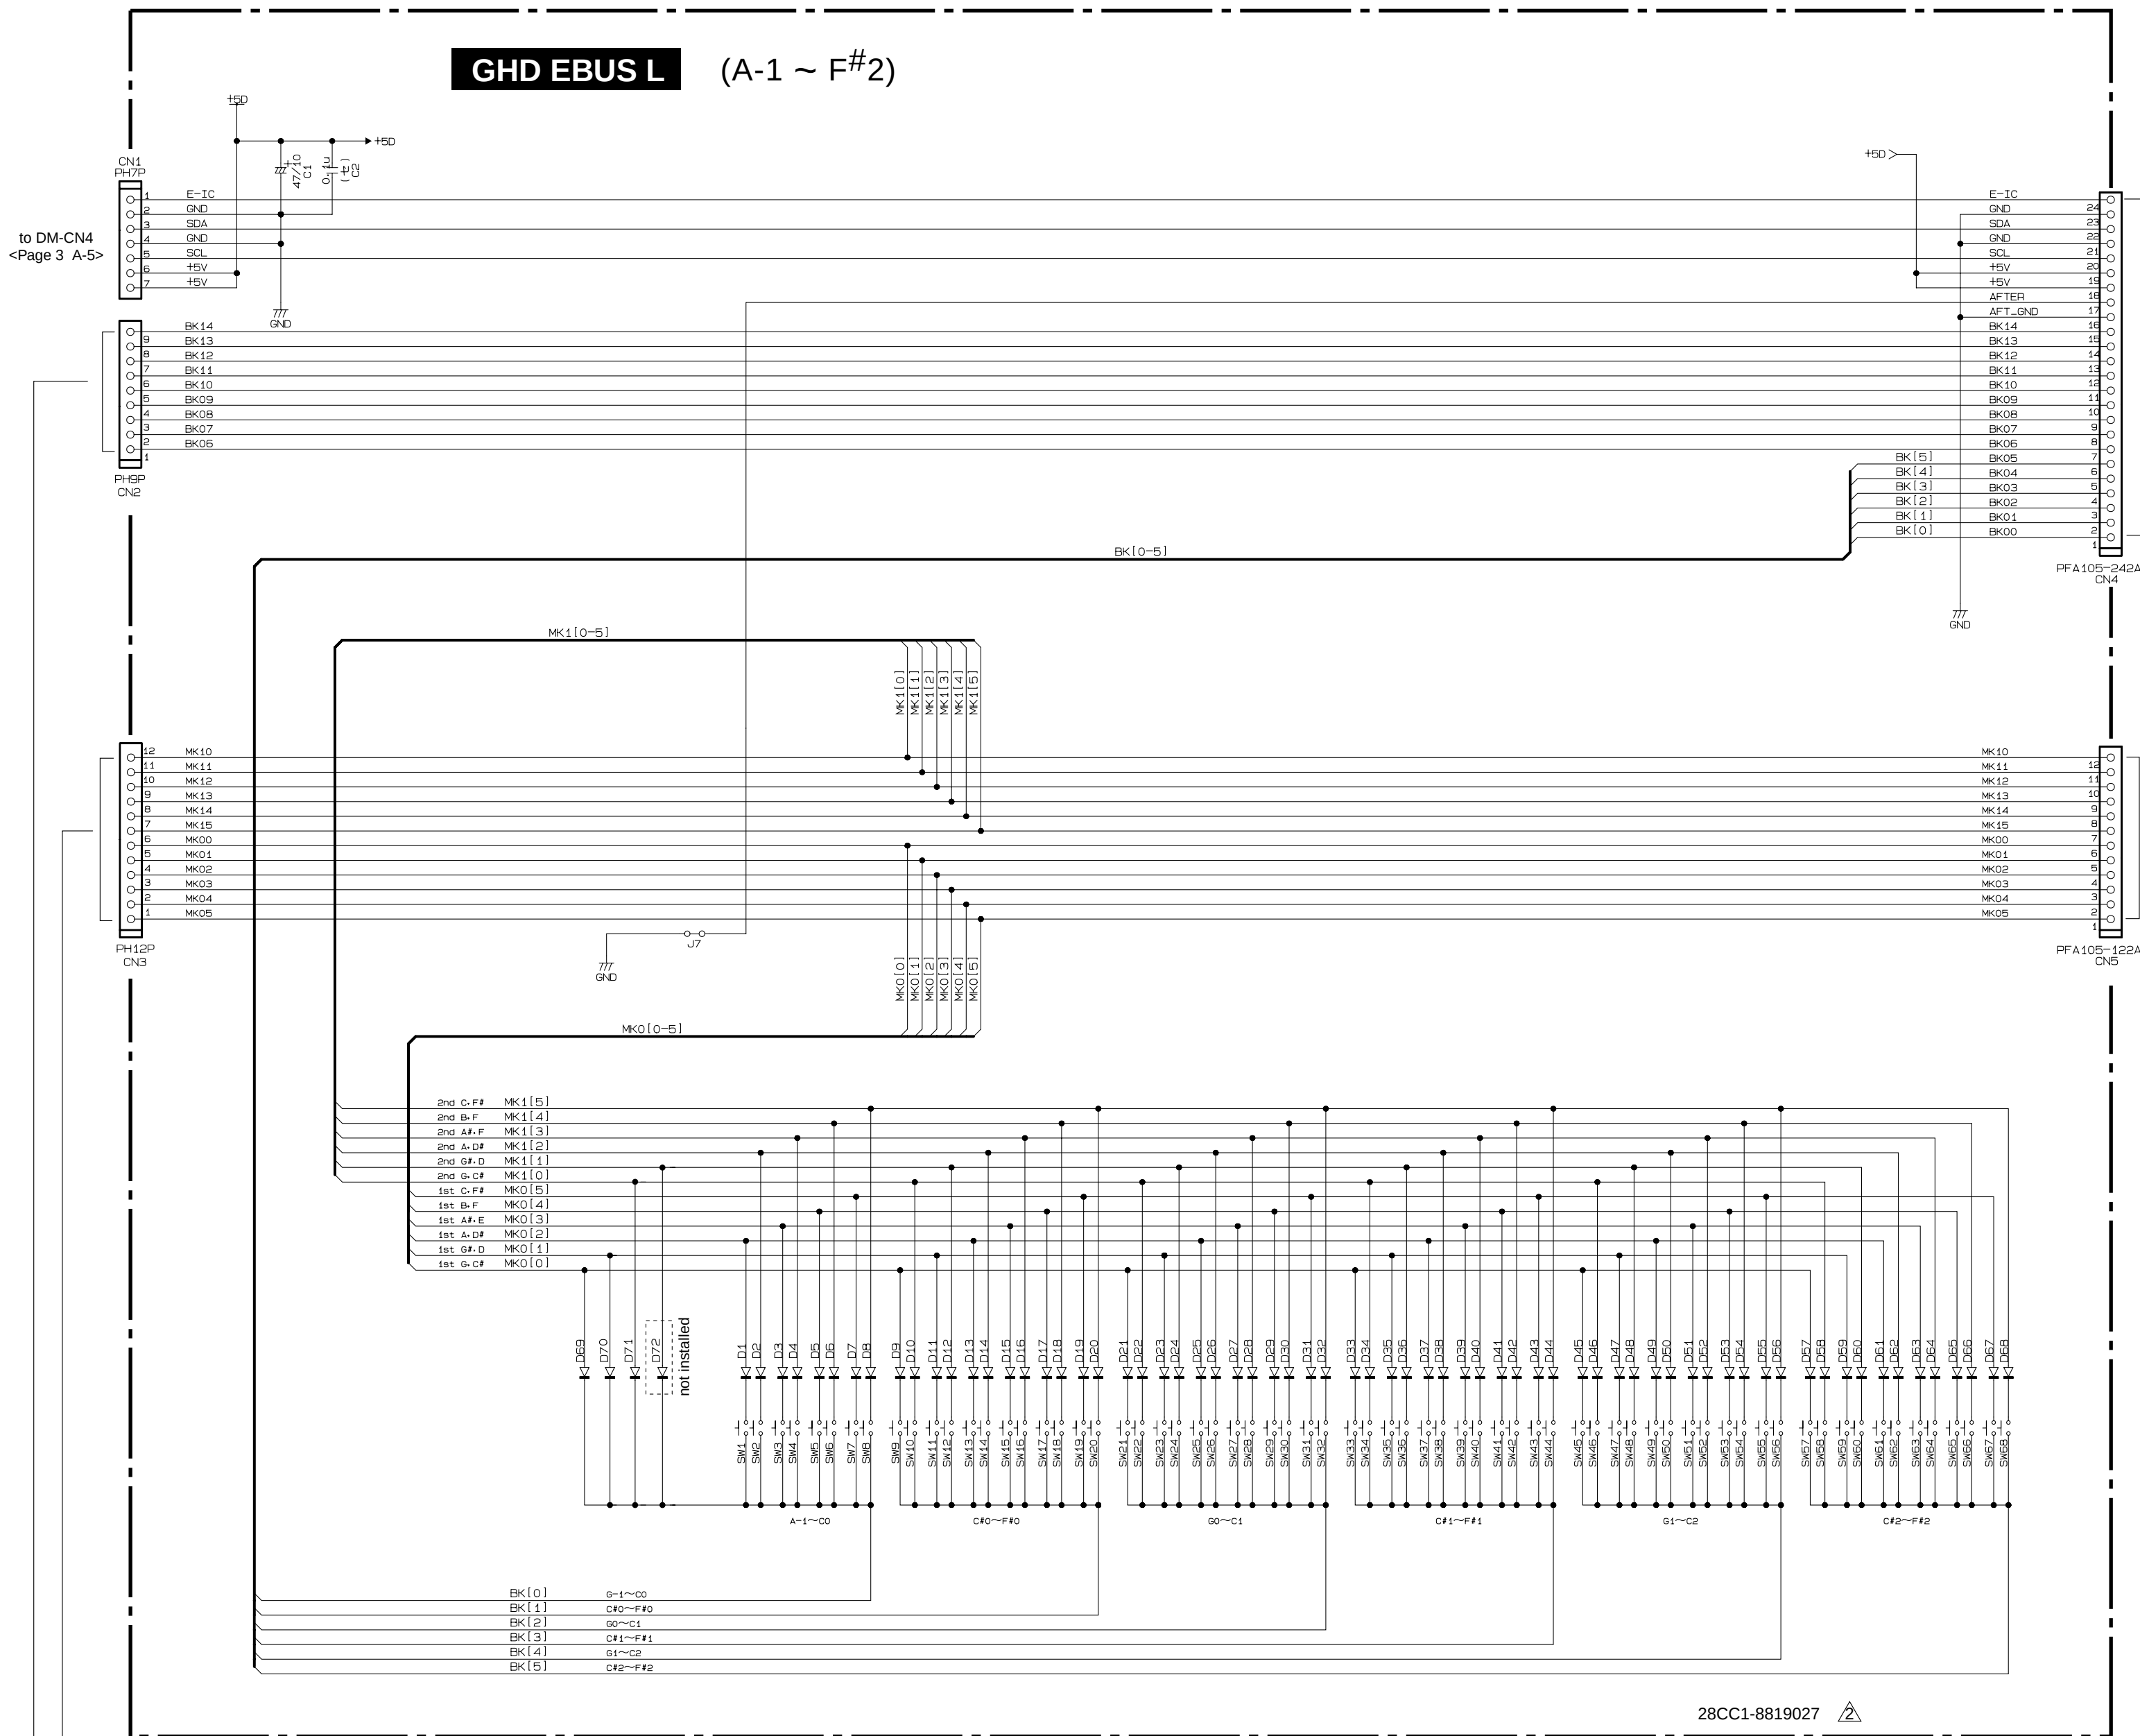


(t) : Ceramic Capacitor (セラミックコンデンサー)
Note : See parts list for details of circuit board component parts.
注 : シートの部品詳細はパーツリストをご参照ください。

■ CP300 OVERALL CIRCUIT DIAGRAM 3/4 (DJACK, MV2, PN-EQ, PNL, PNR)

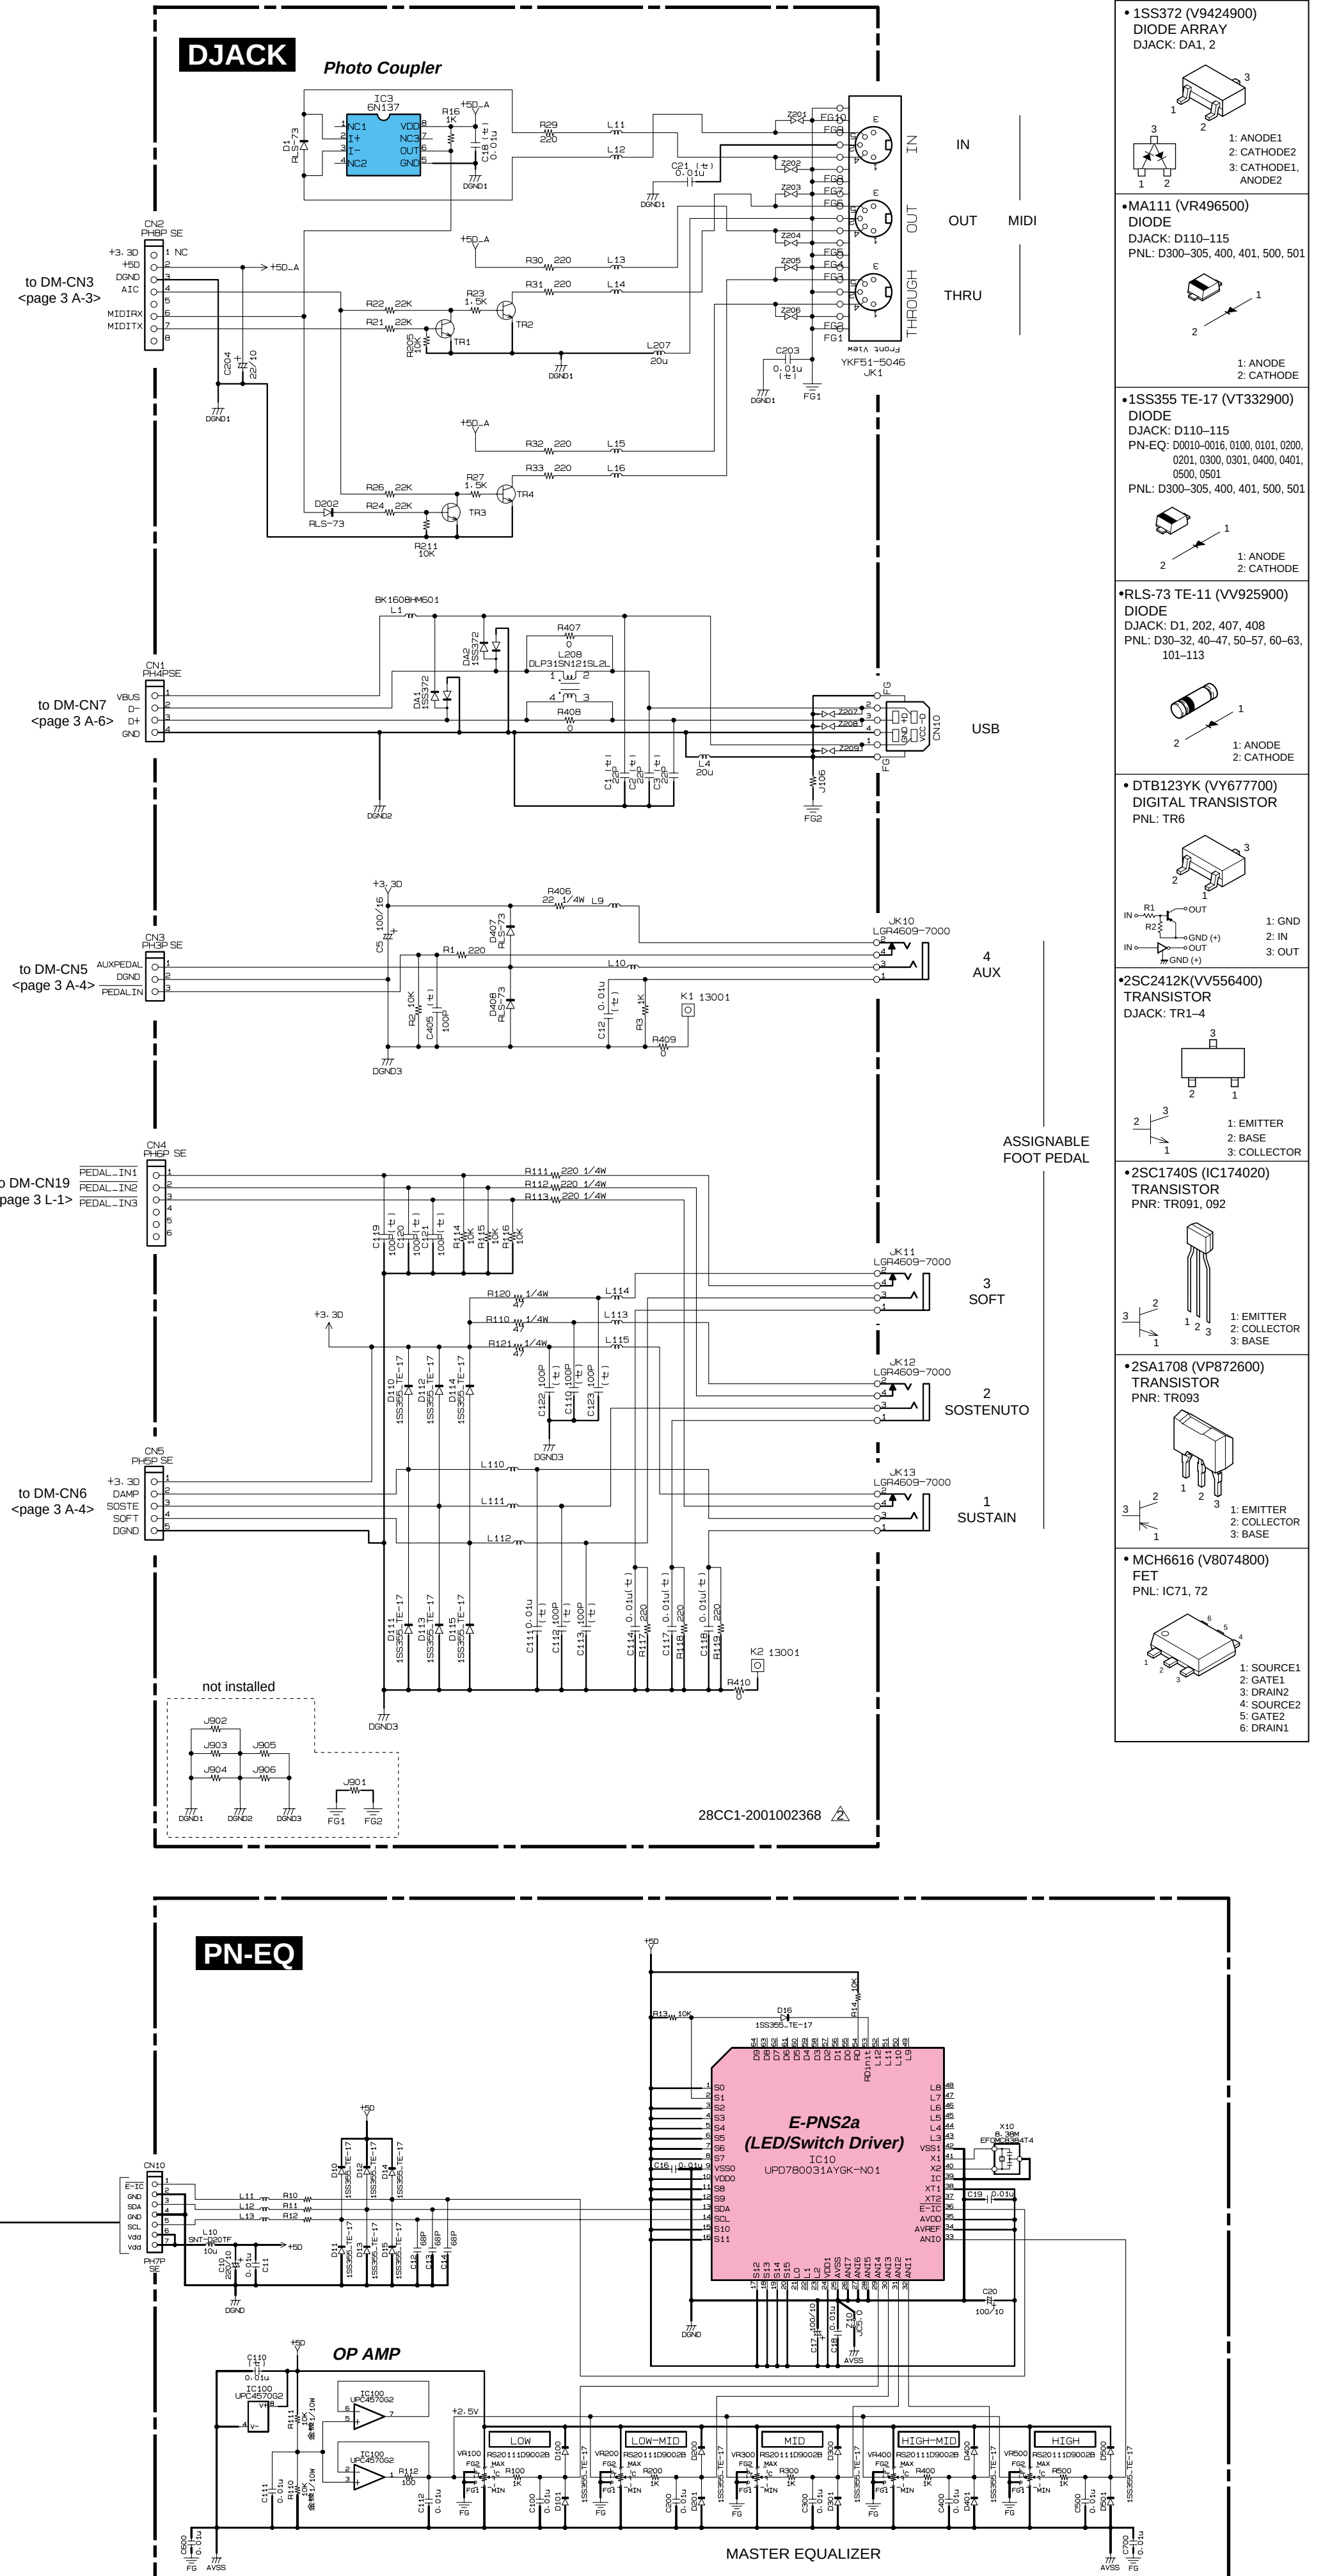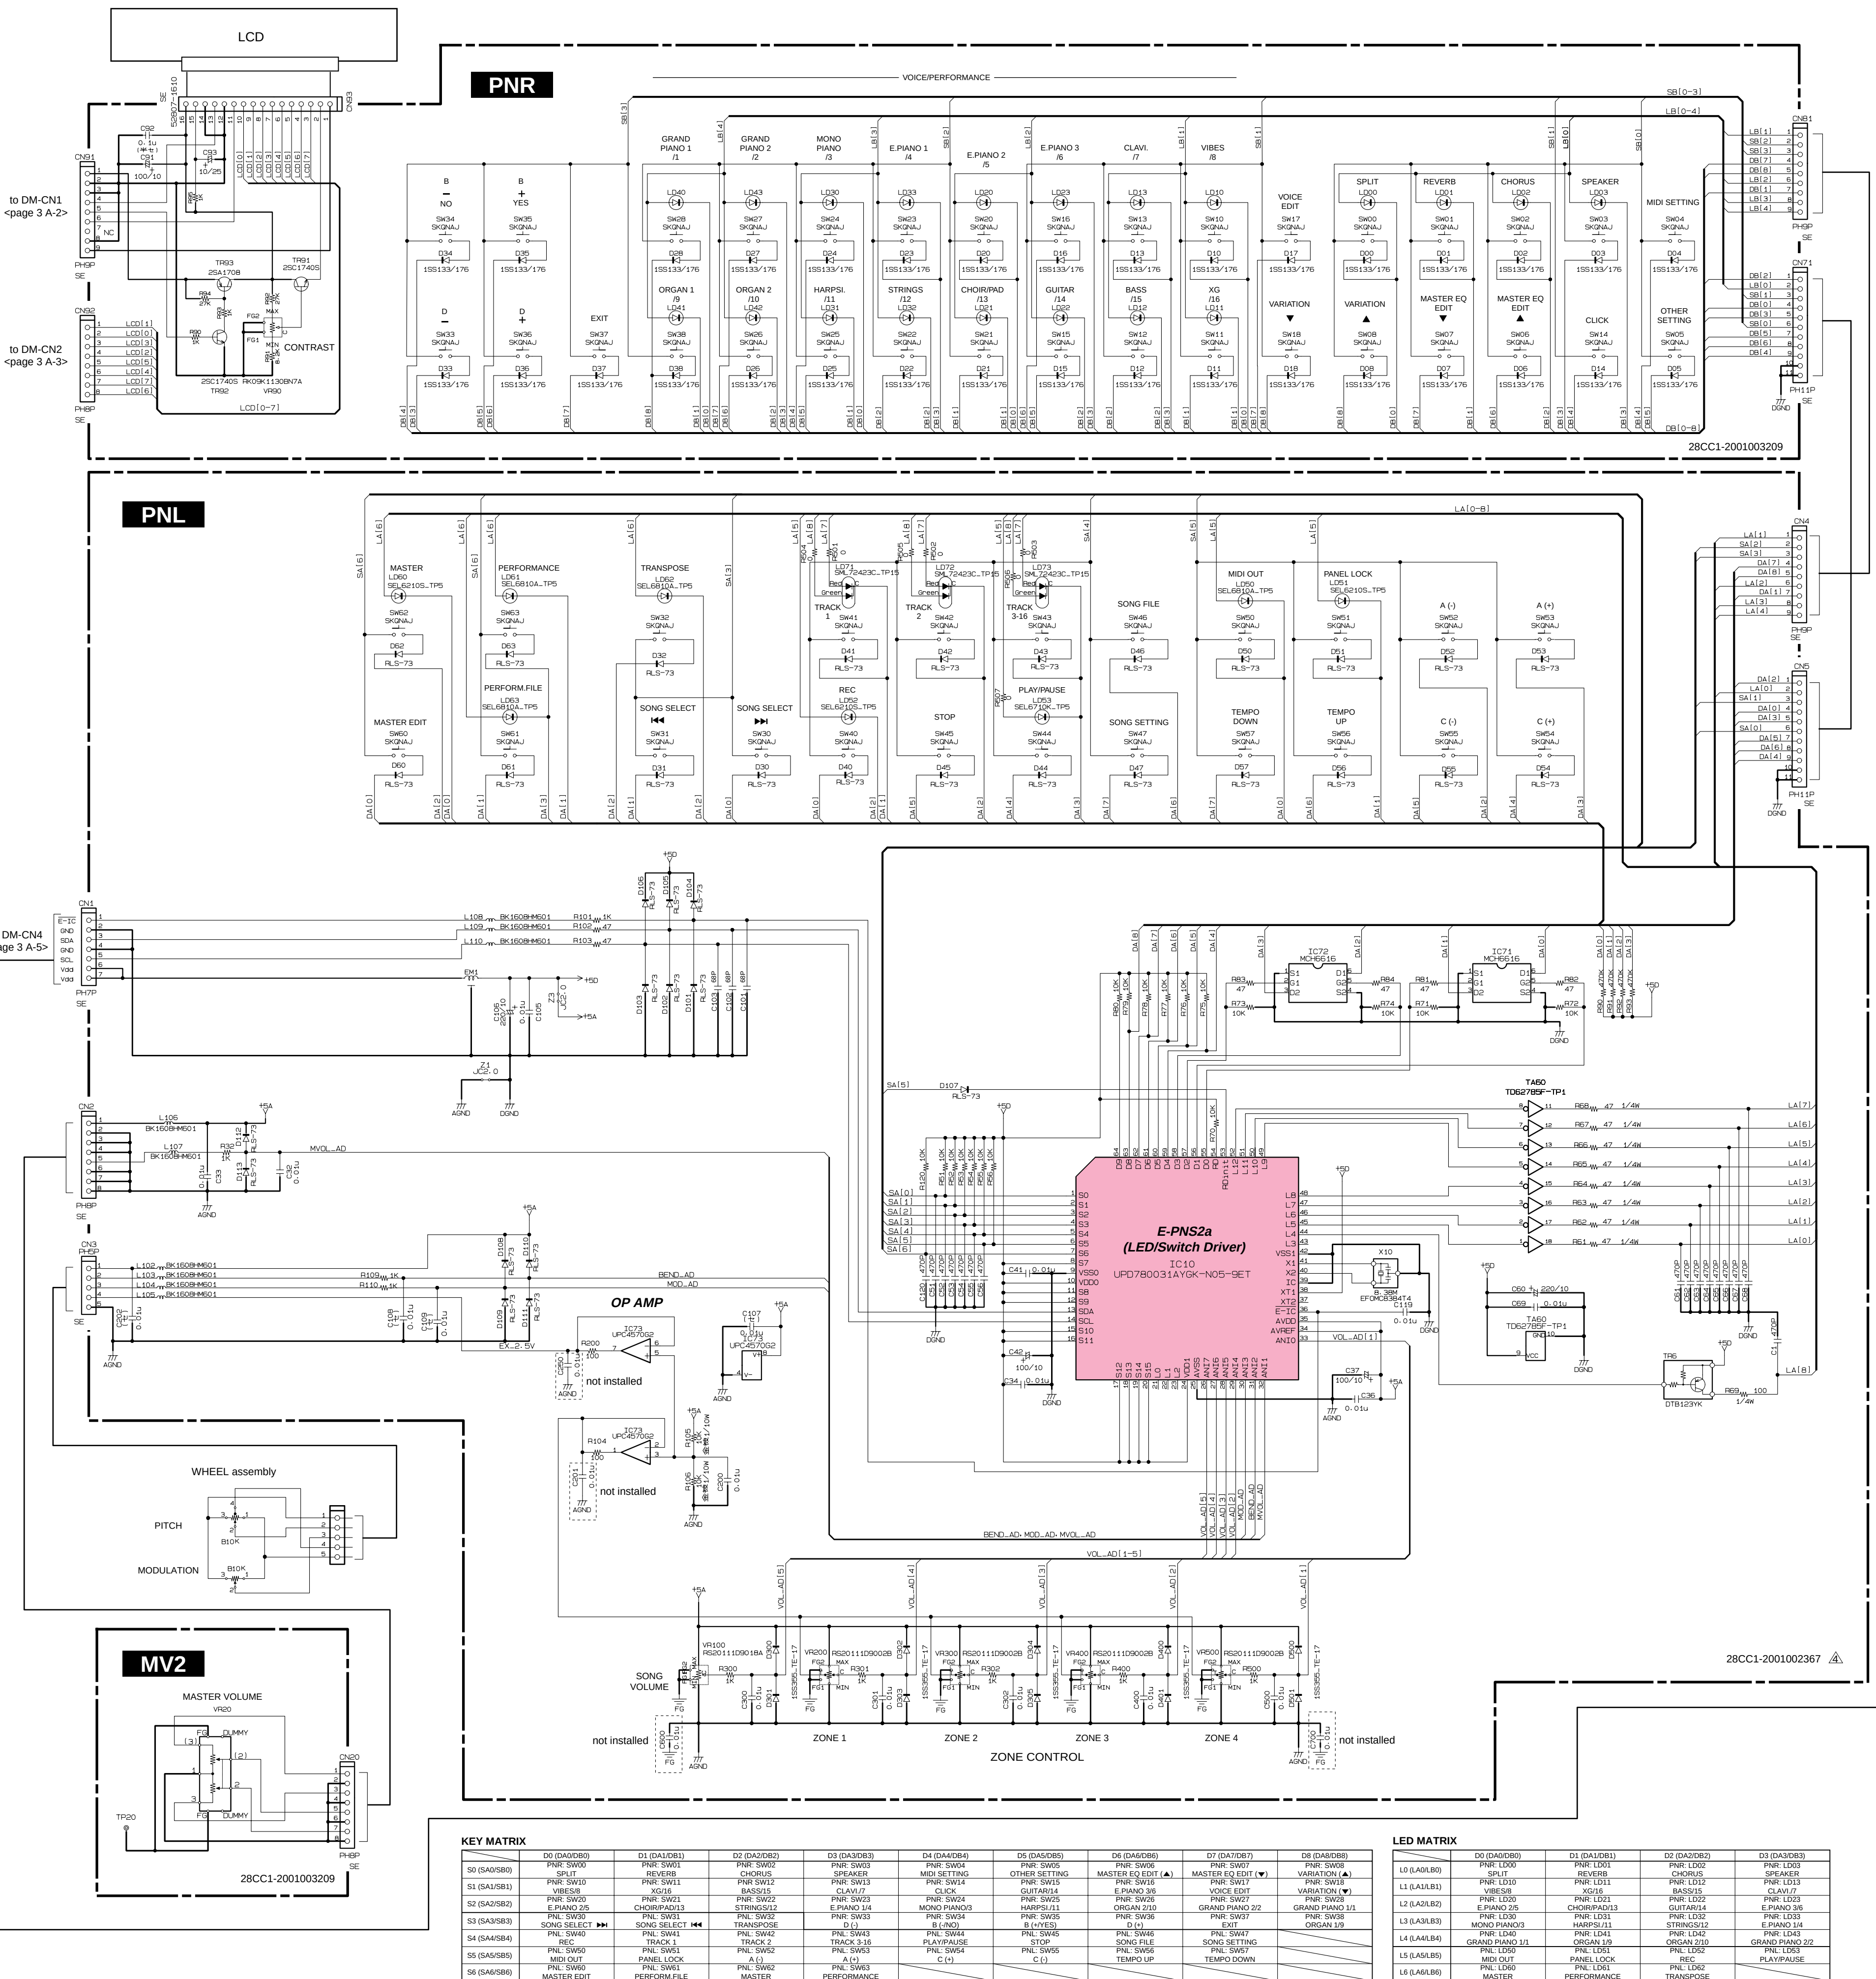

■ CP300 OVERALL CIRCUIT DIAGRAM 4/4 (AJACK, FU60, HP, MA80S, XLR)

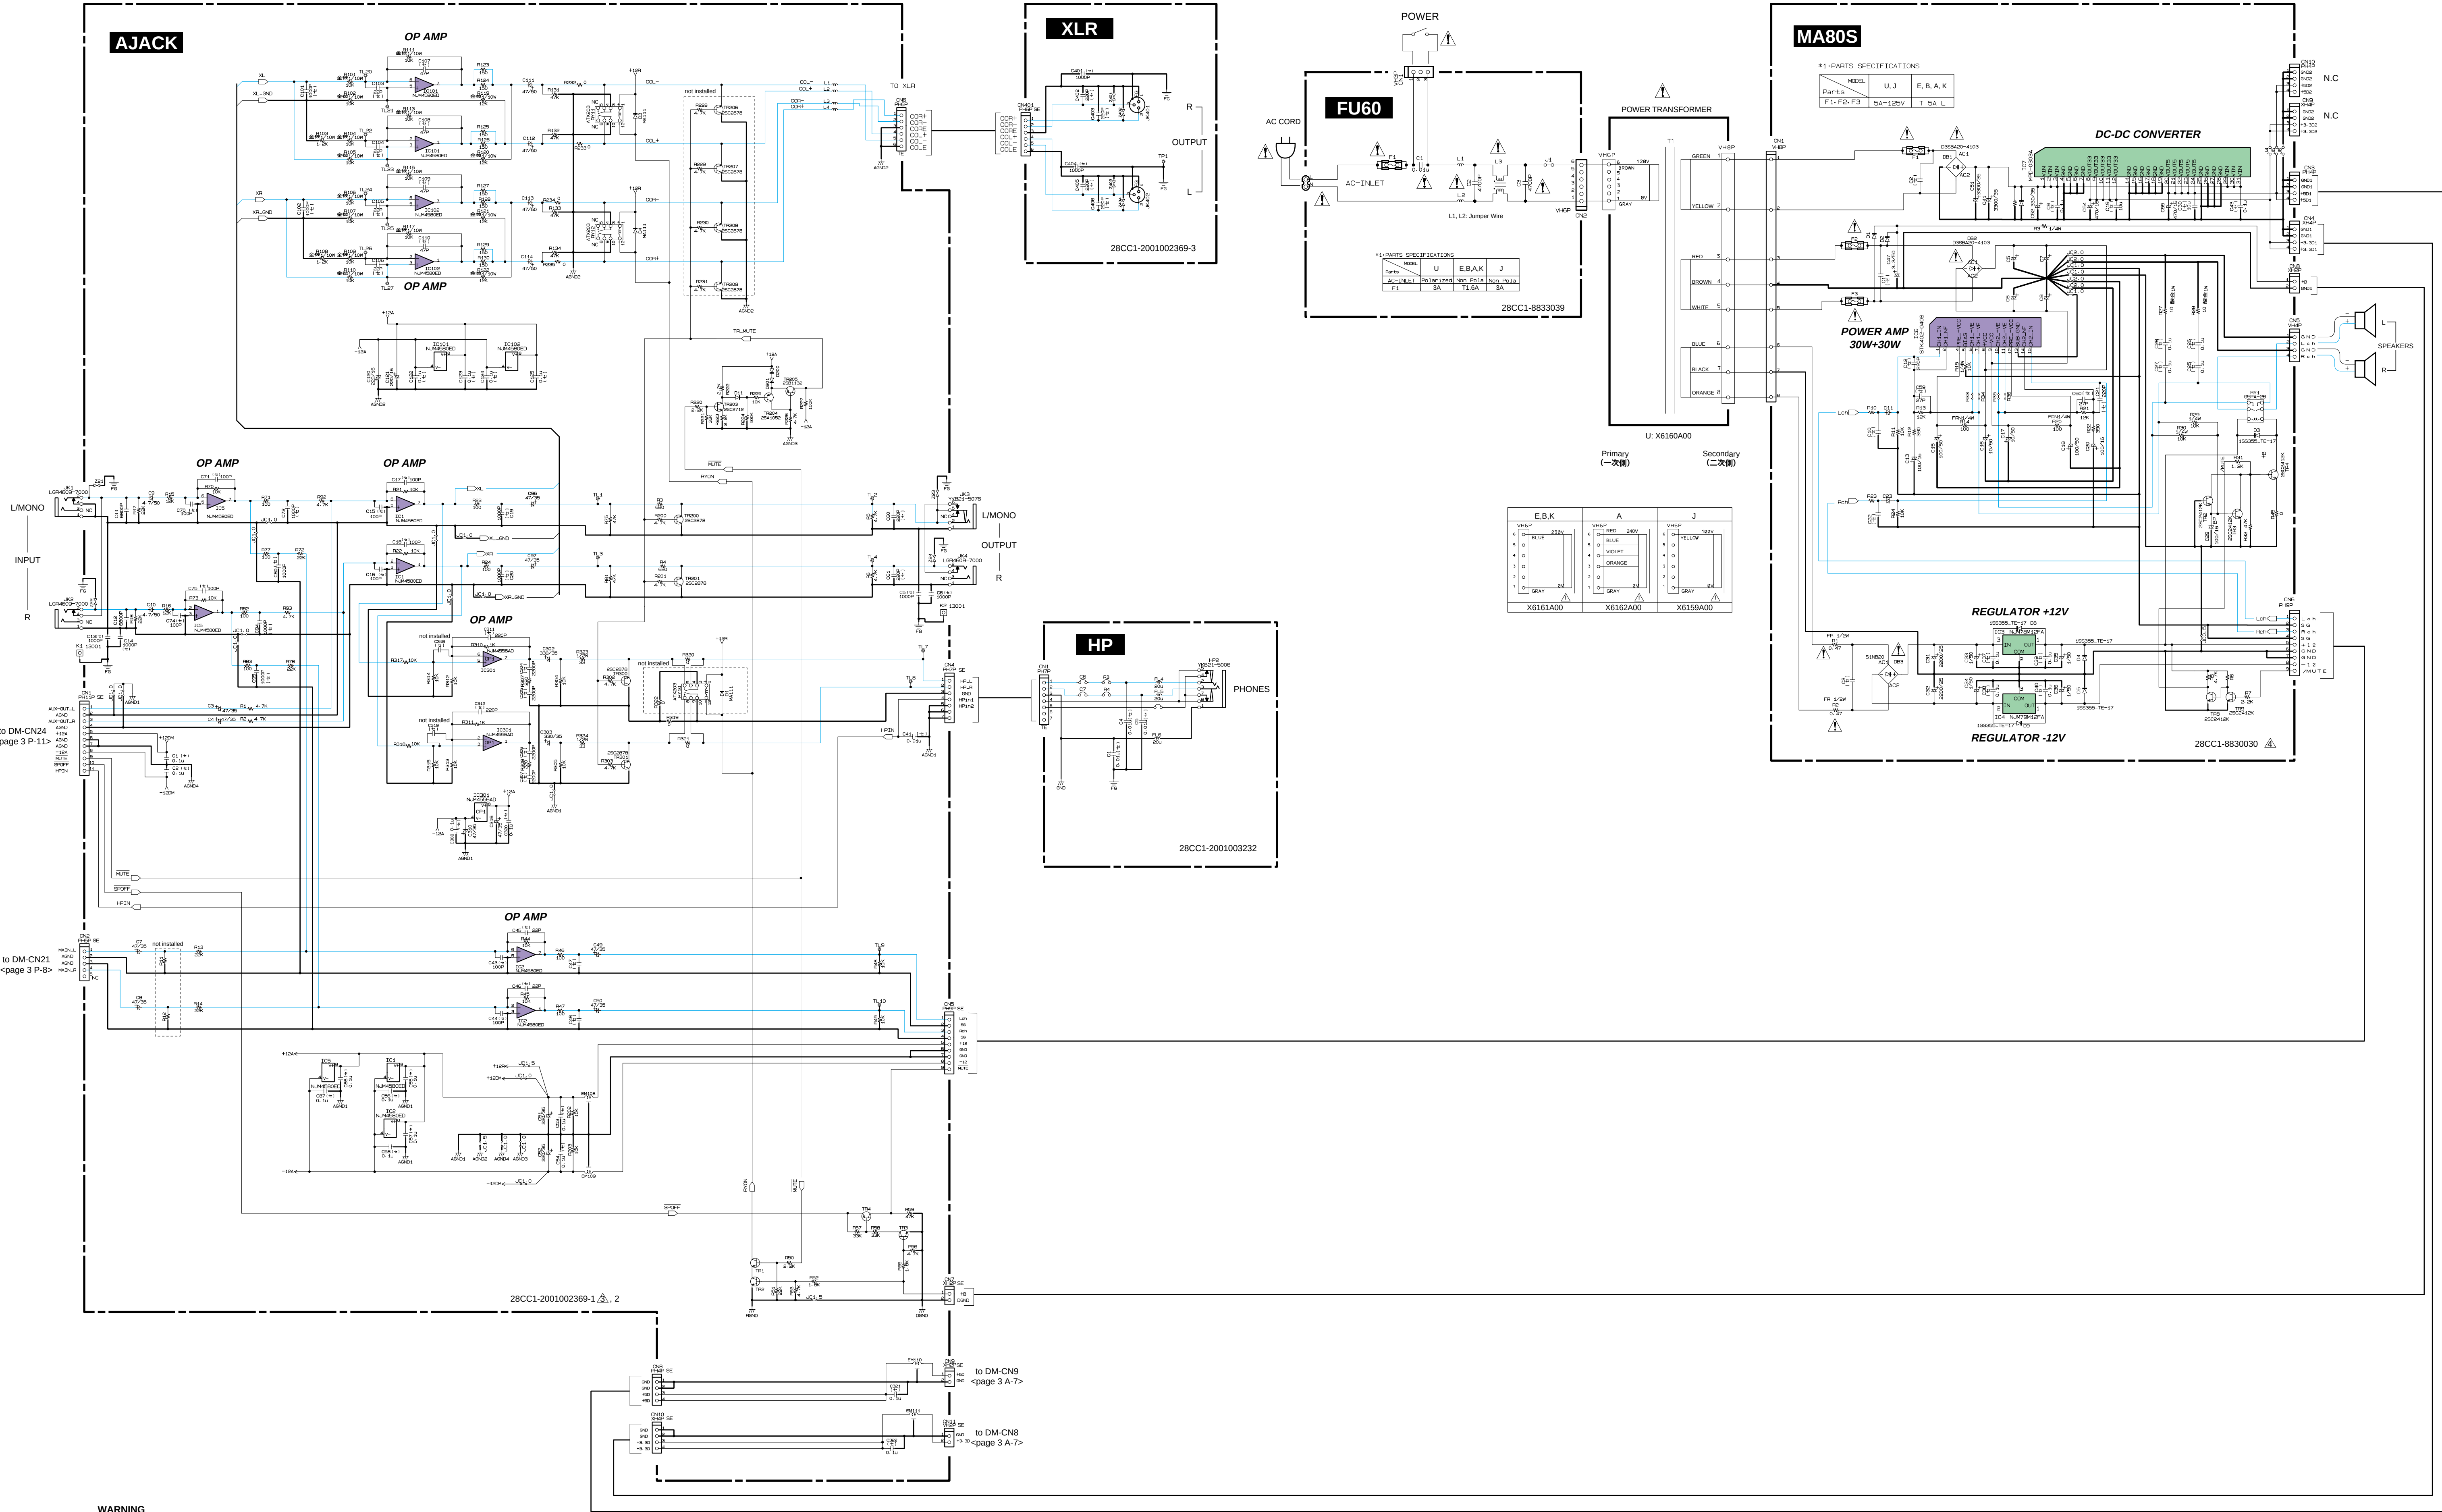

WARNING
Components having special characteristics are marked and must be replaced with parts having specification equal to those originally installed.
 印の部品は、安全を維持するために重要な部品です。
交換する場合は、安全のために必ず指定の部品をご使用ください。

(金膜) : Metal Film Resistor (金属被膜抵抗)
(酸化) : Metal Oxide Film Resistor (酸化金属被膜抵抗)
(セ) : Ceramic Capacitor (セラミックコンデンサ)

Note : See parts list for details of circuit board component parts.
注 : シートの部品詳細はパーツリストをご参照ください。

• NJM79M12FA (XD343A00) REGULATOR -12V MA80S: IC004	• NJM79M12FA (XJ602A00) REGULATOR +12V MA80S: IC003	• D3SBA20-4103 (VQ111500) DIODE STACK 4.0A MA80S: DB001, 002	• SINB20 1.0A 200V (VR253700) DIODE STACK MA80S: DB003	• MA111 (VR496500) DIODE AJACK: D3, 4, 11, 200, 201	• 1SS355 TE-17 (VT332900) DIODE AJACK: D3, 4, 11, 200, 201 MA80S: D0003-0005, 0008, 0009	• 2SC2412K (VVS56400) TRANSISTOR AJACK: TR1-3 MA80S: TR002-004, 008, 009	• 2SA1037AK (VVS56500) TRANSISTOR AJACK: TR4	• 2SC2878 (IC287820) TRANSISTOR AJACK: TR0, 201, 300, 301	• 2SB1132 (VG013300) TRANSISTOR AJACK: TR205	• 2SC2712 (VJ927100) TRANSISTOR AJACK: TR203	• 2SA1052 (VQ395600) TRANSISTOR AJACK: TR204
1: OUTPUT 2: INPUT 3: COMMON	1: OUTPUT 2: COMMON 3: INPUT	1: OUTPUT 2: COMMON 3: INPUT	1: OUTPUT 2: COMMON 3: INPUT	1: ANODE 2: CATHODE	1: ANODE 2: CATHODE	1: EMITTER 2: BASE 3: COLLECTOR	1: EMITTER 2: BASE 3: COLLECTOR	1: EMITTER 2: BASE 3: COLLECTOR	1: BASE 2: COLLECTOR 3: EMITTER	1: BASE 2: COLLECTOR 3: EMITTER	1: EMITTER 2: BASE 3: COLLECTOR

Other ManualsLib Projects

 www.manualslib.com

 www.manualslib.de

 www.manualslib.es

 www.manualslib.fr

 www.manualslib.nl

 www.manualslib.mx

 www.manualslib.tech 30+ Languages