

Cmod A7-35T RISC-V MCU

Datasheet & Reference Manual

MicroBlaze-V soft MCU on the Digilent Cmod A7-35T — peripherals, pins, power, and boot guides

Platform	Xilinx Artix-7 (xc7a35tcpg236-1) — Cmod A7-35T
Processor	MicroBlaze RISC-V
System Clock	100 MHz (12 MHz on-board oscillator × PLL)
Toolchain	Vivado & Vitis 2025.2

Document DS-CMOD7-0001 · Revision A · July 2026

Table of Contents

1	Device Overview	4
1.1	Introduction	4
1.2	Features	4
1.3	System Block Diagram	4
1.4	Reference Documents	4
2	System Architecture	6
2.1	MicroBlaze RISC-V Core	6
2.2	Bus Architecture	6
2.3	Interrupt Controller	6
2.4	Clocking	7
2.5	Reset	7
2.6	Debug Module	7
2.7	Complete Address Map	7
3	Memory Hierarchy	8
3.1	Memory Hierarchy Overview	8
3.2	Memory Map	9
3.3	Local Memory (ITCM / DTCM / Bootloader)	9
3.4	External SRAM (Cellular RAM)	9
3.5	QSPI Flash	10
3.6	Caches	10
3.7	Measured Access Latencies	10
3.8	Memory Placement Guidance	11
4	Pinout	12
4.1	DIP Connector Overview	12
4.2	Pin Map — Left Side (Pin 1–24)	13
4.3	Pin Map — Right Side (Pin 25–48)	13
4.4	On-Board I/O (No DIP Pin Exposure)	14
5	Peripherals	15
5.1	GPIO	15
5.1.1	On-Board GPIO	15
5.1.2	DIP Connector GPIO (4 Groups × 7-bit)	15
5.1.3	External Interrupt Inputs (INT_0_3)	15
5.2	Timers and PWM	15
5.2.1	System Timers	15
5.2.2	PWM Outputs	15
5.3	UART	16
5.3.1	USB UART (uart_USB)	16
5.3.2	External UART (uart_1)	16
5.4	I2C Controller	16
5.5	SPI Master	16
5.6	Analog-to-Digital Converter (XADC)	16
5.6.1	Analog Input Circuit	17
6	Electrical Characteristics and Power	18
6.1	Electrical Characteristics	18
6.2	Power Architecture	18
6.3	Power Input Options	18
6.4	Output Power Rails	18
6.4.1	Power-Up Sequence	19
6.5	VU Pin Behavior	19
6.6	Dual Power Source (USB + External)	19
6.7	Quick Reference for External Power Design	19
7	JTAG Debug Mode	20
7.1	Prerequisites	20
7.2	Open the Workspace	20
7.3	Create a Platform	21
7.3.1	New Platform Component	21
7.3.2	Platform Name and Location	21
7.3.3	Select the Hardware Design (XSA)	22
7.3.4	Select Operating System and Processor	23
7.3.5	Platform Summary	23
7.4	Create an Application	24
7.4.1	Create from Template	24

7.4.2	Application Name and Location	25
7.4.3	Select the Platform	25
7.4.4	Select the Domain	26
7.4.5	Application Summary	26
7.5	Replace the Sources with the Course Template	27
7.5.1	Delete the Generated Files	27
7.5.2	Import the Template Files	28
7.5.3	About the Linker Script	29
7.6	Set the Console UART (BSP)	29
7.7	Build	30
7.7.1	Build the Platform	30
7.7.2	Build the Application	31
7.8	Debug over JTAG	32
7.8.1	Start a Debug Session	32
7.8.2	Open a Serial Terminal, Then Continue	33
7.8.3	Breakpoints and Stepping	34
7.9	Inspection Tools	34
7.9.1	Memory Inspector	35
7.9.2	Register Inspector	35
7.9.3	Disassembly View	36
7.10	Troubleshooting	36
8	Standalone Boot	38
8.1	How Standalone Boot Works	38
8.2	Prerequisites	38
8.3	Create the Bootloader Component	38
8.3.1	New Application from Template	38
8.3.2	Name and Location	39
8.3.3	Select the Platform	39
8.3.4	Summary	40
8.4	Configure the Bootloader	40
8.4.1	Set the Application Slot Address	40
8.4.2	Disable Verbose Output	41
8.5	Build the Bootloader	42
8.6	Merge the Bootloader into the Hardware Image	43
8.7	Prepare the Application Image	44
8.8	Program the Flash	45
8.8.1	Program the Hardware Image	46
8.8.2	Program the Application	47
8.9	Boot and Verify	48
8.10	Updating the Application	48
8.11	Working with JTAG Debug Mode	48
8.12	Troubleshooting	49

1 Device Overview

1.1 Introduction

The Cmod A7-35T RISC-V MCU is a soft microcontroller implemented on the Artix-7 FPGA of the Digilent Cmod A7-35T module. To the programmer it behaves like a commercial flash-based MCU: firmware is stored in the on-board QSPI flash and boots automatically in under a second at power-on, and the full AMD Vitis/JTAG development flow is available on the same board over a single USB cable, with no jumpers or mode switching.

The system is built around a MicroBlaze-V (RISC-V) processor with a three-level memory hierarchy and a class-based AXI peripheral address map. The memory hierarchy consists of tightly-coupled BRAM (ITCM/DTCM), cached external SRAM, and QSPI flash storage.

1.2 Features

- **CPU:** 32-bit RISC-V (RV32IM + bit-manipulation) at 100 MHz; 16 KB I-cache + 16 KB D-cache (write-through, 32-byte lines)
- **Memory:** 128 KB block RAM (32 KB bootloader + 32 KB ITCM + 64 KB DTCM, single-cycle); 512 KB SRAM for application code and data (cached); 4 MB QSPI flash (bitstream + application storage)
- **GPIO:** 28 bidirectional pins in four 7-bit groups, plus 4 dedicated external interrupt inputs
- **Timers:** 3 × 32-bit general-purpose timers with interrupts; 3 dedicated PWM output channels
- **Communication:** 2 × 16550 UART (USB + DIP header); I2C master (100 kHz, 50 ns glitch filter); SPI master (software-settable clock ≈ 1.6 – 25 MHz, 2 slave selects)
- **Analog:** 2 external ADC inputs (12-bit XADC, 0–3.3 V range) plus on-die temperature and supply monitors
- **I/O:** 48-pin DIP form factor, 3.3 V LVCMOS (not 5 V tolerant)
- **Boot:** standalone boot from flash (< 1 s) via the on-chip bootloader, or JTAG load/debug from Vitis; both coexist without reconfiguration
- **Debug:** JTAG breakpoints, single-step, register and memory inspection

1.3 System Block Diagram

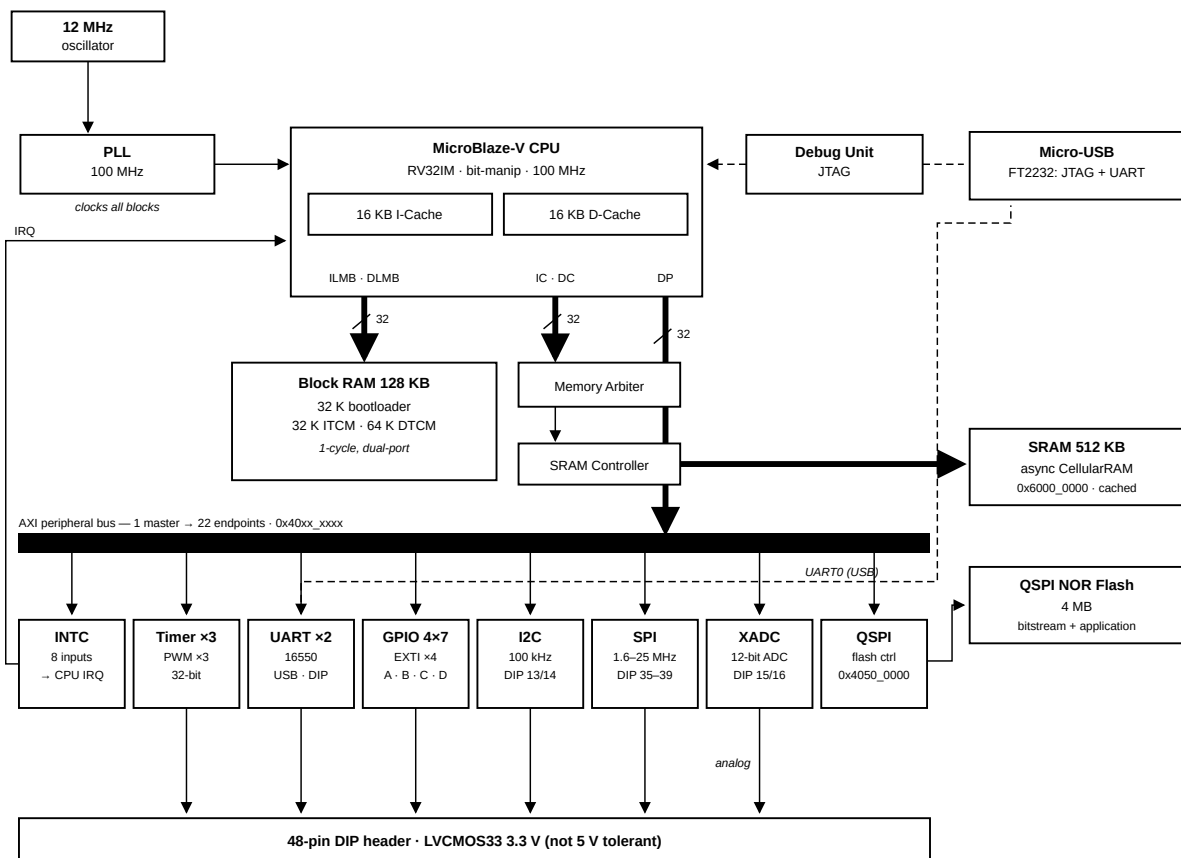


Figure 1: System Architecture

1.4 Reference Documents

- Digilent *Cmod A7 Reference Manual*: board schematics, connectors, and the power tree

- AMD/Xilinx *DS181, Artix-7 FPGAs Data Sheet*: absolute maximum ratings and DC/AC characteristics underlying Chapter 5
- AMD/Xilinx LogiCORE IP product guides (PG series): full register maps for the AXI peripherals (e.g. PG153 for the Quad SPI controller)
- The per-topic markdown under `docs/` in the course repository: the single source from which this datasheet is built

2 System Architecture

2.1 MicroBlaze RISC-V Core

Item	Value
Architecture	32-bit RISC-V — RV32IM + bit-manipulation (hardware multiply/divide)
Clock	100 MHz
Buses	LMB to local BRAM (1-cycle) · AXI to peripherals and external memory
Cache	16 KB I-Cache + 16 KB D-Cache, write-through, 32 B lines — covers exactly the 512 KB SRAM (0x6000_0000–0x6007_FFFF)
Debug	JTAG: breakpoints, register inspection, memory read/write

Description: The main processor core executes user firmware and reaches every peripheral through the AXI interconnect. Only the SRAM range is cached: BRAM access is already single-cycle, and peripheral registers must never be cached.

2.2 Bus Architecture

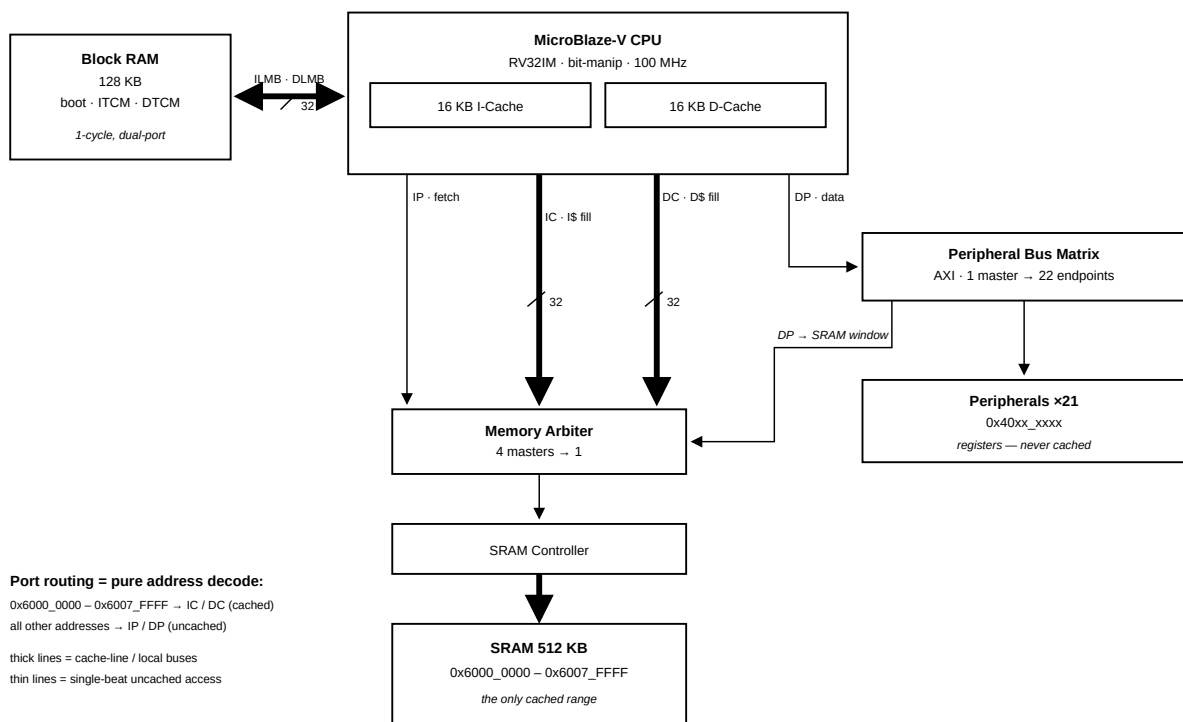


Figure 2: Bus & Cache Topology

Description: An AXI crossbar fans the processor's data port out to all peripheral endpoints. Routing is determined entirely by address decoding. The diagram above shows the path taken by each address range; a second, smaller interconnect merges the cache and debug masters in front of the SRAM controller.

2.3 Interrupt Controller

Item	Value
Base Address	0x4040_0000
Interrupt Sources	8

Interrupt Mapping:

Channel	Source	Description
In0	timer_0	System timer 0 interrupt
In1	timer_1	System timer 1 interrupt
In2	timer_2	System timer 2 interrupt

Channel	Source	Description
In3	uart_1	External UART interrupt
In4	uart_USB	USB UART interrupt
In5	INT_0_3	External GPIO interrupt (4-bit)
In6	i2c_0	I2C controller interrupt
In7	spi_0	External SPI master interrupt

2.4 Clocking

Description: This block multiplies the 12 MHz on-board oscillator up to the 100 MHz system clock with an MMCM/PLL. Its locked signal indicates clock stability and gates the release of system reset.

2.5 Reset

Description: This block generates synchronized reset signals for the CPU, bus fabric and peripherals, releasing them only after the clock is stable. The external reset source is the on-board button BTN0 (A18, active-high).

2.6 Debug Module

Description: The MicroBlaze Debug Module provides JTAG debug access for breakpoints, register inspection, and memory read/write. It can also trigger a system reset from the debugger (used by xsdb / Vitis debug sessions).

2.7 Complete Address Map

Peripheral addresses follow a class-based convention: $0x40[C]x_xxxx$, where C is the peripheral class (1 MB per class, 64 KB per instance). The device type is identifiable directly from the address: class 0 = GPIO, 1 = Timer, 2 = PWM, 3 = UART, 4 = INTC, 5 = QSPI control, 6 = XADC, 7 = I2C, 8 = SPI, 9 = SPI clock control.

Base Address	Range	Peripheral	Type	Category
0x0000_0000	128K / 128K	Local Memory (BRAM)	BRAM	Memory
0x4000_0000	64K	board_led_2bits	axi_gpio	GPIO
0x4001_0000	64K	board_button	axi_gpio	GPIO
0x4002_0000	64K	board_rgb	axi_gpio	GPIO
0x4003_0000	64K	gpio_A_0_6	axi_gpio	GPIO
0x4004_0000	64K	gpio_B_0_6	axi_gpio	GPIO
0x4005_0000	64K	gpio_C_0_6	axi_gpio	GPIO
0x4006_0000	64K	gpio_D_0_6	axi_gpio	GPIO
0x4007_0000	64K	INT_0_3	axi_gpio	Interrupt
0x4010_0000	64K	timer_0	axi_timer	Timer
0x4011_0000	64K	timer_1	axi_timer	Timer
0x4012_0000	64K	timer_2	axi_timer	Timer
0x4020_0000	64K	PWM_0	axi_timer	PWM
0x4021_0000	64K	PWM_1	axi_timer	PWM
0x4022_0000	64K	PWM_2	axi_timer	PWM
0x4030_0000	64K	uart_USB	axi_uart16550	Communication
0x4031_0000	64K	uart_1	axi_uart16550	Communication
0x4040_0000	64K	axi_intc	axi_intc	System
0x4050_0000	64K	axi_quad_spi_0 (QSPI flash controller)	axi_quad_spi	Memory
0x4060_0000	64K	xadc_wiz_0	xadc_wiz	ADC
0x4070_0000	64K	i2c_0 (DIP 13/14)	axi_iic	Communication
0x4080_0000	64K	spi_0 (external master, DIP 35–39)	axi_quad_spi	Communication
0x4090_0000	64K	spi_0_clk (SPI clock control)	clock control	Communication
0x6000_0000	512K	axi_emc_0 (exact physical fit, I/D-cached)	axi_emc	Memory

3 Memory Hierarchy

3.1 Memory Hierarchy Overview

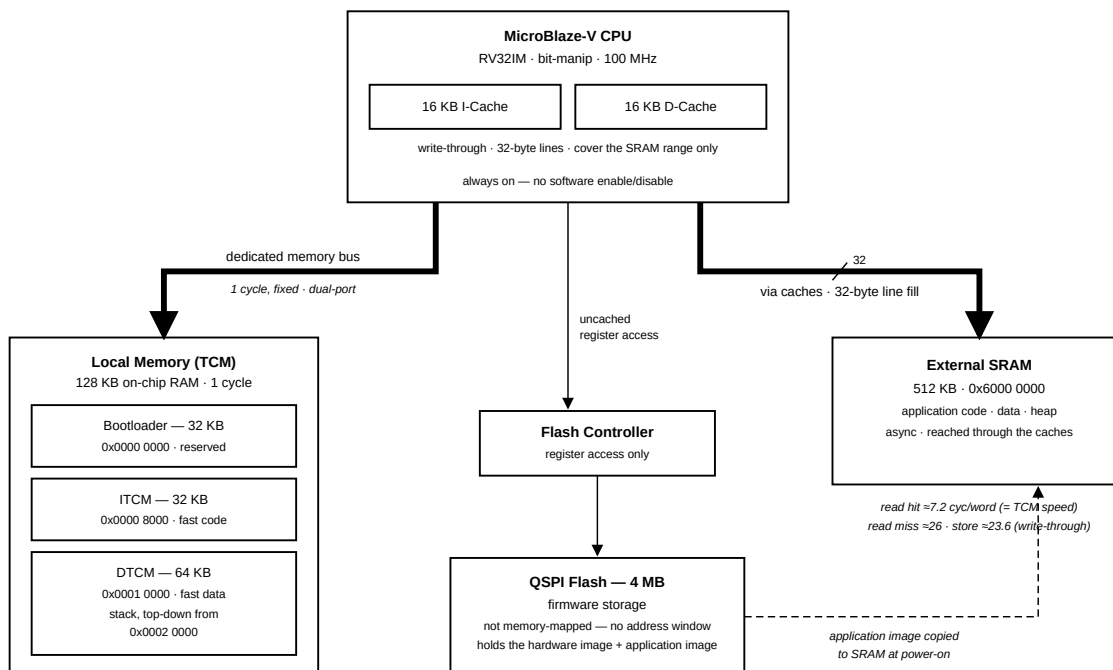


Figure 3: Memory Hierarchy

Level	Memory	Size	Access	Role
1	ITCM + DTCM (tightly-coupled RAM)	32 KB + 64 KB	1 cycle, fixed	interrupt handlers, stack, hot data
2	I-Cache + D-Cache	16 KB + 16 KB	adds ≈ 0 cycles on hit	transparent acceleration of SRAM
3	External SRAM	512 KB	≈ 26 cycles/word on miss	application code, data, heap
—	QSPI flash	4 MB	not directly addressable	firmware storage, read at boot

The tightly-coupled memories reside on a dedicated dual-port memory bus with guaranteed single-cycle access; they are never cached because they are already as fast as a cache hit. The external SRAM is the application's main memory; it is reached through the caches, so frequently accessed code and data run at tightly-coupled speed while the total space is 512 KB. The QSPI flash has no CPU address window: firmware is stored in flash and executed from SRAM, and the bootloader performs the copy at every power-on.

3.2 Memory Map

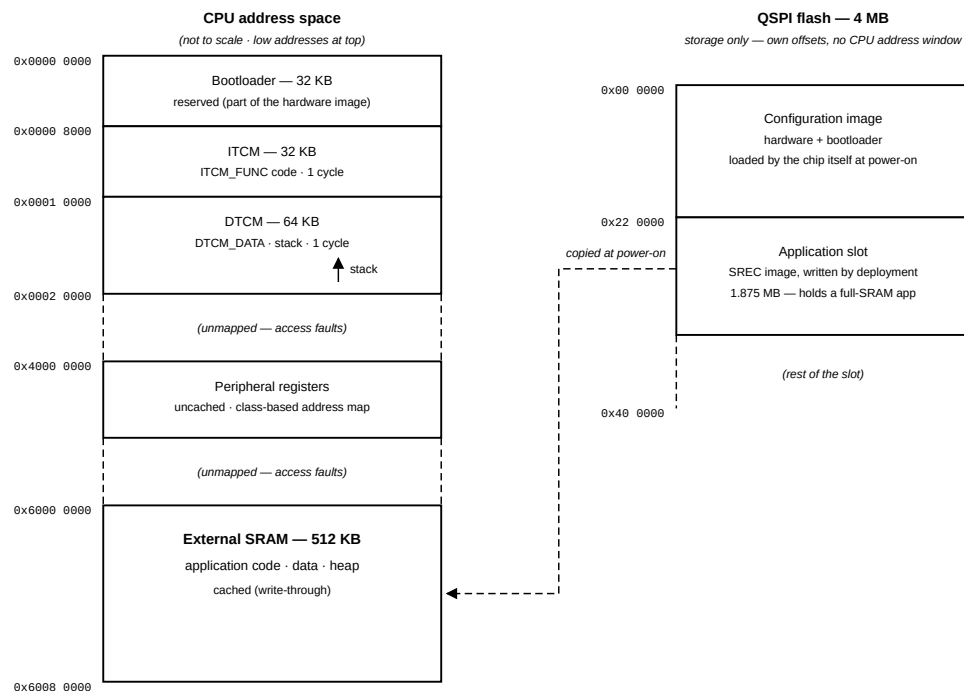


Figure 4: Memory Map

Address range	Size	Region	Access
0x0000_0000 — 0x0000_7FFF	32 KB	Bootloader (reserved)	1 cycle
0x0000_8000 — 0x0000_FFFF	32 KB	ITCM — application fast code	1 cycle
0x0001_0000 — 0x0001_FFFF	64 KB	DTCM — fast data; stack grows down from 0x0002_0000	1 cycle
0x4000_0000 — 0x40FF_FFFF	—	Peripheral registers	uncached
0x6000_0000 — 0x6007_FFFF	512 KB	External SRAM — application code / data / heap	cached

Address decoding is exact: an access outside these ranges raises a bus error instead of aliasing onto real memory, so an invalid pointer access is detected rather than silently corrupting data. The QSPI flash does not appear in this map; it is accessed only through the flash controller's registers. Peripheral registers and base addresses are listed in Section 2.7 and detailed in Section 5.

3.3 Local Memory (ITCM / DTCM / Bootloader)

Item	Value
Address	0x0000_0000 — 0x0001_FFFF (128 KB)
Access	1 cycle, dual-port — instruction and data sides read simultaneously
Layout	32 KB bootloader + 32 KB ITCM + 64 KB DTCM

Description: Instruction and data local memory is implemented with FPGA Block RAM and functions as this MCU's tightly-coupled memory (TCM): the ILMB/DLMB ports serve the same role as ITCM/DTCM on other MCU cores (e.g. Cortex-M7), giving 1-cycle access outside the cache path. The layout is as follows: 0x0000–0x7FFF (32 KB) holds the bootloader (restored from flash at every configuration); 0x8000–0xFFFF (32 KB) is the application's ITCM for interrupt handlers and timing-critical code (ITCM_FUNC, copied out of the SRAM image by `mcu_init()` at startup); 0x10000–0x1FFFF (64 KB) is the DTCM, holding the stack (top-down from 0x20000) and DTCM_DATA fast data.

3.4 External SRAM (Cellular RAM)

Item	Value
Base Address	0x6000_0000

Item	Value
Size	512 KB — 0x6000_0000 – 0x6007_FFFF, an exact physical fit
Memory	On-board asynchronous SRAM (Cellular RAM)
Cache	Fully covered by the I-Cache and D-Cache

Description: This external memory controller interfaces to the on-board 512 KB SRAM, the main application memory: standalone boot copies the program here and executes it. Raw access latency is higher than Block RAM, but with both caches covering this range, frequently accessed code and data run at close to BRAM speed.

3.5 QSPI Flash

Item	Value
Base Address	0x4050_0000
Flash Device	On-board 4 MB QSPI NOR flash (Macronix; Micron on older boards)
Mode	CPU-programmable register mode — flash contents are not memory-mapped
FIFO	256 B TX/RX — one full flash page (256 B) per transfer

Description: This controller manages the on-board Quad-SPI NOR Flash. The full register set (control, status, TX/RX FIFO, slave select) is exposed at 0x4050_0000, so the CPU can issue any SPI command: read (0x0B), Write Enable (0x06), Sector/Block Erase (0x20/0xD8), Page Program (0x02), and status poll (0x05). The flash therefore remains fully CPU-programmable at runtime (the Vitis xSpi driver wraps the register protocol).

Flash contents are not memory-mapped: there is no XIP window, and code cannot execute from flash directly. The standalone-boot design instead copies the application from flash into SRAM at power-on (see Section 8).

Design note: A read-only memory-mapped XIP window and CPU-programmable register mode are mutually exclusive in this controller. This project uses register mode: keeping the flash CPU-programmable at runtime was judged more valuable for the course than execute-in-place, and execution is served by the 512 KB SRAM and the I-cache instead.

3.6 Caches

Item	Value
Instruction cache	16 KB, 32-byte lines
Data cache	16 KB, 32-byte lines
Write policy	write-through — every store is forwarded to SRAM
Cached range	exactly the SRAM: 0x6000_0000 – 0x6007_FFFF
Software control	none — always on for the cached range

Only the SRAM range is cached. The tightly-coupled memories are already single-cycle, and peripheral registers must observe every access, so neither is ever cached. No cache enable, disable, or flush operations are required in normal application code.

The write-through policy has two practical consequences:

- Reads benefit fully from the cache: a hit has the same latency as a tightly-coupled RAM access.
- Writes always incur the SRAM latency, even on a cache hit. Frequently written data (counters, buffers filled in interrupt handlers) should therefore be placed in the DTCM.

3.7 Measured Access Latencies

Latencies were measured on the board at 100 MHz with an optimization-enabled word-copy loop. Values are cycles per 32-bit word and include the loop's own ≈ 7 -cycle overhead; the difference between rows is the memory's contribution.

Access	Cycles/word	Notes
Tightly-coupled RAM read	≈ 7.2	equals the bare loop; the memory adds no cycles
SRAM read, cache hit	≈ 7.2	a hit is as fast as tightly-coupled RAM
SRAM read, cache miss	≈ 26	≈ 151 cycles to fill one 32-byte line
SRAM write (write-through)	≈ 23.6	every store pays the SRAM latency

Note: Measure with compiler optimization enabled. An unoptimized build inflates the loop overhead to the point where cached and uncached accesses appear almost identical; the memory effects are hidden by the extra instructions.

3.8 Memory Placement Guidance

What	Put it in	How (course template)
Interrupt handlers, timing-critical loops	ITCM	tag the function <code>ITCM_FUNC</code>
Frequently-written data, DMA-like buffers	DTCM	tag the variable <code>DTCM_DATA</code>
Stack	DTCM	placed there by the template's linker script
Everything else — code, constants, data, heap	SRAM	default
Firmware image	QSPI flash	written by the deployment step


As a general rule, place code and data in SRAM by default and move them to the TCMs when predictable timing is required. A function in SRAM usually runs at cache speed, but its worst case (a cold cache line) takes three to four times longer; for an interrupt handler this spread appears directly as latency jitter. In the tightly-coupled memories the worst-case latency equals the best-case latency.

At power-on the bootloader copies the application image from flash into SRAM (see Section 8); the template's `mcu_init()` then copies `ITCM_FUNC` code out of the SRAM image into the ITCM and zeroes the DTCM. For this reason the template requires `mcu_init()`; to remain the first line of `main()`: contents placed in the tightly-coupled memories are not valid before it runs. The memory tour printed at boot lists each region's run-time addresses and serves as a check that the layout is in effect.

4 Pinout

4.1 DIP Connector Overview

The Cmod A7-35T has a 48-pin DIP connector (J1). All digital I/O pins operate at LVCMOS33 (3.3 V logic level) with no series resistors.

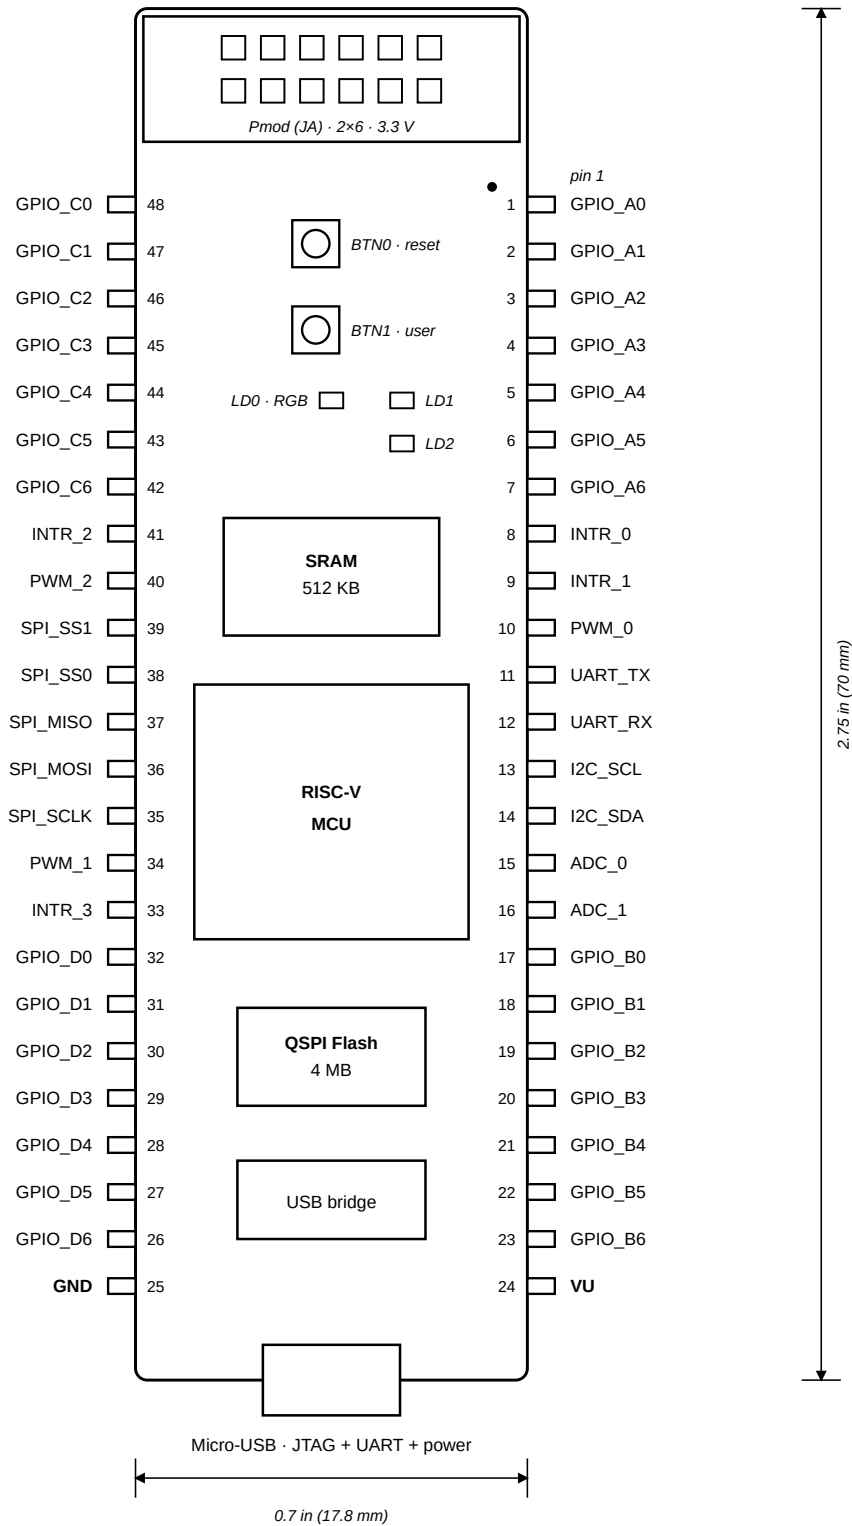

top view · Pmod end up · LVCMOS33 (pins 15/16 analog via divider)

Figure 5: Cmod A7-35T DIP pinout (top view)

Category	Count
GPIO (4 groups × 7-bit)	28
External Interrupts	4
PWM Outputs	3
UART 1 (TX + RX)	2
I2C (SCL + SDA)	2
SPI (SCLK/MOSI/MISO/SS×2)	5
Analog Inputs (XADC)	2
Power (VU + GND)	2
Total	48

Peripheral registers and base addresses are listed in Section 2.7 and detailed in Section 5.

4.2 Pin Map — Left Side (Pin 1–24)

DIP Pin	Signal Name	FPGA Pin	Direction	Function
1	GPIO_A0	M3	I/O	General purpose GPIO, Group A bit 0
2	GPIO_A1	L3	I/O	General purpose GPIO, Group A bit 1
3	GPIO_A2	A16	I/O	General purpose GPIO, Group A bit 2
4	GPIO_A3	K3	I/O	General purpose GPIO, Group A bit 3
5	GPIO_A4	C15	I/O	General purpose GPIO, Group A bit 4
6	GPIO_A5	H1	I/O	General purpose GPIO, Group A bit 5
7	GPIO_A6	A15	I/O	General purpose GPIO, Group A bit 6
8	INTR_0	B15	Input	External interrupt input 0
9	INTR_1	A14	Input	External interrupt input 1
10	PWM_0	J3	Output	PWM output channel 0
11	UART_TX	J1	Output	UART 1 transmit
12	UART_RX	K2	Input	UART 1 receive
13	I2C_SCL	L1	I/O (open-drain)	I2C clock (external 4.7 kΩ pull-up recommended)
14	I2C_SDA	L2	I/O (open-drain)	I2C data (external 4.7 kΩ pull-up recommended)
15	ADC_0	G3 / G2	Analog	XADC VAUX4 (ain_p[15] / ain_n[15])
16	ADC_1	H2 / J2	Analog	XADC VAUX12 (ain_p[16] / ain_n[16])
17	GPIO_B0	M1	I/O	General purpose GPIO, Group B bit 0
18	GPIO_B1	N3	I/O	General purpose GPIO, Group B bit 1
19	GPIO_B2	P3	I/O	General purpose GPIO, Group B bit 2
20	GPIO_B3	M2	I/O	General purpose GPIO, Group B bit 3
21	GPIO_B4	N1	I/O	General purpose GPIO, Group B bit 4
22	GPIO_B5	N2	I/O	General purpose GPIO, Group B bit 5
23	GPIO_B6	P1	I/O	General purpose GPIO, Group B bit 6
24	VU	—	Power	Power input (ext) / Power output (USB)

4.3 Pin Map — Right Side (Pin 25–48)

DIP Pin	Signal Name	FPGA Pin	Direction	Function
25	GND	—	Power	Ground reference
26	GPIO_D6	R3	I/O	General purpose GPIO, Group D bit 6
27	GPIO_D5	T3	I/O	General purpose GPIO, Group D bit 5
28	GPIO_D4	R2	I/O	General purpose GPIO, Group D bit 4
29	GPIO_D3	T1	I/O	General purpose GPIO, Group D bit 3
30	GPIO_D2	T2	I/O	General purpose GPIO, Group D bit 2
31	GPIO_D1	U1	I/O	General purpose GPIO, Group D bit 1
32	GPIO_D0	W2	I/O	General purpose GPIO, Group D bit 0

DIP Pin	Signal Name	FPGA Pin	Direction	Function
33	INTR_3	V2	Input	External interrupt input 3
34	PWM_1	W3	Output	PWM output channel 1
35	SPI_SCLK	V3	Output	SPI clock (software-settable, up to 25 MHz)
36	SPI_MOSI	W5	Output	SPI master-out slave-in
37	SPI_MISO	V4	Input	SPI master-in slave-out
38	SPI_SS0	U4	Output	SPI slave select 0 (active low)
39	SPI_SS1	V5	Output	SPI slave select 1 (active low)
40	PWM_2	W4	Output	PWM output channel 2
41	INTR_2	U5	Input	External interrupt input 2
42	GPIO_C6	U2	I/O	General purpose GPIO, Group C bit 6
43	GPIO_C5	W6	I/O	General purpose GPIO, Group C bit 5
44	GPIO_C4	U3	I/O	General purpose GPIO, Group C bit 4
45	GPIO_C3	U7	I/O	General purpose GPIO, Group C bit 3
46	GPIO_C2	W7	I/O	General purpose GPIO, Group C bit 2
47	GPIO_C1	U8	I/O	General purpose GPIO, Group C bit 1
48	GPIO_C0	V8	I/O	General purpose GPIO, Group C bit 0

4.4 On-Board I/O (No DIP Pin Exposure)

Function	FPGA Pins
LEDs (2)	A17, C16
User button (BTN1)	B18
Reset button (BTN0)	A18
RGB LED	B17, B16, C17

5 Peripherals

All peripheral registers are memory-mapped and reached through the AXI data port; base addresses follow the class-based scheme summarised in Section 2.7. Pin locations for every signal are listed in the pin maps of Section 4. The QSPI flash controller is described with the memory system in Section 3.5.

5.1 GPIO

All GPIO groups are memory-mapped ports with per-bit direction control: the TRI register sets each pin's direction, and the DATA register reads or writes the pin. The Vitis driver is `XGpio`.

5.1.1 On-Board GPIO

Instance	Base Address	Width	Direction	Connection	Description
board_led_2bits	0x4000_0000	2	Output	A17, C16	On-board LEDs × 2
board_button	0x4001_0000	1	Input	B18	On-board user button (BTN1)
board_rgb	0x4002_0000	3	Output	B17, B16, C17	On-board RGB LED (R/G/B)

5.1.2 DIP Connector GPIO (4 Groups × 7-bit)

Instance	Base Address	Width	DIP Pins	Description
gpio_A_0_6	0x4003_0000	7	Pin 1–7	GPIO Group A, bidirectional I/O
gpio_B_0_6	0x4004_0000	7	Pin 17–23	GPIO Group B, bidirectional I/O
gpio_C_0_6	0x4005_0000	7	Pin 42–48	GPIO Group C, bidirectional I/O
gpio_D_0_6	0x4006_0000	7	Pin 26–32	GPIO Group D, bidirectional I/O

Description: Each group is a 7-bit bidirectional port; every bit can be an input or an output independently.

5.1.3 External Interrupt Inputs (INT_0_3)

Item	Value
Base Address	0x4007_0000
Width	4-bit, input-only
DIP Pins	Pin 8 (INTR_0), Pin 9 (INTR_1), Pin 41 (INTR_2), Pin 33 (INTR_3)
Interrupt	INTC In5

Description: Four external interrupt inputs are grouped into a single GPIO instance with interrupt generation enabled. A change on any of the four pins can raise INTC In5.

5.2 Timers and PWM

The device provides six 32-bit AXI timer instances (Vitis driver: `XTmrCtr`): three serve as general-purpose timers with interrupts, and three have their outputs routed to pins as PWM channels.

5.2.1 System Timers

Instance	Base Address	Interrupt	Description
timer_0	0x4010_0000	INTC In0	General-purpose system timer
timer_1	0x4011_0000	INTC In1	General-purpose timer
timer_2	0x4012_0000	INTC In2	General-purpose timer

5.2.2 PWM Outputs

Instance	Base Address	Output Pin	DIP Pin	Description
PWM_0	0x4020_0000	J3	Pin 10	PWM Channel 0
PWM_1	0x4021_0000	W3	Pin 34	PWM Channel 1
PWM_2	0x4022_0000	W4	Pin 40	PWM Channel 2

Description: These timer instances are configured in PWM mode to generate square-wave outputs, suitable for applications such as LED dimming, motor speed control, and buzzer tone generation. Frequency and duty cycle are configured through the Timer Load Registers and the PWM enable bit.

5.3 UART

5.3.1 USB UART (uart_USB)

Item	Value
Base Address	0x4030_0000
TX / RX Pins	J18 / J17 — routed to the on-board Micro-USB connector
Interrupt	INTC In4

Description: A 16550-compatible UART provides host PC communication through the on-board Micro-USB connector. The baud rate is software-configured via the divisor latch: at a 100 MHz system clock, divisor 54 (0x36) gives 115200 baud. This UART is typically mapped as STDIN/STDOUT.

5.3.2 External UART (uart_1)

Item	Value
Base Address	0x4031_0000
TX / RX Pins	J1 (DIP 11) / K2 (DIP 12)
Interrupt	INTC In3

Description: A second 16550 UART is exposed on the DIP connector for communication with external devices (e.g., sensor modules, Bluetooth modules).

5.4 I2C Controller

Item	Value
Base Address	0x4070_0000
SCL Frequency	100 kHz (standard mode)
Input Glitch Filter	50 ns on SCL and SDA — per the I2C tSP spike-suppression spec
SCL / SDA Pins	DIP Pin 13 (L1) / Pin 14 (L2)
Pull-ups	Weak FPGA internal pull-ups enabled; external 4.7 kΩ to 3.3 V recommended for real devices
Interrupt	INTC In6

Description: An AXI IIC master controls external I2C devices (sensors, EEPROMs, OLED displays). The bus uses open-drain signaling: any device may only pull the line low, and the pull-up resistor returns it high. Devices are addressed by their 7-bit I2C address. Interrupt routing is listed in Section 2.3. Use the Vitis `xiic` driver.

5.5 SPI Master

Item	Value
Base Address	0x4080_0000
SCLK	Software-programmable, ≈1.6 – 25 MHz (6.25 MHz at reset)
Clock Control	0x4090_0000 — runtime clock setting; see <code>showcase/src/spi0.c</code> for the <code>spi0_set_clock()</code> helper
Slave Selects	2 — two devices can share the bus
Pins	DIP 35 SCLK (V3) · 36 MOSI (W5) · 37 MISO (V4) · 38 SS0 (U4) · 39 SS1 (V5)
Interrupt	INTC In7

Description: An SPI master controls external devices (displays, ADCs, flash modules). The interface uses full-duplex push-pull signaling and requires no pull-up resistors; the active device is selected by driving its SS line low. Use the Vitis `xspi` driver. The serial clock is set at runtime through the clock-control block: select a lower rate for breadboard wiring or long cables, and a higher rate for short-wired display modules. A single call to `spi0_set_clock(hz)` takes effect immediately.

Note: This is a second, independent SPI controller. Do not confuse it with `axi_quad_spi_0` (0x4050_0000), which is dedicated to the on-board QSPI boot flash. Firmware should select controllers by instance macro (`XPAR_SPI_0_BASEADDR` vs `XPAR_AXI_QUAD_SPI_0_BASEADDR`), never by generic `XPAR_XSPI_n_*` numbering.

5.6 Analog-to-Digital Converter (XADC)

Item	Value
Base Address	0x4060_0000

Item	Value
Resolution	12-bit
Conversion Rate	500 KSPS aggregate
Sequencer	Continuous scan over the 5 enabled channels

Enabled Channels:

Channel	Source	Description
VAUX4	DIP Pin 15 (G3/G2)	External analog input 0 (on-board divider: 0–3.3 V → 0–1 V)
VAUX12	DIP Pin 16 (H2/J2)	External analog input 1 (on-board divider: 0–3.3 V → 0–1 V)
Temperature	Internal	FPGA die temperature monitor
VCCINT	Internal	Core voltage monitor (1.0 V)
VCCAUX	Internal	Auxiliary voltage monitor (1.8 V)

Description: The Artix-7 built-in 12-bit ADC measures external analog signals and monitors internal FPGA temperature and supply voltages. External input pins pass through an on-board resistive voltage divider (2.32 kΩ / 1 kΩ, ratio ≈ 0.301), accepting up to 3.3 V at the DIP pin.

Effective Per-Channel Sampling Rate: The sequencer continuously cycles through all 5 enabled channels (VAUX4, VAUX12, Temperature, VCCINT, VCCAUX). The aggregate conversion rate is 500 KSPS, giving each channel an effective rate of $500 \text{ K} \div 5 = 100 \text{ KSPS}$.

5.6.1 Analog Input Circuit

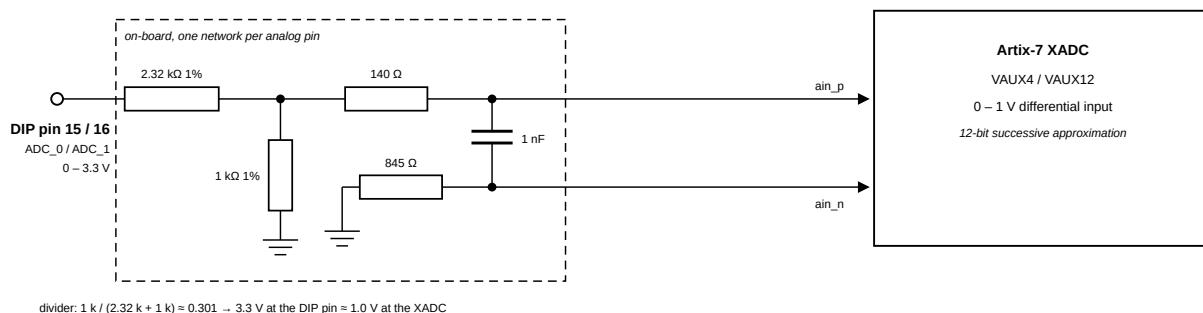


Figure 6: On-board voltage divider circuit for XADC analog inputs

The XADC expects an input range of 0–1 V. The board includes a resistive voltage divider (2.32 kΩ / 1 kΩ, all 1% precision) that scales the DIP pin voltage down to the FPGA's acceptable range. A 140 Ω series resistor and 1 nF capacitor are placed on the differential pair for filtering. The ADx_N path has an 845 Ω series resistor.

Parameter	Value
Max input voltage on DIP pin 15/16	3.3 V (relative to GND on pin 25)
Voltage at FPGA after divider	0–1 V
Divider ratio	$1 \text{ k} \Omega / (2.32 \text{ k} \Omega + 1 \text{ k} \Omega) \approx 0.301$
Resistor tolerance	1%

Note: Pins 15 and 16 are routed through on-board voltage dividers. If used as analog inputs, they must not be assigned as digital I/O in the constraints file. Do not exceed 3.3 V on these pins.

6 Electrical Characteristics and Power

6.1 Electrical Characteristics

Parameter	Value
I/O Standard	LVC MOS33 (3.3 V)
Series Resistance on DIP Pins	None
Max Input Voltage (digital I/O)	abs. max -0.4 V to $V_{CCO} + 0.55\text{ V} = \mathbf{3.85\text{ V}}$ (DS181); not 5 V tolerant
Analog Input Range (Pin 15, 16)	0–3.3 V (on-board divider scales to the XADC's 0–1 V; see Section 5.6.1)
Clock Source	12 MHz oscillator (FPGA pin L17), PLL $\rightarrow$ 100 MHz

- When a USB host is attached, the VU pin is driven to USB voltage (4.5–5.5 V). Any external power source on VU **must be disconnected** before USB is connected, or the external supply may be damaged.
- This is **especially dangerous with battery power sources**, as batteries cannot tolerate reverse current.
- The FPGA I/O pins on the DIP connector have no series resistors. The Artix-7 absolute maximum input rating is $V_{CCO} + 0.55\text{ V} = \mathbf{3.85\text{ V}}$ (and -0.4 V minimum, per DS181). The pins are **not 5 V tolerant**; use a level shifter or divider for 5 V devices.

6.2 Power Architecture

The Cmod A7-35T uses a Linear Technology LTC3569 triple-output buck regulator (IC10) to generate all onboard supply voltages from a single input rail called VU.

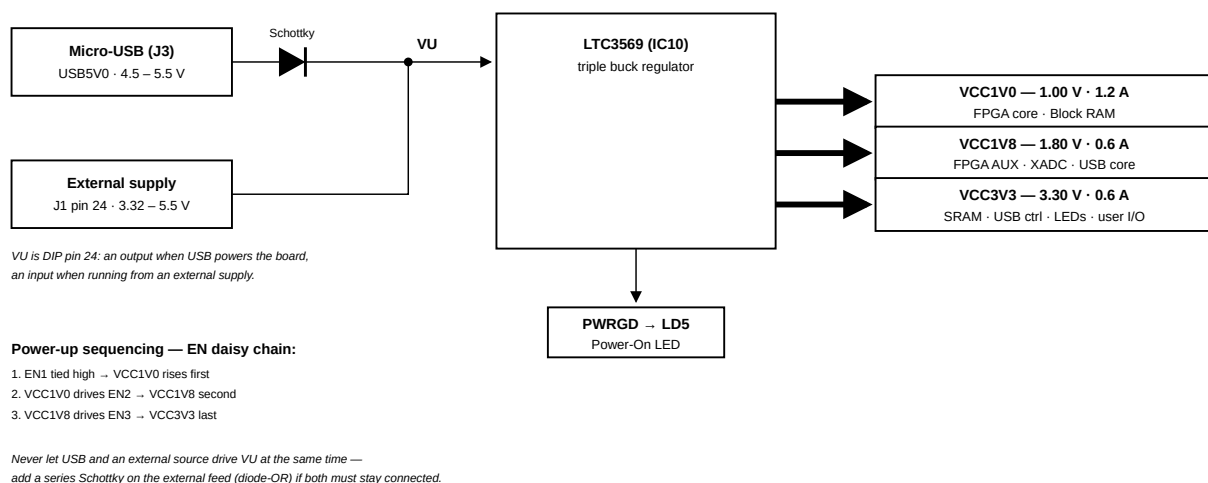


Figure 7: Cmod A7 power supply tree

6.3 Power Input Options

The board can be powered from either of the following sources:

Source	Connector	Schematic Net	Min Voltage	Recommended	Max Voltage
USB	J3 (Micro-USB)	USB5V0	4.5 V	5.0 V	5.5 V
External Supply	J1 Pin 24 (DIP)	VU	3.32 V*	5.0 V	5.5 V

Note: * The minimum external voltage on VU depends on the current drawn from the VCC3V3 rail via the Pmod header:

- 0 mA drawn: minimum 3.32 V
- 100 mA drawn: minimum 3.38 V
- 250 mA drawn: minimum 3.48 V

The GND reference is on J1 Pin 25.

6.4 Output Power Rails

All three rails are generated by the LTC3569 from the VU input.

Rail	Typical Voltage	Min / Max Voltage	Max Current	Powered Devices
VCC1V0	1.00 V	0.95 V / 1.05 V	1.2 A	FPGA Core, Block RAM
VCC1V8	1.80 V	1.71 V / 1.89 V	0.6 A	FPGA AUX, ADC, USB Core
VCC3V3	3.30 V	3.135 V / 3.465 V	0.6 A	SRAM, USB Controller, Pmod, LEDs, Buttons, FPGA User I/O

6.4.1 Power-Up Sequence

The LTC3569 enable pins are daisy-chained to enforce a sequential startup:

1. VCC1V0 starts first (EN1 is tied high).
2. VCC1V8 starts after VCC1V0 is stable (EN2 is driven by VCC1V0).
3. VCC3V3 starts after VCC1V8 is stable (EN3 is driven by VCC1V8).

The PWRGD (Power Good) output drives the Power On LED (LD5).

6.5 VU Pin Behavior

Condition	VU Pin Function
USB connected	VU is an output — driven by USB 5V through a Schottky diode (expect ~5 V with small drop)
USB not connected	VU is an input — accepts external power supply (3.32–5.5 V)

6.6 Dual Power Source (USB + External)

The on-board Schottky diode is located on the USB side (between USB VBUS and VU), not on the VU input pin. The resulting behavior is as follows:

Scenario	Safe?	Notes
USB only	✓	Normal operation
External only (VU pin)	✓	Normal operation
Both connected, only one active	✓	The inactive source supplies no current, no conflict
Both connected and both supplying power	✗	Two voltage sources fight on the same VU node
Both connected and both active, with external Schottky added	✓	Higher-voltage source wins; lower is blocked

Note: Physically connecting both cables is not itself hazardous. The hazard arises when both sources actively supply voltage at the same time without isolation.

If both sources must be connected and powered simultaneously (e.g., USB for JTAG/UART while operating from an external supply), add a Schottky diode in series with the external supply on the VU pin. This creates a diode-OR circuit in which the source with the higher voltage supplies the load and the other source is blocked.

6.7 Quick Reference for External Power Design

Parameter	Value
Input Connector	J1 Pin 24 (VU) + Pin 25 (GND)
Recommended Input Voltage	5.0 V
Acceptable Input Range	3.32 – 5.5 V
Total Max Current (all rails)	~2.4 A (1.2 + 0.6 + 0.6)
Power Good Indicator	LD5 (LED)
Regulator IC	LTC3569
Protection Required for Dual Supply	Schottky diode in series with VU

7 JTAG Debug Mode

This chapter describes how to load and debug a MicroBlaze RISC-V application over JTAG using the AMD Vitis Unified IDE. JTAG loads the program directly into RAM and provides full debug control. Nothing is written to flash.

7.1 Prerequisites

- The hardware design as an .xsa file: use the prebuilt `release/top_wrapper.xsa`
- Vitis Unified IDE 2025.2 installed
- Cmod A7-35T board connected via its micro-USB cable (the cable carries power, UART, and JTAG)
- A serial terminal program (GTKTerm, PuTTY, or pyserial's miniterm) for the board's console output

7.2 Open the Workspace

Launch the Vitis Unified IDE and click **Set Workspace** on the Welcome page.

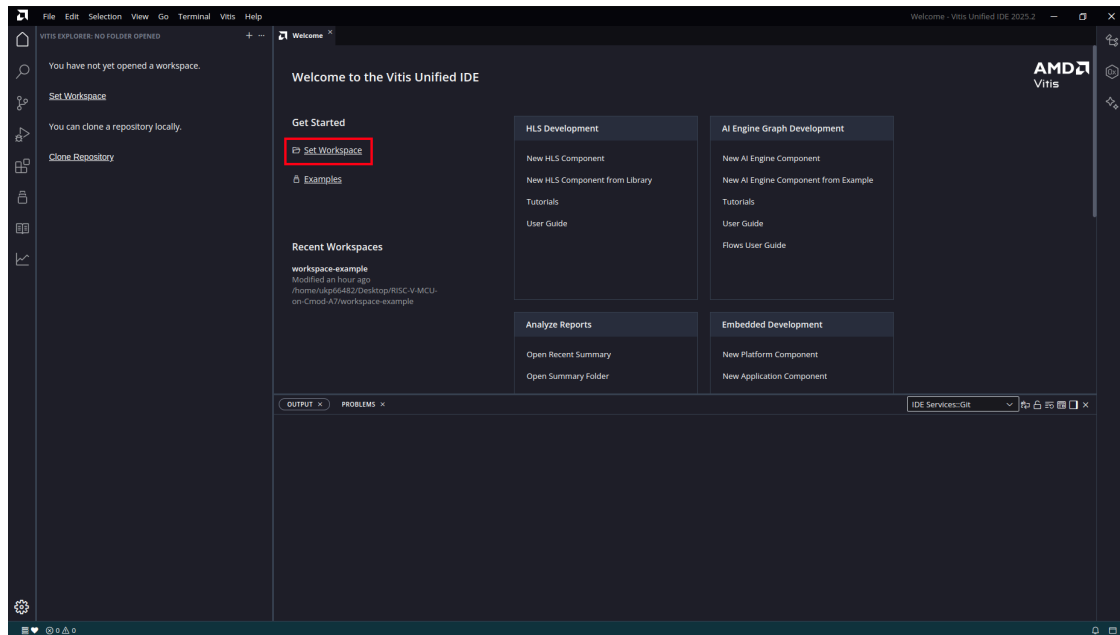


Figure 8: Set Workspace

Select the `workspace-example/` folder in the repository. The template paths in this guide assume this location; any empty folder can also be used if the paths are adjusted accordingly.

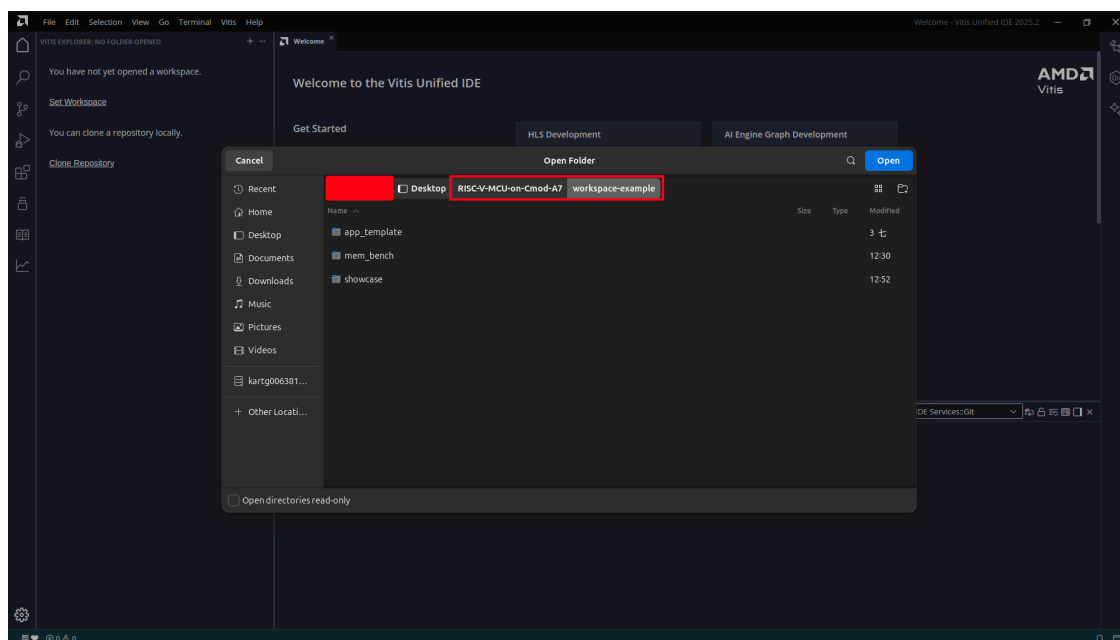


Figure 9: Open Folder

The first time a Vitis installation opens this workspace it may show an **Update Workspace** dialog. Click **Update**. This action refreshes only the workspace metadata and does not modify any component.

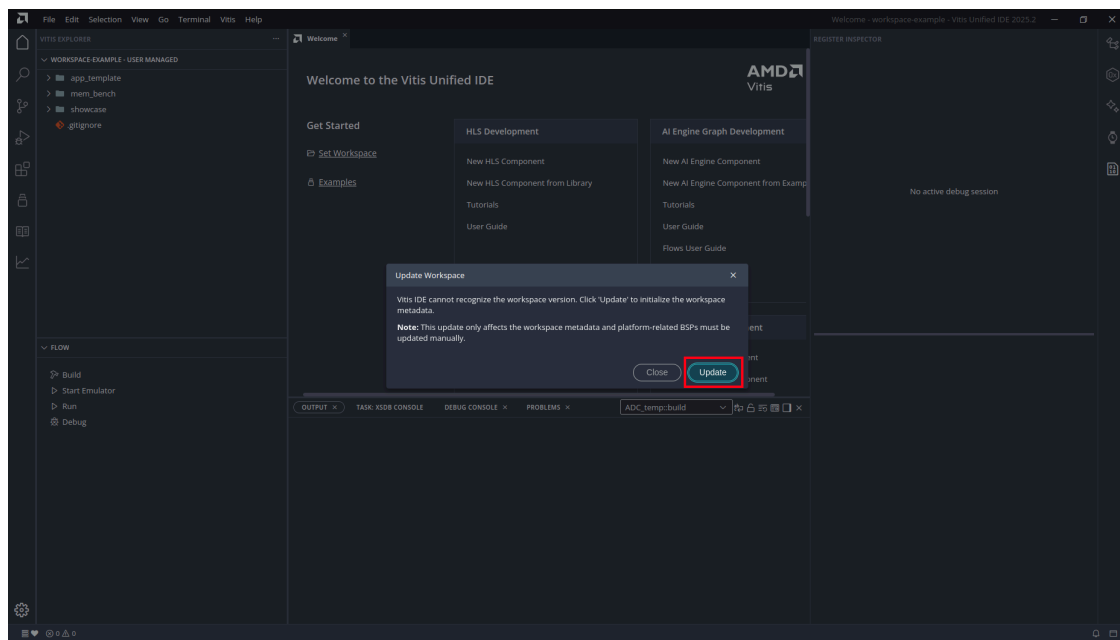


Figure 10: Update Workspace

7.3 Create a Platform

The platform wraps the hardware design and provides the driver layer (BSP). It is created once per workspace and reused by every application. If the workspace already contains a platform component, skip to Section 7.4.

7.3.1 New Platform Component

From the menu bar, select **File > New Component > Platform**.

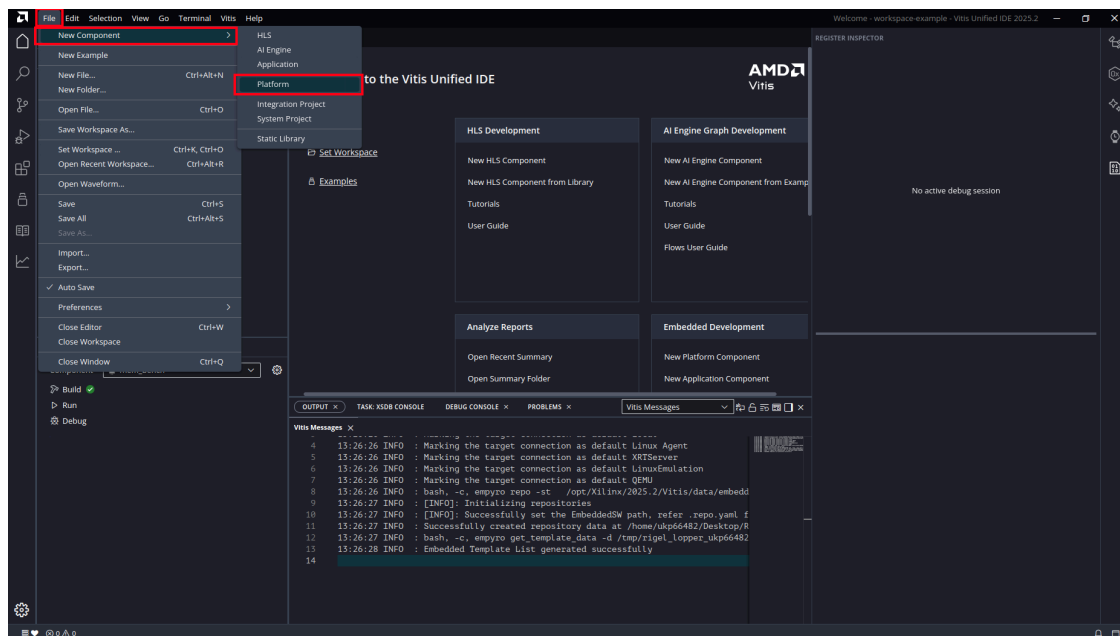


Figure 11: File > New Component > Platform

7.3.2 Platform Name and Location

Enter `platform` as the component name and keep the workspace directory as the location. Click **Next**.

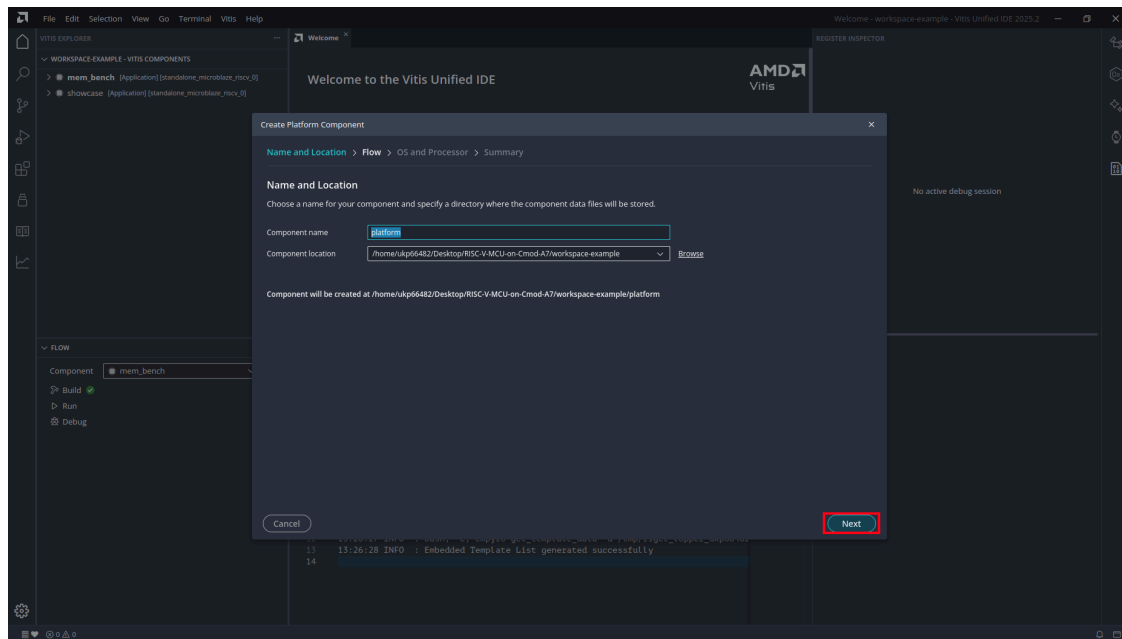


Figure 12: Platform Name and Location

7.3.3 Select the Hardware Design (XSA)

On the **Flow** page, select **Hardware Design** and click **Browse** next to the *Hardware Design (XSA) For Implementation* field.

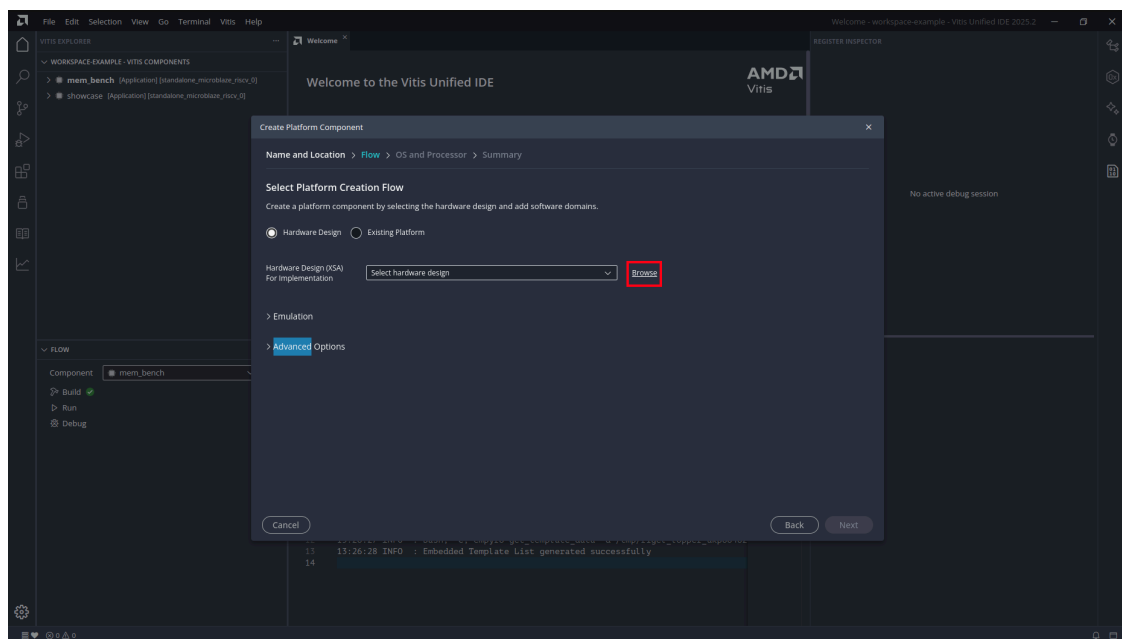


Figure 13: Select Platform Creation Flow

Select the prebuilt `release/top_wrapper.xsa` from the repository.

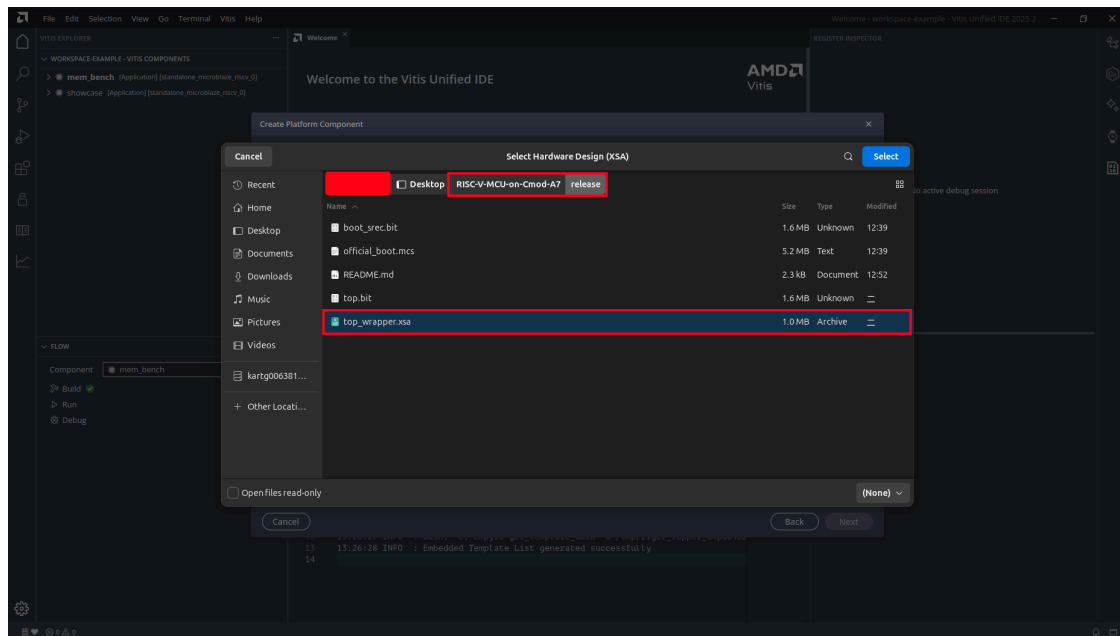


Figure 14: Select top_wrapper.xsa

7.3.4 Select Operating System and Processor

- **Operating system:** standalone
- **Processor:** microblaze_riscv_0

Click **Next**.

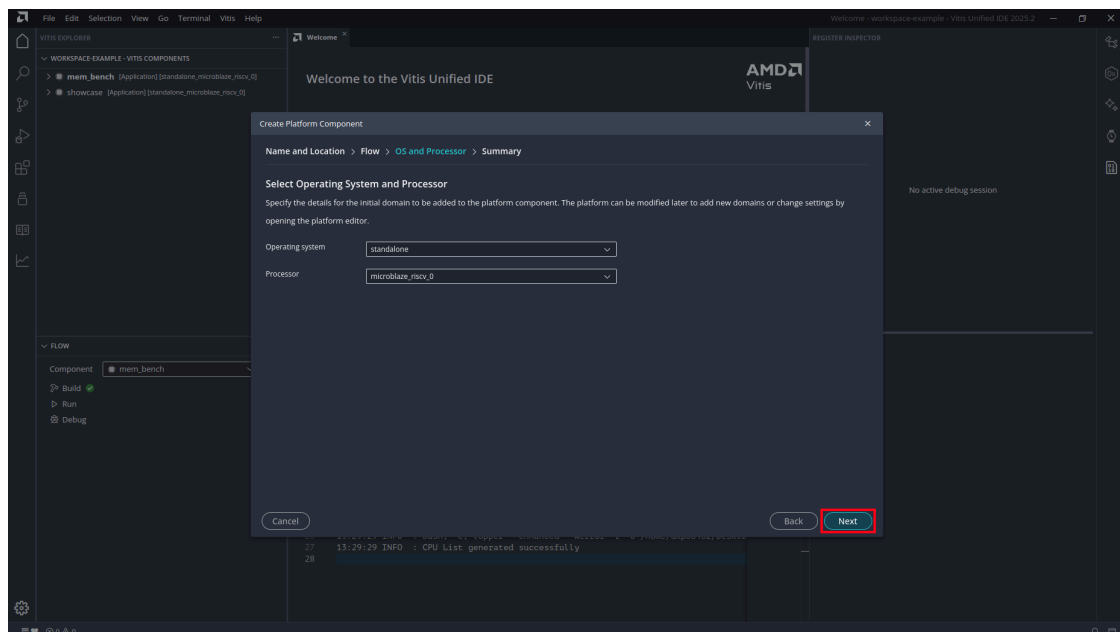


Figure 15: OS and Processor

7.3.5 Platform Summary

Review the settings and click **Finish**.

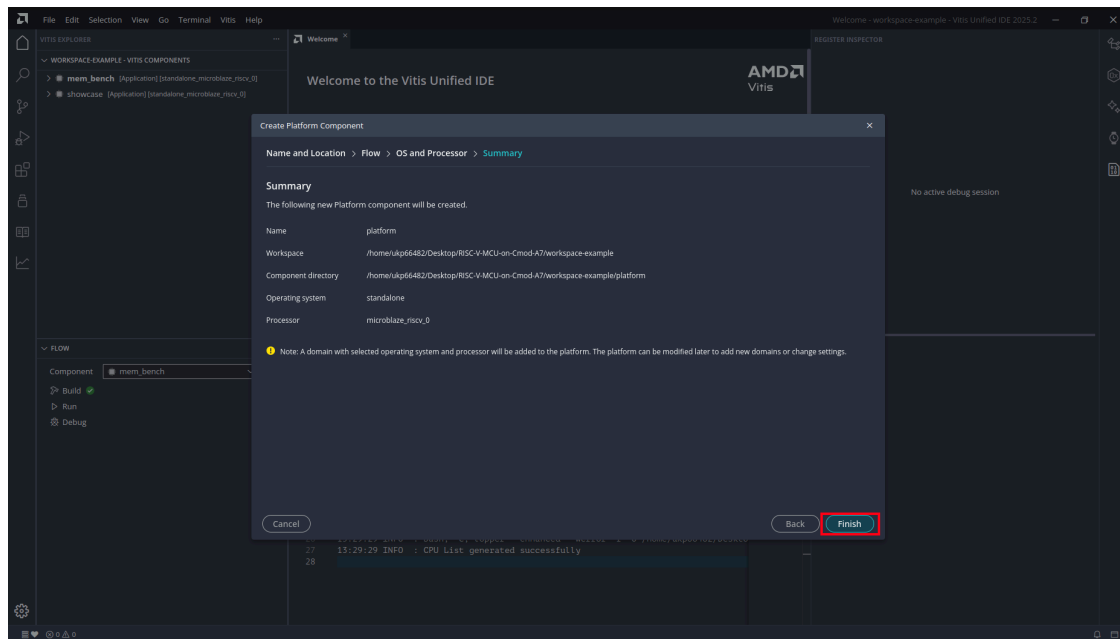


Figure 16: Platform Summary

Vitis generates the platform component. When it finishes, the Explorer shows the platform component with its Sources and Output trees, and the notification “Created platform: platform” appears.

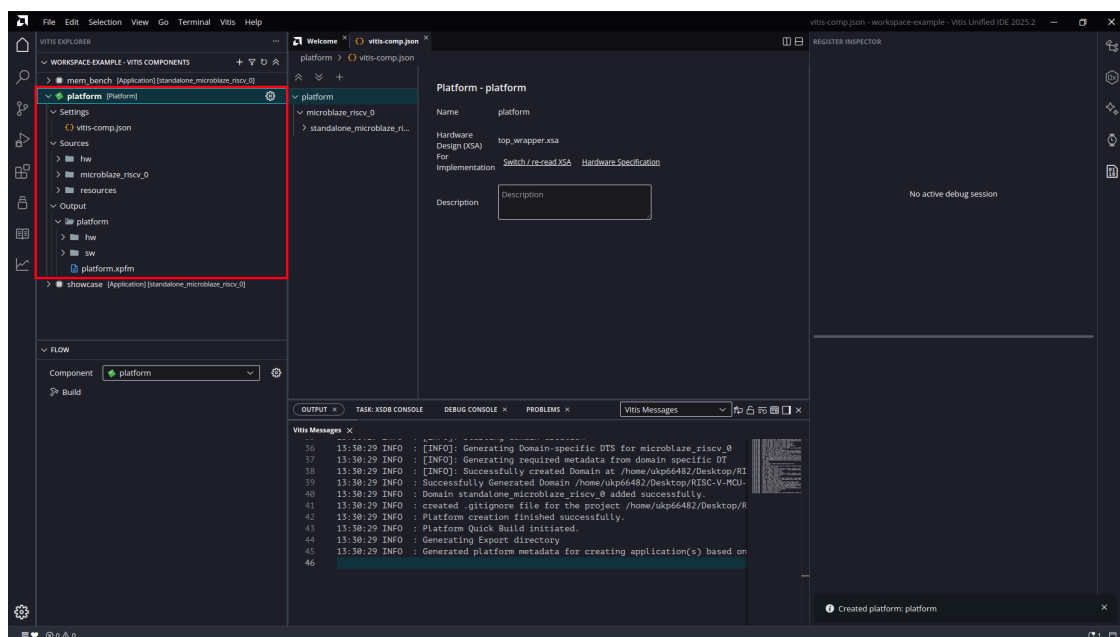


Figure 17: Platform Created

7.4 Create an Application

7.4.1 Create from Template

Open the **Examples** view from the left activity bar. Under *Embedded Software Examples*, select **Hello World** and click the + (Create Application Component from Template) button.

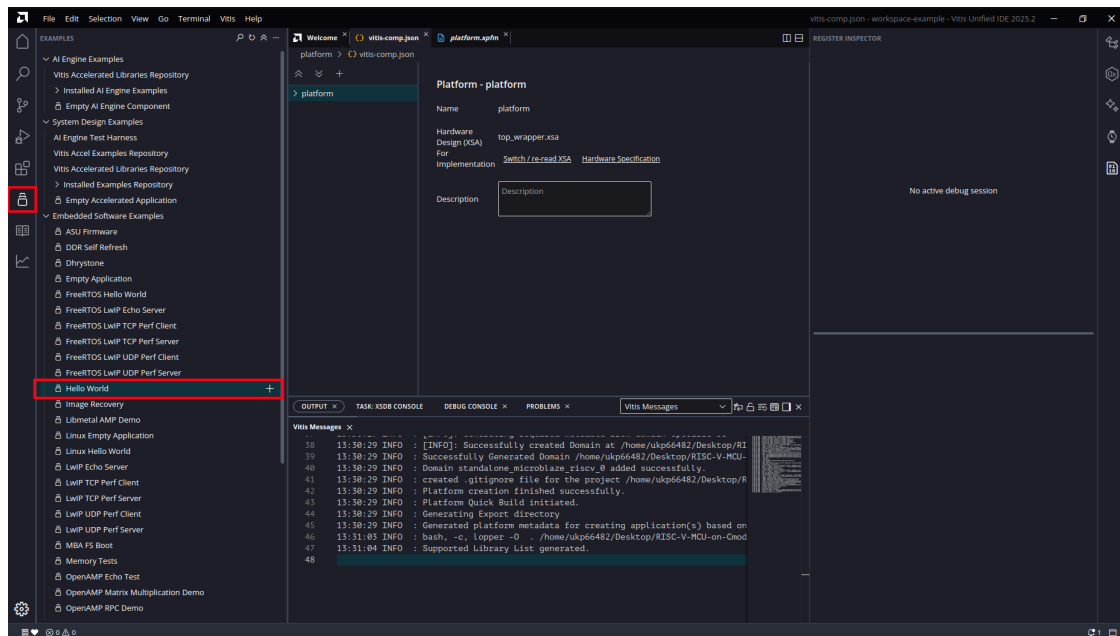


Figure 18: Hello World Template

7.4.2 Application Name and Location

Enter your application name (this guide uses test). Click **Next**.

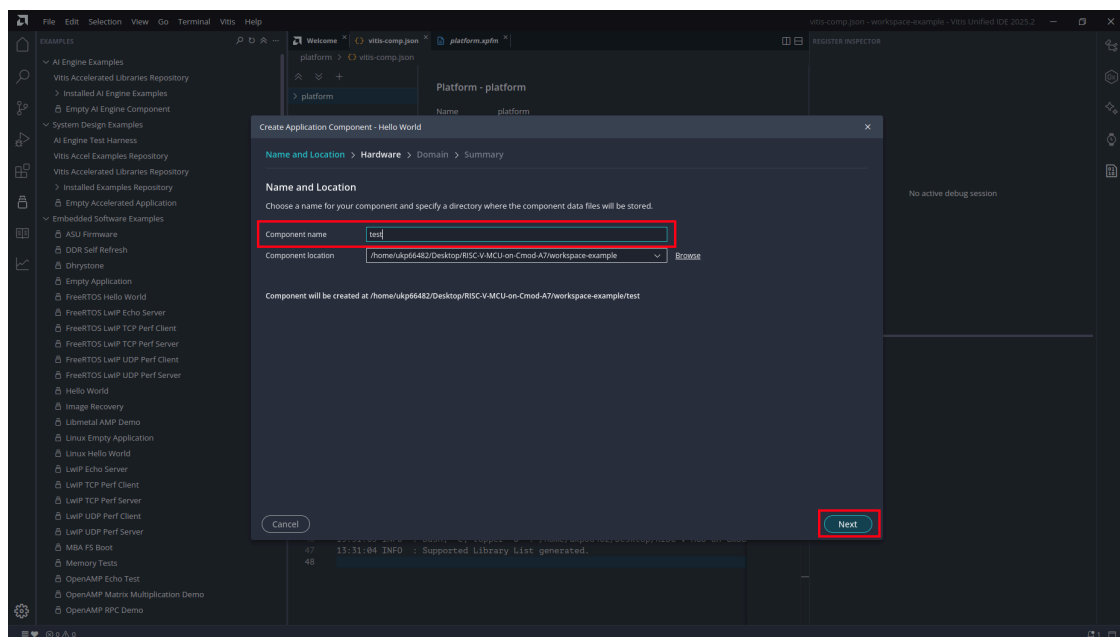


Figure 19: Application Name

7.4.3 Select the Platform

Select the platform component created in Section 7.3 (Board: cmod_a7-35t). Click **Next**.

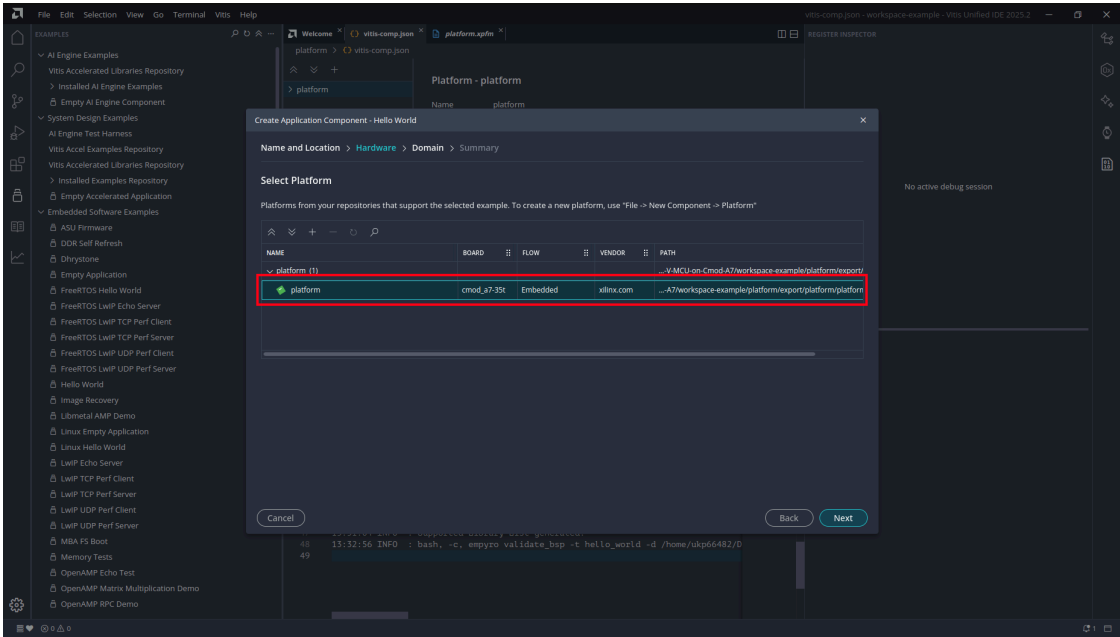


Figure 20: Select Platform

7.4.4 Select the Domain

Select standalone_microblaze_riscv_0. Click Next.

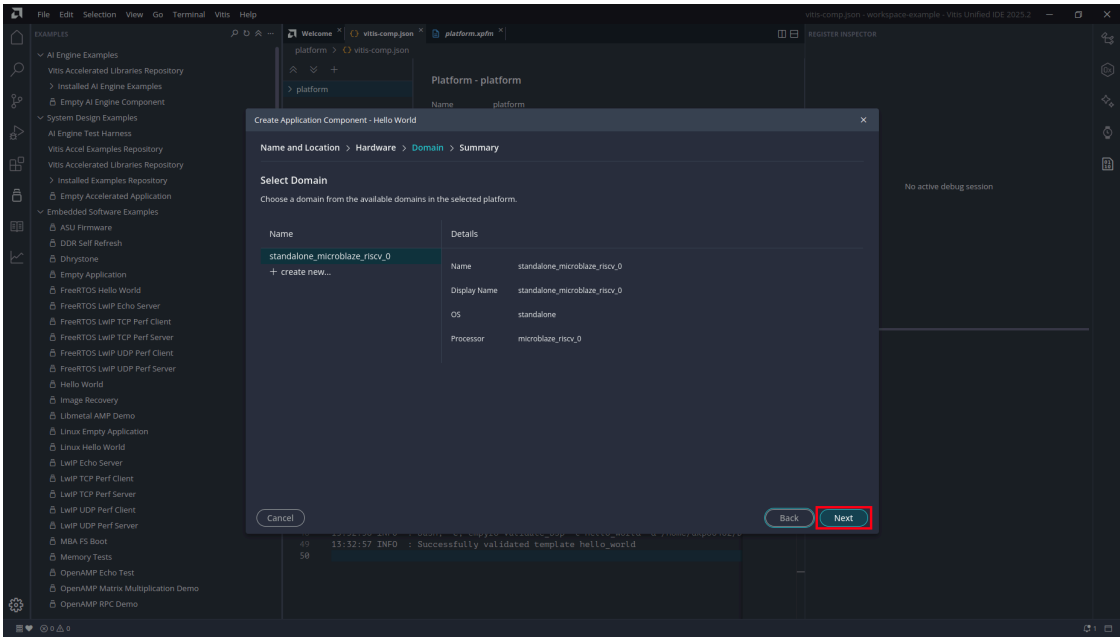


Figure 21: Select Domain

7.4.5 Application Summary

Review the settings and click Finish.

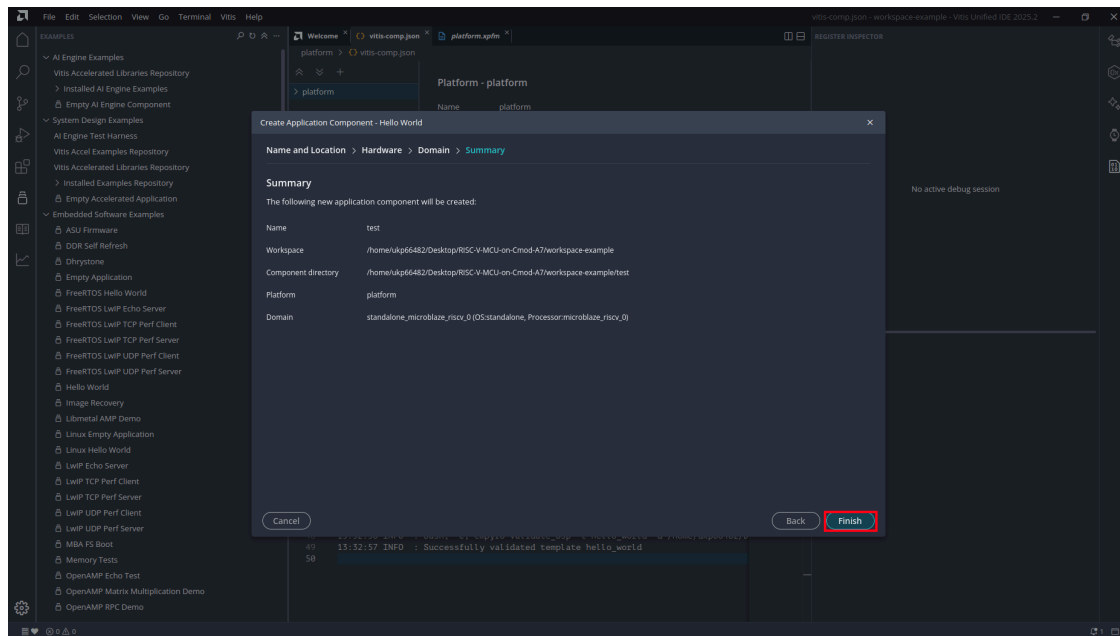


Figure 22: Application Summary

The new component appears in the Explorer. Its `src/` folder holds the template's generated files: `helloworld.c`, `lscript.ld`, `platform.c`, and `platform.h`.

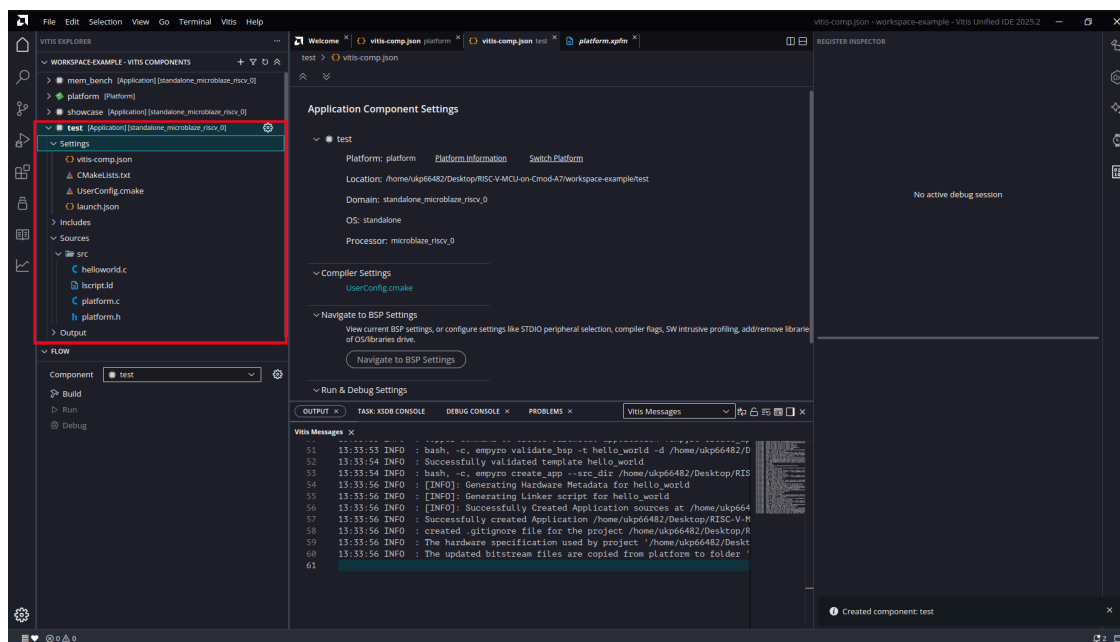


Figure 23: Application Created

7.5 Replace the Sources with the Course Template

The generated Hello World sources are replaced entirely by the course template. The template `main.c` starts with `mcu_init()`, and its `lscript.ld` places code in the 512 KB SRAM, places the stack in DTCM, and provides the `ITCM_FUNC/DTCM_DATA` fast-memory attributes.

7.5.1 Delete the Generated Files

In the Explorer, select all four files under `src/` (`helloworld.c`, `lscript.ld`, `platform.c`, `platform.h`), right-click, and choose **Delete**.

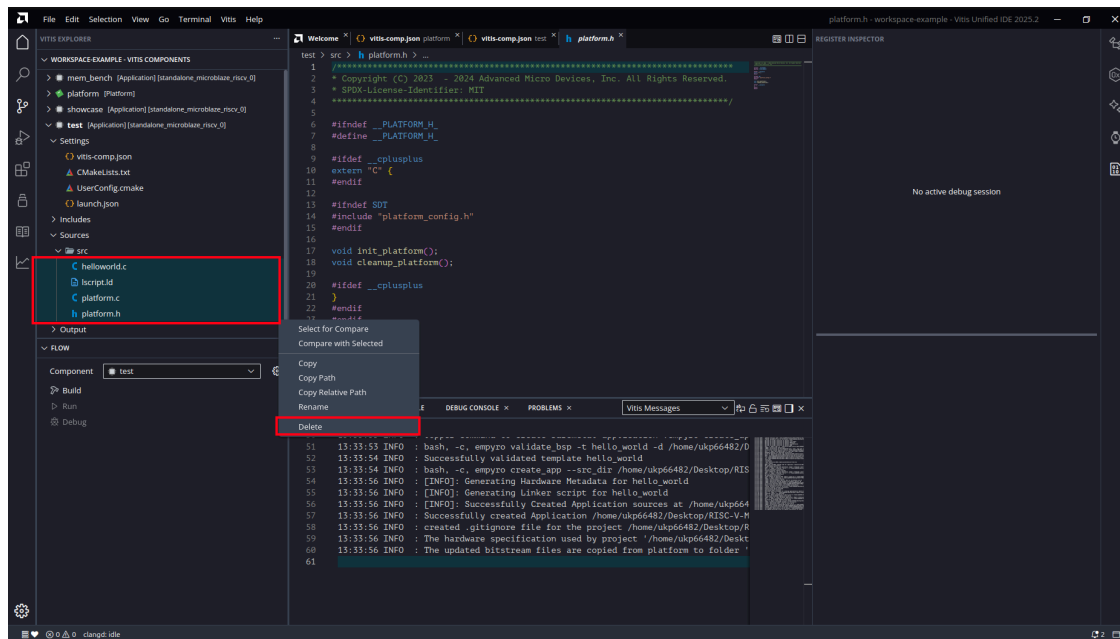


Figure 24: Delete Generated Sources

7.5.2 Import the Template Files

Right-click the `src/` folder and choose **Import > Files...**

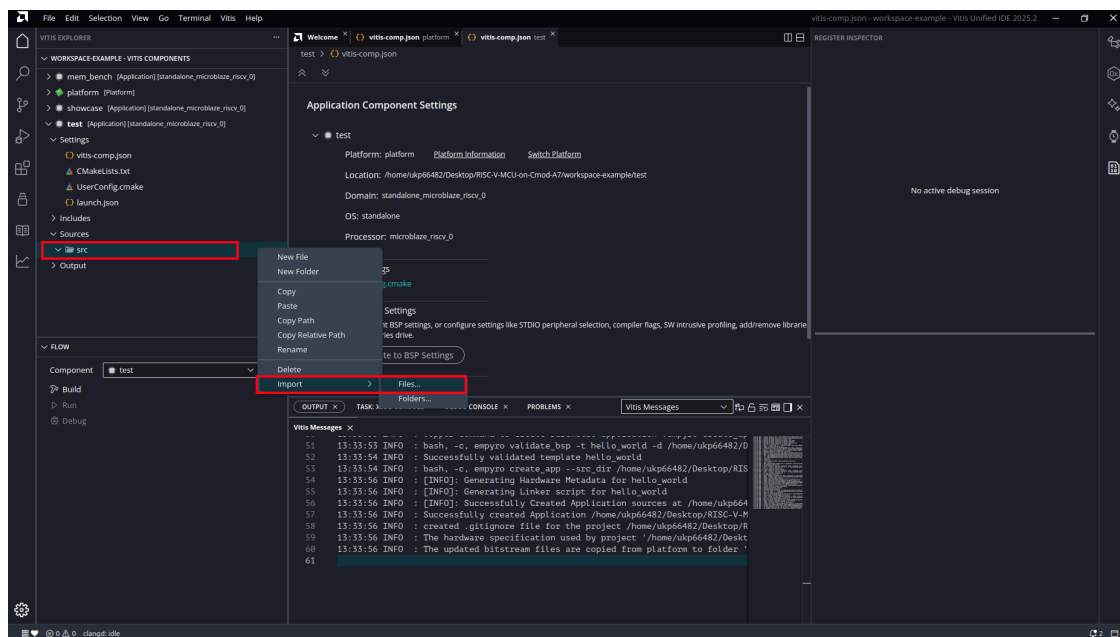


Figure 25: Import Files

Navigate to `workspace-example/app_template/src/` and select both `main.c` and `lscript.ld`. Click **Open**.

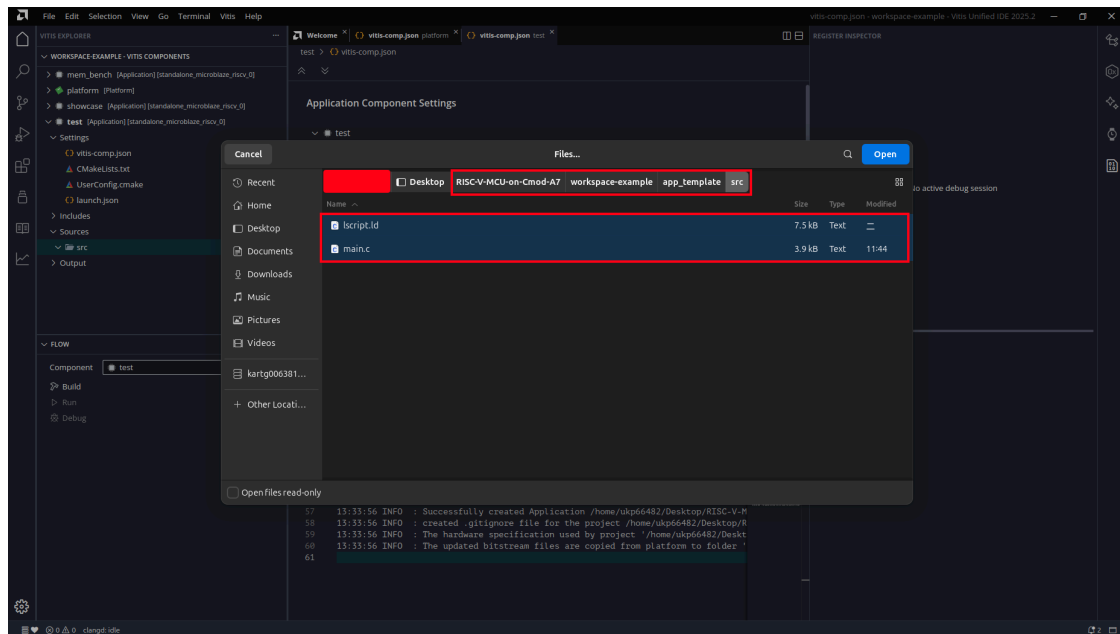


Figure 26: Select Template Files

Afterwards `src/` contains exactly `main.c` and `lscript.ld`. Files inside `src/` are compiled automatically; no build configuration is needed.

The `mcu_init()` call must remain the first line of `main()`. It copies ITCM_FUNC code into the ITCM, zeroes the DTCM, and sets the USB UART to

1. The demo loop then cycles the on-board RGB LED and prints a status line about once a second.

7.5.3 About the Linker Script

The imported `lscript.ld` defines three memory regions: `sram` (512 KB), `itcm` (32 KB), and `dtcm` (64 KB). It maps everything to SRAM except the stack (DTCM) and ITCM_FUNC code (ITCM). The component settings page *Linker Script* can display the regions, but treat it as read-only: it understands only part of the hand-written script (an incomplete section list is expected), and letting it regenerate the script would discard the ITCM/DTCM layout. To resize the stack or heap, edit `_STACK_SIZE` / `_HEAP_SIZE` at the top of `lscript.ld` instead.

7.6 Set the Console UART (BSP)

The BSP determines which UART carries `xil_printf` output. The default is `uart_1` (the DIP-header pins); with the default setting, no output appears on the USB console.

Open the platform's **Settings** > **vitis-comp.json**, navigate to **standalone** (Board Support Package > `microblaze_riscv_0` > `standalone`). The configuration table shows `standalone_stdin` and `standalone_stdout` set to `uart_1`:

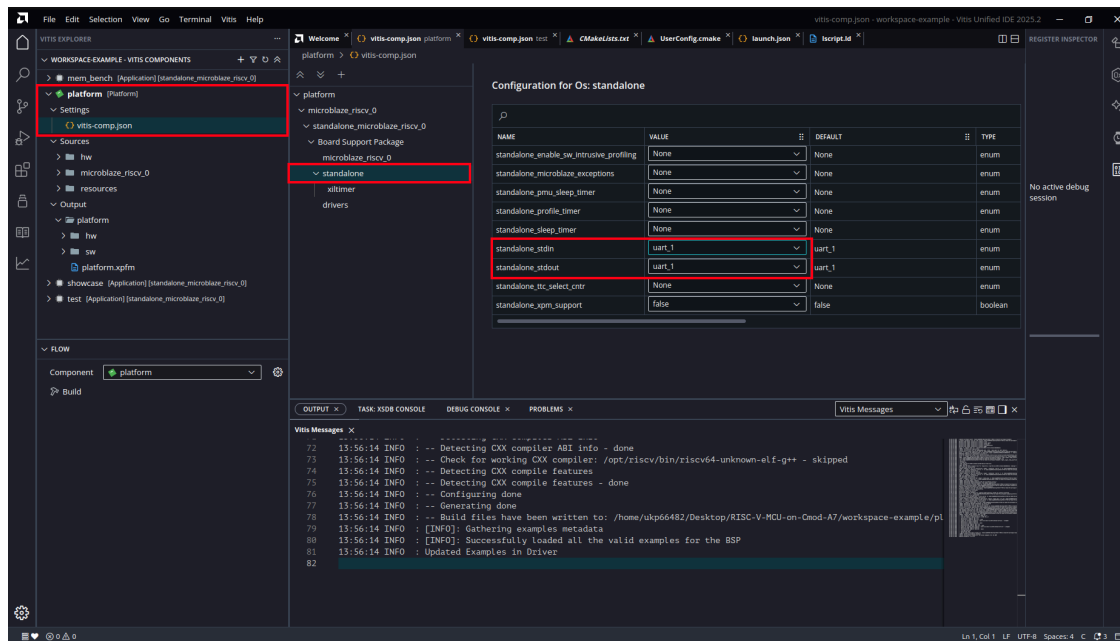


Figure 27: BSP Defaults to uart_1

Change both to `uart_USB`. The output log reports the domain being reconfigured.

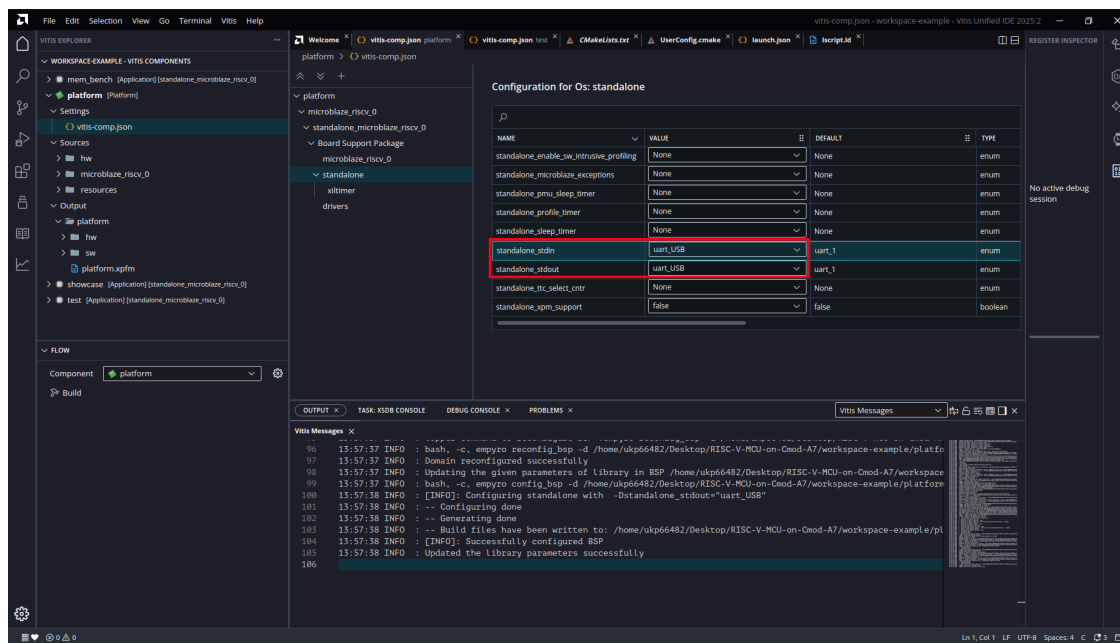


Figure 28: stdin/stdout Set to uart_USB

Note: If the platform BSP is ever regenerated (for example after changing another BSP option), re-check this page; regeneration can reset stdin/stdout to `uart_1`. After changing it, rebuild both the platform and the application; the setting is compiled into the application's BSP library.

7.7 Build

7.7.1 Build the Platform

In the **FLOW** panel, select the `platform` component and click **Build**. Wait for “Platform Build Finished successfully”.

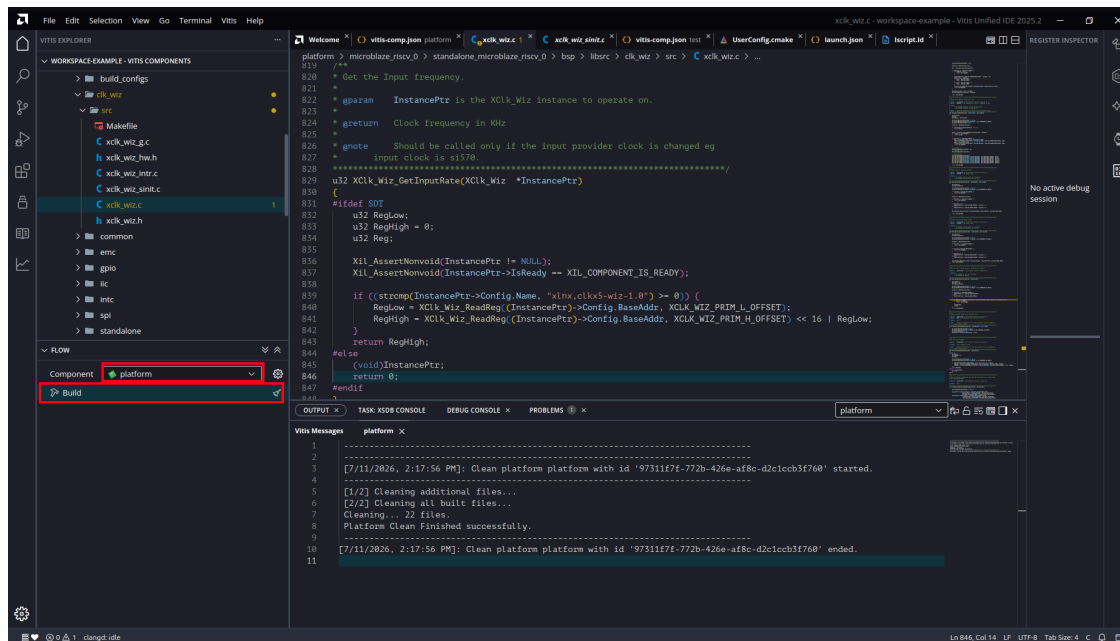


Figure 29: Build Platform

7.7.2 Build the Application

Switch the FLOW component to your application and click **Build**.

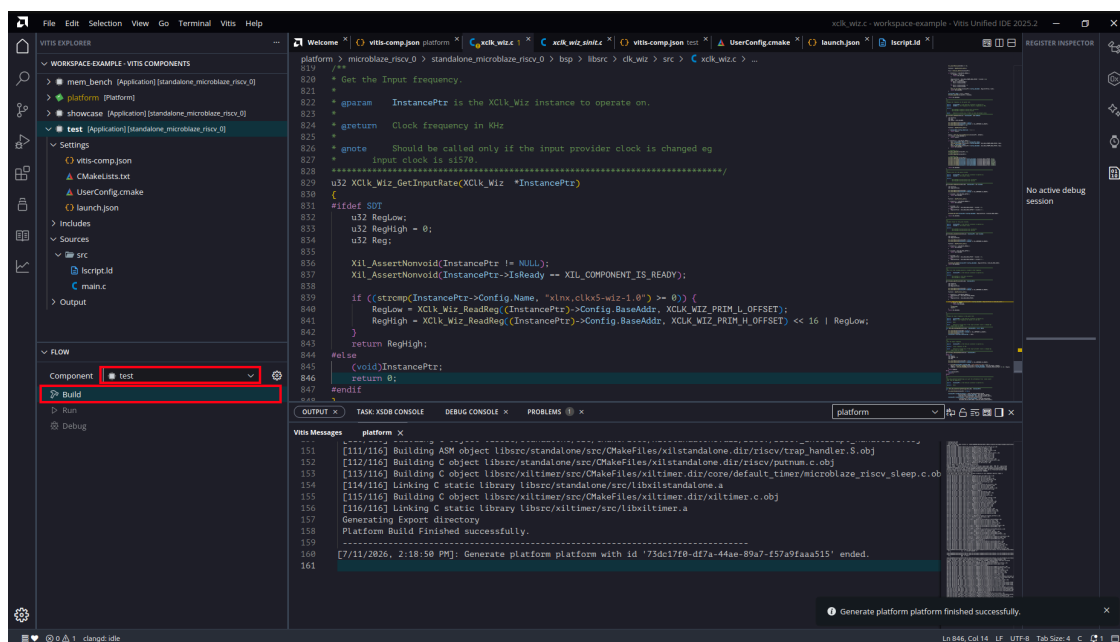


Figure 30: Build Application

The first application build asks how platform builds should be handled. Select **Always build platform with application** and click **Save in Workspace Preference**. BSP changes (such as Section 7.6) then propagate automatically on every build.

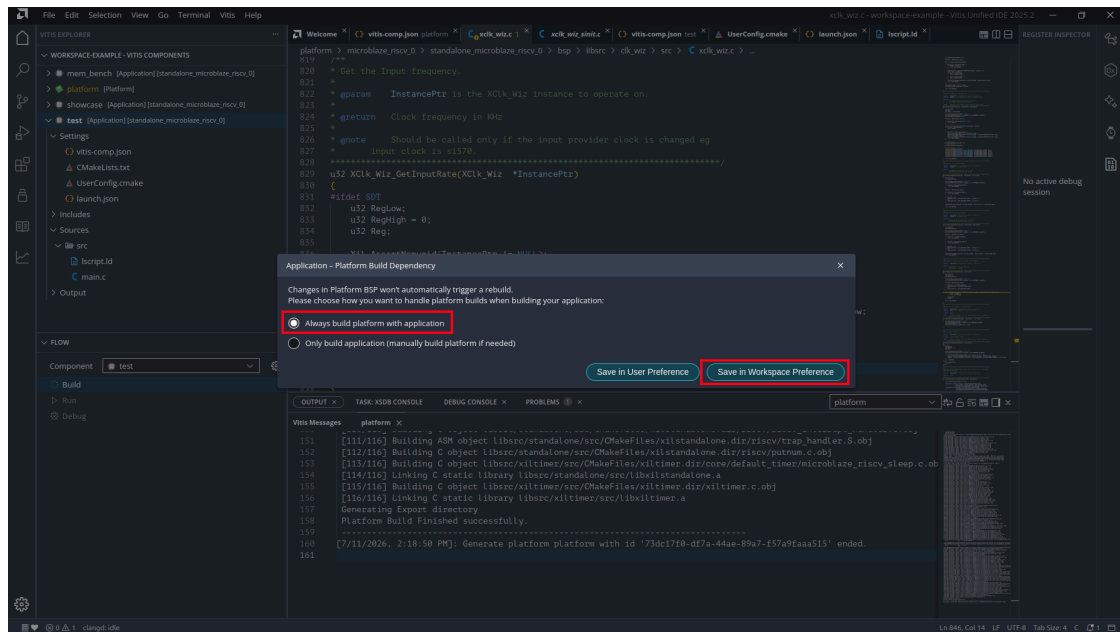


Figure 31: Platform Build Dependency

The build produces `<workspace>/test/build/test.elf`.

Note: During the build, Vitis automatically links in `boot.s` and `crt.o` from the standalone BSP: `boot.s` runs first after reset (initializes registers, stack pointer, and trap vector), and `crt.o` clears `.bss` before calling `main()`.

7.8 Debug over JTAG

7.8.1 Start a Debug Session

In the **FLOW** panel, click **Debug**. Vitis programs the FPGA over JTAG, loads the ELF into memory, and pauses execution at `main()`.

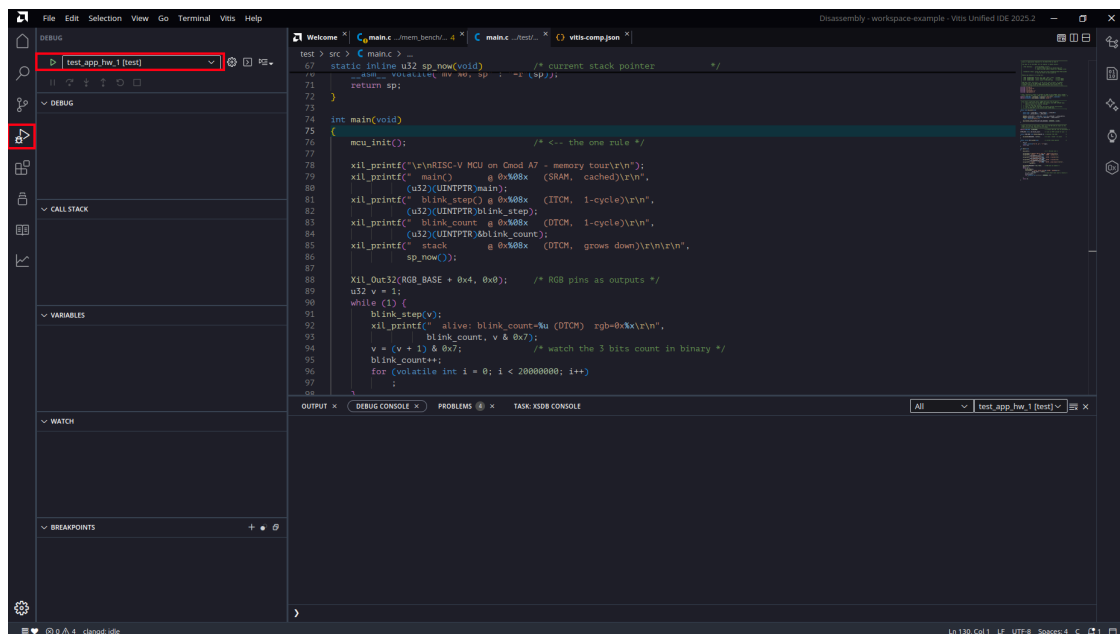


Figure 32: Debug Launched

The Debug view shows the target (*RISC-V at USER2, Hart #0 — PAUSED ON BREAKPOINT*), the call stack, local variables, and breakpoints. Note the call stack address: `main()` is located at `0x600009EC`, in SRAM, exactly where the linker script placed it.

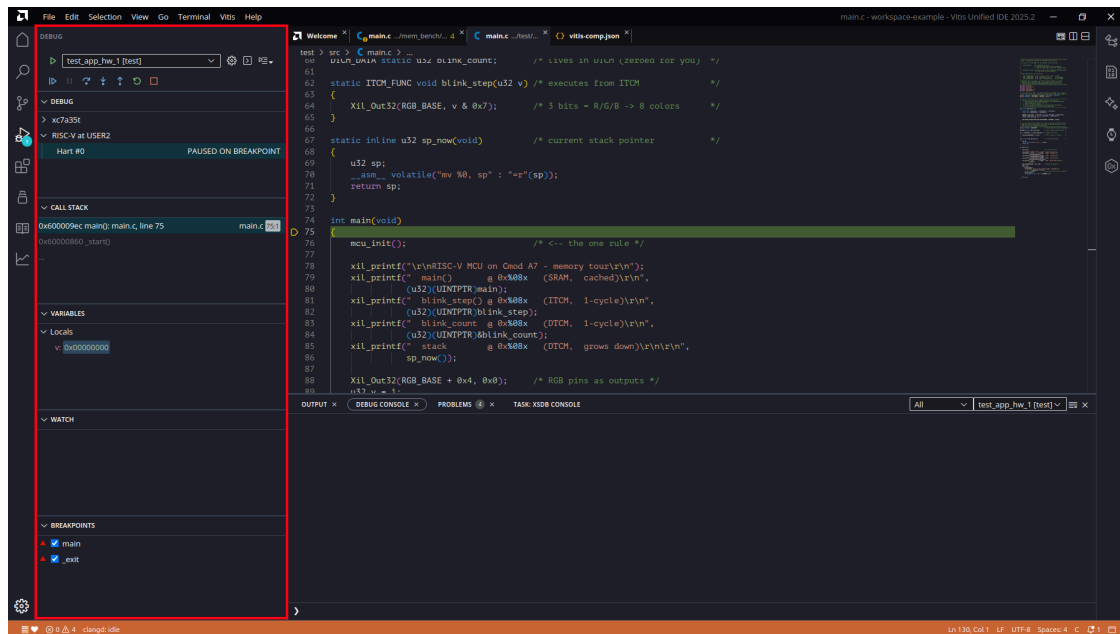


Figure 33: Paused at main()

7.8.2 Open a Serial Terminal, Then Continue

Open a serial terminal before resuming execution. The board enumerates as two serial ports; the UART is usually the higher-numbered port. Set the terminal to 115200 8N1.

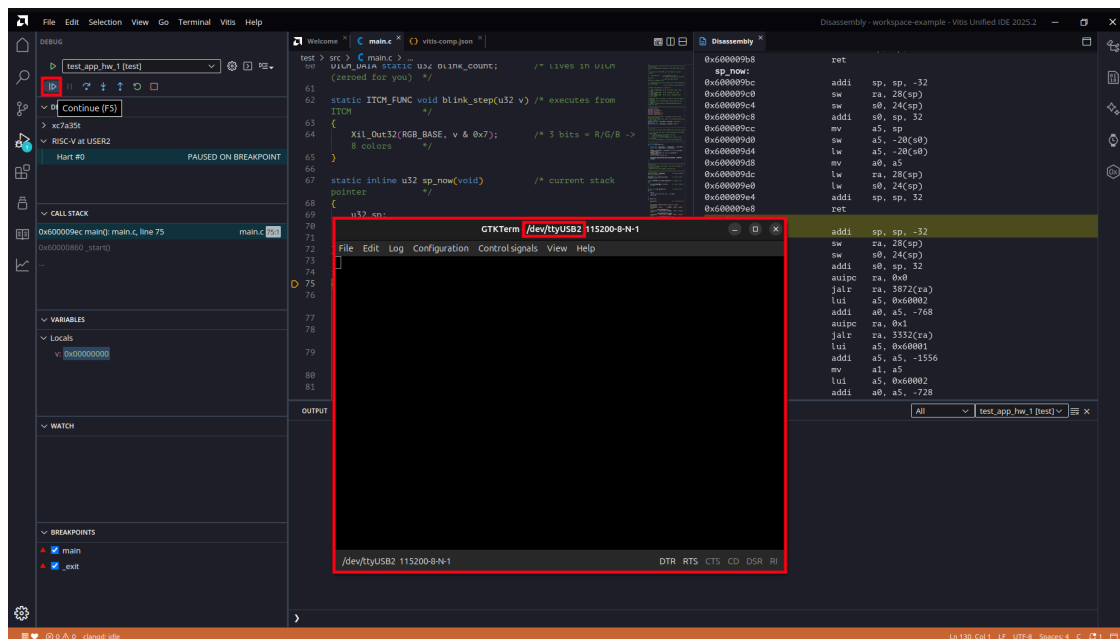


Figure 34: GTKTerm on the Board UART

Click **Continue (F5)**. The application starts: the memory tour prints once, followed by a status line about once a second, and the on-board RGB LED cycles through its colors.

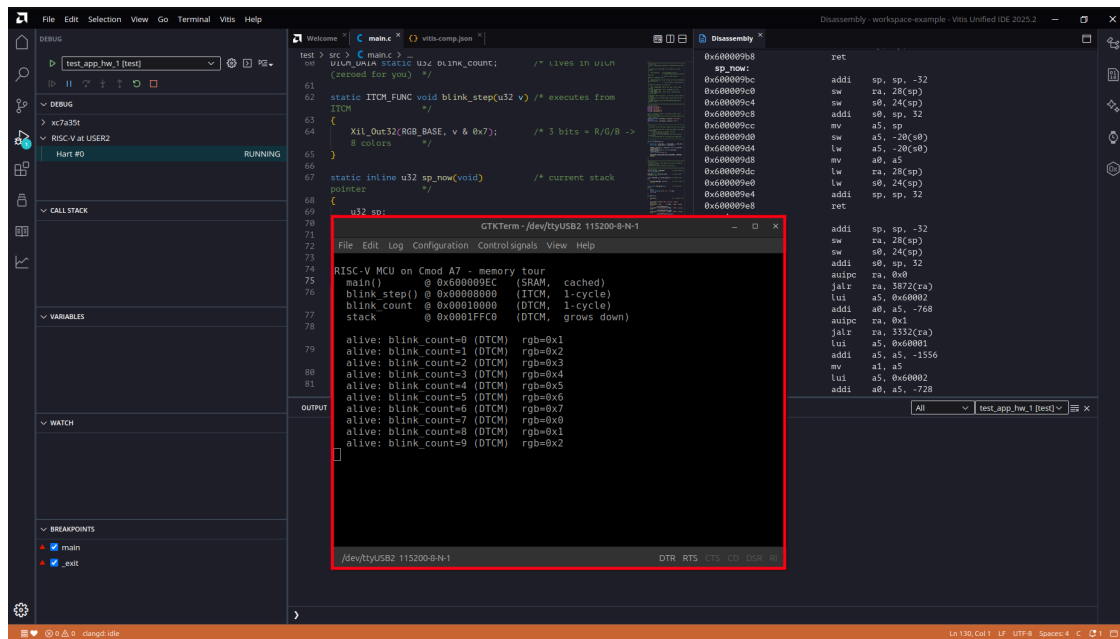


Figure 35: Memory Tour and Status Output

The memory tour output confirms that the memory layout is correct:

```
RISC-V MCU on Cmod A7 - memory tour
main()      @ 0x600009EC   (SRAM,  cached)
blink_step() @ 0x00008000 (ITCM,   1-cycle)
blink_count @ 0x00010000 (DTCM,   1-cycle)
stack       @ 0x0001FFC0 (DTCM,   grows down)
```

Each line matches the memory map in the datasheet: code in SRAM, fast code in ITCM, fast data and the stack in DTCM. If no output appears on the terminal, see Section 7.10.

7.8.3 Breakpoints and Stepping

Click in the gutter next to a line number to set a breakpoint. The toolbar provides **Continue**, **Step Over**, **Step Into**, and **Step Out**. The left panel shows the call stack, variables, and watch expressions while the target is paused.

To run the application without the debugger, use **Run** in the FLOW panel instead. The loading sequence is the same, but execution does not pause at `main()`.

7.9 Inspection Tools

While a debug session is active, the **View** menu provides three inspectors:

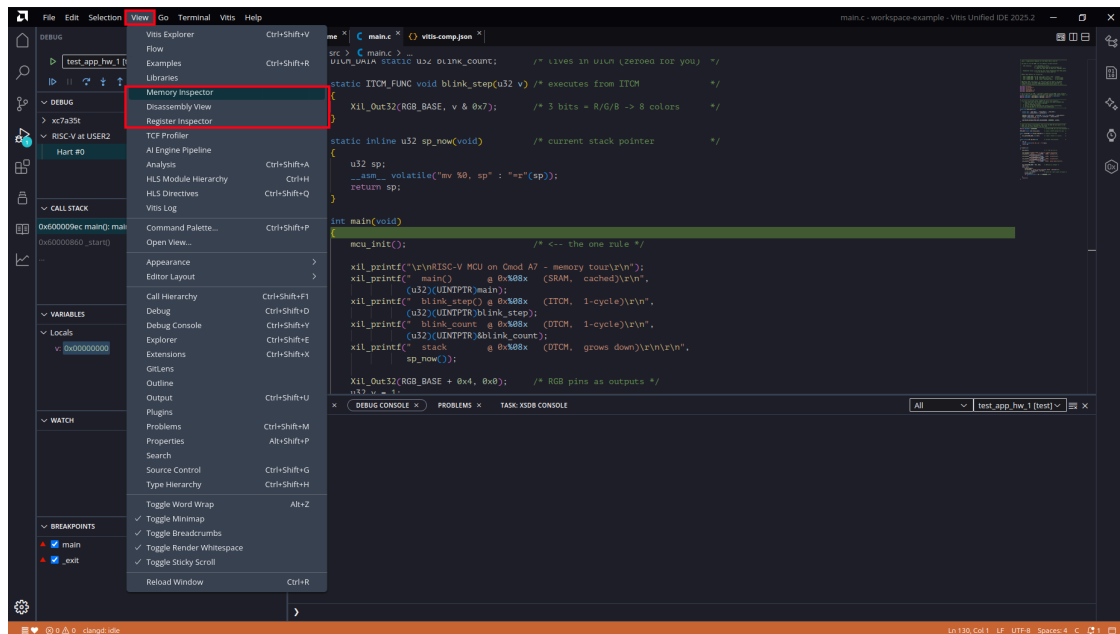


Figure 36: View Menu

7.9.1 Memory Inspector

Enter an address to inspect memory directly, for example 0x60000000 (the application image in SRAM), 0x8000 (ITCM), or 0x10000 (DTCM).

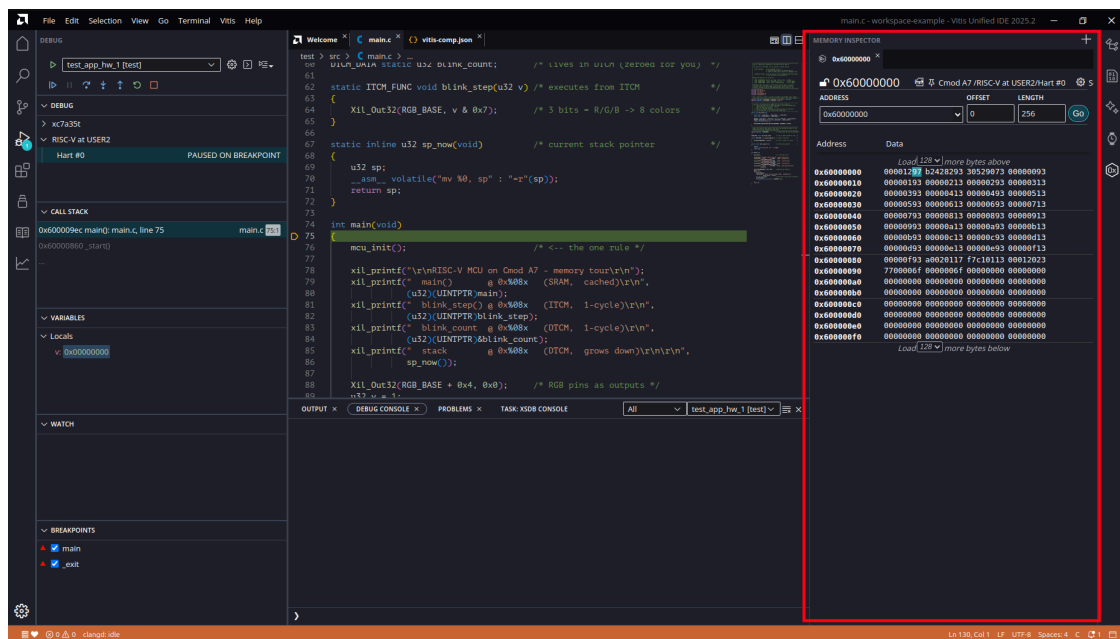


Figure 37: Memory Inspector

7.9.2 Register Inspector

The Register Inspector shows all processor registers with live values. With the target paused at `main()`, `sp` reads 0x00020000, the top of the DTCM, matching the linker script's stack placement.



The Disassembly view shows the executing machine code with source interleaving. The instruction addresses around `main()` all fall in `0x6000 xxxx`; the program runs from SRAM.



1. **Platform build fails with error: passing argument 2 of 'strcmp' ... [-Wint-conversion] in xclk_wiz.c** (reported as “Error in generating platform”). Two conditions combine to cause this error:
 - The clock-management driver source that ships with Vitis 2025.2 (`xclk_wiz_v1_10`) contains a misplaced parenthesis in `xclk_wiz.c` line 839. - If another RISC-V toolchain with GCC 14 or newer is on your PATH (for example one installed at `/opt/riscv` for assembly coursework), the BSP build may select it instead of the Vitis-bundled compiler. GCC 14+ treats this construct as an error; the bundled compiler treats it as a warning.

© 2026 NCKU MPPA Course

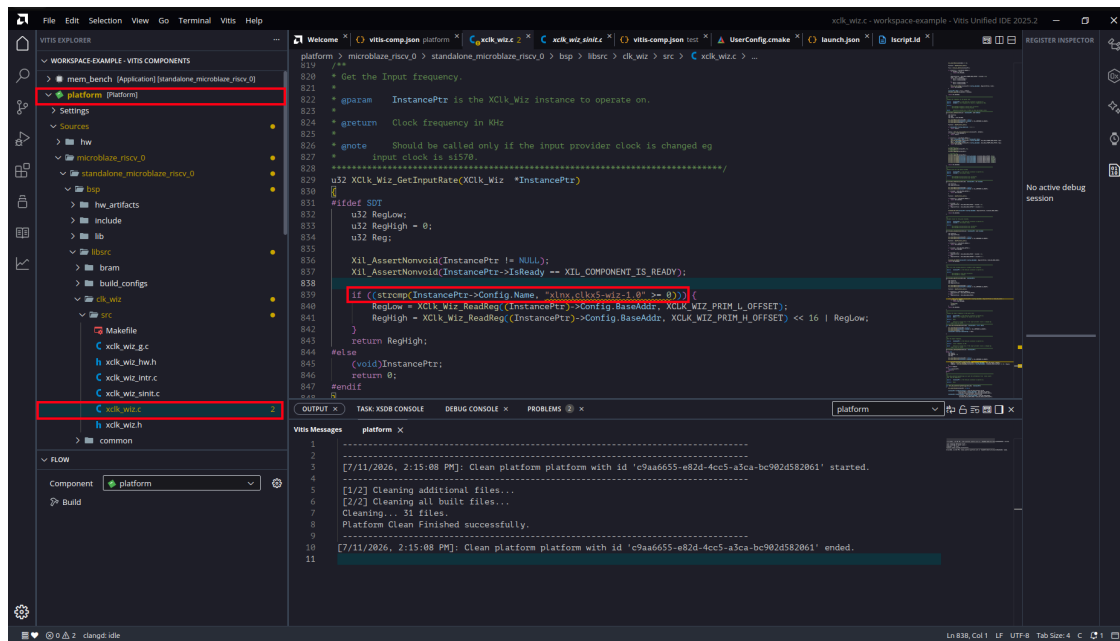


Figure 40: clk_wiz Driver Bug

Fix the source (this fix works with either compiler): change line 839 from

```
strcmp(InstancePtr->Config.Name, "xlnx,clkx5-wiz-1.0") >= 0)
```

to

```
strcmp(InstancePtr->Config.Name, "xlnx,clkx5-wiz-1.0") >= 0
```

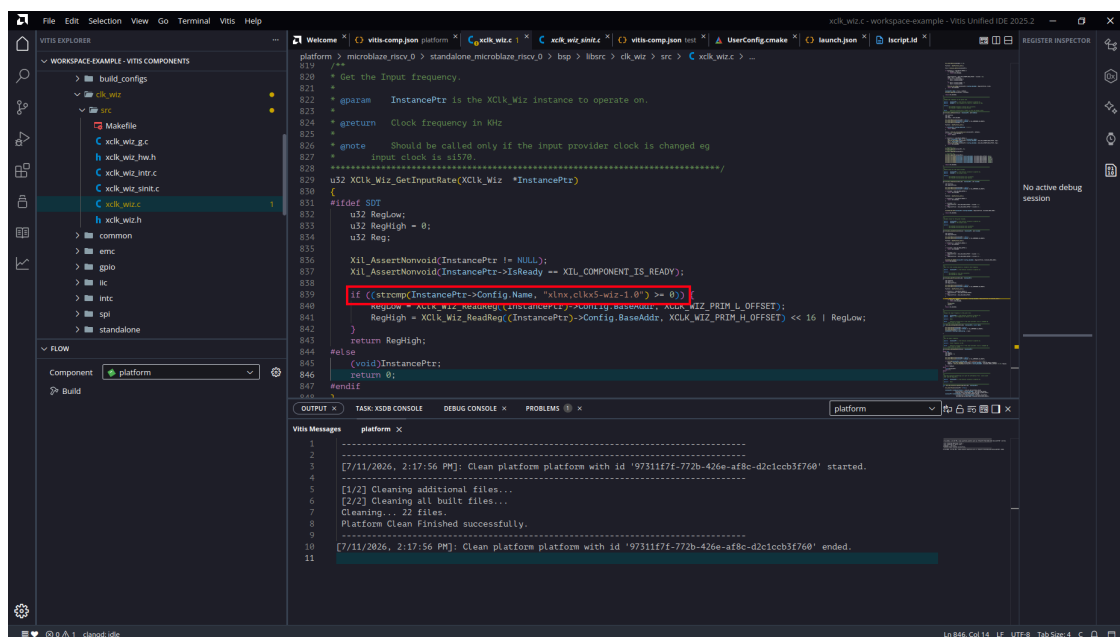


Figure 41: After the Fix

Then rebuild the platform. Apply the same one-line fix to the Vitis installation copy at <install>/2025.2/data/embeddedsw/XilinxProcessorIPLib/drivers/clk_wiz_v1_10/src/xclk_wiz.c, where <install> is the Xilinx installation directory (/opt/Xilinx by default on Linux). The platform re-imports driver sources whenever the BSP is regenerated, so an unpatched installation reintroduces the error.

To check which compiler configured the BSP, read platform/.../bsp/libsrc/build_configs/gen_bsp/compile_commands.json. To force reselection, delete platform/.../bsp/libsrc/build_configs and rebuild from a session whose PATH does not contain the other toolchain.

1. **The application runs (RGB LED cycles) but the USB console is silent.** xil_printf output is directed to the DIP-header UART. The BSP stdout has reverted to uart_1: redo Section 7.6, then rebuild both the platform and the application. The compiled setting is recorded in platform/export/platform/sw/standalone_microblaze_riscv_0/include/bspconfig.h: STDOUT_BASEADDRESS must read 0x40300000 (uart_USB), not 0x40310000 (uart_1).

8 Standalone Boot

This chapter describes how an application is stored in the QSPI flash and started automatically at power-on. A small bootloader (AMD's standard SREC SPI Bootloader, carried inside the hardware image) copies the application from flash into SRAM and starts it, with no PC attached, in under a second after power is applied.

The walkthrough covers the complete path: building the bootloader, merging it into the hardware image, converting an application to a flash image, and programming both into the flash. Everything after the hardware image itself is done in the Vitis Unified IDE.

8.1 How Standalone Boot Works

```
Power-on → FPGA configures itself from QSPI flash (<1 s)
          → Bootloader (in Block RAM, part of the hardware image) starts
          → Reads the application image (SREC) from flash @ 0x220000
          → Copies it to the addresses the image names (SRAM)
          → Jumps to the application's entry point
```

The flash holds two independent regions, read by two different readers:

Flash offset	Contents	Read by
0x000000–0x21FFFF	Hardware image (bitstream, with the bootloader in its Block RAM initialization)	The FPGA configuration engine, at power-on
0x220000–0x3FFFFFF	Application slot (SREC image, 1.875 MB)	The bootloader

Block RAM is volatile, so the bootloader cannot live there across a power cycle. Its persistent copy travels inside the bitstream: a bitstream carries the initial contents of every block RAM, and the CPU's local memory is built from block RAM. At every power-on the configuration engine reloads the bitstream from flash, which restores the bootloader. Like a mask ROM, it cannot be corrupted from software. The CPU then leaves reset at address 0x0 and executes it.

The application is stored as an SREC image (Motorola S-record), a text format in which every line carries its own destination address. The bootloader copies each record to the address it names, so the linker script decides where the program runs. The course template links to SRAM at 0x6000_0000, so the image is loaded there.

Memory	Size	Role
QSPI flash	4 MB	hardware image + bootloader · application slot @ 0x220000 (non-volatile)
SRAM @ 0x60000000	512 KB	where the application executes (code/data/heap, I/D-cached)
BRAM @ 0x00000000	128 KB	32 KB bootloader · 32 KB ITCM @ 0x8000 · 64 KB DTCM @ 0x10000

Note: The repository ships the results of this walkthrough prebuilt in `release/:boot_srec.bit` is the hardware image with the bootloader already merged in. To deploy an application with the stock bootloader, skip directly to Section 8.7.

8.2 Prerequisites

- A workspace with the platform and a built application, prepared as described in Section 7
- The hardware image and its memory map from the repository: `release/top.bit` and `release/top_wrapper.mmi`
- Cmod A7-35T board connected via its micro-USB cable
- A serial terminal program for the board's console output

8.3 Create the Bootloader Component

The bootloader is not custom code: it is the stock **SREC SPI Bootloader** example that ships with Vitis, built like any other application component.

8.3.1 New Application from Template

Open the **Examples** view from the left activity bar. Under *Embedded Software Examples*, select **SREC SPI Bootloader** and click **Create Application Component from Template**.

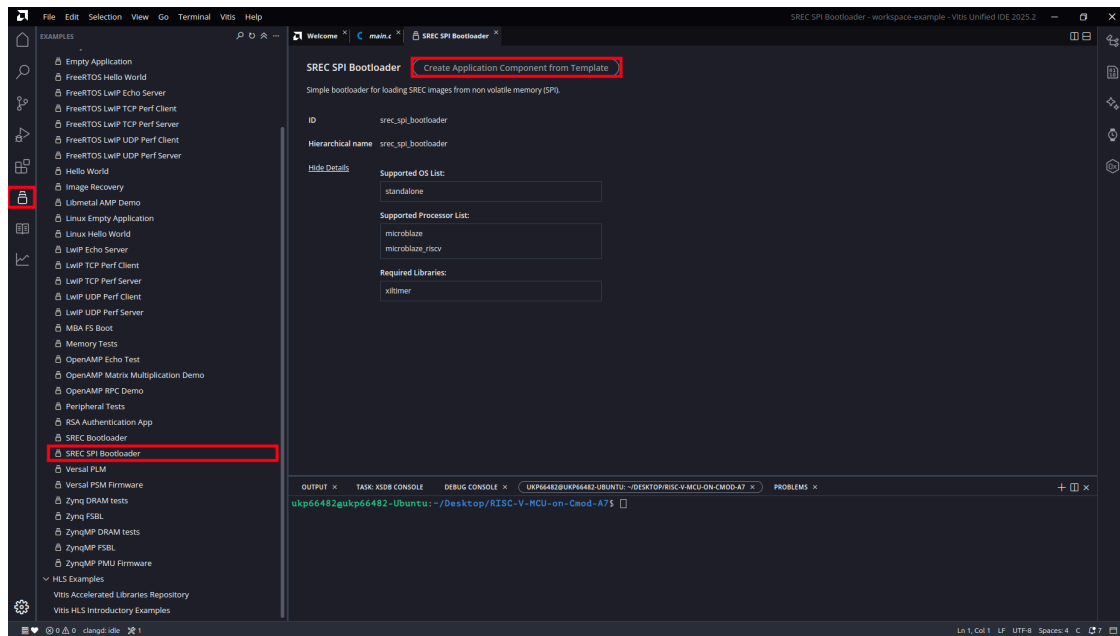


Figure 42: SREC SPI Bootloader Template

8.3.2 Name and Location

Keep the proposed name `srec_spi_bootloader` and the workspace directory as the location. Click **Next**.

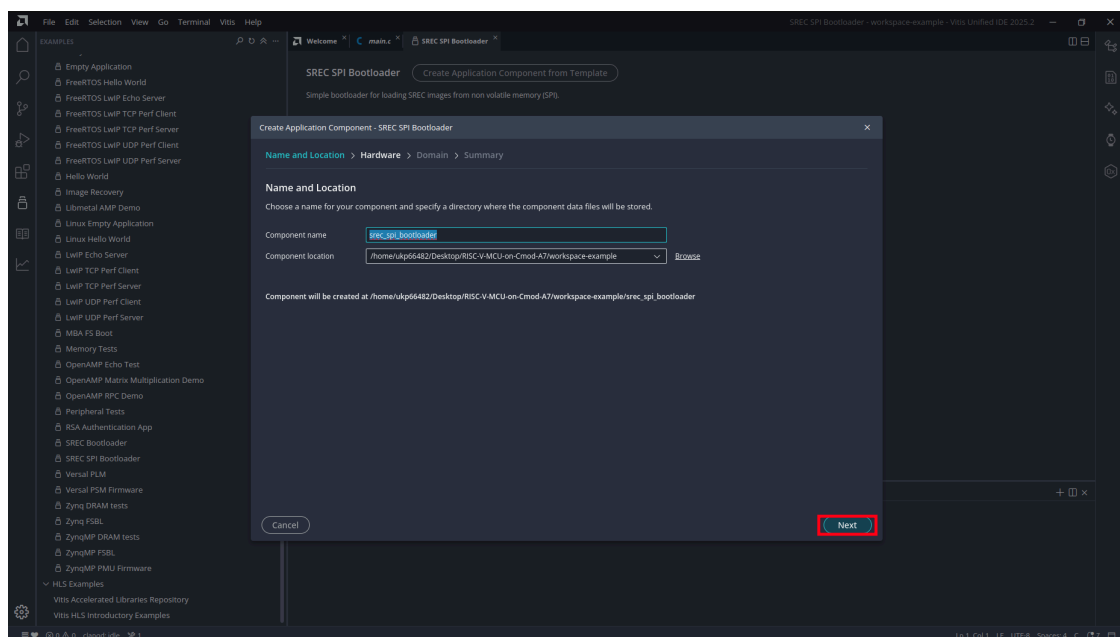


Figure 43: Bootloader Name and Location

8.3.3 Select the Platform

Select the platform component (Board: `cmod_a7-35t`). Click **Next**.

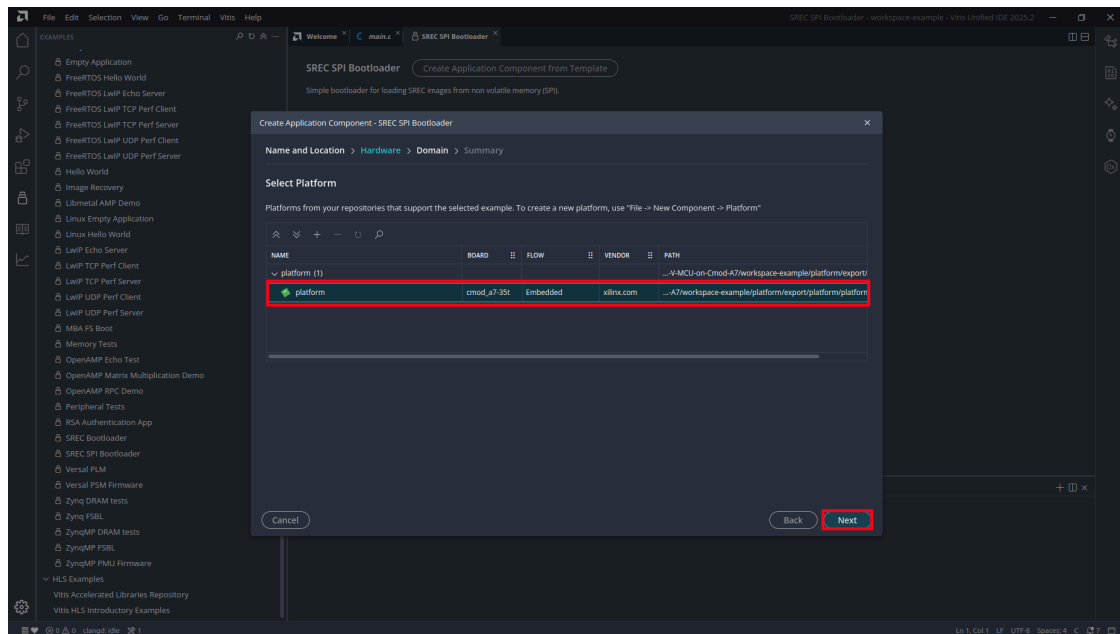


Figure 44: Select Platform

8.3.4 Summary

Review the settings (the domain is standalone_microblaze_riscv_0) and click **Finish**.

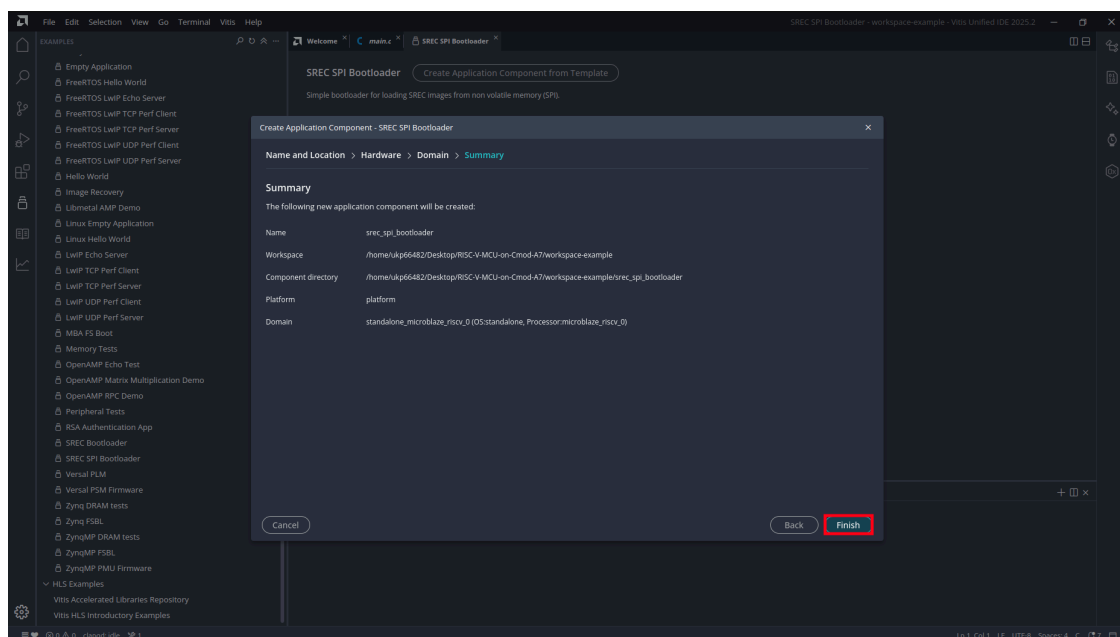


Figure 45: Bootloader Summary

Note: The template automatically selects this board's QSPI flash controller, and it links the bootloader to Block RAM at 0x0, so the bootloader can copy an application into SRAM without overwriting itself. Neither setting needs to be adjusted.

8.4 Configure the Bootloader

Two source edits configure the template for this board. Both files are under the component's `src/` folder.

8.4.1 Set the Application Slot Address

`blconfig.h` defines where in the flash the bootloader looks for the application. The template ships with a placeholder address and a `#warning` that reminds you to change it:

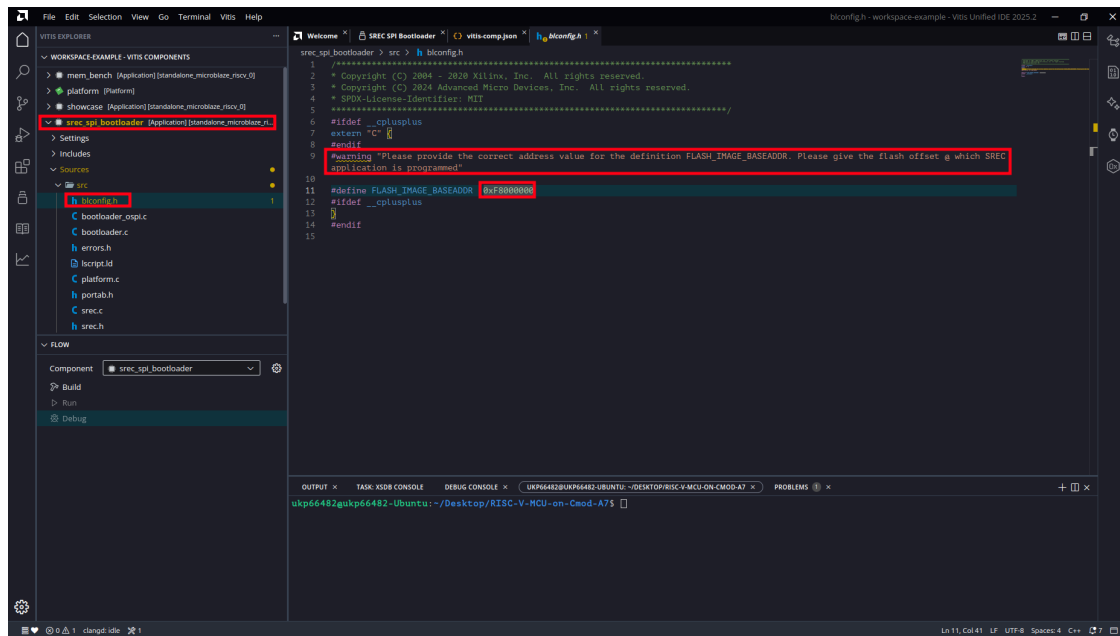


Figure 46: blconfig.h As Generated

Set `FLASH_IMAGE_BASEADDR` to `0x00220000` (the application slot, which starts immediately after the bitstream region) and comment out the `#warning` line:

```
#define FLASH_IMAGE_BASEADDR 0x00220000
```

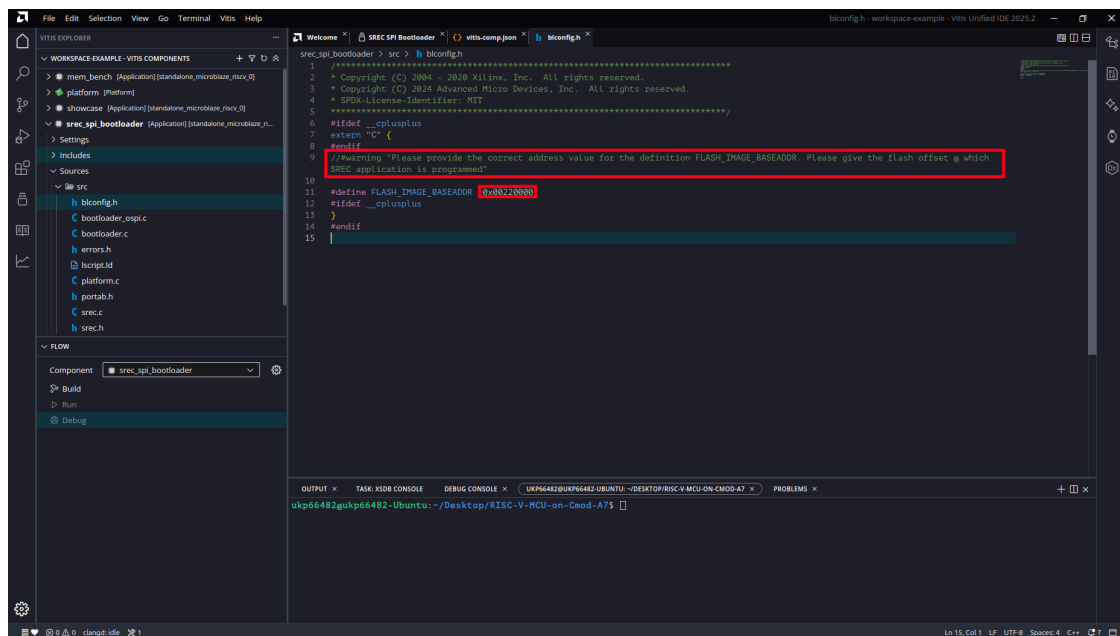


Figure 47: blconfig.h Configured

8.4.2 Disable Verbose Output

`bootloader.c` defines `VERBOSE` by default (line 45):

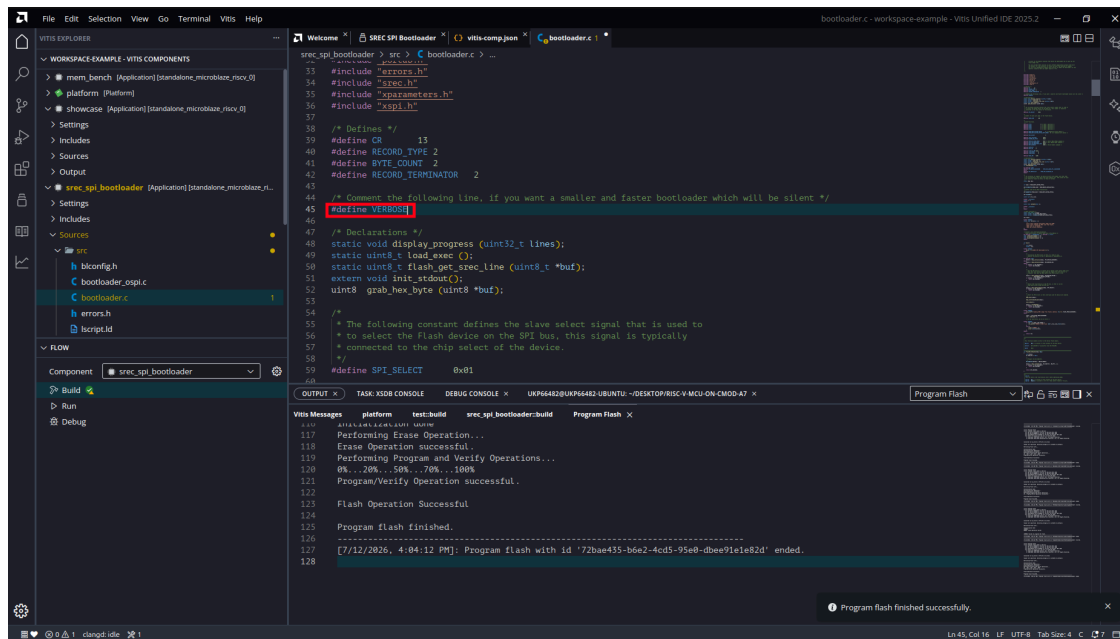


Figure 48: VERBOSE As Generated

Comment it out:

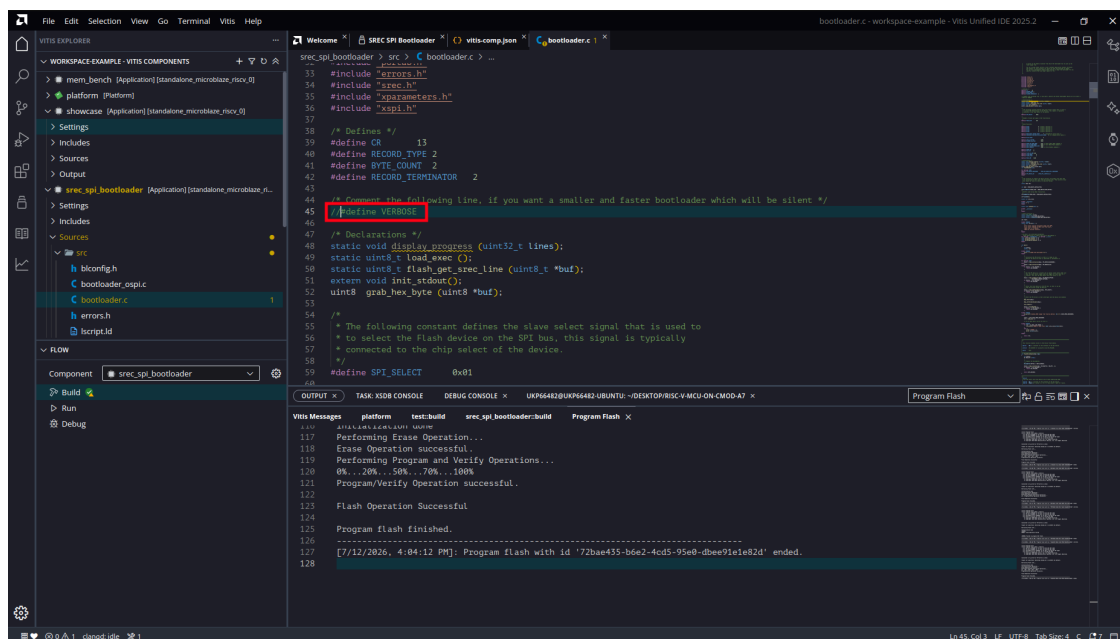


Figure 49: VERBOSE Disabled

Note: With VERBOSE enabled the bootloader prints progress for every record it copies, through a UART whose baud divisor it never initializes. The application still boots, but loading takes many seconds instead of well under one second. Disabling VERBOSE gives a silent bootloader and restores the sub-second boot. The definition returns whenever the template is regenerated, so re-check this line when creating a new bootloader component.

8.5 Build the Bootloader

In the **FLOW** panel, set the component to `srec_spi_bootloader` and click **Build**.

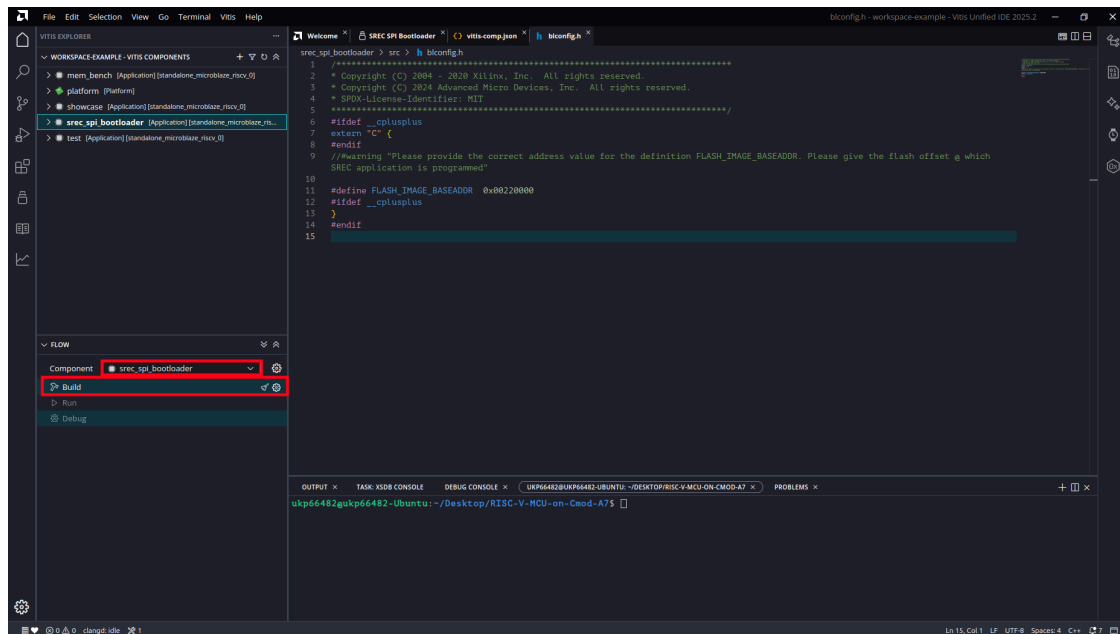


Figure 50: Build the Bootloader

The build produces `srec_spi_bootloader.elf` under the component's Output tree (about 16 KB of code, well inside its 32 KB Block RAM region).

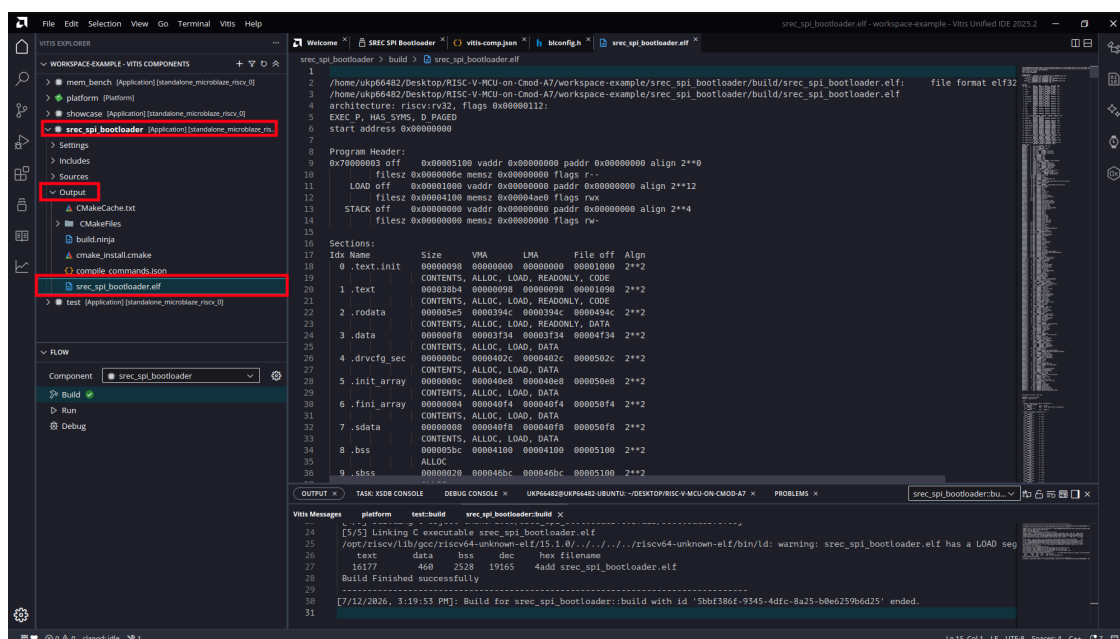


Figure 51: Bootloader ELF Built

8.6 Merge the Bootloader into the Hardware Image

The bootloader ELF is merged into the bitstream's Block RAM initialization with `updatemem`, a command-line tool that ships with Vitis. Only the RAM initialization words change; the logic, routing, and timing of the hardware image are untouched, so the merge takes seconds and needs no hardware rebuild.

Open a terminal in the repository root (**Terminal > New Terminal**) and run:

```
updatemem -force \
-meminfo release/top_wrapper.mmi \
-data workspace-example/srec_spi_bootloader/build/srec_spi_bootloader.elf \
-bit release/top.bit \
-proc top_i/microblaze_riscv_0 \
-out release/boot_srec.bit
```

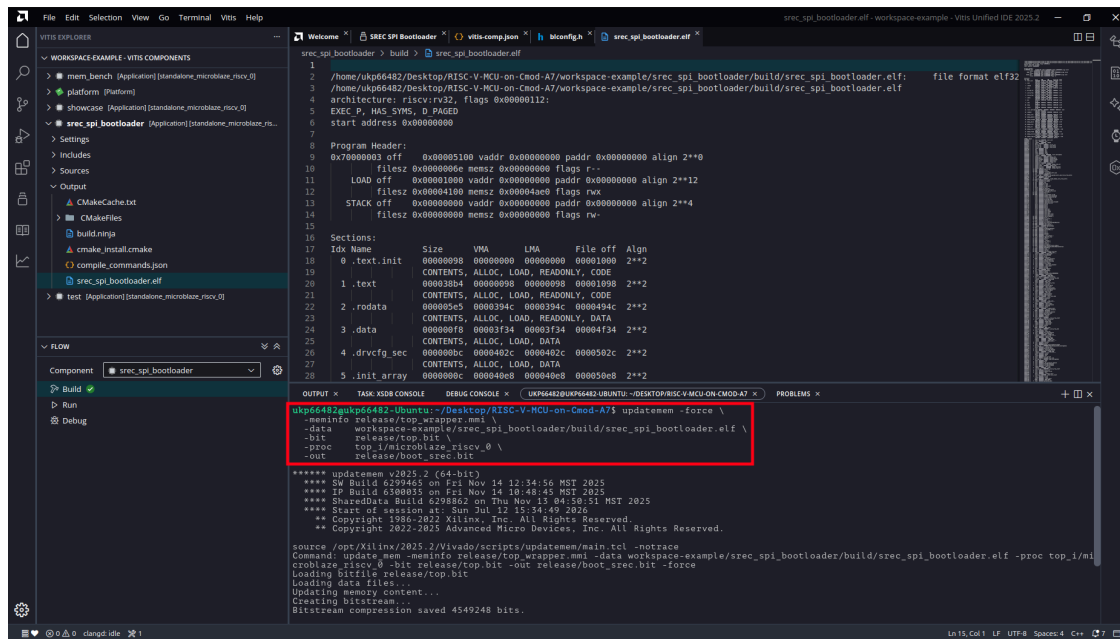


Figure 52: updatemem in the Integrated Terminal

The inputs and what they mean:

Argument	File	Purpose
-meminfo	top_wrapper.mmi	Which physical Block RAM cell holds which CPU address (fixed at hardware placement)
-data	srec_spi_bootloader.elf	The program to place into Block RAM
-bit	top.bit	The hardware image, Block RAM blank
-proc	top_i/microblaze_riscv_0	Which processor's memory to initialize
-out	boot_srec.bit	The bootable hardware image

Note: A successful run prints updatemem completed successfully and rewrites the output file. If the tool prints only its usage text, one of the paths is wrong and no output is produced; check the output file's timestamp before using it. The MMI file must come from the same hardware build as the bitstream.

8.7 Prepare the Application Image

The bootloader reads SREC text, so the application ELF is converted with the toolchain's objcopy. This walkthrough deploys the test application built in Section 7; the same ELF runs unchanged under JTAG and from flash.

```
riscv32-amd-linux-gnu-objcopy -O srec \
workspace-example/test/build/test.elf \
workspace-example/test/build/test.srec
```

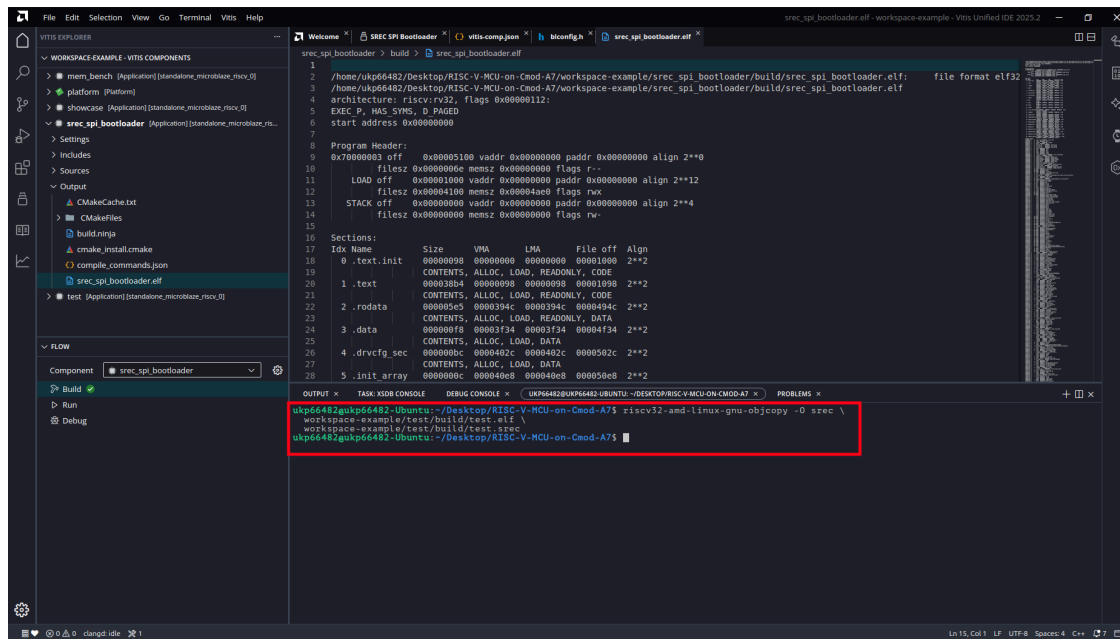



Figure 53: objcopy to SREC

Then give the image a .bin extension:

```
cp workspace-example/test/build/test.srec \
workspace-example/test/build/test_srec.bin
```

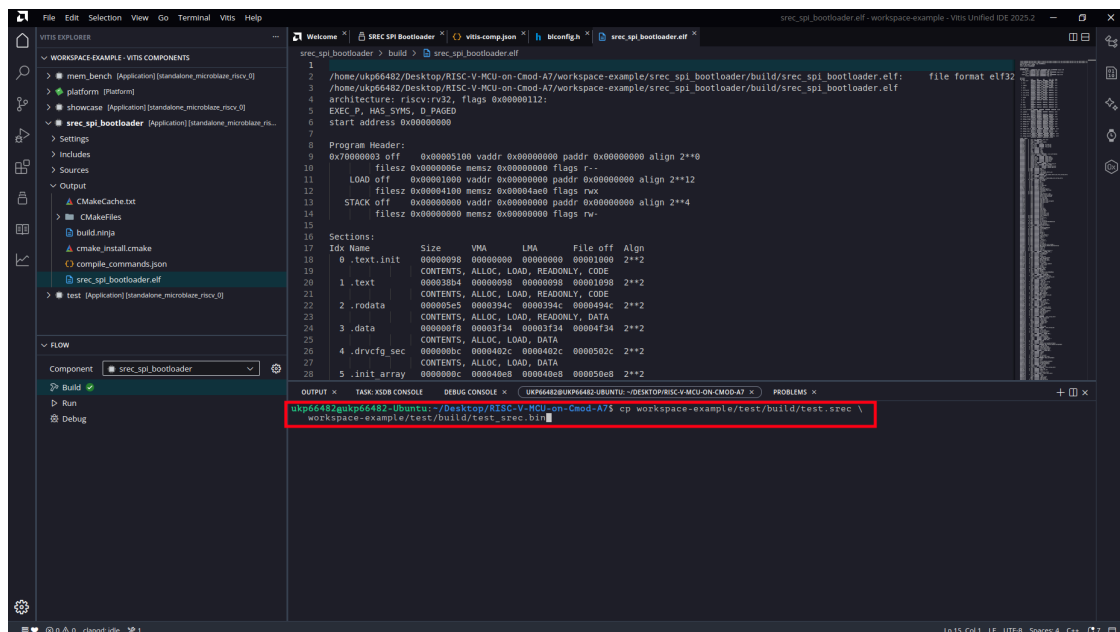


Figure 54: Rename to .bin

Note: The extension matters. The flash programmer treats a .srec file as an image format and decodes it to the memory addresses inside it; a .bin file is written to the flash byte for byte, which is what the bootloader expects to find in the slot. The file name itself is free; only the .bin extension is significant.

Each S3 line of the SREC text embeds its destination address; with the course linker script every record falls in SRAM (addresses beginning 6000). The image is about three times the size of the binary it encodes; the 1.875 MB slot therefore never limits an application before the 512 KB SRAM does.

8.8 Program the Flash

Both flash regions are written from **Vitis > Program Flash...** in the menu bar. Each write erases and programs only the address range of its own image, so the two regions never disturb each other.

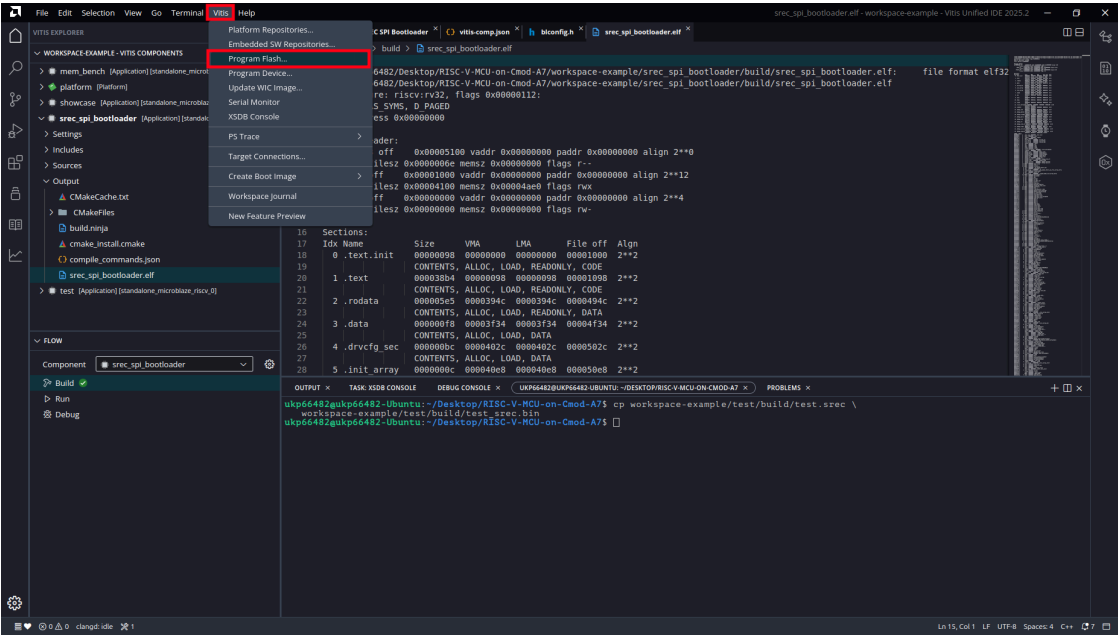


Figure 55: Vitis Program Flash Menu

8.8.1 Program the Hardware Image

This step is needed once, and again only after the bootloader or the hardware design changes. In the *Program Flash Memory* dialog set:

Field	Value
Image File	release/boot_srec.bit
Offset	0x0
Flash Type	mx25l3273f-spi-x1_x2_x4
Verify after flash	checked

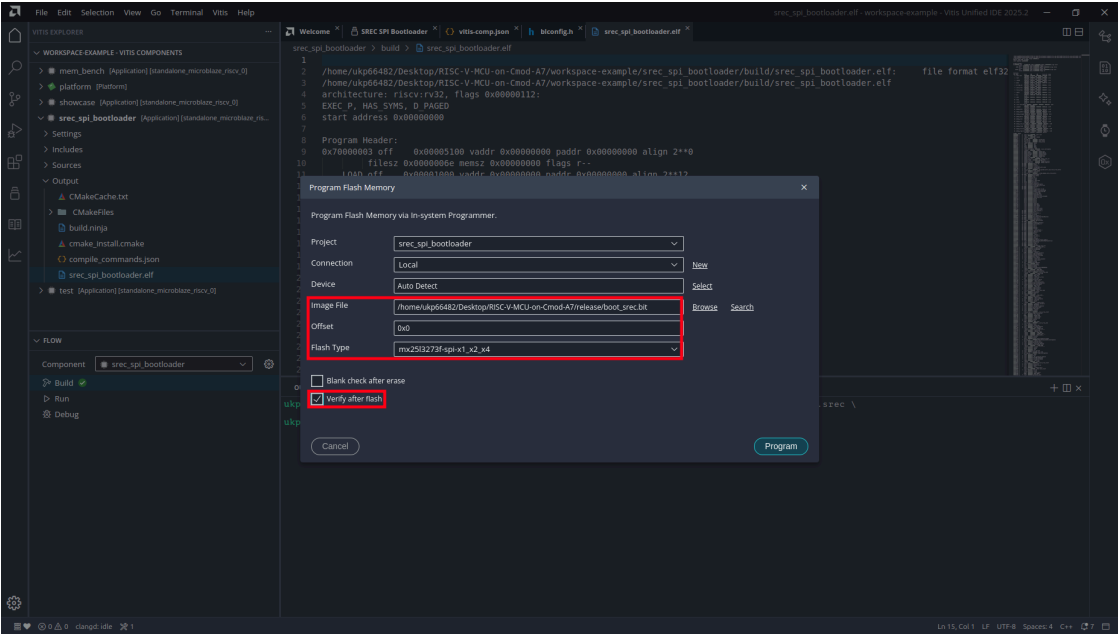


Figure 56: Program the Hardware Image

Click **Program** and wait for *Program flash* finished.

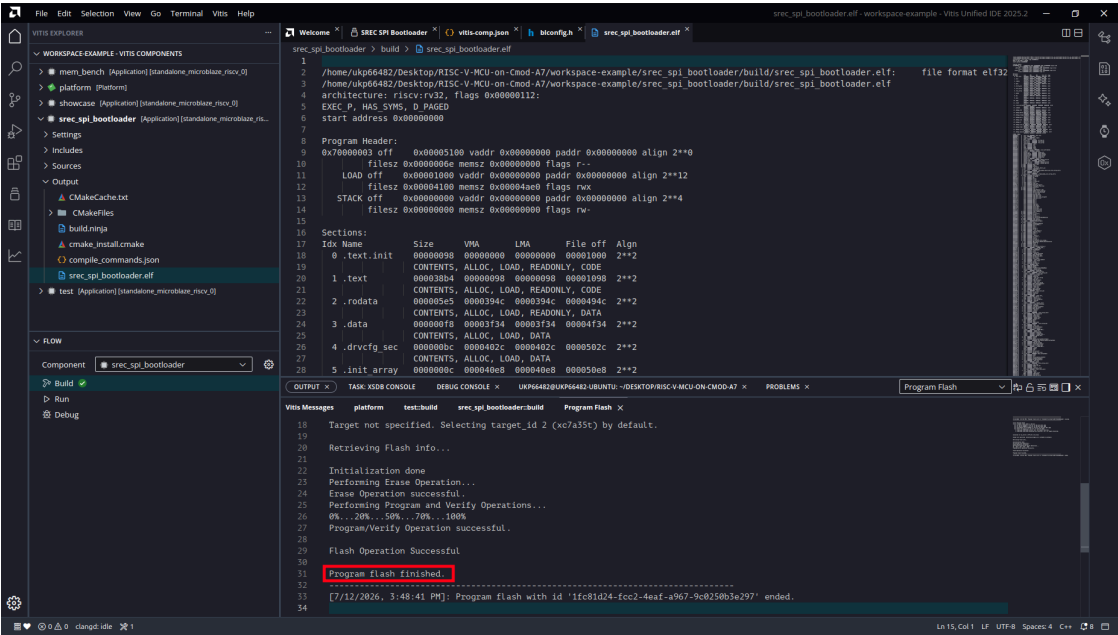


Figure 57: Hardware Image Programmed

Note: The flash type entry covers the board's Macronix MX25L3233F device. Older boards carry a Micron part instead; if the IC3 marking says N25Q032, select n25q32-3.3v-spi-x1_x2_x4.

8.8.2 Program the Application

Open Vitis > Program Flash... again and set:

Field	Value
Image File	the .bin application image
Offset	0x220000
Flash Type	mx25l3273f-spi-x1_x2_x4
Verify after flash	checked

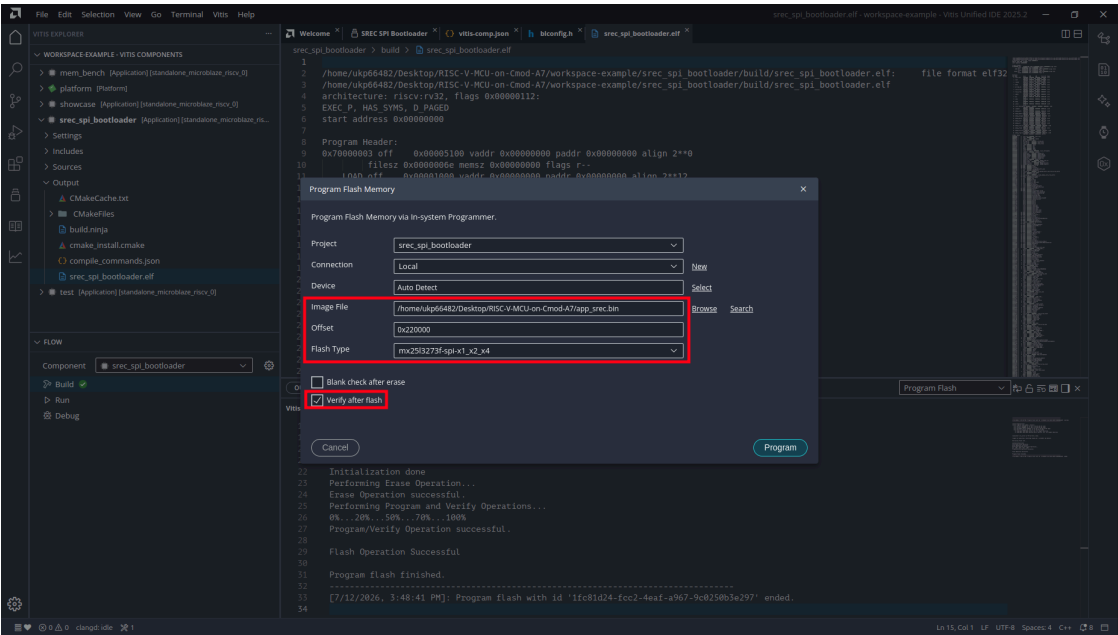


Figure 58: Program the Application Slot

Click **Program** and wait for *Program flash finished*.

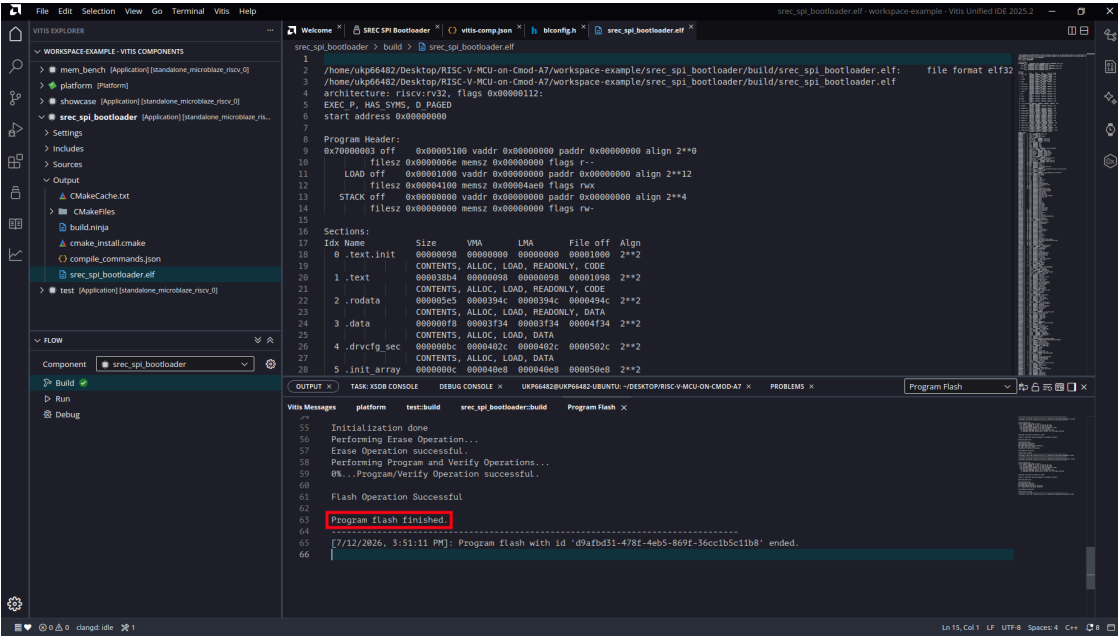


Figure 59: Application Slot Programmed

8.9 Boot and Verify

Disconnect the USB cable and plug it back in. This is a true cold boot: the FPGA configures itself from the flash, the bootloader loads the application, and the application runs, with no debugger and no IDE involved.

Open a serial terminal at 115200 8N1 (the Vitis **Serial Monitor**, GTKTerm, or pyserial's miniterm; the board enumerates as two ports and the UART is usually the higher-numbered one). The course template prints its memory tour, followed by the running status output:

```
RISC-V MCU on Cmod A7 - memory tour
main()      @ 0x600009EC (SRAM,  cached)
blink_step() @ 0x00008000 (ITCM,  1-cycle)
blink_count @ 0x00010000 (DTCM,  1-cycle)
stack       @ 0x0001FFC0 (DTCM,  grows down)
```

Note: The reset button (BTN0) restarts the CPU into the bootloader, which re-copies the application from flash, so a reset behaves like a power-cycle. Modified .data globals are restored because the image is re-read from flash at every boot.

8.10 Updating the Application

After the one-time setup above, the day-to-day deployment loop has three steps, none of which touch the bootloader or the hardware image:

- 1. Build the application in Vitis.
- 2. Convert and rename the image (the two commands in the application image step).
- 3. **Vitis > Program Flash...** to offset 0x220000.

Power-cycle, and the new application boots.

8.11 Working with JTAG Debug Mode

Both modes coexist on the same board with no switching:

	JTAG (Vitis Run/Debug)	Standalone (flash)
Code goes to	RAM directly (volatile)	Flash (persistent)
After power-cycle	the flashed application boots	the deployed application boots
Breakpoints / stepping	yes	no
Typical use	daily development loop	shipping a finished program

The typical development cycle is edit, build, and JTAG Run/Debug. When the program works, deploy it to flash once. JTAG always takes priority over the bootloader: it halts the CPU before the bootloader runs, so the flash contents cannot interfere with a debug session.

8.12 Troubleshooting

1. **Boot works but takes many seconds:** `VERBOSE` is still defined in `bootloader.c`. Comment it out, rebuild the bootloader, re-run `updatemem`, and reprogram the hardware image.
2. **Nothing at all after power-on (no LED, no output):** The flash holds `top.bit` (blank Block RAM, no bootloader) instead of `boot_srec.bit`, or the hardware image region is empty or corrupt. Reprogram the hardware image. JTAG remains available for recovery.
3. **updatemem printed only usage text:** One of the argument paths is wrong; no output file was written, and reprogramming would flash the previous image. Fix the path and confirm the `updatemem completed successfully` message.
4. **Program Flash fails with Flash Operation Failed:** Another process is holding the JTAG connection, typically a Vitis debug session or an XSDB console. Close it (or unplug and replug the board) and retry.
5. **Garbage on the terminal:** The baud rate must be 115200. The course template sets the UART divisor in `mcu_init()`; the plain Hello World template does not set it at all.
6. **Deployed, but silent after power-on (works under JTAG):** The ELF was not linked with the course template's `lscript.ld`. The bootloader honors the SREC record addresses, and a default all-BRAM layout collides with the bootloader itself. Rebuild with the template and redeploy.
7. **Board boots an old application:** The flash write did not complete. Repeat the application programming step and confirm the verify pass succeeds.