

Cmod A7-35T RISC-V MCU

Datasheet & Reference Manual

MicroBlaze-V soft MCU on the Digilent Cmod A7-35T — peripherals, pins, power, and boot guides

Platform	Xilinx Artix-7 (xc7a35tcpg236-1) — Cmod A7-35T
Processor	MicroBlaze RISC-V
System Clock	100 MHz (12 MHz on-board oscillator × PLL)
Toolchain	Vivado & Vitis 2025.2

Document DS-CMOD7-0001 · Revision A · July 2026

Table of Contents

1	Device Overview	4
1.1	Introduction	4
1.2	Features	4
1.3	System Block Diagram	4
1.4	Reference Documents	4
2	System Architecture	6
2.1	MicroBlaze RISC-V Core	6
2.2	Bus Architecture	6
2.3	Interrupt Controller	6
2.4	Clocking	7
2.5	Reset	7
2.6	Debug Module	7
2.7	Complete Address Map	7
3	Memory Hierarchy	8
3.1	Memory Hierarchy Overview	8
3.2	Memory Map	9
3.3	Local Memory (ITCM / DTCM / Bootloader)	9
3.4	External SRAM (Cellular RAM)	9
3.5	QSPI Flash	10
3.6	Caches	10
3.7	Measured Access Latencies	10
3.8	Memory Placement Guidance	11
4	Pinout	12
4.1	DIP Connector Overview	12
4.2	Pin Map — Left Side (Pin 1–24)	13
4.3	Pin Map — Right Side (Pin 25–48)	13
4.4	On-Board I/O (No DIP Pin Exposure)	14
5	Peripherals	15
5.1	GPIO	15
5.1.1	On-Board GPIO	15
5.1.2	DIP Connector GPIO (4 Groups × 7-bit)	15
5.1.3	External Interrupt Inputs (INT_0_3)	15
5.2	Timers and PWM	15
5.2.1	System Timers	15
5.2.2	PWM Outputs	15
5.3	UART	16
5.3.1	USB UART (uart_USB)	16
5.3.2	External UART (uart_1)	16
5.4	I2C Controller	16
5.5	SPI Master	16
5.6	Analog-to-Digital Converter (XADC)	16
5.6.1	Analog Input Circuit	17
6	Electrical Characteristics and Power	18
6.1	Electrical Characteristics	18
6.2	Power Architecture	18
6.3	Power Input Options	18
6.4	Output Power Rails	18
6.4.1	Power-Up Sequence	19
6.5	VU Pin Behavior	19
6.6	Dual Power Source (USB + External)	19
6.7	Quick Reference for External Power Design	19
7	JTAG Debug Mode	20
7.1	Prerequisites	20
7.2	Open the Workspace	20
7.3	Create a Platform	21
7.3.1	New Platform Component	21
7.3.2	Platform Name and Location	21
7.3.3	Select the Hardware Design (XSA)	22
7.3.4	Select Operating System and Processor	23
7.3.5	Platform Summary	23
7.4	Create an Application	24
7.4.1	Create from Template	24

7.4.2	Application Name and Location	25
7.4.3	Select the Platform	25
7.4.4	Select the Domain	26
7.4.5	Application Summary	26
7.5	Replace the Sources with the Course Template	27
7.5.1	Delete the Generated Files	27
7.5.2	Import the Template Files	28
7.5.3	About the Linker Script	29
7.6	Set the Console UART (BSP)	29
7.7	Build	30
7.7.1	Build the Platform	30
7.7.2	Build the Application	30
7.8	Debug over JTAG	31
7.8.1	Start a Debug Session	31
7.8.2	Open a Serial Terminal, Then Continue	32
7.8.3	Breakpoints and Stepping	33
7.9	Inspection Tools	34
7.9.1	Memory Inspector	34
7.9.2	Register Inspector	34
7.9.3	Disassembly View	35
7.10	Troubleshooting	35
8	Standalone Boot	37

1 Device Overview

1.1 Introduction

The Cmod A7-35T RISC-V MCU is a soft microcontroller implemented on the Artix-7 FPGA of the Digilent Cmod A7-35T module. To the programmer it behaves like a commercial flash-based MCU: firmware is stored in the on-board QSPI flash and boots automatically in under a second at power-on, and the full AMD Vitis/JTAG development flow is available on the same board over a single USB cable, with no jumpers or mode switching.

The system is built around a MicroBlaze-V (RISC-V) processor with a three-level memory hierarchy — tightly-coupled BRAM (ITCM/DTCM), cached external SRAM, and QSPI flash storage — and a class-based AXI peripheral address map.

1.2 Features

- **CPU** — 32-bit RISC-V (RV32IM + bit-manipulation) at 100 MHz; 16 KB I-cache + 16 KB D-cache (write-through, 32-byte lines)
- **Memory** — 128 KB block RAM (32 KB bootloader + 32 KB ITCM + 64 KB DTCM, single-cycle); 512 KB SRAM for application code and data (cached); 4 MB QSPI flash (bitstream + application storage)
- **GPIO** — 28 bidirectional pins in four 7-bit groups, plus 4 dedicated external interrupt inputs
- **Timers** — 3 × 32-bit general-purpose timers with interrupts; 3 dedicated PWM output channels
- **Communication** — 2 × 16550 UART (USB + DIP header); I2C master (100 kHz, 50 ns glitch filter); SPI master (software-settable clock ≈ 1.6 – 25 MHz, 2 slave selects)
- **Analog** — 2 external ADC inputs (12-bit XADC, 0–3.3 V range) plus on-die temperature and supply monitors
- **I/O** — 48-pin DIP form factor, 3.3 V LVCMOS (not 5 V tolerant)
- **Boot** — standalone boot from flash (< 1 s) via the on-chip bootloader, or JTAG load/debug from Vitis; both coexist without reconfiguration
- **Debug** — JTAG breakpoints, single-step, register and memory inspection

1.3 System Block Diagram

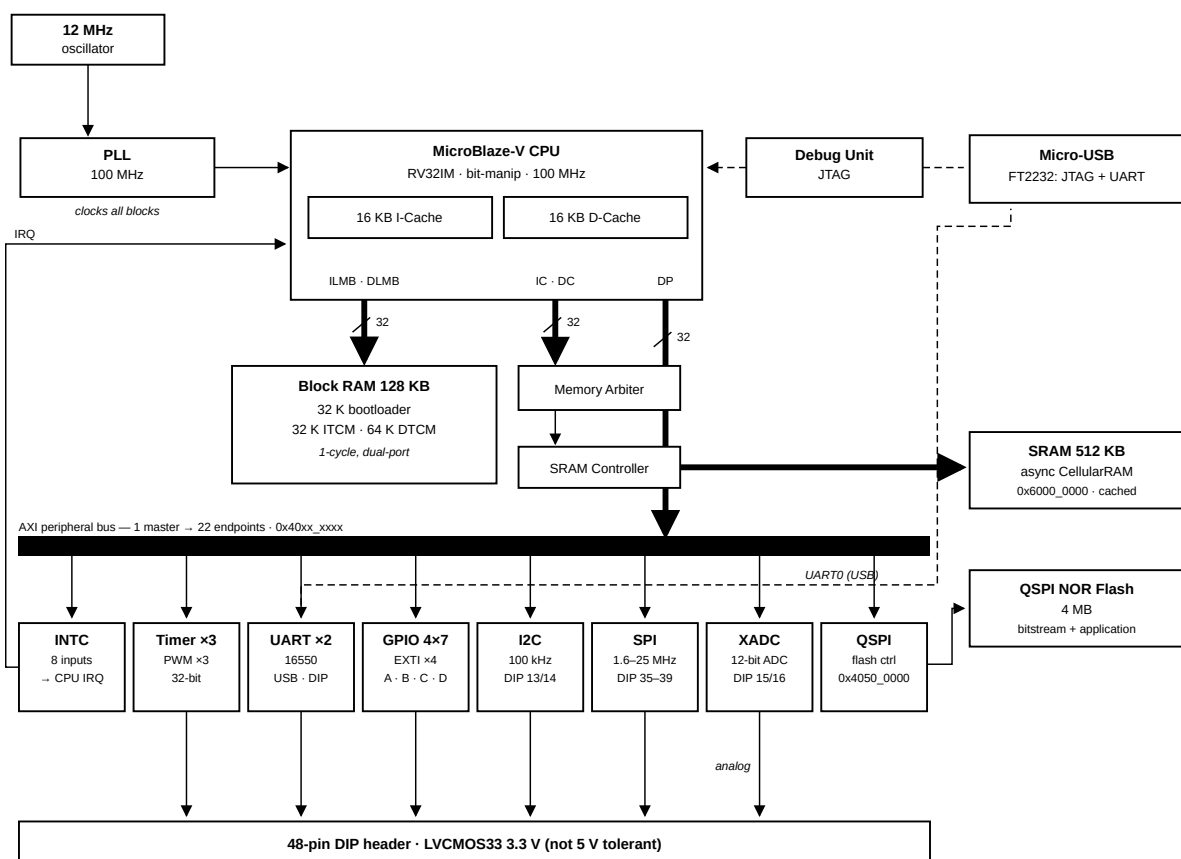


Figure 1: System Architecture

1.4 Reference Documents

- Digilent *Cmod A7 Reference Manual* — board schematics, connectors, and the power tree
- AMD/Xilinx *DS181, Artix-7 FPGAs Data Sheet* — absolute maximum ratings and DC/AC characteristics behind Chapter 5

- AMD/Xilinx LogiCORE IP product guides (PG series) — full register maps for the AXI peripherals (e.g. PG153 for the Quad SPI controller)
- The per-topic markdown under `docs/` in the course repository — the single source this datasheet is built from

2 System Architecture

2.1 MicroBlaze RISC-V Core

Item	Value
Architecture	32-bit RISC-V — RV32IM + bit-manipulation (hardware multiply/divide)
Clock	100 MHz
Buses	LMB to local BRAM (1-cycle) · AXI to peripherals and external memory
Cache	16 KB I-Cache + 16 KB D-Cache, write-through, 32 B lines — covers exactly the 512 KB SRAM (0x6000_0000–0x6007_FFFF)
Debug	JTAG: breakpoints, register inspection, memory read/write

Description: The main processor core. Executes user firmware and reaches every peripheral through the AXI interconnect. Only the SRAM range is cached — BRAM is already single-cycle, and peripheral registers must never be cached.

2.2 Bus Architecture

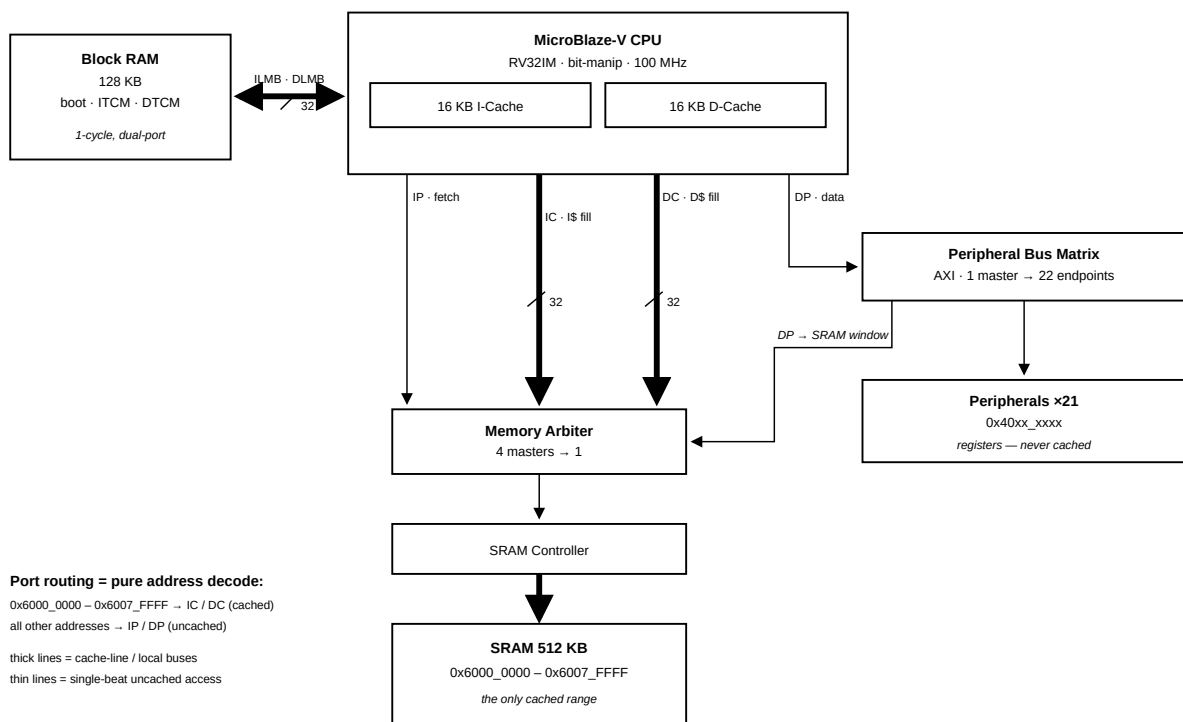


Figure 2: Bus & Cache Topology

Description: AXI crossbar that fans the processor's data port out to all peripheral endpoints. Routing is pure address decoding — the diagram above shows which path each address range takes (a second, smaller interconnect merges the cache and debug masters in front of the SRAM controller).

2.3 Interrupt Controller

Item	Value
Base Address	0x4040_0000
Interrupt Sources	8

Interrupt Mapping:

Channel	Source	Description
In0	timer_0	System timer 0 interrupt
In1	timer_1	System timer 1 interrupt
In2	timer_2	System timer 2 interrupt

Channel	Source	Description
In3	uart_1	External UART interrupt
In4	uart_USB	USB UART interrupt
In5	INT_0_3	External GPIO interrupt (4-bit)
In6	i2c_0	I2C controller interrupt
In7	spi_0	External SPI master interrupt

2.4 Clocking

Description: Multiplies the 12 MHz on-board oscillator up to the 100 MHz system clock with an MMCM/PLL. Its locked signal indicates clock stability and gates the release of system reset.

2.5 Reset

Description: Generates synchronized reset signals for the CPU, bus fabric and peripherals, releasing them only after the clock is stable. External reset source: on-board button BTN0 (A18, active-high).

2.6 Debug Module

Description: MicroBlaze Debug Module providing JTAG debug access for breakpoints, register inspection, and memory read/write. It can also trigger a system reset from the debugger (used by xsdb / Vitis debug sessions).

2.7 Complete Address Map

Peripheral addresses follow a class-based convention — $0x40[C]x_xxxx$, where **c** is the peripheral class (1 MB per class, 64 KB per instance). Reading an address immediately tells you what kind of device it is: class 0 = GPIO, 1 = Timer, 2 = PWM, 3 = UART, 4 = INTC, 5 = QSPI control, 6 = XADC, 7 = I2C, 8 = SPI, 9 = SPI clock control.

Base Address	Range	Peripheral	Type	Category
0x0000_0000	128K / 128K	Local Memory (BRAM)	BRAM	Memory
0x4000_0000	64K	board_led_2bits	axi_gpio	GPIO
0x4001_0000	64K	board_button	axi_gpio	GPIO
0x4002_0000	64K	board_rgb	axi_gpio	GPIO
0x4003_0000	64K	gpio_A_0_6	axi_gpio	GPIO
0x4004_0000	64K	gpio_B_0_6	axi_gpio	GPIO
0x4005_0000	64K	gpio_C_0_6	axi_gpio	GPIO
0x4006_0000	64K	gpio_D_0_6	axi_gpio	GPIO
0x4007_0000	64K	INT_0_3	axi_gpio	Interrupt
0x4010_0000	64K	timer_0	axi_timer	Timer
0x4011_0000	64K	timer_1	axi_timer	Timer
0x4012_0000	64K	timer_2	axi_timer	Timer
0x4020_0000	64K	PWM_0	axi_timer	PWM
0x4021_0000	64K	PWM_1	axi_timer	PWM
0x4022_0000	64K	PWM_2	axi_timer	PWM
0x4030_0000	64K	uart_USB	axi_uart16550	Communication
0x4031_0000	64K	uart_1	axi_uart16550	Communication
0x4040_0000	64K	axi_intc	axi_intc	System
0x4050_0000	64K	axi_quad_spi_0 (QSPI flash controller)	axi_quad_spi	Memory
0x4060_0000	64K	xadc_wiz_0	xadc_wiz	ADC
0x4070_0000	64K	i2c_0 (DIP 13/14)	axi_iic	Communication
0x4080_0000	64K	spi_0 (external master, DIP 35–39)	axi_quad_spi	Communication
0x4090_0000	64K	spi_0_clk (SPI clock control)	clock control	Communication
0x6000_0000	512K	axi_emc_0 (exact physical fit, I/D-cached)	axi_emc	Memory

3 Memory Hierarchy

3.1 Memory Hierarchy Overview

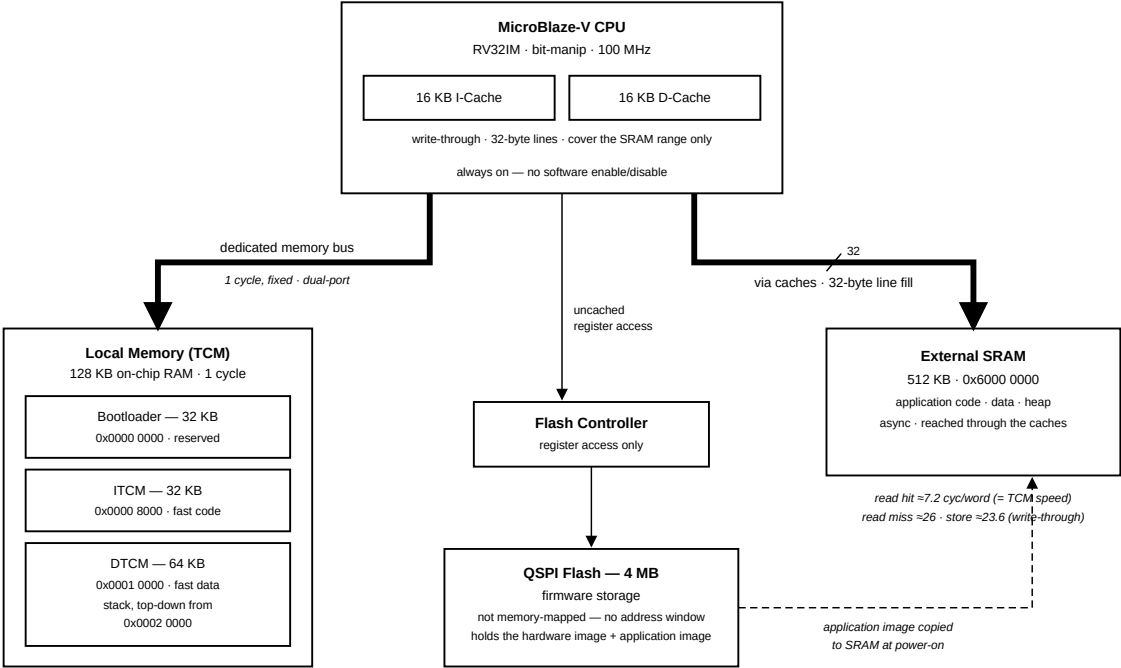


Figure 3: Memory Hierarchy

Level	Memory	Size	Access	Role
1	ITCM + DTCM (tightly-coupled RAM)	32 KB + 64 KB	1 cycle, fixed	interrupt handlers, stack, hot data
2	I-Cache + D-Cache	16 KB + 16 KB	adds ≈0 cycles on hit	transparent acceleration of SRAM
3	External SRAM	512 KB	≈26 cycles/word on miss	application code, data, heap
—	QSPI flash	4 MB	not directly addressable	firmware storage, read at boot

The tightly-coupled memories sit on a dedicated dual-port memory bus with guaranteed single-cycle access; they are never cached because they are already as fast as a cache hit. The external SRAM is the application’s main memory; it is reached through the caches, so hot code and data run at tightly-coupled speed while the total space is 512 KB. The QSPI flash has no CPU address window: firmware is stored in flash and executed from SRAM, and the bootloader performs the copy at every power-on.

3.2 Memory Map

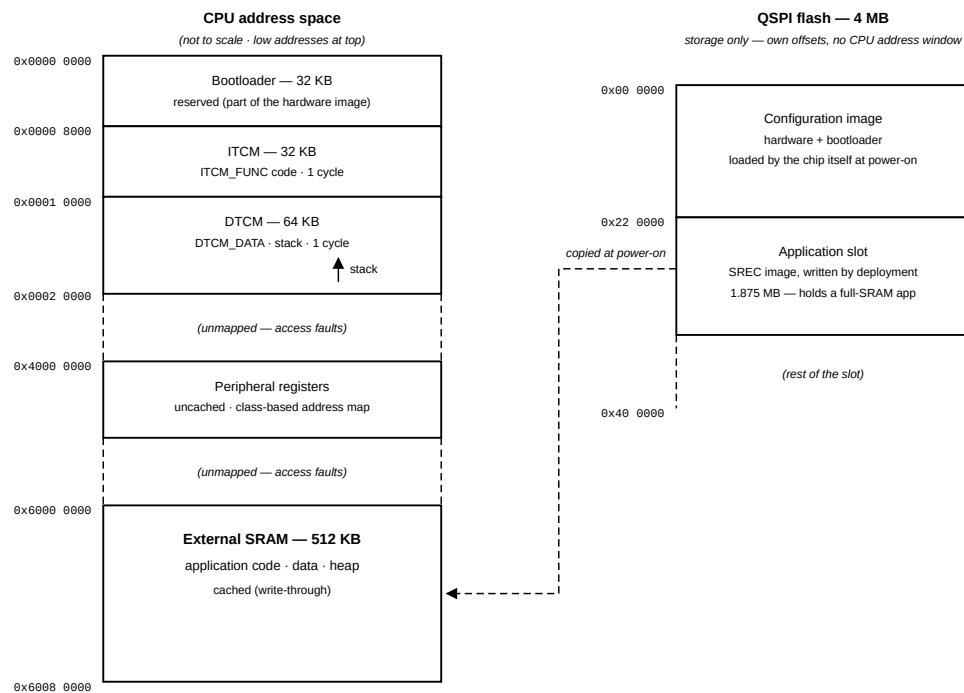


Figure 4: Memory Map

Address range	Size	Region	Access
0x0000_0000 — 0x0000_7FFF	32 KB	Bootloader (reserved)	1 cycle
0x0000_8000 — 0x0000_FFFF	32 KB	ITCM — application fast code	1 cycle
0x0001_0000 — 0x0001_FFFF	64 KB	DTCM — fast data; stack grows down from 0x0002_0000	1 cycle
0x4000_0000 — 0x40FF_FFFF	—	Peripheral registers	uncached
0x6000_0000 — 0x6007_FFFF	512 KB	External SRAM — application code / data / heap	cached

Address decoding is exact: an access outside these ranges raises a bus error instead of aliasing onto real memory, so a stray pointer is detected rather than silently corrupting data. The QSPI flash does not appear in this map; it is accessed only through the flash controller's registers. Peripheral registers and base addresses are listed in Section 2.7 and detailed in Section 5.

3.3 Local Memory (ITCM / DTCM / Bootloader)

Item	Value
Address	0x0000_0000 — 0x0001_FFFF (128 KB)
Access	1 cycle, dual-port — instruction and data sides read simultaneously
Layout	32 KB bootloader + 32 KB ITCM + 64 KB DTCM

Description: Instruction and data local memory implemented with FPGA Block RAM — functionally this MCU's tightly-coupled memory (TCM): the ILMB/DLMB ports play the same role as ITCM/DTCM on other MCU cores (e.g. Cortex-M7), giving 1-cycle access outside the cache path. Layout: 0x0000–0x7FFF (32 KB) holds the bootloader (restored from flash at every configuration); 0x8000–0xFFFF (32 KB) is the application's ITCM for interrupt handlers and timing-critical code (ITCM_FUNC, copied out of the SRAM image by `mcu_init()` at startup); 0x10000–0x1FFFF (64 KB) is the DTCM, holding the stack (top-down from 0x20000) and DTCM_DATA fast data.

3.4 External SRAM (Cellular RAM)

Item	Value
Base Address	0x6000_0000

Item	Value
Size	512 KB — 0x6000_0000 – 0x6007_FFFF, an exact physical fit
Memory	On-board asynchronous SRAM (Cellular RAM)
Cache	Fully covered by the I-Cache and D-Cache

Description: External memory controller for the on-board 512 KB SRAM — the main application memory: standalone boot copies the program here and executes it. Raw access latency is higher than Block RAM, but with both caches covering this range, hot code and data run near BRAM speed.

3.5 QSPI Flash

Item	Value
Base Address	0x4050_0000
Flash Device	On-board 4 MB QSPI NOR flash (Macronix; Micron on older boards)
Mode	CPU-programmable register mode — flash contents are not memory-mapped
FIFO	256 B TX/RX — one full flash page (256 B) per transfer

Description: Controls the on-board Quad-SPI NOR Flash. The full register set (control, status, TX/RX FIFO, slave select) is exposed at 0x4050_0000, so the CPU can issue any SPI command — read (0x0B), Write Enable (0x06), Sector/Block Erase (0x20/0xD8), Page Program (0x02), status poll (0x05). This keeps the flash fully CPU-programmable at runtime (the Vitis xSpi driver wraps the register protocol).

Flash contents are **not memory-mapped**: there is no XIP window, and code cannot execute from flash directly. The standalone-boot design instead copies the application from flash into SRAM at power-on (see Section 8).

Design note: a read-only memory-mapped XIP window and CPU-programmable register mode are mutually exclusive in this controller. This project chooses register mode: keeping the flash CPU-programmable at runtime was judged more valuable for the course than execute-in-place, and the 512 KB SRAM + I-cache serves execution instead.

3.6 Caches

Item	Value
Instruction cache	16 KB, 32-byte lines
Data cache	16 KB, 32-byte lines
Write policy	write-through — every store is forwarded to SRAM
Cached range	exactly the SRAM: 0x6000_0000 – 0x6007_FFFF
Software control	none — always on for the cached range

Only the SRAM range is cached. The tightly-coupled memories are already single-cycle, and peripheral registers must observe every access, so neither is ever cached. There is no cache enable/disable or flush to manage in normal application code.

The write-through policy has two practical consequences:

- Reads benefit fully from the cache: a hit costs the same as a tightly-coupled RAM access.
- Writes always pay the SRAM latency, even on a cache hit. Frequently written data (counters, buffers filled in interrupt handlers) therefore belongs in the DTCM.

3.7 Measured Access Latencies

Measured on the board at 100 MHz with an optimization-enabled word-copy loop. Values are cycles per 32-bit word and include the loop's own ≈ 7 -cycle overhead; the difference between rows is the memory's contribution.

Access	Cycles/word	Notes
Tightly-coupled RAM read	≈ 7.2	equals the bare loop; the memory adds no cycles
SRAM read, cache hit	≈ 7.2	a hit is as fast as tightly-coupled RAM
SRAM read, cache miss	≈ 26	≈ 151 cycles to fill one 32-byte line
SRAM write (write-through)	≈ 23.6	every store pays the SRAM latency

Note: Measure with compiler optimization enabled. An unoptimized build inflates the loop overhead to the point where cached and uncached accesses look almost identical; the memory effects are hidden by the extra instructions.

3.8 Memory Placement Guidance

What	Put it in	How (course template)
Interrupt handlers, timing-critical loops	ITCM	tag the function <code>ITCM_FUNC</code>
Frequently-written data, DMA-like buffers	DTCM	tag the variable <code>DTCM_DATA</code>
Stack	DTCM	placed there by the template's linker script
Everything else — code, constants, data, heap	SRAM	default
Firmware image	QSPI flash	written by the deployment step


As a general rule, place code and data in SRAM by default and move them to the TCMs when timing must be predictable rather than merely fast. A function in SRAM usually runs at cache speed, but its worst case (a cold cache line) costs three to four times more; for an interrupt handler this spread appears directly as latency jitter. In the tightly-coupled memories the worst case equals the best case.

At power-on the bootloader copies the application image from flash into SRAM (see Section 8); the template's `mcu_init()` then copies `ITCM_FUNC` code out of the SRAM image into the ITCM and zeroes the DTCM. For this reason the template requires `mcu_init()`; to remain the first line of `main()`: nothing placed in the tightly-coupled memories works before it runs. The memory tour printed at boot lists each region's live addresses and serves as a check that the layout is in effect.

4 Pinout

4.1 DIP Connector Overview

The Cmod A7-35T has a 48-pin DIP connector (J1). All digital I/O pins operate at **LVC MOS33** (3.3 V logic level) with **no series resistors**.

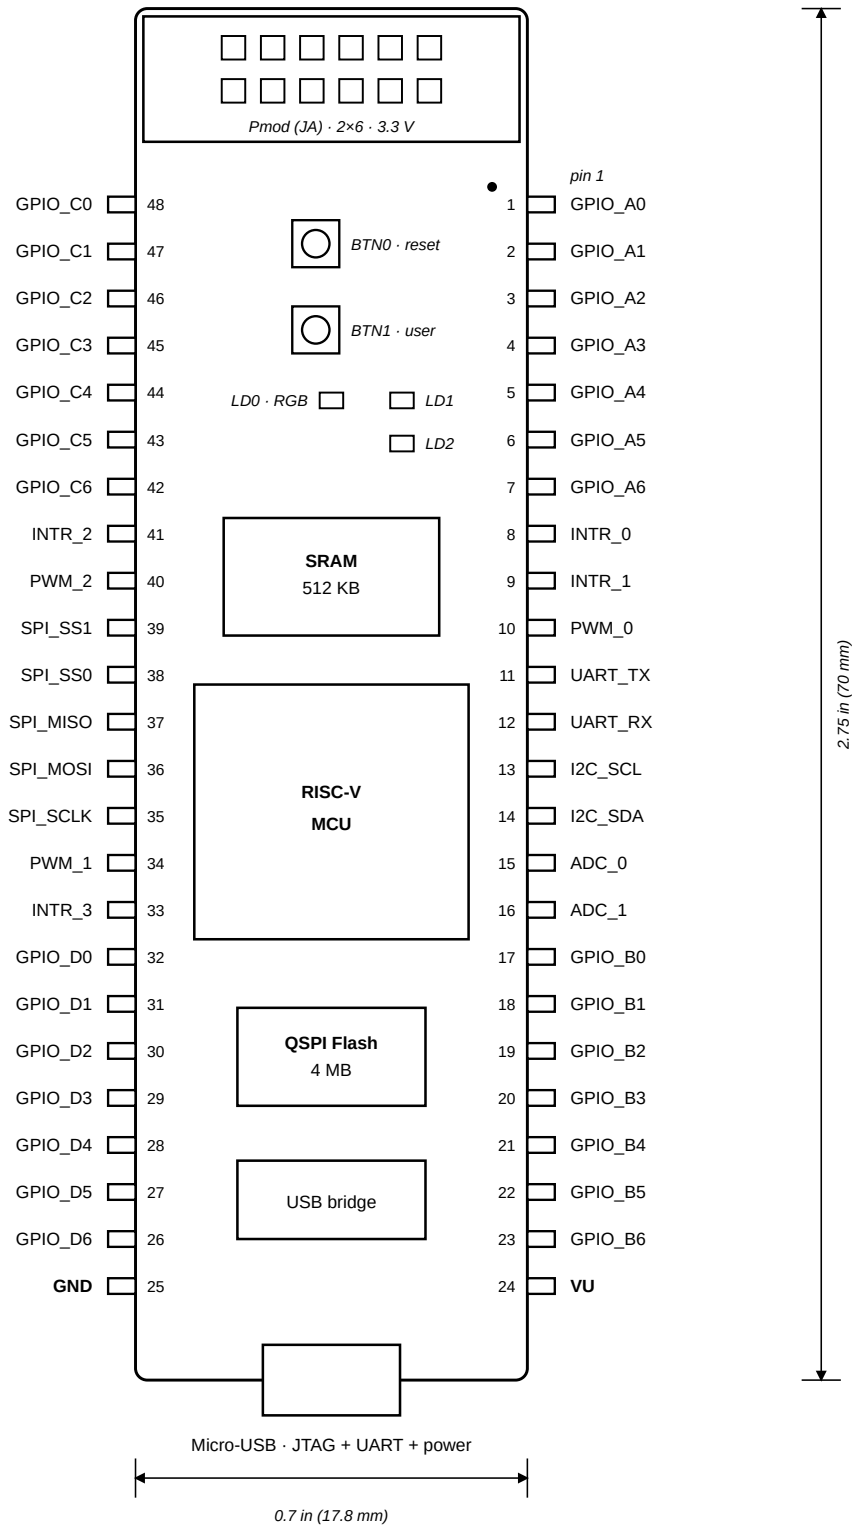

top view · Pmod end up · LVC MOS33 (pins 15/16 analog via divider)

Figure 5: Cmod A7-35T DIP pinout (top view)

Category	Count
GPIO (4 groups × 7-bit)	28
External Interrupts	4
PWM Outputs	3
UART 1 (TX + RX)	2
I2C (SCL + SDA)	2
SPI (SCLK/MOSI/MISO/SS×2)	5
Analog Inputs (XADC)	2
Power (VU + GND)	2
Total	48

Peripheral registers and base addresses are listed in Section 2.7 and detailed in Section 5.

4.2 Pin Map — Left Side (Pin 1–24)

DIP Pin	Signal Name	FPGA Pin	Direction	Function
1	GPIO_A0	M3	I/O	General purpose GPIO, Group A bit 0
2	GPIO_A1	L3	I/O	General purpose GPIO, Group A bit 1
3	GPIO_A2	A16	I/O	General purpose GPIO, Group A bit 2
4	GPIO_A3	K3	I/O	General purpose GPIO, Group A bit 3
5	GPIO_A4	C15	I/O	General purpose GPIO, Group A bit 4
6	GPIO_A5	H1	I/O	General purpose GPIO, Group A bit 5
7	GPIO_A6	A15	I/O	General purpose GPIO, Group A bit 6
8	INTR_0	B15	Input	External interrupt input 0
9	INTR_1	A14	Input	External interrupt input 1
10	PWM_0	J3	Output	PWM output channel 0
11	UART_TX	J1	Output	UART 1 transmit
12	UART_RX	K2	Input	UART 1 receive
13	I2C_SCL	L1	I/O (open-drain)	I2C clock (external 4.7 kΩ pull-up recommended)
14	I2C_SDA	L2	I/O (open-drain)	I2C data (external 4.7 kΩ pull-up recommended)
15	ADC_0	G3 / G2	Analog	XADC VAUX4 (ain_p[15] / ain_n[15])
16	ADC_1	H2 / J2	Analog	XADC VAUX12 (ain_p[16] / ain_n[16])
17	GPIO_B0	M1	I/O	General purpose GPIO, Group B bit 0
18	GPIO_B1	N3	I/O	General purpose GPIO, Group B bit 1
19	GPIO_B2	P3	I/O	General purpose GPIO, Group B bit 2
20	GPIO_B3	M2	I/O	General purpose GPIO, Group B bit 3
21	GPIO_B4	N1	I/O	General purpose GPIO, Group B bit 4
22	GPIO_B5	N2	I/O	General purpose GPIO, Group B bit 5
23	GPIO_B6	P1	I/O	General purpose GPIO, Group B bit 6
24	VU	—	Power	Power input (ext) / Power output (USB)

4.3 Pin Map — Right Side (Pin 25–48)

DIP Pin	Signal Name	FPGA Pin	Direction	Function
25	GND	—	Power	Ground reference
26	GPIO_D6	R3	I/O	General purpose GPIO, Group D bit 6
27	GPIO_D5	T3	I/O	General purpose GPIO, Group D bit 5
28	GPIO_D4	R2	I/O	General purpose GPIO, Group D bit 4
29	GPIO_D3	T1	I/O	General purpose GPIO, Group D bit 3
30	GPIO_D2	T2	I/O	General purpose GPIO, Group D bit 2
31	GPIO_D1	U1	I/O	General purpose GPIO, Group D bit 1
32	GPIO_D0	W2	I/O	General purpose GPIO, Group D bit 0

DIP Pin	Signal Name	FPGA Pin	Direction	Function
33	INTR_3	V2	Input	External interrupt input 3
34	PWM_1	W3	Output	PWM output channel 1
35	SPI_SCLK	V3	Output	SPI clock (software-settable, up to 25 MHz)
36	SPI_MOSI	W5	Output	SPI master-out slave-in
37	SPI_MISO	V4	Input	SPI master-in slave-out
38	SPI_SS0	U4	Output	SPI slave select 0 (active low)
39	SPI_SS1	V5	Output	SPI slave select 1 (active low)
40	PWM_2	W4	Output	PWM output channel 2
41	INTR_2	U5	Input	External interrupt input 2
42	GPIO_C6	U2	I/O	General purpose GPIO, Group C bit 6
43	GPIO_C5	W6	I/O	General purpose GPIO, Group C bit 5
44	GPIO_C4	U3	I/O	General purpose GPIO, Group C bit 4
45	GPIO_C3	U7	I/O	General purpose GPIO, Group C bit 3
46	GPIO_C2	W7	I/O	General purpose GPIO, Group C bit 2
47	GPIO_C1	U8	I/O	General purpose GPIO, Group C bit 1
48	GPIO_C0	V8	I/O	General purpose GPIO, Group C bit 0

4.4 On-Board I/O (No DIP Pin Exposure)

Function	FPGA Pins
LEDs (2)	A17, C16
User button (BTN1)	B18
Reset button (BTN0)	A18
RGB LED	B17, B16, C17

5 Peripherals

All peripheral registers are memory-mapped and reached through the AXI data port; base addresses follow the class-based scheme summarised in Section 2.7. Pin locations for every signal are listed in the pin maps of Section 4. The QSPI flash controller is described with the memory system in Section 3.5.

5.1 GPIO

All GPIO groups are memory-mapped ports with per-bit direction control: the TRI register sets each pin's direction, the DATA register reads/writes the pin. Vitis driver: `XGpio`.

5.1.1 On-Board GPIO

Instance	Base Address	Width	Direction	Connection	Description
board_led_2bits	0x4000_0000	2	Output	A17, C16	On-board LEDs × 2
board_button	0x4001_0000	1	Input	B18	On-board user button (BTN1)
board_rgb	0x4002_0000	3	Output	B17, B16, C17	On-board RGB LED (R/G/B)

5.1.2 DIP Connector GPIO (4 Groups × 7-bit)

Instance	Base Address	Width	DIP Pins	Description
gpio_A_0_6	0x4003_0000	7	Pin 1–7	GPIO Group A, bidirectional I/O
gpio_B_0_6	0x4004_0000	7	Pin 17–23	GPIO Group B, bidirectional I/O
gpio_C_0_6	0x4005_0000	7	Pin 42–48	GPIO Group C, bidirectional I/O
gpio_D_0_6	0x4006_0000	7	Pin 26–32	GPIO Group D, bidirectional I/O

Description: Each group is a 7-bit bidirectional port; every bit can be an input or an output independently.

5.1.3 External Interrupt Inputs (INT_0_3)

Item	Value
Base Address	0x4007_0000
Width	4-bit, input-only
DIP Pins	Pin 8 (INTR_0), Pin 9 (INTR_1), Pin 41 (INTR_2), Pin 33 (INTR_3)
Interrupt	INTC In5

Description: Four external interrupt inputs grouped into a single GPIO instance with interrupt generation enabled — a change on any of the four pins can raise INTC In5.

5.2 Timers and PWM

Six 32-bit AXI timer instances (Vitis driver: `XTmrCtr`) — three as general-purpose timers with interrupts, three with their outputs routed to pins as PWM channels.

5.2.1 System Timers

Instance	Base Address	Interrupt	Description
timer_0	0x4010_0000	INTC In0	General-purpose system timer
timer_1	0x4011_0000	INTC In1	General-purpose timer
timer_2	0x4012_0000	INTC In2	General-purpose timer

5.2.2 PWM Outputs

Instance	Base Address	Output Pin	DIP Pin	Description
PWM_0	0x4020_0000	J3	Pin 10	PWM Channel 0
PWM_1	0x4021_0000	W3	Pin 34	PWM Channel 1
PWM_2	0x4022_0000	W4	Pin 40	PWM Channel 2

Description: Timer instances configured in PWM mode to generate square-wave outputs. Useful for LED dimming, motor speed control, buzzer tone generation, etc. Frequency and duty cycle are configured through the Timer Load Registers and the PWM enable bit.

5.3 UART

5.3.1 USB UART (uart_USB)

Item	Value
Base Address	0x4030_0000
TX / RX Pins	J18 / J17 — routed to the on-board Micro-USB connector
Interrupt	INTC In4

Description: 16550-compatible UART for host PC communication through the on-board Micro-USB connector. Baud rate is software-configured via the divisor latch: at 100 MHz system clock, divisor 54 (0x36) gives 115200 baud. Typically mapped as STDIN/STDOUT.

5.3.2 External UART (uart_1)

Item	Value
Base Address	0x4031_0000
TX / RX Pins	J1 (DIP 11) / K2 (DIP 12)
Interrupt	INTC In3

Description: Second 16550 UART exposed on the DIP connector for communication with external devices (e.g., sensor modules, Bluetooth modules).

5.4 I2C Controller

Item	Value
Base Address	0x4070_0000
SCL Frequency	100 kHz (standard mode)
Input Glitch Filter	50 ns on SCL and SDA — per the I2C tSP spike-suppression spec
SCL / SDA Pins	DIP Pin 13 (L1) / Pin 14 (L2)
Pull-ups	Weak FPGA internal pull-ups enabled; external 4.7 kΩ to 3.3 V recommended for real devices
Interrupt	INTC In6

Description: AXI IIC master for external I2C devices (sensors, EEPROMs, OLED displays). Open-drain signaling: any device may only pull the line low; the pull-up resistor returns it high. Devices are addressed by their 7-bit I2C address. Interrupt routing is listed in Section 2.3. Use the Vitis `xiic` driver.

5.5 SPI Master

Item	Value
Base Address	0x4080_0000
SCLK	Software-programmable, ≈1.6 – 25 MHz (6.25 MHz at reset)
Clock Control	0x4090_0000 — runtime clock setting; see <code>showcase/src/spi0.c</code> for the <code>spi0_set_clock()</code> helper
Slave Selects	2 — two devices can share the bus
Pins	DIP 35 SCLK (V3) · 36 MOSI (W5) · 37 MISO (V4) · 38 SS0 (U4) · 39 SS1 (V5)
Interrupt	INTC In7

Description: SPI master for external devices (displays, ADCs, flash modules). Full-duplex push-pull signaling — no pull-ups needed; the active device is chosen by driving its SS line low. Use the Vitis `xspi` driver. The serial clock is set at runtime through the clock-control block: slow it down for breadboard wiring or long cables, speed it up for short-wired display modules (`spi0_set_clock(hz)` — one call, takes effect immediately).

Note: This is a *second, independent* SPI controller — do not confuse it with `axi_quad_spi_0` (0x4050_0000), which is dedicated to the on-board QSPI boot flash. Firmware should select controllers by instance macro (`XPAR_SPI_0_BASEADDR` vs `XPAR_AXI_QUAD_SPI_0_BASEADDR`), never by generic `XPAR_XSPI_n_*` numbering.

5.6 Analog-to-Digital Converter (XADC)

Item	Value
Base Address	0x4060_0000

Item	Value
Resolution	12-bit
Conversion Rate	500 KSPS aggregate
Sequencer	Continuous scan over the 5 enabled channels

Enabled Channels:

Channel	Source	Description
VAUX4	DIP Pin 15 (G3/G2)	External analog input 0 (on-board divider: 0–3.3 V → 0–1 V)
VAUX12	DIP Pin 16 (H2/J2)	External analog input 1 (on-board divider: 0–3.3 V → 0–1 V)
Temperature	Internal	FPGA die temperature monitor
VCCINT	Internal	Core voltage monitor (1.0 V)
VCCAUX	Internal	Auxiliary voltage monitor (1.8 V)

Description: The Artix-7 built-in 12-bit ADC capable of measuring external analog signals and monitoring internal FPGA temperature and supply voltages. External input pins pass through an on-board resistive voltage divider (2.32 K Ω / 1 K Ω , ratio $\approx$ 0.301), accepting up to 3.3 V at the DIP pin.

Effective Per-Channel Sampling Rate: The sequencer continuously cycles through all 5 enabled channels (VAUX4, VAUX12, Temperature, VCCINT, VCCAUX). The aggregate conversion rate is 500 KSPS, giving each channel an effective rate of $500 \text{ K} \div 5 = 100 \text{ KSPS}$.

5.6.1 Analog Input Circuit

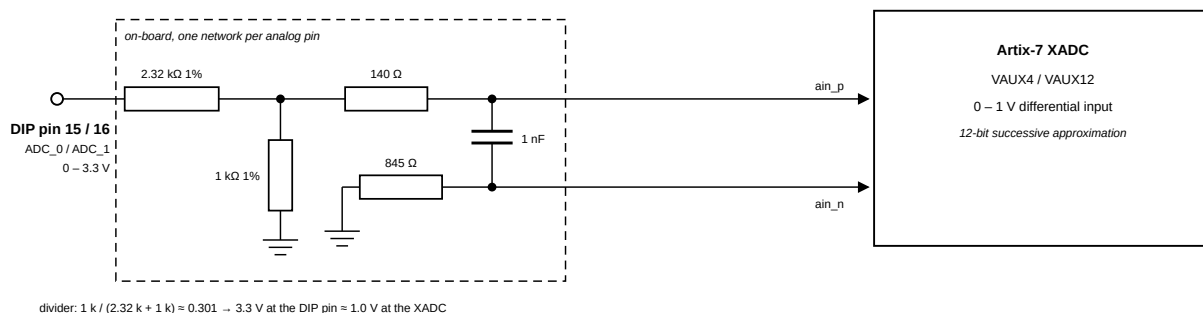


Figure 6: On-board voltage divider circuit for XADC analog inputs

The XADC expects an input range of 0–1 V. The board includes a resistive voltage divider (2.32 K Ω / 1 K Ω , all 1% precision) that scales the DIP pin voltage down to the FPGA's acceptable range. A 140 Ω series resistor and 1 nF capacitor are placed on the differential pair for filtering. The ADx_N path has an 845 Ω series resistor.

Parameter	Value
Max input voltage on DIP pin 15/16	3.3 V (relative to GND on pin 25)
Voltage at FPGA after divider	0–1 V
Divider ratio	$1 \text{ K}\Omega / (2.32 \text{ K}\Omega + 1 \text{ K}\Omega) \approx 0.301$
Resistor tolerance	1%

Note: Pins 15 and 16 are routed through on-board voltage dividers. If used as analog inputs, they must **not** be assigned as digital I/O in the constraints file. Do not exceed 3.3 V on these pins.

6 Electrical Characteristics and Power

6.1 Electrical Characteristics

Parameter	Value
I/O Standard	LVC MOS33 (3.3 V)
Series Resistance on DIP Pins	None
Max Input Voltage (digital I/O)	abs. max -0.4 V to $V_{CCO} + 0.55\text{ V} = \mathbf{3.85\text{ V}}$ (DS181); not 5 V tolerant
Analog Input Range (Pin 15, 16)	0–3.3 V (on-board divider scales to the XADC's 0–1 V; see Section 5.6.1)
Clock Source	12 MHz oscillator (FPGA pin L17), PLL $\rightarrow$ 100 MHz

- When a USB host is attached, the VU pin is driven to USB voltage (4.5–5.5 V). Any external power source on VU **must be disconnected first** before plugging in USB, or the external supply may be damaged.
- This is **especially dangerous with battery power sources**, as batteries cannot tolerate reverse current.
- The FPGA I/O pins on the DIP connector have **no series resistors**. The Artix-7 absolute maximum input rating is $V_{CCO} + 0.55\text{ V} = \mathbf{3.85\text{ V}}$ (and -0.4 V minimum, per DS181) — the pins are **not 5 V tolerant**; use a level shifter or divider for 5 V devices.

6.2 Power Architecture

The Cmod A7-35T uses a **Linear Technologies LTC3569** triple-output buck regulator (IC10) to generate all onboard supply voltages from a single input rail called **VU**.

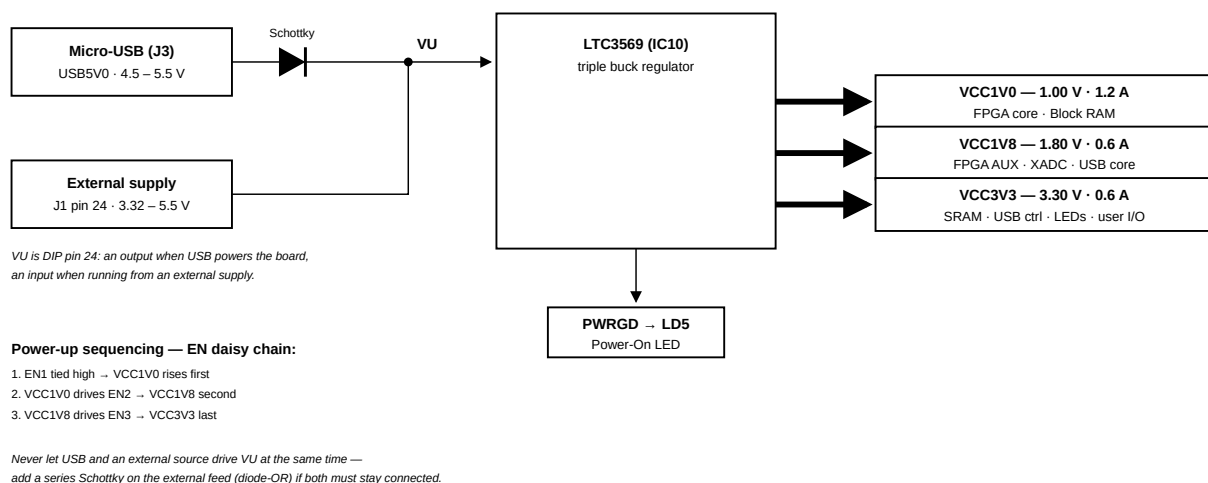


Figure 7: Cmod A7 power supply tree

6.3 Power Input Options

The board can be powered from either of the following sources:

Source	Connector	Schematic Net	Min Voltage	Recommended	Max Voltage
USB	J3 (Micro-USB)	USB5V0	4.5 V	5.0 V	5.5 V
External Supply	J1 Pin 24 (DIP)	VU	3.32 V*	5.0 V	5.5 V

Note: * The minimum external voltage on VU depends on the current drawn from the VCC3V3 rail via the Pmod header:

- 0 mA drawn $\rightarrow$ minimum 3.32 V
- 100 mA drawn $\rightarrow$ minimum 3.38 V
- 250 mA drawn $\rightarrow$ minimum 3.48 V

GND reference is on **J1 Pin 25**.

6.4 Output Power Rails

All three rails are generated by the LTC3569 from the VU input.

Rail	Typical Voltage	Min / Max Voltage	Max Current	Powered Devices
VCC1V0	1.00 V	0.95 V / 1.05 V	1.2 A	FPGA Core, Block RAM
VCC1V8	1.80 V	1.71 V / 1.89 V	0.6 A	FPGA AUX, ADC, USB Core
VCC3V3	3.30 V	3.135 V / 3.465 V	0.6 A	SRAM, USB Controller, Pmod, LEDs, Buttons, FPGA User I/O

6.4.1 Power-Up Sequence

The LTC3569 enable pins are daisy-chained to enforce a sequential startup:

1. **VCC1V0** starts first (EN1 tied high)
2. **VCC1V8** starts after VCC1V0 is stable (EN2 driven by VCC1V0)
3. **VCC3V3** starts after VCC1V8 is stable (EN3 driven by VCC1V8)

The **PWRGD** (Power Good) output drives the Power On LED (LD5).

6.5 VU Pin Behavior

Condition	VU Pin Function
USB connected	VU is an output — driven by USB 5V through a Schottky diode (expect ~5 V with small drop)
USB not connected	VU is an input — accepts external power supply (3.32–5.5 V)

6.6 Dual Power Source (USB + External)

The on-board Schottky diode is located on the **USB side** (between USB VBUS and VU), not on the VU input pin. This means:

Scenario	Safe?	Notes
USB only	✓	Normal operation
External only (VU pin)	✓	Normal operation
Both connected, only one active	✓	The inactive source supplies no current, no conflict
Both connected and both supplying power	✗	Two voltage sources fight on the same VU node
Both connected and both active, with external Schottky added	✓	Higher-voltage source wins; lower is blocked

Key distinction: Physically connecting both cables is not the problem — the danger is having **both sources actively supplying voltage at the same time** without isolation.

If you need to have both connected simultaneously with both powered (e.g., USB for JTAG/UART while also on external supply), **add a Schottky diode in series with the external supply on the VU pin**. This creates a “diode-OR” circuit where whichever source has the higher voltage automatically takes over, and the other is safely blocked.

6.7 Quick Reference for External Power Design

Parameter	Value
Input Connector	J1 Pin 24 (VU) + Pin 25 (GND)
Recommended Input Voltage	5.0 V
Acceptable Input Range	3.32 – 5.5 V
Total Max Current (all rails)	~2.4 A (1.2 + 0.6 + 0.6)
Power Good Indicator	LD5 (LED)
Regulator IC	LTC3569
Protection Required for Dual Supply	Schottky diode in series with VU

7 JTAG Debug Mode

This chapter describes how to load and debug a MicroBlaze RISC-V application over JTAG using the AMD Vitis Unified IDE. JTAG loads the program directly into RAM and provides full debug control. Nothing is written to flash.

7.1 Prerequisites

- The hardware design as an `.xsa` file — use the prebuilt `release/top_wrapper.xsa`
- **Vitis Unified IDE 2025.2** installed
- Cmod A7-35T board connected via its micro-USB cable (it carries power, UART, and JTAG all at once)
- A serial terminal program (GTKTerm, PuTTY, or pyserial's miniterm) for the board's console output

7.2 Open the Workspace

Launch the Vitis Unified IDE and click **Set Workspace** on the Welcome page.

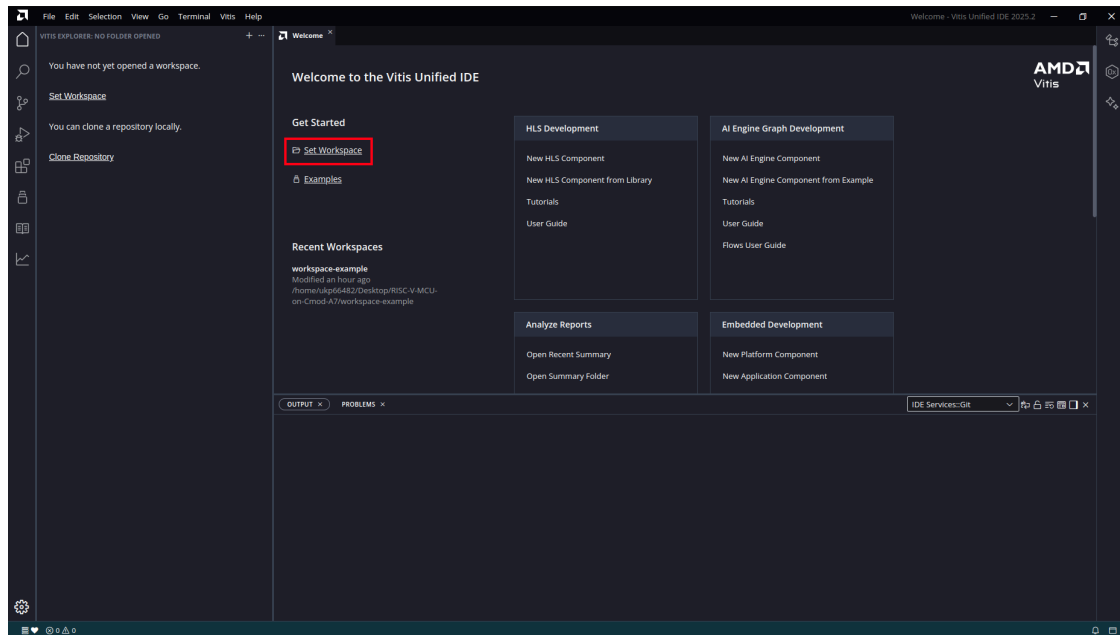


Figure 8: Set Workspace

Select the repo's `workspace-example/` folder — the template paths and this guide assume it (any empty folder also works if you adjust the paths yourself).

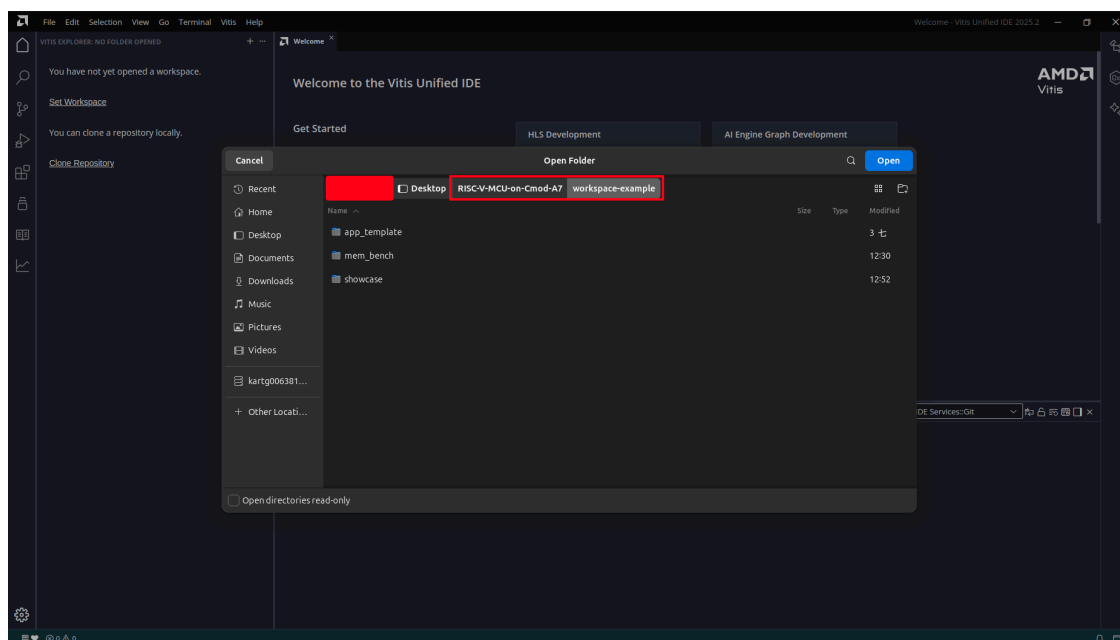


Figure 9: Open Folder

The first time a Vitis installation opens this workspace it may show an **Update Workspace** dialog. Click **Update** — it refreshes only the workspace metadata and does not modify any component.

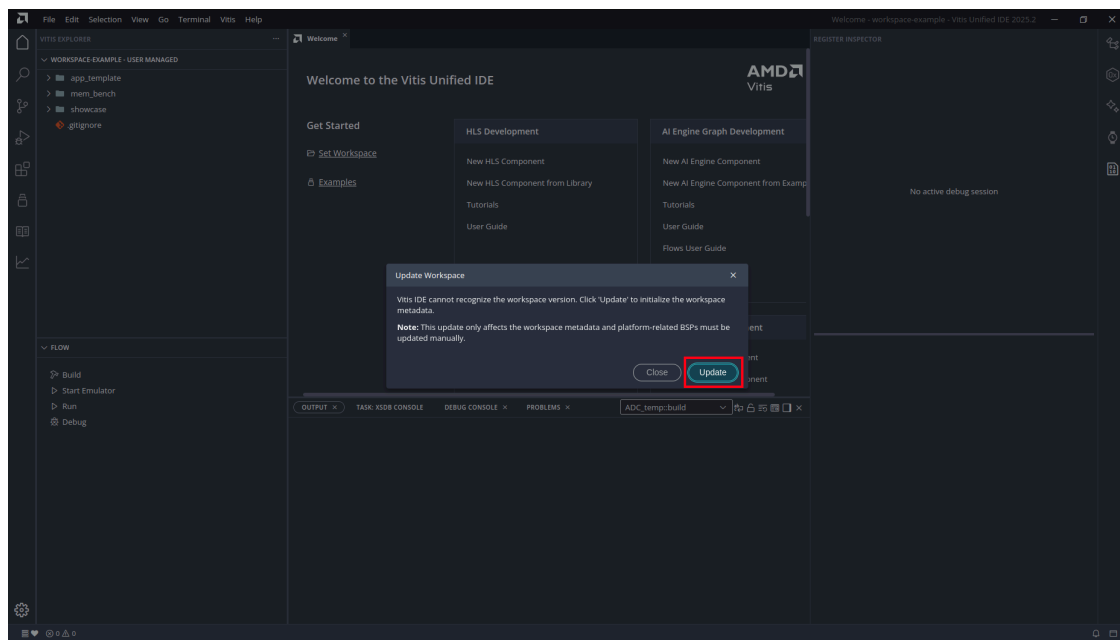


Figure 10: Update Workspace

7.3 Create a Platform

The platform wraps the hardware design and provides the driver layer (BSP). It is created once per workspace and reused by every application. **If the workspace already contains a platform component, skip to Section 7.4.**

7.3.1 New Platform Component

From the menu bar, select **File > New Component > Platform**.

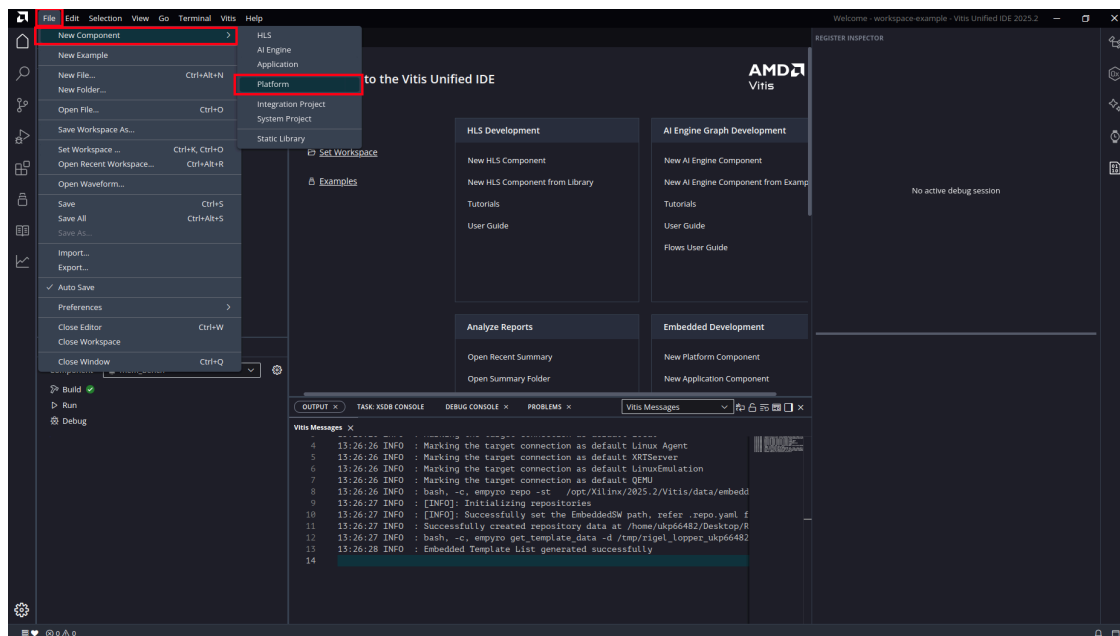


Figure 11: File > New Component > Platform

7.3.2 Platform Name and Location

Enter `platform` as the component name and keep the workspace directory as the location. Click **Next**.

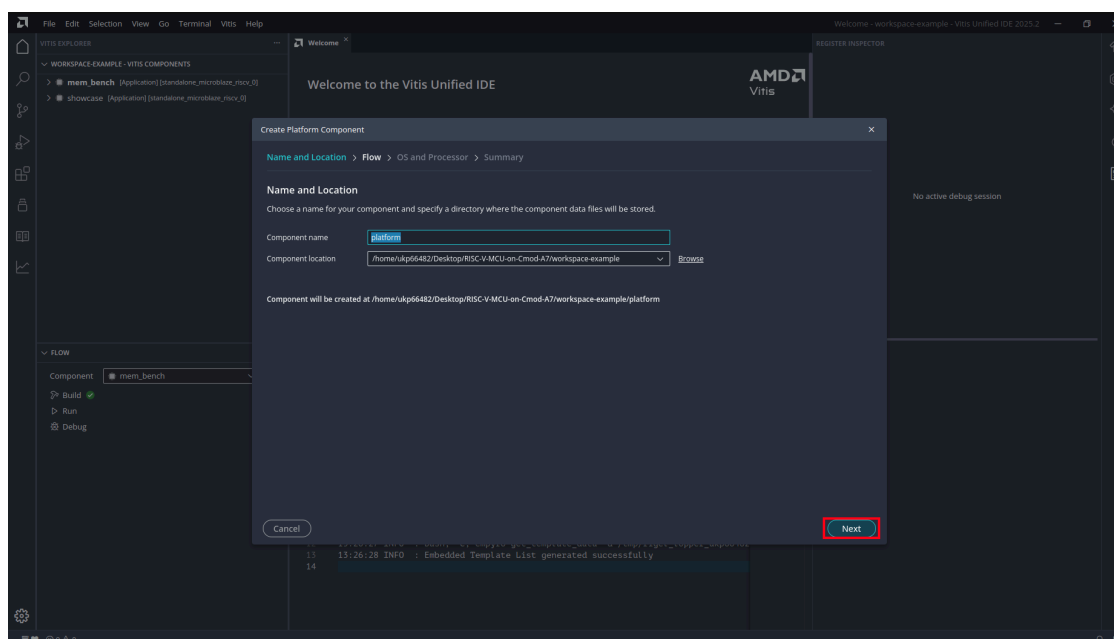


Figure 12: Platform Name and Location

7.3.3 Select the Hardware Design (XSA)

On the **Flow** page, select **Hardware Design** and click **Browse** next to the *Hardware Design (XSA) For Implementation* field.

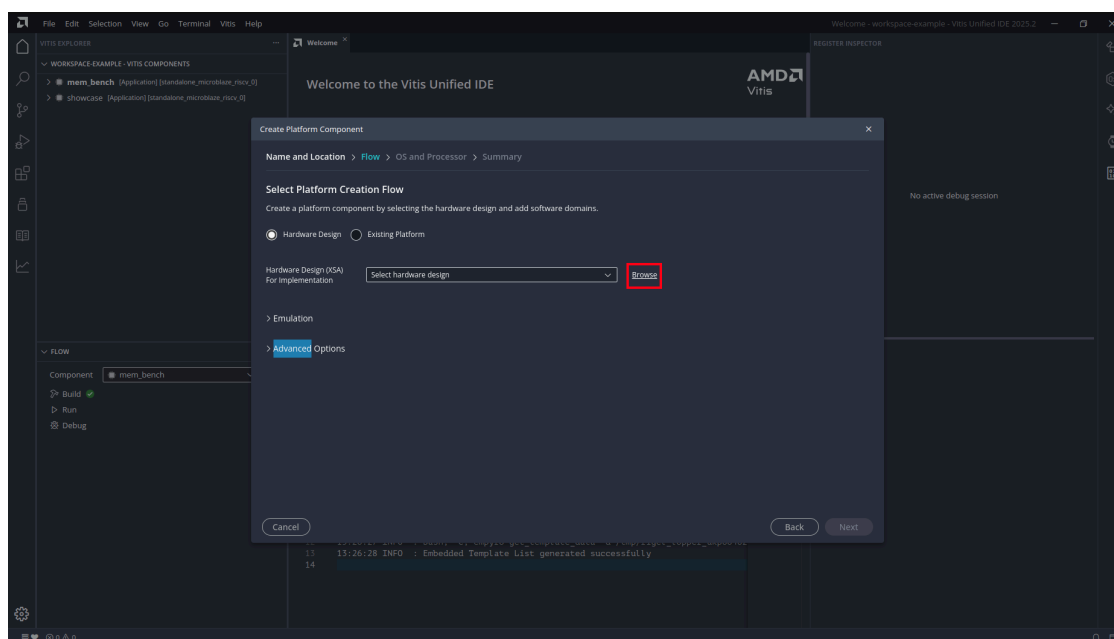


Figure 13: Select Platform Creation Flow

Pick the prebuilt `release/top_wrapper.xsa` from the repository.

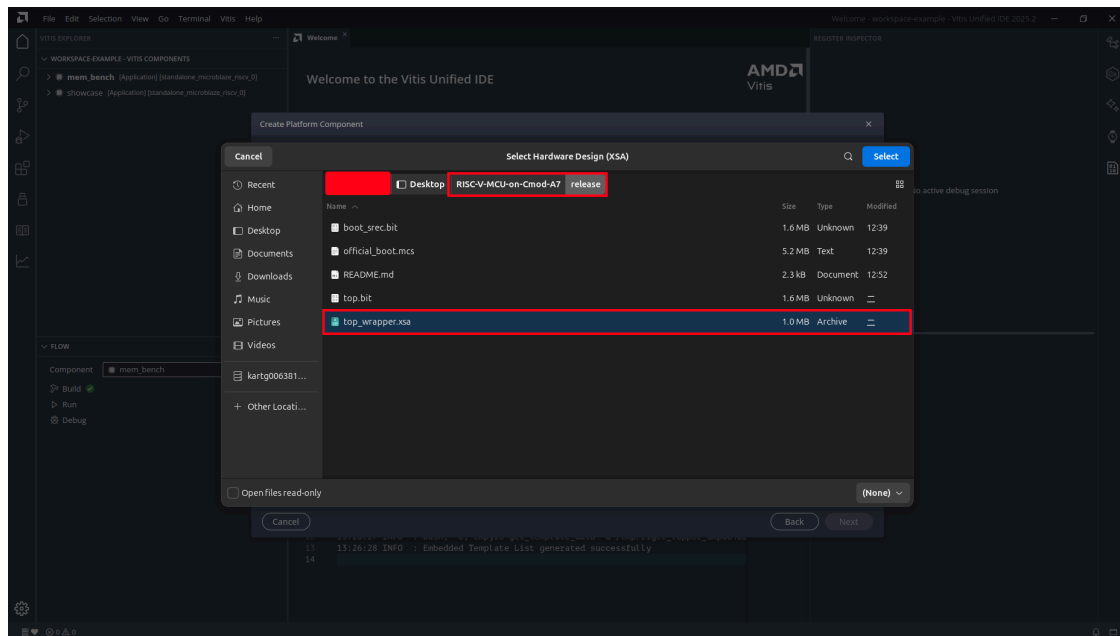


Figure 14: Select top_wrapper.xsa

7.3.4 Select Operating System and Processor

- **Operating system:** standalone
- **Processor:** microblaze_riscv_0

Click **Next**.

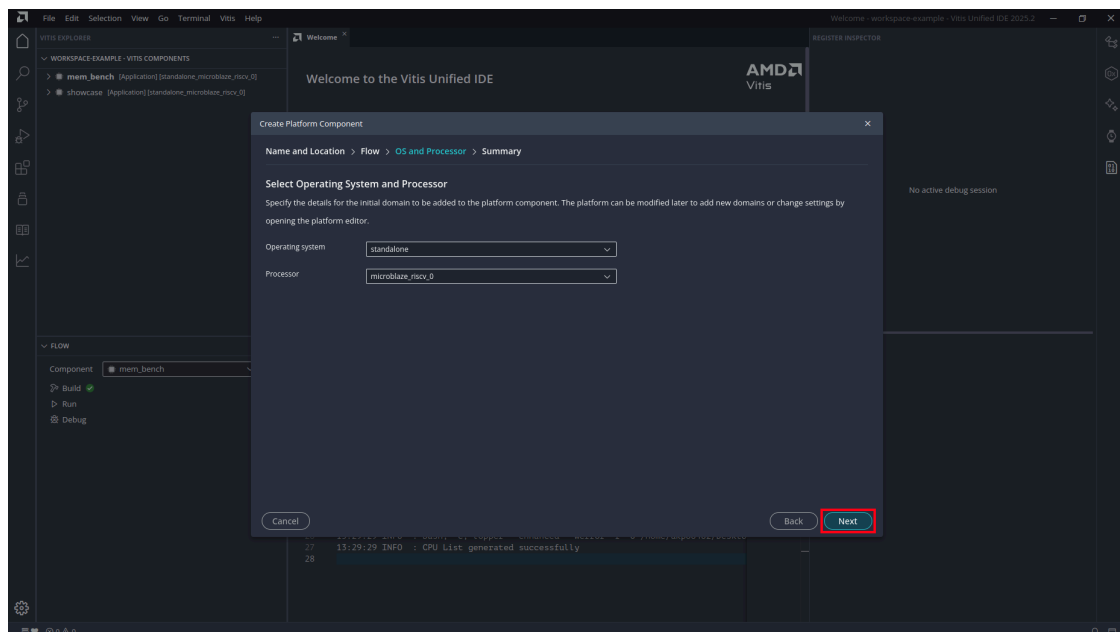


Figure 15: OS and Processor

7.3.5 Platform Summary

Review the settings and click **Finish**.

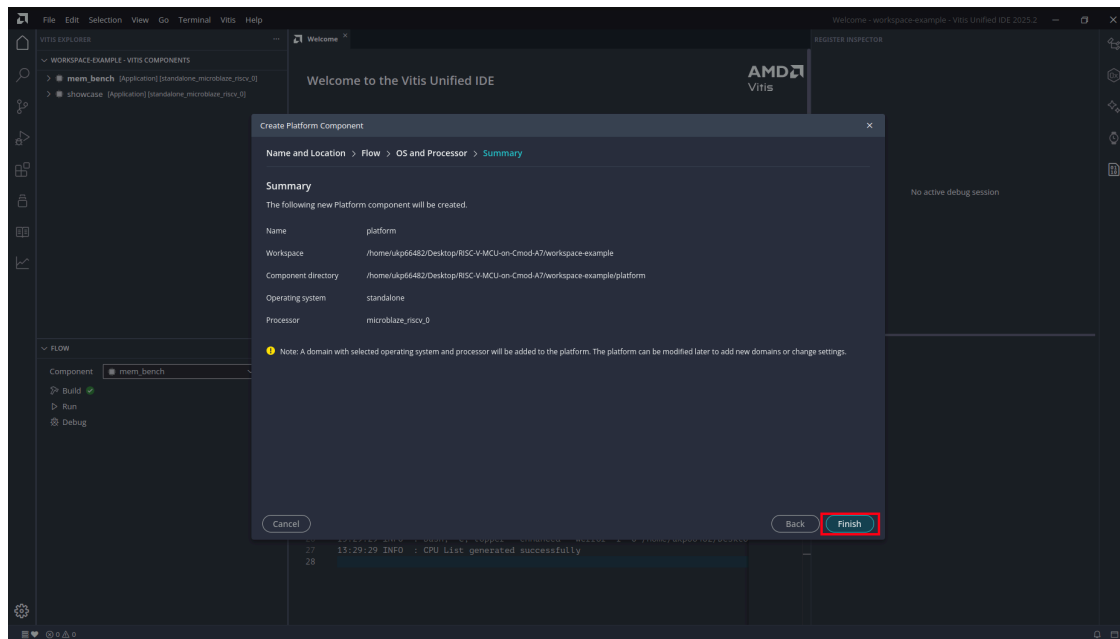


Figure 16: Platform Summary

Vitis generates the platform component. When it finishes, the Explorer shows the platform component with its Sources and Output trees, and the notification “Created platform: platform” appears.

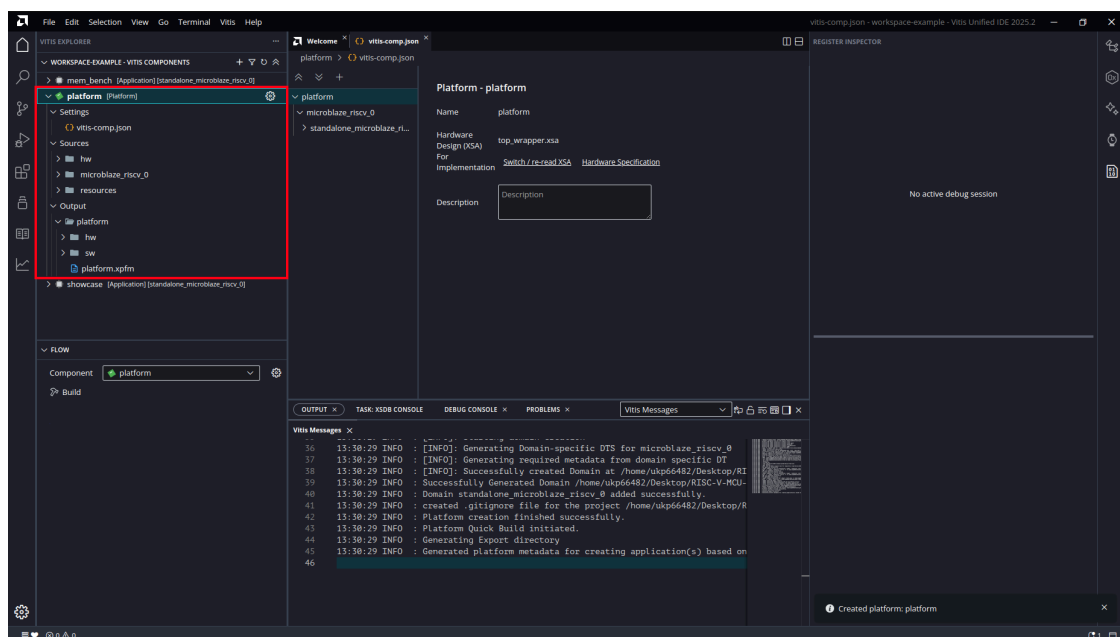


Figure 17: Platform Created

7.4 Create an Application

7.4.1 Create from Template

Open the **Examples** view from the left activity bar. Under *Embedded Software Examples*, select **Hello World** and click the + (Create Application Component from Template) button.

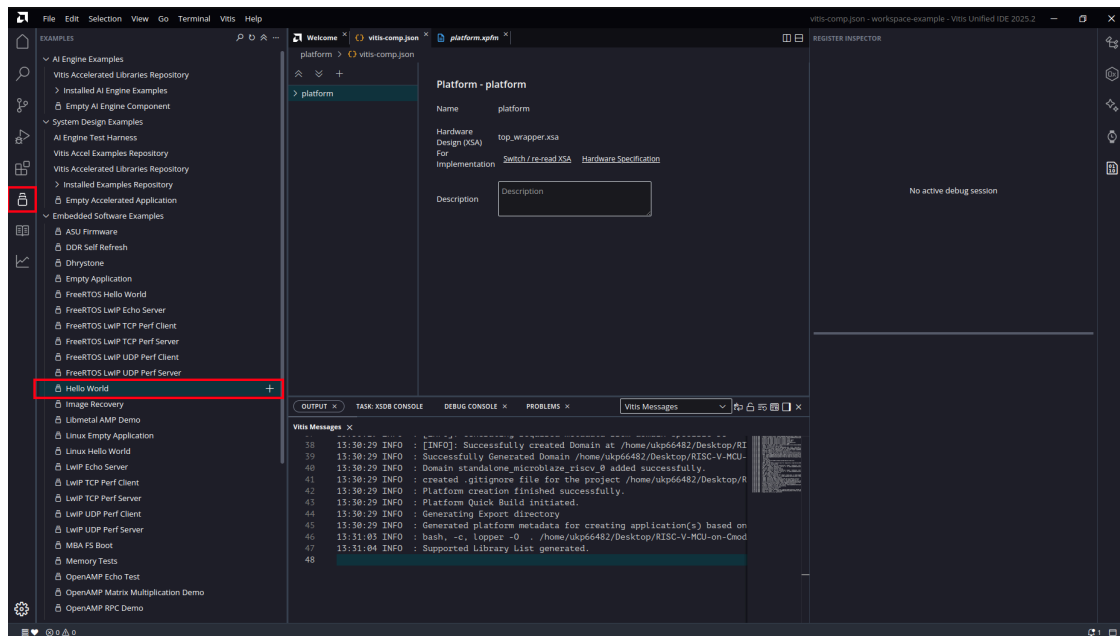


Figure 18: Hello World Template

7.4.2 Application Name and Location

Enter your application name (this guide uses test). Click **Next**.

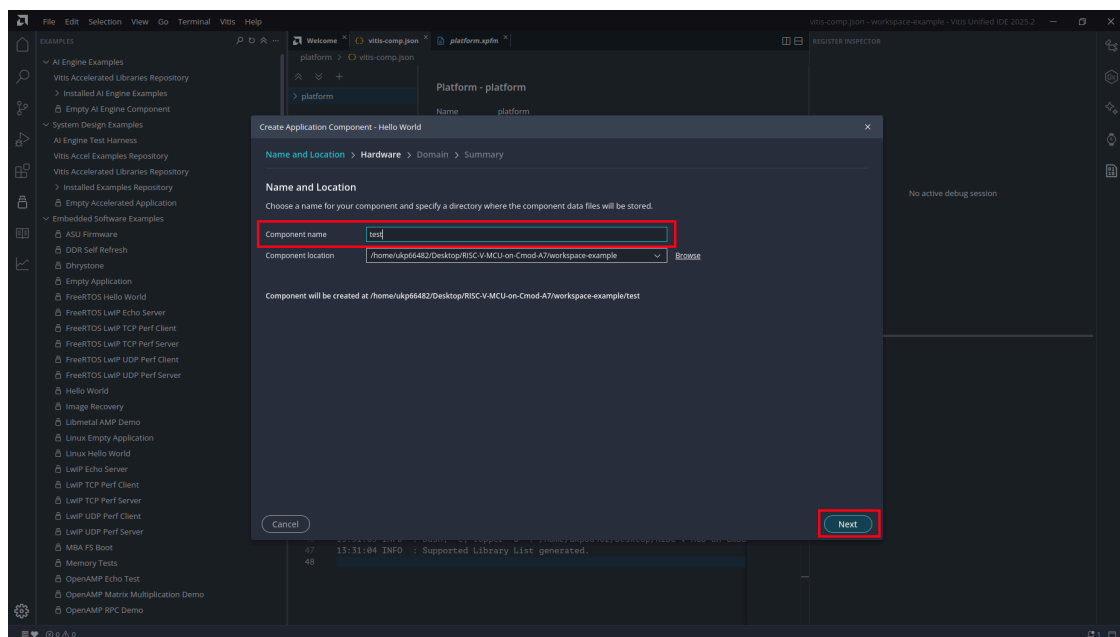


Figure 19: Application Name

7.4.3 Select the Platform

Select the platform component created in Section 7.3 (Board: cmod_a7-35t). Click **Next**.

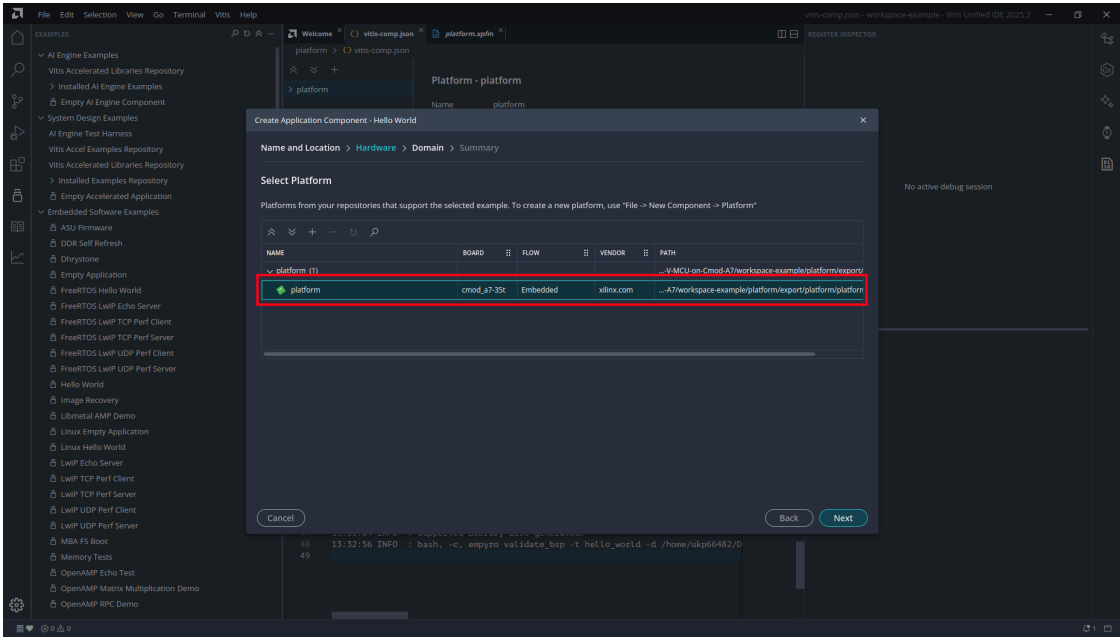


Figure 20: Select Platform

7.4.4 Select the Domain

Select standalone_microblaze_riscv_0. Click Next.

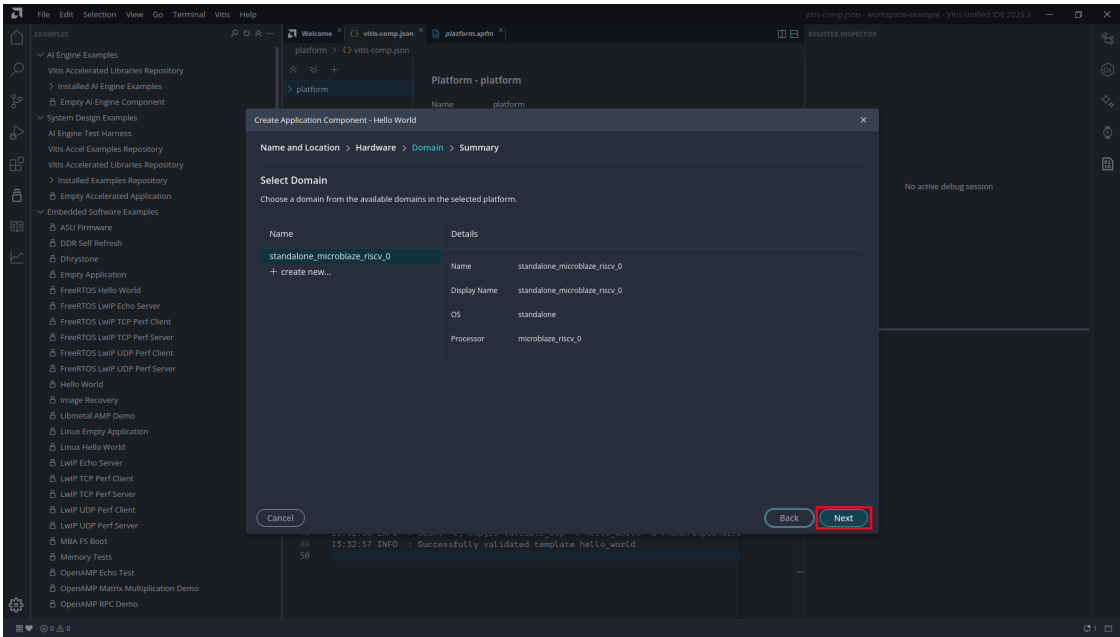


Figure 21: Select Domain

7.4.5 Application Summary

Review the settings and click Finish.

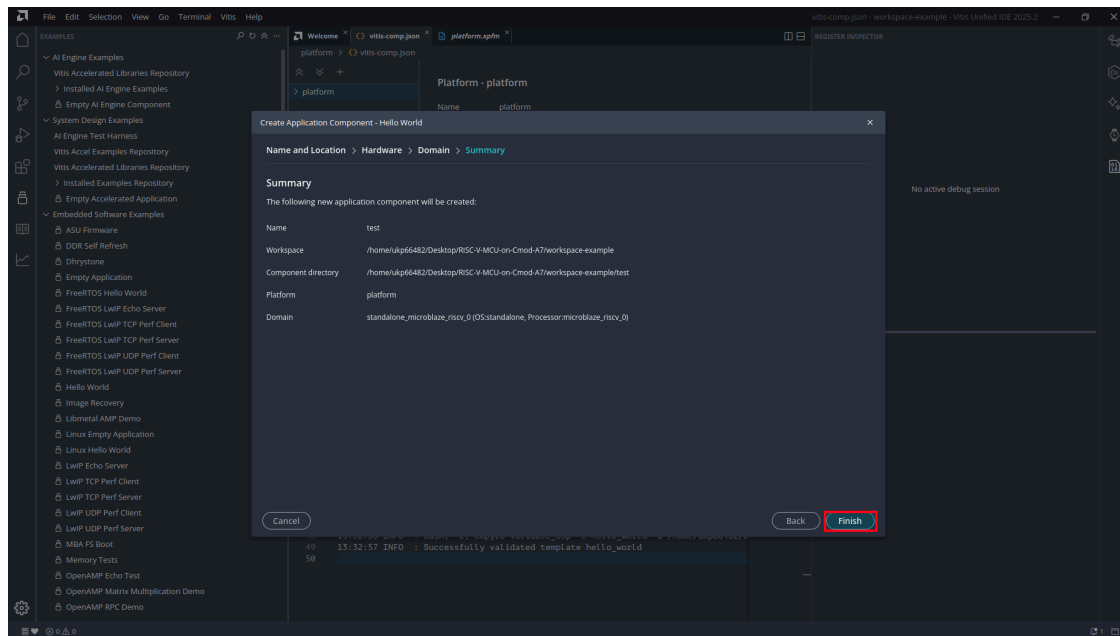


Figure 22: Application Summary

The new component appears in the Explorer. Its `src/` folder holds the template's generated files: `helloworld.c`, `lscript.ld`, `platform.c`, and `platform.h`.

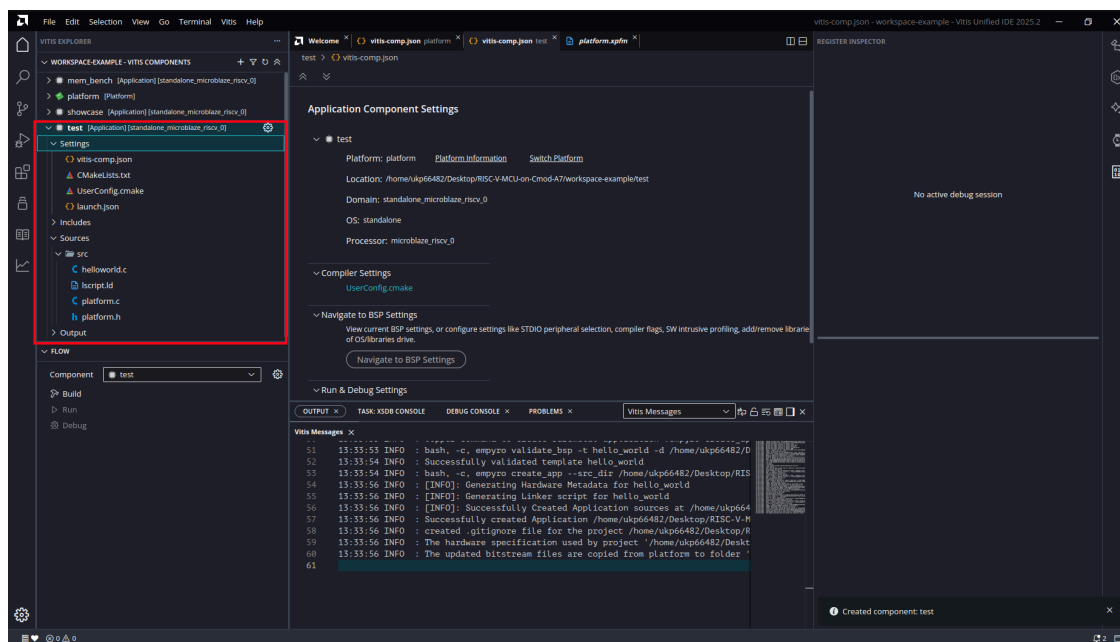


Figure 23: Application Created

7.5 Replace the Sources with the Course Template

The generated Hello World sources are replaced entirely by the course template — its `main.c` starts with `mcu_init()` and its `lscript.ld` places code in the 512 KB SRAM, the stack in DTCM, and provides the `ITCM_FUNC/DTCM_DATA` fast-memory attributes.

7.5.1 Delete the Generated Files

In the Explorer, select all four files under `src/` (`helloworld.c`, `lscript.ld`, `platform.c`, `platform.h`), right-click, and choose **Delete**.

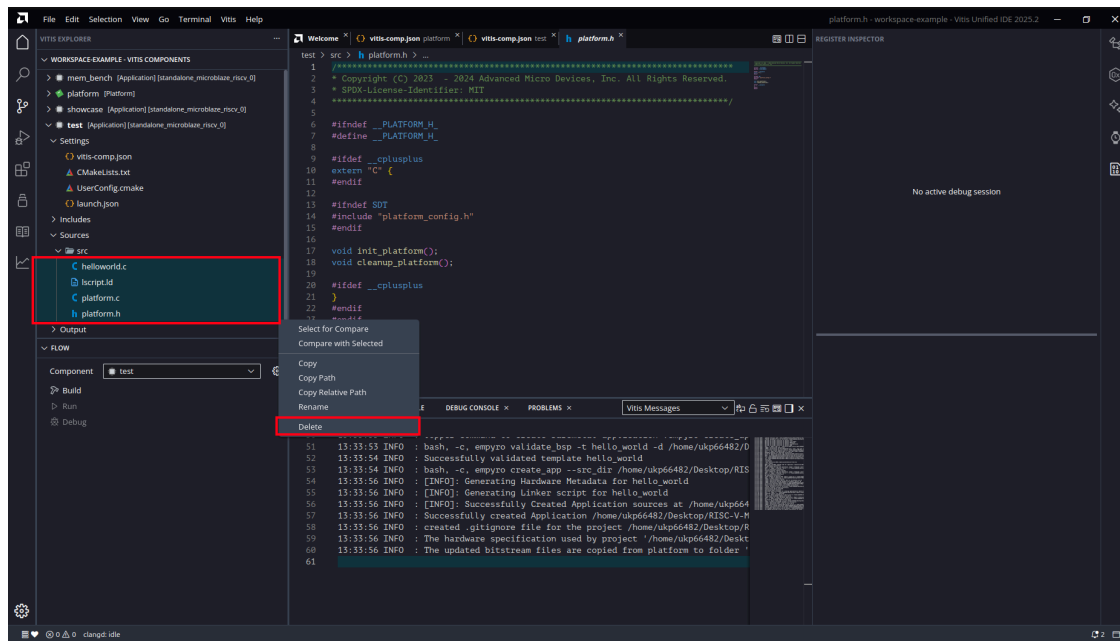


Figure 24: Delete Generated Sources

7.5.2 Import the Template Files

Right-click the `src/` folder and choose **Import > Files...**

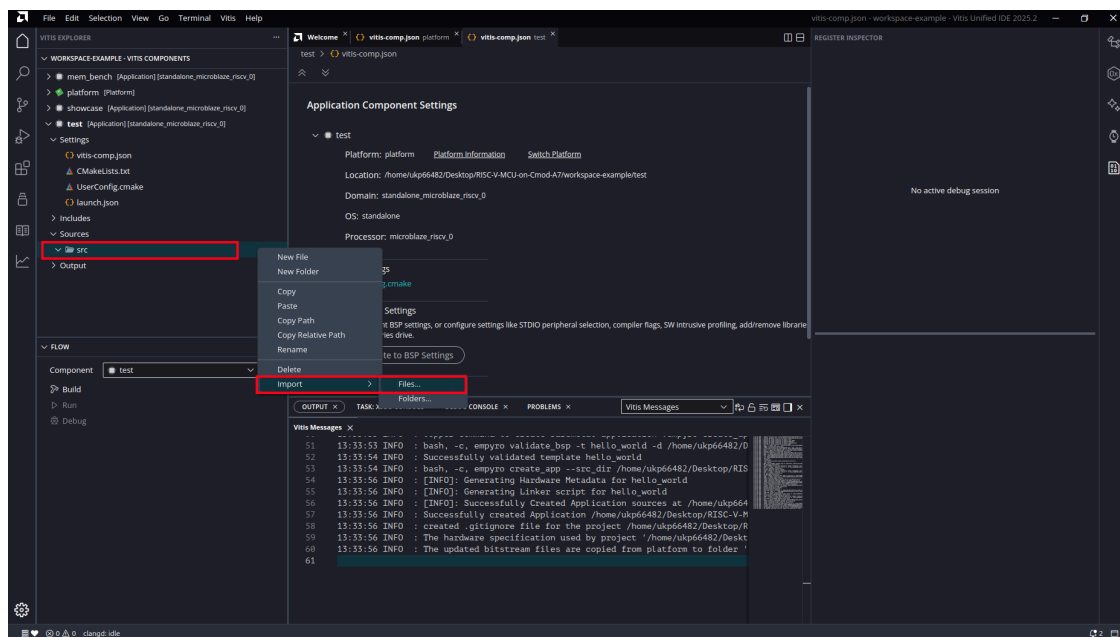


Figure 25: Import Files

Navigate to `workspace-example/app_template/src/` and select both `main.c` and `lscript.ld`. Click **Open**.

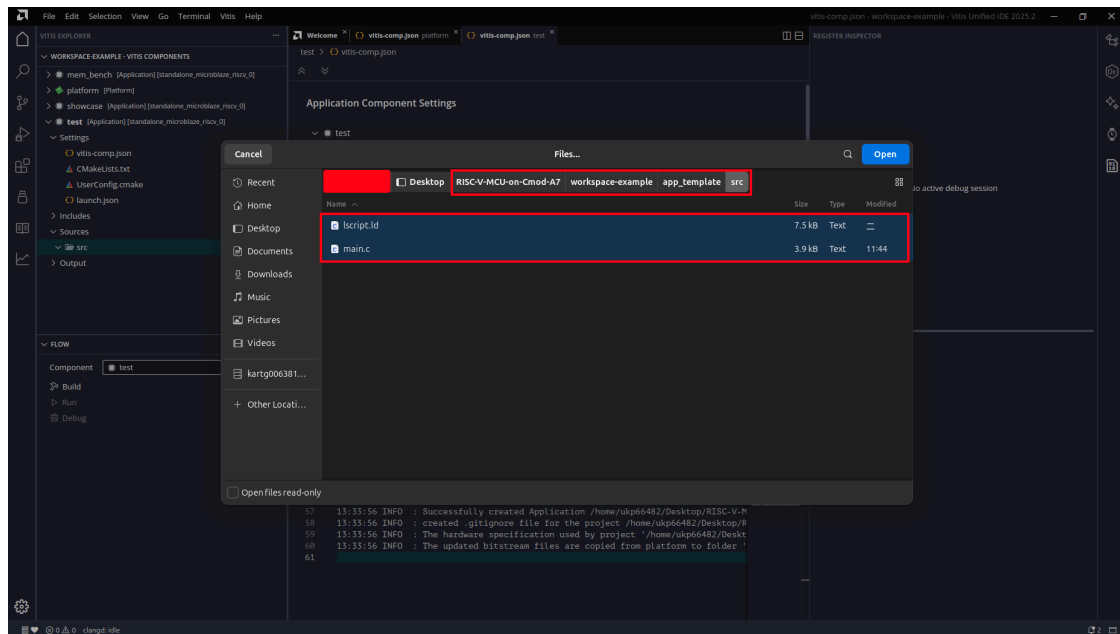


Figure 26: Select Template Files

Afterwards `src/` contains exactly `main.c` and `lscript.ld`. Files inside `src/` are compiled automatically; no build configuration is needed.

The template's one rule: `mcu_init()`; **stays the first line of `main()`**. It copies ITCM_FUNC code into the ITCM, zeroes the DTCM, and sets the USB UART to 115200. The demo loop then cycles the on-board RGB LED and prints a status line about once a second.


7.5.3 About the Linker Script

The imported `lscript.ld` defines three memory regions — `sram` (512 KB), `itcm` (32 KB), `dtcm` (64 KB) — and maps everything to SRAM except the stack (DTCM) and ITCM_FUNC code (ITCM). The component settings page *Linker Script* can display the regions, but treat it as **read-only**: it understands only part of the hand-written script (the section list may look incomplete — that is expected), and letting it regenerate the script would discard the ITCM/DTCM layout. To resize the stack or heap, edit `_STACK_SIZE` / `_HEAP_SIZE` at the top of `lscript.ld` instead.

7.6 Set the Console UART (BSP)

The BSP decides which UART carries `xil_printf` output. The default is `uart_1` — the DIP-header pins — so with it, nothing appears on the USB console.

Open the platform's **Settings** > **vitis-comp.json**, navigate to **standalone** (Board Support Package > `microblaze_riscv_0` > `standalone`). The configuration table shows `standalone_stdin` and `standalone_stdout` set to `uart_1`:

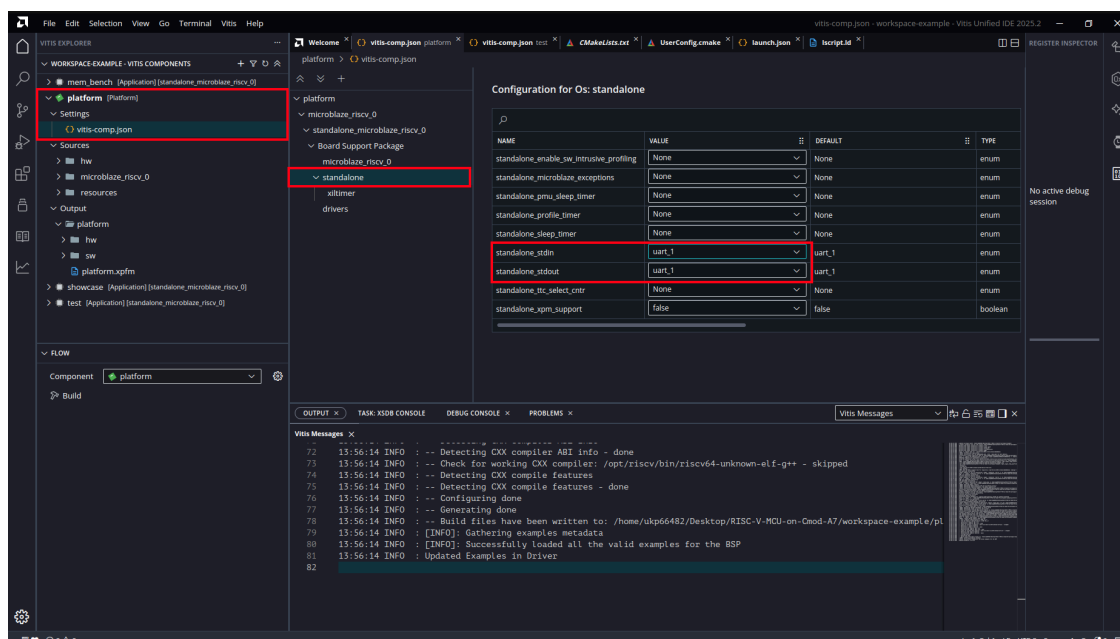Figure 27: BSP Defaults to `uart_1`

Change both to `uart_USB`. The output log reports the domain being reconfigured.

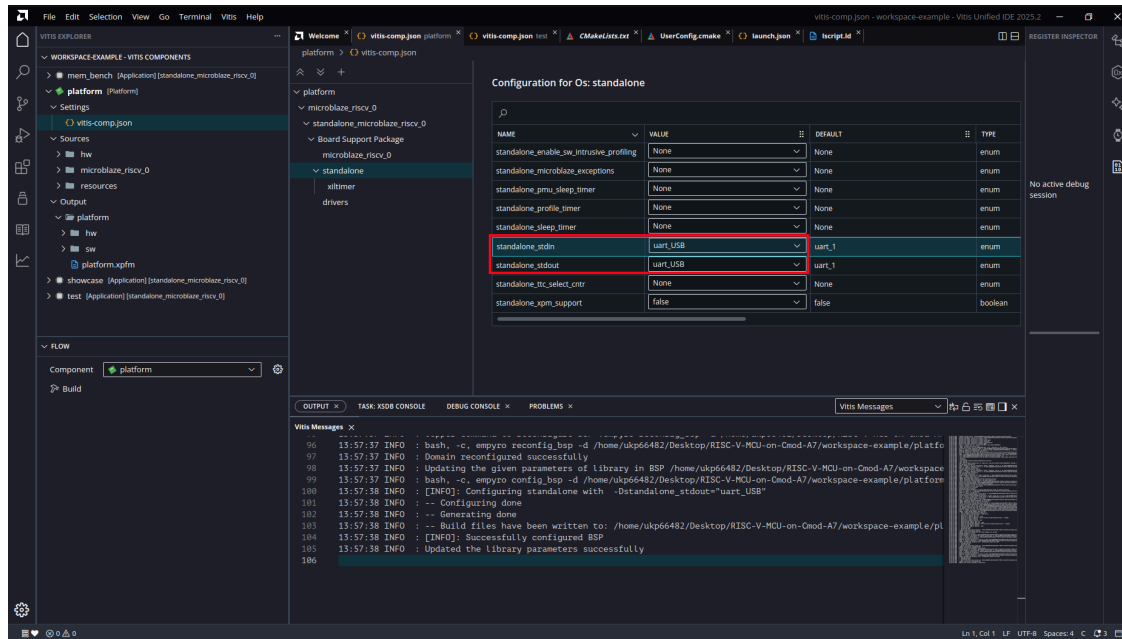


Figure 28: stdin/stdout Set to uart_USB

Note: If the platform BSP is ever regenerated (for example after changing another BSP option), re-check this page — regeneration can reset stdin/stdout to `uart_1`. After changing it, rebuild the platform **and** the application; the setting is compiled into the application's BSP library.

7.7 Build

7.7.1 Build the Platform

In the **FLOW** panel, select the **platform** component and click **Build**. Wait for “Platform Build Finished successfully”.

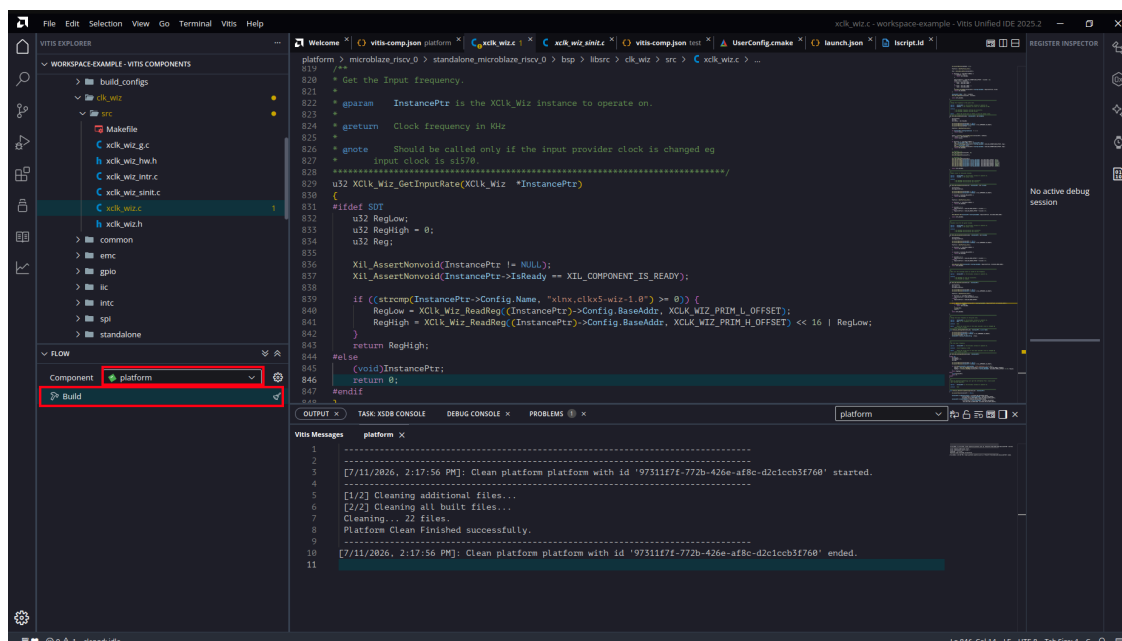


Figure 29: Build Platform

7.7.2 Build the Application

Switch the **FLOW** component to your application and click **Build**.

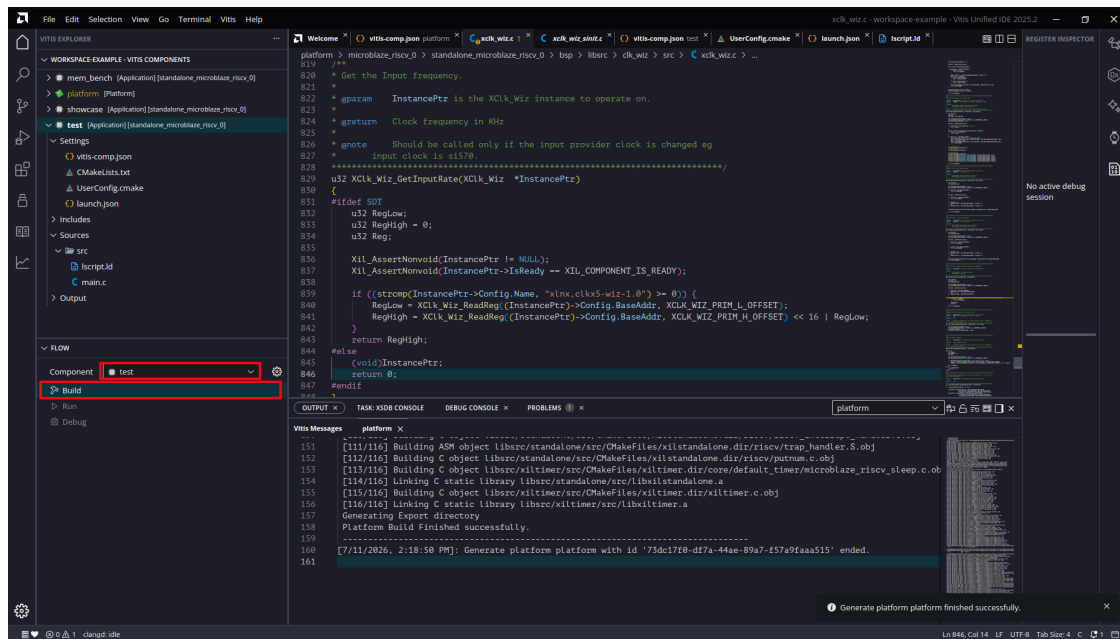


Figure 30: Build Application

The first application build asks how platform builds should be handled. Select **Always build platform with application** and click **Save in Workspace Preference** — BSP changes (such as Section 7.6) then propagate automatically on every build.

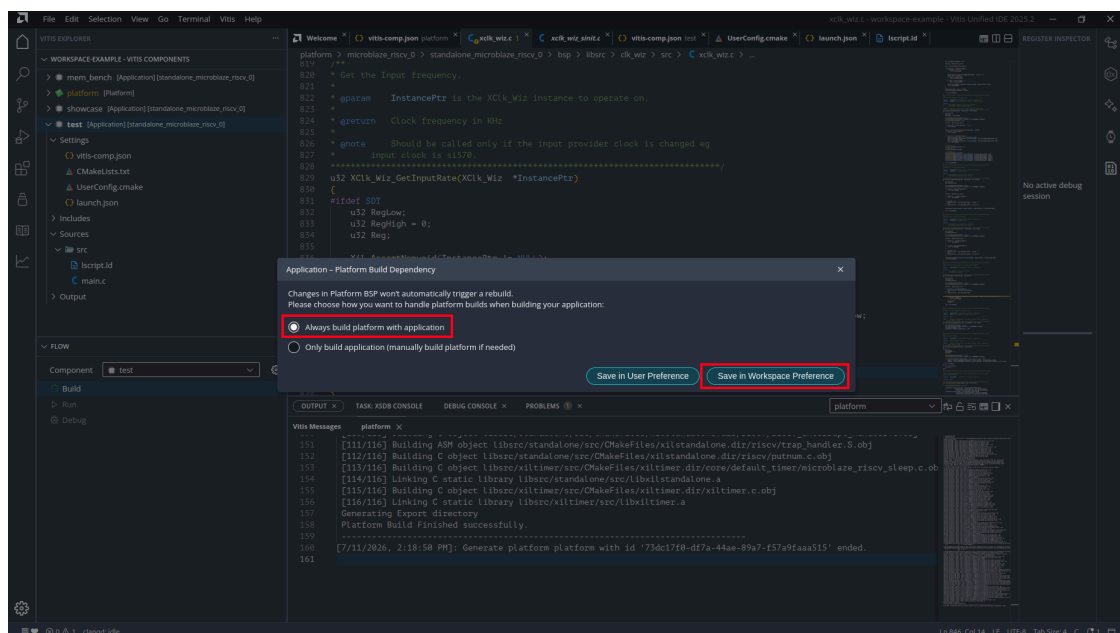


Figure 31: Platform Build Dependency

The build produces `<workspace>/test/build/test.elf`.

Note: During the build, Vitis automatically links in `boot.s` and `crt.o` from the standalone BSP: `boot.s` runs first after reset (initializes registers, stack pointer, and trap vector), and `crt.o` clears `.bss` before calling `main()`.

7.8 Debug over JTAG

7.8.1 Start a Debug Session

In the **FLOW** panel, click **Debug**. Vitis programs the FPGA over JTAG, loads the ELF into memory, and pauses execution at `main()`.

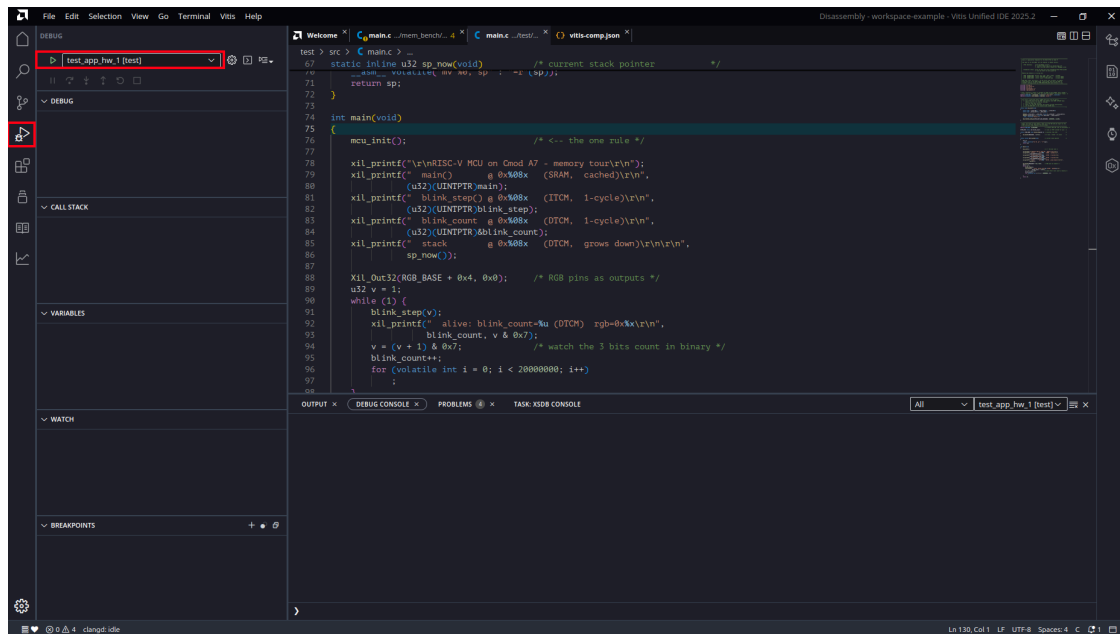
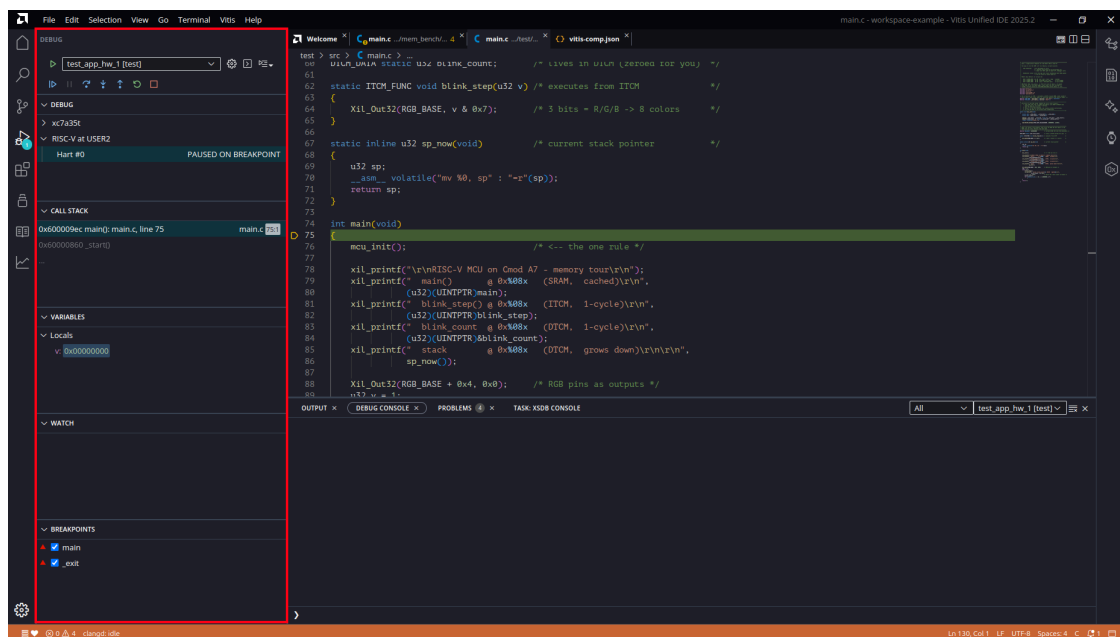


Figure 32: Debug Launched

The Debug view shows the target (*RISC-V at USER2, Hart #0 — PAUSED ON BREAKPOINT*), the call stack, local variables, and breakpoints. Note the call stack address: `main()` sits at `0x600009EC` — in SRAM, exactly where the linker script placed it.

Figure 33: Paused at `main()`

7.8.2 Open a Serial Terminal, Then Continue

Open a serial terminal **before** resuming execution. The board shows up as two serial ports; the UART is usually the higher-numbered one. Settings: **115200 8N1**.

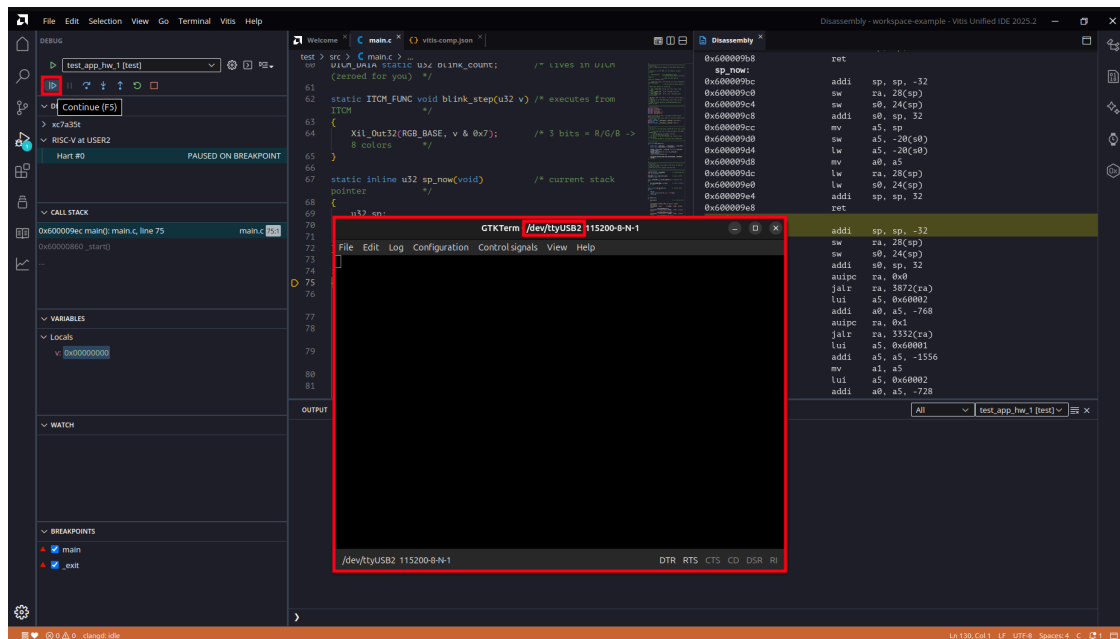


Figure 34: GTKTerm on the Board UART

Click **Continue (F5)**. The application starts: the memory tour prints once, followed by a status line about once a second, and the on-board RGB LED cycles through its colors.

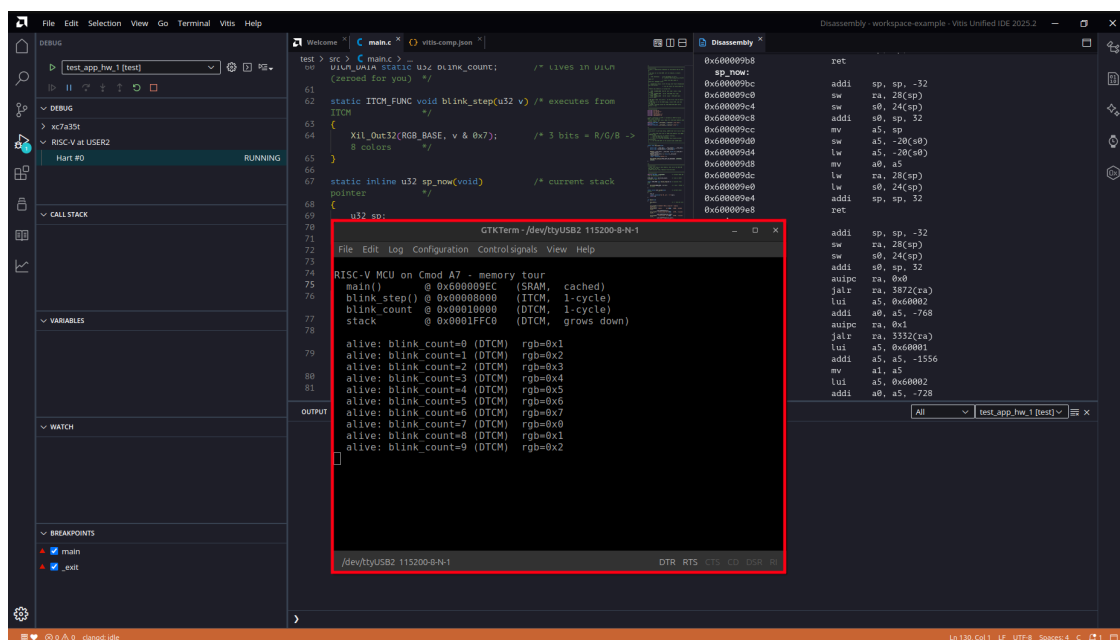


Figure 35: Memory Tour and Status Output

✓ **Checkpoint** — the memory tour is the proof that everything is wired correctly:

```
RISC-V MCU on Cmod A7 - memory tour
main()      @ 0x600009EC (SRAM,  cached)
blink_step() @ 0x00008000 (ITCM,  1-cycle)
blink_count @ 0x00010000 (DTCM,  1-cycle)
stack       @ 0x0001FFC0 (DTCM,  grows down)
```

Each line matches the memory map in the datasheet: code in SRAM, fast code in ITCM, fast data and the stack in DTCM. If the terminal stays silent, see Section 7.10.

7.8.3 Breakpoints and Stepping

Click in the gutter next to a line number to set a breakpoint. The toolbar provides **Continue**, **Step Over**, **Step Into**, and **Step Out**. The left panel shows the call stack, variables, and watch expressions while the target is paused.

To run the application without the debugger, use **Run** in the FLOW panel instead — same loading, no pause at `main()`.

7.9 Inspection Tools

While a debug session is active, the **View** menu provides three inspectors:

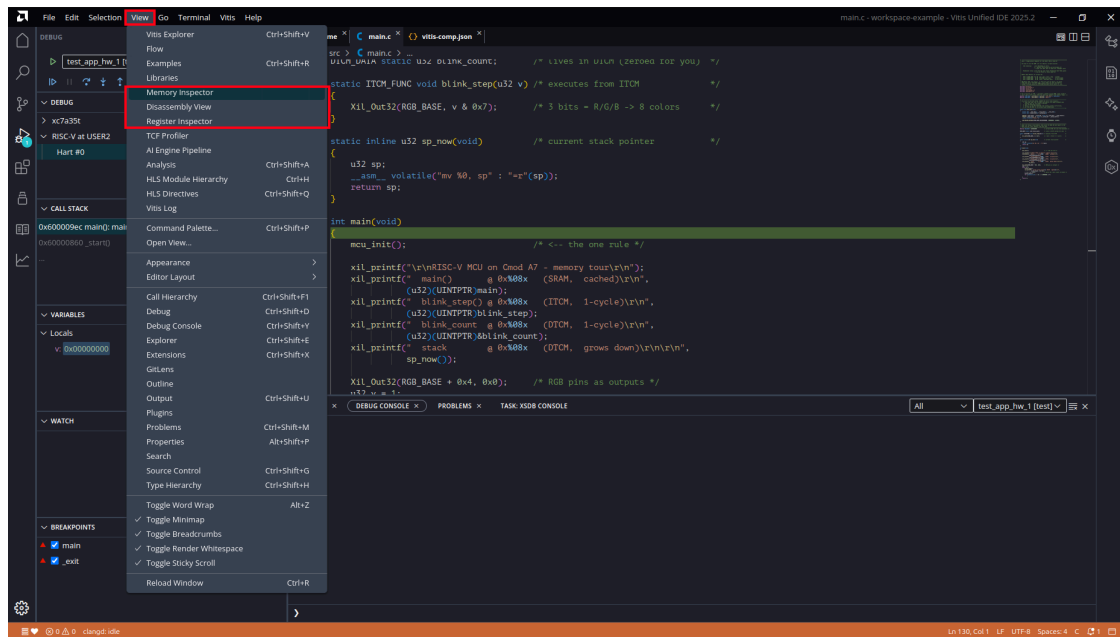


Figure 36: View Menu

7.9.1 Memory Inspector

Enter an address to inspect memory directly — for example 0x60000000 (the application image in SRAM), 0x8000 (ITCM), or 0x10000 (DTCM).

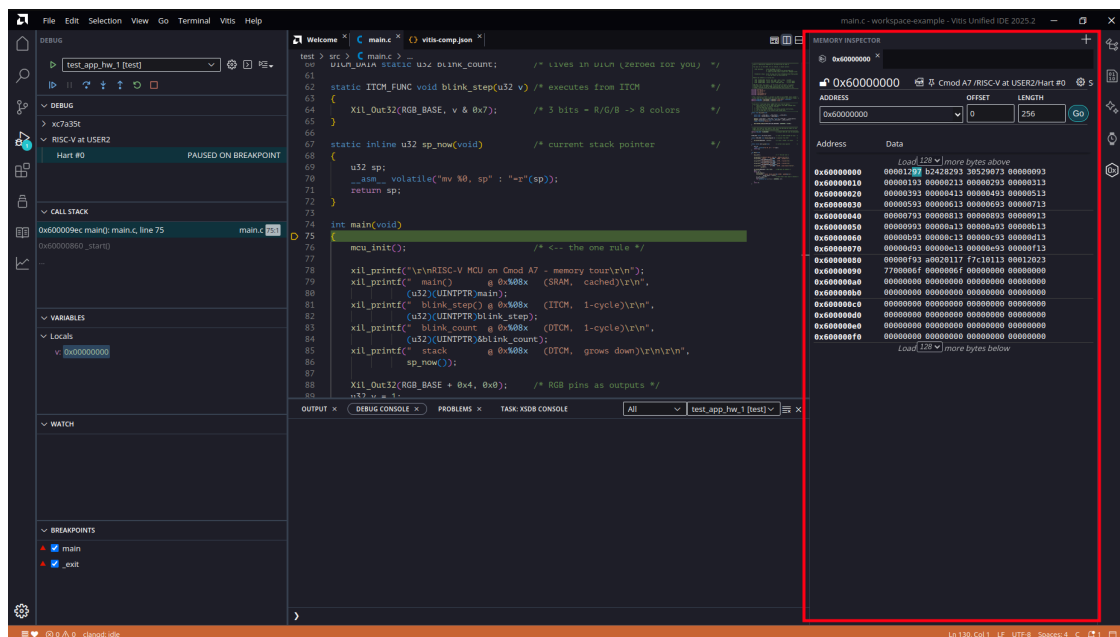


Figure 37: Memory Inspector

7.9.2 Register Inspector

Shows all processor registers with live values. With the target paused at `main()`, `sp` reads 0x00020000 — the top of the DTCM, matching the linker script's stack placement.

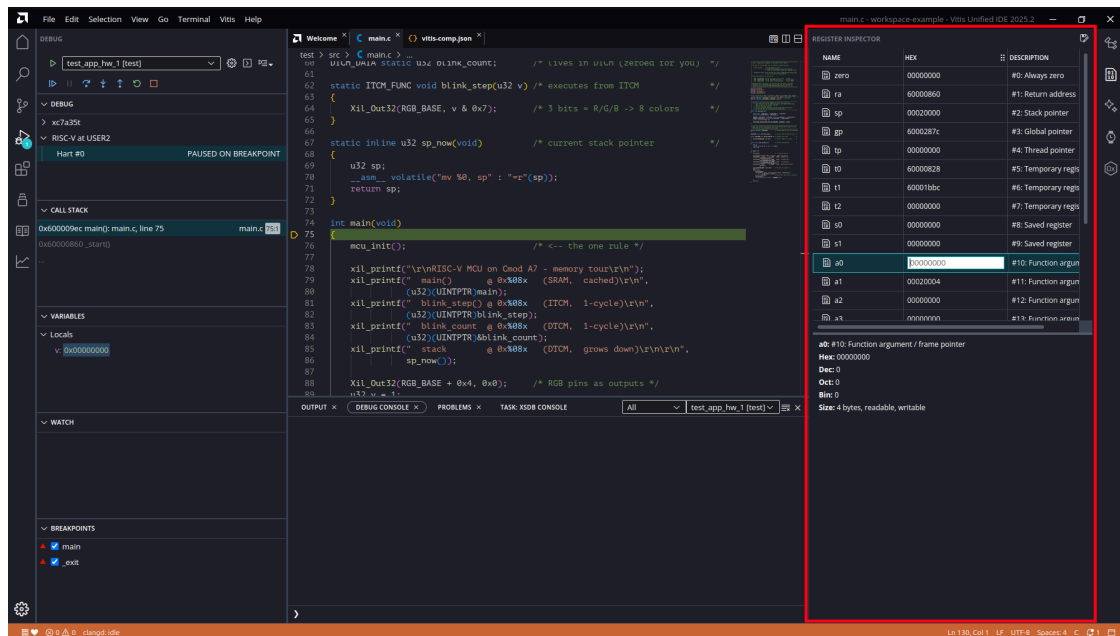


Figure 38: Register Inspector

7.9.3 Disassembly View

Shows the machine code actually executing, with source interleaving. The instruction addresses around `main()` all fall in `0x6000_xxxx` — the program runs from SRAM.

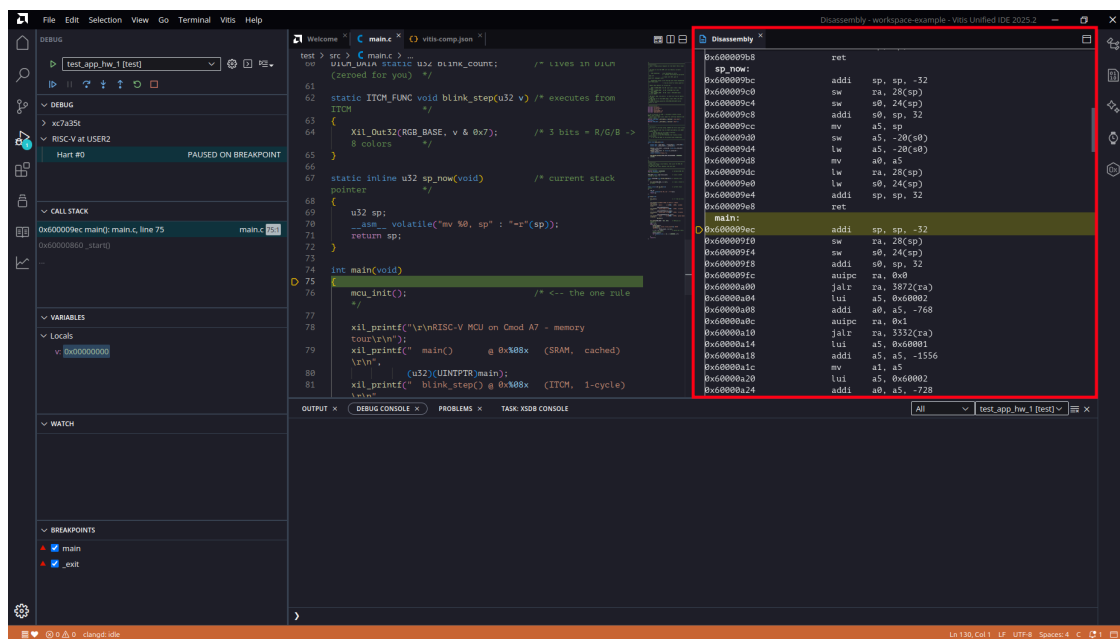


Figure 39: Disassembly

7.10 Troubleshooting

1. Platform build fails with error: `passing argument 2 of 'strcmp' ... [-Wint-conversion] in xclk_wiz.c` (reported as "Error in generating platform"). Two things combine to cause this:
 - The clock-management driver source that ships with Vitis 2025.2 (`clk_wiz v1_10`) contains a misplaced parenthesis in `clk_wiz.c` line 839. - If another RISC-V toolchain with GCC 14 or newer is on your PATH (for example one installed at `/opt/riscv` for assembly coursework), the BSP build may pick it instead of the Vitis-bundled compiler. GCC 14+ treats this construct as an error; the bundled compiler treats it as a warning.

The offending line, as the IDE shows it:

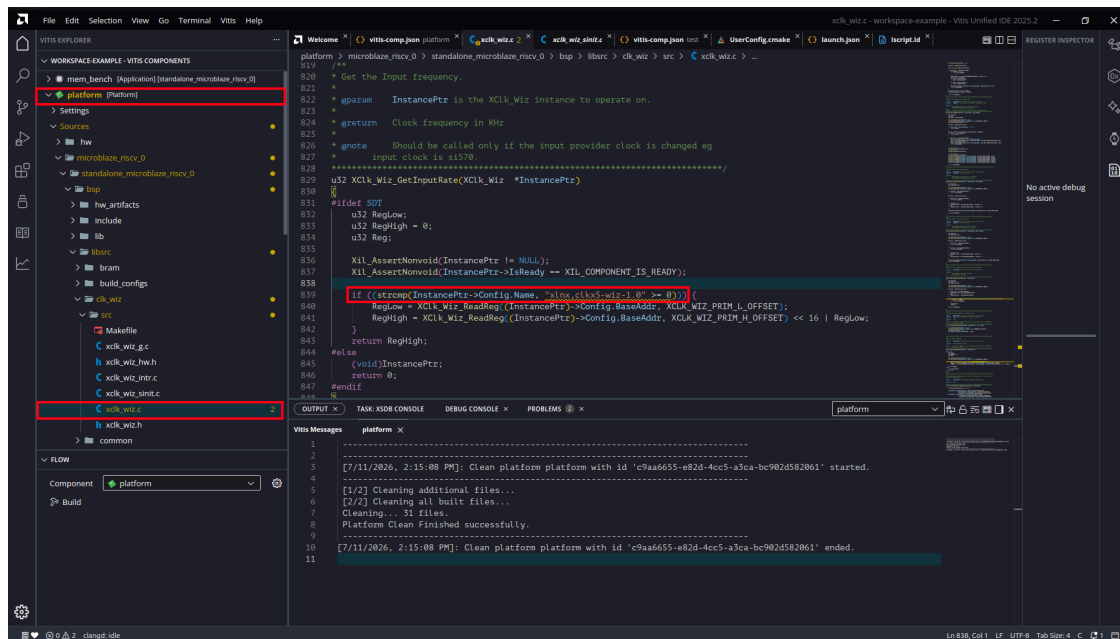


Figure 40: clk_wiz Driver Bug

Fix the source (works with either compiler): change line 839 from

```
strcmp(InstancePtr->Config.Name, "xlnx,clkx5-wiz-1.0" >= 0)
```

to

```
strcmp(InstancePtr->Config.Name, "xlnx,clkx5-wiz-1.0") >= 0
```

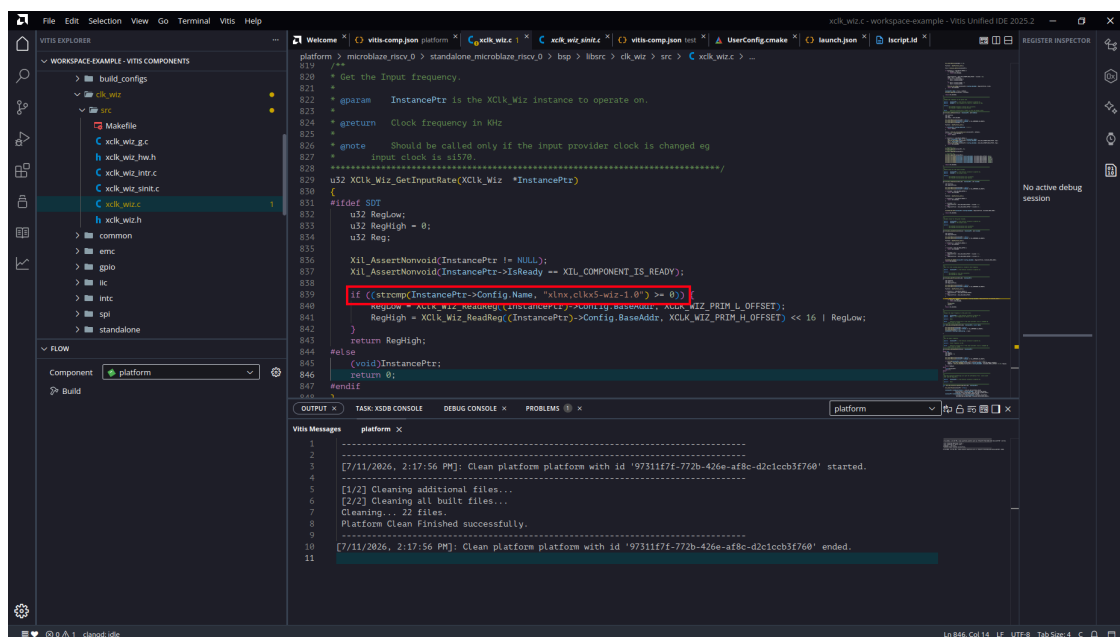


Figure 41: After the Fix

Then rebuild the platform. Apply the same one-line fix to the Vitis installation copy at /opt/Xilinx/2025.2/data/embeddedsw/XilinxProcessorIPLib/drivers/clk_wiz_v1_10/src/xclk_wiz.c — the platform re-imports driver sources whenever the BSP is regenerated, so an unpatched installation brings the error back.

To check which compiler configured the BSP, read platform/.../bsp/libsrc/build_configs/gen_bsp/compile_commands.json. To force a re-pick, delete platform/.../bsp/libsrc/build_configs and rebuild from a session whose PATH does not contain the other toolchain.

1. **The application runs (RGB LED cycles) but the USB console is silent** — xil_printf is going to the DIP-header UART. The BSP's stdout has reverted to uart_1: redo Section 7.6, then rebuild the platform **and** the application. The compiled truth is platform/export/platform/sw/standalone_microblaze_riscv_0/include/bspconfig.h: STDOUT_BASEADDRESS must read 0x40300000 (uart_USB), not 0x40310000 (uart_1).

8 Standalone Boot

At every power-on the MCU loads the application stored in the QSPI flash into SRAM and starts it — no PC attached. The full walkthrough for deploying an application to flash is in preparation and will be added in a future revision of this datasheet.