

# JTAG Debug Mode — Vitis Unified IDE

---

This guide walks through loading and debugging a MicroBlaze RISC-V application over JTAG using the **AMD Vitis Unified IDE**. JTAG puts your program straight into RAM and hands you a debugger — nothing is written to flash, and a power-cycle returns the board to whatever `upload.py` last shipped.

## Prerequisites

- The hardware design as an `.xsa` file — use the prebuilt `release/top_wrapper.xsa` (no Vivado needed)
  - **Vitis Unified IDE 2025.x** installed (the classic pre-2023.2 Vitis GUI looks completely different and is not covered here), with its tools on PATH: `source /opt/Xilinx/2025.2/Vitis/settings64.sh` (adjust to your install)
  - Cmod A7-35T board connected via its micro-USB cable (it carries power, UART, and JTAG all at once)
  - For the CLI helpers below: run them from the repository root, and install `pyserial` if you want the UART tail (see the Standalone guide's prerequisites)
- 

## 0. The Fast Path (no GUI)

Two commands take you from a fresh checkout to a running program:

```
python3 tools/vitis_new_app.py myapp          # create + build (first run also
builds the platform)
python3 tools/jtag_run.py workspace-example/myapp/build/myapp.elf
```

`vitis_new_app.py` performs sections 1–7 of this guide for you (workspace, platform with `uart_USB` stdin/stdout, application from the course template, build). `jtag_run.py` is section 8's **Run** button as a command, and tails the UART so you immediately see:

```
RISC-V MCU on Cmod A7 - memory tour
main()      @ 0x6000009D0  (SRAM,  cached)
blink_step() @ 0x00008000  (ITCM,  1-cycle)
...
```


The result is a normal Vitis project — open the workspace in the GUI any time for breakpoints and stepping.

**First time here?** Do the GUI walkthrough (sections 1–8) once so you know what the script does on your behalf; afterwards use the two commands for every new app. If you already ran the fast path, open `workspace-example` in the GUI and jump straight to section 8 — do **not** re-create the `platform` component the script already made.

---

## 1. Open Vitis Workspace


Launch the Vitis Unified IDE. On the Welcome page, click **Open Workspace** to select or create a working directory — use the repo's `workspace-example/` folder, which is what the fast-path scripts, the template paths, and this guide all assume (any empty folder also works if you adjust the paths yourself).

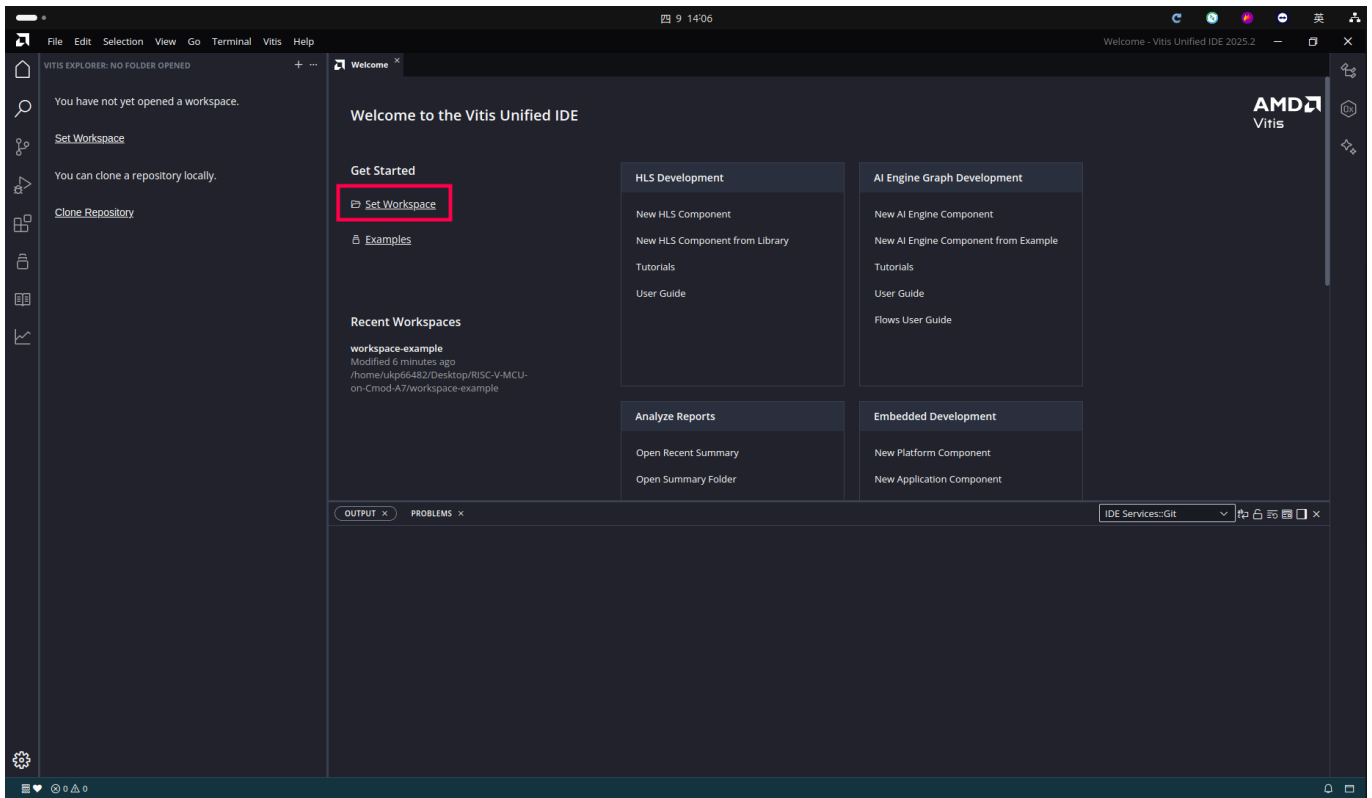

## 2. Create a Platform

### 2.1 New Platform Component

From the menu bar, select **File > New > Platform** to create a new platform component.

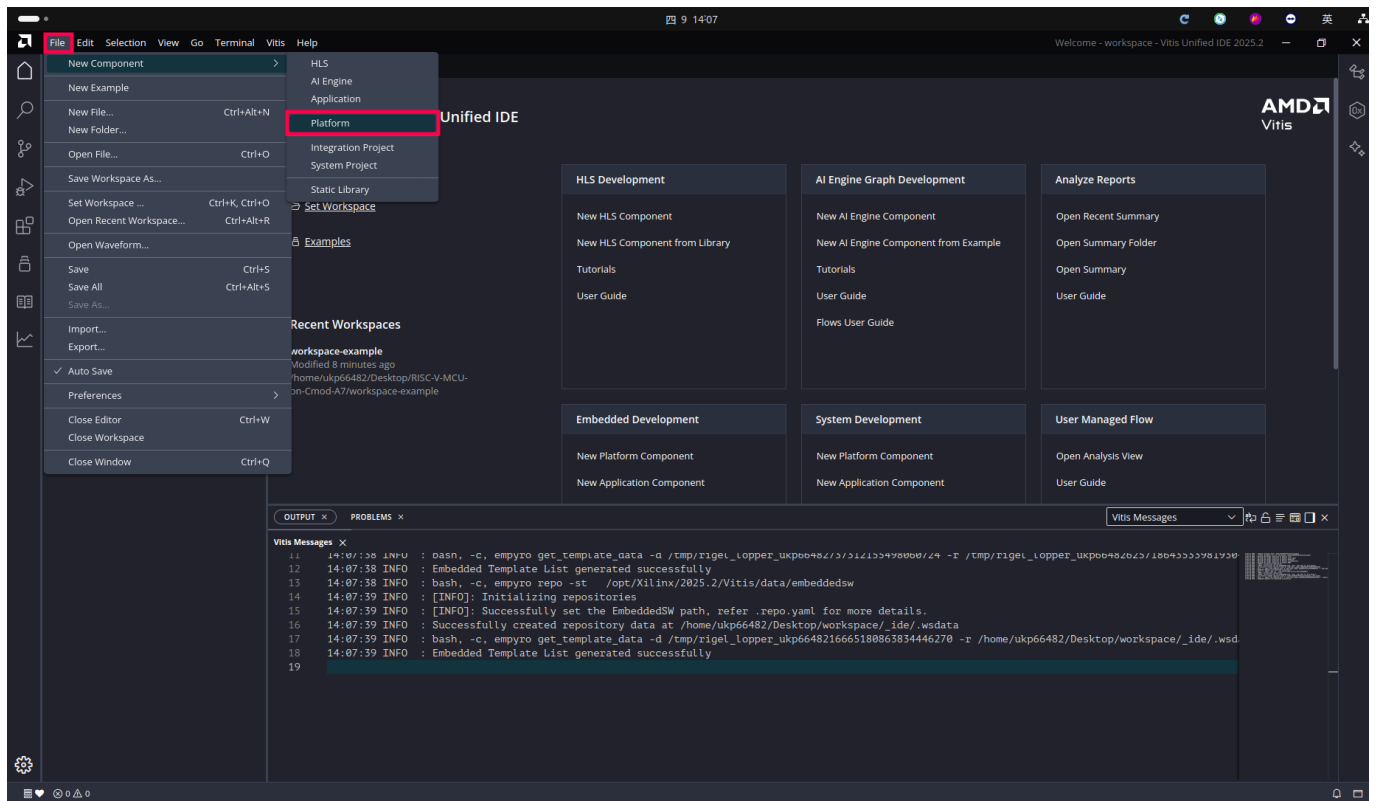

## 2.2 Name and Location

On the **Name and Location** page:

- **Component name:** enter `platform`
- **Component location:** choose your workspace directory

Click **Next** to continue.

Create Platform Component

Name and Location > Flow > OS and Processor > Summary

**Name and Location**

Choose a name for your component and specify a directory where the component data files will be stored.

Component name

Component location  [Browse](#)

Component will be created at /home/ukp66482/Desktop/workspace/platform

[Cancel](#) [Next](#)

## 2.3 Select Hardware Design (XSA)

On the **Flow** page:

- Select **Hardware Design**
- In the **Hardware Design (XSA) For Implementation** field, browse to the prebuilt `release/top_wrapper.xsa` (or your own Vivado export)

Wait for the tool to create the System Device Tree and retrieve processor details — it takes under a minute; it is done when the next page can list `microblaze_riscv_0`.

Create Platform Component ✕

Name and Location > **Flow** > OS and Processor > Summary

---

**Select Platform Creation Flow**

Create a platform component by selecting the hardware design and add software domains.

☒ Hardware Design ☐ Existing Platform

Hardware Design (XSA)  
For Implementation  [Browse](#)

> Emulation

> Advanced Options

⌂ Creating System Device Tree from the XSA and getting processor details...


Cancel Back ⌂

## 2.4 Select Operating System and Processor

On the **OS and Processor** page:


- **Operating system:** standalone
- **Processor:** microblaze\_riscv\_0

Click **Next** to finish.

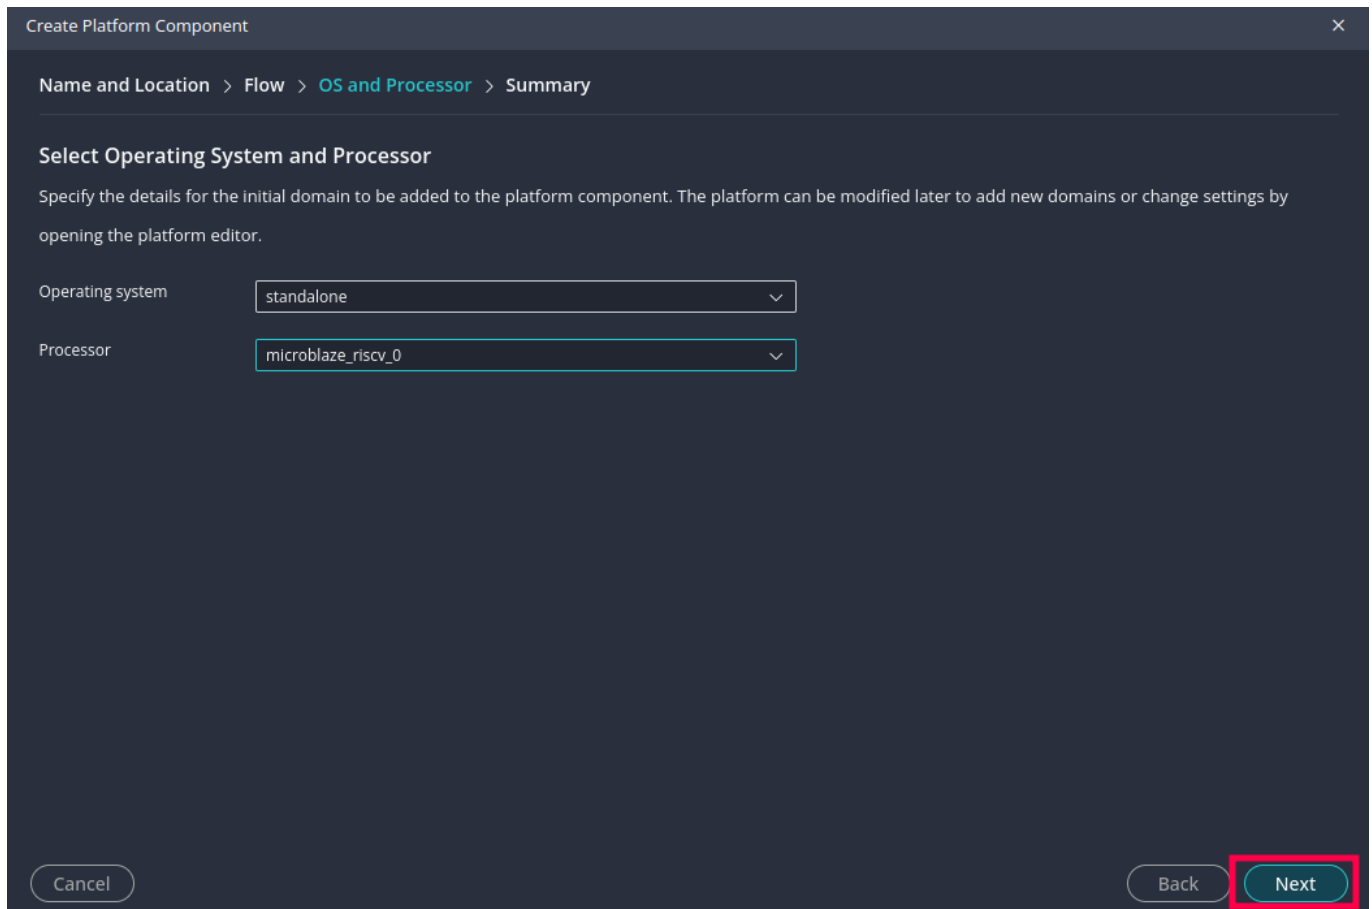

## 2.5 Platform Created


Once created, Vitis displays the platform's Domain settings where you can verify the processor and configuration.

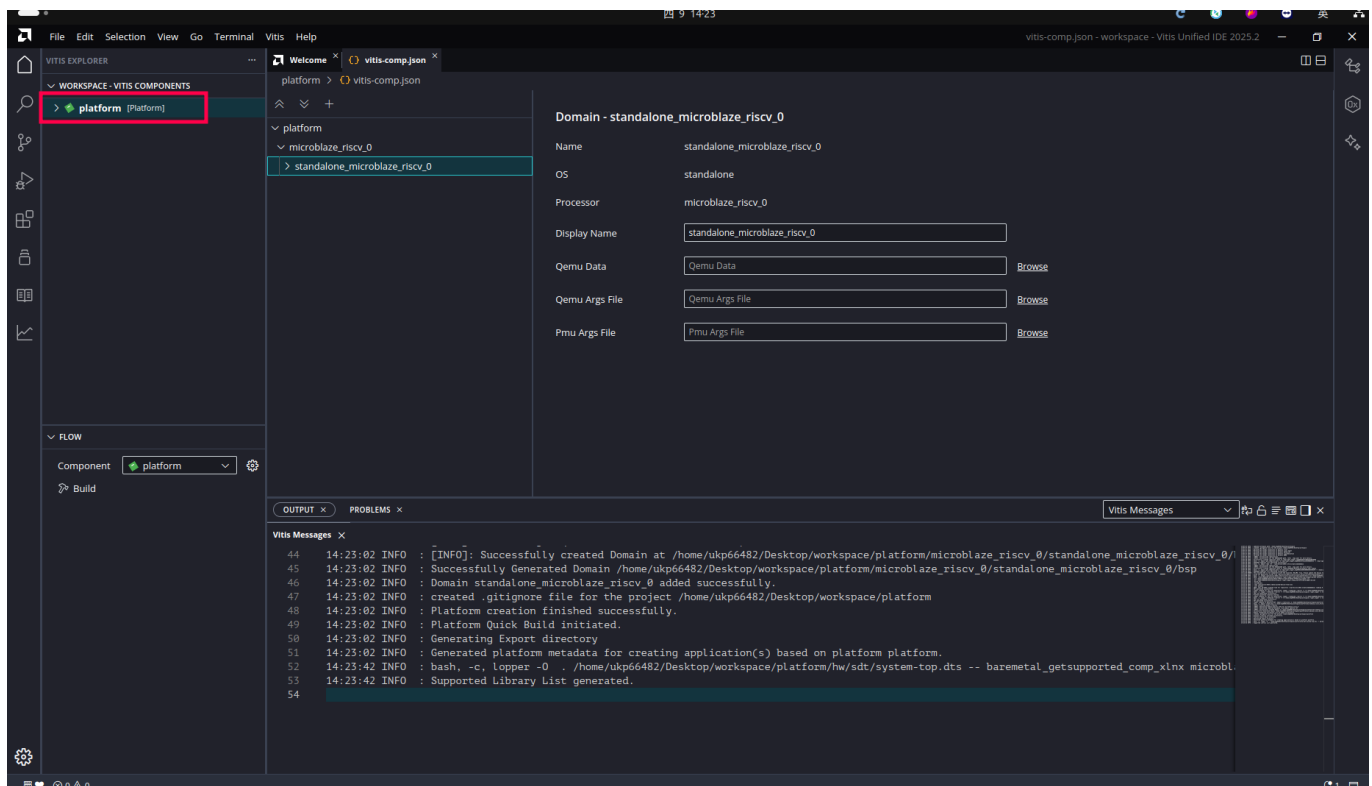

## 3. Create an Application

### 3.1 Create from Template

Open the **Examples** view (icon in the left activity bar, also linked from the Welcome page — see the screenshot). In the left-side template list, select **Hello World**, then click **Create Application Component from Template**.

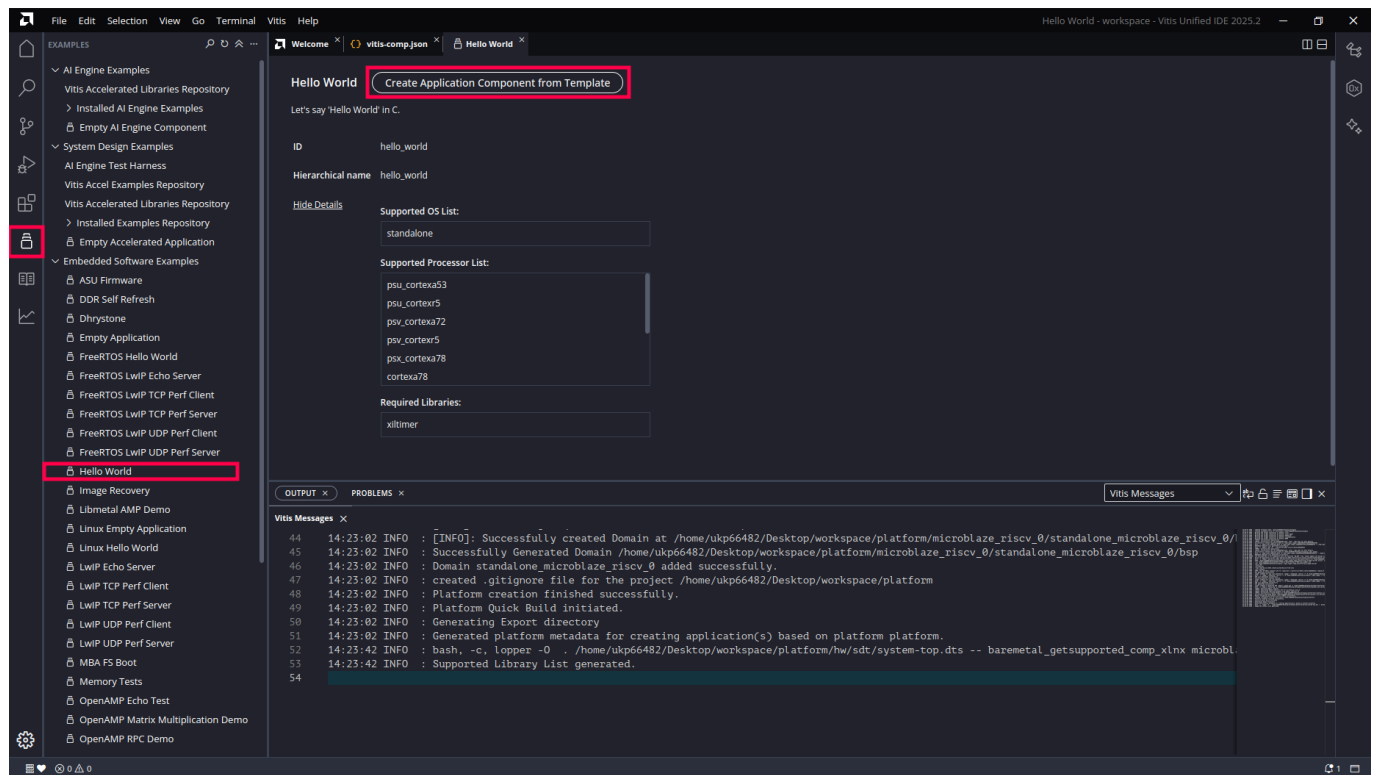

### 3.2 Set Application Name

On the **Name and Location** page:

- **Component name:** enter your application name (e.g. `GPIO_test`)

Click **Next** to continue.

Create Application Component - Hello World

[Name and Location](#) > [Hardware](#) > [Domain](#) > [Summary](#)

### Name and Location

Choose a name for your component and specify a directory where the component data files will be stored.

Component name

GPIO\_test

Component location

/home/ukp66482/Desktop/workspace

Browse

Component will be created at /home/ukp66482/Desktop/workspace/GPIO\_test

Cancel


Next

### 3.3 Select Platform

On the **Hardware** page, select the previously created **platform** (Board: `cmmod_a7-35t` ).

Click **Next** to continue.



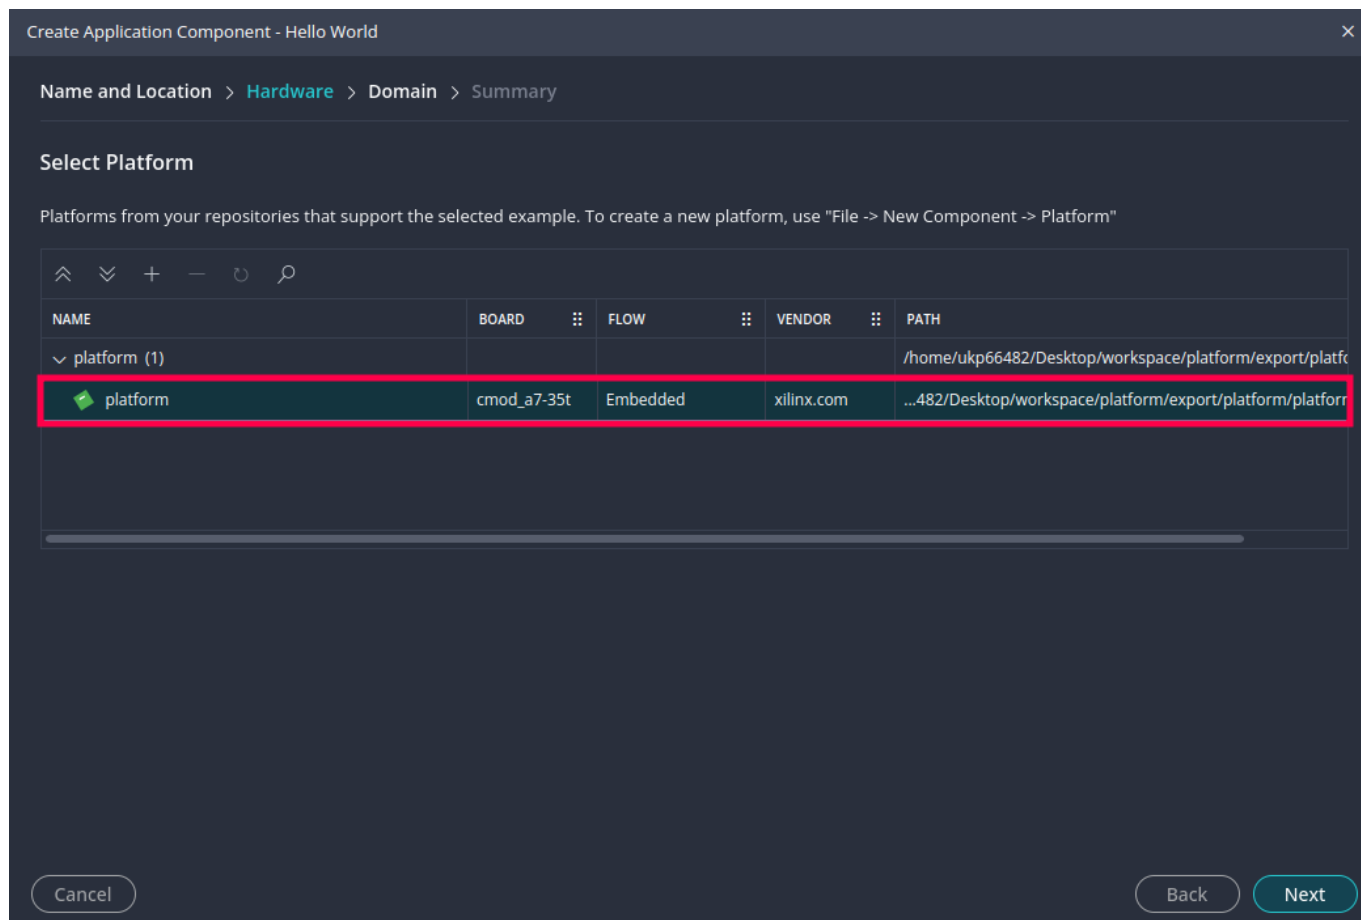


### 3.4 Review Summary and Finish

Review the application settings:

| Field    | Value                                                                       |
|----------|-----------------------------------------------------------------------------|
| Name     | GPIO_test                                                                   |
| Platform | platform                                                                    |
| Domain   | standalone_microblaze_riscv_0 (OS:standalone, Processor:microblaze_riscv_0) |


Click **Finish** to create the application.

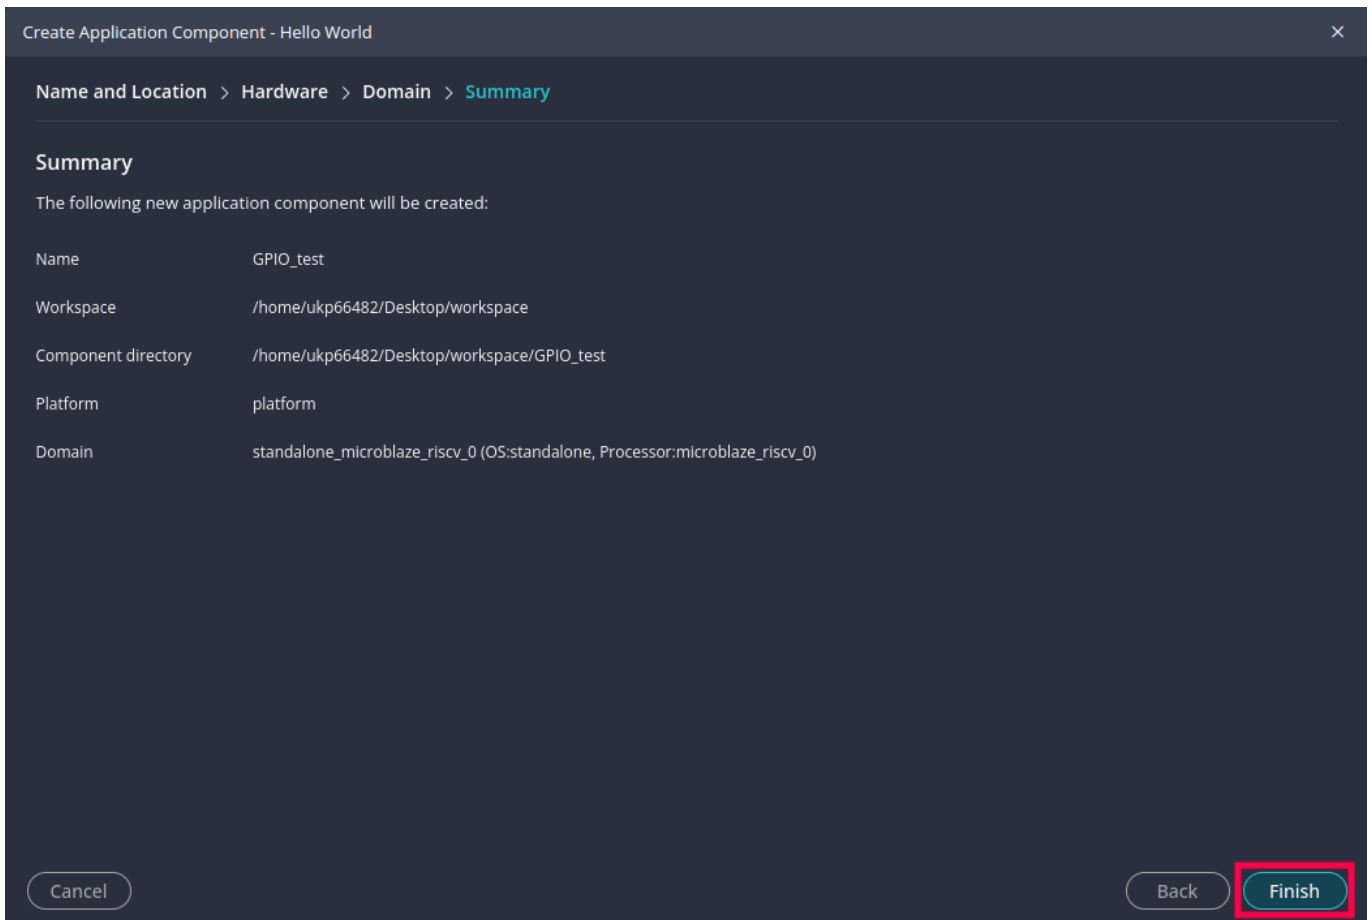

## 4. Write Application Code

### 4.1 Default Source Code

After creation, a default `helloworld.c` file is placed in the `src` directory.

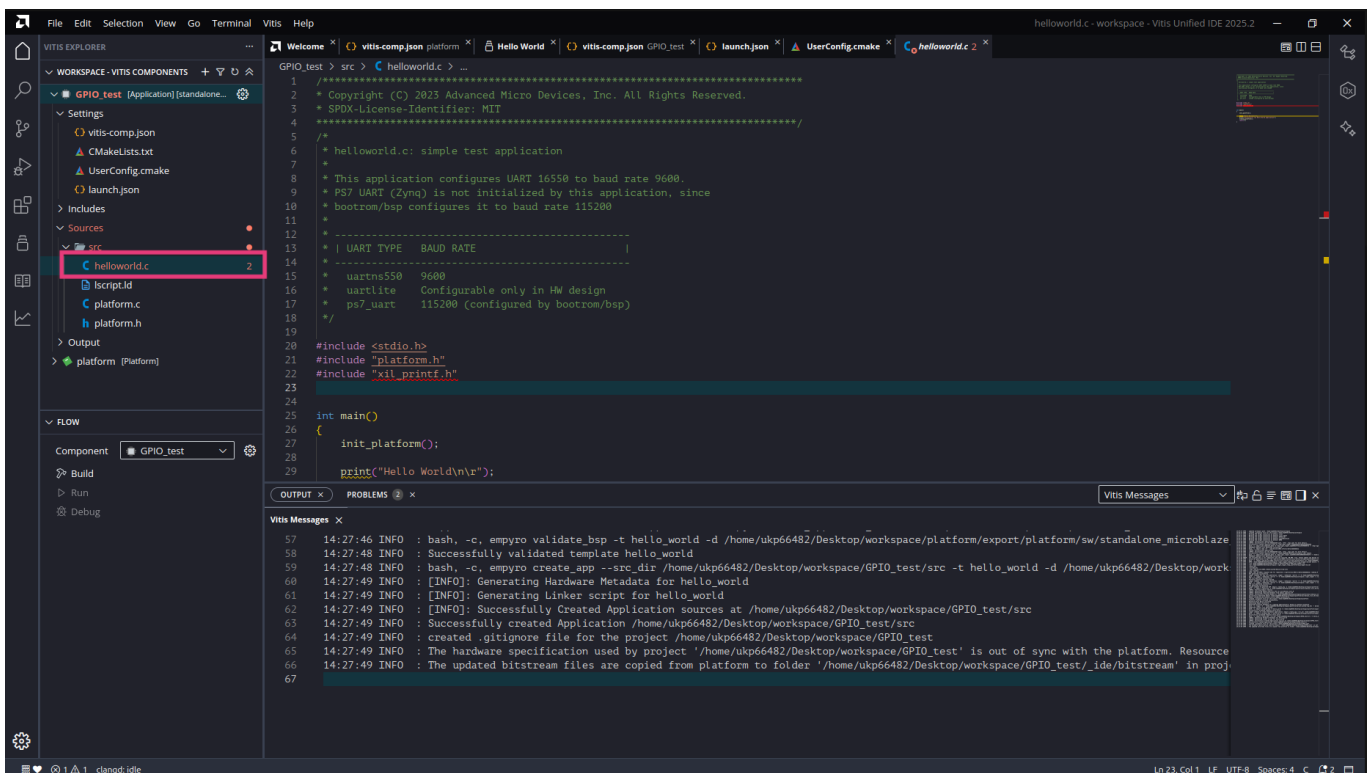

**Replace it with the course template.** A Vitis component's `src/` is a plain folder on disk, so do the copy in a file manager or terminal (paths relative to the workspace, here `workspace-example/`):

```
cd workspace-example
cp app_template/src/main.c app_template/src/lscript.ld GPIO_test/src/
rm GPIO_test/src/helloworld.c
```


Overwrite `lscript.ld` when asked — the generated one is the small all-BRAM default you are replacing. Afterwards the Explorer's `src/` shows exactly `main.c` and `lscript.ld`:

- `main.c` — starts with `mcu_init()` (the template's one rule: keep it as the first line of `main()`) and prints a memory tour at boot
- `lscript.ld` — places code in SRAM, the stack in DTCM, and provides the `ITCM_FUNC` / `DTCM_DATA` fast-memory attributes

Files inside `src/` are compiled automatically — this swap needs no build configuration.

## 4.2 Add Source Files



Add more source files under the `src` directory as your project grows (e.g. `gpio_init.c`). Assembly files (`.s`) are also supported — add them the same way and they will be compiled and linked together with the rest of the project.

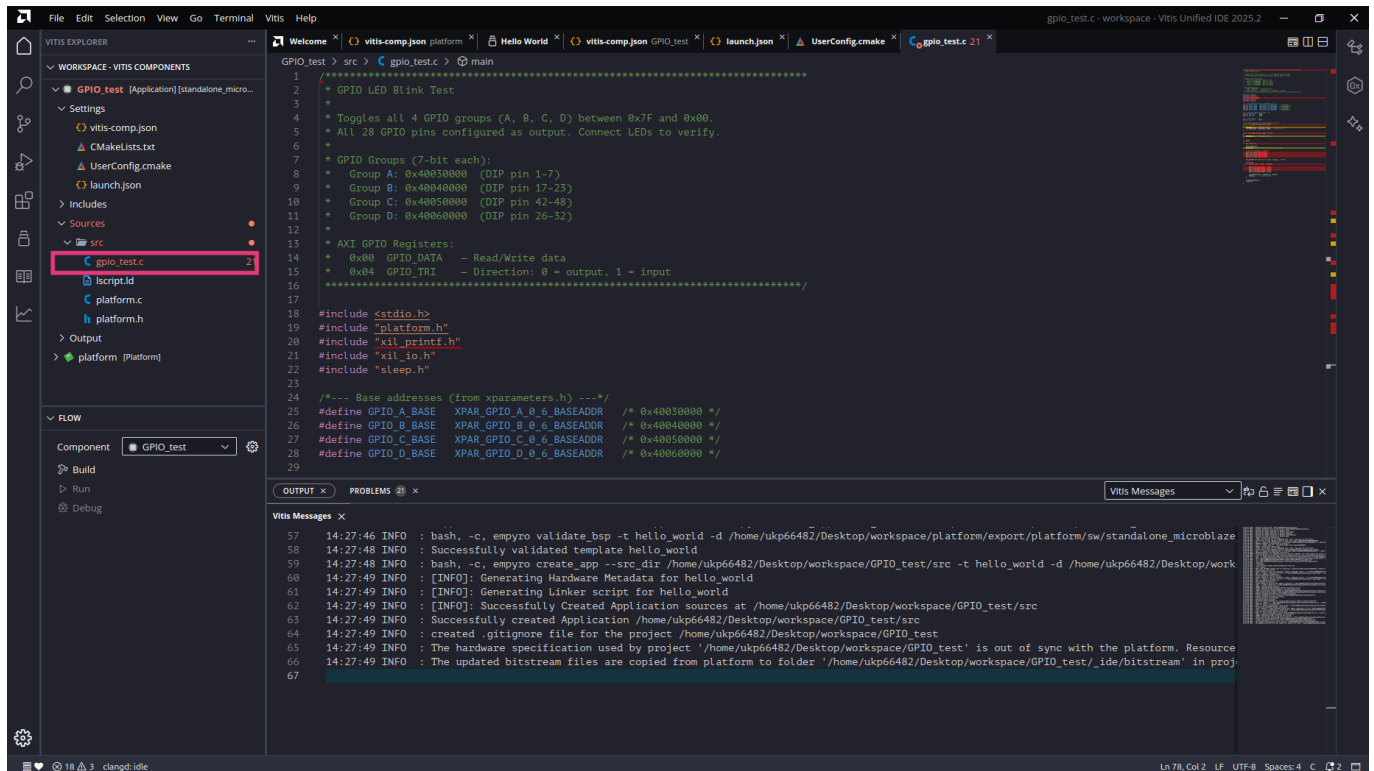

## 4.3 Configure Compile Sources

Sources inside `src/` build automatically. **UserConfig.cmake** (Explorer → your component → **Settings**) is for files you keep *outside* `src/` — open its **Sources > Compile sources** section to add them:

1. Click **Browse** to select files
2. Verify the file appears in the list
3. Use **Delete** to remove unwanted entries

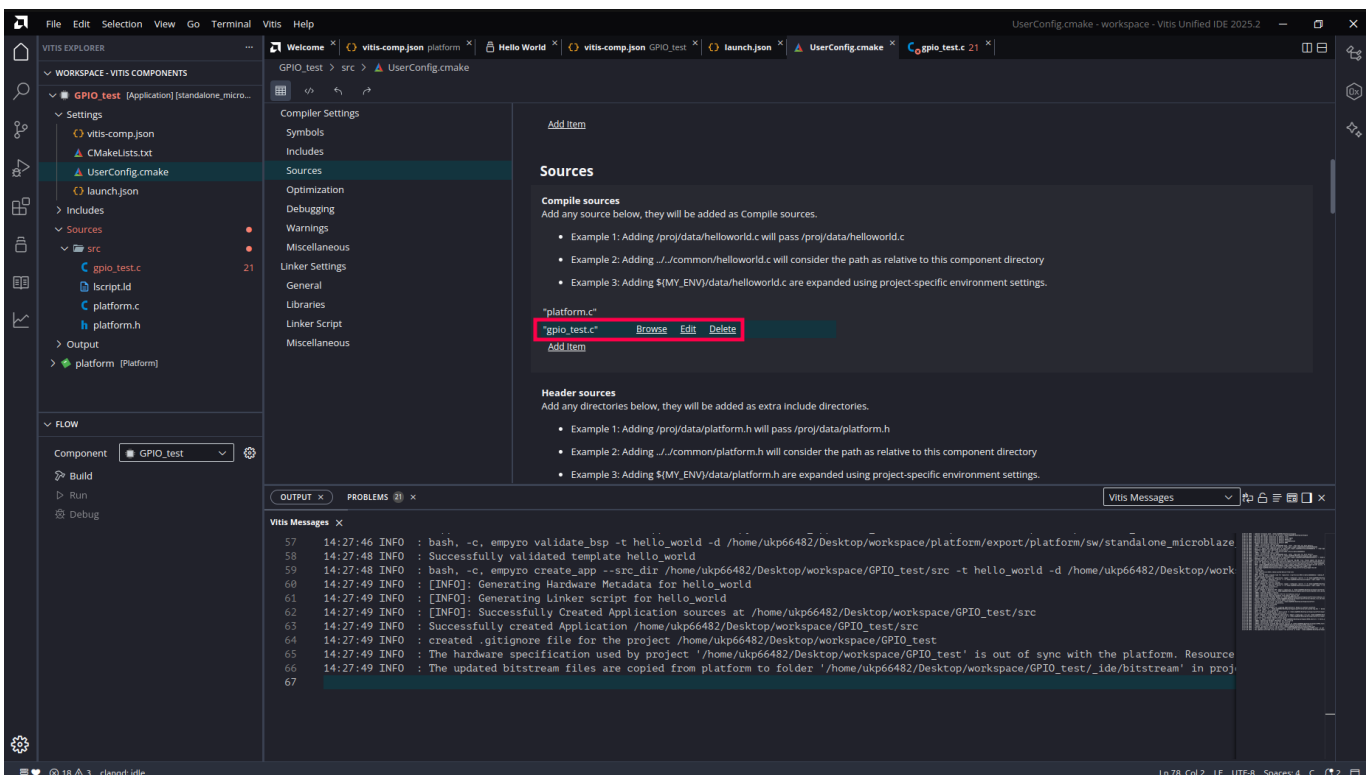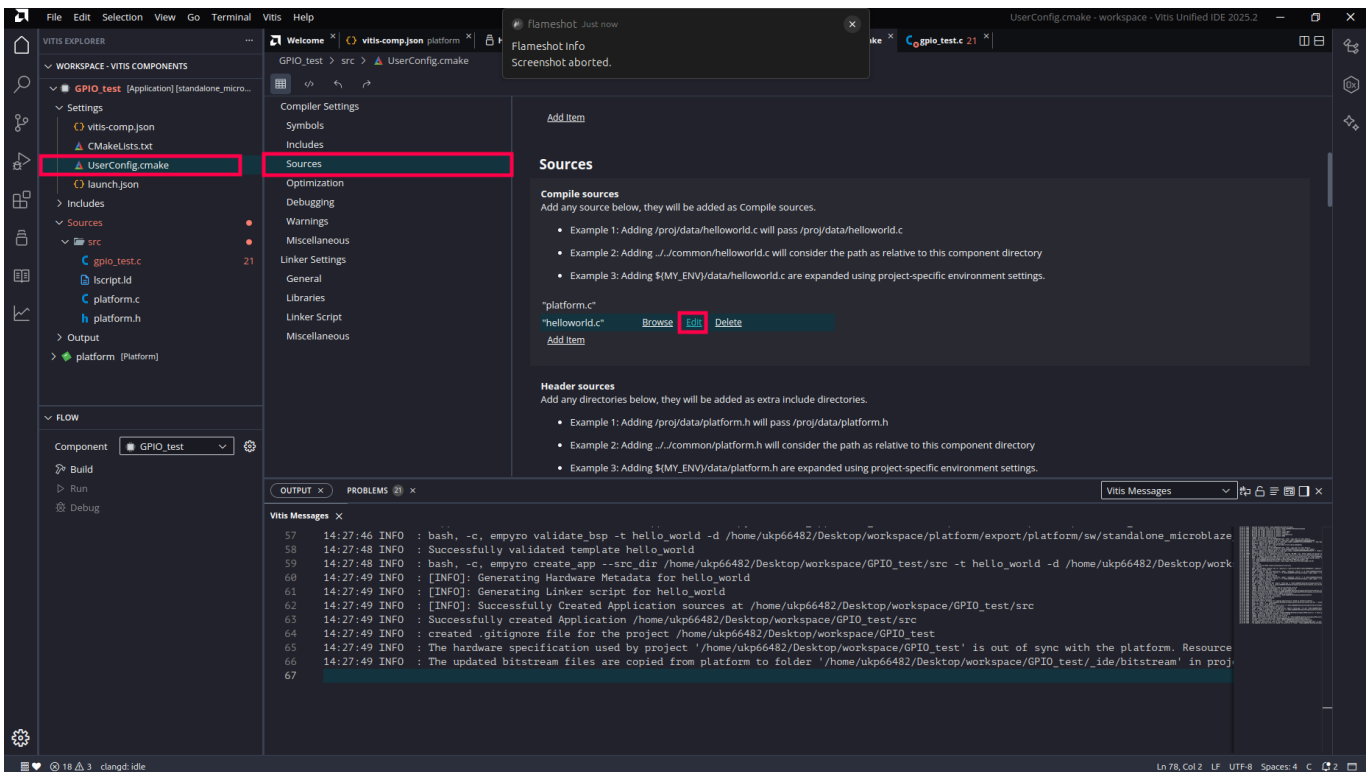


## 5. Configure the Linker Script

### 5.1 Memory Region Settings


Open the **Linker Script** settings page (Explorer → your component → **Settings** → *Linker Script*):

- **Available Memory Regions:** you should see the template's three — `sram` (512 KB), `itcm` (32 KB), `dtcm` (64 KB)
- **Stack Size / Heap Size:** the template defaults (8 KB / 2 KB) are fine — treat this page as read-only unless a build error tells you otherwise

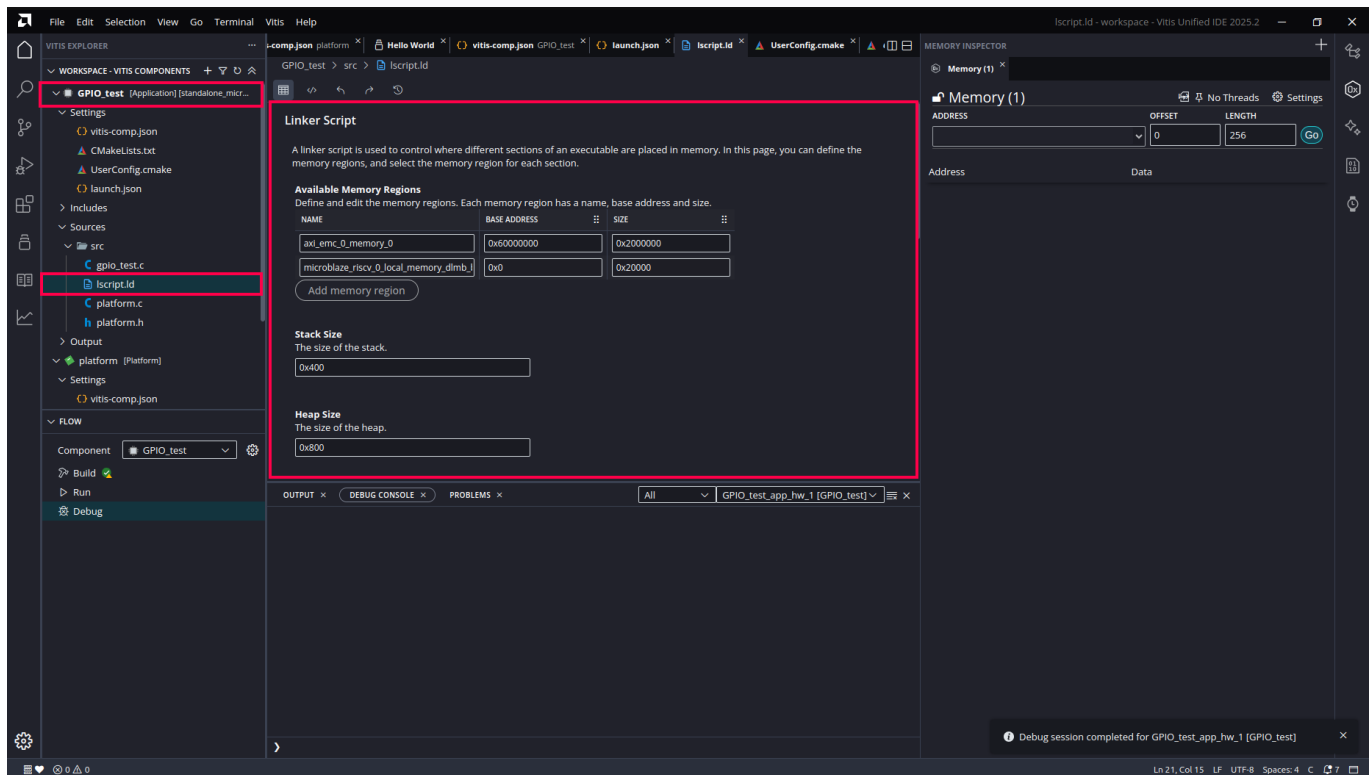

## 5.2 Section to Memory Region Mapping

Verify the section-to-region mapping: everything (`.text`, `.data`, `.bss`, `.heap`, ...) in `sram`, except `.stack` in `dtcm` and `.itcm.text` in `itcm`.

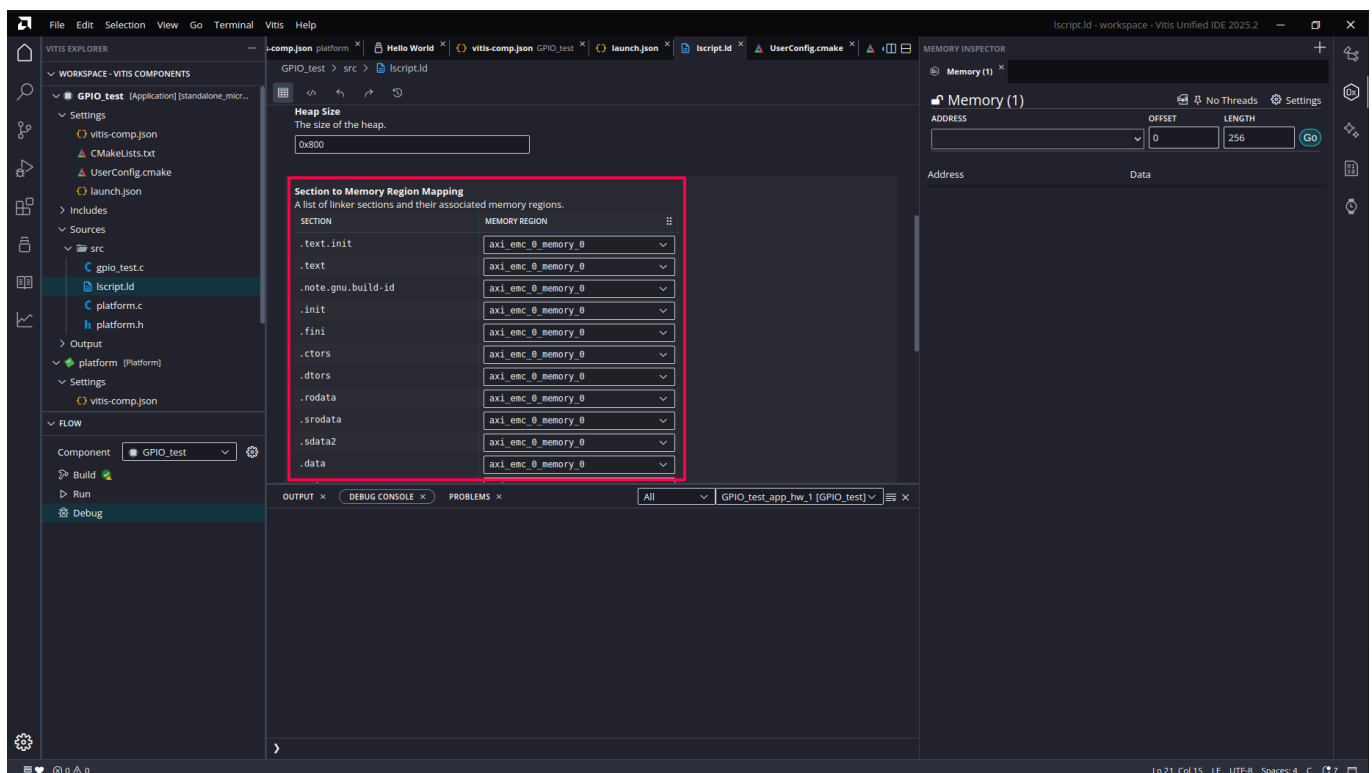


**Note:** the Vitis-generated default linker script places everything in the 128 KB BRAM — fine for a quick Hello World over JTAG, but small, and the layout collides with the bootloader flow. The course template's `lscript.ld` (already copied in §4.1) fixes this: code/data in 512 KB SRAM, stack in DTCM, ITCM\_FUNC / DTCM\_DATA support — and the same ELF then also works with `upload.py`. See the [Standalone Boot Mode guide](#) §3. Use this GUI page to *view* the regions or resize stack/heap — don't let it regenerate the script (that would discard the template's ITCM/DTCM layout).

## 6. Configure Platform BSP

Open the platform's **Configuration for Os: standalone** settings page and verify the following key parameters:

- **stdin** and **stdout**: set both to `uart_USB`. The default may be `uart_1` (the DIP-pin UART) — with that setting `xil_printf` output never reaches your USB terminal. (Platforms created by `tools/vitis_new_app.py` already have this preset.)
- Adjust other BSP settings as needed

The project-wide serial convention is **115200 8N1**. The course template needs nothing here — its `mcu_init()` already sets 115200. **Only if** you kept the stock `helloworld.c` (which prints at whatever rate the UART was last set to), add `XUartNs550_SetBaud(XPAR_UART_USB_BASEADDR, XPAR_XUARTNS550_0_CLOCK_FREQ, 115200);` at the top of its `main()`.

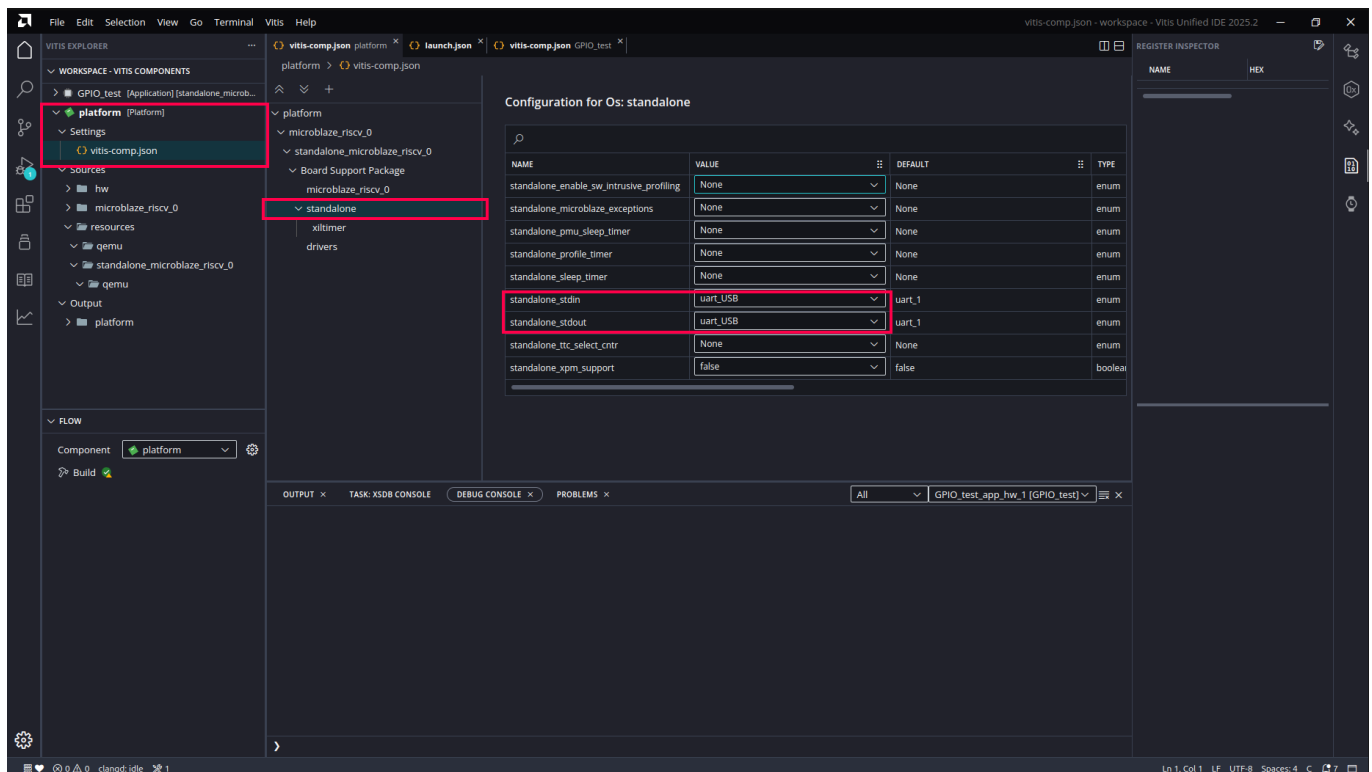


## 7. Build

### 7.1 Build the Platform

In the **FLOW** panel at the bottom-left, select the **platform** component and click **Build**.

Wait for the build to complete — confirm the log shows `Platform Build Finished Successfully`.

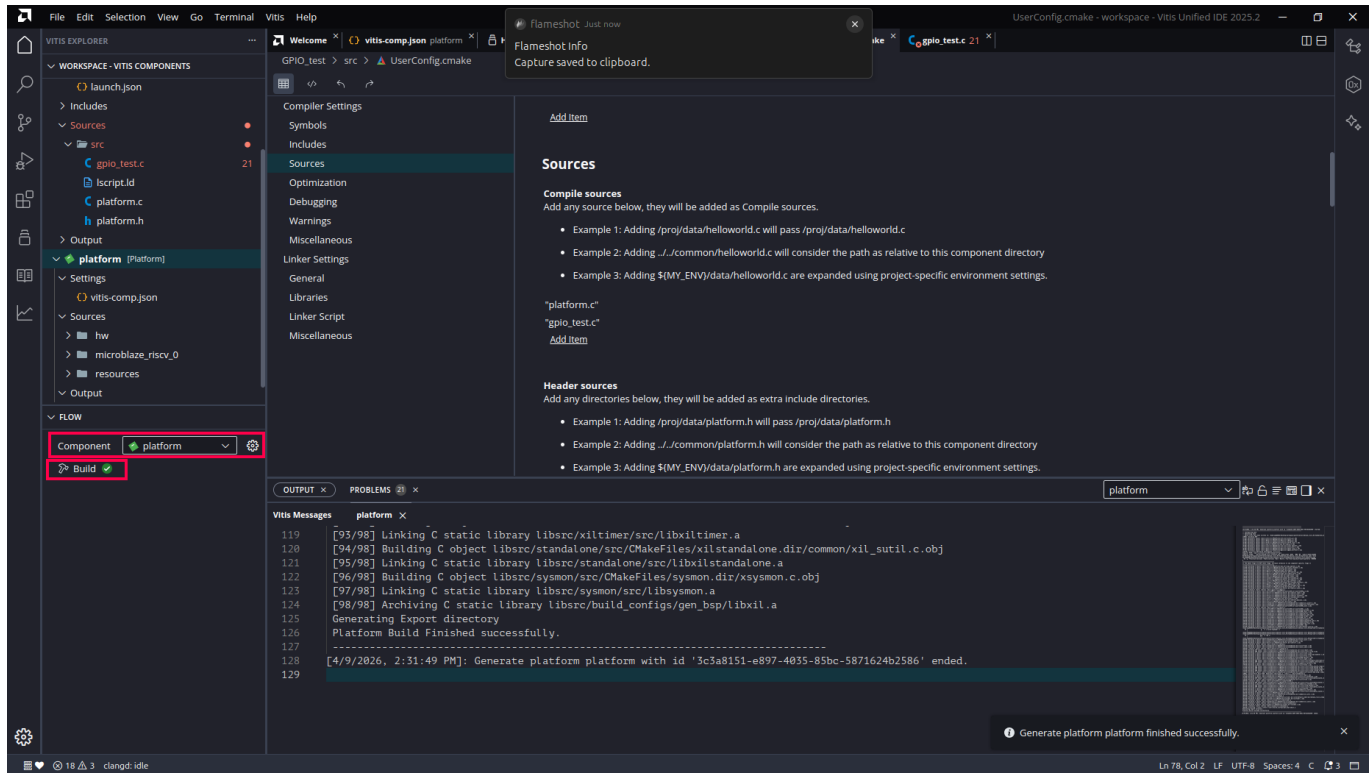


## 7.2 Build the Application

Switch to the application component (e.g. `GPIO_test`) and click **Build**.

Verify the build succeeds and produces the `.elf` file at `<workspace>/GPIO_test/build/GPIO_test.elf`.

**Note:** During the build, Vitis automatically links in `boot.S` and `crt.o` from the standalone BSP. You do not need to provide them manually. - `boot.S` — the first code that runs after reset. It zeros all general-purpose registers (x0–x31), initializes the stack pointer, sets up exception/interrupt vectors, and jumps to the C runtime entry point. - `crt.o` (C Runtime) — runs before `main()`. It zeros the BSS segment (uninitialized global variables) and then calls `main()`.

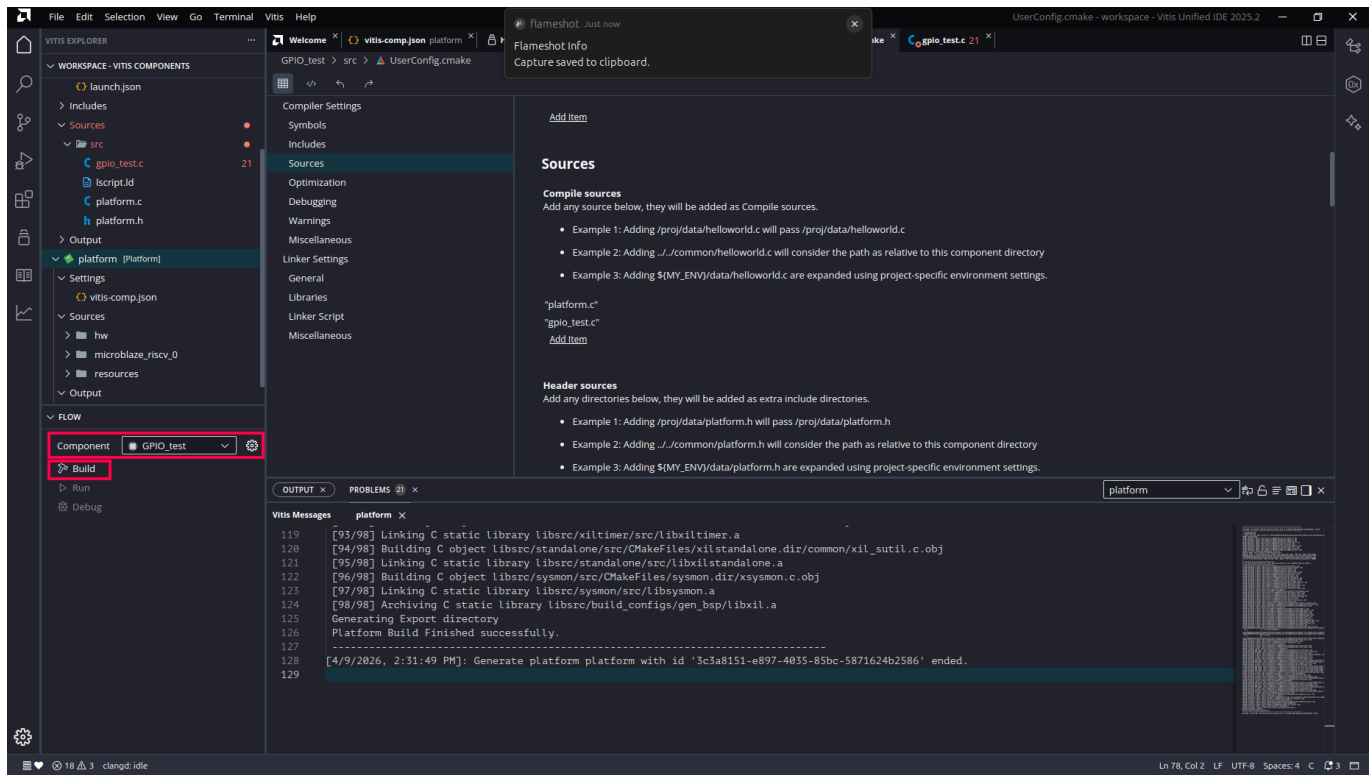

## 8. Run and Debug over JTAG


### 8.1 Run the Application

Before debugging, you can first run the application to verify it works correctly. In the **FLOW** panel, click **Run**.

Vitis will automatically: 1. Download the bitstream to the FPGA via JTAG 2. Load the `.elf` into the MicroBlaze RISC-V processor 3. Execute the program from start to finish


✓ **Checkpoint** — open a 115200-baud terminal **before** clicking Run. The board shows up as two serial ports; the UART is usually the higher-numbered (e.g. `/dev/ttyUSB1`) — `python3 -m serial.tools.miniterm /dev/ttyUSB1 115200` works anywhere pyserial is installed (Ctrl-] quits). Or skip the terminal and use `python3 tools/jtag_run.py <elf>`, which loads, runs, and tails the UART in one go. The template prints its memory tour **once at boot** — missed it? just click Run again. The two board LEDs blinking is an independent sign the program is alive. If the tour's addresses show SRAM/ITCM/DTCM as in \$0, everything — linker script, BSP, UART — is wired correctly.



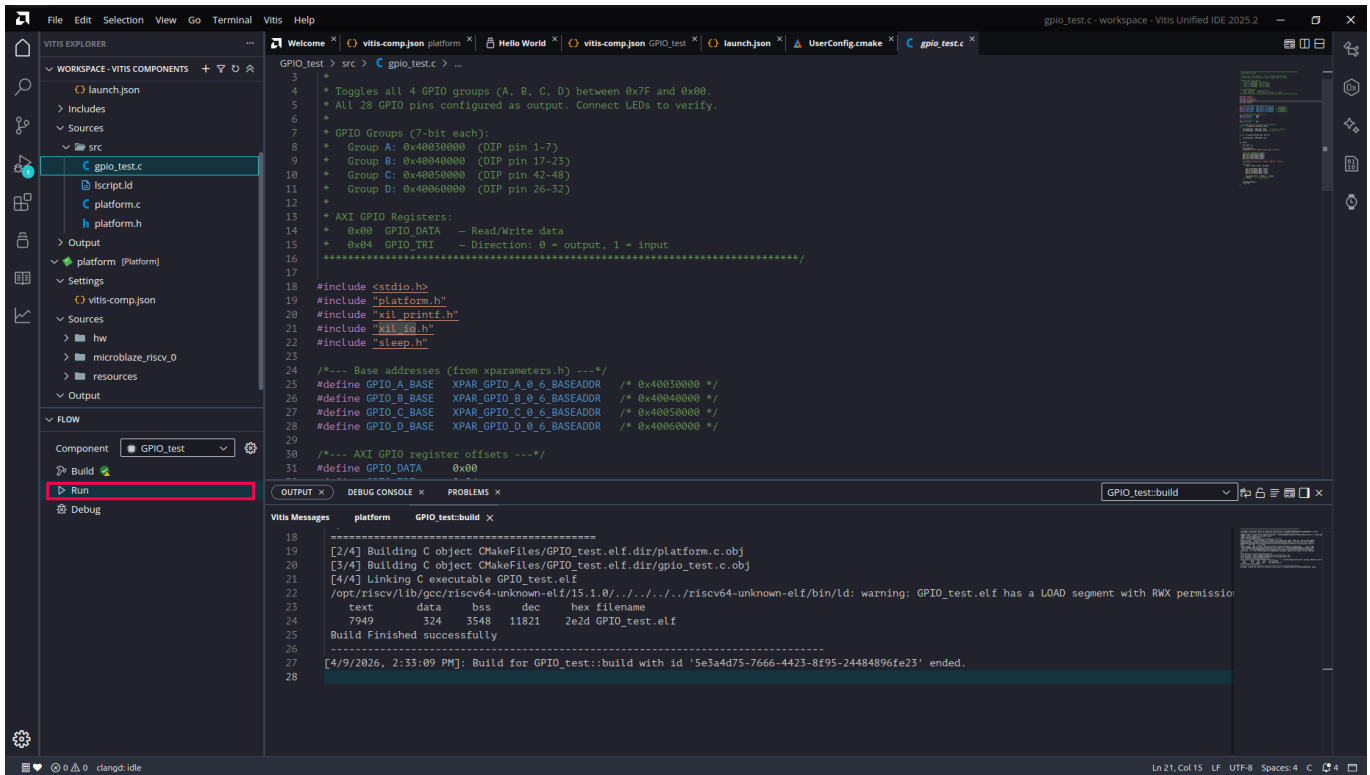

## 8.2 Start a Debug Session

Once the application is verified, click **Debug** in the **FLOW** panel to launch a debug session. This works similarly to GDB — the program is loaded and paused at `main()`, allowing you to inspect and step through the code interactively.

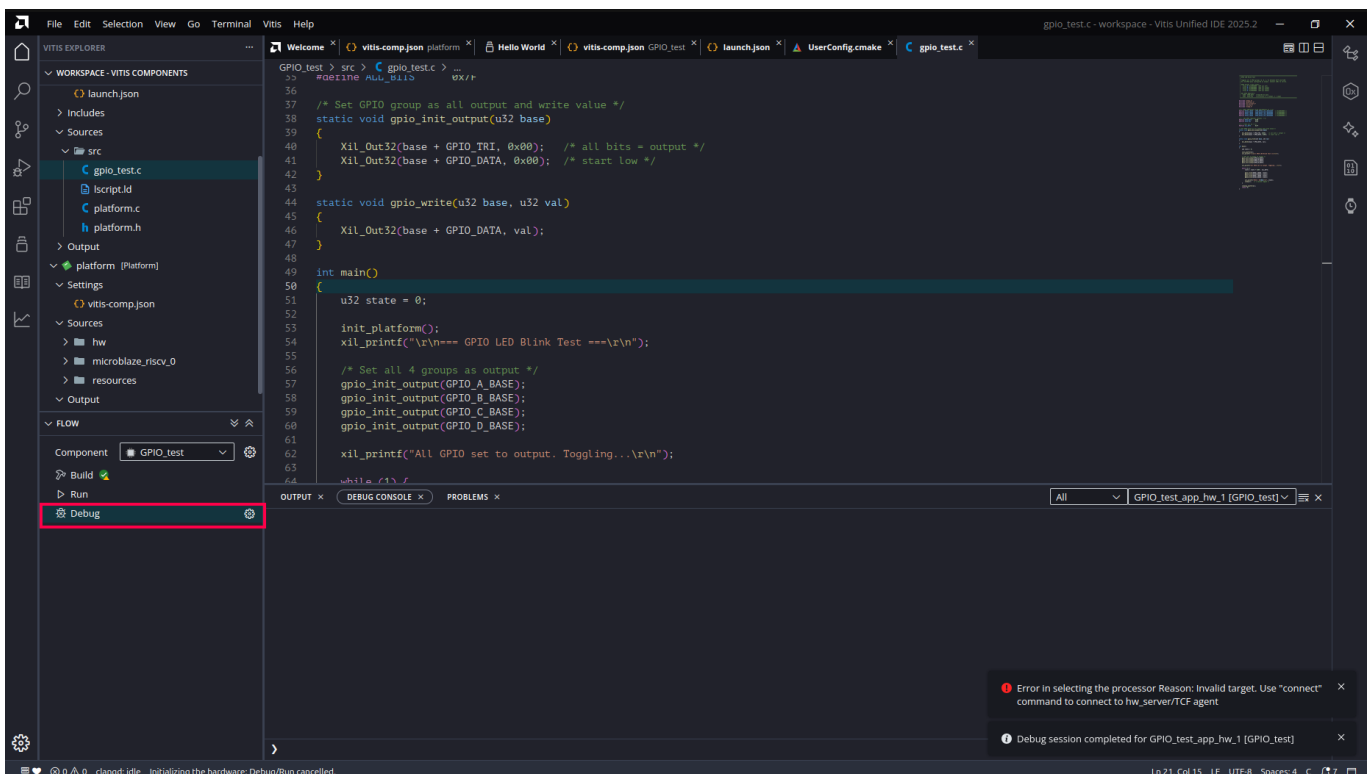


## 8.3 Debug Controls

In the Debug view, the left panel provides:

- **THREADS:** thread information
- **CALL STACK:** call stack trace
- **VARIABLES:** variable inspection
- **WATCH:** watch expressions
- **BREAKPOINTS:** breakpoint management

The toolbar at the top provides **Continue**, **Step Over**, **Step Into**, **Step Out**, and other debug controls.

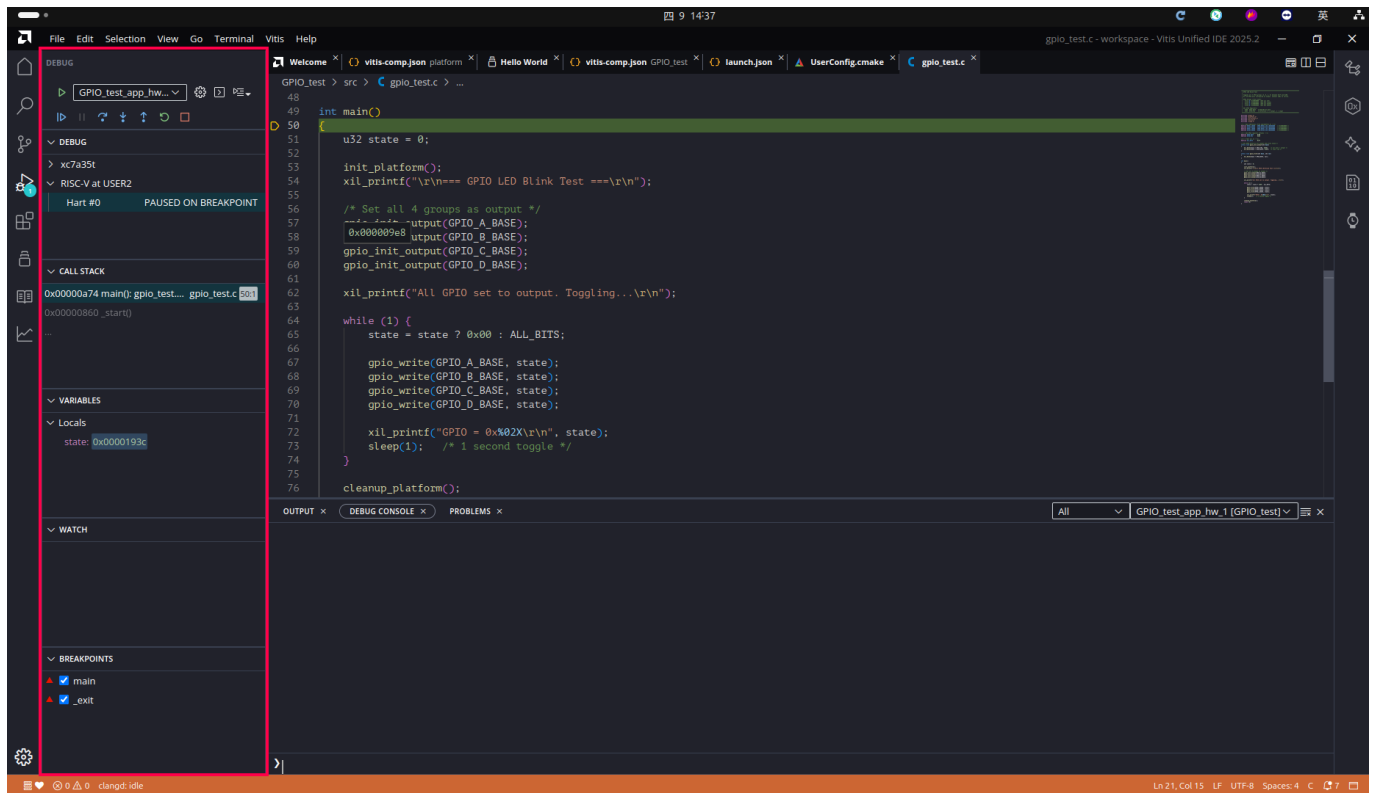


## 8.4 Breakpoints and Stepping

Click in the gutter area next to a line number to set a breakpoint. Use Step Over / Step Into to step through the code line by line.

# 9. Advanced Inspection Tools

## 9.1 Open the Register Inspector


From the menu, select **View > Register Inspector** to open the register inspection panel.

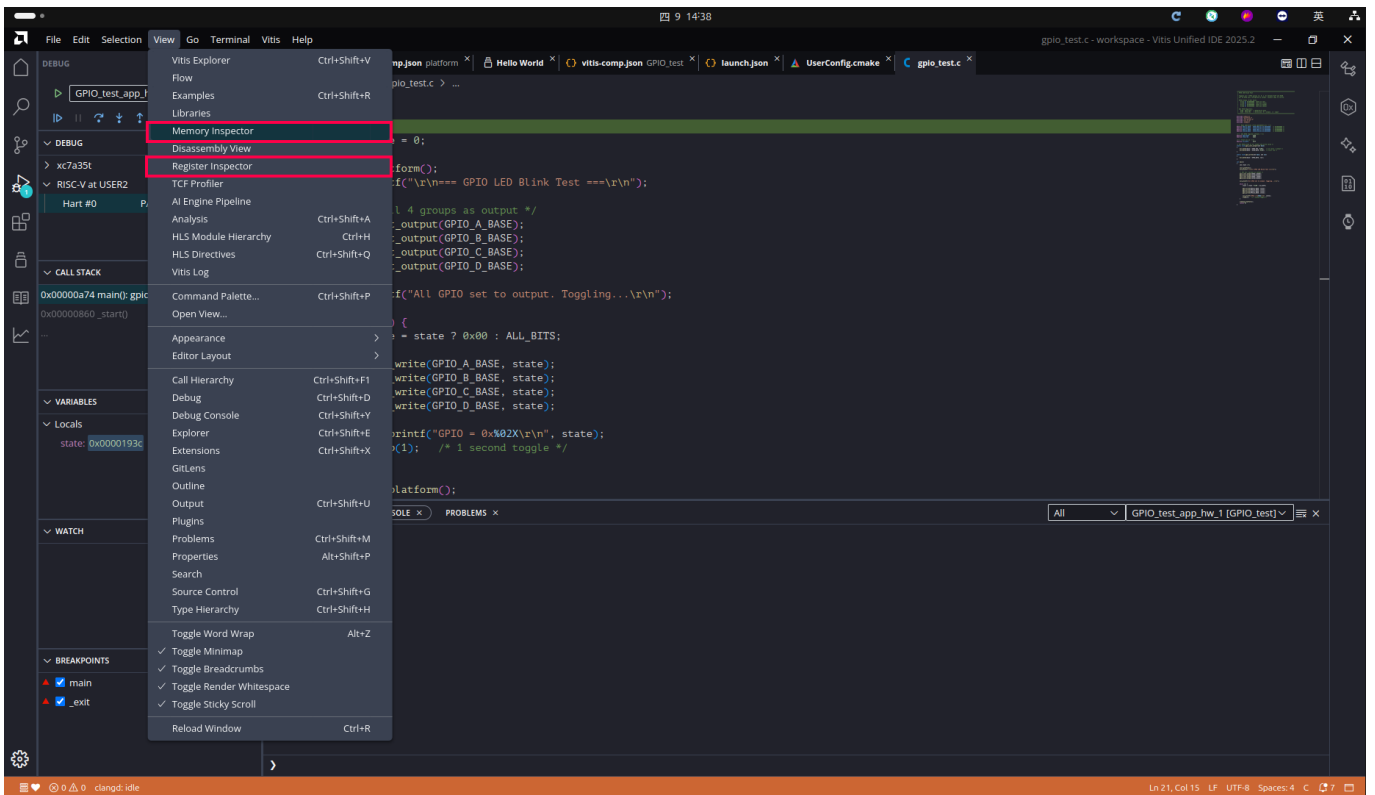

## 9.2 View Register Contents

The Register Inspector displays all processor registers and their current values, including:

- General-purpose registers (x0 – x31)
- Program Counter (PC)
- HEX values and descriptions for each register

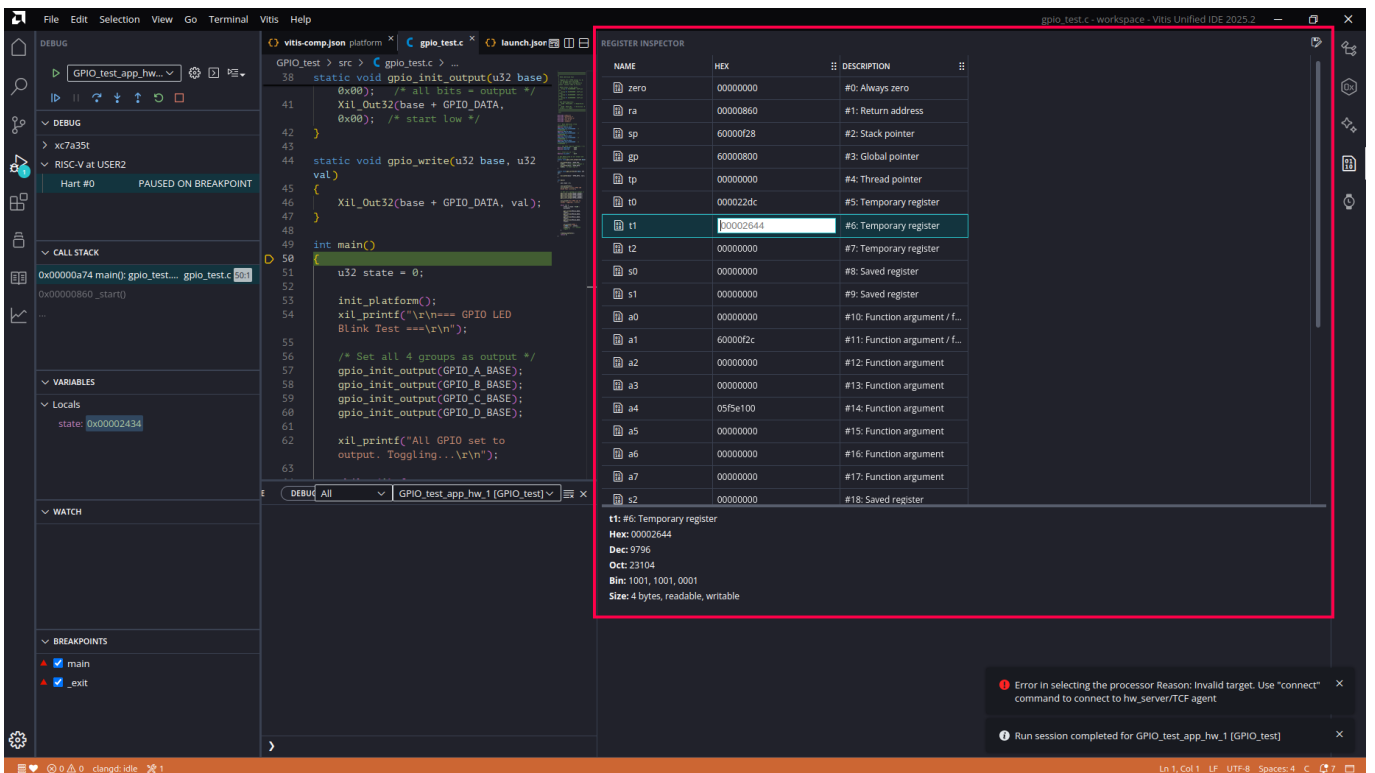

## 9.3 View Memory Contents

Open the **Memory Inspector** panel to:

- Enter a memory address (e.g. `0x60000000`) to inspect a specific memory region
- View data in hexadecimal format
- Monitor memory changes in real time

