
# Your desk. Your little studio.

An optional OBS Studio recording page for the Ulanzi D200H. Twelve clear actions, one take at a time.

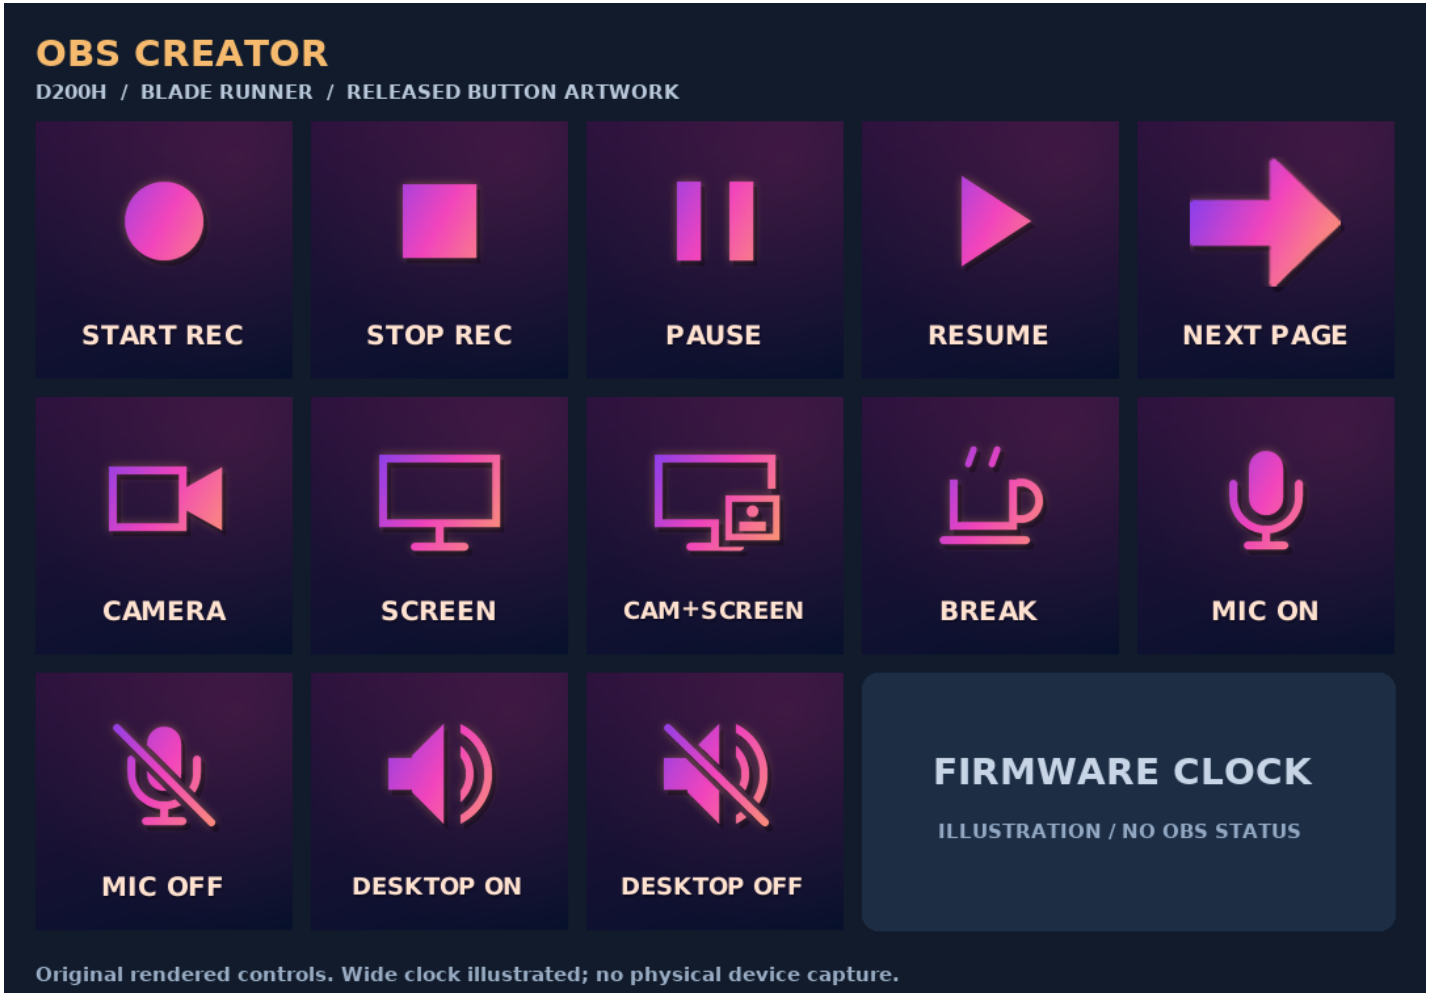


NEXT PAGE stays in place. The wide display keeps your configured clock or status panel.

## I built this for solo videos.

Tutorials, screen demos and talking-head videos, without reaching for OBS every time.

### 01 / Control the take

Start, stop, pause and resume have separate buttons. A second START does not become STOP.

### 02 / Tell the story

CAMERA, SCREEN, CAM+SCREEN and BREAK switch to four scenes you create in OBS.

### 03 / Own the sound

MIC and DESKTOP each have ON/OFF buttons. Desktop controls affect OBS audio, not Windows volume.

### Always check the OBS meters.

The dock sends hotkeys; it receives no recording, mute or scene status from OBS.

# Set it up once.

Windows workflow. Fresh UlanziDeck settings already include the OBS Creator page.

## 1 Find the dock page

If OBS Creator is already in Configure, skip the command below. If it is missing, close UlanziDeck and run this from the source folder, using your actual settings path:

```
pwsh -NoProfile -File
  .\presets\obs-creator\install-preset.ps1
  -SettingsPath 'C:\UlanziDeck\settings.json'
Type as ONE line; the path above is an example.
```

For an existing setup without OBS Creator, the installer adds the page before Themes and makes a backup. Other pages and shortcuts stay in place. Start the controller with that settings file.

## 2 Keep OBS controls within reach

In UlanziDeck Configure, turn automatic page switching OFF, then Save + Restart. Application detection may stay ON. Press NEXT PAGE until OBS Creator appears.

In OBS Settings > Advanced > Hotkeys, choose Never disable hotkeys. Keep Studio Mode OFF so scene keys go directly to the recorded output.

## 3 Build four OBS scenes

### 01 CAMERA

Video Capture Device, filling the frame.

### 02 SCREEN

Window Capture for your demo, or Display Capture when needed.

### 03 CAM+SCREEN

Screen plus the same camera source in a corner. Use Add Existing.

### 04 BREAK

A plain Color Source and Text: Back in a moment.

Select one microphone and one desktop-audio device in Settings > Audio. Reuse them across scenes; avoid capturing the same device twice.

**BREAK changes the picture. Press MIC OFF separately.**

# Bind the keys. Then press REC.

In OBS Settings > Hotkeys, assign these combinations manually. They are custom bindings, not OBS defaults.

**Every shortcut starts with CTRL + ALT + SHIFT**

| BUTTON | KEY | OBS FIELD |
|---|---|---|
| **START REC** | 1 | Start Recording |
| **STOP REC** | 2 | Stop Recording |
| **PAUSE** | 3 | Pause Recording |
| **RESUME** | 4 | Unpause Recording |
| **CAMERA** | 5 | 01 CAMERA > Switch to scene |
| **SCREEN** | 6 | 02 SCREEN > Switch to scene |
| **CAM+SCREEN** | 7 | 03 CAM+SCREEN > Switch to scene |
| **BREAK** | 8 | 04 BREAK > Switch to scene |
| **MIC ON** | 9 | Mic/Aux > Unmute |
| **MIC OFF** | 0 | Mic/Aux > Mute |
| **DESKTOP ON** | F5 | Desktop Audio > Unmute |
| **DESKTOP OFF** | F7 | Desktop Audio > Mute |

Use your actual audio-source names. Remove conflicting assignments. Keep start/stop and mute/unmute on separate hotkeys.

## A practical starting point

Run Tools > Auto-Configuration Wizard for recording. For tutorials, try 1920 x 1080 at 30 fps, Simple output, High Quality and hardware encoding if available. Adjust for your computer.

Record as MKV. When you need MP4, use File > Remux Recordings. For PAUSE, avoid Same as stream (or Use stream encoder in Advanced output).

## Your first 60 seconds

MIC ON > CAMERA > START REC. Speak, switch to SCREEN, then CAM+SCREEN. Try PAUSE and RESUME. Press STOP REC and wait for OBS to finish. Play the file back and check picture and sound.

If a key does nothing: check its OBS binding, hotkey focus setting and dock page. Keep both apps at the same privilege level. Read recording and mute status in OBS.

**Official references / checked 14 Oct 2026**

- Quick start
- Recording / remux
- Hotkey labels
- Recording presets
- Scene workflow