
Your desk. Your little studio.

An optional OBS Studio recording page for the Ulanzi D200H. Twelve clear actions, one take at a time.

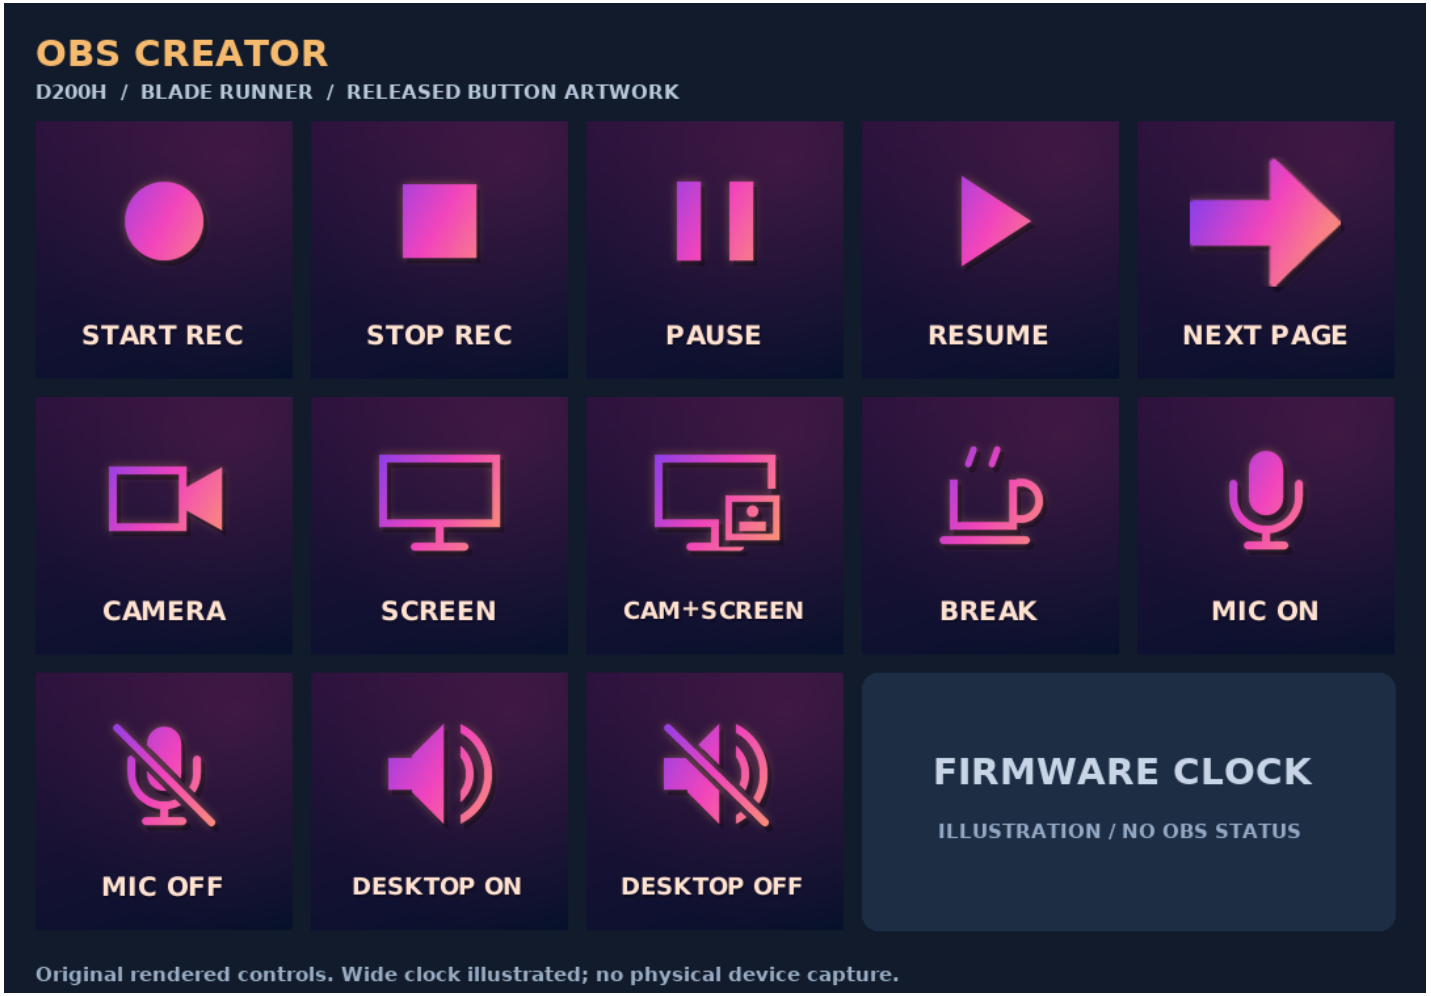

NEXT PAGE stays in place. The wide display keeps your configured clock or status panel.

I built this for solo videos.

Tutorials, screen demos and talking-head videos, without reaching for OBS every time.

01 / Control the take

Start, stop, pause and resume have separate buttons. A second START does not become STOP.

02 / Tell the story

CAMERA, SCREEN, CAM+SCREEN and BREAK switch to four scenes you create in OBS.

03 / Own the sound

MIC and DESKTOP each have ON/OFF buttons. Desktop controls affect OBS audio, not Windows volume.

Always check the OBS meters.

The dock sends hotkeys; it receives no recording, mute or scene status from OBS.

Set it up once.

Windows workflow. Use a build that includes the obs icon family; older releases reject this preset.

1 Add the dock page

Close UlanziDock from its tray menu. From the repository root, run this PowerShell 7 command, replacing the settings path with the file used by your controller:

```
pwsh -NoProfile -File
  .\presets\obs-creator\install-preset.ps1
  -SettingsPath 'C:\UlanziDock\settings.json'
Type as ONE line; the path above is an example.
```

The installer adds OBS Creator before Themes and creates a backup. It keeps your other pages, shortcuts and theme. Start the updated controller with the same settings file.

2 Keep OBS controls within reach

In UlanziDock Configure, turn automatic page switching OFF, then Save + Restart. Application detection may stay ON. Press NEXT PAGE until OBS Creator appears.

In OBS Settings > Advanced > Hotkeys, choose Never disable hotkeys. Keep Studio Mode OFF so scene keys go directly to the recorded output.

3 Build four OBS scenes

01 CAMERA

Video Capture Device, filling the frame.

02 SCREEN

Window Capture for your demo, or Display Capture when needed.

03 CAM+SCREEN

Screen plus the same camera source in a corner. Use Add Existing.

04 BREAK

A plain Color Source and Text: Back in a moment.

Select one microphone and one desktop-audio device in Settings > Audio. Reuse them across scenes; avoid capturing the same device twice.

BREAK changes the picture. Press MIC OFF separately.

Bind the keys. Then press REC.

In OBS Settings > Hotkeys, assign these combinations manually. They are custom bindings, not OBS defaults.

Every shortcut starts with CTRL + ALT + SHIFT

BUTTON	KEY	OBS FIELD
START REC	1	Start Recording
STOP REC	2	Stop Recording
PAUSE	3	Pause Recording
RESUME	4	Unpause Recording
CAMERA	5	01 CAMERA > Switch to scene
SCREEN	6	02 SCREEN > Switch to scene
CAM+SCREEN	7	03 CAM+SCREEN > Switch to scene
BREAK	8	04 BREAK > Switch to scene
MIC ON	9	Mic/Aux > Unmute
MIC OFF	0	Mic/Aux > Mute
DESKTOP ON	F5	Desktop Audio > Unmute
DESKTOP OFF	F7	Desktop Audio > Mute

Use your actual audio-source names. Remove conflicting assignments. Keep start/stop and mute/unmute on separate hotkeys.

A practical starting point

Run Tools > Auto-Configuration Wizard for recording. For tutorials, try 1920 x 1080 at 30 fps, Simple output, High Quality and hardware encoding if available. Adjust for your computer.

Record as MKV. When you need MP4, use File > Remux Recordings. For PAUSE, avoid Same as stream (or Use stream encoder in Advanced output).

Your first 60 seconds

MIC ON > CAMERA > START REC. Speak, switch to SCREEN, then CAM+SCREEN. Try PAUSE and RESUME. Press STOP REC and wait for OBS to finish. Play the file back and check picture and sound.

If a key does nothing: check its OBS binding, hotkey focus setting and dock page. Keep both apps at the same privilege level. Read recording and mute status in OBS.

Official references / checked 14 Oct 2026

- Quick start
- Recording / remux
- Hotkey labels
- Recording presets
- Scene workflow