

MAKER FAIRE ROME 2026

Operator Manual

Setting up and running the e-puck2 swarm robot stand: six robots that visitors drive from their own phones.

6 robots

1 router

1 laptop

about 10 minutes to set up

IN THIS MANUAL

- | | | |
|----------|--|--------|
| 1 | The kit and the network | page 2 |
| 2 | Setting up, steps 1-4 | page 3 |
| 3 | All robots, during the fair, end of day | page 4 |
| 4 | Troubleshooting and quick reference | page 5 |
| 5 | Robot QR codes | page 6 |



All files on GitHub

Robot software, poster, QR labels and troubleshooting notes.
Scan the code or open:

github.com/unamurroboticslab-hue/maker-faire-rome-2026

1 The kit and the network



WiFi router

Pre-configured. Plug in and switch on. No internet needed.



6 e-puck2 robots

Software already installed in /home/pi/blocky. Numbered labels on top.



Your laptop

Any laptop with a terminal. Used to start each robot's server.



Robot WiFi

NETWORK

RoboticsLab

PASSWORD

EpuckRobot

Robots and addresses

ROBOT	IP ADDRESS	CONNECT (LAPTOP)	REMOTE CONTROL (PHONE)
#1	192.168.0.111	ssh pi@192.168.0.111	.111:5000/mobile.html
#2	192.168.0.113	ssh pi@192.168.0.113	.113:5000/mobile.html
#3	192.168.0.114	ssh pi@192.168.0.114	.114:5000/mobile.html
#4	192.168.0.115	ssh pi@192.168.0.115	.115:5000/mobile.html
#5	192.168.0.121	ssh pi@192.168.0.121	.121:5000/mobile.html
#6	192.168.0.118	ssh pi@192.168.0.118	.118:5000/mobile.html

Full phone address: <http://192.168.0.1xx:5000/mobile.html>. Block Coder runs at <http://<IP>:5000/>



Never factory-reset the router. The robot addresses are reserved in it. After a reset the addresses change and none of the QR codes will work.

2 Setting up

Do steps 1-4 for the first robot. Page 4 covers the other five.

1 Switch on the router

Plug it in and wait about **30 seconds**. Then connect your laptop to the WiFi **RoboticsLab** (password **EpuckRobot**). The laptop and all robots must be on this network.

2 Switch on a robot

Flip the power switch on the side. Wait **30-40 seconds** for it to boot and join the WiFi. The LEDs flicker while it boots; wait until they settle.

3 Connect to the robot from your laptop

Open a terminal (Linux, Mac) or PowerShell (Windows) and type, with the robot's address from page 2:

```
$ ssh pi@192.168.0.111
```

PASSWORD **11110000**

same for all robots

Nothing appears on screen while you type the password; that's normal. The first time, SSH asks *"Are you sure you want to continue connecting?"* Type **yes** and press Enter.

4 Start the robot's server

Once connected, type these two commands, pressing Enter after each:

```
pi@epuck2:~ $ cd /home/pi/blocky  
pi@epuck2:~/blocky $ python3 server.py
```



The server prints its startup messages and keeps running: the robot is ready.
Leave this terminal window open. Closing it stops the robot.

3 All robots, the fair, end of day

5 Repeat for every robot

Open a **new terminal window** for each robot and do steps 2-4 with its address. At the end you have six windows, each running `python3 server.py`. Keep the laptop plugged in and stop it from going to sleep.

6 Test each robot with your phone

Join **RoboticsLab** on your phone, scan each robot's QR code on the poster and drive it a little. If one doesn't respond, see page 5 before visitors arrive.

During the fair

VISITOR STEP 1

Scan the WiFi code on the poster to join **RoboticsLab**.

VISITOR STEP 2

Scan the code of the robot with the matching number.

IF IT WON'T OPEN

Phone says "no internet": choose **Stay connected**, turn off mobile data.

- One visitor per robot works best. Several phones on the same robot will fight over it.
- Check the robots' batteries every hour or so. A robot that slows down or stops answering usually needs charging.
- Keep the six terminal windows open on the laptop all day.

End of the day

Shut each robot down properly before switching it off, so its memory card isn't damaged. In each robot's terminal window:

```
# stop the server Ctrl + C
pi@puck2:~/blocky $ sudo shutdown now
```

Wait until the robot's LEDs go out, then flip its switch off. Switch off the router last. Put the robots on charge for the next day.

4 Troubleshooting

PROBLEM	WHAT TO DO
SSH: connection refused, or no route to host	The robot is still booting. Wait 30 s and try again. Check the laptop is on RoboticsLab.
SSH: permission denied	Retype the password 11110000 slowly. Nothing shows while you type.
SSH: "remote host identification has changed"	Run <code>ssh-keygen -R 192.168.0.1xx</code> with the robot's address, then connect again.
"Address already in use" when starting the server	An old server is still running. Run <code>kill -f server.py</code> , then start it again.
Server stopped with an error	Run <code>python3 server.py</code> again in the same window.
Phone: page doesn't open	The phone must be on RoboticsLab. Turn off mobile data. On "no internet", choose Stay connected.
Page opens but the robot doesn't move	Check that robot's terminal window is still running the server. Then check its battery.
Robot never joins the network	Switch it off and on, wait 40 s. Make sure the router from the kit is the one switched on.
Robot files damaged or missing	Copy them back from the GitHub repo: <code>scp -r robot/blocky pi@<IP>:/home/pi/</code>

Quick reference

cut out and keep by the laptop

START A ROBOT

```
ssh pi@192.168.0.1xx
```

```
password 11110000
```

```
cd /home/pi/blocky
```

```
python3 server.py
```

STOP A ROBOT

```
Ctrl + C, then sudo shutdown now
```

WIFI

RoboticsLab · EpuckRobot

ROBOT ADDRESSES

```
#1 .111 #2 .113 #3 .114
```

```
#4 .115 #5 .121 #6 .118
```

all start with 192.168.0.

5 Robot QR codes

Spare codes for testing, or to cut out along the dashed lines and stick on top of each robot. Join the WiFi first, then scan a robot to open its remote control.



1 Join the robot WiFi


Network **RoboticsLab** · Password **EpuckRobot**

No internet on this network. Choose "Stay connected" if the phone asks.

2 Scan a robot

Robot 1

e-puck2

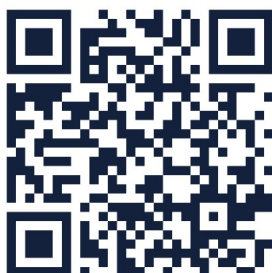

192.168.0.111

Robot 2

e-puck2



192.168.0.113

Robot 3

e-puck2



192.168.0.114

Robot 4

e-puck2



192.168.0.115

Robot 5


e-puck2



192.168.0.121

Robot 6

e-puck2

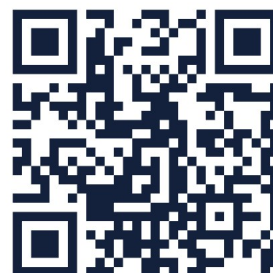

192.168.0.118