


6971

LEGOLAND®


LEGO



120340

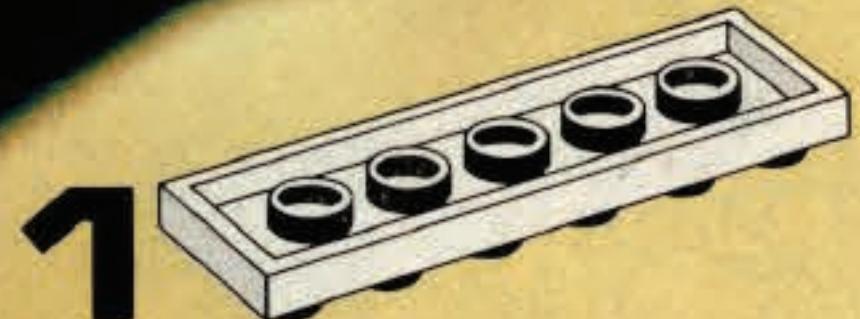

1

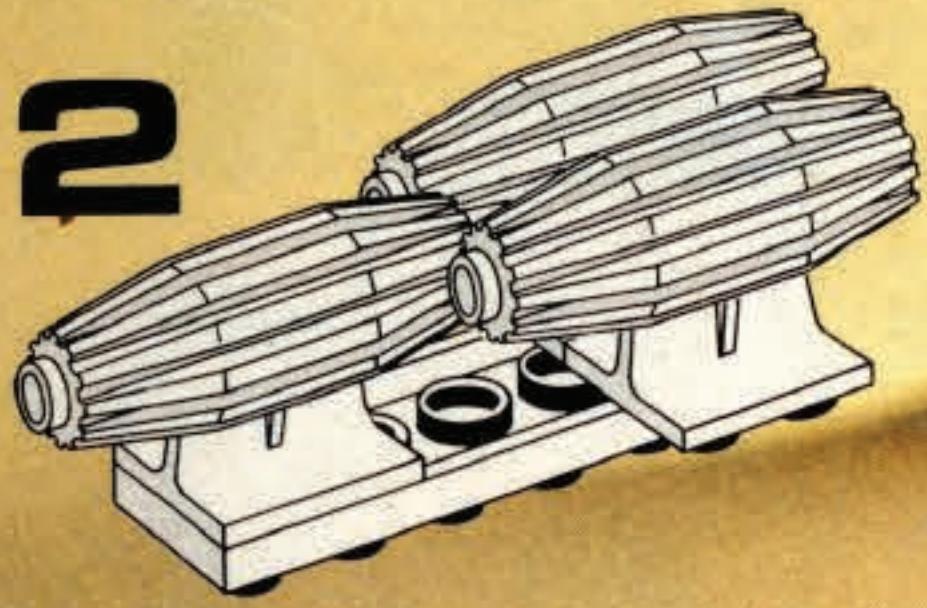



2




4




6

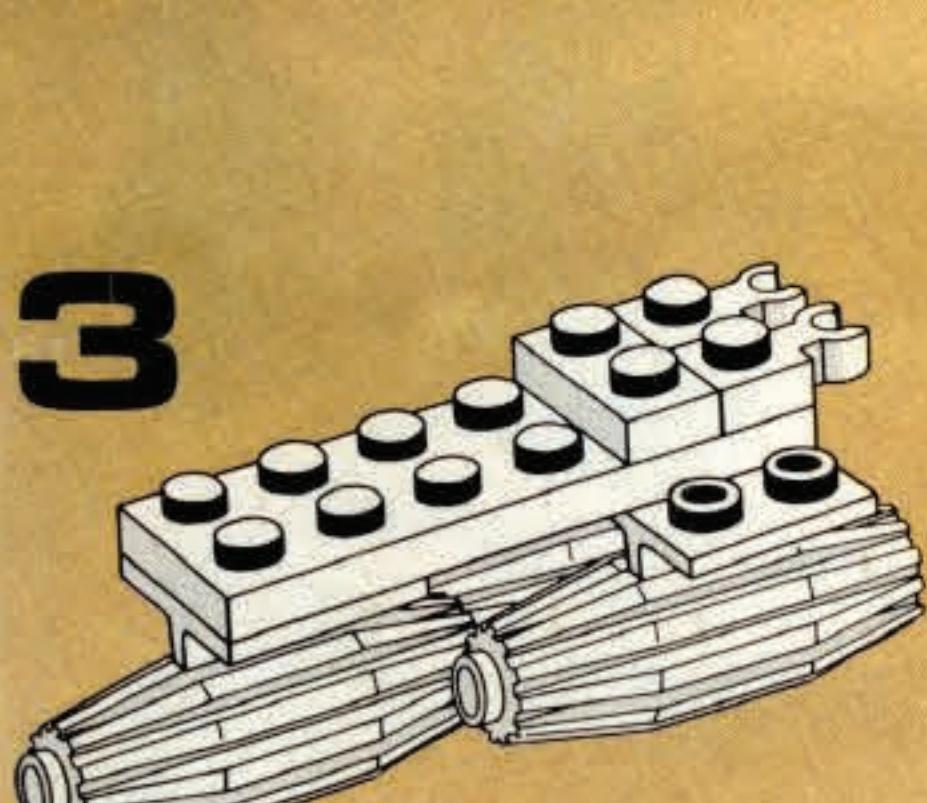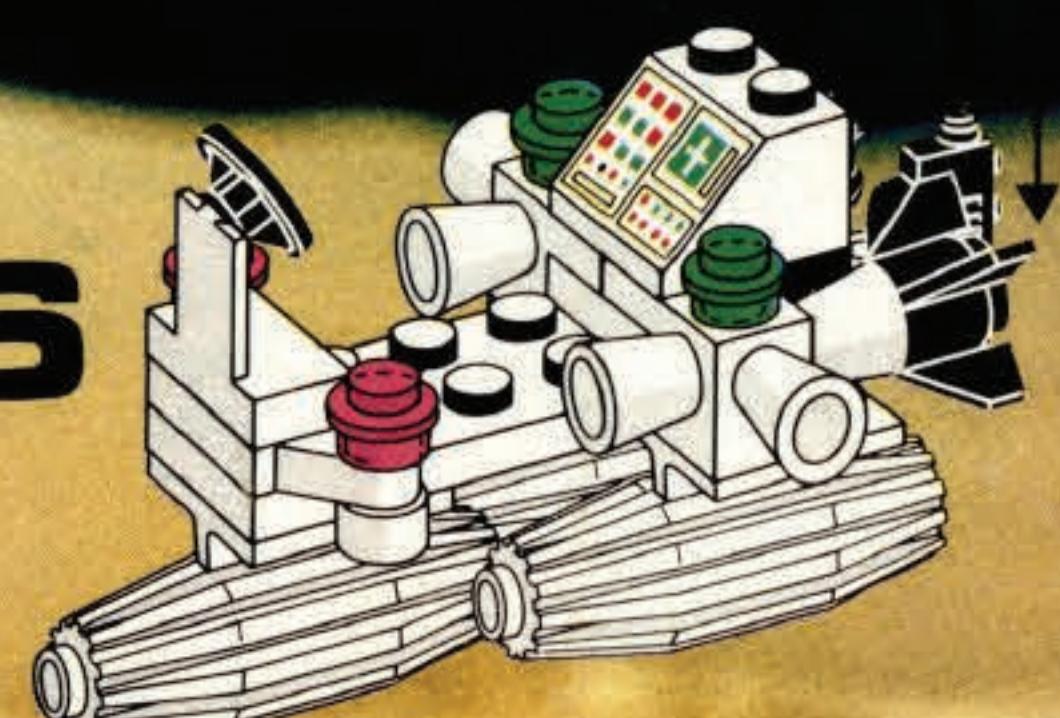

3




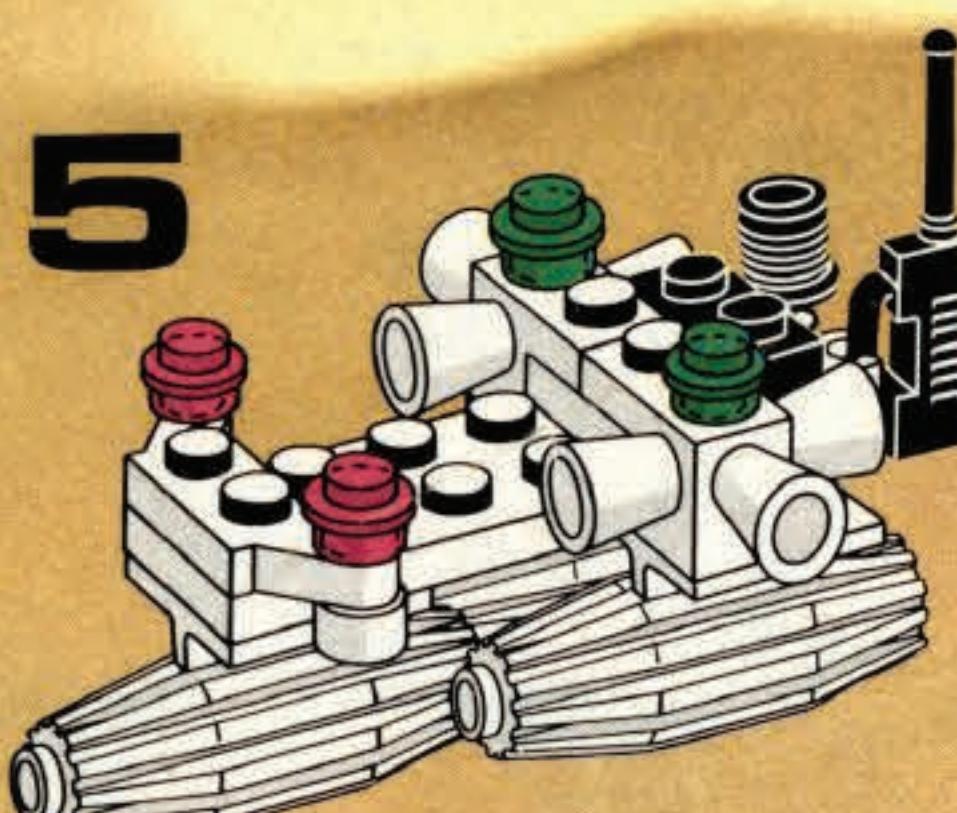


5

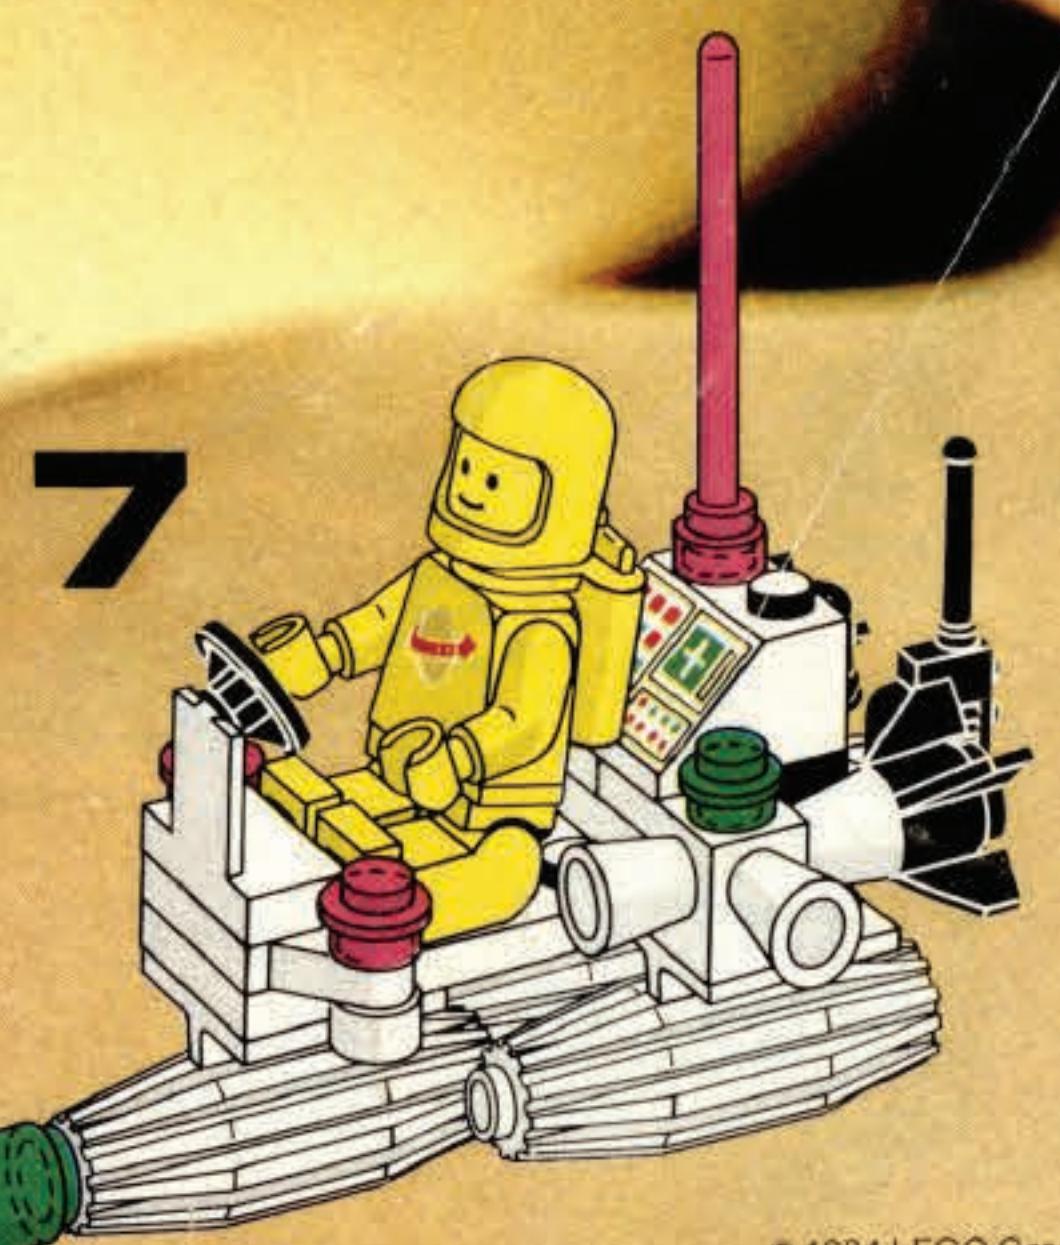


7


© 1984 LEGO Group

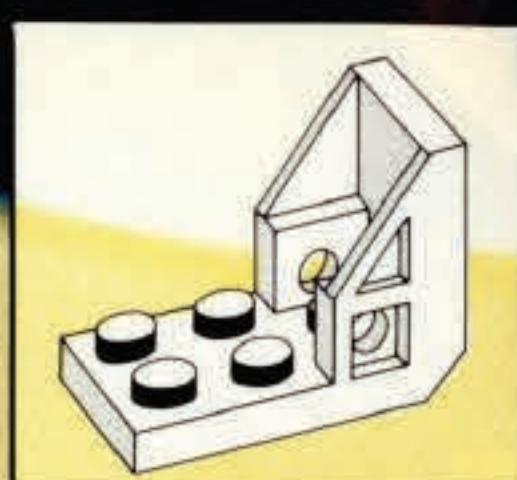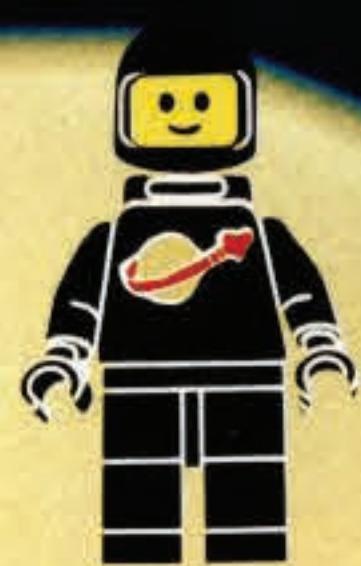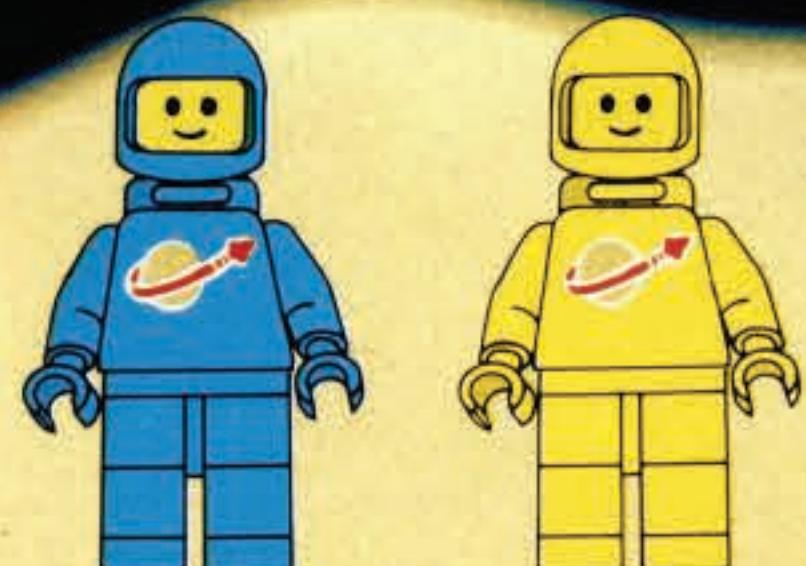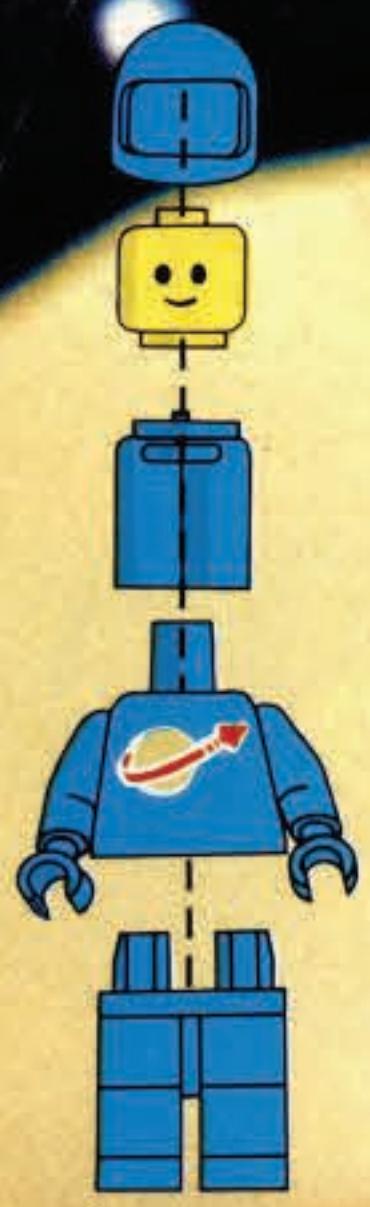


4

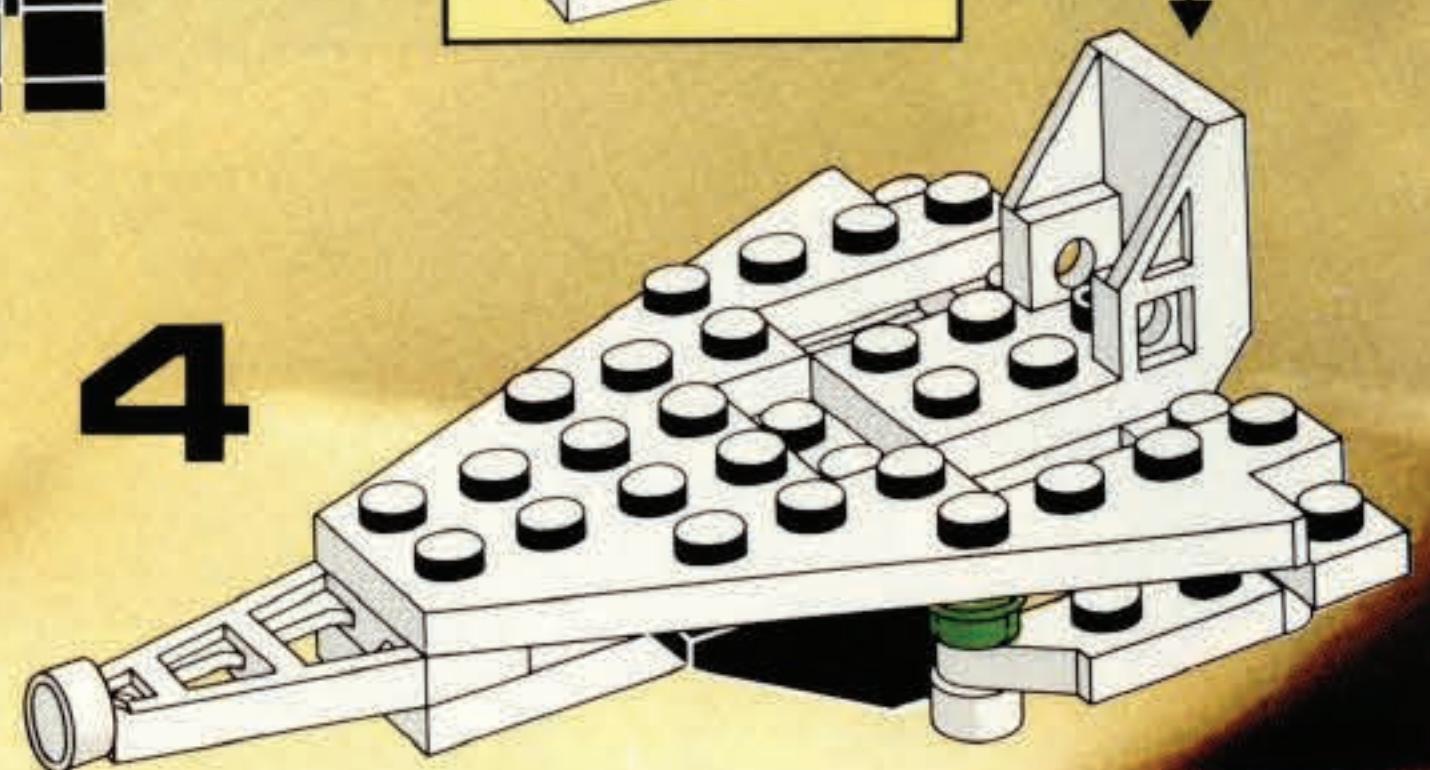


5

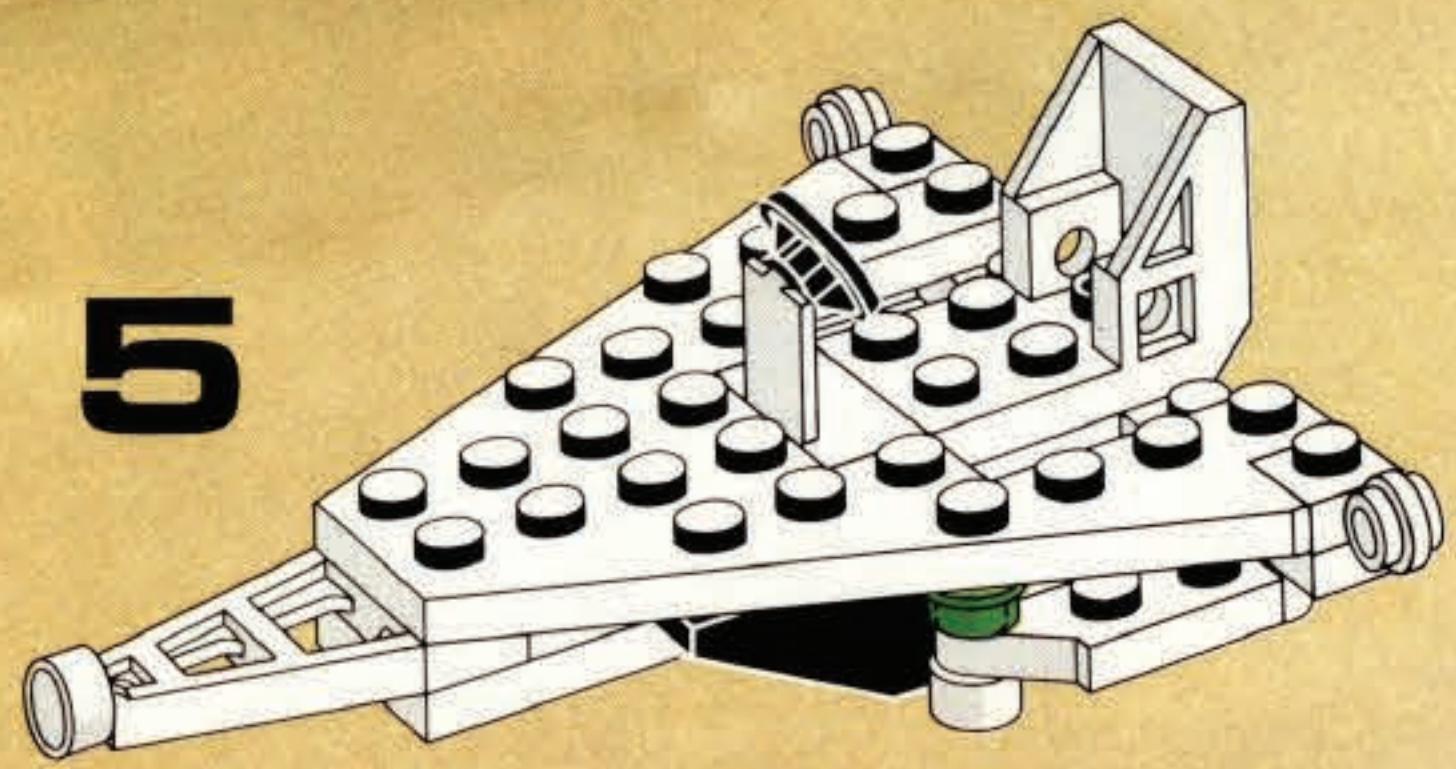


6

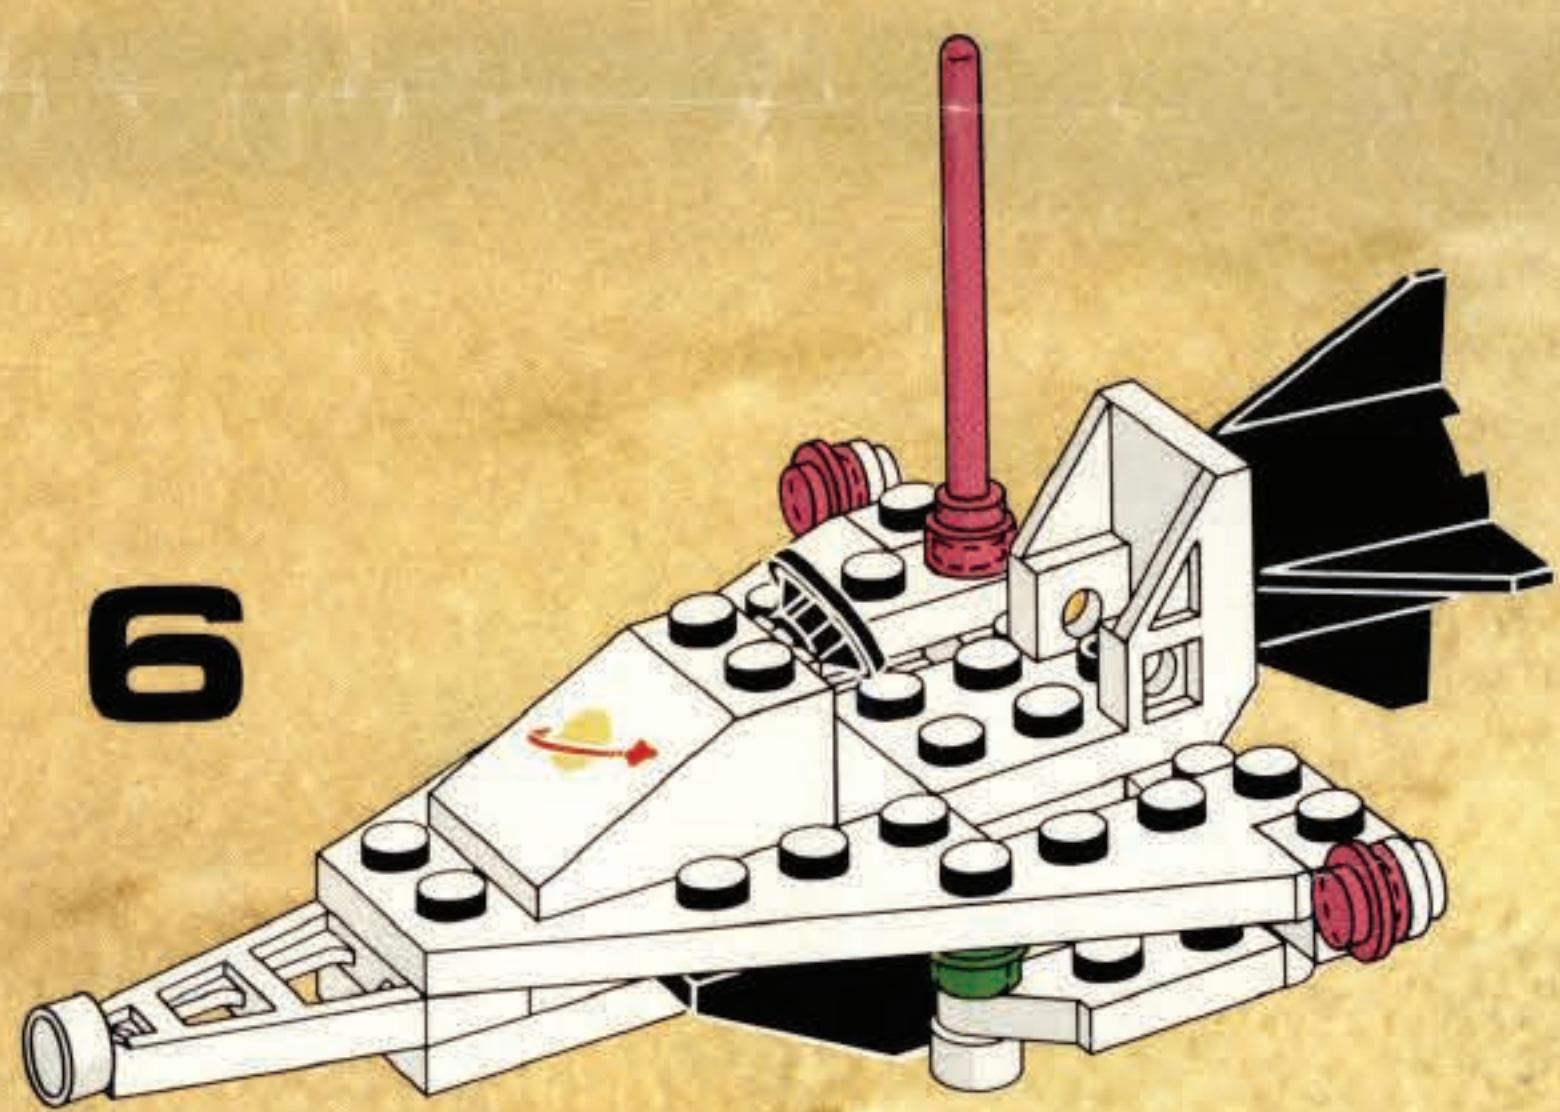


7

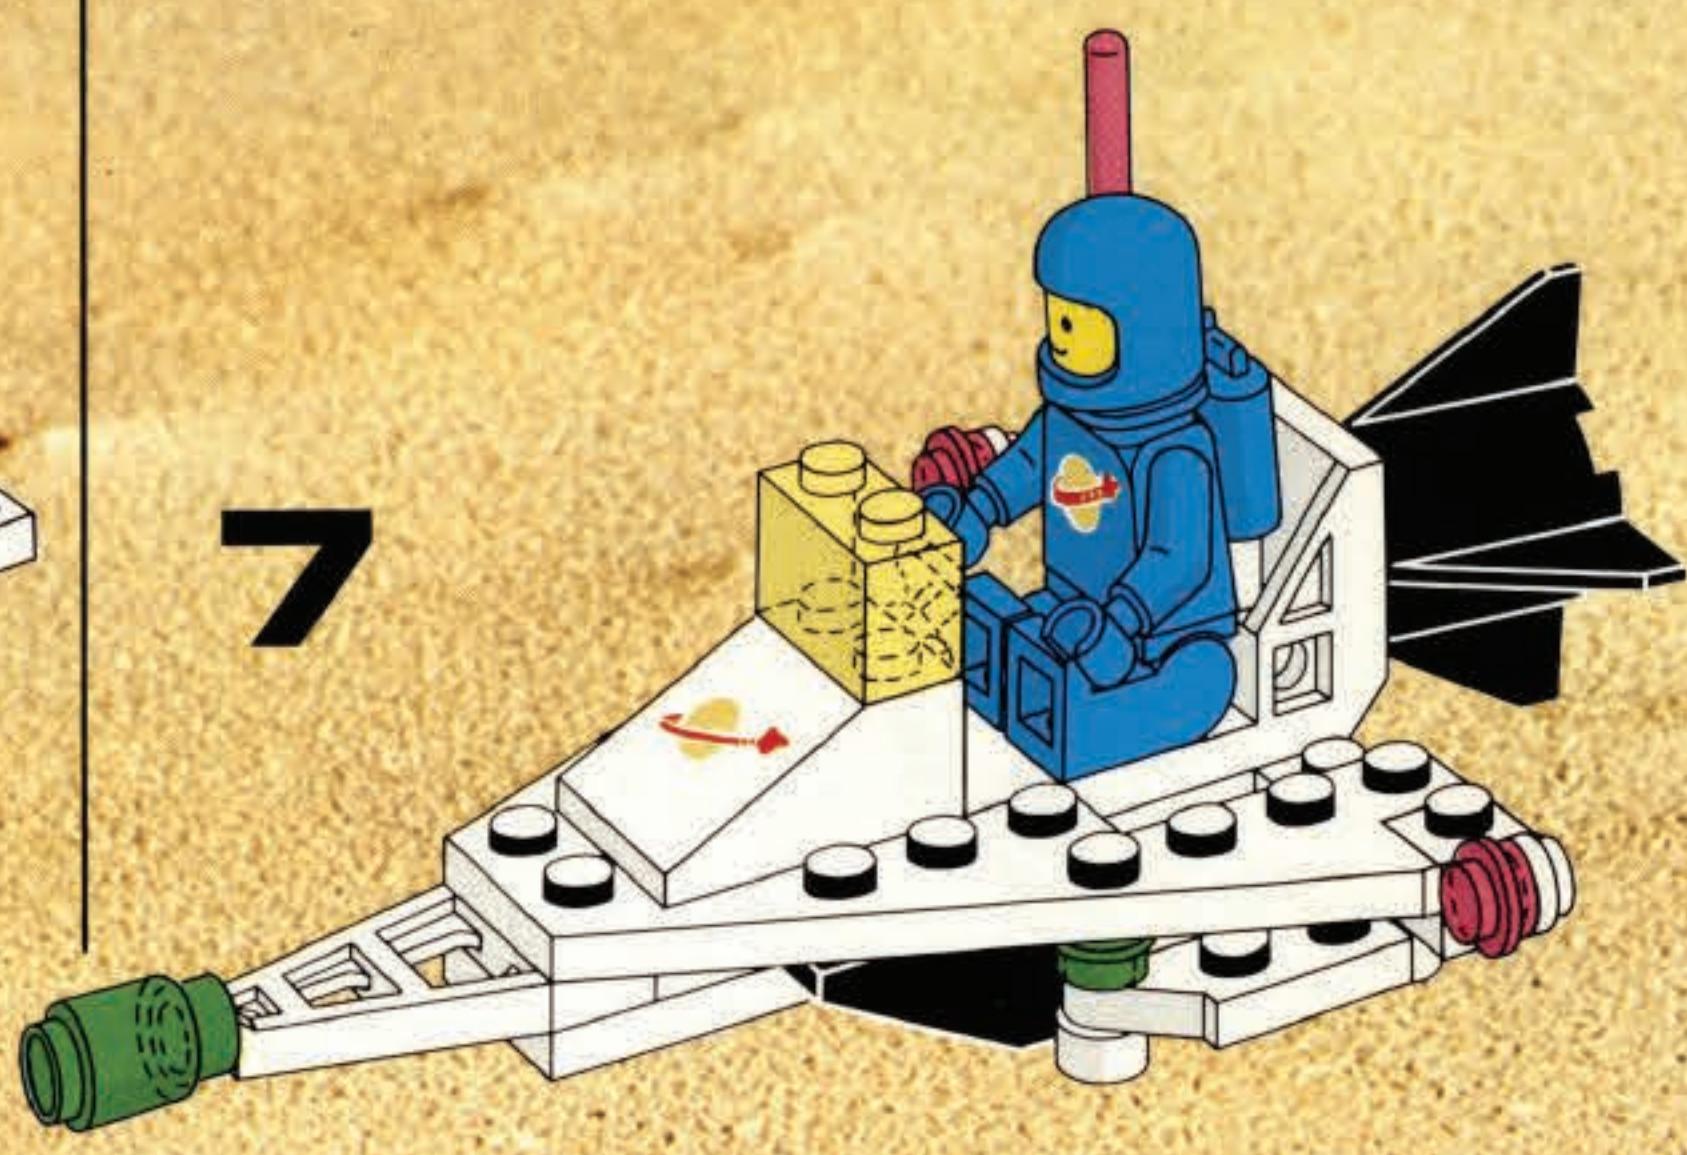


1

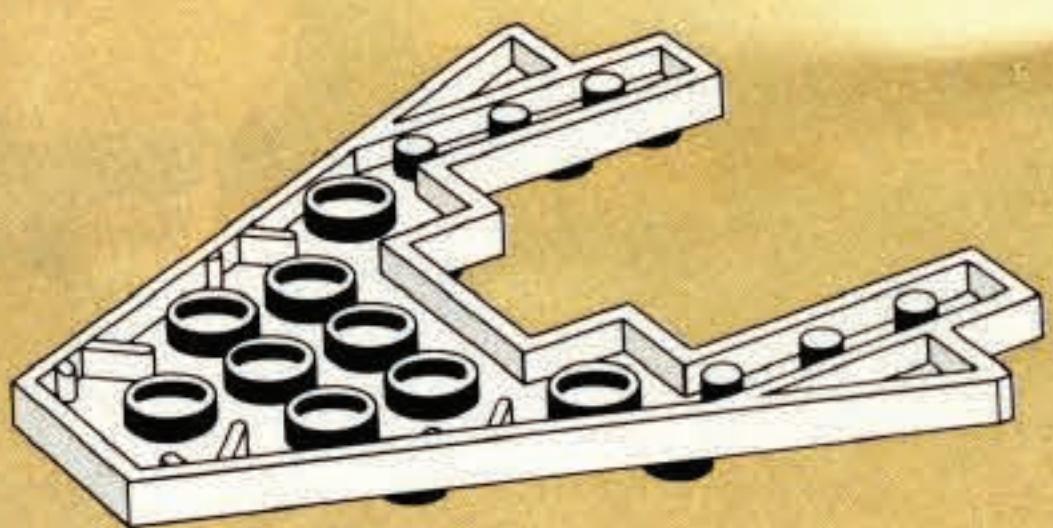


2



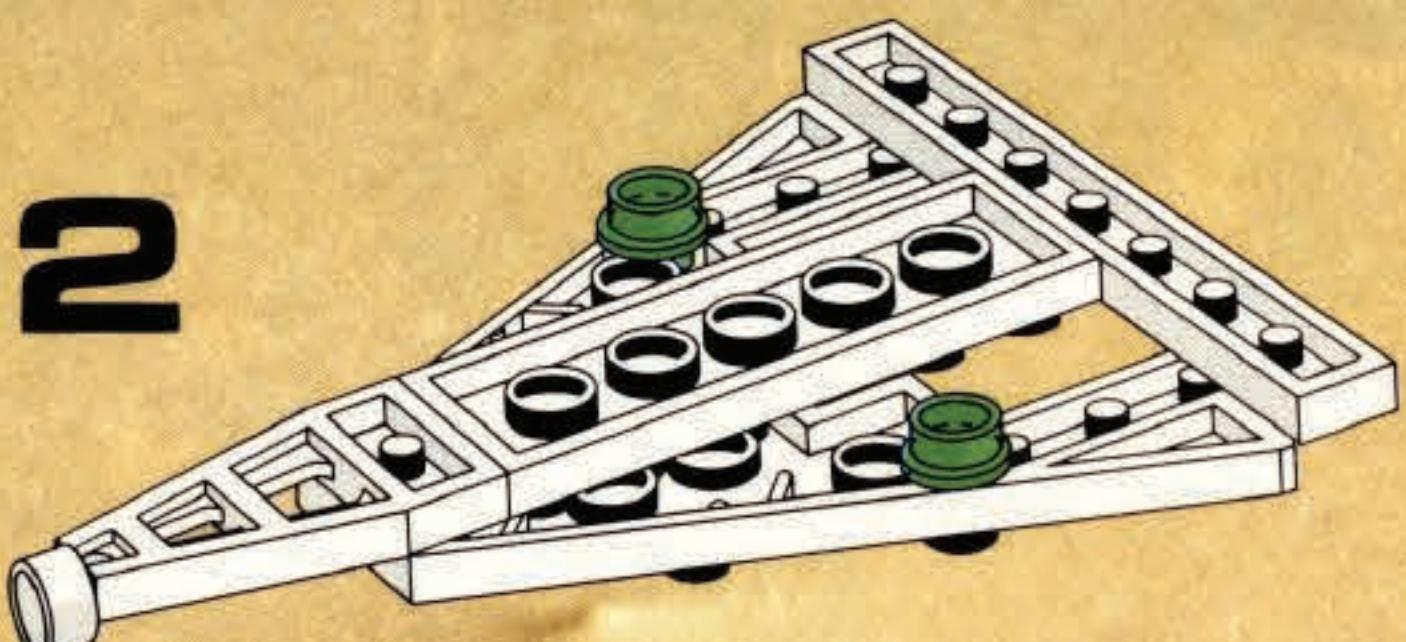


3

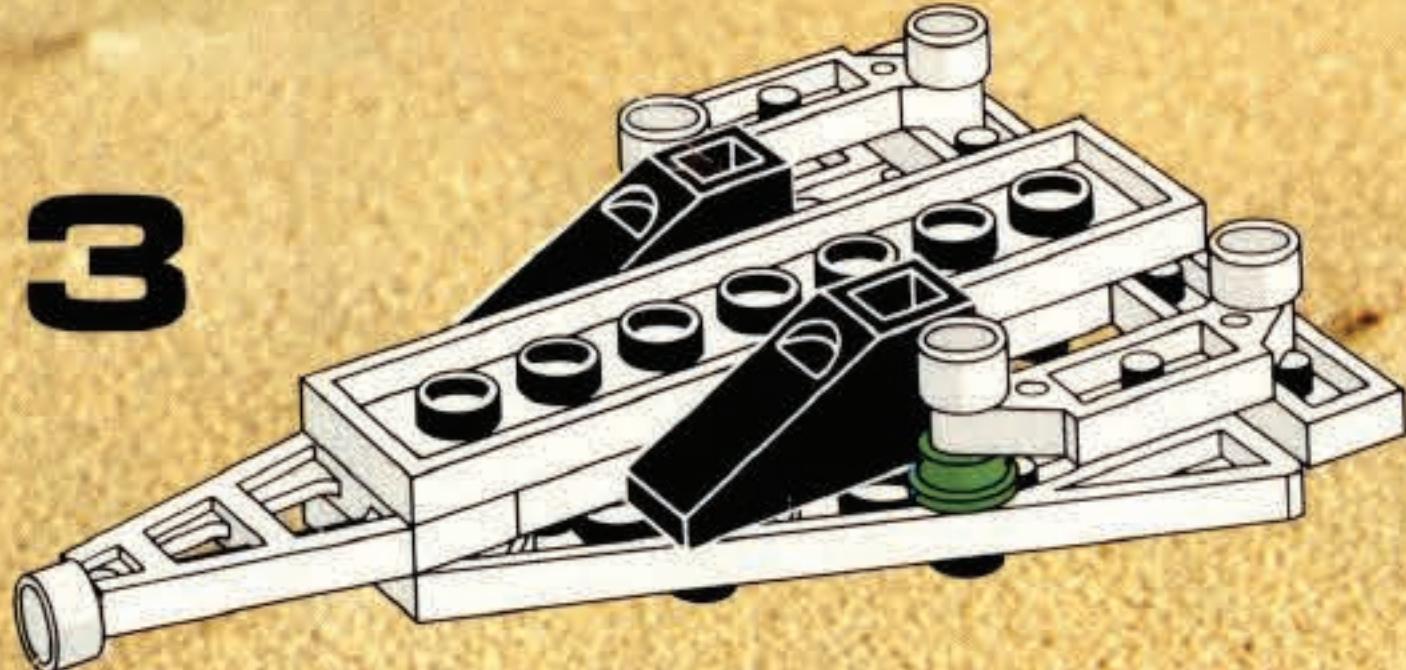


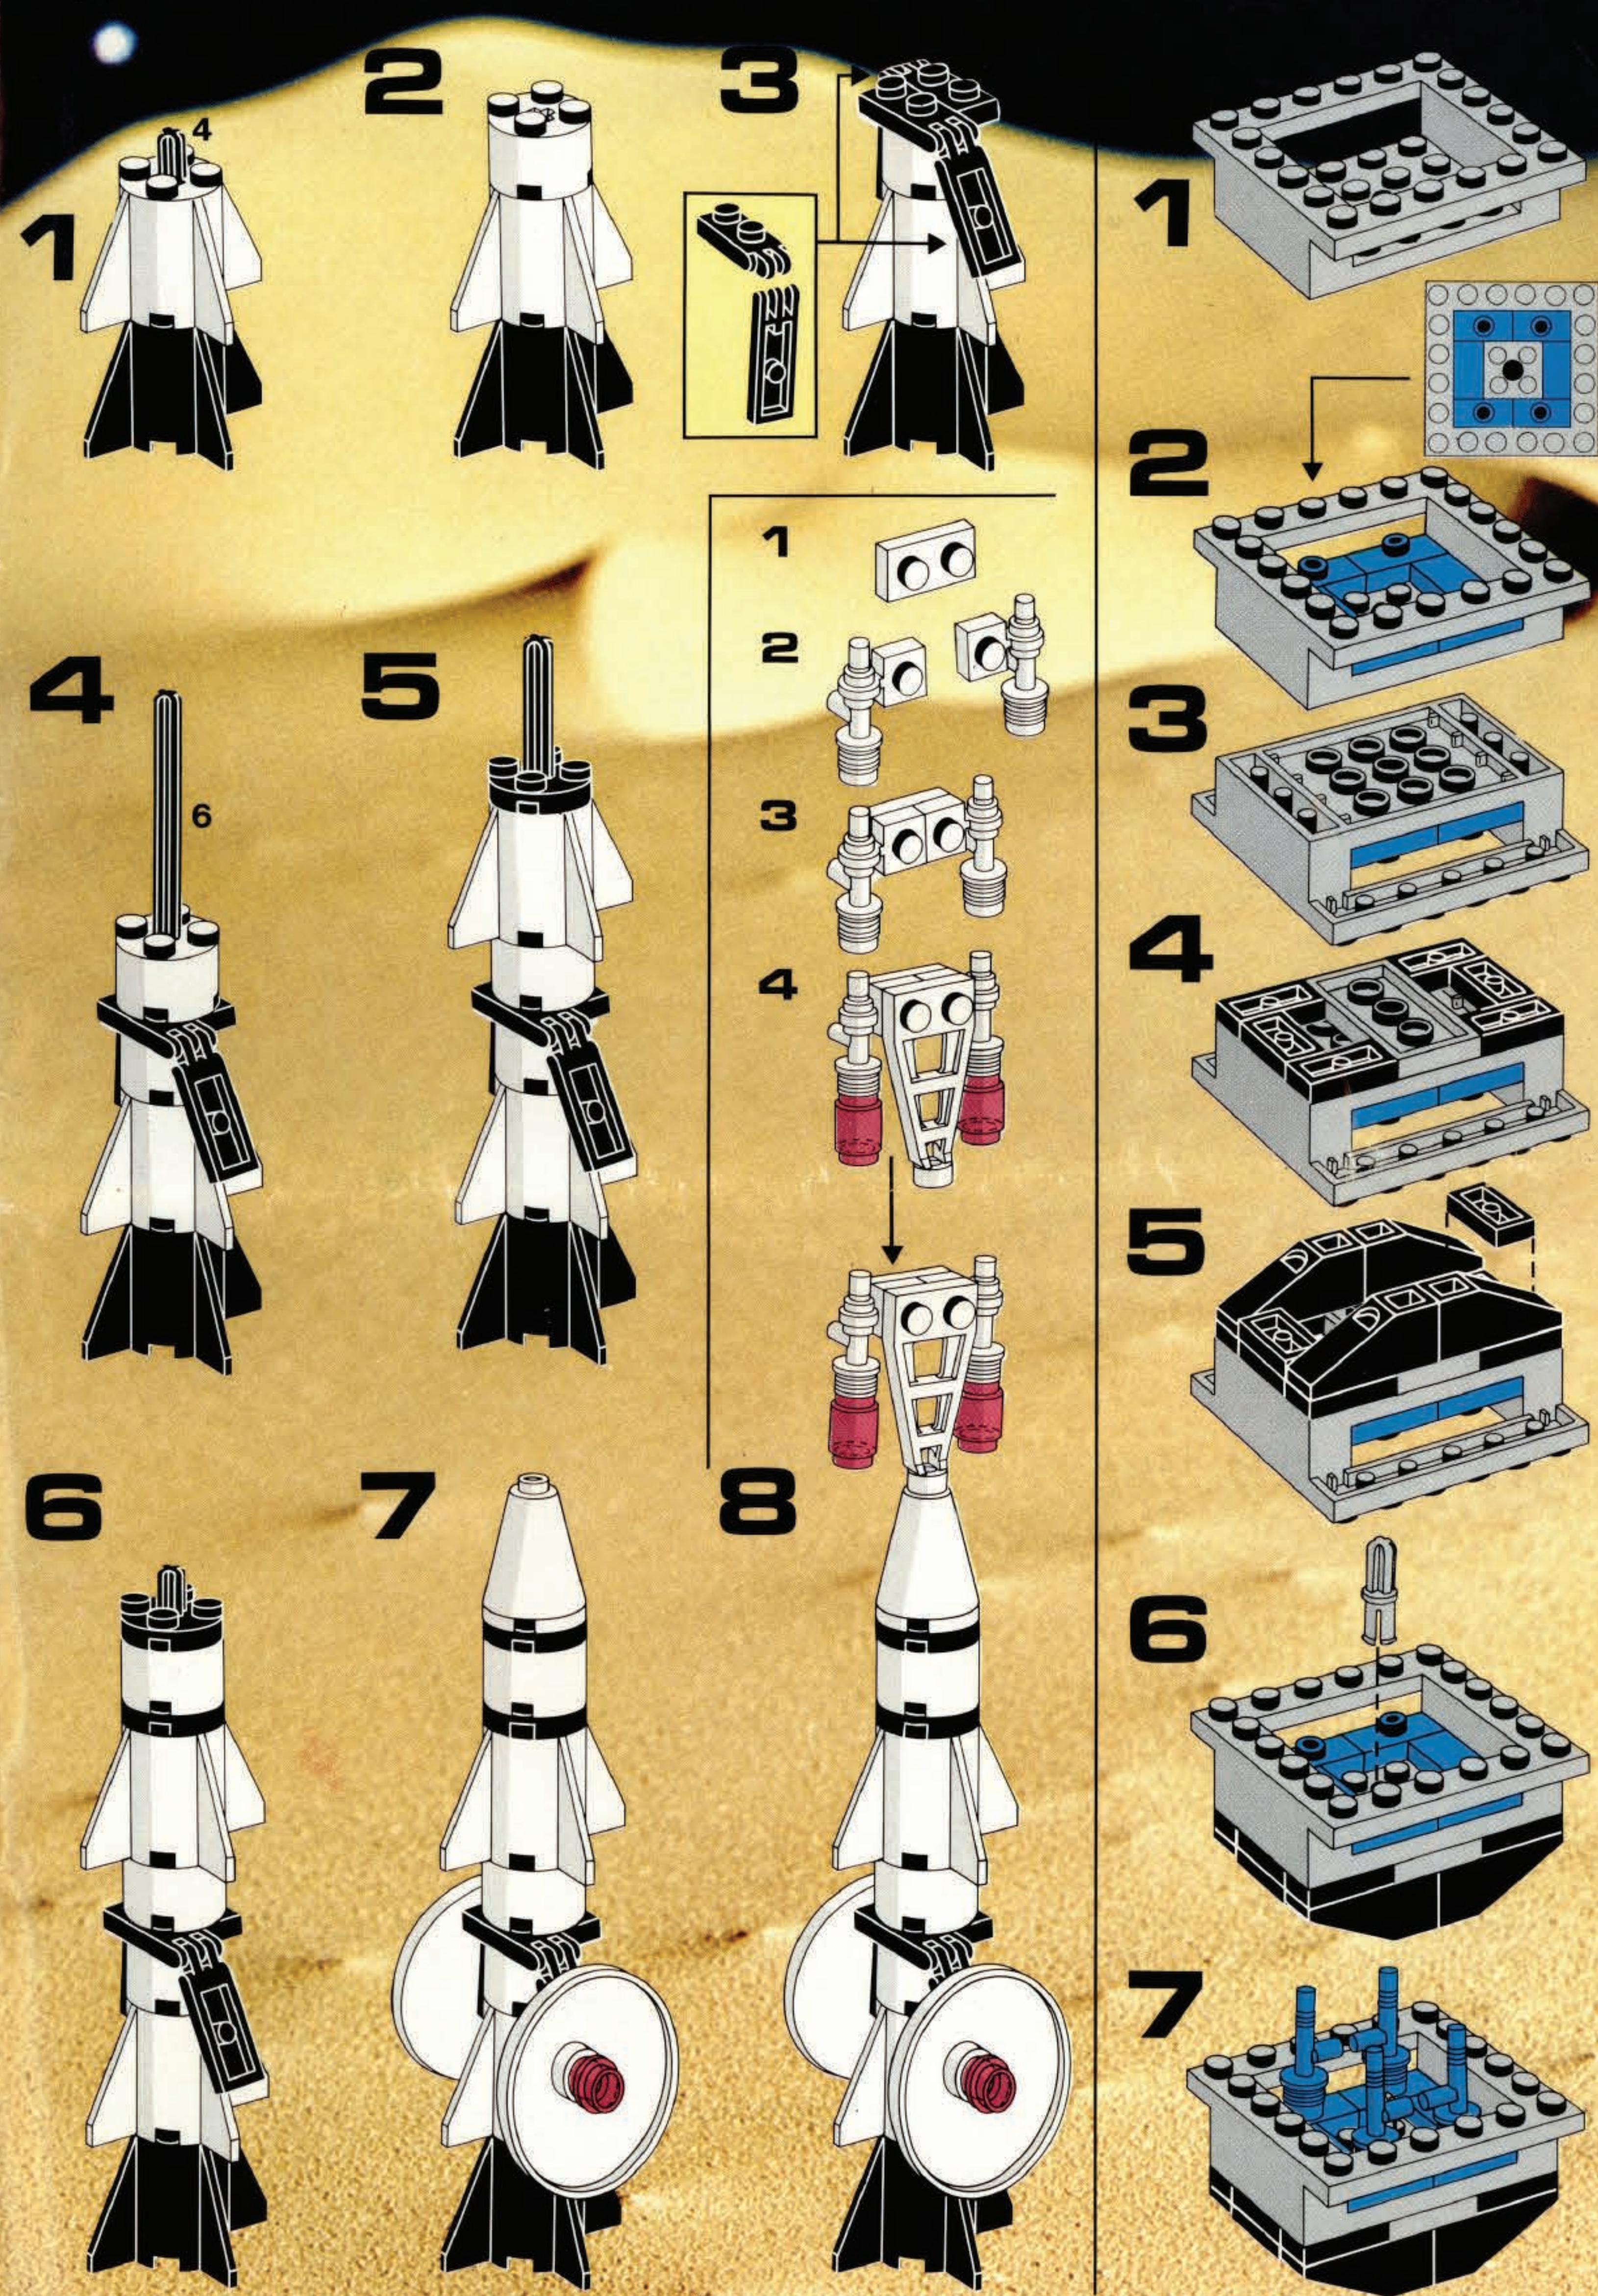


1

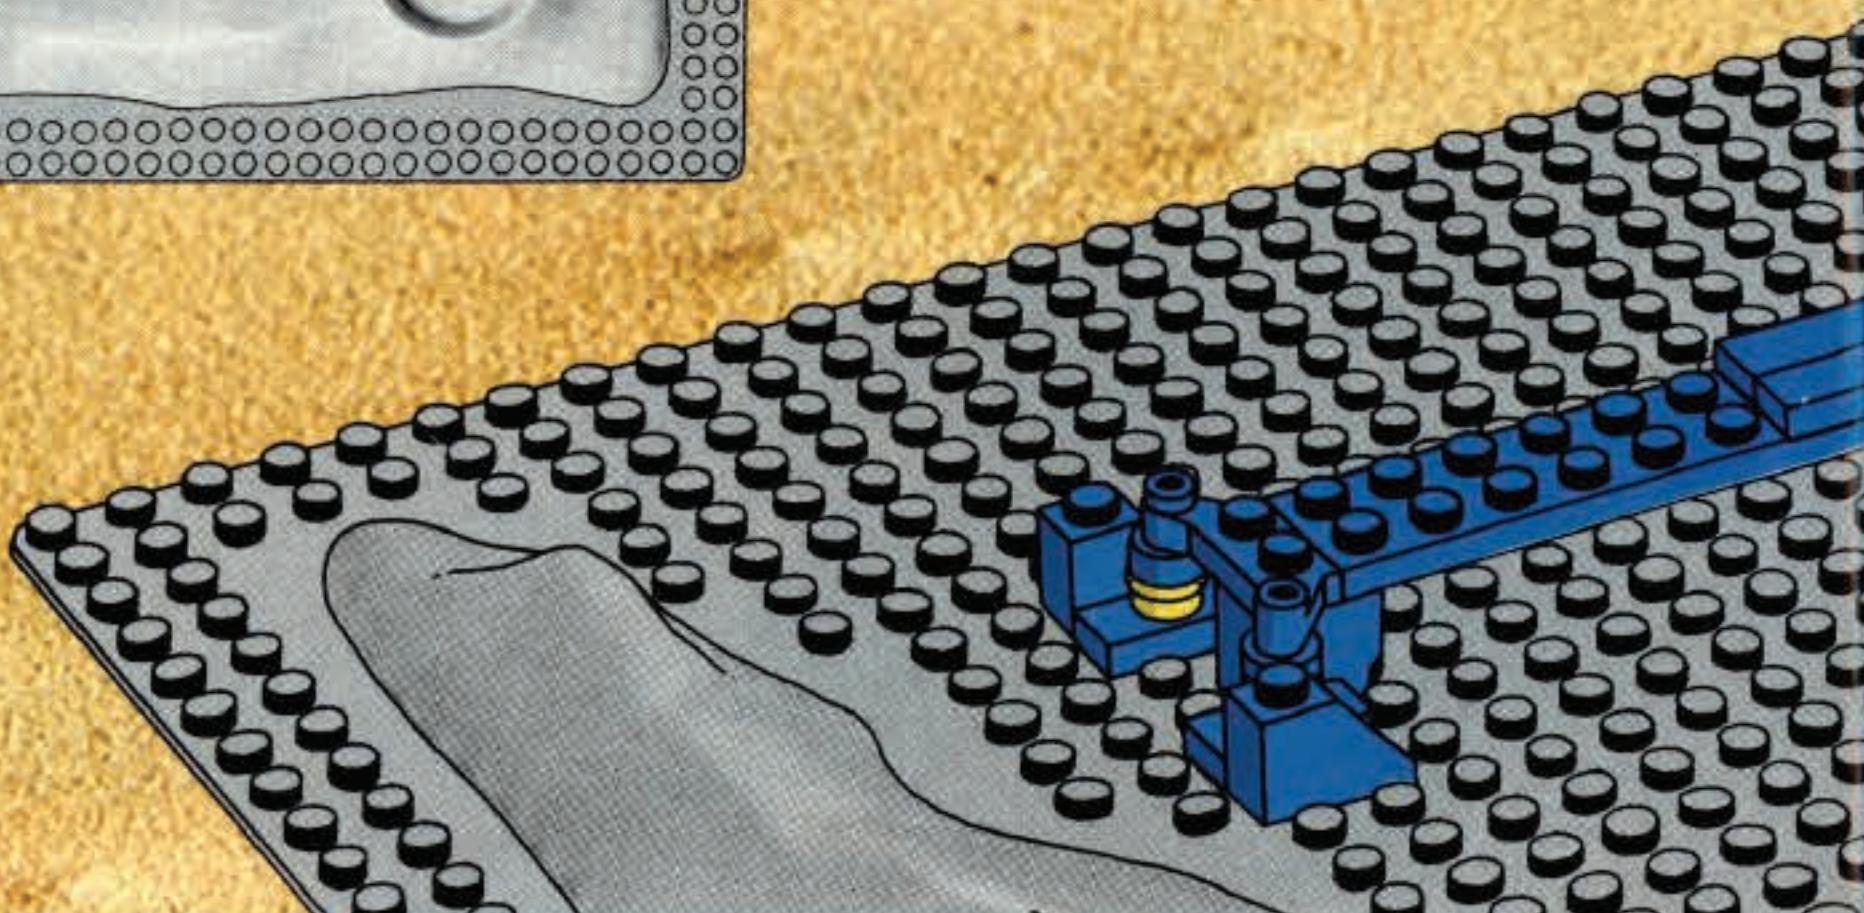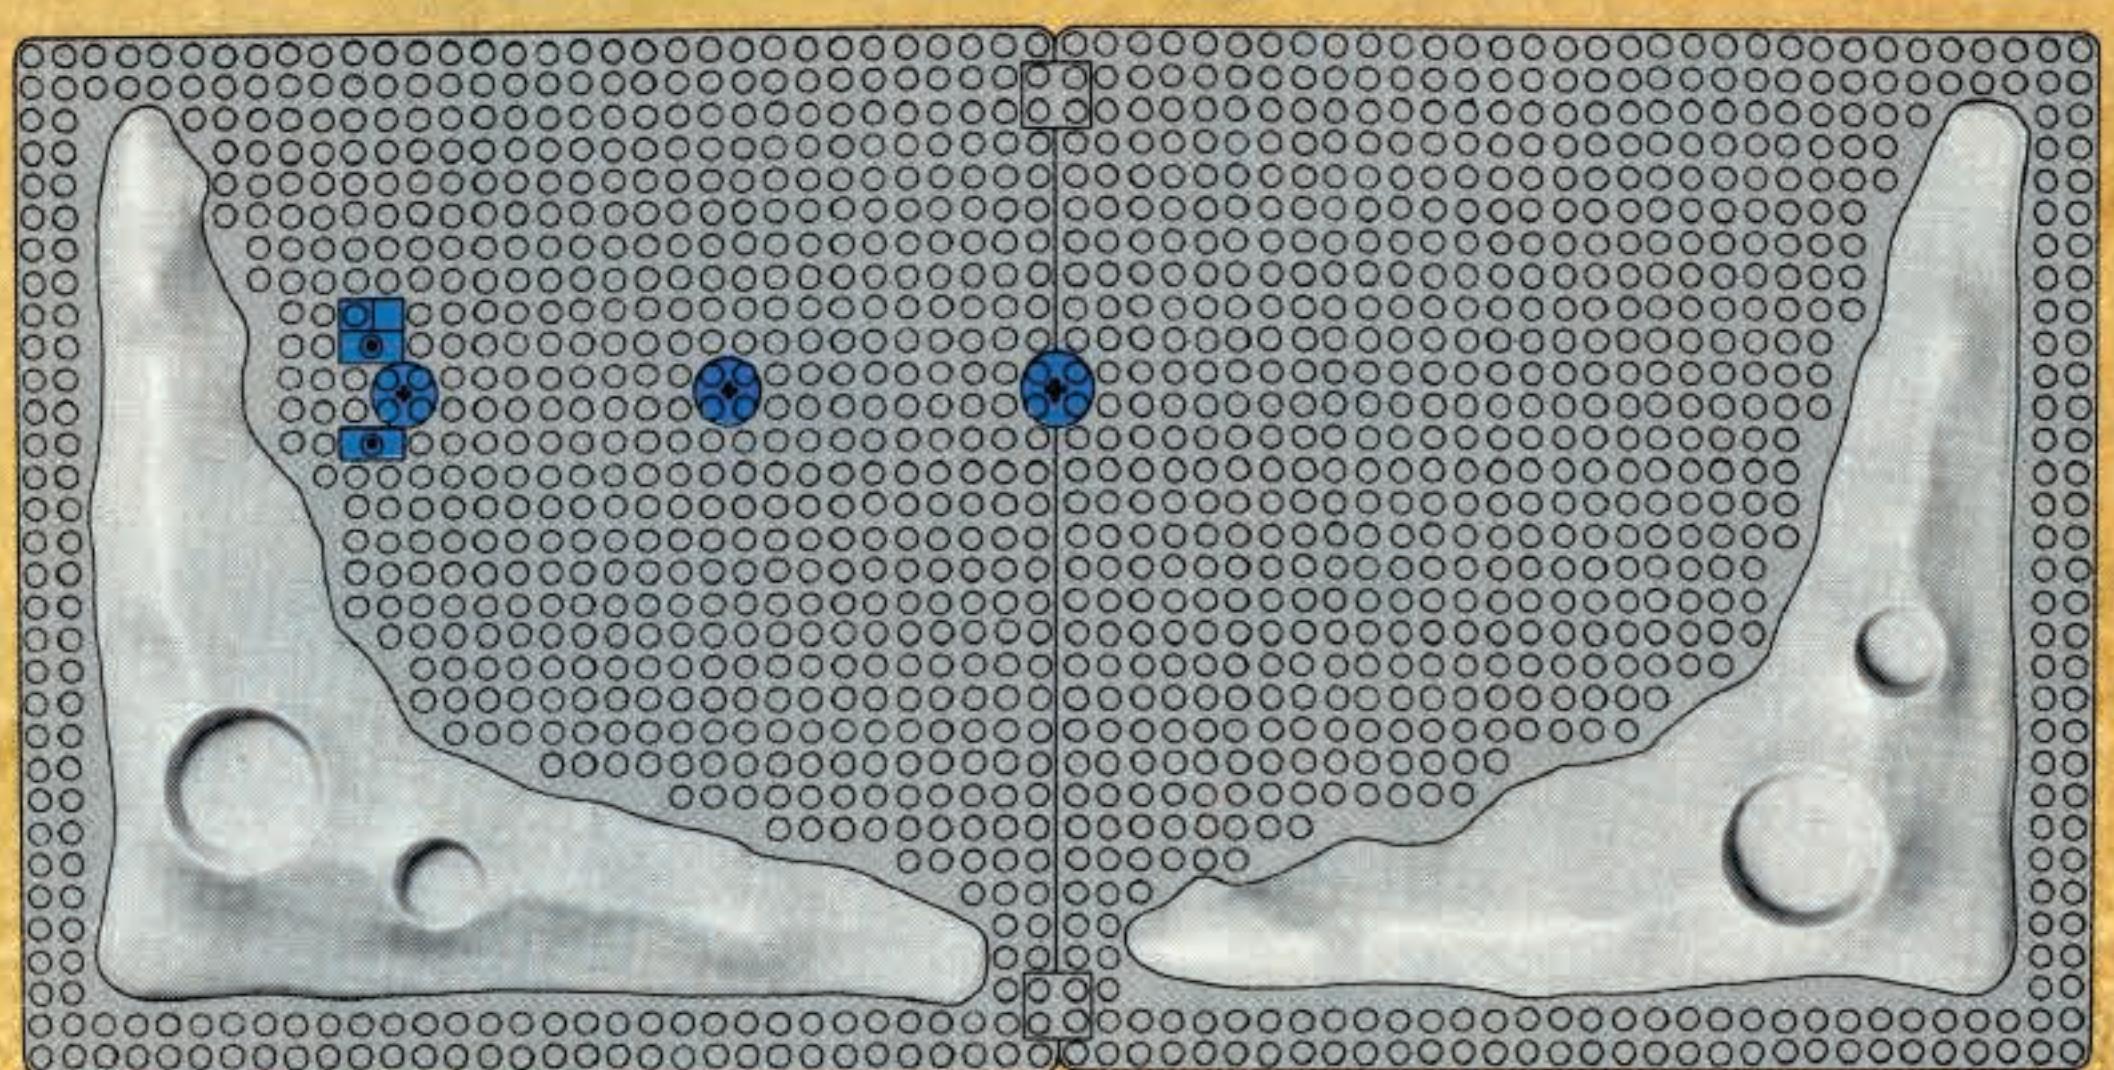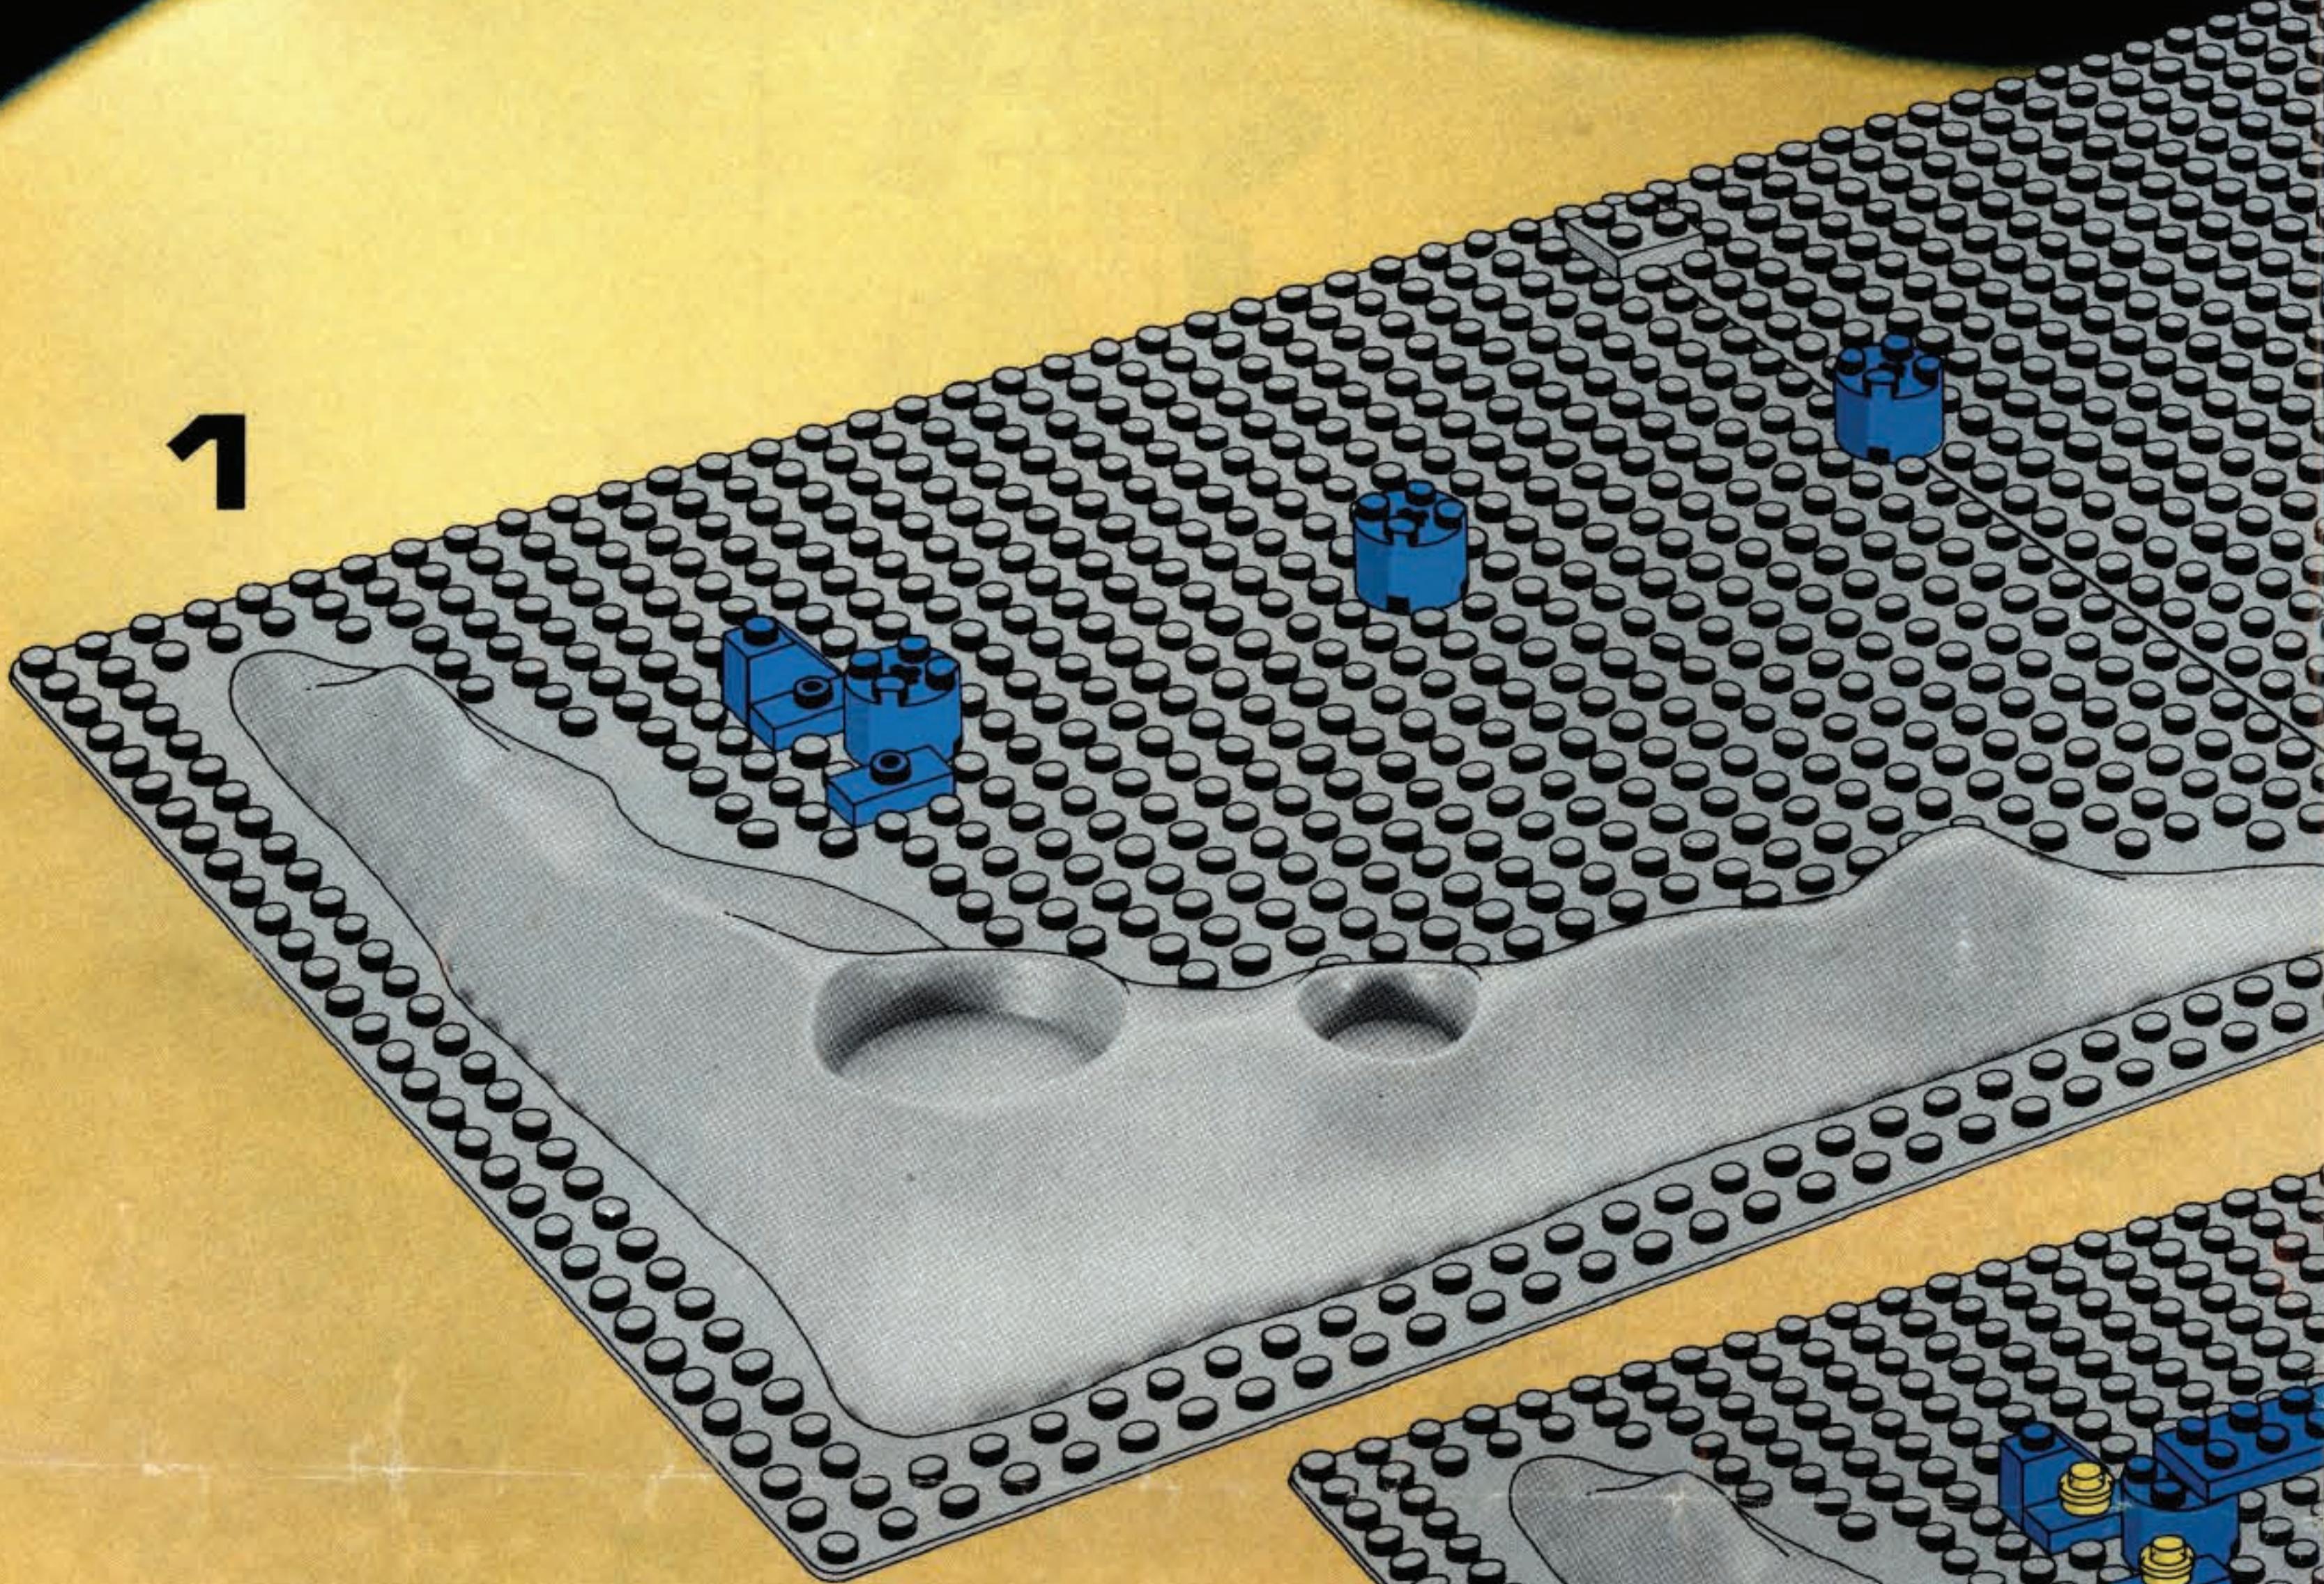


2

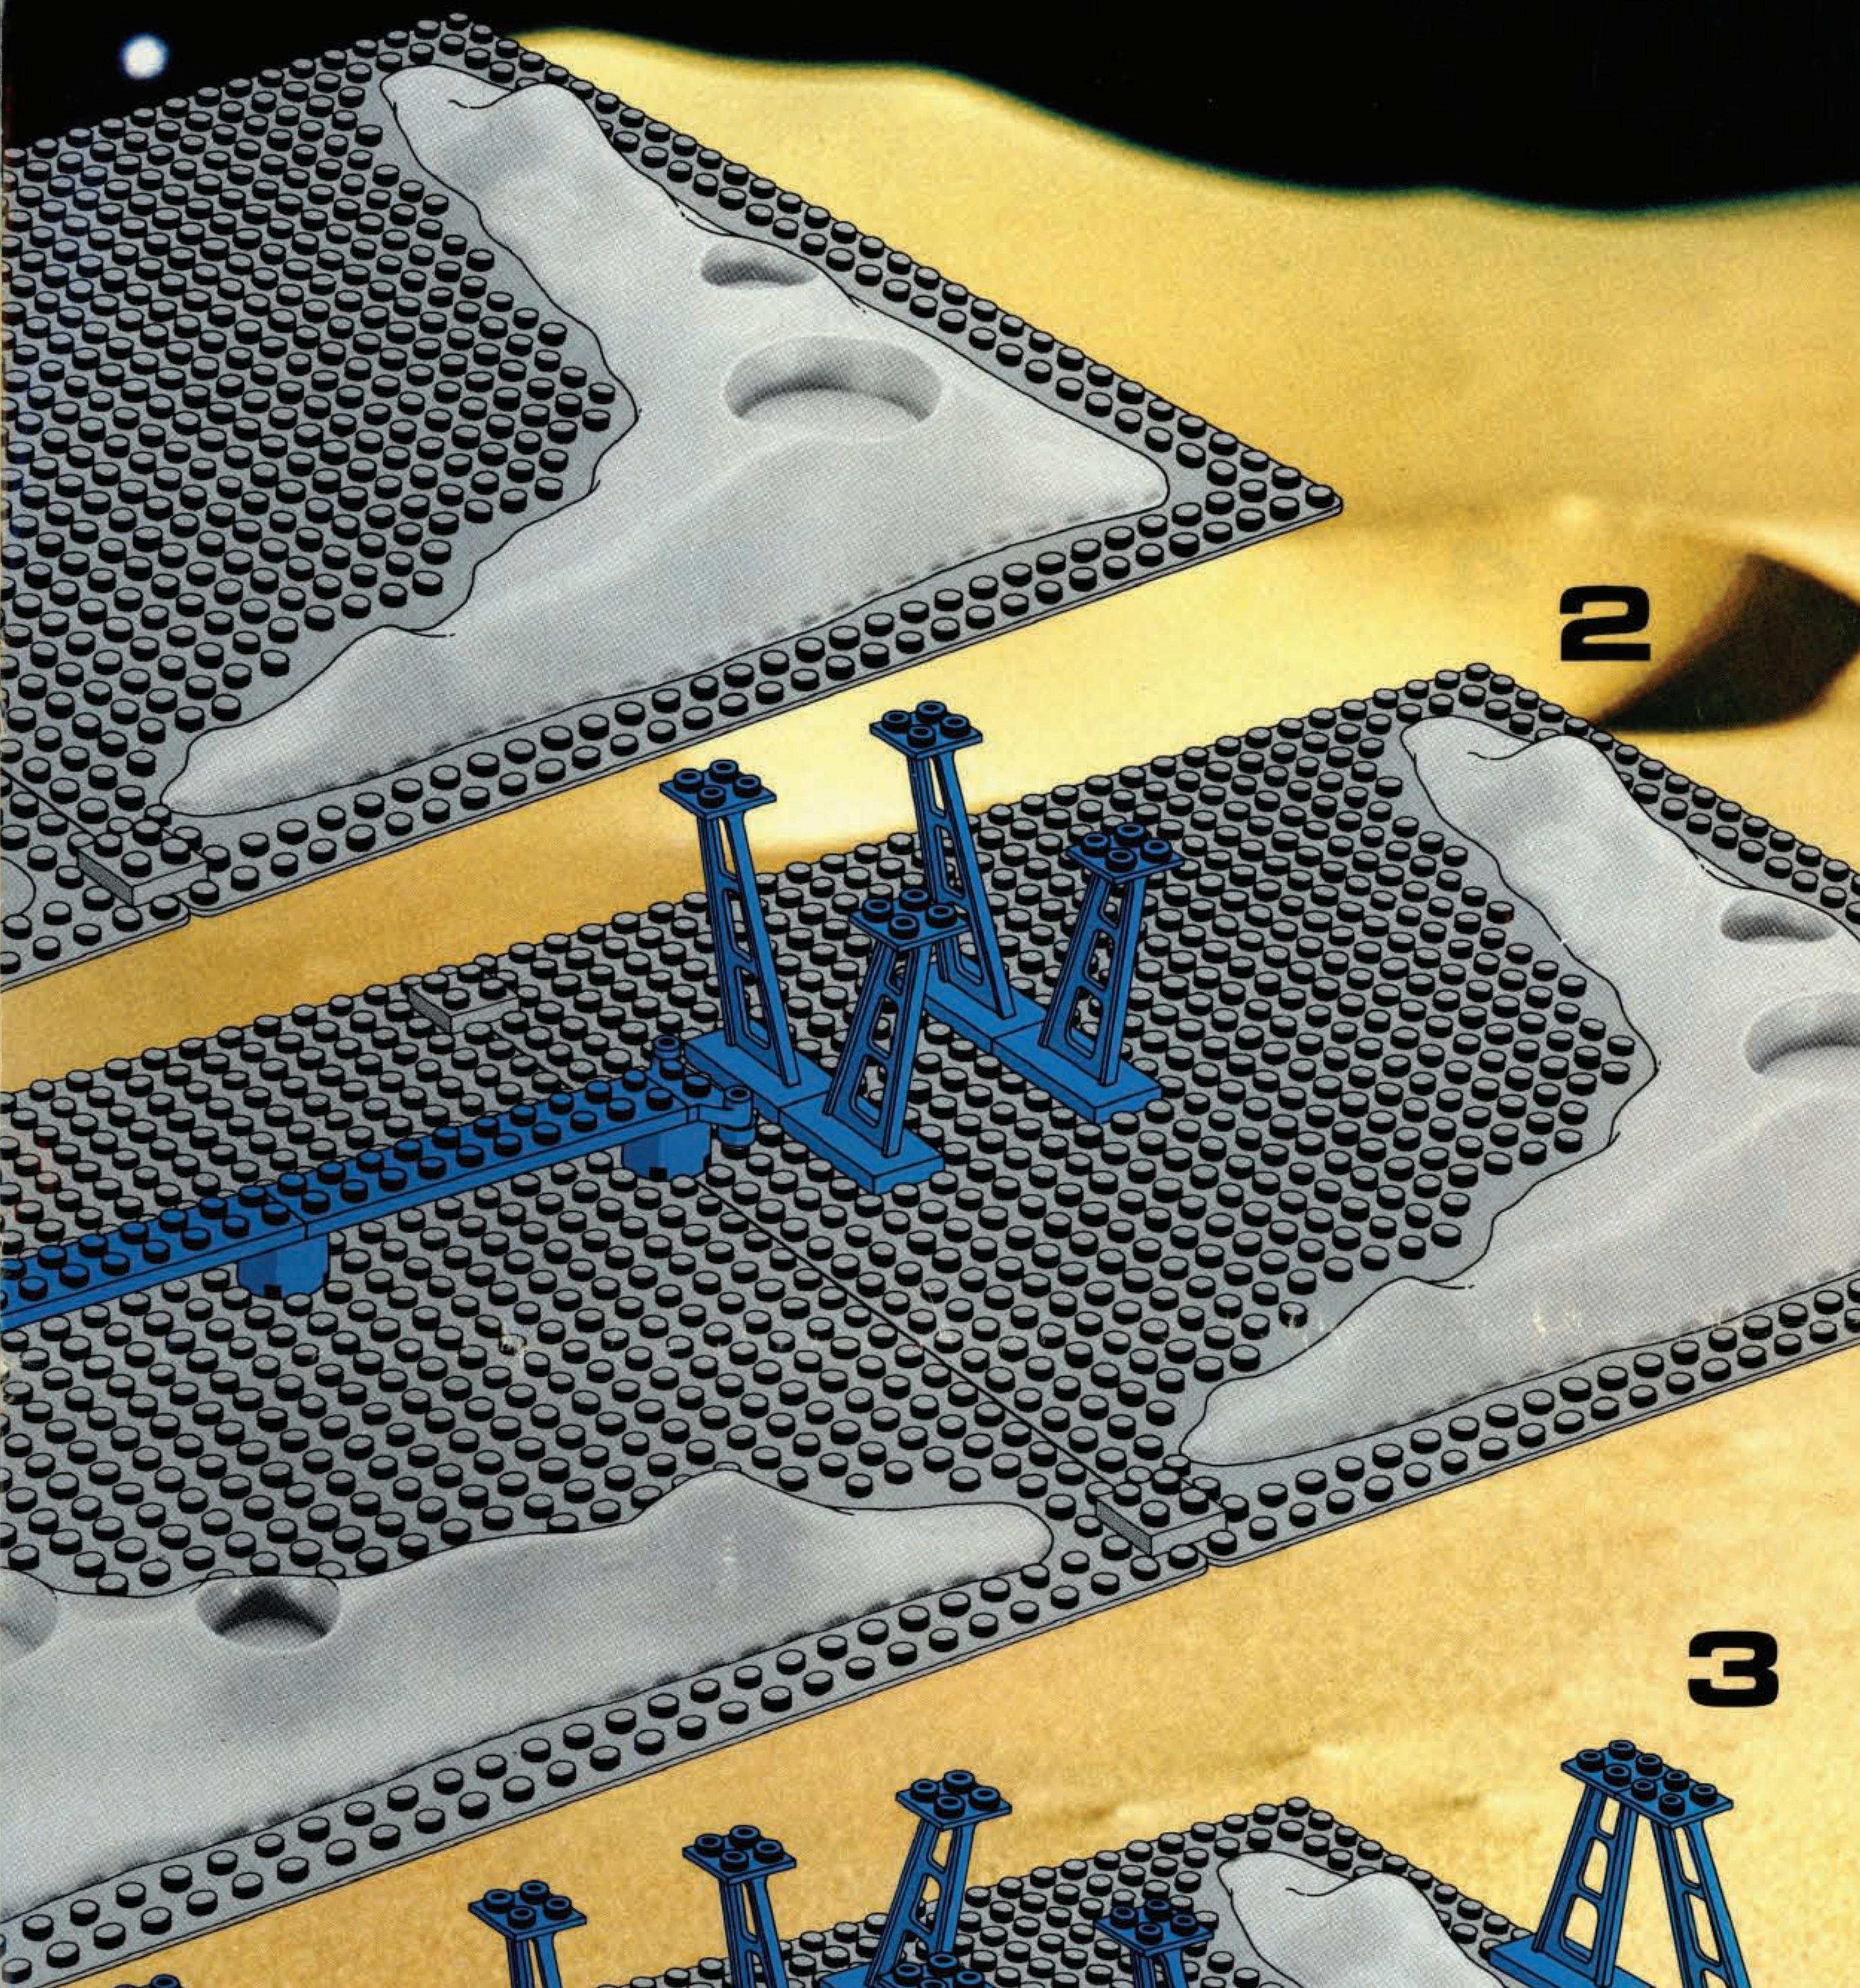


3


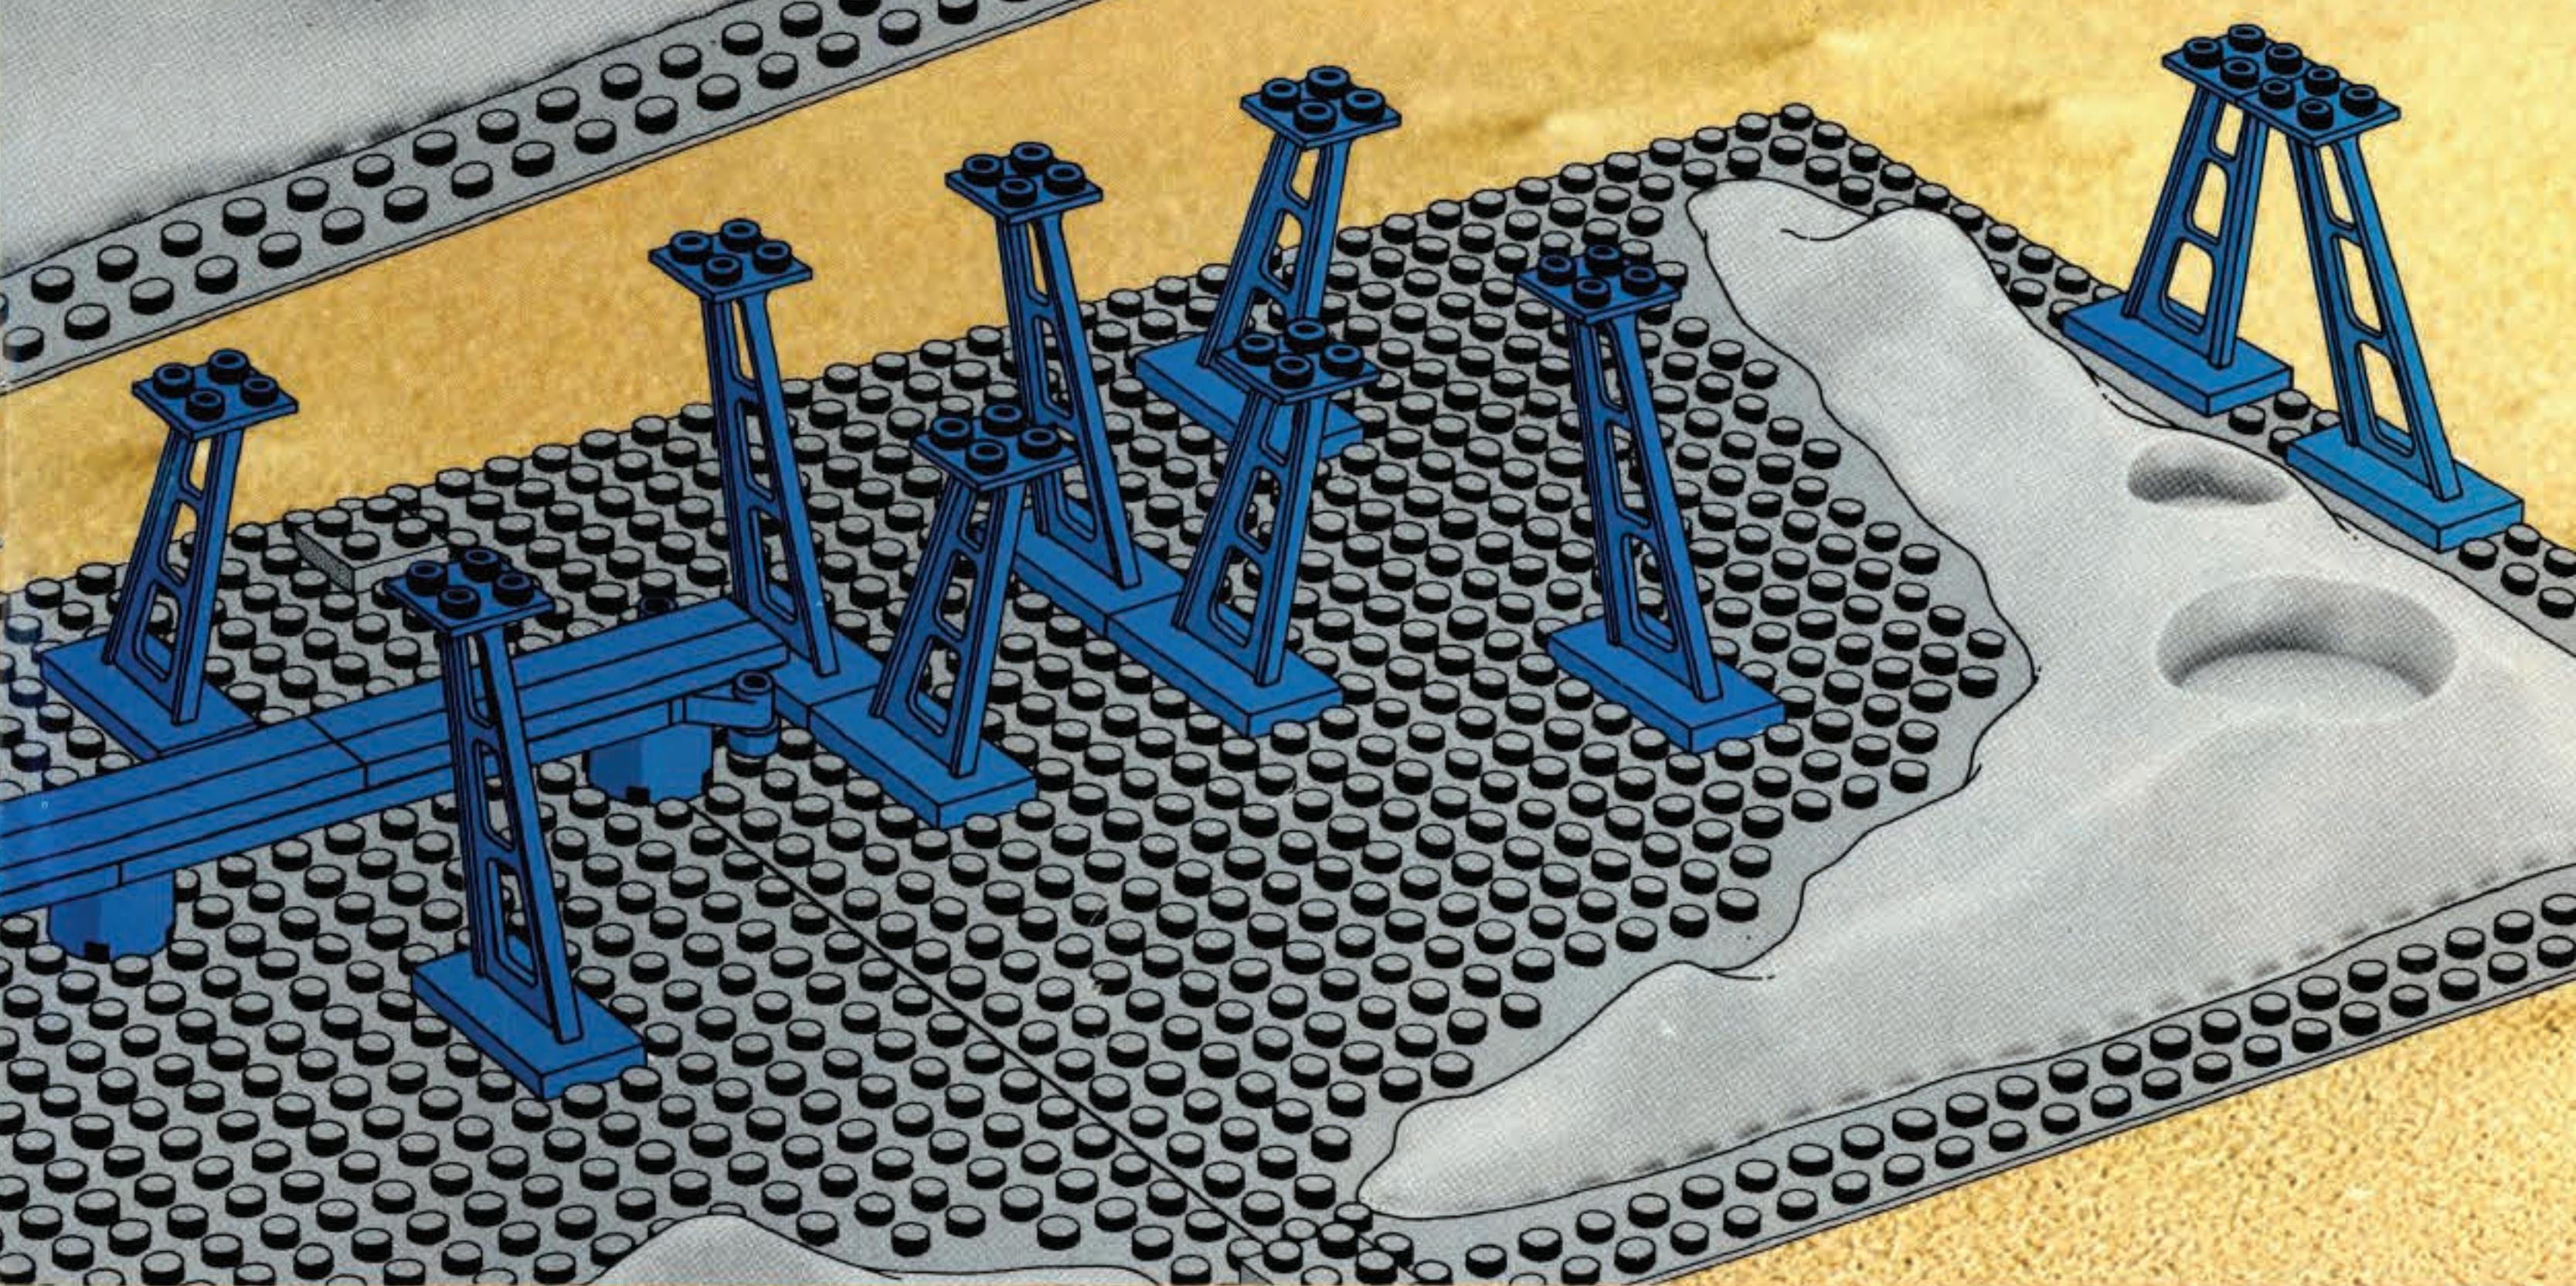







4

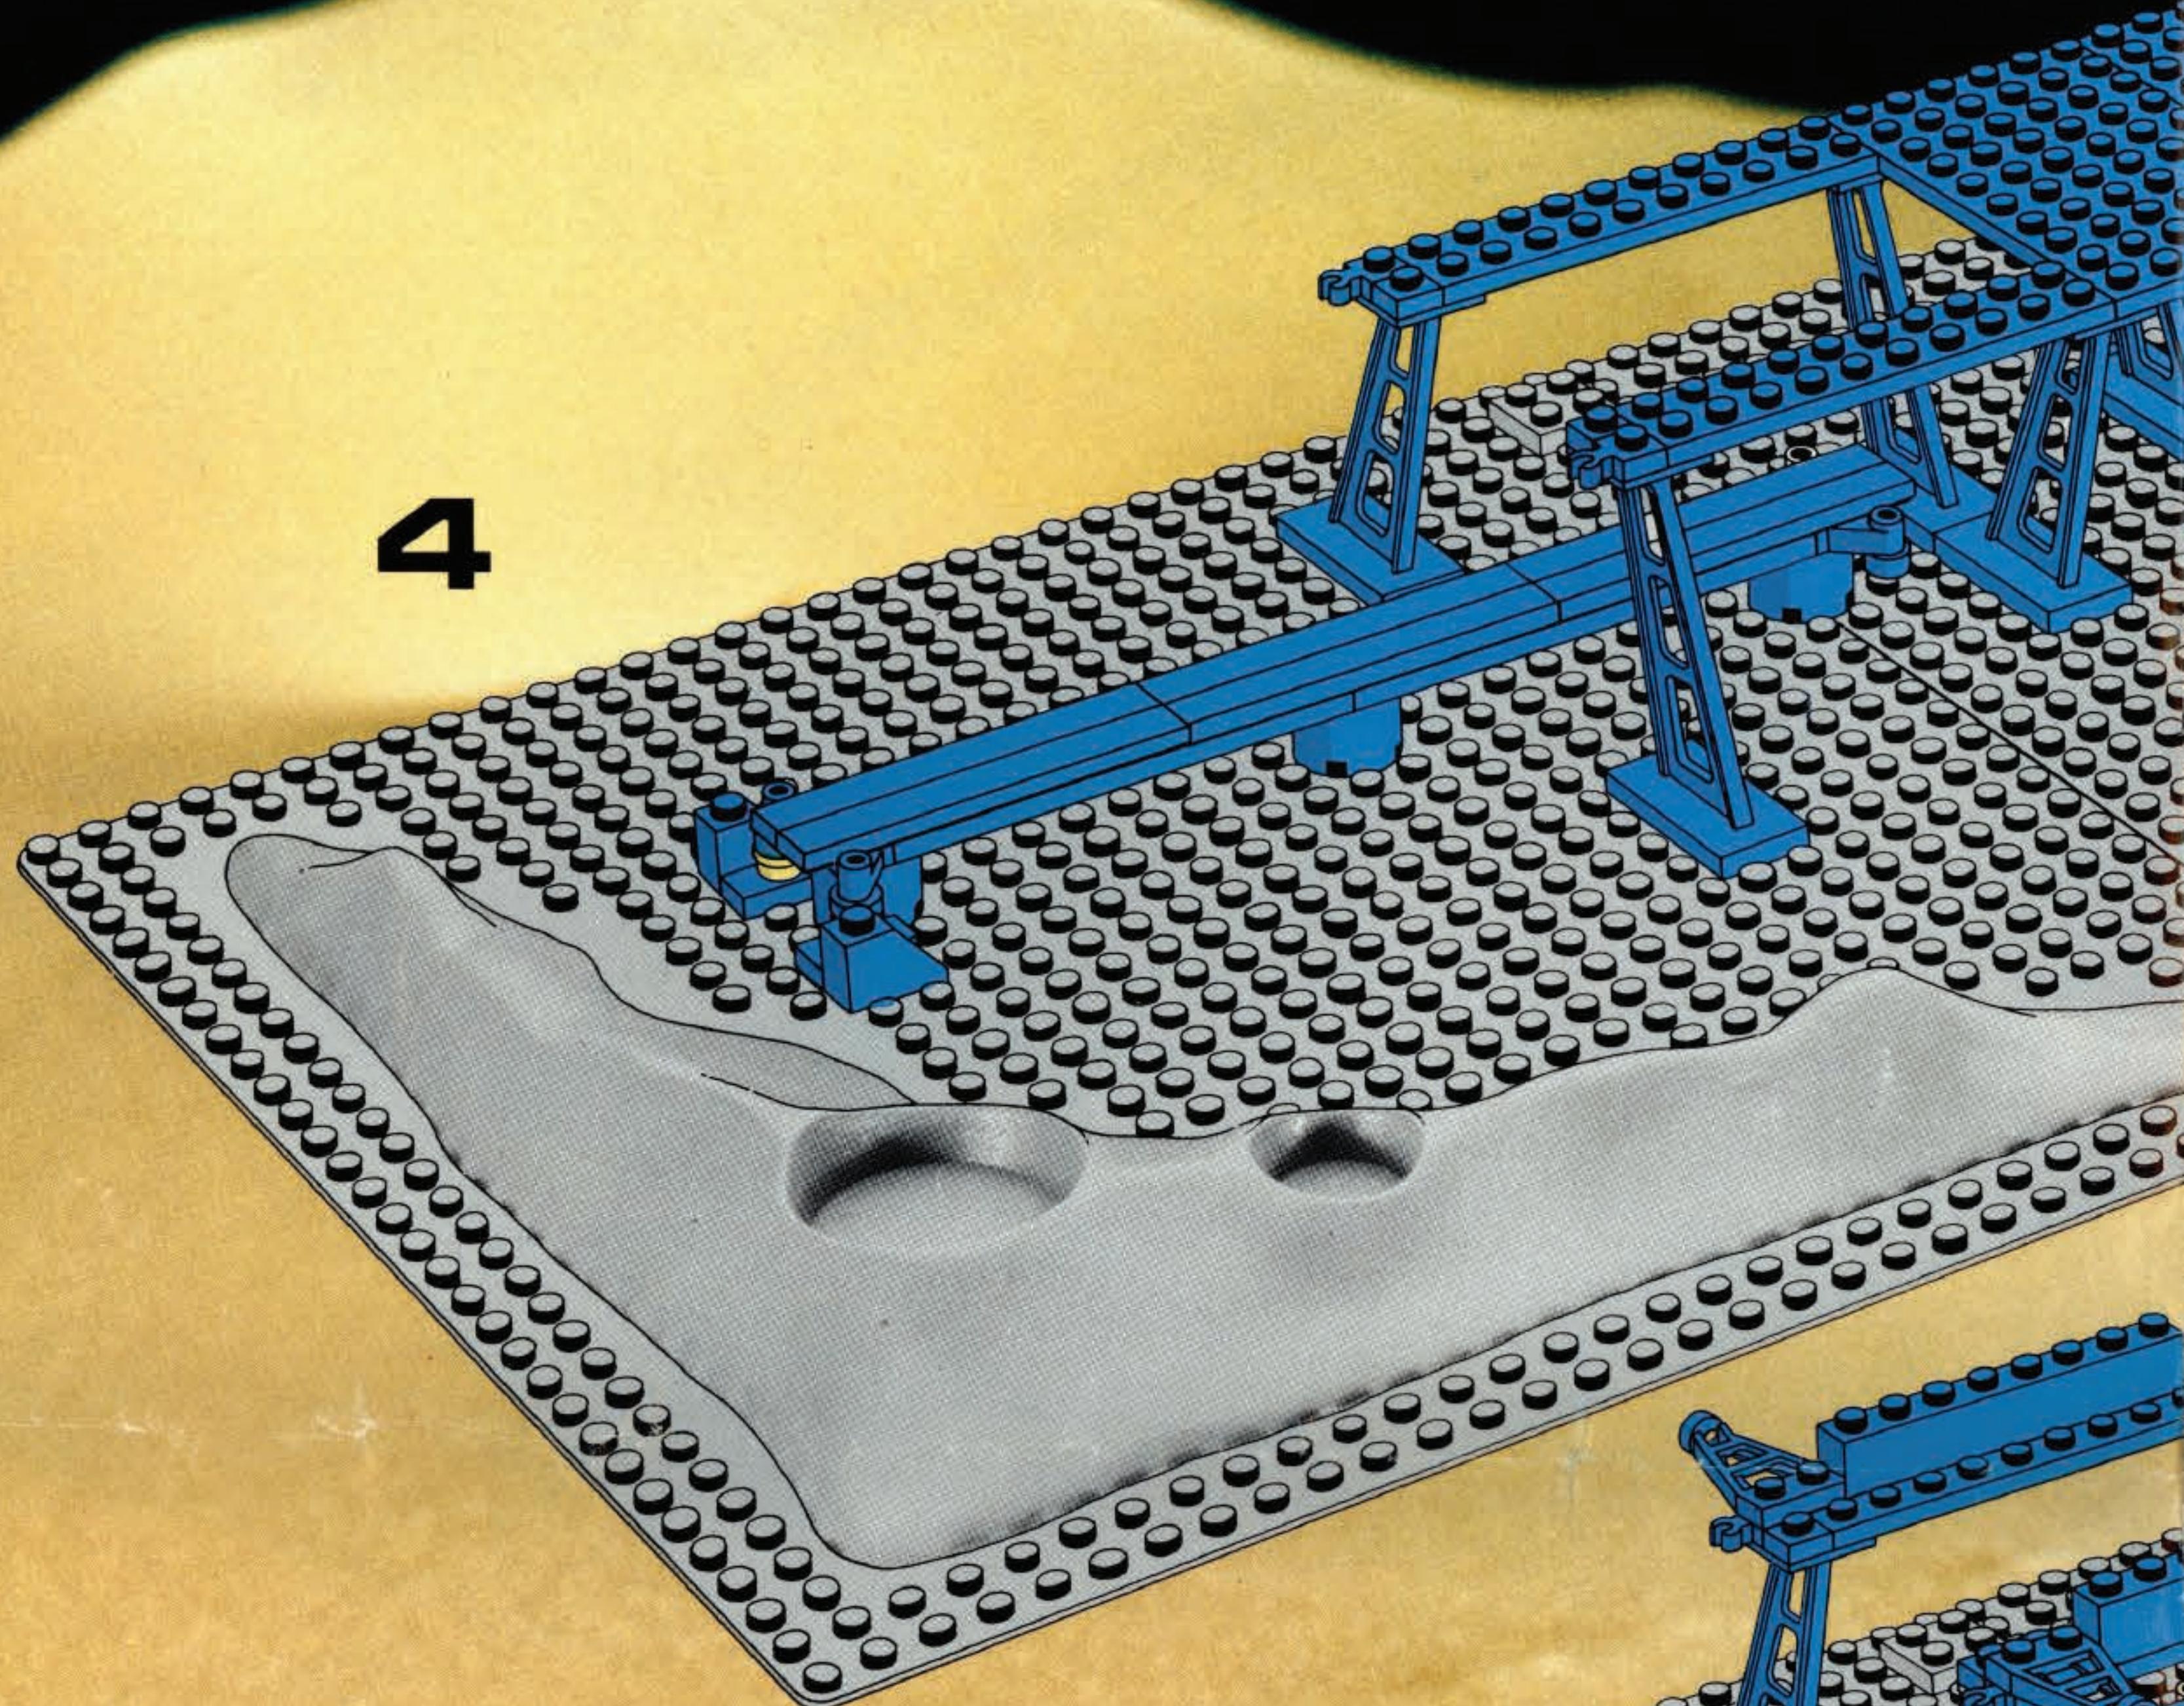


5

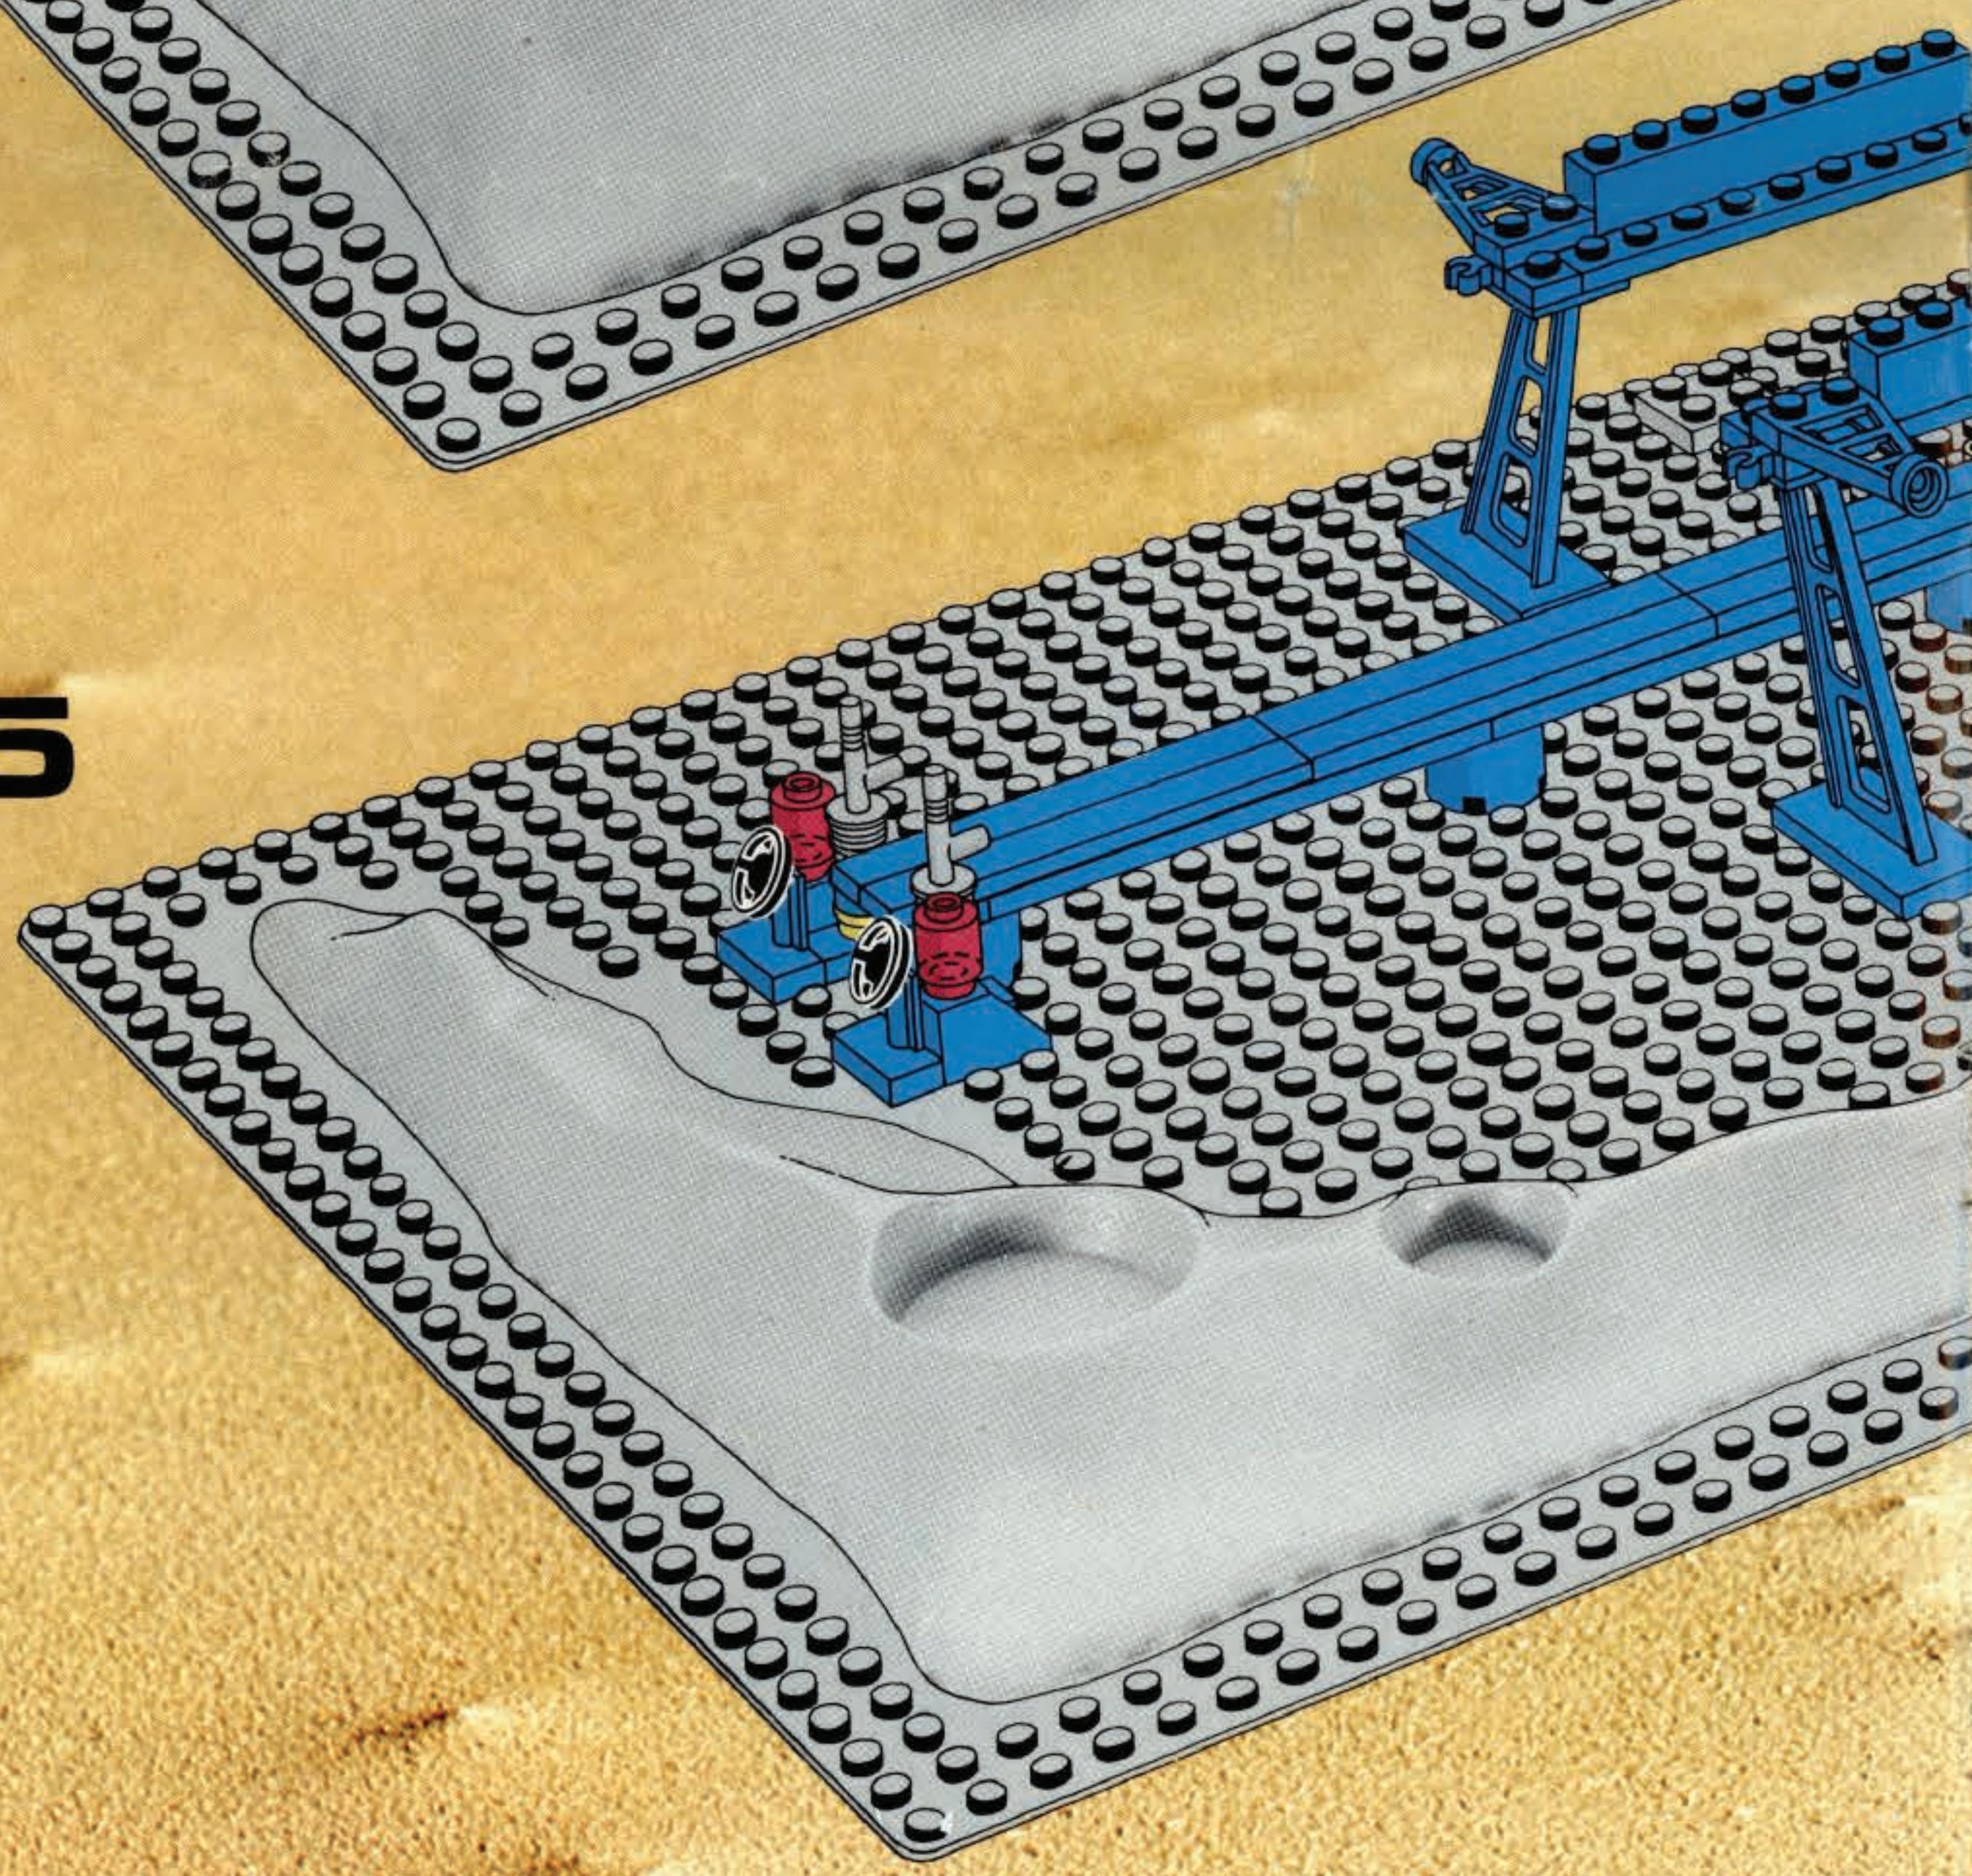


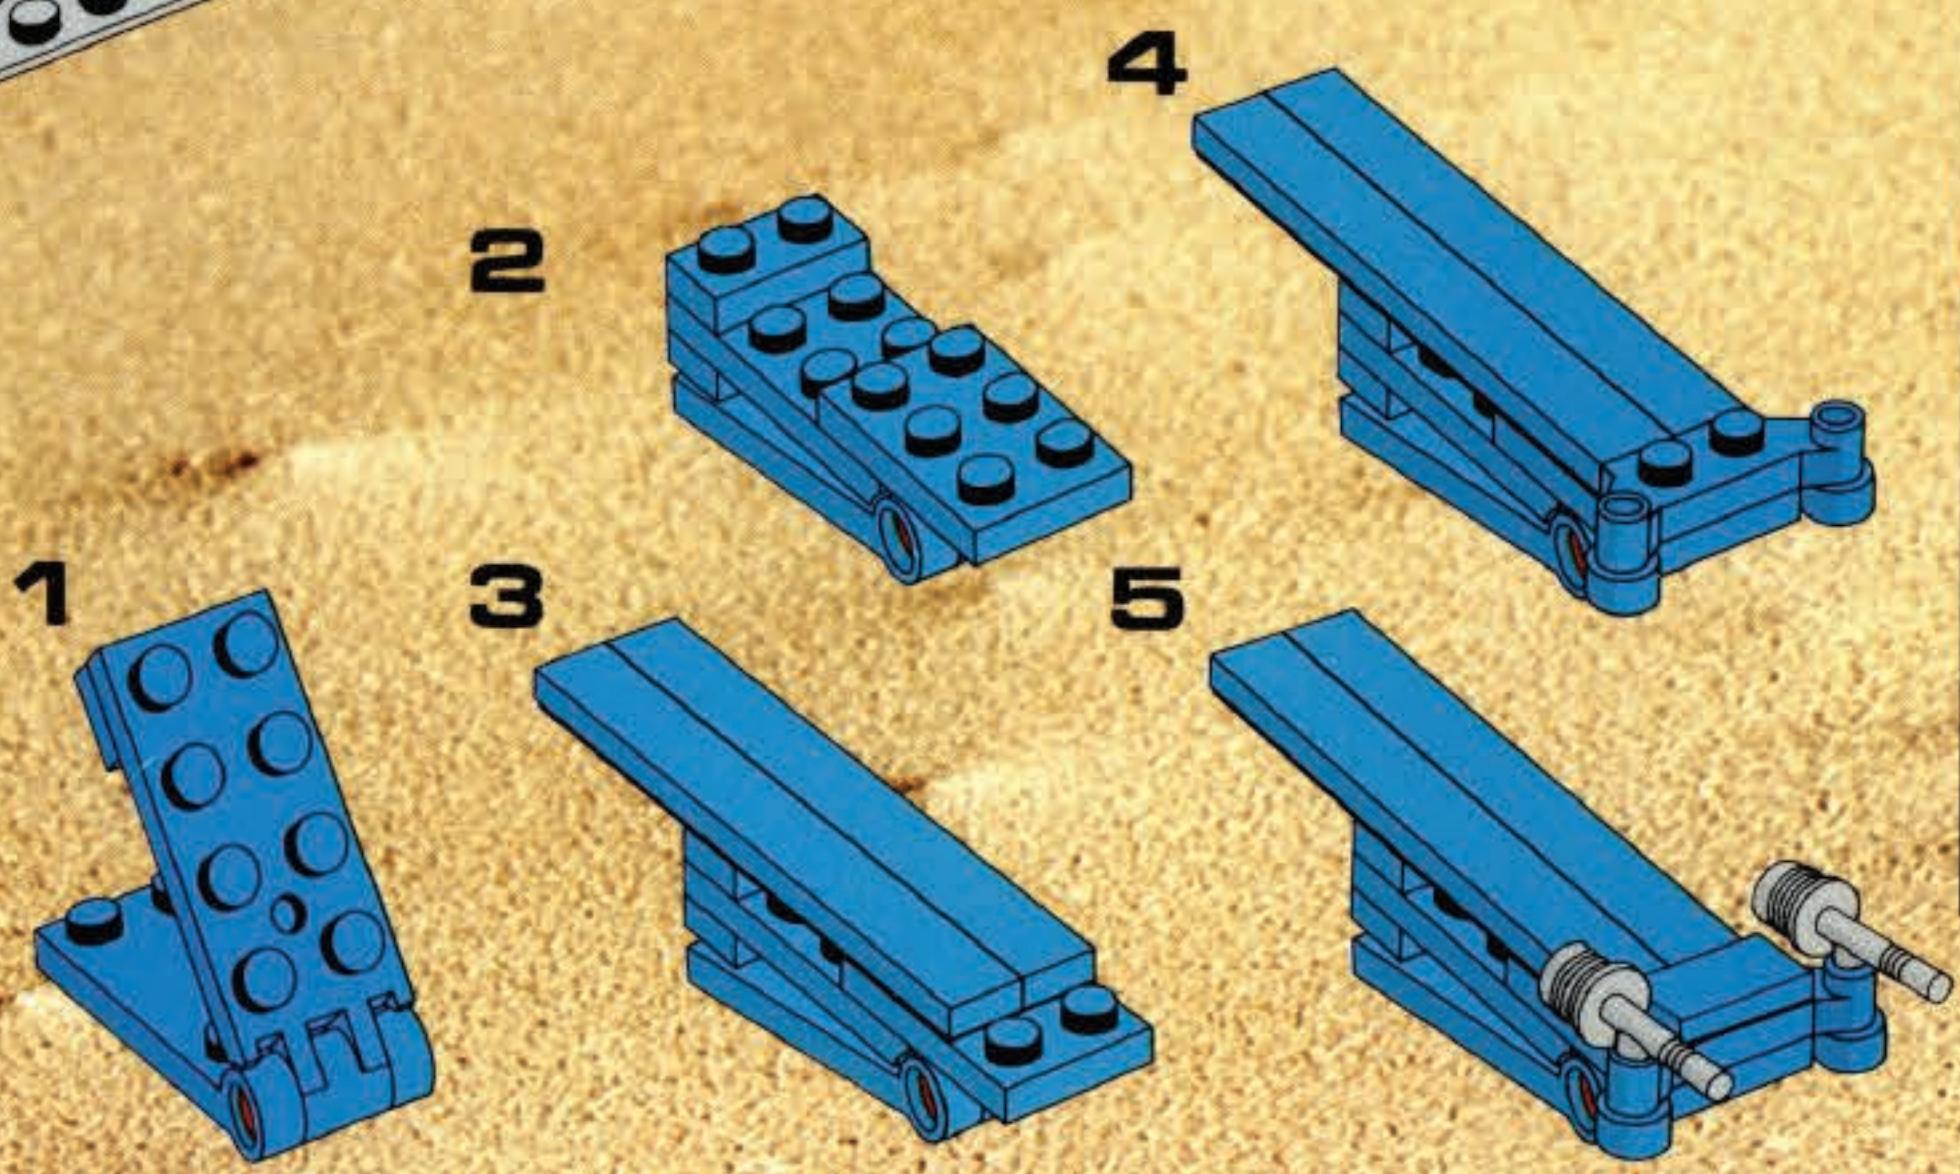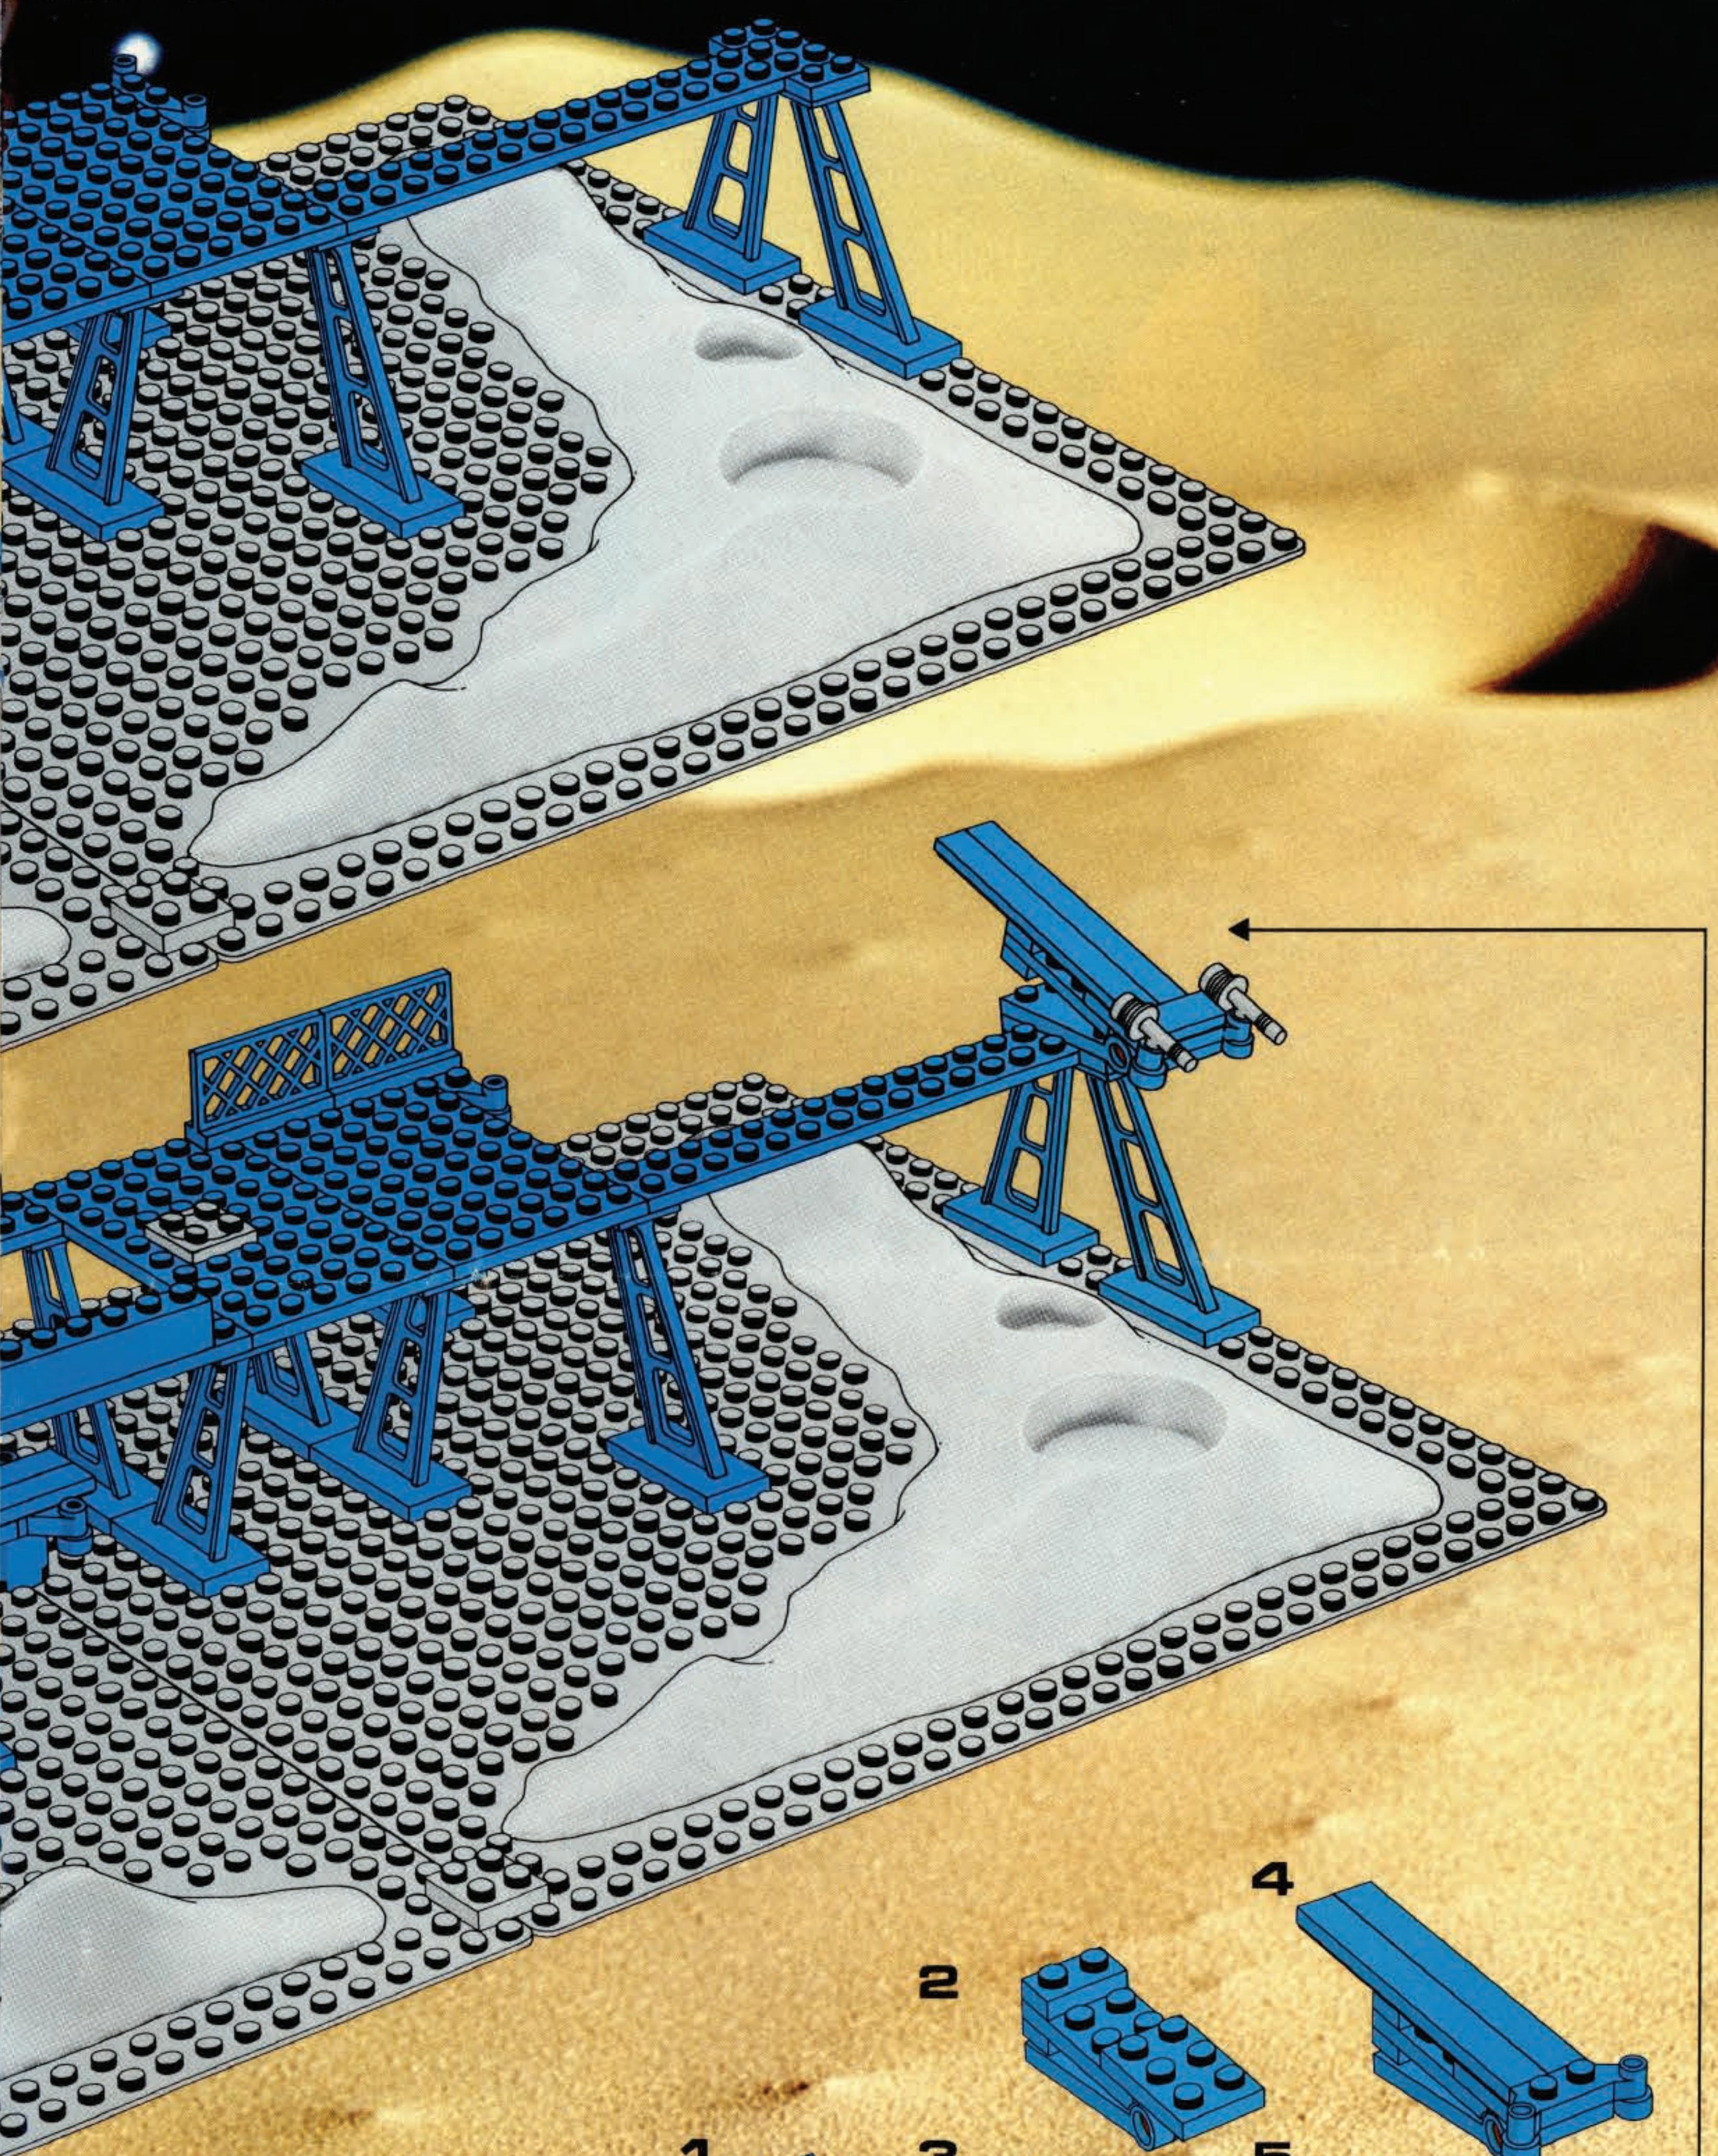

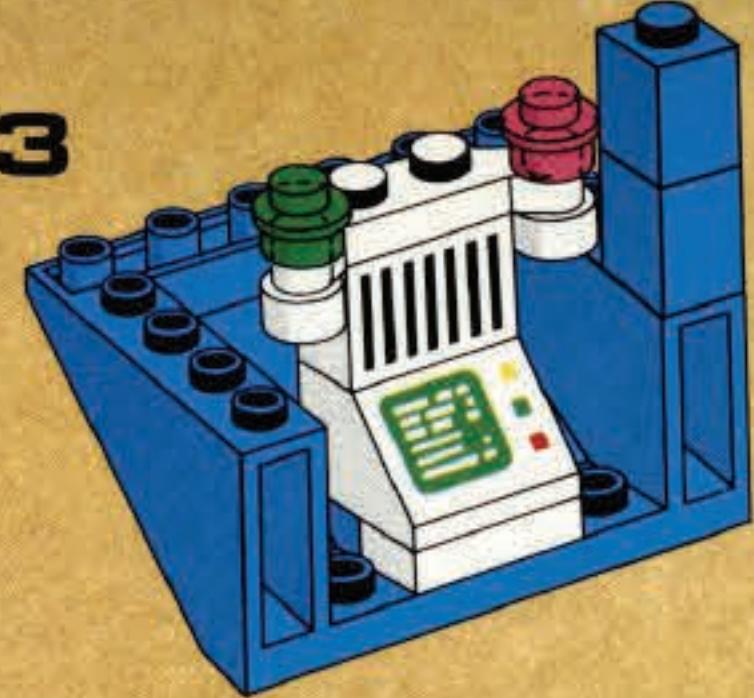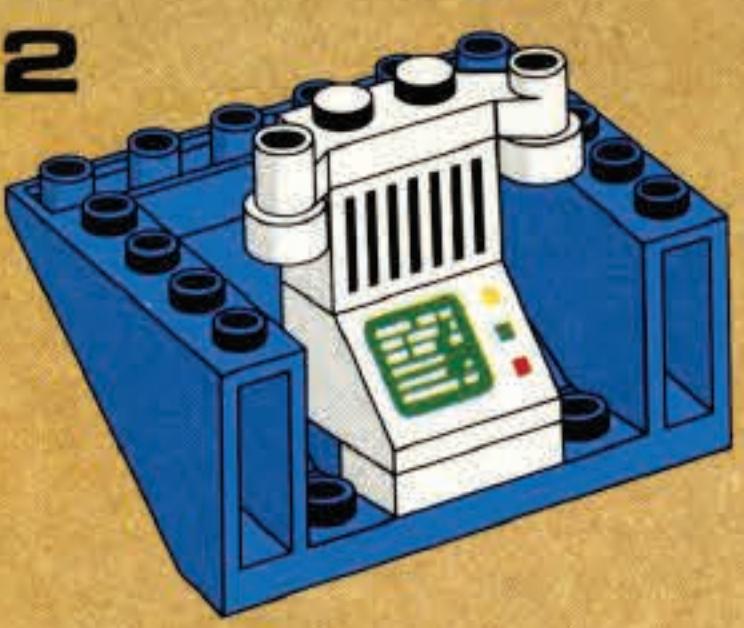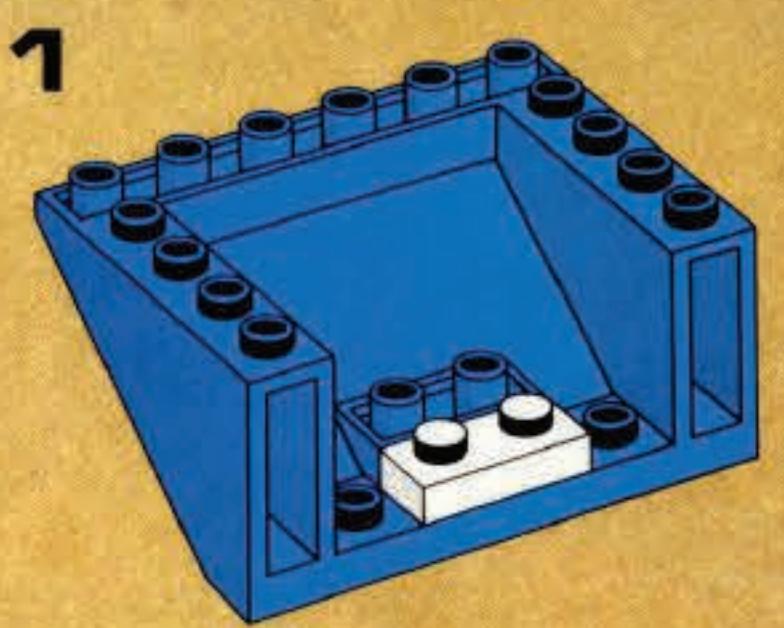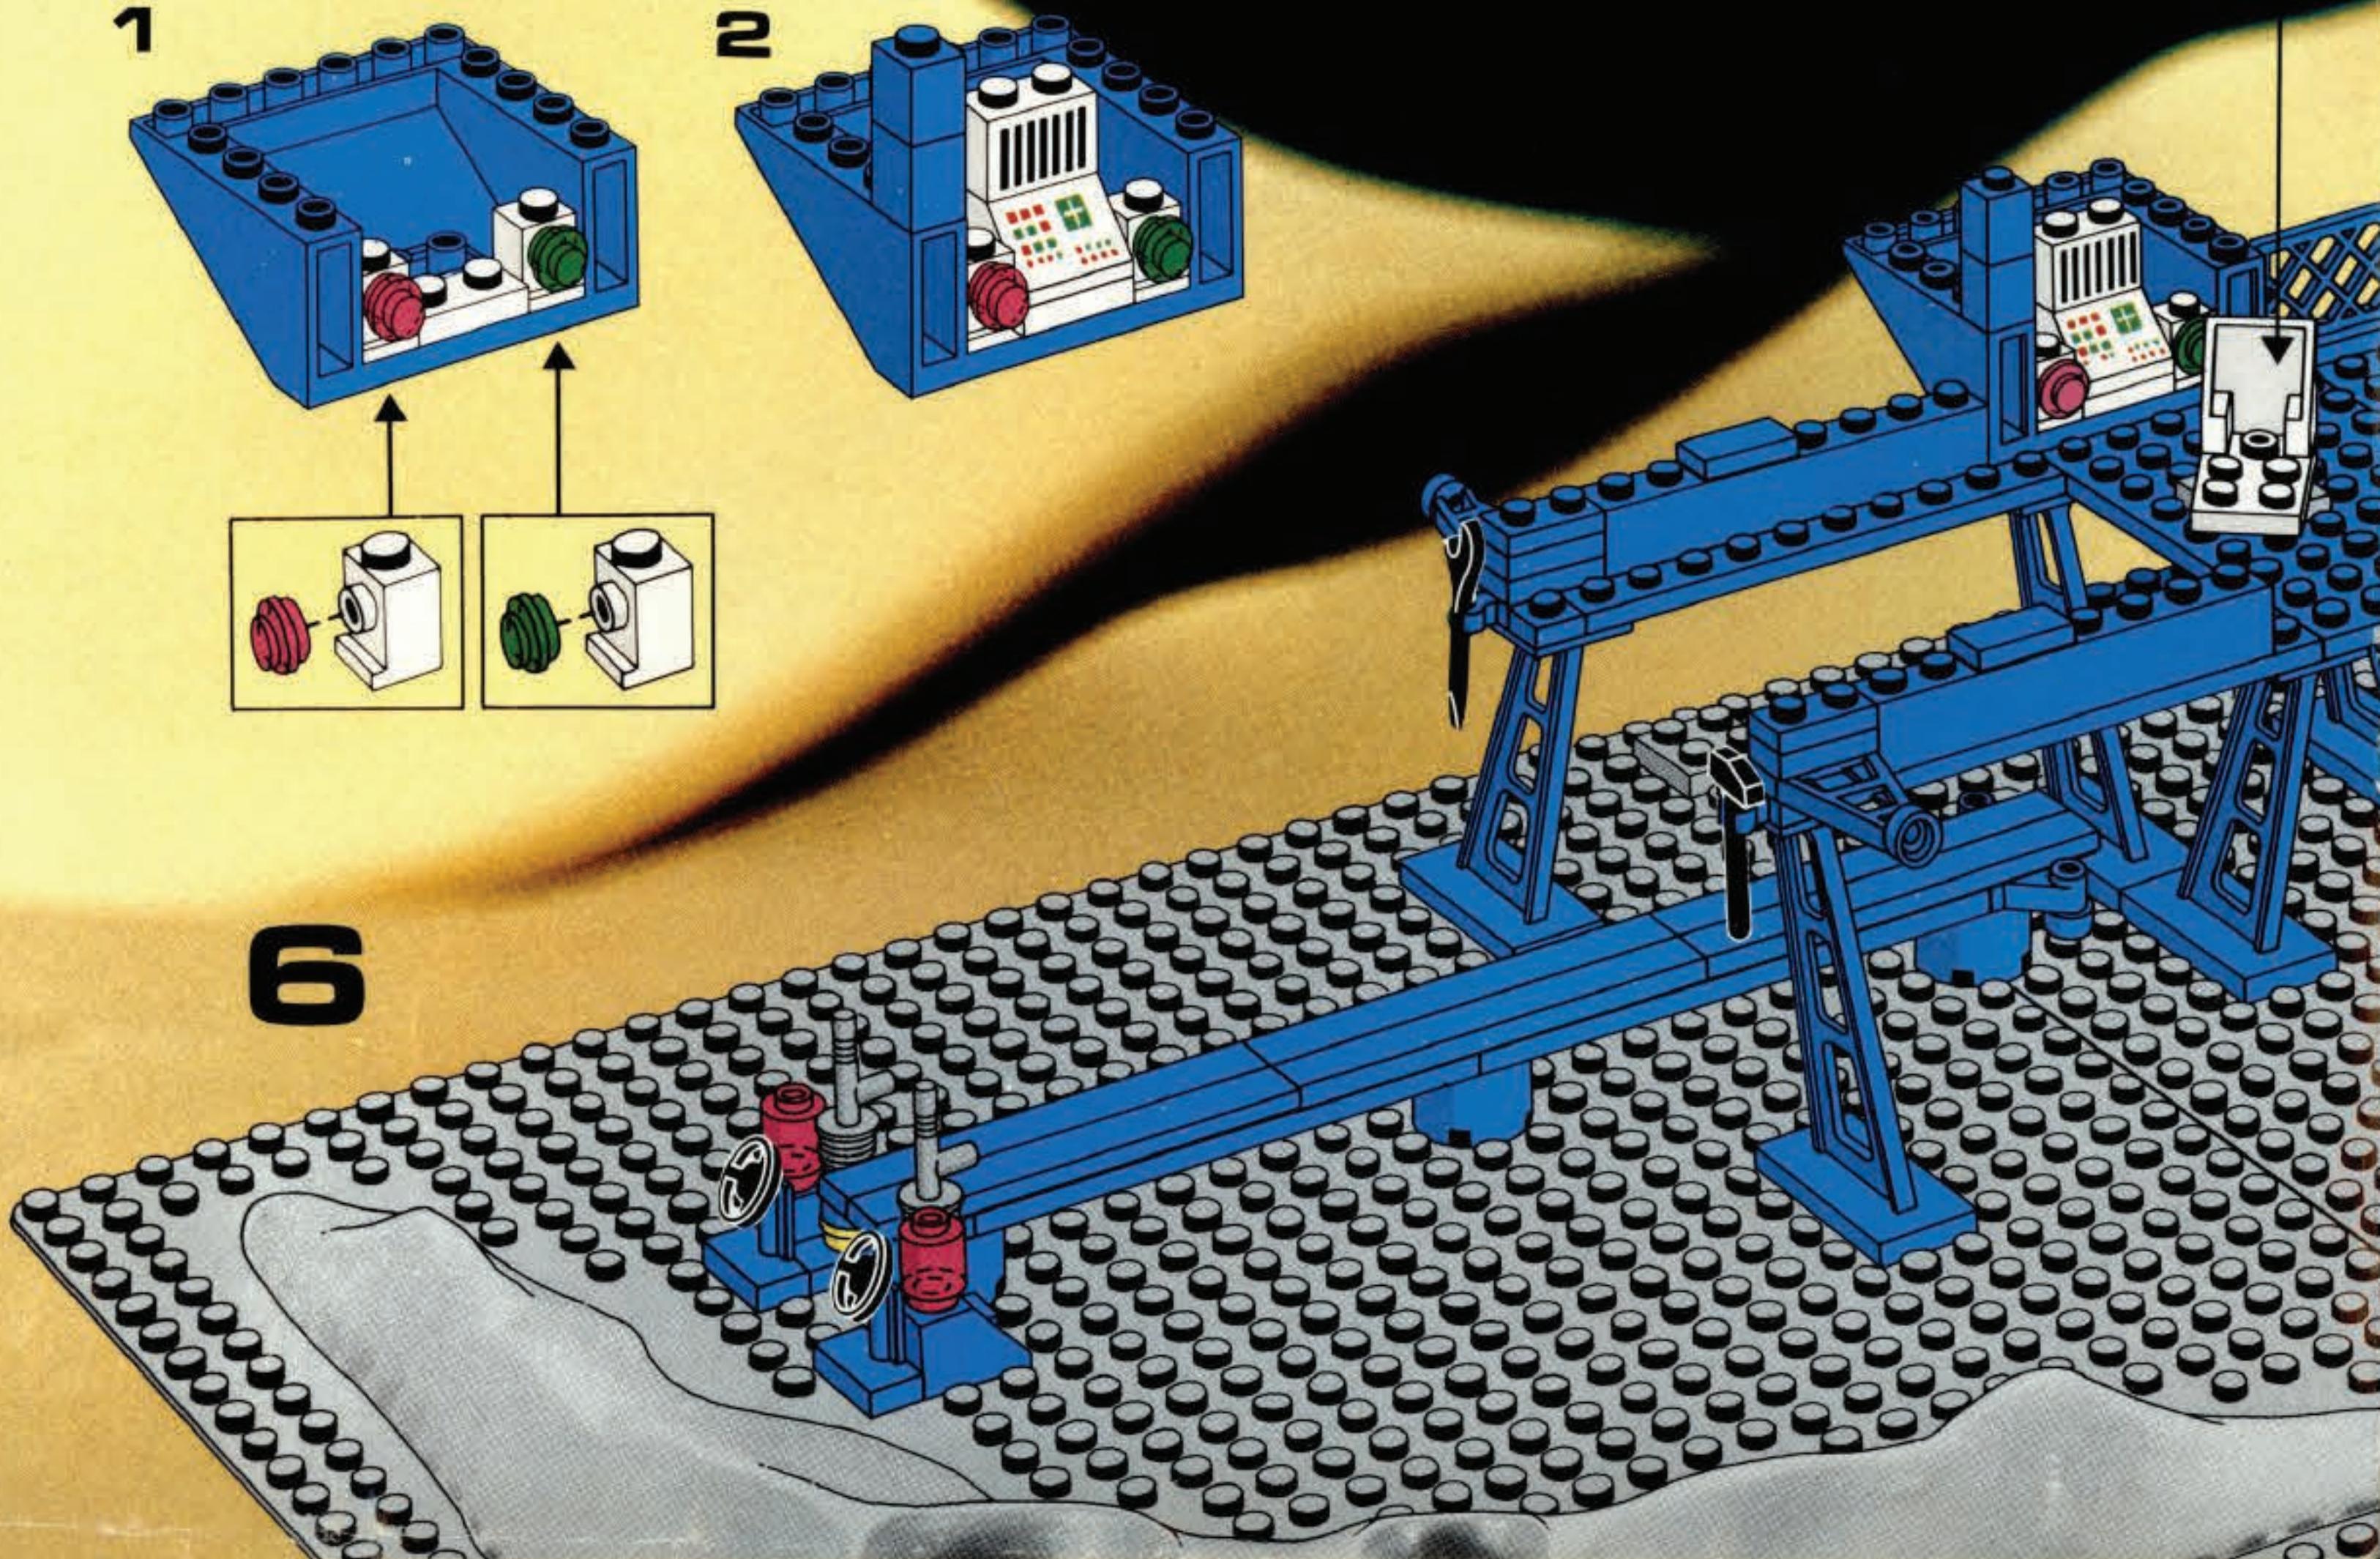
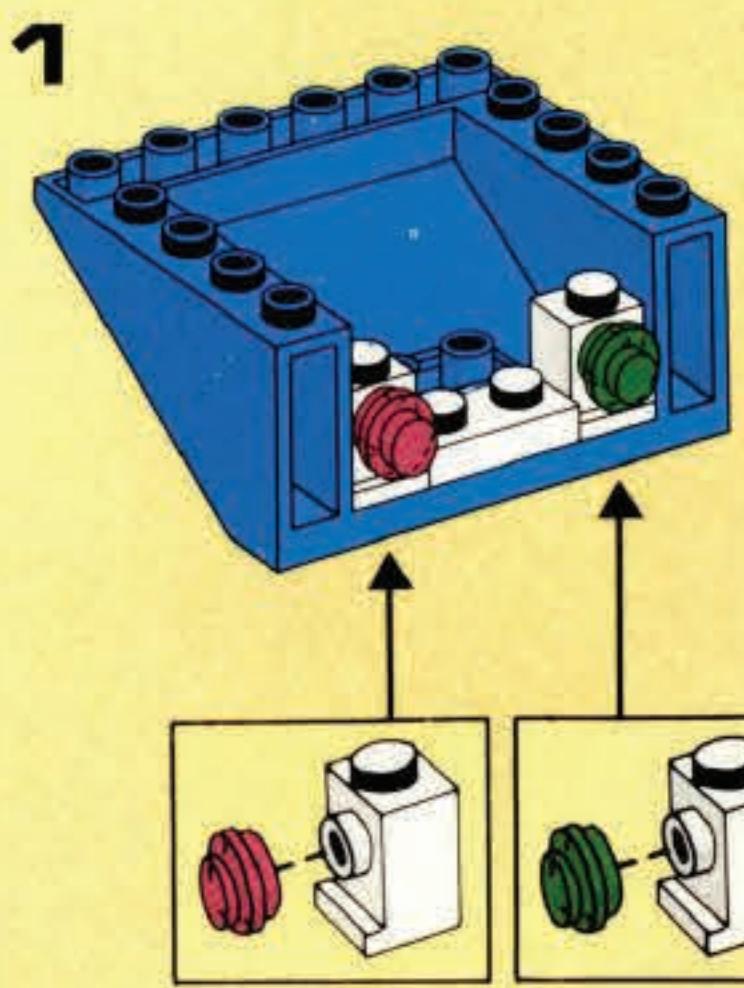


7

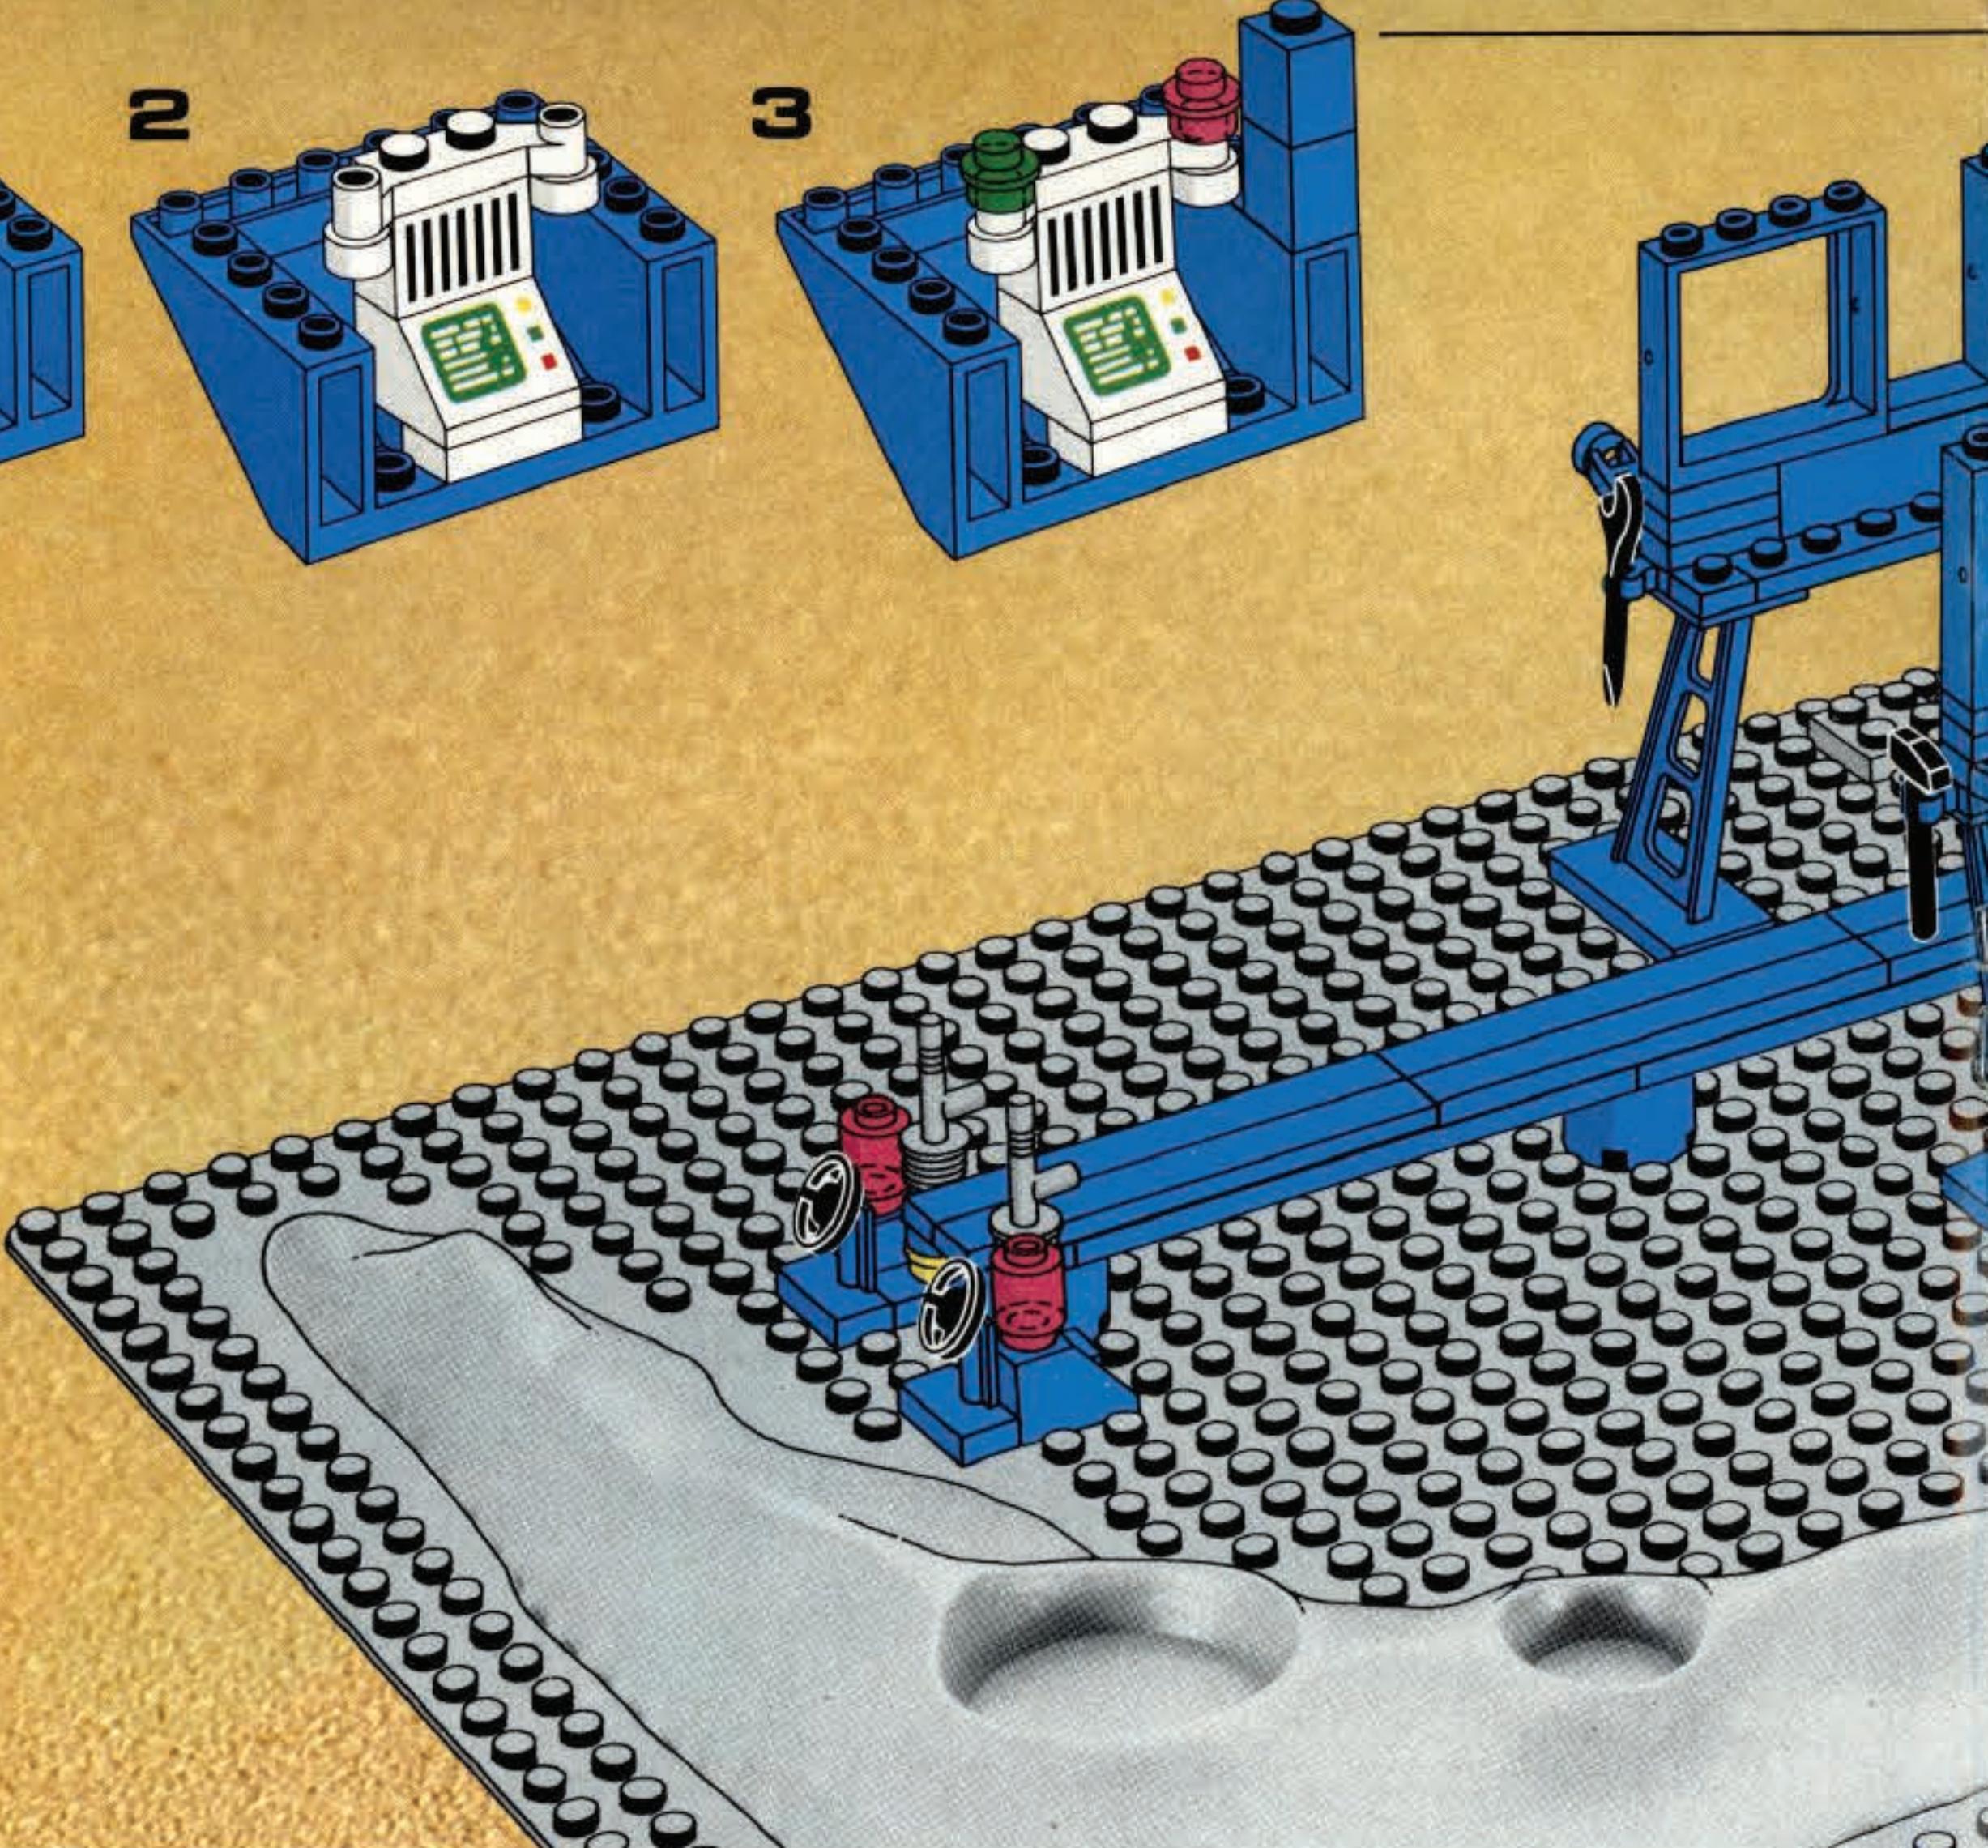





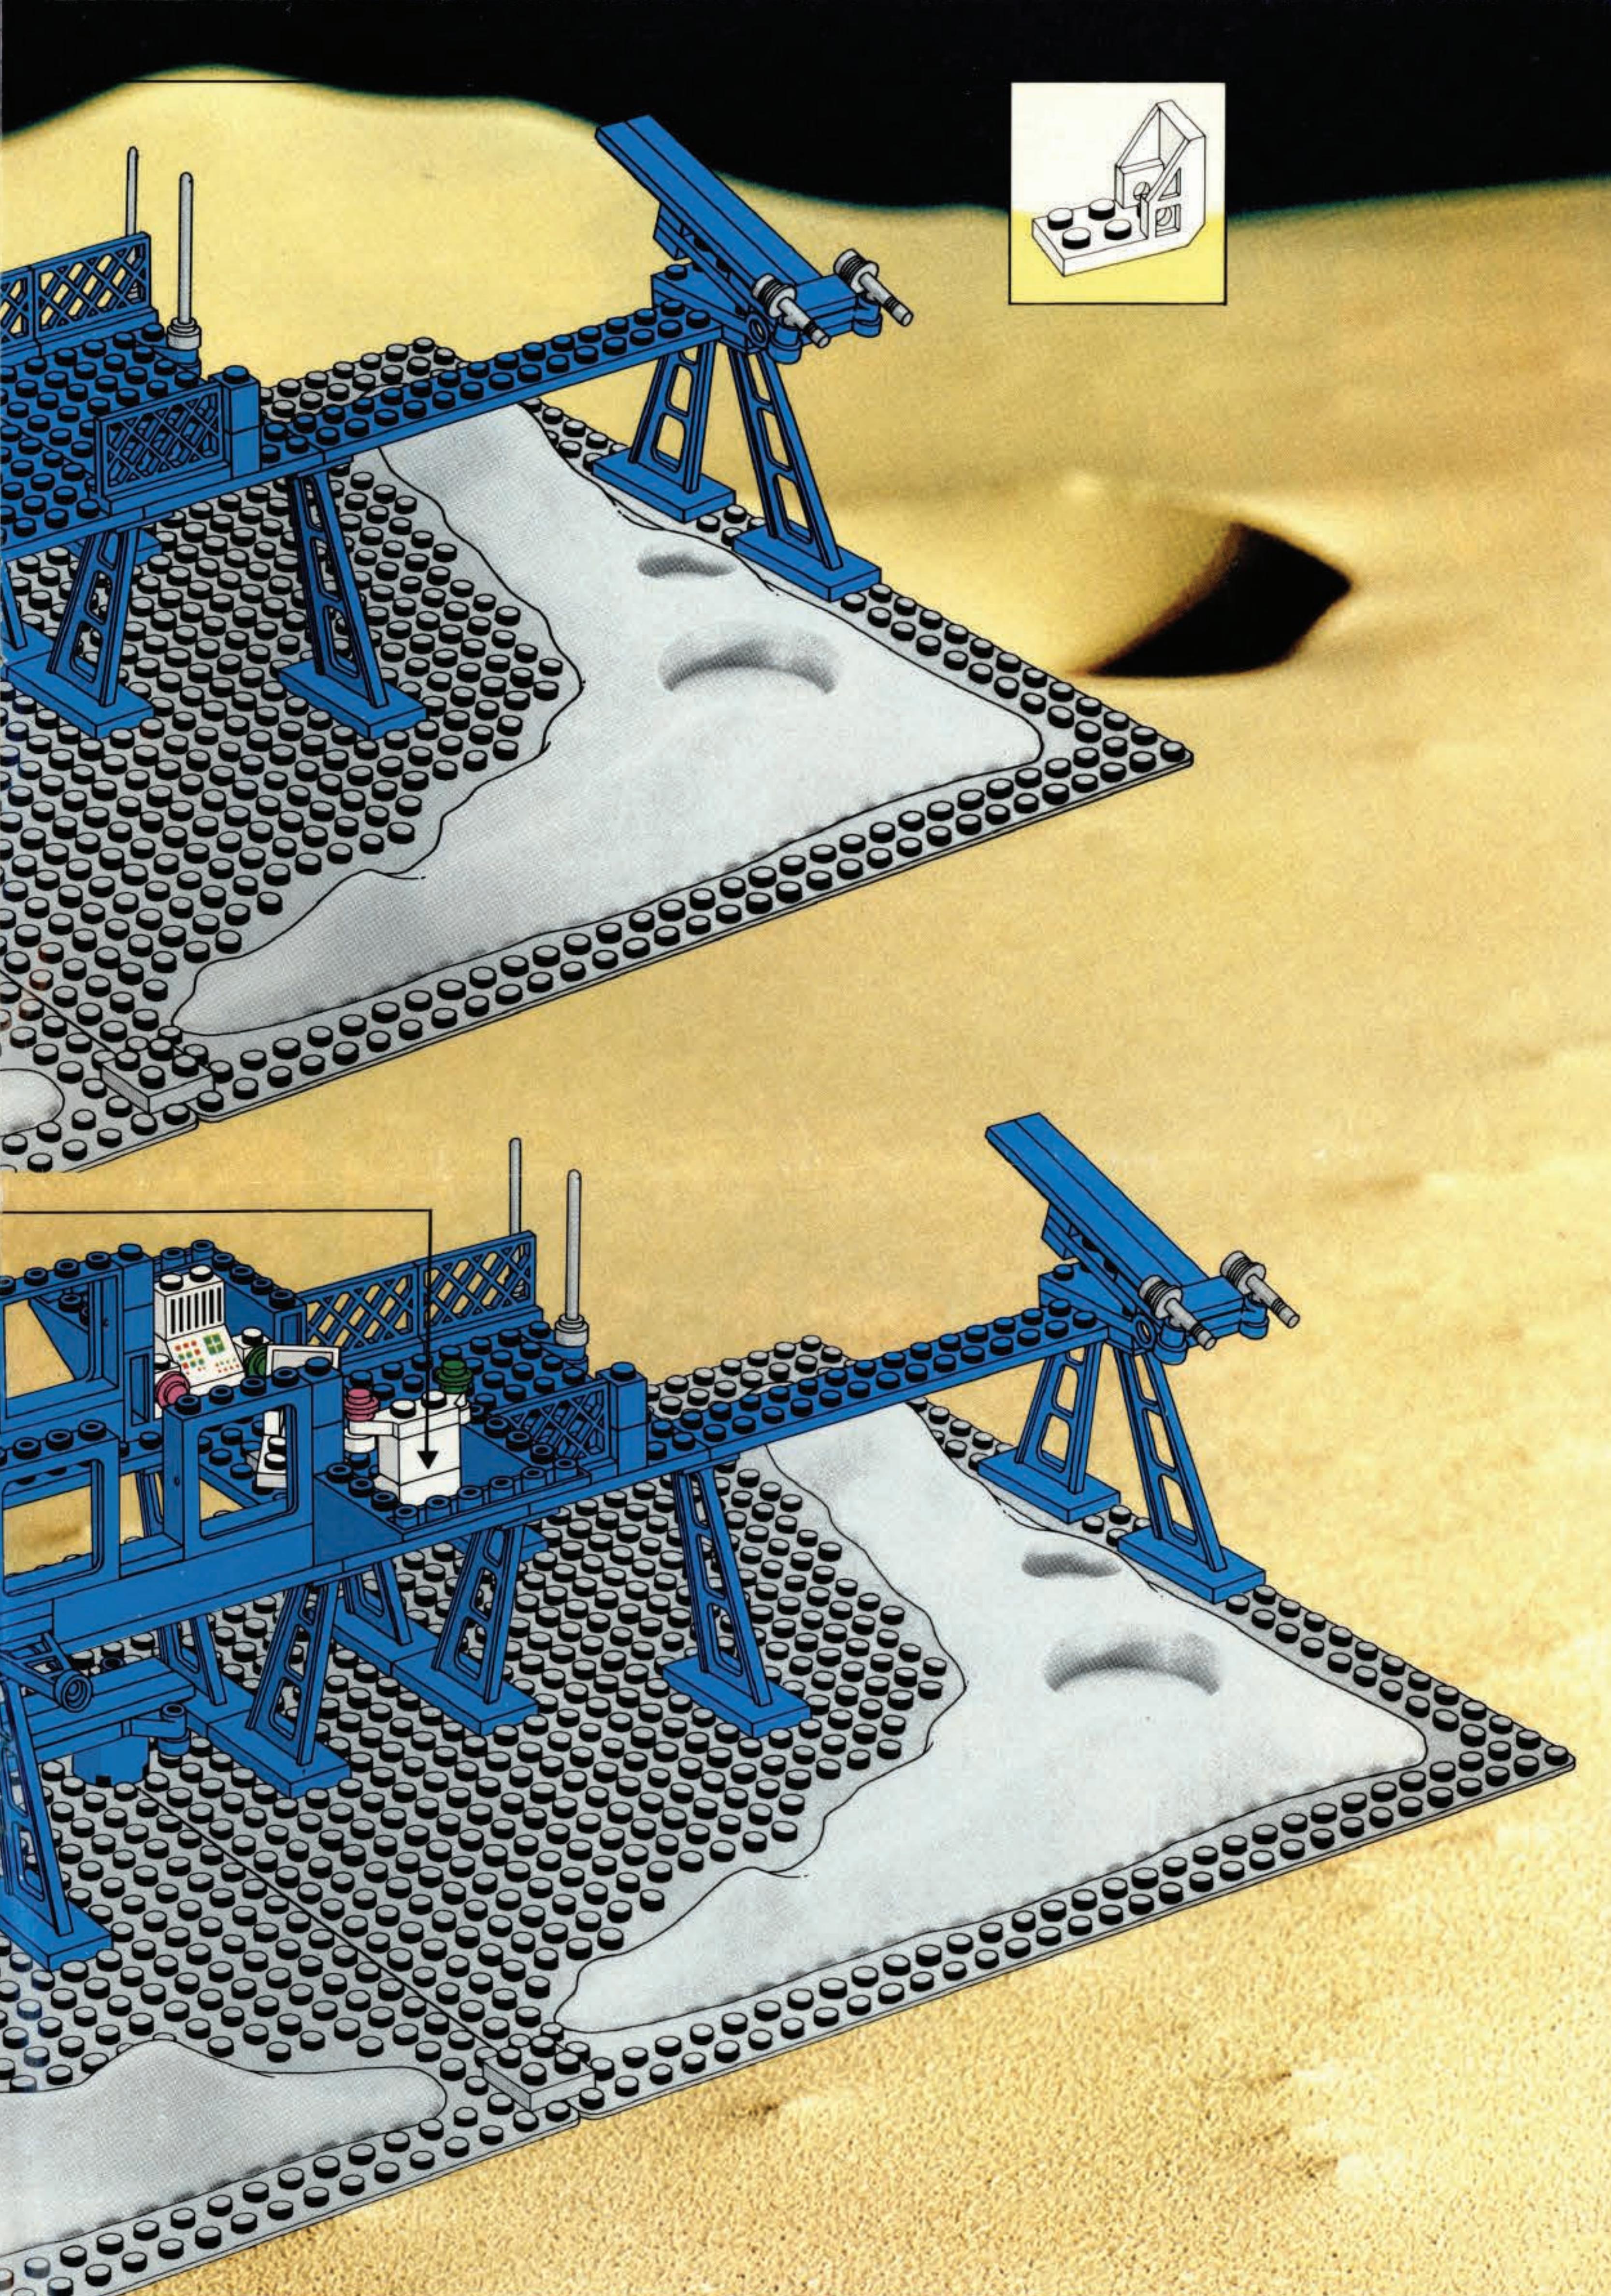









8

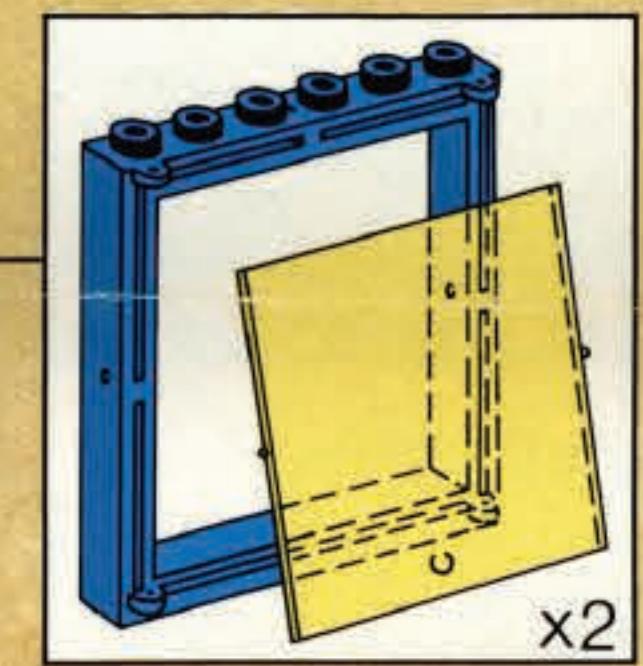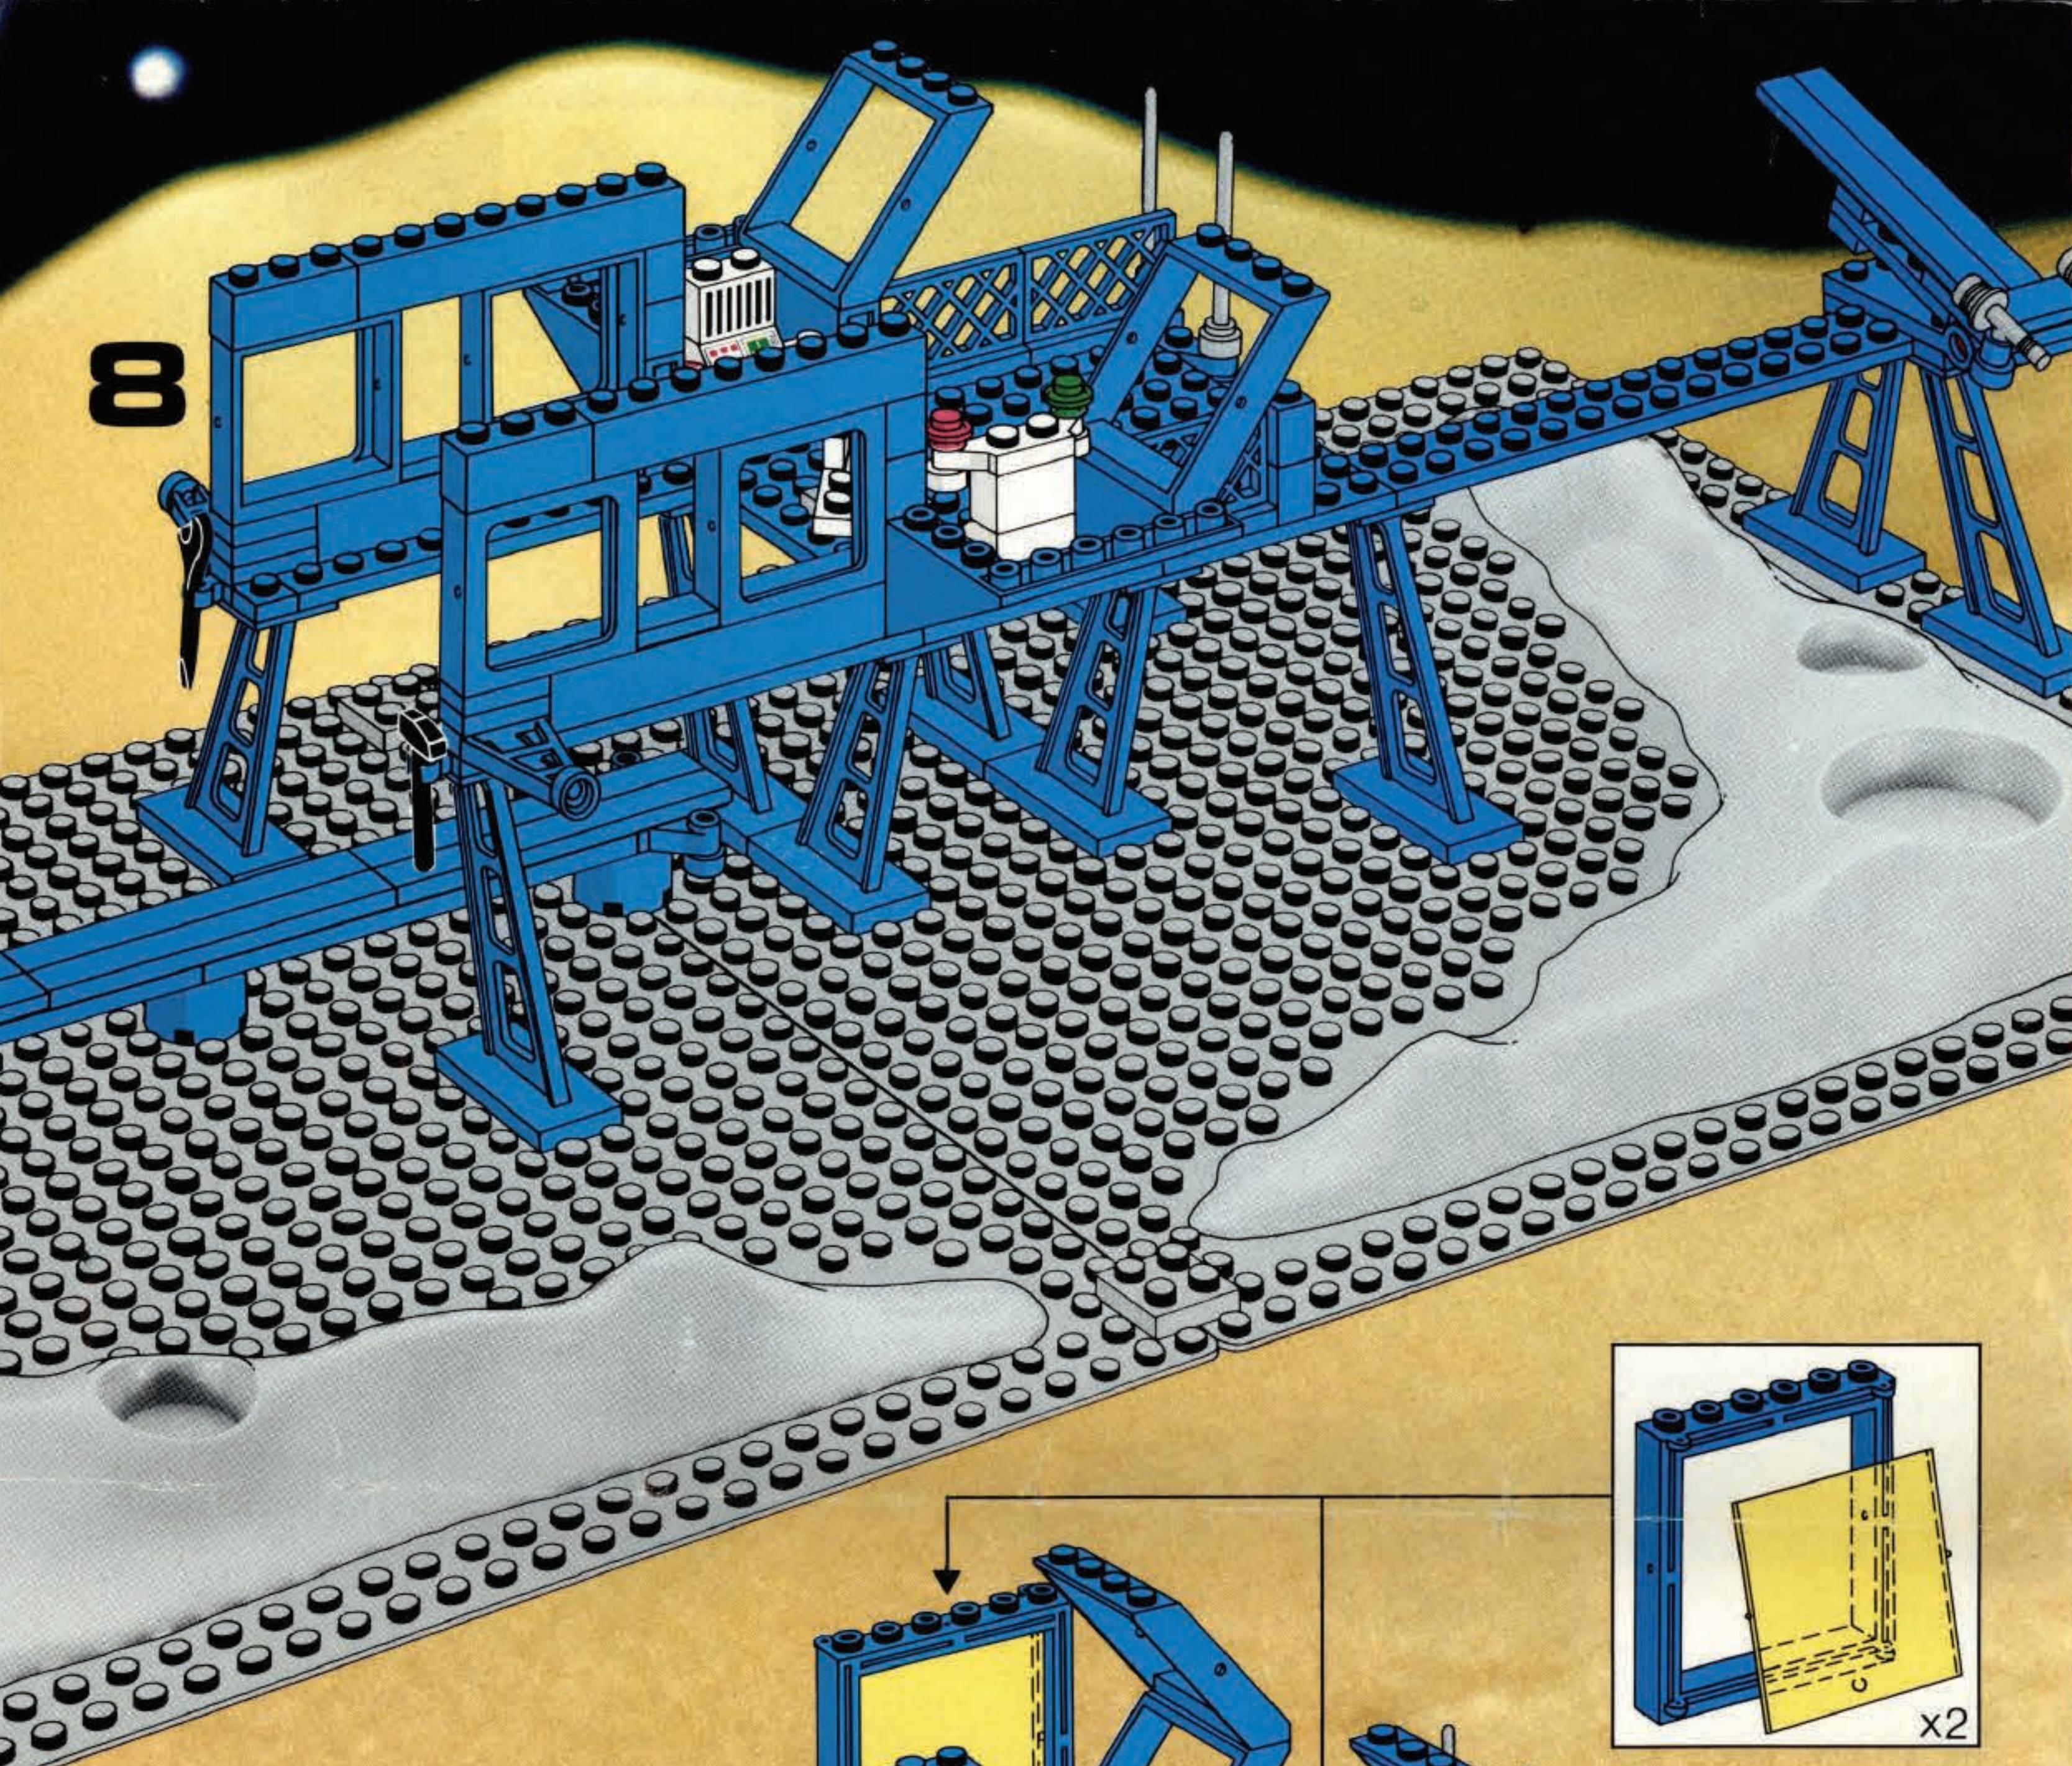





9

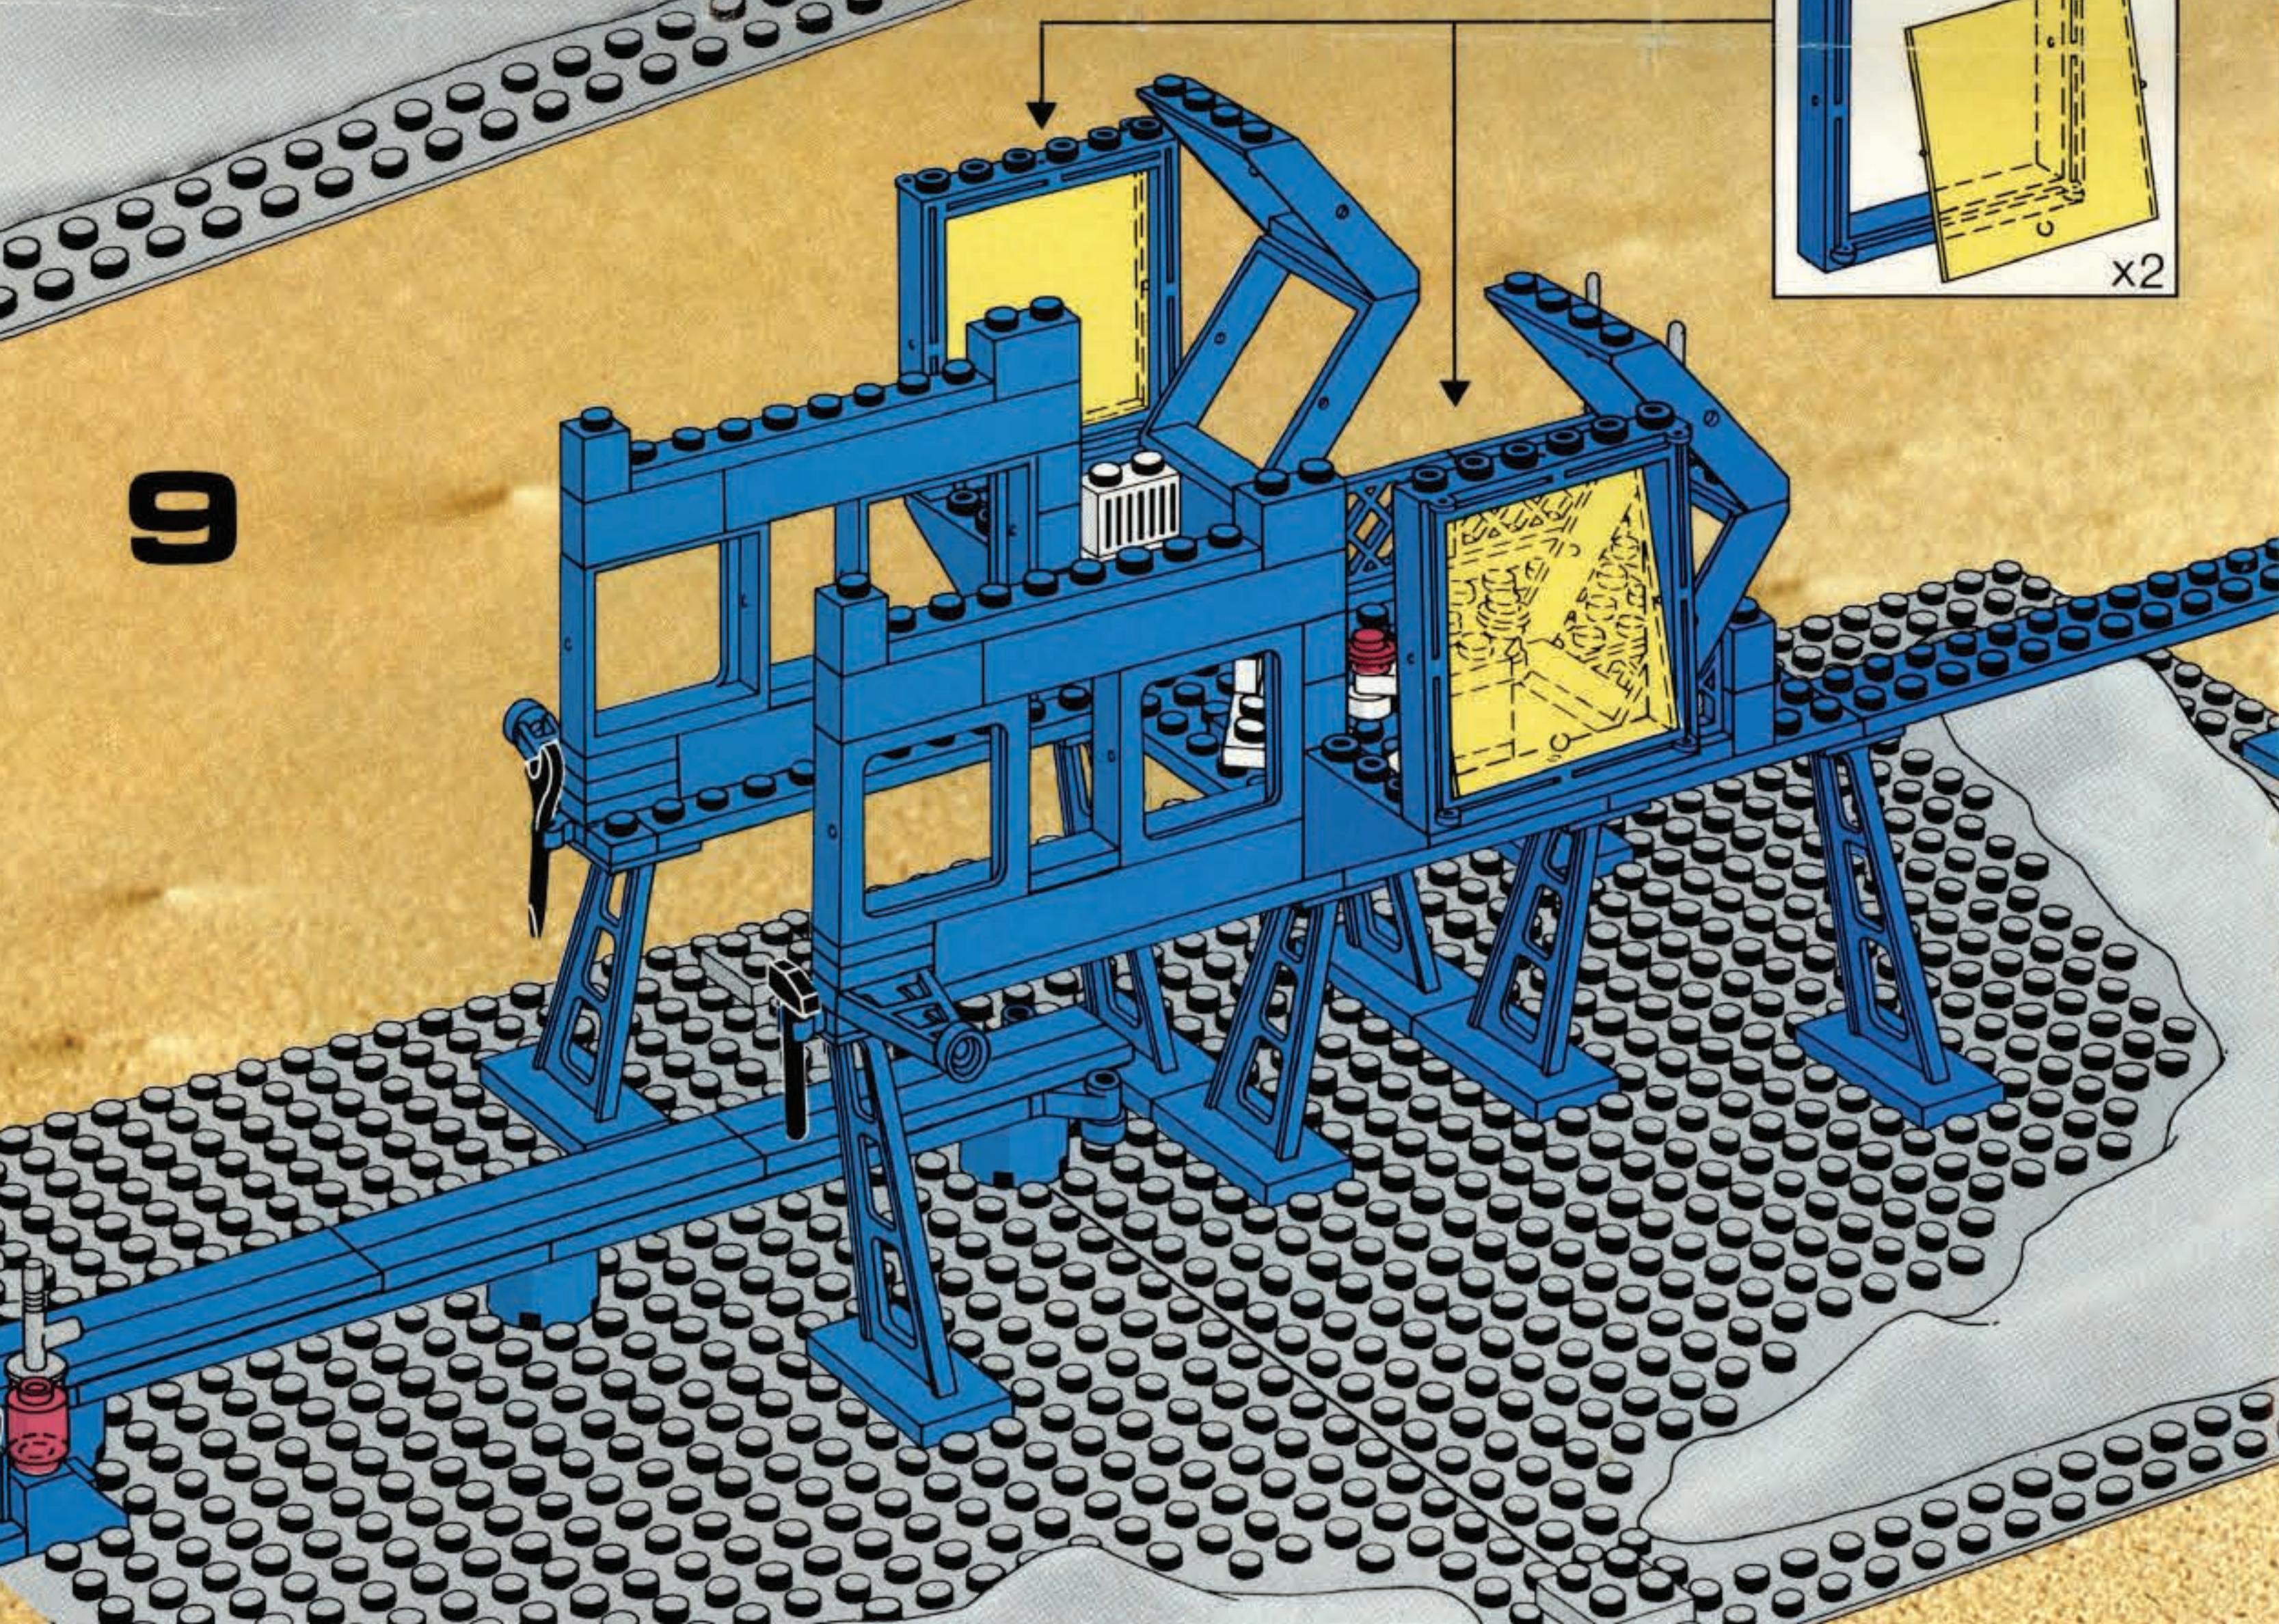

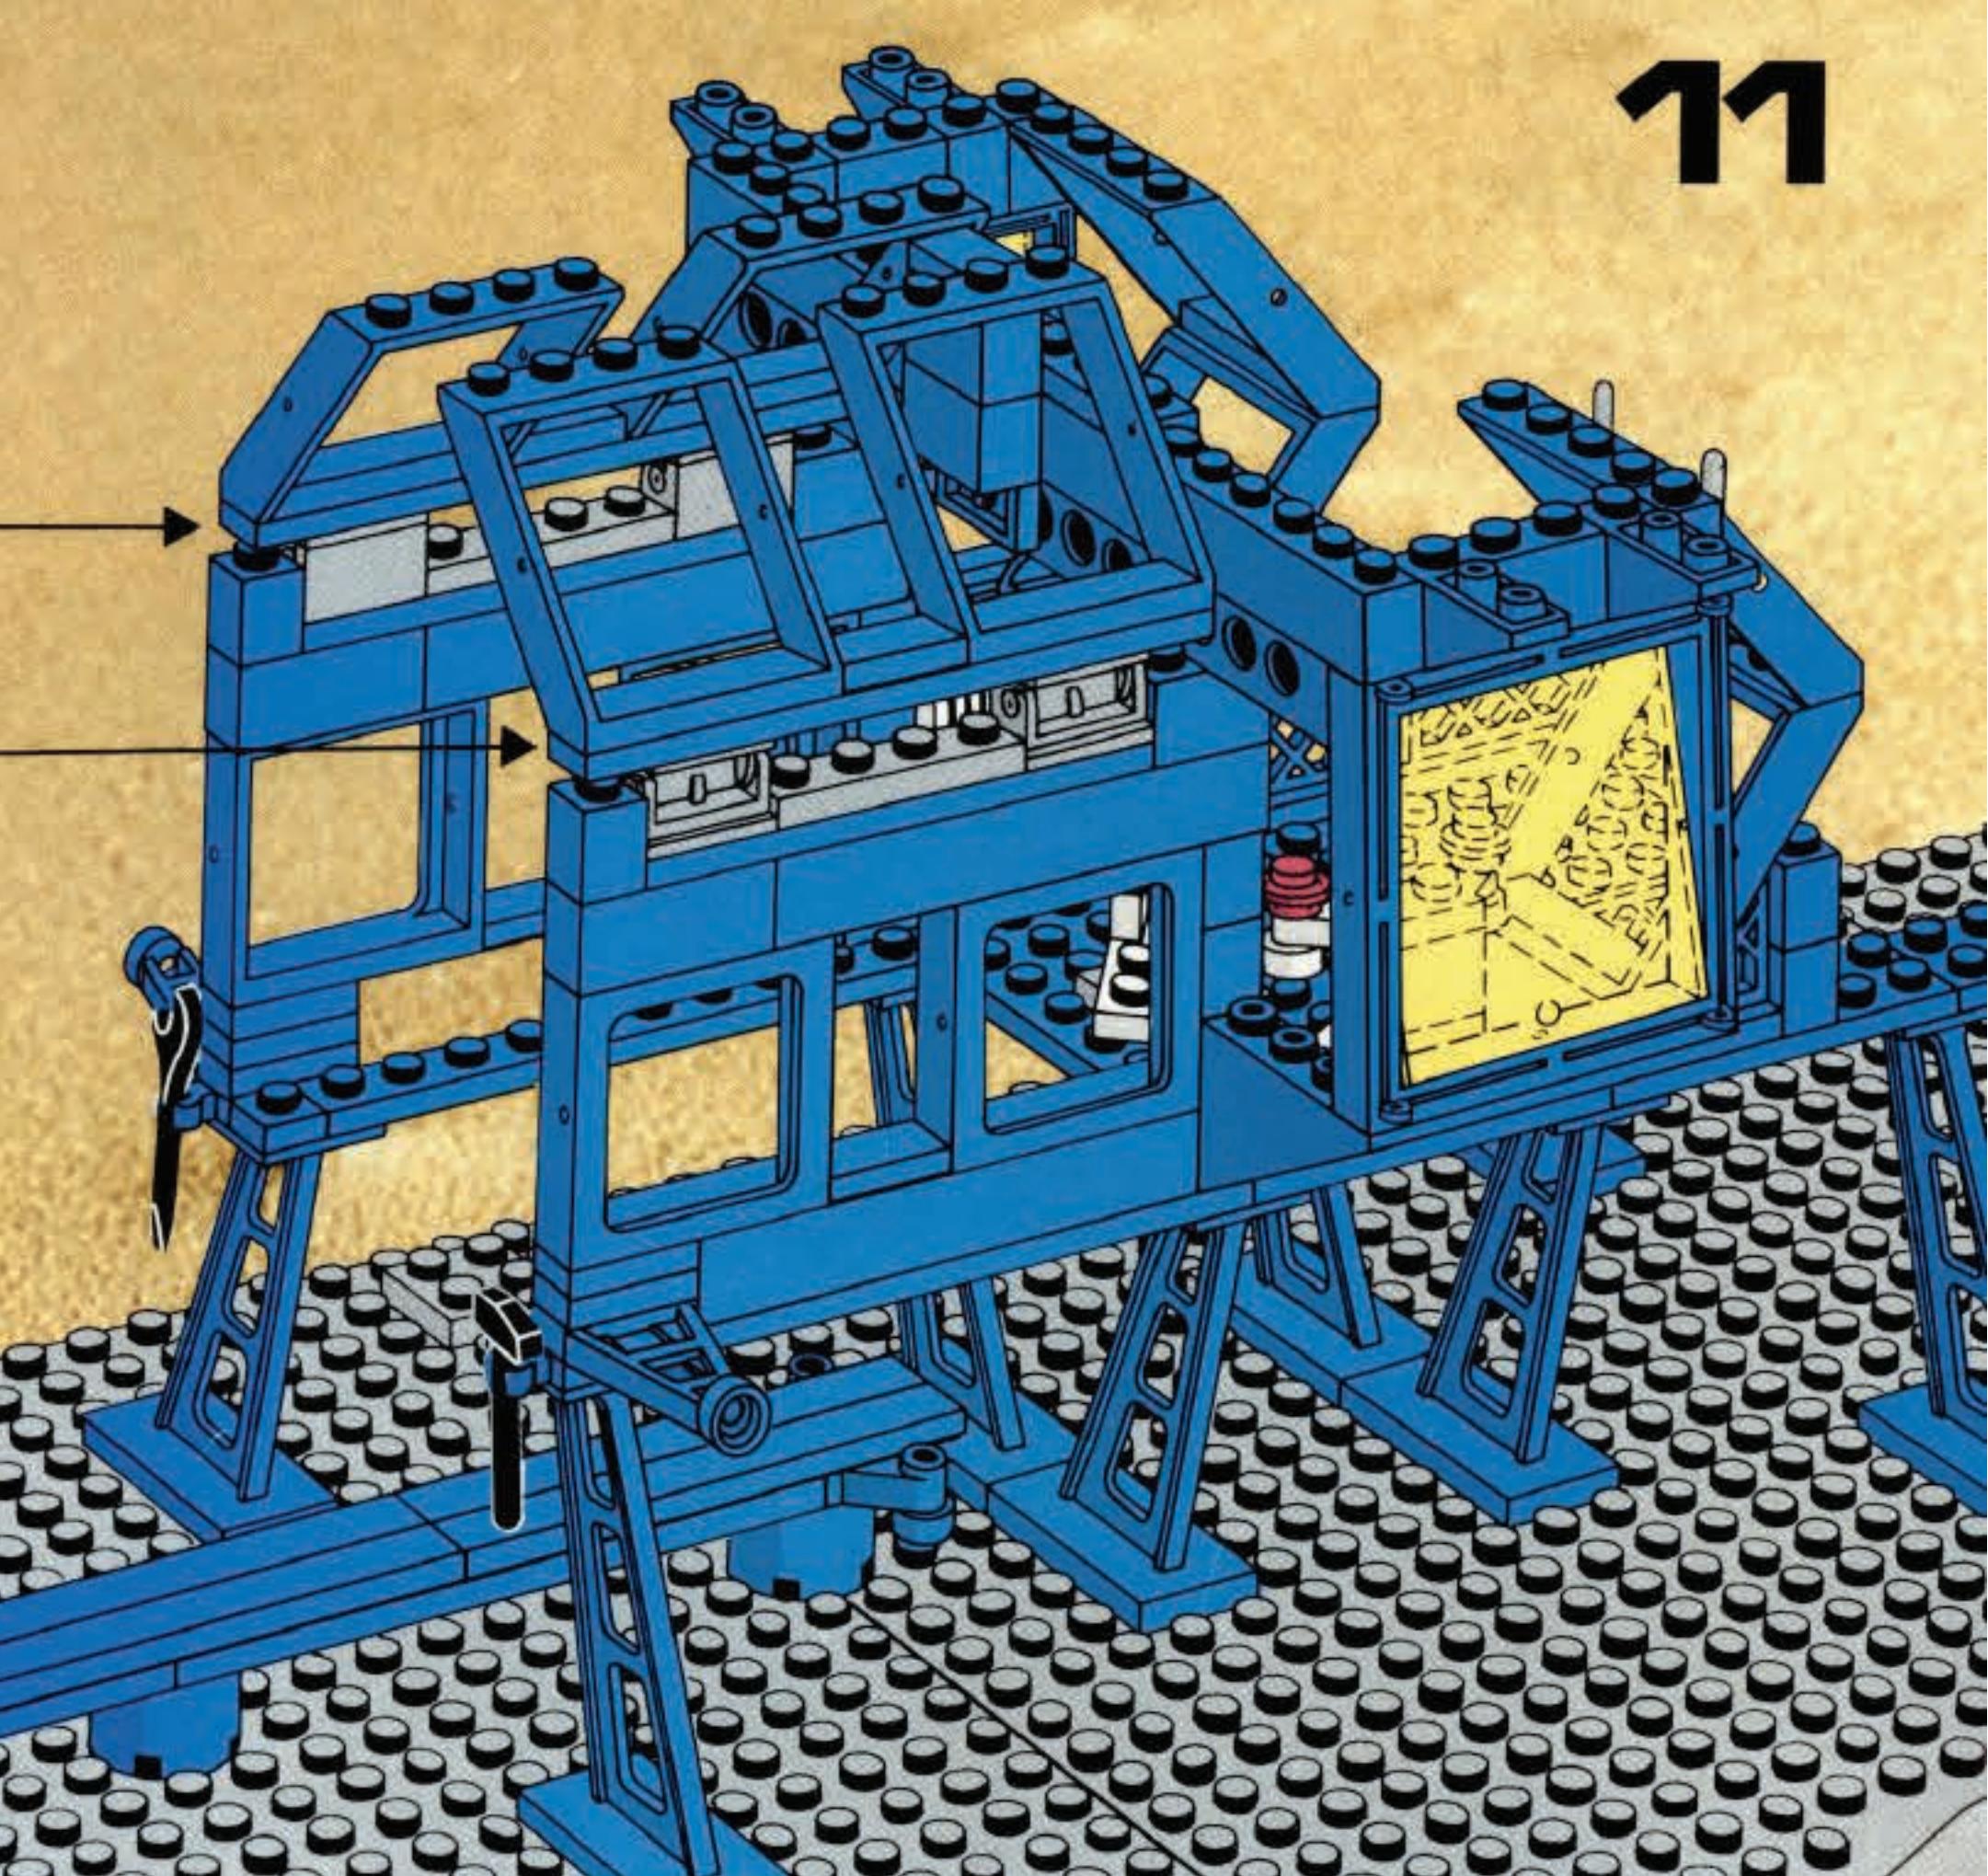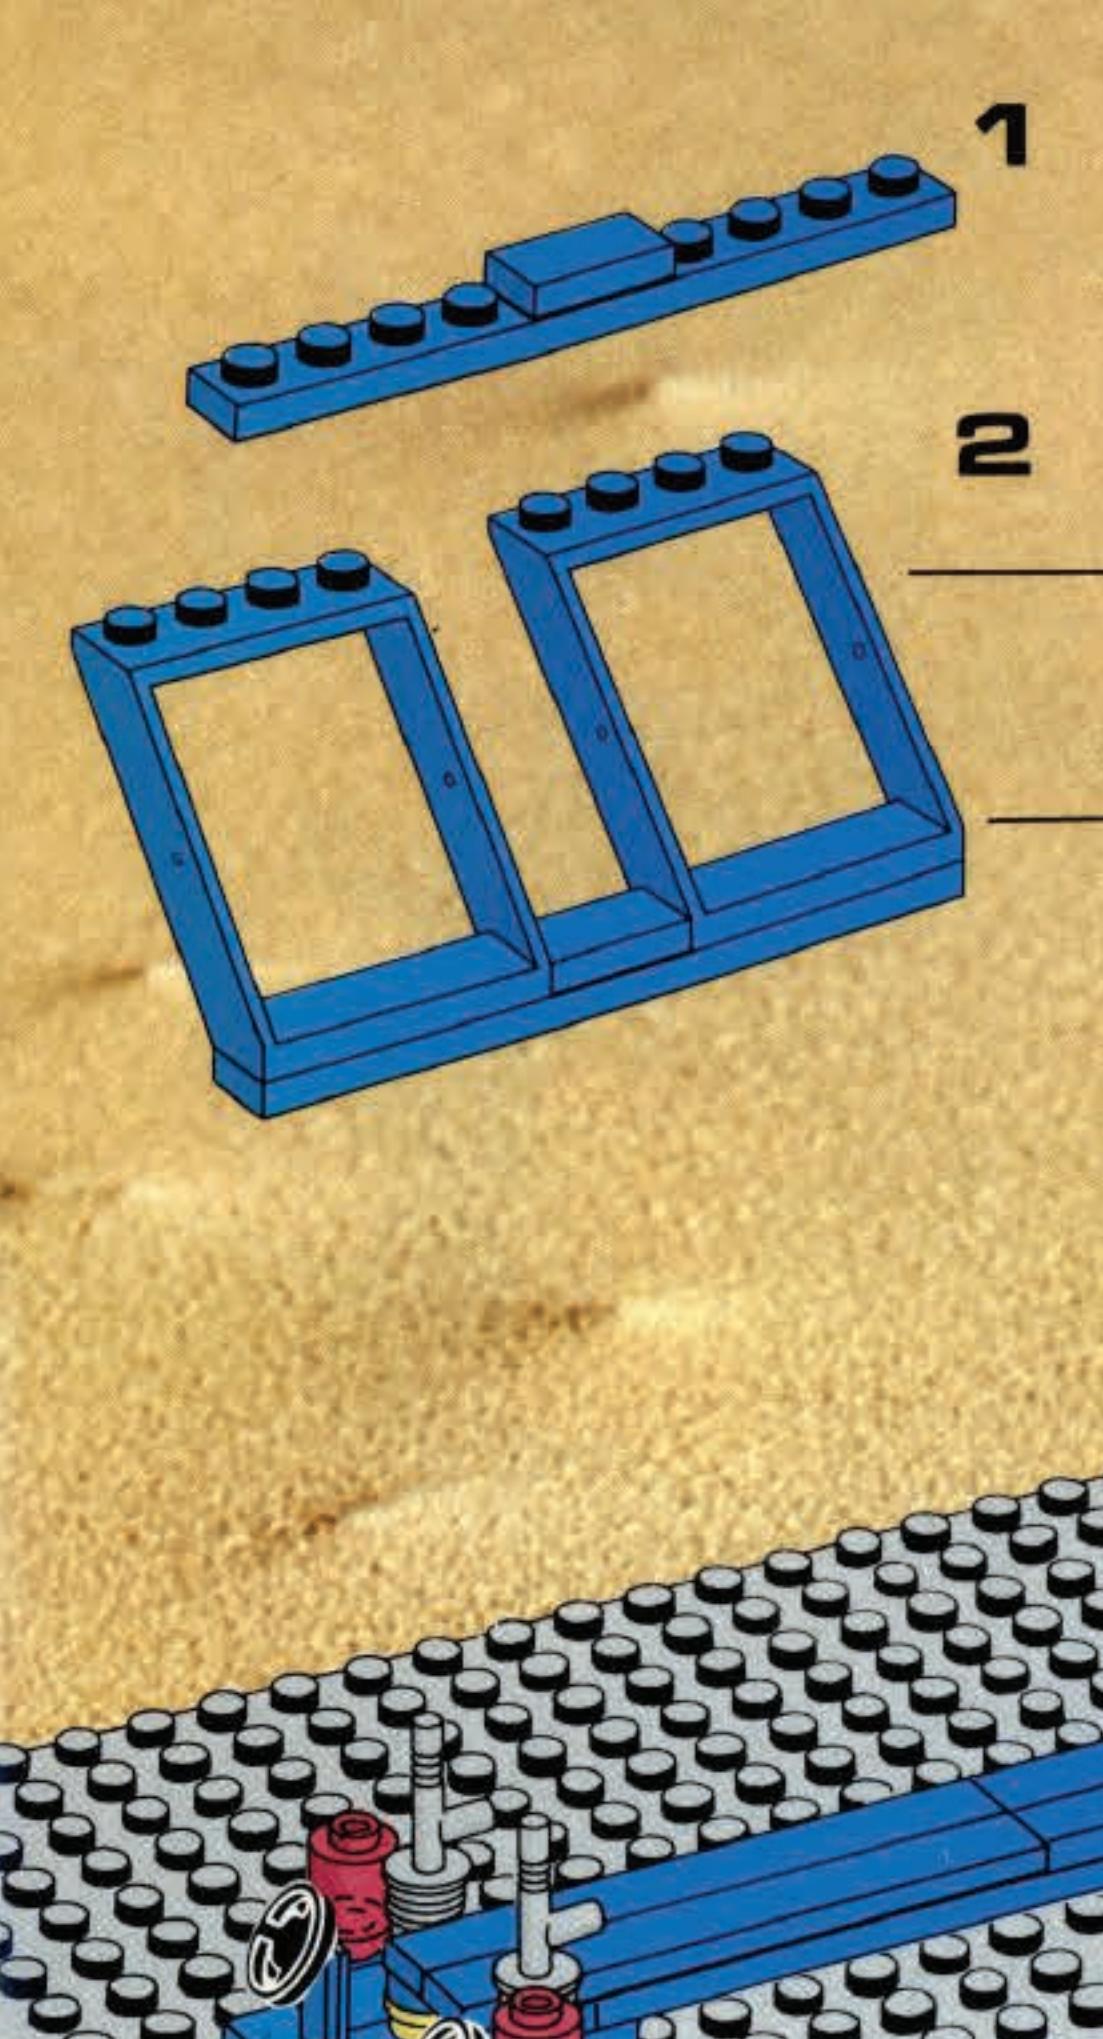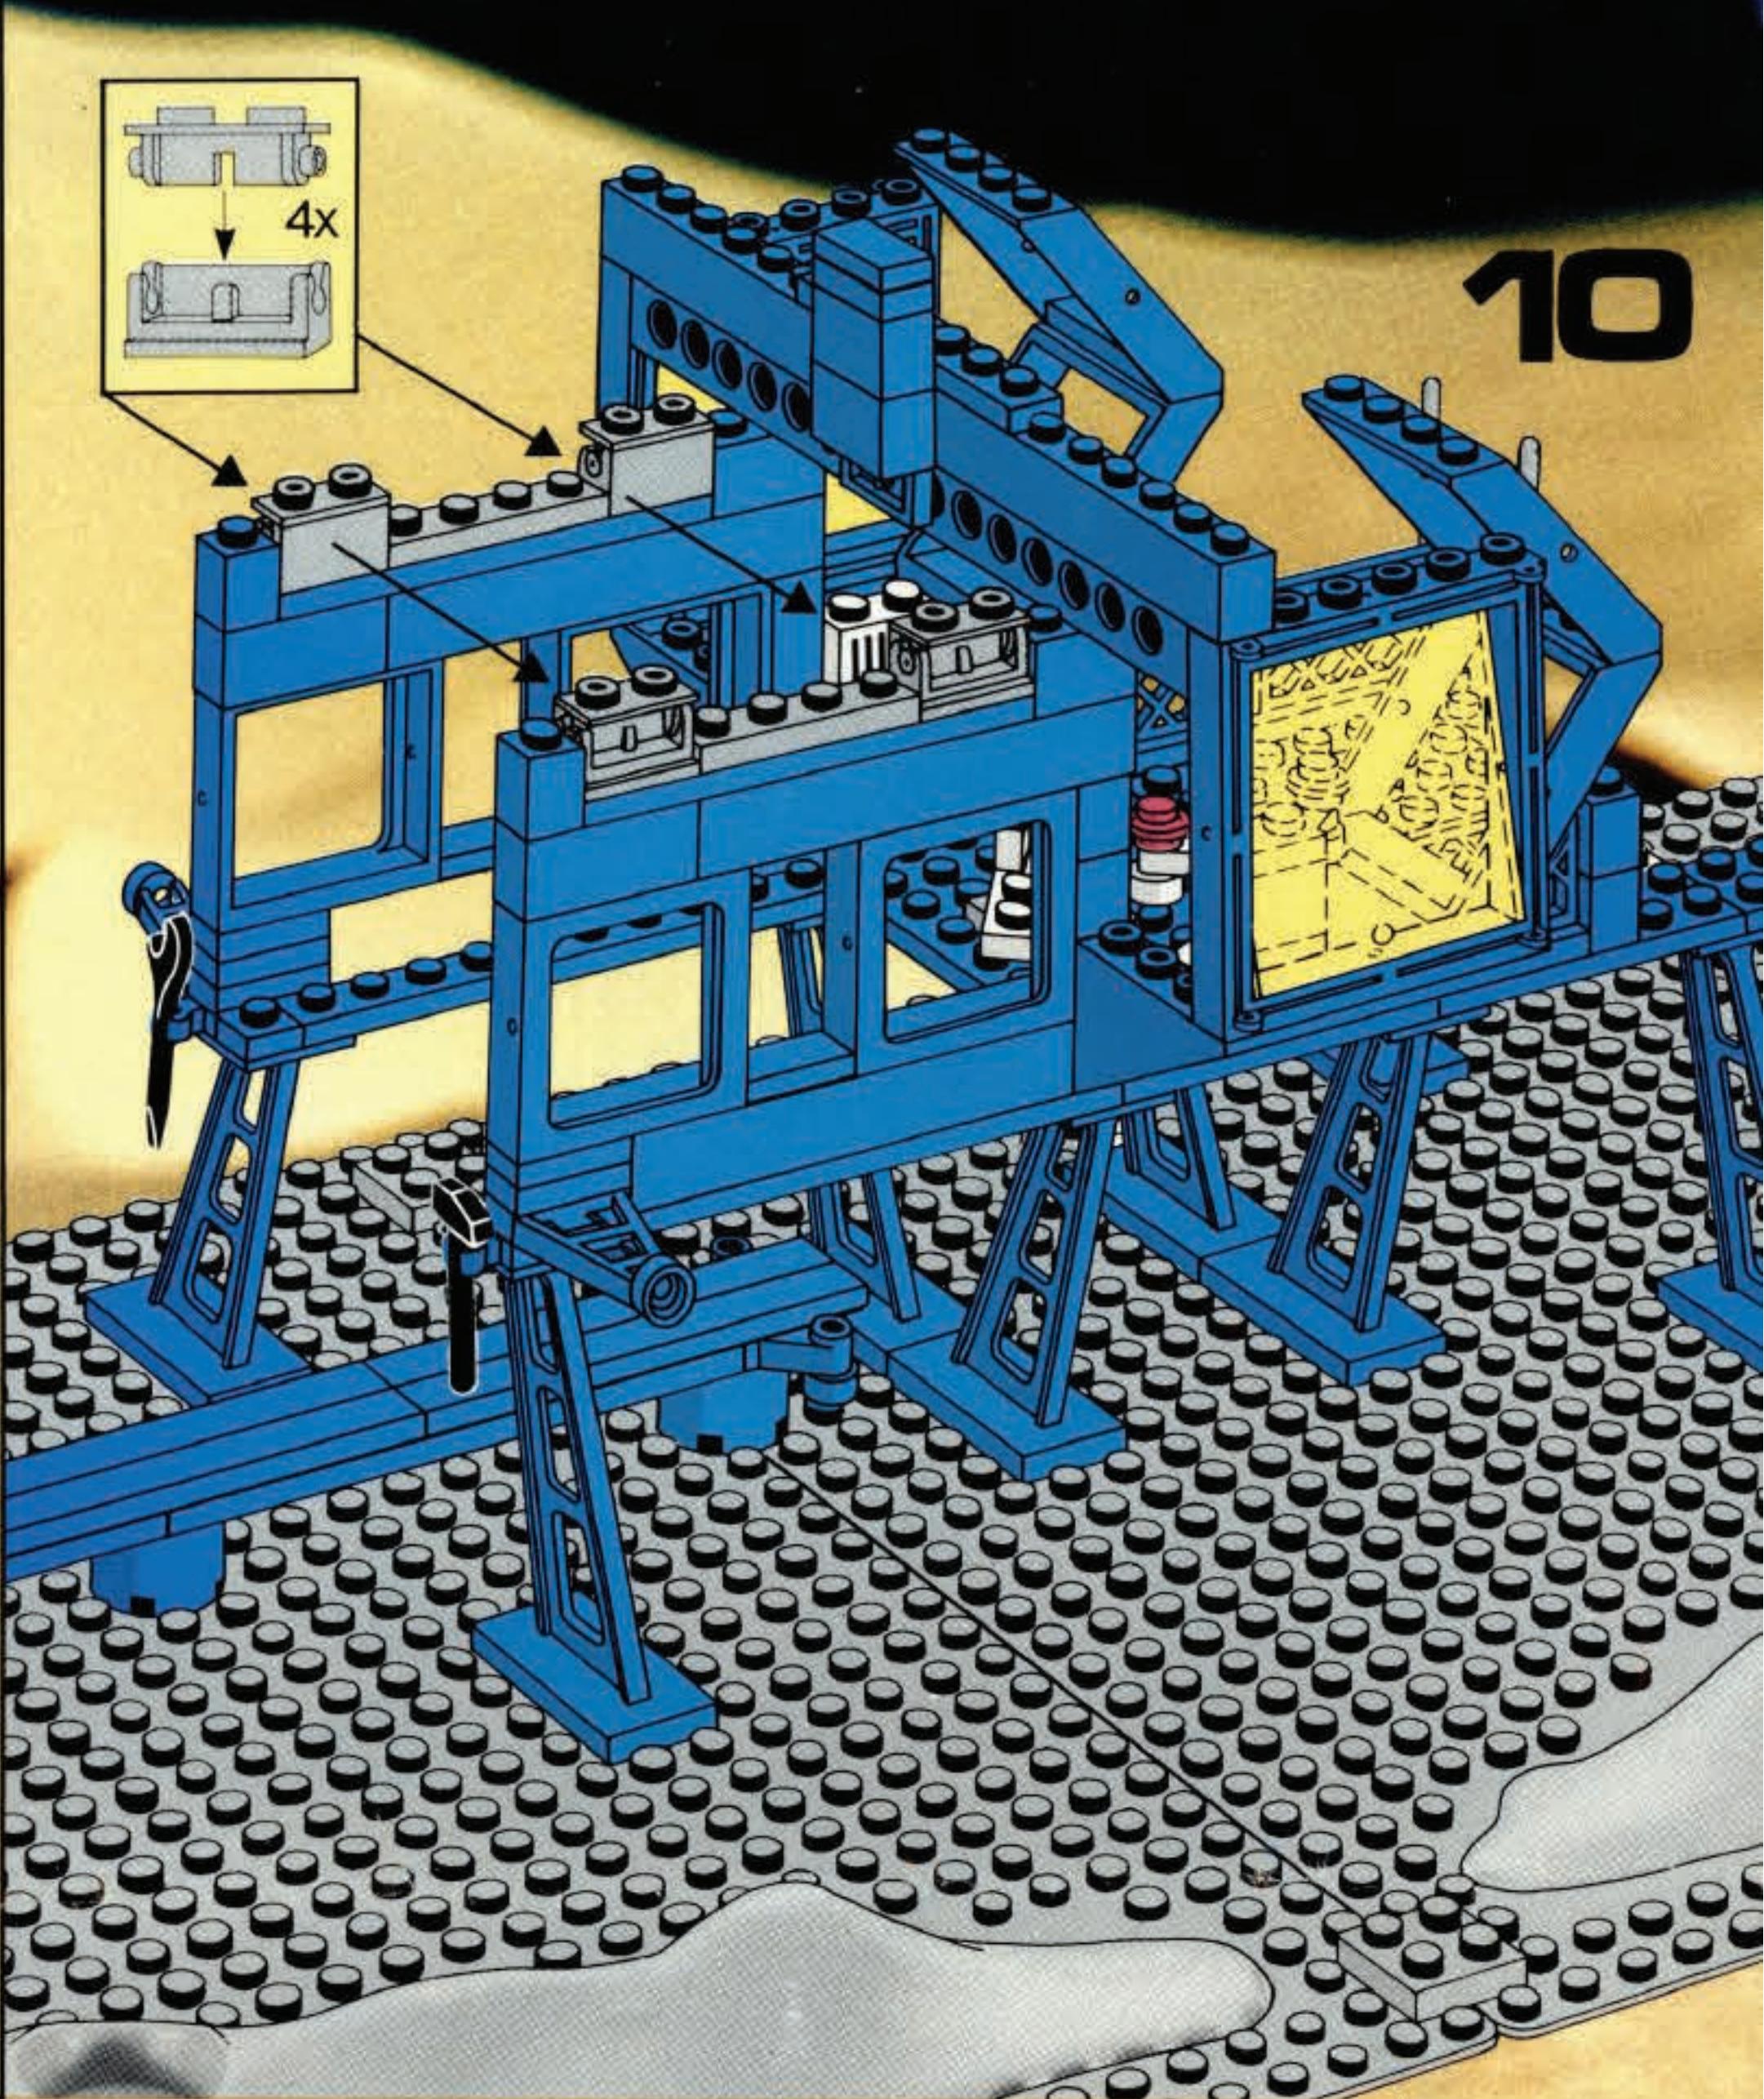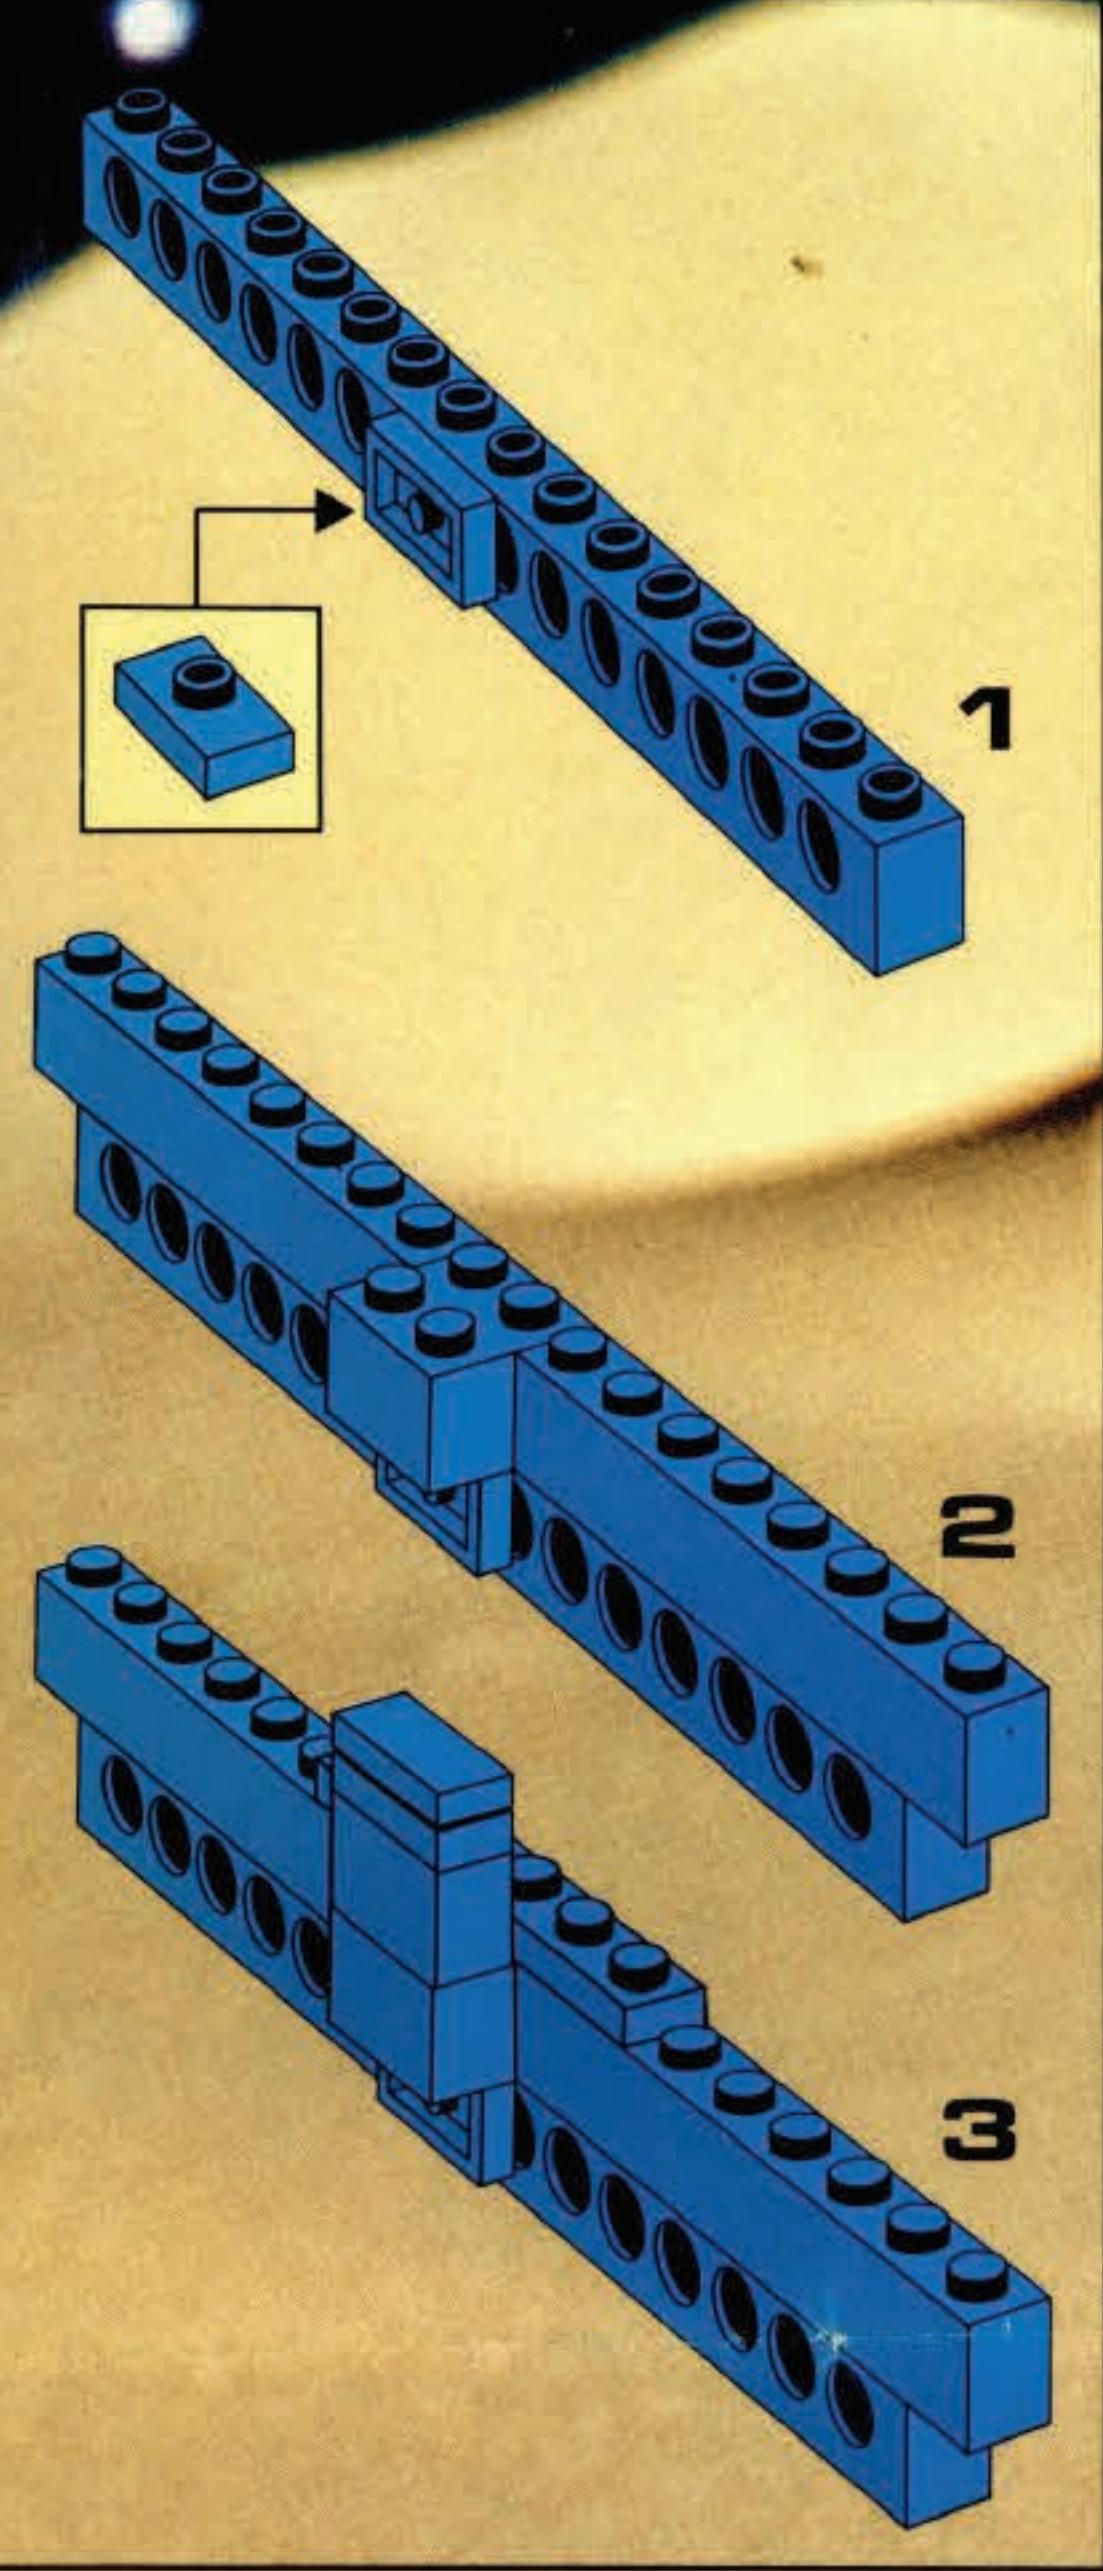

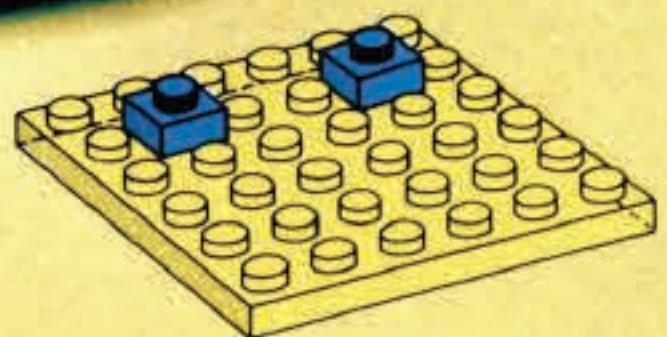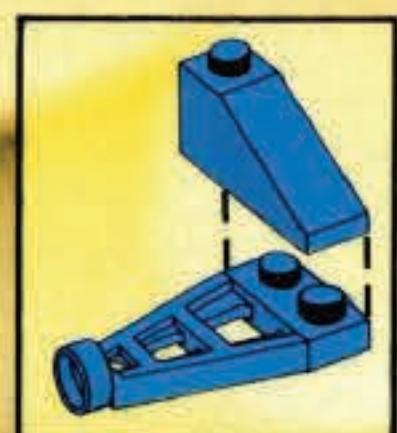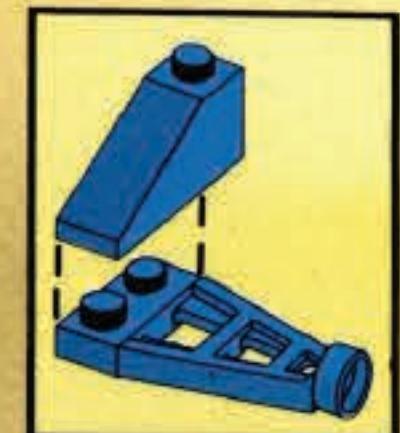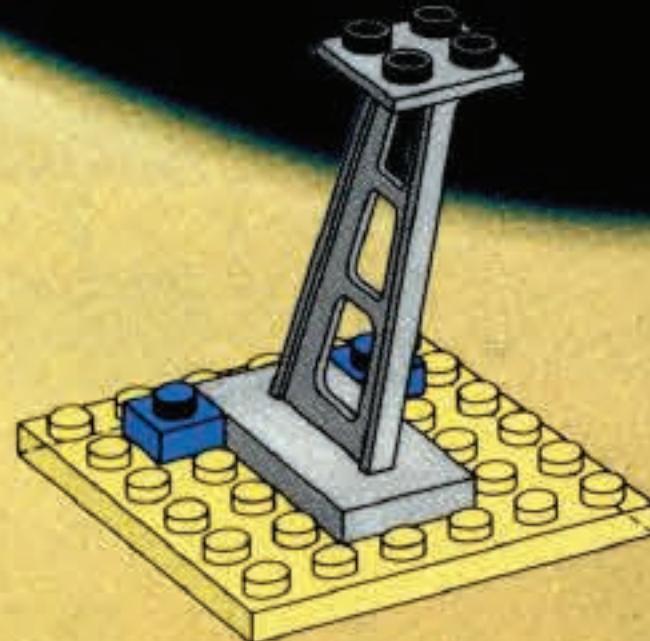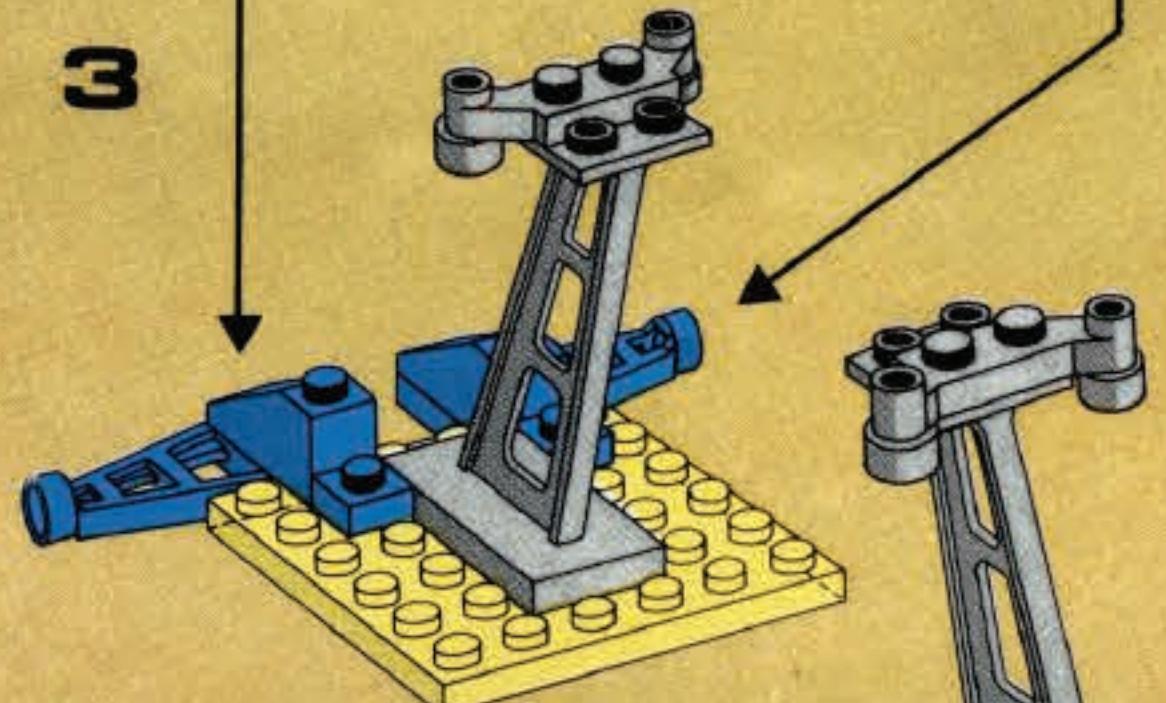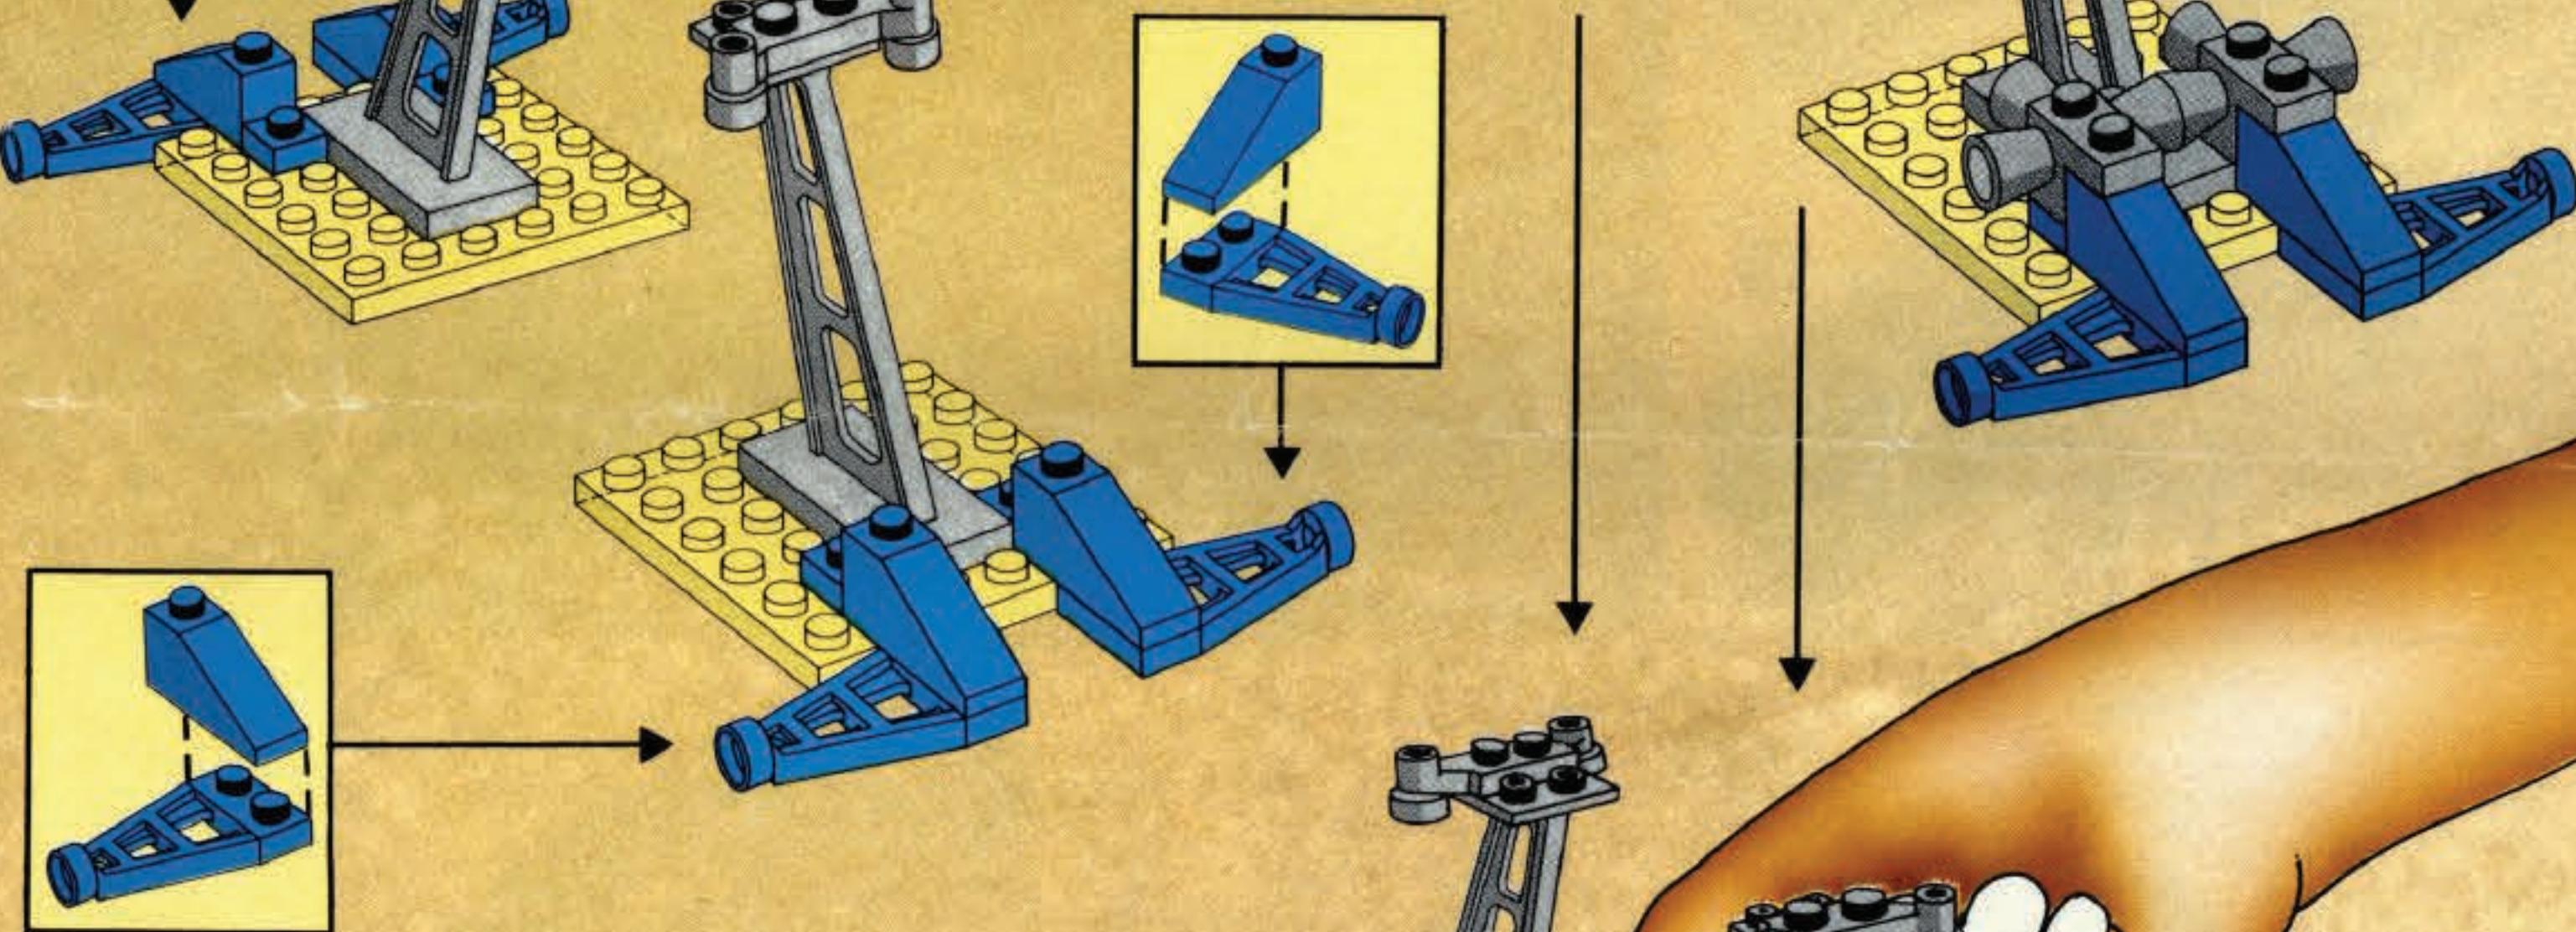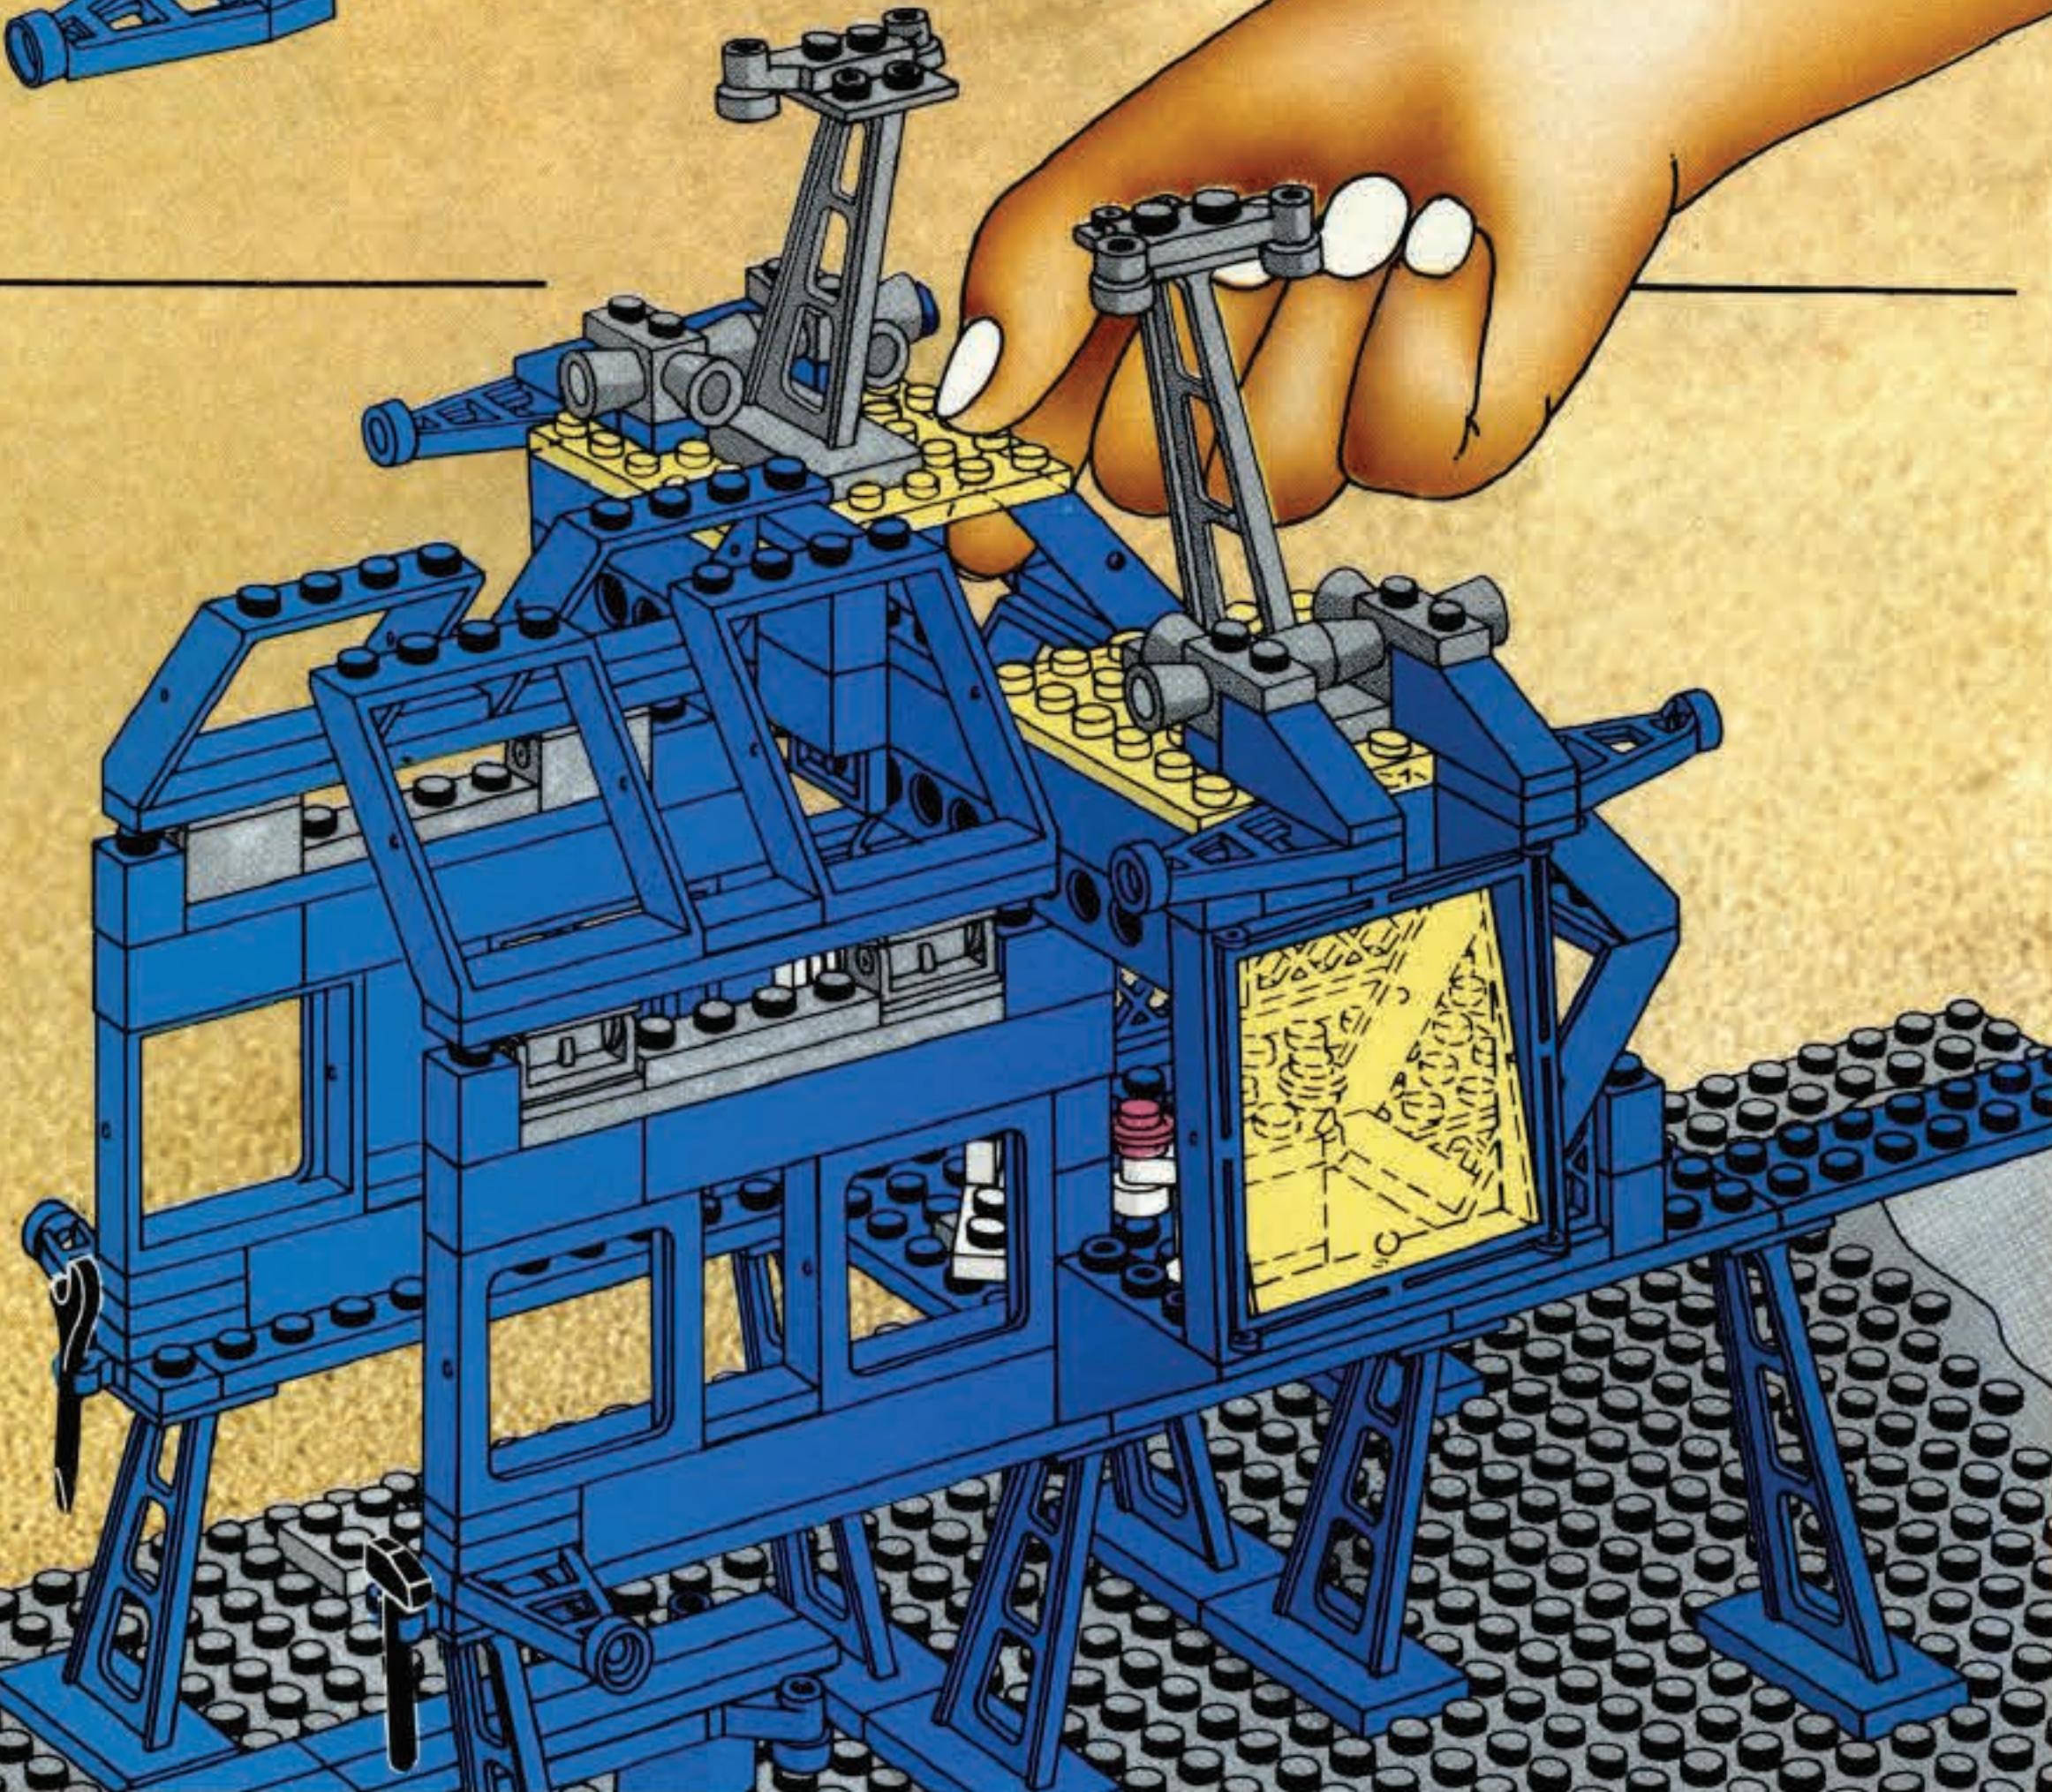1**2****3****4****12**

13

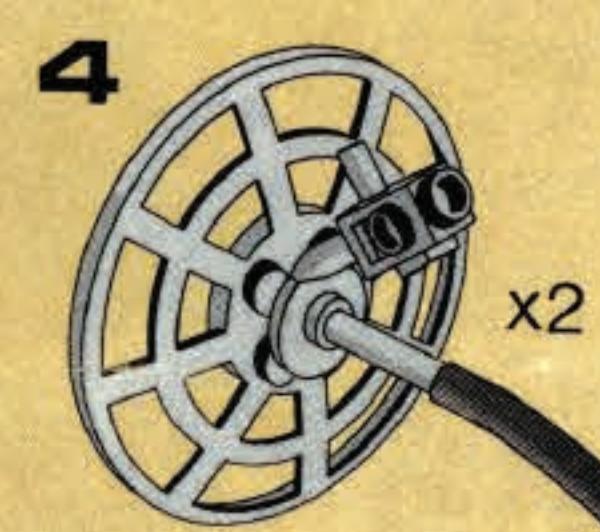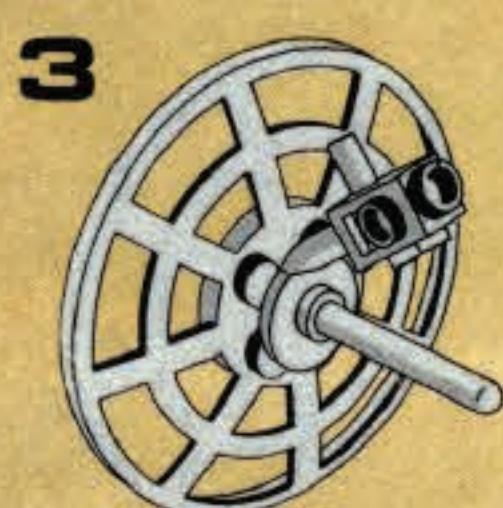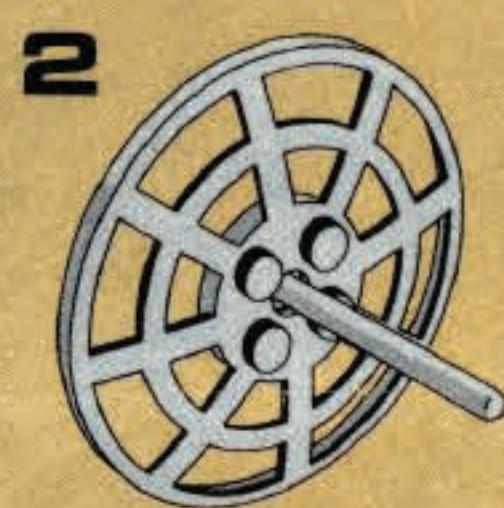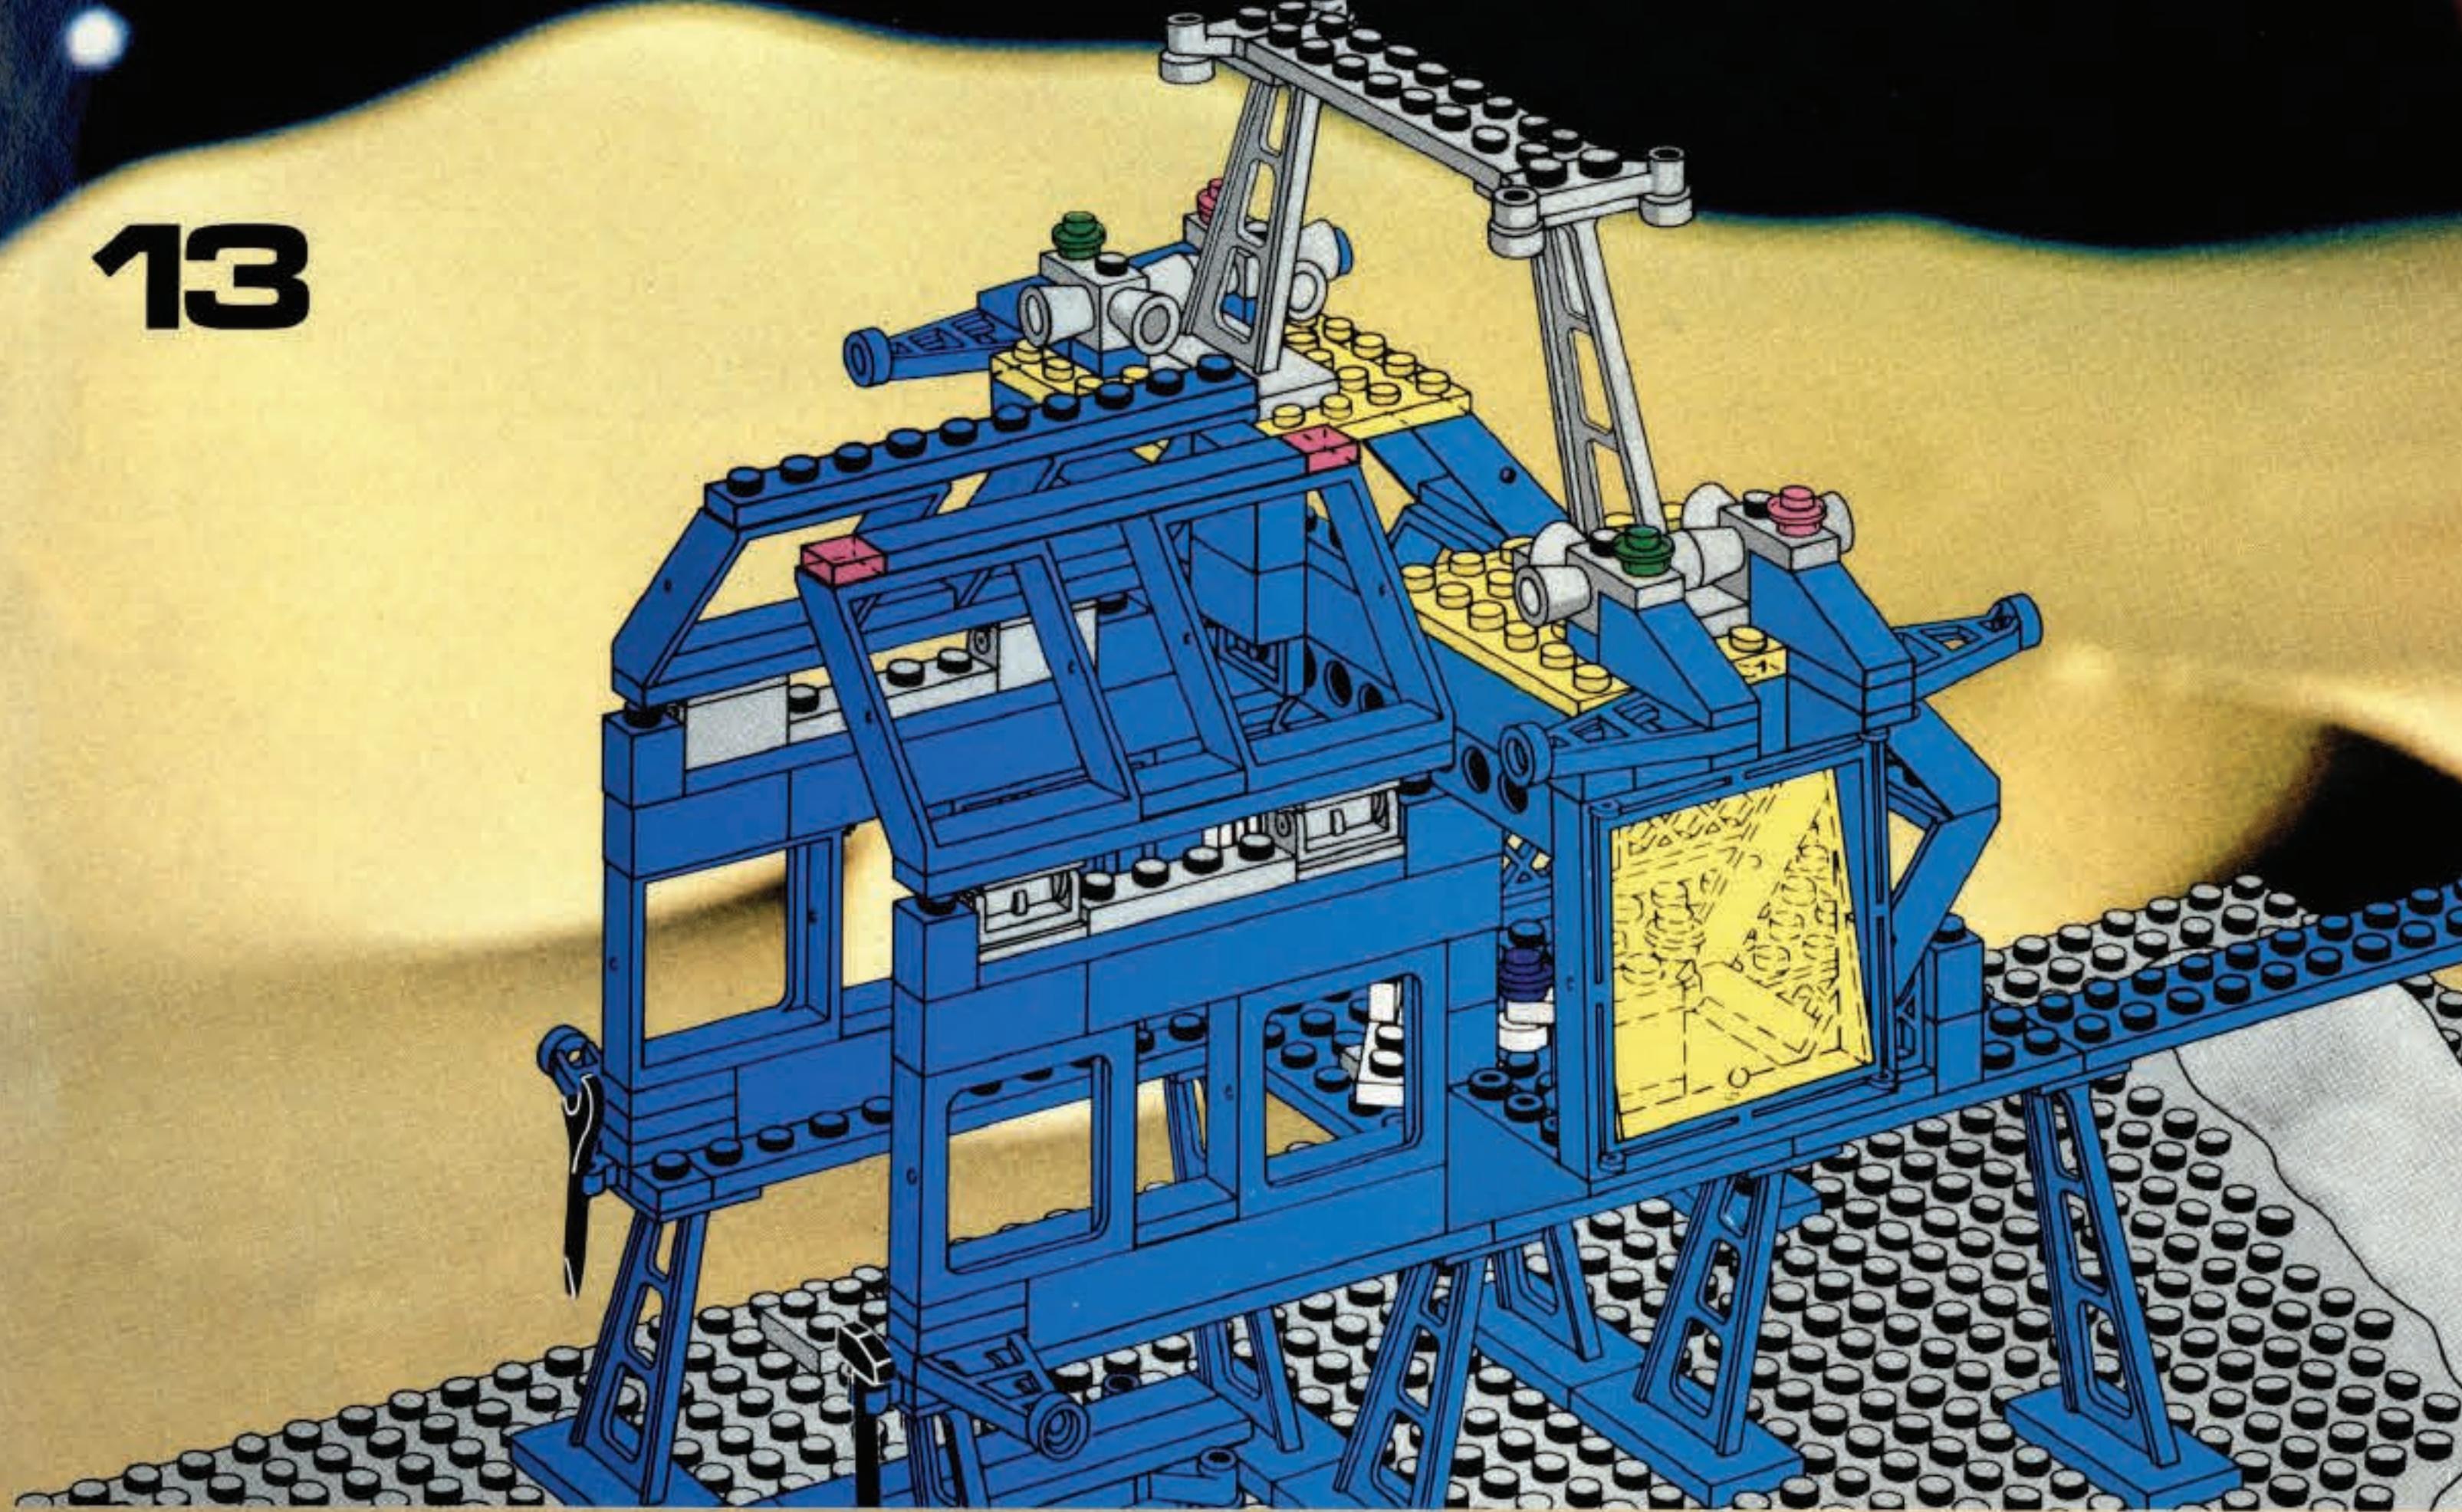

14

