


RO Sand Filter Operation/Backflush

Normal sand filter operation

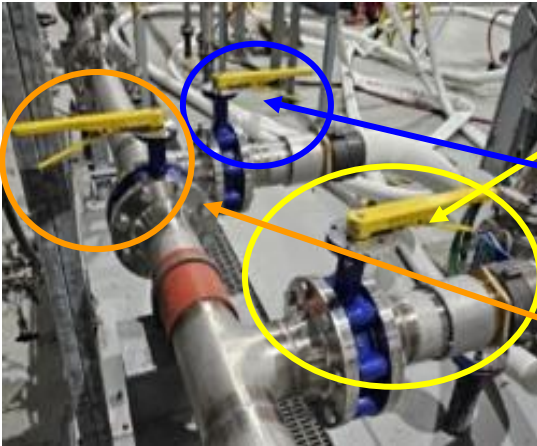

Inlet valve to sand filter
Valve: **VSWS-001JG**
Normally: **Open**


Outlet from sand filter
Valve: **VSWS-002JG**
Normally: **Open**

Bypass sand filter
Valve: **VSWS-003JG**
Normally: **Closed**



The top row of valves are the inlet to the vessels. The bottom valves are the outlet of the vessels. **Both of these remain open all the time even when backflushing.**

Before starting backflush you **MUST** put the RO's in hand OFF and check the sump level to make sure there is room to dump dirty water. One vessel raises the sump about 2ft.

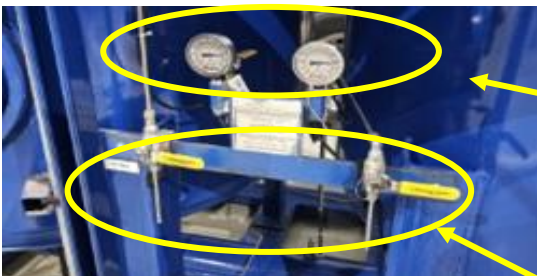


Filters will need to be backflushed once a week or when DP hits 10psi
Gauge on the left is inlet and gauge on the right is outlet. **Pressure should never raise to over 100 PSI.**

The same for the sample ports



When doing a manual backflush you will not need to use this panel at all this is for automatic backflush only!

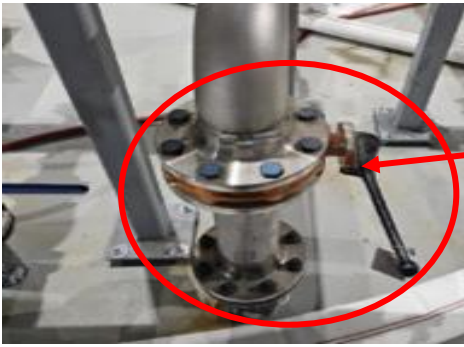

BACK FLUSH ONE VESSEL AT A TIME!

When ready to back flush you can open the trailer reject line valve: **00-VDWT603**

Normally: **Closed**

While backflushing: **Open**




When selecting which vessel to back flush you will turn the solenoids a quarter turn to the "ON" position.

Each solenoid is labeled what vessel it controls above the switch.

The "OFF" position is when the iron filters are in normal operation

!CAUTION WHEN FLIPPED TO ON THE HOSE WILL SLAM WITH WATER BE AWARE OF THE FORCE!

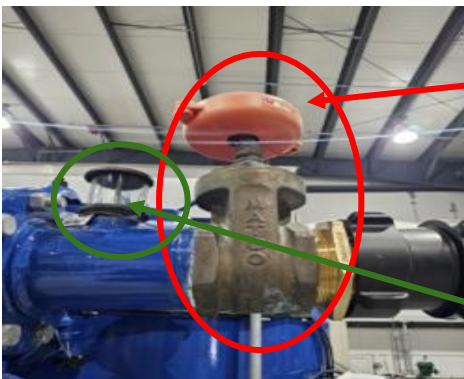

When backflushing has started you need to keep the flow at about 240-250 GPM which can be adjusted with this upper valve here.

The GPM can be read on the southwest side of the inlet line.

When backflushing has started you can see the water clarity from this sight glass.



We should backflush for **10 min minimum PER VESSEL (40 min total)** but if the water is still not clear you may continue backflush until satisfied.

Once you have finished backflushing all 4 vessels you may return all valves and solenoids to their normal positions and return RO's back to auto.