

Kepeco BOP Amp Connection Steps

Steps to establish initial connection and configure static IP:

A static IP should already be set on the Kepco if previously used. To troubleshoot on a new device skip to step 7. and try to connect from there.

1. Install [LXI Discovery](#)
2. Power on Kepco, connect using cross-over ethernet cable through adapter
3. After some time the LXI Discovery tool should search and find the IP address. Using a browser enter the IP address and you should see the page below.

AN ISO 9001 COMPANY

 **KEPCO**
THE POWER SUPPLIER™
SINCE 1946

KEPCO WEB SITE MANUAL PRODUCT SUPPORT DRIVERS

INSTRUMENT DESCRIPTION

OPERATE INSTRUMENT

CONFIGURE LAN

ID INSTRUMENT

HELP

KEPCO INSTRUMENT HOME PAGE



INSTRUMENT MODEL	BOP 100-2
MANUFACTURER	KEPCO
SERIAL NUMBER	E161535
DESCRIPTION	Kepco BOP 100-2 Power Supply
LXI VERSION	1.4
HOSTNAME	KP_BOP_100_2_E161535.local
MAC ADDRESS	00:03:F4:05:70:4E
TCP/IP ADDRESS	192.168.50.10
LXI FIRMWARE VERSION	1.65
VISA ADDRESS STRING	TCPIP::192.168.50.10::5025::SOCKET
CALIBRATION DATE	04/29/2016

KEPCO, INC. • 131-38 Sanford Avenue • Flushing, NY 11355 USA
Tel (718) 461-7000 • Fax (718) 767-1102 www.kepcopower.com • email:hq@kepcopower.com
© Copyright 2012-2015, Kepco Inc. All rights reserved

4. Select CONFIGURE LAN on the left. Unless you intentionally want to set a web password, leave the password fields alone; the manual says none are set by default.
 - a. Enter these values:
 - i. DHCP Off
 - ii. AUTOIP Off
 - iii. PING On
 - iv. IP Address 192.168.50.10
 - v. Subnet Mask 255.255.255.0
 - vi. Default Gateway 0.0.0.0
 - vii. DNS Server 0.0.0.0

AN ISO 9001 COMPANY
KEPCO
THE POWER SUPPLIER
SINCE 1946

[KEPCO WEB SITE](#)
[MANUAL](#)
[PRODUCT SUPPORT](#)
[DRIVERS](#)

INSTRUMENT DESCRIPTION

OPERATE INSTRUMENT

CONFIGURE LAN

ID INSTRUMENT

HELP

KEPCO LAN CONFIGURATION PAGE

HOST NAME (DHCP)	KP_BOP_100_2_E161535		
DESCRIPTION	Kepco BOP 100-2 Power Supply		
IP ADDRESS	192.168.50.10	☐ DHCP ENABLED	
SUBNET MASK	255.255.255.0	☐ AUTOIP ENABLED	
DEFAULT GATEWAY	0.0.0.0	☒ PING ENABLED	
DNS SERVER	0.0.0.0		

CHANGE PASSWORD	CURRENT	NEW	REPEAT
OPERATE INSTRUMENT			
CONFIGURE LAN			

KEPCO, INC. • 131-38 Sanford Avenue • Flushing, NY 11355 USA
Tel (718) 461-7000 • Fax (718) 767-1102 www.kepcopower.com • email.hq@kepcopower.com
© Copyright 2012-2015, Kepco Inc. All rights reserved

- Click SUBMIT. Do not wait too long after typing; the manual says entries revert if they sit more than 20 seconds after the last keystroke. Also make sure the address you chose is not already in use. If it is, the page warns you and you must choose another one.
- After you click SUBMIT, the front-panel LAN light should blink rapidly while the 802E validates the new address. If the browser stops responding, that usually just means the 802E has switched to the new IP and your computer is still on the old subnet.
- On the computer's Ethernet adapter, set a manual address on the same subnet.
 - On Windows do the following:


Control Panel > Network and Internet > Network and Sharing Center > Change adapter settings

Right click your ethernet adapter and select *Properties*

Select *Internet Protocol Version 4 (TCP/IPv4)* and click *Properties*

Select *Use the following IP address* and enter:

- IP address: 192.168.50.20
- Subnet mask: 255.255.255.0
- Gateway: leave blank

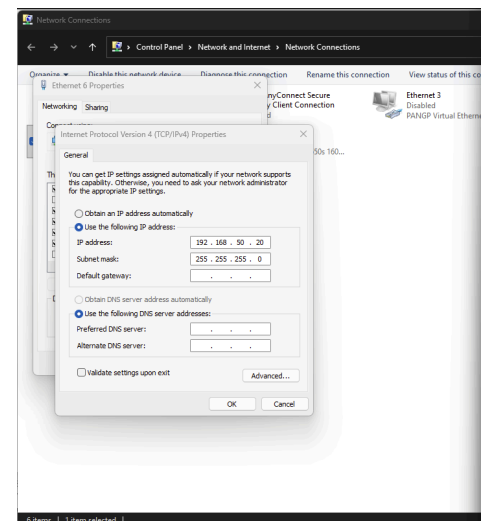

8. Reopen the browser at <http://192.168.50.10> and make sure the home page loads.
9. Point your UI to 192.168.50.10 and reconnect. That should line up with the UI's built-in default.