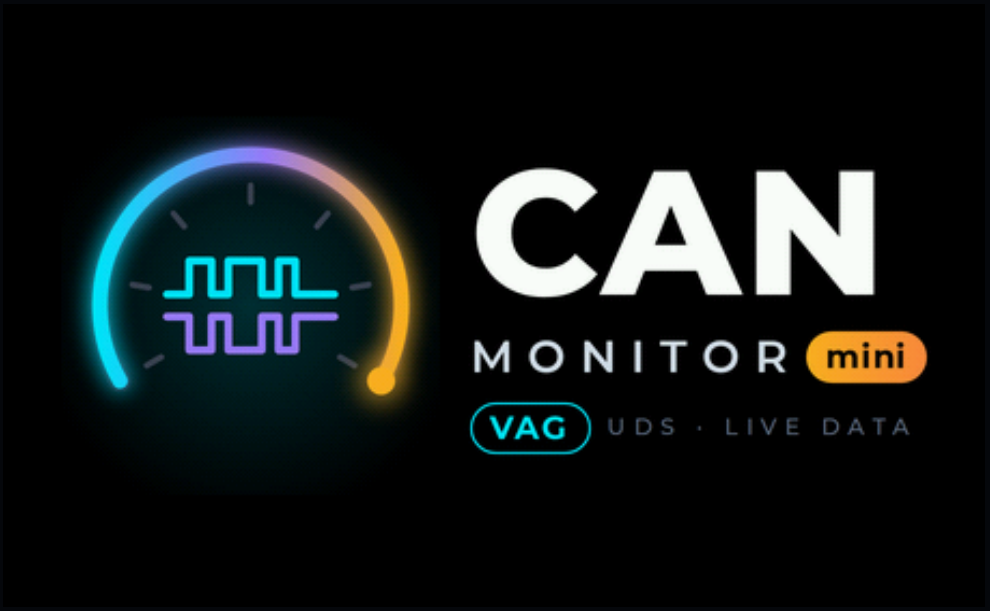


User manual

CAN Monitor mini · CAN data display · VAG UDS / OBD2

01 First start
02 Data screen
03 Gestures
04 Settings on the device
05 Fault codes (DTC)
06 Phone page
07 Screens and parameters
08 Device settings
09 Update and reset
10 Troubleshooting

01 · START

First start

Plug the device into the car's OBD2 diagnostic socket. Power and data use the same cable – nothing has to be set up in the car.

1

Plug in

OBD2 plug, ignition on. The logo appears.

2

Scan the code

A QR code is shown. Scan it with the phone camera.

3

Pick the screens

The page opens by itself. Choose what the display shows.



1. QR code – joins the phone to the device's Wi-Fi and opens the settings page.
2. What to do on the phone.
3. For a manual connection: network **CAN-Display-xxxx**, password **candisplay**, address **192.168.4.1**.


> Once the device is set up, the QR code closes by itself after 15 s and the data appear. You can bring it back at any time: hold a finger on the data screen, or tap **Show QR code** in the settings.

The device recognises the engine ECU by itself: in VAG group cars it reads the parameters over UDS from the database of that engine, in other makes it uses standard OBD2. With no CAN bus connected, a **demo** with sample values starts after 3 s.


02 · DATA

Data screen

Up to 9 screens, each with 1, 2, 4 or 6 tiles. A value always gets the largest font that fits.

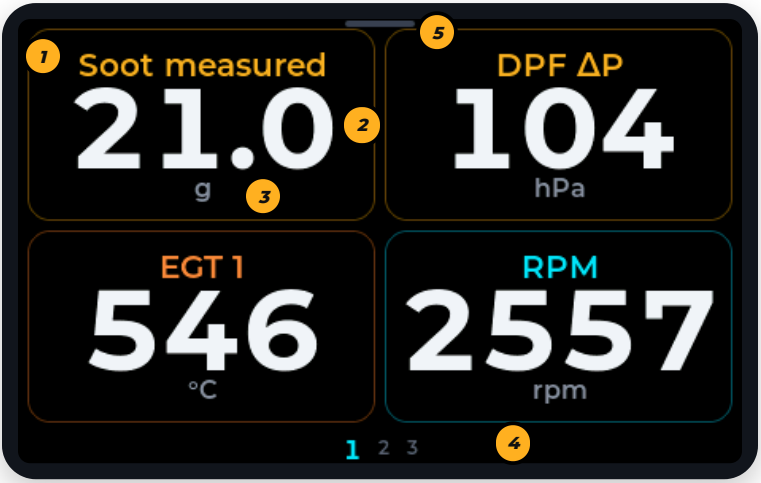


1. Parameter name – the colour shows the group (orange: DPF and exhaust, cyan: engine).
2. Current value.
3. Unit.
4. Screen number – the highlighted one is shown now. Swipe left / right to change it.
5. Settings handle – tap it or swipe down.

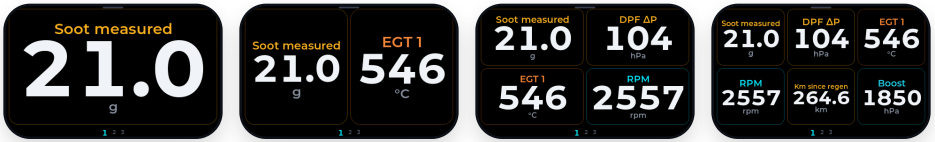


1 tile | 2 tiles | 4 tiles | 6 tiles

Tile types

Every tile can show its value as a **number**, an **arc** (gauge with a scale) or a **bar**. You choose the type on the phone when you pick the parameter.

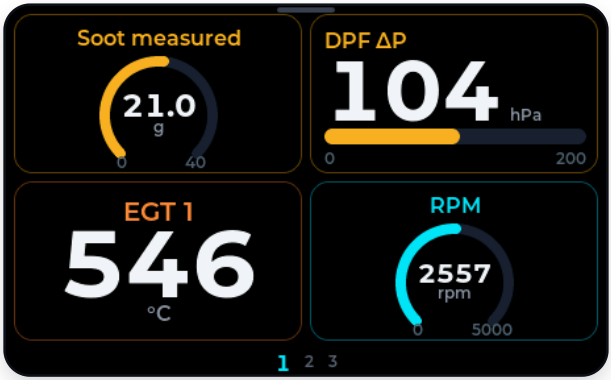


Arc, bar and number on one screen

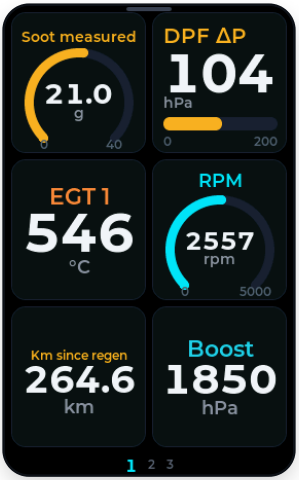

Portrait screen, 6 tiles

Min / max

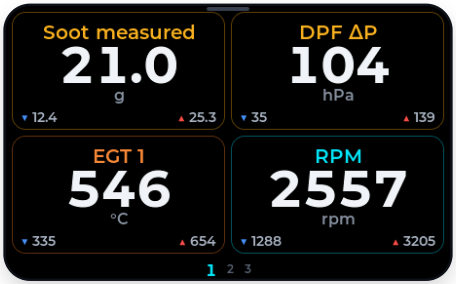


When switched on in the phone settings, each tile shows the lowest ▾ and the highest ▴ value since the device was switched on.

To reset min / max of one tile, **hold a finger on it**.

Tile style



Cards

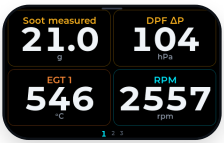

Outline



Bar



Lines

03 · USE

Gestures

Left / right
next / previous data screen


Down
settings (drawer from the top)

Up
engine fault codes (DTC); in the settings – close

Hold
on a tile: reset min / max; elsewhere: QR code

04 · DRAWER

Settings on the device

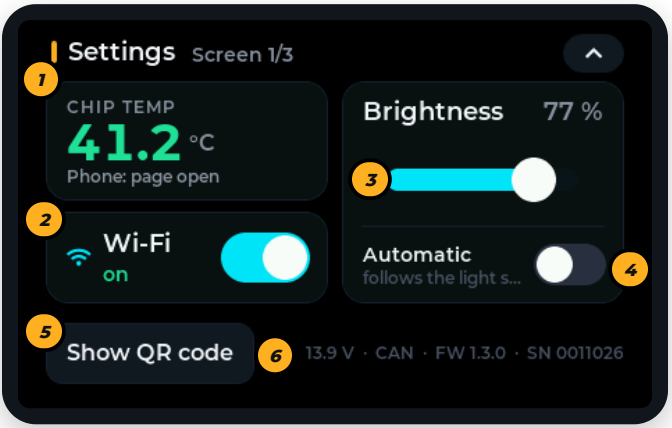


1. Chip temperature and phone status (connected, page open).
2. Wi-Fi – switch it off when you do not use the phone. Without a phone it switches off by itself after 5 min.
3. Display brightness – slider.
4. Automatic brightness from the light sensor. Moving the slider switches it off. Its range (min / max) is set on the phone.
5. Show QR code – to connect another phone.
6. Supply voltage, data source (CAN / demo), firmware version, serial number.


Close the drawer with a swipe up or the arrow in the top right corner.

Fault codes (DTC)

Swipe up on the data screen. The device reads the fault memory of the engine ECU right away.

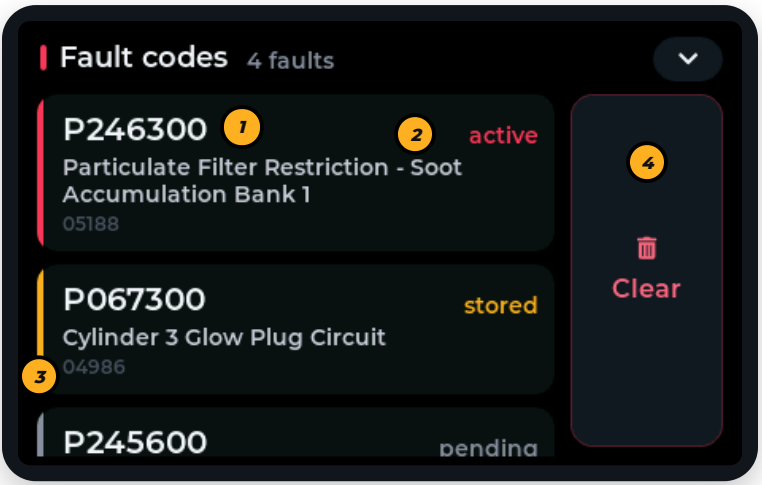

1. Fault code (e.g. P246300) and its description.
2. State: **active** present now, **stored** happened before, **pending** comes and goes.
3. Colour bar on the left – the same state at a glance. Scroll the list with a finger.
4. **Clear** – tap, then tap again within 3 s (**Sure?**).

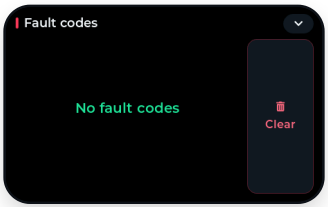


An empty memory shows **No fault codes**. Swipe down to go back to the data.

> Clear the codes with the ignition on and the engine off. An active fault comes back until its cause is fixed.

06 · PHONE

Phone page

Everything is set up in the phone's browser – no app needed. Changes appear on the device at once and are saved by themselves.

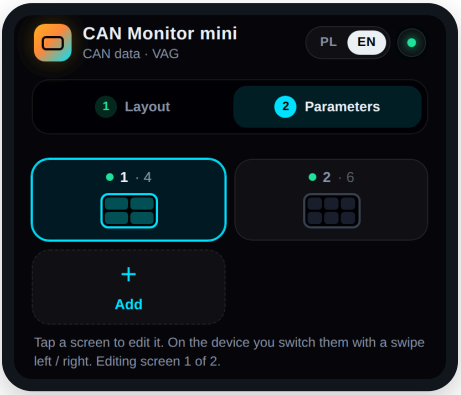


Top of the page: language PL / EN, connection status, list of screens

List of screens

- Each card is one screen of the device; the number next to it – how many tiles.
- Tap a screen to edit it. The device shows the same screen.
- **+ Add** – new screen (up to 9).

1 · Layout

Choose how many tiles the screen has: one as big as it gets, two, four (most popular) or six.

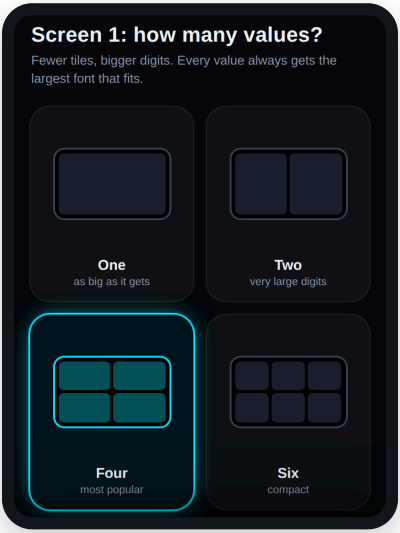

Green dot


The dot in the top right corner of the page is green while the phone is connected to the device.

> The page only works in the device's Wi-Fi. If the phone switches to another network (e.g. because this one has no internet), choose **CAN-Display-xxxx** again.

2 • Parameters




Preview of the screen with live values and the list of tiles

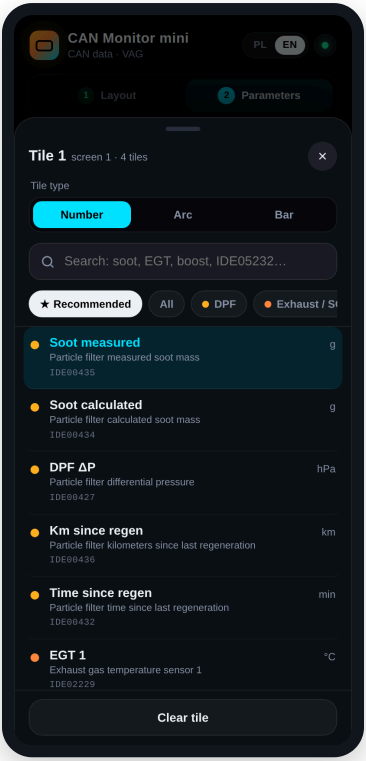

Choosing the parameter of a tile

- **Tap a tile** (in the preview or in the list) – the parameter list opens.
- At the top choose the **tile type**: number, arc or bar.
- Search in English, Polish or by the IDE number (e.g. *soot*, *EGT*, *IDE00435*). The **★ Recommended** tab holds the key DPF and engine values, the next tabs are groups.
- The list only shows what the identified engine ECU has.
- **Clear tile** – the tile stays empty.
- At the bottom: **Done**, **+ Add another screen**, **Delete this screen**.

Device settings

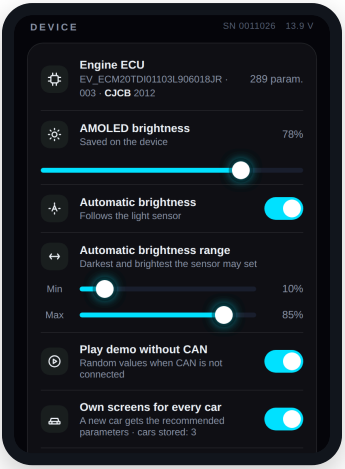

Engine ECU

Identified ECU, engine code and year, number of parameters available.

AMOLED brightness

Brightness of the device's display.

Automatic brightness

The display follows the ambient light (sensor in the housing).

Automatic brightness range


Min and Max sliders: the darkest and brightest level the sensor may set. Active only while automatic brightness is on.

Play demo without CAN

Sample values when the device is not connected to a car.

Own screens for every car

Off: the same screens in every car. On: every car has its own screens (up to 8 cars), a new car gets a set of recommended parameters.

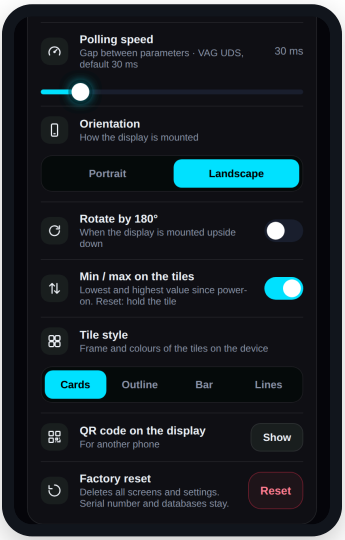

Polling speed

Gap between two parameter requests: VAG 30 ms, OBD2 80 ms. Lower = faster, but more load on the ECU.

Orientation / rotate 180°

How the display is mounted: landscape, portrait, upside down.

Min / max on the tiles

Lowest and highest value since power-on.

Tile style

Cards, outline, bar or lines.


QR code on the display


Shows the QR code on the device – for another phone.

Factory reset

Deletes screens and settings (two taps within 4 s).

Update and reset

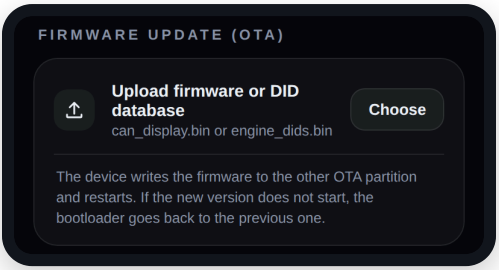

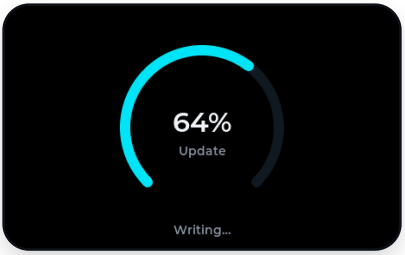

Firmware update

- Get the file **can_display.bin** (firmware) or **engine_dids.bin** (engine parameter database) onto the phone.
- Connect to the device, at the bottom of the page tap **Choose** → file → **Send**.
- The device shows the progress and restarts. Screens, settings and the serial number stay.

> Do not cut the power during the update. If the new version does not start, the device goes back to the previous one by itself.

Factory reset

On the phone: **Factory reset → Reset**, then **Sure?**. Without a phone: open the drawer and **hold the bottom line with the voltage and version for 10 s** (RESET countdown). Screens, car profiles, brightness, Wi-Fi, language and other settings are erased. The serial number and the databases stay.

09 · HELP

Troubleshooting

SYMPTOM	WHAT TO DO
“---” on a tile	No answer for this parameter – check the ignition and the plug. The value comes back by itself.
Tile “not in ECU”	This ECU does not have the chosen parameter (e.g. another car). Pick another one on the phone or switch on **Own screens for every car**.
DEMO label / random values	The device does not see the CAN bus. Check the OBD2 plug and the ignition. The demo can be switched off on the phone.
Phone does not see the network	Wi-Fi switched off after 5 min without a phone. Switch it on in the drawer (swipe down) and show the QR code.
Page does not connect	The phone moved to another network or mobile data. Choose CAN-Display-xxxx and open 192.168.4.1.
Display too dark / too bright	Set the automatic brightness range (Min / Max) on the phone, or switch automatic brightness off and set the slider by hand.
Picture upside down	Phone → Rotate by 180°.

Specifications

Display	AMOLED 1.64", 456 × 280
Communication	CAN 500 kbit/s · VAG UDS · OBD2 (ISO 15765-4)
Power	12 V from the OBD2 socket or USB
Connectivity	Wi-Fi (access point), page 192.168.4.1
Sensors	ambient light (automatic brightness), supply voltage

> Reading and clearing fault codes does not replace a workshop diagnosis. Do not operate the device while driving.