OpenSwitch OPX Configuration Guide

Release 2.2.0



Rev. A02

Contents

1 Network configuration	4
	_
2 Interfaces	
Physical ports	
Fan-out interfaces	
Port-channel/bond interfaces	
VLAN interfaces	
Port profiles	8
3 Layer 2 bridging	10
VLAN bridging	10
Link layer discovery protocol	12
Spanning-tree provisioning	12
4 Layer 3 routing	14
IPv4 routing	14
IPv6 routing	15
Neighbor table entries	15
Next-hop routing	16
L3 routing topology	16
Quagga routing	
Routing using Quagga	20
5 Security	25
6 Monitoring	26
sFlow provisioning	
Port statistics	27

Network configuration

OpenSwitch OPX supports the ability to model and configure various networking features in the network processing unit (NPU) using two methods—Linux commands and CPS APIs. This information describes how to program networking features using Linux commands and open source applications.

See Programmability in the *OpenSwitch OPX Developers Guide* for a description of the CPS framework, and detailed information on using the CPS API for configuration.

OpenSwitch OPX network functionality is handled by the network adaptation service (NAS) which listens to netlink events for Layer 2 and Layer 3 configurations, and programs the NPU.

(i) NOTE: Layer 2 LLDP configuration is not available when using the CPS API.

Linux command — open source application

- Interfaces physical, link aggregation (LAG), VLAN
- · Layer 2 bridging LLDP, STP, VLAN
- · Layer 3 routing ECMP, IPv4, IPv6, unicast

CPS API configuration

- · Interfaces physical, link aggregation (LAG), VLAN, Fanout (script)
- \cdot Layer 2 bridging MAC address table, STP, VLAN
- · Layer 3 routing ECMP, IPv4, IPv6, unicast
- · Security QoS and ACL
- · Monitoring port mirroring, sFlow, and port and VLAN statistics

Dell-provided commands

These features are not supported using standard Linux commands but can be configured using the Dell EMC-provided utilities.

- · Fan-out (4x10G) interface configuration
- · Layer 2 MAC address table configuration
- · QoS and ACL configuration
- · Port monitoring, sFlow configuration, and port and VLAN statistics

Network configuration

▶ Network configuration

Interfaces

You can create and manage physical and virtual interfaces—physical port interfaces are ports on the NPU and do not include the Management port. Each physical port on the NPU maps to a data port on the front panel of the device.

Applications access physical and virtual ports using mapped Linux interfaces. The software allocates an ifindex for each Linux interface, and the value is used in CPS APIs to refer to a Linux interface.

Map ports to Linux interfaces


Each physical port is mapped to an internal Linux interface:

eNSS-PPP-F.vvv

- · e Ethernet port
- · N node ID (set to 1)
- · SS slot number (set to 01)
- · PPP port number (1 to 999)
- F number of a 4x10G fan-out port (0 to 9)
- vvv VLAN ID number (0 to 4095)

The e101-031-0 interface refers to physical port 31 without a fan-out—e101-005-4 identifies fanout port 4 on physical port 5, and e101-001-2 identifies fanout port 2 on physical port 1.

Interfaces are created during system boot up and represent the physical ports on the NPU in a one-to-one mapping.

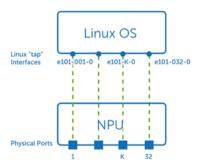

Internal interfaces allow applications to configure physical port parameters, such as MTU, port state, and link state. Interfaces also provide packet input/output functionality and support applications sending and receiving control plane packets.

Map CPU port to Linux interface

The software creates a dedicated interface (npu0) that maps to the CPU port. Configure control plane policy (CoPP) queue rates by specifying npu0 as the port in the QoS CPS API.

Topics:

Physical ports

DELLEMC Interfaces

- Fan-out interfaces
- Port-channel/bond interfaces
- VLAN interfaces
- Port profiles

Physical ports

Physical ports are administratively down by default. Each interface has a reserved MAC hardware address derived from the system MAC address. Use standard Linux commands to configure physical interface parameters.

Set MTU

```
$ ip link set dev e101-002-0 mtu 1400
```

Show MTU

```
$ ip link show e101-002-0
17: e101-002-0: <BROADCAST,MULTICAST> mtu 1400 qdisc noop state DOWN mode DEFAULT group default
qlen 500
   link/ether 90:b1:1c:f4:ab:f2 brd ff:ff:ff:ff:ff
alias NAS## 0 29
```

Configure L3 IPv4 address

```
$ ip addr add 10.1.1.1/24 dev e101-001-0
```

Configure L3 IPv6 address

```
$ ip -6 addr add 2000::1/64 dev e101-001-0
```

View interface parameters

```
$ ip addr show e101-001-0

16: e101-001-0: <BROADCAST, MULTICAST> mtu 1500 qdisc noop state DOWN group default qlen 500 link/ether 90:b1:lc:f4:ab:ee brd ff:ff:ff:ff:ff inet 10.1.1.1/24 scope global e101-001-0 valid lft forever preferred lft forever inet6 2000::1/64 scope global tentative valid lft forever preferred lft forever
```

See Application examples in the OpenSwitch OPX Developers Guide for examples of how to program physical port configuration using the CPS API.

Fan-out interfaces

Using a breakout cable, you can split a 40GbE physical port into four (quad) 10GbE SFP+ ports (if supported by the NPU). Each 4x10G port is represented by a Linux interface with a fan-out field in the interface name that identifies the 4x10G port.

Use the opx-config-fanout script to configure fan-out interfaces. This script allows you to fan-out a 40GbE port or disable the fanned-out 4x10G configuration and return the physical port to 40G operation.

```
opx-config-fanout portID [true | false]
```

- true enables 4x10G fan-out on a 40GbE port
- · false disables 4x10G fan-out on a 40GbE port

Configure fan-out interface

```
$ opx-config-fanout e101-005-0 true
Key: 1.20.1310766.1310754.1310755.1310756.1310757.
base-port/physical/unit-id = 0
base-port/physical/phy-media = 1
```

6 Interfaces

D≪LLEMC

```
base-port/physical/front-panel-number = 0
base-port/physical/loopback = 0
base-port/physical/hardware-port-id = 45
base-port/physical/fanout-mode = 4
base-port/physical/breakout-capabilities = 4,2
base-port/physical/port-id = 45
base-port/physical/slot-id = 0
Deleting.. e101-005-0
Completed...

Creating interface e101-005-1
Creating interface e101-005-2
Creating interface e101-005-3
Creating interface e101-005-4
Successfully created interfaces...
```

Port-channel/bond interfaces

A port-channel or link aggregation group (LAG) corresponds to a bond interface, which aggregates multiple physical interfaces into one virtual interface for load-balancing and link failovers. A LAG and a bond interface both refer to a link aggregation group. LAG refers to an NPU configuration, while bond interface refers to a Linux configuration.

(i) NOTE: A Linux bond interface must be up before you can add member ports.

Create bond interface

\$ ip link add bond1 type bond mode balance-rr miimon 50

Bring up bond interface

```
$ ip link set dev bond1 up
$ ip link show|grep bond1
50: bond1: <BROADCAST, MULTICAST, MASTER, UP, LOWER_UP> mtu 1500 qdisc noqueue state UNKNOWN mode
DEFAULT group default
```

Add port to bind interface

```
$ ip link set e101-010-0 master bond1
$ ip link show | grep bond1
12: e101-010-0: <BROADCAST,MULTICAST,SLAVE,UP,LOWER_UP> mtu 1500 qdisc mq master bond1 state UP
mode DEFAULT group default qlen 500
50: bond1: <BROADCAST,MULTICAST,MASTER,UP,LOWER_UP> mtu 1500 qdisc noqueue state UP mode
DEFAULT group default
```

Configure IP address on bond interface

Delete port from bond interface

```
$ ip link set e101-010-0 nomaster
$ ip link show | grep bond1
49: bond1: <NO-CARRIER, BROADCAST, MULTICAST, MASTER, UP> mtu 1500 qdisc noqueue state DOWN mode
DEFAULT group default
```

D≪LLEMC Interfaces 7

Delete bond interface

```
$ ip link delete bond1
$ ip link show | grep bond1
```

See www.kernel.org for more information about how to use bond interfaces, and see Application examples in the *OpenSwitch OPX Developers Guide* for more information on programming a bond interface using the CPS API.

VLAN interfaces

Virtual LANs (VLANs) define broadcast domains in a Layer 2 network, and an NPU VLAN entity is modeled as a separate Linux bridge instance.

NPU entities (VLANs) are mapped to Linux entities (bridges). An NPU VLAN entity uses the MAC address from the first port added as its member port. The bridge interface is operationally up when at least one of its member interfaces is up. You can assign IP addresses to multiple bridge interfaces to create an inter-VLAN routing domain.

Configure IP address on bridge interface

```
$ brctl show
bridge name
                bridge id
                                        STP enabled
                                                        interfaces
                8000.90b11cf49d3c
                                                        e101-001-0.100
br100
                                        nο
$ ip addr add 100.1.1.1 dev br100
$ ifconfig br100
         Link encap:Ethernet HWaddr 90:b1:1c:f4:9d:3c
br100
         inet addr:100.1.1.1 Bcast:0.0.0.0 Mask:255.255.255.255
         inet6 addr: fe80::92b1:1cff:fef4:9d3c/64 Scope:Link
         UP BROADCAST RUNNING MULTICAST MTU:1500 Metric:1
        RX packets:0 errors:0 dropped:0 overruns:0 frame:0
         TX packets:7 errors:0 dropped:0 overruns:0 carrier:0
         collisions:0 txqueuelen:0
        RX bytes:0 (0.0 B) TX bytes:738 (738.0 B)
```

Port profiles

A port profile determines the enabled front-panel ports and supported breakout modes on Ethernet and unified ports. Change the port profile on a switch to customize uplink and unified port operation, and the availability of front-panel data ports.

Here is an example of CPS API usage surrounding switch profiles, using the base-switch/switching-entities/switching-entity-object attribute.

B Interfaces D≪LLEMC

```
echo "$0: <switch-id> [ --list | <profile-name> ]"
    exit 1
if [ $# -lt 1 ]; then
    usage
fi
if [ $# -eq 1 ]; then
    # Show profiles
    # Show profile currently in effect
    echo -n "Current profile: "
    cps get oid.py -qua observed base-switch/switching-entities/switching-entity switch-id=$1 |
grep 'switch-profile' | sed 's/^.* = //'
    # Show profile that will be in effect on next boot
    echo -n "Profile on next boot: "
   cps get oid.py -db -qua target base-switch/switching-entities/switching-entity switch-id=$1
| grep 'switch-profile' | sed 's/^.* = //'
elif [ $# -eq 2 ]; then
    if [ $2 = '--list' ]; then
        # Show available profiles
        cps get oid.py -qua observed base-switch/switching-entities/switching-entity switch-id=
$1 | grep 'supported-profiles' | sed 's/^.* = //'
   else
        # Set profile to take effect on next boot
        cps set oid.py -oper set -db -qua target -commit-event base-switch/switching-entities/
switching-entity switch-id=$1 switch-profile=$2 >& /dev/null
else
   usage
fi
```

DELLEMC Interfaces 9

Layer 2 bridging

OpenSwitch OPX supports Layer 2 bridging and includes VLAN bridging, spanning-tree provisioning (STP), link layer discovery protocol (LLDP), and media access control (MAC) address forwarding. OpenSwitch OPX provides a CPS data model for configuring and managing the MAC address forwarding database using the CPS API.

You can configure Layer 2 MAC addresses and VLAN learning and forwarding properties in support of Layer 2 bridging. The device learns unicast MAC addresses to avoid flooding the packets to all the ports in a bridge domain. If the bridge receives a control protocol data unit (PDU) which does not have a corresponding protocol configured, the control PDU is considered as an unknown multicast data packet, and the packets are flooded across all ports that are part of the same bridge domain. If the bridge has the protocol corresponding to the PDU configured, the control PDU is considered as a control packet and is processed by the routing engine.

See the OpenSwitch OPX Developers Guide for more information on writing applications that access the CPS API to configure Layer 2, and using YANG models to configure the MAC address forwarding database.


Topics:

- VLAN bridging
- · Link layer discovery protocol
- · Spanning-tree provisioning

VLAN bridging

OpenSwitch OPX supports Layer 2 VLAN bridging by modeling each NPU VLAN entity as a separate Linux bridge instance. Each physical or LAG port that is a VLAN member is modeled by adding its corresponding Linux interface to the bridge instance. See Application examples in the *OpenSwitch OPX Developers Guide* for more information on creating a VLAN and assigning members.

To create a VLAN using the Linux bridge, create the bridge instance and then add a tagged member to the new bridge instance. OpenSwitch OPX determines the VLAN ID associated with each bridge instance using the VLAN ID of the first tagged member port assigned to the bridge instance. The VLAN is created only after you add the first tagged member to the bridge.

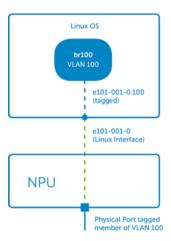

Layer 2 bridging

▶LEMC

1 Create a bridge instance for the VLAN—br100 is the name of the bridge instance used to model the VLAN, and OpenSwitch OPX does not derive the VLAN ID from the name.

```
$ brctl addbr br100
```

2 Add a tagged port to the VLAN to ensure that the Linux interface mapped to the port being added does not have an IP address.

```
$ ifconfig e101-001-0
e101-001-0 Link encap:Ethernet HWaddr 90:b1:1c:f4:9d:3c
    inet addr:1.1.1.1 Bcast:1.1.1.255 Mask:255.255.255.0
BROADCAST MULTICAST MTU:1500 Metric:1
RX packets:0 errors:0 dropped:0 overruns:0 frame:0
TX packets:2221 errors:0 dropped:0 overruns:0 carrier:0
collisions:0 txqueuelen:500
RX bytes:0 (0.0 B) TX bytes:523446 (511.1 KiB)
```

If the interface already has an IP address, remove the IP address before continuing to the next step.

```
$ ip addr flush dev e101-001-0
```

Treate a tagged virtual link—a Linux interface can only belong to a single bridge instance. To add the same interface to multiple VLAN domains, create a separate Linux virtual link for each VLAN in which the port is a member. Create a virtual tagged link for the e101-001-0 Linux interface in VLAN 100—the .100 suffix in the Linux interface name indicates that the interface is VLAN tagged.

```
$ ip link add link e101-001-0 name e101-001-0.100 type vlan id 100
```

Add the tagged virtual link to the VLAN to add the newly created virtual link to the Linux bridge instance created in Step 1.

OpenSwitch OPX creates the VLAN and adds the physical port mapped to the e101-001-0 Linux interface as a tagged member of the VLAN.

```
$ brctl addif br100 e101-001-0.100
```

5 Verify the VLAN configuration.

```
$ brctl show
bridge name bridge id STP enabled interfaces
br100 8000.90b11cf49d3c no e101-001-0.100
```

Add untagged member to VLAN

You can add a Linux interface directly to a Linux bridge without creating a separate VLAN-specific virtual link. Note that in the example the interface does not have the .100 suffix, which means the interface is an untagged VLAN member.

```
$ brctl addif br100 e101-002-0
```

A physical port can be an untagged member of only a single VLAN—a physical port can be added as a tagged member of multiple VLANs.

```
$ brctl show bridge name bridge id STP enabled interfaces e101-001-0.100 e101-002-0
```

Add port to multiple VLAN domains

To add the same port to a second VLAN, create another VLAN tagged virtual link on the e101-001-0 interface, then add the new virtual link to the Linux bridge instance.

```
$ brctl addbr br200
$ ip link add link e101-001-0 name e101-001-0.200 type vlan id 200
$ brctl addif br200 e101-001-0.200
```


NOTE: All interfaces in a bridge instance must be either untagged or have the same tagged VLAN ID—you cannot configure e101-001-0.100 and e101-002-0.200 in the same Linux bridge instance.

Add Linux bond interface to VLAN domain

D≪LLEMC Layer 2 bridging 11

Add a Linux bond interface to a VLAN domain—bond1 is a Linux interface that maps to a LAG port in the NPU. Use the command to add the LAG port to the VLAN associated with the bridge instance in the NPU.

- \$ ip link add link bond1 name bond1.200 type vlan id 200
- \$ brctl addif br200 bond1.200

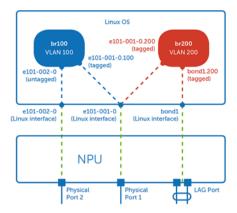

Remove VLAN member from VLAN

\$ brctl delif br200 e101-001-0.100

Delete VLAN

\$ brctl delbr br200

Link layer discovery protocol

OpenSwitch OPX supports the link layer discovery protocol (LLDP) daemon on Linux interfaces.

LLDP daemon

```
$ lldpcli show neighbors
LLDP neighbors:
Interface:
           e101-003-0, via: LLDP, RID: 3, Time: 0 day, 01:17:18
 Chassis:
   ChassisID: mac 90:b1:1c:f4:9d:3b
                 OPEN
   SysName:
   Capability:
                 Repeater, on
                Bridge, on
   Capability:
                Router, on
   Capability:
   Port:
                 ifalias ethernet1/1/3
   Port ID:
```

Spanning-tree provisioning

OpenSwitch OPX supports spanning-tree provisioning (STP) using the CPS API including:

- · Create a new spanning-tree group
- · Add VLANs to a spanning-tree group
- · Remove VLANs from a spanning-tree group
- · Change the STP state of ports mapped to a spanning-tree group
- · Delete a spanning-tree group

This enables OpenSwitch OPX to run any of the spanning-tree protocols such as STP, RSTP, PVST, and MSTP.

12 Layer 2 bridging

▶★LLEMC

(i) NOTE: OpenSwitch OPX does not support RSTP, MSTP, and RPVST in a Linux bridge due to a Linux kernel limitation. STP is not supported on a bridge which has multiple member interfaces with different VLAN IDs.

See YANG model reference in the *OpenSwitch OPX Developers Guide* for more information on the dell-open-stp.yang model for the supported STP parameters.

Linux STP does not support the concept of spanning-tree groups. In Linux, you can enable spanning tree independently in each bridge instance. OpenSwitch OPX treats STP enabled in a bridge instance as a separate spanning-tree group for each VLAN. If a Linux bridge contains only untagged ports, the software does not support STP on the bridge.

- 1 Create a VLAN in the Linux bridge (see VLAN bridging).
- 2 Enable STP on the bridge, then view the configuration.

<pre>\$ brctl stp br100 on \$ brctl show br100</pre>						
bridge name bri	dge id	STP er	nabled	interfaces		
br100 800	0.90b11cf4a918	yes		e101-001-0.1	00	
		-				
\$ brctl showstp br1	00					
br100						
bridge id	8000.90b11cf4a9	18				
designated root	8000.90b11cf4a9	18				
root port	0		path cos	st	0	
max age	20.00		bridge m	nax age	20.00	
hello time	2.00		bridge h	ello time	2.00	
forward delay	15.00			forward delay	15.00	
ageing time	300.00		_	_		
hello timer	0.00		tcn time	er	0.00	
topology change time	er 0.00		gc timer	:	0.00	
flags			_			
e101-001-0.100 (1)						
port id	8001		state		disabled	
designated root	8000.90b11cf4a9	18	path cos	st	100	
designated bridge	8000.90b11cf4a9	18	message	age timer	0.00	
designated port	8001		forward	delay timer	0.00	
designated cost	0		hold tim	ner	0.00	
flags						

Disable STP on bridge

\$ brctl stp br100 off

View bridge configuration

\$ brctl show br	100		
bridge name	bridge id	STP enabled	interfaces
br100	8000.90b11cf4a918	no	e101-001-0.100


When you enable STP on a bridge which has tagged VLAN interfaces, OpenSwitch OPX creates a new spanning-tree group and associates the VLAN ID of the bridge with the newly created spanning-tree group. When you delete a bridge from the Linux kernel, the corresponding NPU spanning-tree group is deleted.

D≪LLEMC Layer 2 bridging

Layer 3 routing

OpenSwitch OPX supports unicast routing over Linux interfaces using routes in the Linux kernel routing table. Applications can also use the CPS API to configure routes. This information describes how to configure Layer 3 unicast routing to provision the NPU.

The OpenSwitch OPX routing subsystem manages the forwarding information base (FIB). The routing subsystem programs routes with resolved next hops using ARP/Neighbor table entries received from the Linux kernel.

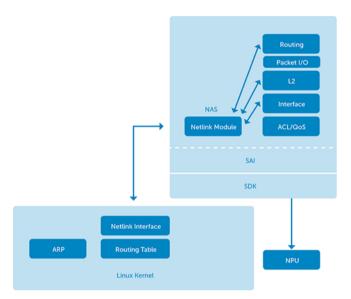

Topics:

- IPv4 routing
- IPv6 routing
- · Neighbor table entries
- Next-hop routing
- L3 routing topology
- Quagga routing
- · Routing using Quagga

IPv4 routing

Use the iproute command to create a route. A routing table entry consists of a destination IP address prefix and at least one next-hop address or a Linux interface.

Configure static route

```
$ ip route show
default dev eth0 scope link
3.3.3.0/24 dev e101-003-0 proto kernel scope link src 3.3.3.1
$ ip route add 11.10.10.0/24 dev e101-003-0
```

14 Layer 3 routing ▶★LEMC

```
$ ip route show
default dev eth0 scope link
3.3.3.0/24 dev e101-003-0 proto kernel scope link src 3.3.3.1
11.10.10.0/24 dev e101-003-0 scope link
```

Configure static route with next-hop

```
$ ip route add 30.30.30.0/24 via 3.3.3.3
$ ip route show
default dev eth0 scope link
3.3.3.0/24 dev e101-003-0 proto kernel scope link src 3.3.3.1
30.30.30.0/24 via 3.3.3.3 dev e101-003-0
```

Delete static route

```
$ ip route delete 11.10.10.0/24
$ ip route show
default dev eth0 scope link
3.3.3.0/24 dev e101-003-0 proto kernel scope link src 3.3.3.1
```

To add a persistent static route that is saved after a reboot, configure the route in the /etc/network/interfaces configuration file.

See Application examples in the OpenSwitch OPX Developers Guide for more information on how to configure routing using the CPS API.

IPv6 routing

Add, delete, or modify IPv6 routes and next-hops in the routing table.

Add IPv4 route

```
$ ip -6 route add 5::5/64 via 3::3
```

View IPv6 route

```
$ ip -6 route show
3::/64 dev e101-003-0 proto kernel metric 256
5::/64 via 3::3 dev e101-003-0 metric 1024
```

Monitor IPv6 routing

```
$ ip monitor
30.30.30.0/24 via 3.3.3.3 dev e00-3
3::/64 via 3::3 dev e101-003-0 metric 1024
5::/64 via 3::3 dev e101-003-0 metric 1024
```

See Application examples in the OpenSwitch OPX Developers Guide for more information on how to configure routing using the CPS API.

Neighbor table entries

OpenSwitch OPX uses ARP and neighbor table entries to resolve adjacencies by using the host IP address-to-MAC address binding. The ARP table is used for IPv4 routing—the neighbor table is used for IPv6 routing.

```
R1 e101-003-0 e101-003-0
3::1/64 3::3/64 R2
```

View kernel ARP table entries

```
$ arp -n
Address HWtype HWaddress Flags Mask Iface 3.3.3.4 ether 90:b1:1c:f4:9d:44 C e101-003-0
```

View IPv6 neighbor table

```
$ ip -6 neighbor
```

D≪LLEMC Layer 3 routing 15

Configure IPv6 address

View IPv6 neighbor table

```
$ ip -6 neighbor show
3::3 dev e101-003-0 lladdr 90:b1:1c:f4:9d:44 router REACHABLE
```

Check connectivity to IPv6 neighbor

```
$ ping6 3::3
PING 3::3(3::3) 56 data bytes
64 bytes from 3::3: icmp_seq=1 ttl=64 time=1.74 ms
$ tcpdump -i e101-003-0
tcpdump: verbose output suppressed, use -v or -vv for full protocol decode
listening on e101-003-0, link-type EN10MB (Ethernet), capture size 262144 bytes
04:30:17.053115 IP6 3::1 > 3::3: ICMP6, echo request, seq 8, length 64
```

Next-hop routing

The Linux networking stack supports ECMP by adding multiple next-hops to a route, and the kernel provides limited support for IPv6 multipath routing.

Configure next-hop routing

```
$ ip route add 40.40.40.0/24 nexthop via 3.3.3.6 nexthop via 4.4.4.7
```

View ECMP configuration

```
$ ip route show
default dev eth0    scope link
3.3.3.0/24 dev e101-003-0    proto kernel    scope link    src 3.3.3.1
40.40.40.0/24
         nexthop via 3.3.3.6    dev e101-003-0 weight 1
         nexthop via 4.4.4.7    dev e101-004-0 weight 1
```

L3 routing topology

Use ip addr add or if config to configure an interface.

```
R1 e101-007-0 e101-007-0
1 10.11.0/24 2

1 e101-001-0
11.11.0/24 12.11.10/24
2 eth1 2 eth1
Server 1 Server 2
```

See Application examples in the OpenSwitch OPX Developers Guide for more information on how to configure routing using the CPS API.

Configure IP address on R1

```
$ ip addr add 10.1.1.1/24 dev e101-007-0
$ ip addr add 11.1.1.1/24 dev e101-001-0
```

16 Layer 3 routing

▶◆LLEMC

Configure IP address on R2

```
$ ip addr add 10.1.1.2/24 dev e101-007-0
$ ip addr add 12.1.1.1/24 dev e101-001-0
```

Verify configuration on R1

```
$ ip addr show e101-007-0
16: e101-007-0: <BROADCAST, MULTICAST, UP, LOWER UP> mtu 1500 qdisc mq state UP group default qlen
500
   link/ether 74:e6:e2:f6:af:87 brd ff:ff:ff:ff:ff
   inet 10.1.1.1/24 scope global e101-007-0
      valid lft forever preferred lft forever
   inet6 fe80::76e6:e2ff:fef6:af87/64 scope link
      valid_lft forever preferred_lft forever
$ ip addr $\overline{\text{show}}$ e101-001-0
10: e101-001-0: <BROADCAST, MULTICAST, UP, LOWER UP> mtu 1500 qdisc mq state UP group default qlen
500
   link/ether 74:e6:e2:f6:af:81 brd ff:ff:ff:ff:ff
   inet 11.1.1.1/24 scope global e101-001-0
      valid_lft forever preferred_lft forever
   inet6 fe\overline{80}::76e6:e2ff:fef6:af8\overline{1}/64 scope link
     valid lft forever preferred lft forever
```

Verify configuration on R2

```
$ ip addr show e101-007-0
16: e101-007-0: <BROADCAST, MULTICAST, UP, LOWER UP> mtu 1500 qdisc mq state UP group default qlen
500
   link/ether 74:e6:e2:f6:ba:87 brd ff:ff:ff:ff:ff
   inet 10.1.1.2/24 scope global e101-007-0
      valid lft forever preferred lft forever
   inet6 fe\overline{8}0::76e6:e2ff:fef6:ba87/64 scope link
      valid lft forever preferred lft forever
$ ip addr show e101-001-0
10: e101-001-0: <BROADCAST, MULTICAST, UP, LOWER UP> mtu 1500 qdisc mq state UP group default qlen
500
   link/ether 74:e6:e2:f6:ba:81 brd ff:ff:ff:ff:ff
   inet 12.1.1.1/24 scope global e101-001-0
      valid lft forever preferred lft forever
   inet6 fe\overline{80}::76e6:e2ff:fef6:ba8\overline{1}/64 scope link
      valid lft forever preferred lft forever
```

Enable interfaces on R1 and R2

\$ ip link set dev e101-007-0 up \$ip link set dev e101-001-0 up

Configure static route to server on R1

\$ ip route add 12.1.1.0/24 via 10.1.1.2

Configure static route to server on R2

\$ ip route add 11.1.1.0/24 via 10.1.1.1

Check connectivity from server 2

```
$ ping 11.1.1.2
PING 11.1.1.2 (11.1.1.2) 56(84) bytes of data.
64 bytes from 11.1.1.2: icmp_seq=1 ttl=64 time=0.922 ms
^C
--- 11.1.1.2 ping statistics ---
1 packets transmitted, 1 received, 0% packet loss, time 0ms
rtt min/avg/max/mdev = 0.922/0.922/0.000 ms
$ping 10.1.1.2
PING 10.1.1.2 (10.1.1.2) 56(84) bytes of data.
64 bytes from 10.1.1.2: icmp_seq=1 ttl=64 time=0.709 ms
^C
--- 10.1.1.2 ping statistics ---
```

D≪LLEMC Layer 3 routing 1

```
1 packets transmitted, 1 received, 0% packet loss, time 0ms rtt min/avg/max/mdev = 0.709/0.709/0.709/0.000 ms
```

View ARP table on R1

\$ arp -n				
Address	HWtype	HWaddress	Flags Mask	Iface
11.1.1.2	ether	00:00:00:1d:9a:bd	C	e101-001-0
10.1.1.2	ether	74:e6:e2:f6:ba:87	С	e101-007-0


View ARP table on R2

\$ arp -n				
Address	HWtype	HWaddress	Flags Mask	Iface
10.1.1.1	ether	74:e6:e2:f6:af:87	C	e101-007-0
12.1.1.2	ether	00:00:00:1d:9a:be	С	e101-001-0

Quagga routing

Quagga is an open-source routing application that provides OSPFv2, OSPFv3, RIPv1 and v2, RIPng, and BGP-4 functionality.

The Quagga architecture consists of a core daemon zebra, which acts as an abstraction layer to the underlying Linux kernel and presents a Zserv API over a Unix or TCP socket to Quagga clients. The Zserv clients implement a routing protocol and communicate routing updates to the zebra daemon. See github.com/opensourcerouting/quagga for complete information.

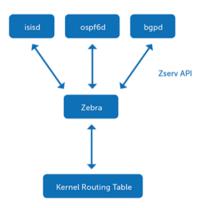

Install Quagga

```
$ apt-get install -y quagga
Reading package lists... Done
Building dependency tree
Reading state information... Done
The following NEW packages will be installed:
quaqqa
0 upgraded, 1 newly installed, 0 to remove and 0 not upgraded.
Need to get 1217 kB of archives.
After this operation, 6323 kB of additional disk space will be used.
Get:1 http://10.11.56.31/debian/jessie/main quagga amd64 0.99.23.1-1 [1217 kB]
Fetched 1217 kB in 0s (12.2 MB/s)
Preconfiguring packages ...
Selecting previously unselected package quagga.
(Reading database ... 46597 files and directories currently installed.)
Preparing to unpack .../quagga 0.99.23.1-1 amd64.deb ...
Unpacking quagga (0.99.23.1-1)
Processing triggers for systemd (215-17) ...
Processing triggers for man-db (2.7.0.2-5) ...
Setting up quagga (0.99.23.1-1) ..
Processing triggers for systemd (215-17) ...
Processing triggers for libc-bin (2.19-18) ...
```

8 Layer 3 routing

▶ Layer 3 routing

Quagga daemons and the debian.conf file are stored in the /etc/quagga directory. All routing protocol daemons installed with Quagga are disabled by default. You must enable the zebra daemon to install the routes in the kernel routing table.

1 Open the daemons file for editing and change the daemon status to yes.

```
$ vim /etc/quagga/daemons
zebra=yes
bgpd=yes
ospfd=no
ospf6d=no
ripd=no
ripngd=no
isisd=no
babeld=no
```

2 Create the vtysh.conf and Quagga.conf configuration files.

3 Restart the Quagga service.

\$ /etc/quagga# service quagga restart

View the status of Quagga protocol daemons.

```
$ /etc/quagga# service quagga status
? quagga.service - LSB: start and stop the Quagga routing suite
  Loaded: loaded (/etc/init.d/quagga)
 Active: active (running) since Tue 2016-02-16 17:47:25 UTC; 4s ago
 Process: 5078 ExecStop=/etc/init.d/quagga stop (code=exited, status=0/SUCCESS)
 Process: 5097 ExecStart=/etc/init.d/quagga start (code=exited, status=0/SUCCESS)
  CGroup: /system.slice/quagga.service
          ??5111 /usr/lib/quagga/zebra --daemon -A 127.0.0.1
          ??5115 /usr/lib/quagga/bgpd --daemon -A 127.0.0.1
          ??5121 /usr/lib/quagga/watchquagga --daemon zebra bgpd
Feb 16 17:47:25 OPX quagga[5097]: Loading capability module if not yet done.
Feb 16 17:47:25 OPX quagga[5097]: Starting Quagga daemons (prio:10): zebra...d.
Feb 16 17:47:25 OPX quagga[5097]: Starting Quagga monitor daemon: watchquagga.
Feb 16 17:47:25 OPX watchquagga[5121]: watchquagga 0.99.23.1 watching [zebr...]
Feb 16 17:47:25 OPX systemd[1]: Started LSB: start and stop the Quagga rou...e.
Feb 16 17:47:25 OPX watchquagga[5121]: bgpd state -> up : connect succeeded
Feb 16 17:47:25 OPX watchquagga[5121]: zebra state -> up : connect succeeded Hint: Some lines were ellipsized, use -1 to show in full
```

Remove the ! character to the left of the service integrated-vtysh-config option in the vtysh.conf file.

```
$ /etc/quagga/vtysh.conf
!
! Sample
!
service integrated-vtysh-config
hostname quagga-router
username root nopassword
```

6 Enable paging in the /etc/environment file.

```
$ echo VTYSH PAGER=more > /etc/environment
```

Source the environment file before you access the Quagga shell.

\$ source /etc/environment

8 Access the Quagga shell.

```
$ vtysh
Hello, this is Quagga (version 0.99.23.1)
Copyright 1996-2005 Kunihiro Ishiguro, et al.
OPX#
```


9 Save the configuration changes.

```
$ write memory
Building Configuration...
  Integrated configuration saved to /etc/quagga/Quagga.conf
[OK]
```

D≪LLEMC Layer 3 routing 19

Routing using Quagga

This use case describes how to configure BGP using Quagga in a spine/leaf network. See github.com/opensourcerouting/quagga for complete information.

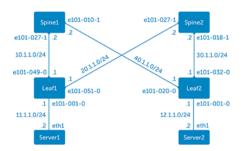

Link	Network	Link Nodes	BGP AS Number
Leaf1-to-Spine1	10.1.1.0/24	Leaf1	64501
		Spine1	64555
Leaf1-to-Spine2	20.1.1.0/24	Leaf1	64501
		Spine2	64555
Leaf2-to-Spine1	40.1.1.0/24	Leaf2	64502
		Spine1	64555
Leaf2-to-Spine2	30.1.1.0/24	Leaf2	64502
		Spine2	64555
Leaf1-to-Server1	11.1.1.0/24	Leaf1	64501
Leaf2-to-Server2	12.1.1.0/24	Leaf2	64502

1 Configure the IP addresses to Spine1, Spine2, and Server1 from Leaf1.

```
leaf1(config) # interface e101-049-0
leaf1(conf-if-e101-049-0) # ip address 10.1.1.1/24
leaf1(conf-if-e101-049-0) # no shutdown
leaf1(conf-if-e101-049-0) # exit

leaf1(config) # interface e101-051-0
leaf1(conf-if-e101-051-0) # ip address 20.1.1.1/24
leaf1(conf-if-e101-051-0) # no shutdown
leaf1(conf-if-e101-051-0) # exit

leaf1(config) # interface e101-001-0
leaf1(conf-if-e101-001-0) # ip address 11.1.1.1/24
leaf1(conf-if-e101-001-0) # no shutdown
```

2 Configure the IP addresses to Spine1, Spine2, and Server2 from Leaf2.

```
leaf2 (config) # interface e101-032-0
leaf2 (conf-if-e101-032-0) # ip address 30.1.1.1/24
leaf2 (conf-if-e101-032-0) # no shutdown
leaf2 (conf-if-e101-032-0) # exit

leaf2 (config) # interface e101-020-0
leaf2 (conf-if-e101-020-0) # ip address 40.1.1.1/24
leaf2 (conf-if-e101-020-0) # no shutdown
leaf2 (conf-if-e101-020-0) # exit
leaf2 (config) # interface e101-001-0
```

20 Layer 3 routing

D≪LLEMC

```
leaf2(conf-if-e101-001-0) # ip address 12.1.1.1/24
   leaf2(conf-if-e101-001-0) # no shutdown
   Configure the IP addresses to Leaf1 and Leaf2 from Spine1.
   spine1(config) # interface e101-027-1
   spine1(conf-if-e101-027-1)# ip address 10.1.1.2/24
   spine1(conf-if-e101-027-1) # no shutdown
   spine1(conf-if-e101-027-1) # exit
   spine1(config) # interface e101-010-1
   spine1(conf-if-e101-010-1) # ip address 40.1.1.2/24
   spine1(conf-if-e101-010-1) # no shutdown
   Configure the IP addresses to Leaf1 and Leaf2 from Spine2.
   spine2(config) # interface e101-027-1
   spine2(conf-if-e101-027-1) # ip address 20.1.1.2/24
   spine2(conf-if-e101-027-1) # no shutdown
   spine2(conf-if-e101-027-1)# exit
   spine2(config)# interface e101-018-1
   spine2(conf-if-e101-018-1)# ip address 30.1.1.2/24
   spine2(conf-if-e101-018-1) # no shutdown
   spine2(conf-if-e101-018-1) # exit
   Configure BGP to Spine1 and Spine2 from Leaf 1.
   leaf1(config) # router bgp 64501
   leaf1(conf-router-bgp-64501)# neighbor 10.1.1.2 remote-as 64555
   leaf1(conf-router-bgp-64501) # neighbor 20.1.1.2 remote-as 64555
   leaf1(conf-router-bgp-64501) # network 10.1.1.0/24
   leaf1(conf-router-bgp-64501) # network 20.1.1.0/24
   leaf1(conf-router-bgp-64501) # network 11.1.1.0/24
   Configure BGP to Spine1 and Spine2 from Leaf 2.
   leaf2(config) # router bgp 64502
   leaf2(conf-router-bgp-64502)# neighbor 30.1.1.2 remote-as 64555
   leaf2(conf-router-bgp-64502)# neighbor 40.1.1.2 remote-as 64555
    leaf2(conf-router-bgp-64502) # network 12.1.1.0/24
    leaf2(conf-router-bgp-64502) # network 30.1.1.0/24
   leaf2(conf-router-bgp-64502)# network 40.1.1.0/24
   Configure BGP to Leaf1 and Leaf2 from Spine1.
   spine1(config) # router bgp 64555
   spine1(conf-router-bgp-64555) # neighbor 10.1.1.1 remote-as 64501
   spine1(conf-router-bgp-64555)# neighbor 40.1.1.1 remote-as 64502
   spine1(conf-router-bgp-64555) # network 10.1.1.0/24
   spine1(conf-router-bgp-64555)# network 40.1.1.0/24
   Configure BGP to Leaf1 and Leaf2 from Spine 2.
   spine2(config)# router bgp 64555
   spine2(conf-router-bgp-64555) # neighbor 30.1.1.1 remote-as 64502
   spine2(conf-router-bgp-64555)# neighbor 20.1.1.1 remote-as 64501
   spine2(conf-router-bgp-64555) # network 30.1.1.0/24
   spine2(conf-router-bgp-64555)# network 20.1.1.0/24
   Configure ECMP from Leaf1 and Leaf2.
   leaf1(config) # router bgp 64501
   leaf1(conf-router-bgp-64501) # maximum-paths 16
   leaf2(config) # router bgp 64502
   leaf2(conf-router-bgp-64502)# maximum-paths 16
Verify spine/leaf configuration
   Verify BGP neighbors from Leaf1 and Leaf2.
   leaf1# show ip bgp sum
   BGP router identifier 20.1.1.1, local AS number 64501
   RIB entries 11, using 1232 bytes of memory
   Peers 2, using 9136 bytes of memory
   Neighbor V AS MsgRcvd MsgSent TblVer InQ OutQ Up/Down State/PfxRcd
   10.1.1.2 4 64555 196 201 0 0 0 02:39:02 4
```

DIEMC Layer 3 routing 2

```
20.1.1.2 4 64555 195 206 0 0 0 02:38:57 4
 Total number of neighbors 2
 leaf2# show ip bgp sum
 BGP router identifier 40.1.1.1, local AS number 64502
 RIB entries 11, using 1232 bytes of memory
 Peers 2, using 9136 bytes of memory
 Neighbor V AS MsgRcvd MsgSent TblVer InQ OutQ Up/Down State/PfxRcd 30.1.1.2 4 64555 196 197 0 0 0 02:39:45 4 40.1.1.2 4 64555 192 204 0 0 0 02:39:42 4
 Total number of neighbors 2
Verify BGP neighbors from Spine1 and Spine 2.
 spine1# show ip bgp sum
 BGP router identifier 40.1.1.2, local AS number 64555
 RIB entries 11, using 1232 bytes of memory Peers 2, using 9136 bytes of memory
 Neighbor V AS MsgRcvd MsgSent TblVer InQ OutQ Up/Down State/PfxRcd
 10.1.1.1 4 64501 199 201 0 0 0 02:40:55 3
 40.1.1.1 4 64502 202 198 0 0 0 02:41:01
 Total number of neighbors 2
 spine2# show ip bgp sum
 BGP router identifier 30.1.1.2, local AS number 64555
 RIB entries 11, using 1232 bytes of memory Peers 2, using 9136 bytes of memory
 Neighbor V AS MsgRcvd MsgSent TblVer InQ OutQ Up/Down State/PfxRcd
 20.1.1.1 4 64501 206 206 0 0 0 02:43:06 3
 30.1.1.1 4 64502 197 203 0 0 0 02:43:20 3
 Total number of neighbors 2
Verify BGP neighbors from Spine1 and Spine2.
 spinel# show ip bqp sum
 BGP router identifier 40.1.1.2, local AS number 64555
 RIB entries 11, using 1232 bytes of memory
 Peers 2, using 9136 bytes of memory
 Neighbor V AS MsgRcvd MsgSent TblVer InQ
10.1.1.1 4 64501 199 201 0 0 0 02:40:55
40.1.1.1 4 64502 202 198 0 0 0 02:41:01
                                       TblVer InQ OutQ Up/Down State/PfxRcd
 Total number of neighbors 2
 spine2# show ip bgp sum
 BGP router identifier 30.1.1.2, local AS number 64555
 RIB entries 11, using 1232 bytes of memory
 Peers 2, using 9136 bytes of memory
 Neighbor V AS MsgRcvd MsgSent TblVer InQ
20.1.1.1 4 64501 206 206 0 0 0 02:43:06
30.1.1.1 4 64502 197 203 0 0 02:43:20
                                        TblVer InQ OutQ Up/Down State/PfxRcd
 Total number of neighbors 2
 Verify that the server route is ECMP in the routing table from Leaf1 and Leaf2.
 leaf1# show ip route
 Codes: K - kernel route, C - connected, S - static, R - RIP,
      O - OSPF, I - IS-IS, B - BGP, A - Babel, > - selected route, * - FIB route
 C>* 10.1.1.0/24 is directly connected, e101-049-0
 C>* 11.1.1.0/24 is directly connected, e101-001-0
```

22 Layer 3 routing **D≪LL**EMC

B>* 12.1.1.0/24 [20/0] via 10.1.1.2, e101-049-0, 02:44:45

```
via 20.1.1.2, e101-051-0, 02:44:45
C>* 13.1.1.0/24 is directly connected, e101-002-0
C>* 20.1.1.0/24 is directly connected, e101-051-0
B>* 30.1.1.0/24 [20/0] via 20.1.1.2, e101-051-0, 02:09:44
B>* 40.1.1.0/24 [20/0] via 10.1.1.2, e101-049-0, 02:11:50
C>* 127.0.0.0/8 is directly connected, lo
leaf2# show ip route
Codes: K - kernel route, C - connected, S - static, R - RIP,
    O - OSPF, I - IS-IS, B - BGP, A - Babel,
    > - selected route, * - FIB route
B>* 10.1.1.0/24 [20/0] via 40.1.1.2, e101-020-0, 02:12:43
B>* 11.1.1.0/24 [20/0] via 30.1.1.2, e101-032-0, 02:45:14
        via 40.1.1.2, e101-020-0, 02:45:14
C>* 12.1.1.0/24 is directly connected, e101-001-0
B>* 20.1.1.0/24 [20/0] via 30.1.1.2, e101-032-0, 02:10:16
C>* 30.1.1.0/24 is directly connected, e101-032-0
C>* 40.1.1.0/24 is directly connected, e101-020-0
C>* 127.0.0.0/8 is directly connected, lo
Verify that the server route is ECMP in the Linux routing table from Leaf1 and Leaf2.
```

```
$ ip route show
10.1.1.0/24 dev e101-049-0 proto kernel scope link src 10.1.1.1
11.1.1.0/24 dev e101-001-0 proto kernel scope link src 11.1.1.1
12.1.1.0/24 proto zebra
                            dev e101-049-0 weight 1
    nexthop via 10.1.1.2
    nexthop via 20.1.1.2 dev e101-051-0 weight 1
13.1.1.0/24 dev e101-002-0 proto kernel scope link src 13.1.1.1
20.1.1.0/24 dev e101-051-0 proto kernel scope link src 20.1.1.1
30.1.1.0/24 via 20.1.1.2 dev e101-051-0 proto zebra 40.1.1.0/24 via 10.1.1.2 dev e101-049-0 proto zebra
$ ip route show
10.1.1.0/24 via 40.1.1.2 dev e101-020-0 proto zebra
11.1.1.0/24 proto zebra
    nexthop via 30.1.1.2
                            dev e101-032-0 weight 1
    nexthop via 40.1.1.2 dev e101-020-0 weight 1
12.1.1.0/24 dev e101-001-0 proto kernel scope link src 12.1.1.1
20.1.1.0/24 via 30.1.1.2 dev e101-032-0 proto zebra
30.1.1.0/24 dev e101-032-0 proto kernel scope link src 30.1.1.1 40.1.1.0/24 dev e101-020-0 proto kernel scope link src 40.1.1.1
```

Verify that the server route is ECMP in the NPU routing table from Leaf1 and Leaf2.

```
$ hshell -c '13 defip show'
Unit 0, Total Number of DEFIP entries: 16384
# VRF Net addr Next Hop Mac INTF MODID PORT PRIO CLASS HIT VLAN
4096 0 10.1.1.0/24
                      00:00:00:00:00:00 100002 0 0 0 v
4096 0 20.1.1.0/24
                       00:00:00:00:00:00 100002 0 0 0 y
                                                    0 0 у
4097
                      00:00:00:00:00:00 100002 0
    0 11.1.1.0/24
                                                 Ω
4097
     0
        13.1.1.0/24
                       00:00:00:00:00:00 100002 0
                                                 0
4098 0 12.1.1.0/24
                      00:00:00:00:00:00 200000 0
                                                 0
                                                    0 0 n (ECMP)
                      00:00:00:00:00:00 100004 0 0 0 n
4098 0 40.1.1.0/24
4099 0 30.1.1.0/24
                      00:00:00:00:00:00 100005 0 0 0 n
$ hshell -c '13 multipath show'
Multipath Egress Object 200000
Interfaces: 100004 100005
Reference count: 1
$ hshell -c '13 defip show'
Unit O, Total Number of DEFIP entries: 16384
# VRF Net addr Next Hop Mac INTF MODID PORT PRIO CLASS HIT VLAN
4096 0 30.1.1.0/24 00:00:00:00:00:00 100002 0 0 0 y
4096 0 40.1.1.0/24
4097 0 12.1.1.0/24
                       00:00:00:00:00:00 100002 0
                      00:00:00:00:00:00 100002 0 0 0 0 y
4097 0 11.1.1.0/24 00:00:00:00:00 200000 0 0 0 n (ECMP)
```

D¢LLEMC Layer 3 routing 23 4098 0 10.1.1.0/24 00:00:00:00:00 100004 0 0 0 0 n 4098 0 20.1.1.0/24 00:00:00:00:00 100005 0 0 0 n

24 Layer 3 routing DELLEMC

Security

OpenSwitch OPX secures your network using access control lists (ACLs) and quality of service (QoS).

ACLs

Access control lists are flexible, hardware-accelerated sets of rules that match packets using packet header criteria, and perform actions on selected packets. Configure an ACL on a physical port (NPU) only by using the CPS API.

- · Ingress and egress ACL rules
- · Match packet header fields, including MAC address, Ethertype, IP address, IP protocol, TCP/ UDP port numbers, and In Port
- · Packet actions including drop, trap/forward to the CPU, redirect to port, change packet fields, and meter
- · Group ACL rules to enable multiple rule match for a single packet

See Application examples in the OpenSwitch OPX Developers Guide for more information on how to configure ACLs using the CPS API.

QoS

Use the dell-base-qos.yang model to configure the software to provision quality of service parameters. QoS provisioning includes:

- · Assign packet to traffic classes using packet 802.1p, DSCP, or more advanced ACL rules
- · Mark packets
- · Ingress rate policing using ACLs
- · Map traffic classes to queues
- · Egress queue rate shaping
- · Weighted random early detection (WRED)
- · Hierarchical scheduling
- · Egress port-level shaping
- · CoPP support for configuring CPU rate limits

See Programmability in the OpenSwitch OPX Developers Guide for more information on how to configure QoS using the CPS API.

DELLEMC Security 25

Monitoring

OpenSwitch OPX supports network monitoring features such as port mirroring and sFlow which monitor and capture network traffic in the system. It also provides tools to collect port and VLAN statistics, and port media information.


Port mirroring

Mirroring copies packets from a source port to a destination port. OpenSwitch OPX supports local and remote porting mirroring using CPS and Dell EMC-specific commands—not standard Linux commands.

· In local port mirroring, packets are forwarded from a source port to a destination port on the same system



In remote port mirroring, mirrored packets are forwarded using a dedicated L2 VLAN

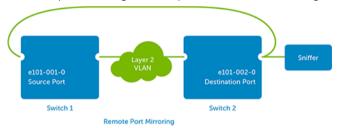

OpenSwitch OPX supports provisioning of mirroring capabilities using the CPS API:

- · Create a mirroring session
- Update a mirroring session
- · Delete a mirroring session

See Application examples in the OpenSwitch OPX Developers Guide for more information on how to configure port mirroring.

Topics:

- sFlow provisioning
- Port statistics

sFlow provisioning

sFlow monitors network traffic by sampling incoming and outgoing packets on physical ports. OpenSwitch OPX supports sFlow provisioning using the CPS API:

· Enable packet sampling on a physical port

26 Monitoring DØLLEMC

- · Disable packet sampling on a physical port
- · Set the sampling interval rate
- Forward the sampled packet to an IP address/port

See Application examples in the OpenSwitch OPX Developers Guide for more information on how to configure sFlow using the CPS API.

Port statistics

OpenSwitch OPX provides scripts to view statistical information about ports, VLANs, and installed transceivers.

 Display port statistics for all or a specified Linux interface which maps to physical ports. Enter a filter_list value to display specified statistics.

```
$ opx-show-stats if stat [iface name] {filter list}
```

Display statistics and media information from a Linux interface which maps to a physical port. The output is a subset of the opx-show-stats output for the same physical port interface.

```
$ opx-ethtool [-v | -e | -s | -S]
```

- -v Displays version information.
- · -e Displays media information from EEPROM.
- · -s Displays port speed, duplex, and auto-negotiation settings.
- -S Displays port statistics.
- Display statistics from all or a specified VLAN. Enter a filter_list value to display specified statistics.

```
$ opx-show-stats vlan stat [vlan ifname] {filter list}
```

· Delete port statistics for all or a specified Linux interface — command does not support deleting VLAN statistics.

```
$ opx-show-stats clear [iface name]
```

Clear port statistics

```
$ opx-show-stats clear e101-001-0
```

View e101-001-0 port statistics

```
$ opx-show-stats if stat e101-001-0
Key:
base-stats/interface/ip/in-discards = 0
base-stats/interface/ether-octets = 13442942147
base-stats/interface/ether-out/pkts-64-octets = 0
base-stats/interface/ether-collisions = 0
base-stats/interface/ether-in/pkts-4096-to-9216-octets = 0
base-stats/interface/ether-in/pkts-1024-to-1518-octets = 0
base-stats/interface/ipv6-out-mcast-pkts = 0
base-stats/interface/if/in-octets = 0
base-stats/interface/ether-jabbers = 0
base-stats/interface/if-out-multicast-pkts = 36295
base-stats/interface/ether-out/pkts-256-to-511-octets = 0
base-stats/interface/if-out-errors = 0
base-stats/interface/ether-rx-no-errors = 0
base-stats/interface/ether/pkts-512-to-1023-octets = 0
base-stats/interface/ether/pkts-64-octets = 0
base-stats/interface/ether/pkts-1024-to-1518-octets = 13125220
base-stats/interface/ipv6/out-discards = 0
base-stats/interface/if/out-octets = 13442942147
base-stats/interface/ether-in/pkts-256-to-511-octets = 0
base-stats/interface/if/out-ucast-pkts = 13125220
base-stats/interface/ether-fragments = 0
base-stats/interface/ether-crc-align-errors = 0
base-stats/interface/ipv6-in-mcast-pkts = 0
base-stats/interface/ether-out/pkts-65-to-127-octets = 34014
base-stats/interface/if-out-broadcast-pkts = 0
base-stats/interface/ether-drop-events = 0
```

D≪LLEMC Monitoring 2

```
base-stats/interface/if/in-ucast-pkts = 0
base-stats/interface/ether-out/pkts-128-to-255-octets = 2281
base-stats/interface/ether-in/pkts-2048-to-4095-octets = 0
base-stats/interface/ether-tx-oversize-pkts = 0
base-stats/interface/ether/pkts-256-to-511-octets = 0
base-stats/interface/ether-multicast-pkts = 36295
base-stats/interface/ether-out/pkts-4096-to-9216-octets = 0
base-stats/interface/ether/pkts-128-to-255-octets = 2281
base-stats/interface/ether-in/pkts-128-to-255-octets = 0
base-stats/interface/time-stamp = 1455586392
base-stats/interface/ip-in-receives = 0
base-stats/interface/ether-rx-oversize-pkts = 0
base-stats/interface/ether-oversize-pkts = 0
base-stats/interface/ether-out/pkts-1024-to-1518-octets = 13125220
base-stats/interface/if-in-errors = 0
base-stats/interface/ether-out/pkts-512-to-1023-octets = 0
base-stats/interface/if/in-non-ucast-pkts = 0
base-stats/interface/ether-in/pkts-65-to-127-octets = 0
base-stats/interface/ether/pkts-65-to-127-octets = 34014
base-stats/interface/if/in-discards = 0
base-stats/interface/ipv6-in-receives = 0
base-stats/interface/if/out-non-ucast-pkts = 36295
base-stats/interface/ipv6/in-discards = 0
base-stats/interface/ether-tx-no-errors = 13161515
base-stats/interface/ether-broadcast-pkts = 0
base-stats/interface/if-in-broadcast-pkts = 0
base-stats/interface/if/out-discards = 0
base-stats/interface/ether-out/pkts-1519-to-2047-octets = 0
base-stats/interface/ether-out/pkts-2048-to-4095-octets = 0
base-stats/interface/ether-pkts = 13161515
base-stats/interface/ether-in/pkts-1519-to-2047-octets = 0
base-stats/interface/ether/pkts-4096-to-9216-octets = 0
base-stats/interface/ether-undersize-pkts = 0
base-stats/interface/if-in-unknown-protos = 0
base-stats/interface/if-out-qlen = 0
base-stats/interface/if-in-multicast-pkts = 0
base-stats/interface/ether-in/pkts-64-octets = 0
base-stats/interface/ether-in/pkts-512-to-1023-octets = 0
```

View VLAN statistics

```
$ opx-show-stats vlan_stat br1
Key:
base-stats/vlan/time-stamp: 1455586573
base-stats/vlan/in-octets: 16381983058
base-stats/vlan/in-pkts: 16101053
base-stats/vlan/out-octets: 55146334258
base-stats/vlan/out-pkts: 67419926
```

View port statistics

```
$ opx-ethtool -S e101-001-0
Statistics for interface e101-001-0
  Ether statistics:
    rx bytes: 9185614848
    rx no errors: 0
    tx_no_errors: 9003181
    tx_total_collision: 0
    rx undersize packets: 0
    rx jabbers: 0
    rx fragments: 0
    rx align errors: 0
    rx_discards: 0
    rx_mcast_packets: 35445
    rx_bcast_packets: 0
    rx_oversize_packets: 0
    tx_oversize_packets: 0
    rx_64_byte_packets: 0
```

28 Monitoring DILLEMC

```
rx_65_to_127_byte_packets: 0
rx_128_to_255_byte_packets: 0
rx_256_to_511_byte_packets: 0
rx_512_to_1023_byte_packets: 0
rx_1024_to_1518_byte_packets: 0
rx_1519_to_2047_byte_packets: 0
rx_4096_to_9216_byte_packets: 0
rx_4096_to_9216_byte_packets: 0
tx_64_byte_packets: 0
tx_65_to_127_byte_packets: 33217
tx_128_to_255_byte_packets: 2228
tx_256_to_511_byte_packets: 0
tx_512_to_1023_byte_packets: 0
tx_1024_to_1518_byte_packets: 8967736
tx_1024_to_1518_byte_packets: 0
tx_2048_to_4095_byte_packets: 0
tx_2048_to_4095_byte_packets: 0
tx_4096_to_9216_byte_packets: 0
tx_4096_to_9216_byte_packets: 0
```

View transceiver statistics

```
$ opx-ethtool -e e101-001-0
Show media info for e101-001-0
if index is 17
Key: 2.19.1245389.1245248.1245249.1245250.
base-pas/media/rate-identifier = 0
base-pas/media/oper-status = 0
base-pas/media/category = 3
base-pas/media/voltage-state = 1
base-pas/media/bias-low-warning-threshold =
base-pas/media/vendor-pn = 568400002
base-pas/media/current-temperature = ??
base-pas/media/insertion-cnt = 0
base-pas/media/voltage-low-warning-threshold =
base-pas/media/cc ext = 162
base-pas/media/length-om2 = 0
base-pas/media/length-om3 = 0
base-pas/media/rx-power-low-alarm-threshold =
base-pas/media/length-om1 = 0
base-pas/media/vendor-id = AP
base-pas/media/media-category/sfp-plus/br-max = 0
base-pas/media/connector = 33
base-pas/media/ext-transceiver = 0
base-pas/media/vendor-Specific =
base-pas/media/media-category/sfp-plus/br-min = 0
base-pas/media/encoding = 0
base-pas/media/tx-power-high-warning-threshold =
base-pas/media/vendor-name = Amphenol
base-pas/media/rx-power-low-warning-threshold =
base-pas/media/slot = 1
base-pas/media/port = 1
base-pas/media/vendor-rev = 4700
base-pas/media/slot = 1
base-pas/media/port = 1
base-pas/media/tx-power-low-alarm-threshold =
base-pas/media/bias-low-alarm-threshold =
base-pas/media/capability = 6
base-pas/media/media-category/sfp-plus/sff-8472-compliance = 0
base-pas/media/diag-mon-type = 0
base-pas/media/temp-state = 1
base-pas/media/type = 43
base-pas/media/media-category/qsfp-plus/wavelength-tolerance = 0
base-pas/media/ext-identifier = 0
base-pas/media/temp-low-warning-threshold =
base-pas/media/voltage-high-warning-threshold =
base-pas/media/temp-high-alarm-threshold =
base-pas/media/length-sfm = 0
base-pas/media/rate-select-state = 0
```

D≪LLEMC Monitoring 29

```
base-pas/media/rx-power-measurement-type = 0
base-pas/media/wavelength = 0
base-pas/media/cc base = 54
base-pas/media/temp-low-alarm-threshold =
base-pas/media/tx-power-low-warning-threshold =
base-pas/media/insertion-timestamp = 0
base-pas/media/current-voltage
base-pas/media/bias-high-alarm-threshold =
base-pas/media/high-power-mode = 1
base-pas/media/br-nominal = 0
base-pas/media/options = 0
base-pas/media/rx-power-high-warning-threshold =
base-pas/media/date-code = 3131303632322000
base-pas/media/present = 1
base-pas/media/transceiver = 00000000000000000205c
base-pas/media/length-cable = 2
base-pas/media/voltage-high-alarm-threshold =
base-pas/media/identifier = 12
base-pas/media/voltage-low-alarm-threshold =
base-pas/media/dell-qualified = 0
base-pas/media/length-sfm-km = 0
base-pas/media/rx-power-high-alarm-threshold =
base-pas/media/admin-status = 0
base-pas/media/serial-number = APF11240020140
base-pas/media/tx-power-high-alarm-threshold =
base-pas/media/temp-high-warning-threshold =
base-pas/media/bias-high-warning-threshold =
base-pas/media/enhanced-options = 0
base-pas/media/media-category/qsfp-plus/max-case-temp = 70
```

30 Monitoring

D≪LLEMC