RR-7.4: RS-232 CABLE/BRACKET ASSEMBLY (pg 1 of 2)



Removal

- 1. Remove Enclosure Assembly (RR-1.3).
- 2. Remove Card Cage Cover:
 - a. Disconnect Ribbon and Ground cables.
 - b. Release 3 locking clips.
 - c. Remove Card Cage Cover.
- 3. Disconnect RS-232 cables from CPU Board (J2 & J3).
- 4. Remove RS-232 Bracket:
 - a. Remove 2 mounting screws and 4 locking washers.
 - b. Remove bracket.

Replacement

CAUTION!

Do not block Card Cage Fan output.

- 1. Install RS-232 Bracket:
 - a. Place RS-232 Bracket over mounting holes.
 - Secure bracket to Card Cage with 2 mounting screws and 4 locking washers.
 - c. Route RS-232 Cables over right side of Card Cage.

4 - 79

- 2. Connect RS-232 Cables to CPU Board (J2 & J3).
- Removal & Replacement Procedures R
 LCx[®] Analyzer Service Manual (Text P/N 47278-102)
 - PL-7

Chapter	Manual	CD Main	Index
Contents	Contents	Screen	

RR-7.4: RS-232 Cable/Bracket Assembly

RR-7.4: RS-232 Cable/Bracket Assembly (pg 2 of 2)


Replacement (cont)

- 3. Install Card Cage Cover:
 - a. Place cover over Card Cage.
 - b. Secure cover with 3 locking clips.c. Connect Ribbon and Ground cables.
- 4. Install Enclosure Assembly.

Verification

Perform these procedures in this order:

- 1. RS-232 Bracket Centering (VP-55)
- 2. RS-232 COM Port Test (VP-44)

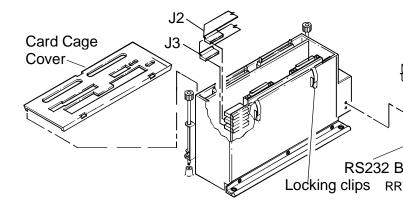

4	Removal & Replacement Procedures	RR-7.4: RS-232 Cable/Bracket Assembly	4 - 80
LCx [®] Analyzer Service Manual (Text P/N 47278-102)			

PL-7	Chapter Contents	Manual Contents	CD Main Screen	Index
	Contents	Contents	Ocicen	