
IP-51 Error codes 116, 118 (pg 1 of 1)

EC-116: NMI Test failed

EC-118: Mem error XXXXXXXXX or UX

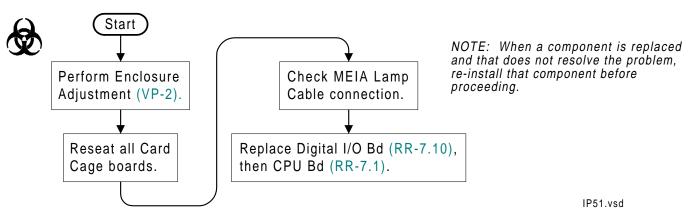

2 Troubleshooting IP-51: Error codes 116, 118 2 - 144 LCx® Analyzer Service Manual (Text P/N 47278-102)

Chapter	Manual	CD Main	Index
Contents	Contents	Screen	
Contonto	Comonio	0010011	