RR-2.7: PROTECTIVE WIRE COVER (pg 1 of 1)

Removal


- 1. Remove Enclosure Assembly (RR-1.3).
- 2. Remove 3 screws securing right VDE Cover to display.
- Disconnect VDE Ground Cable.
- 4. Remove 4 mounting screws and Protective Wire Cover.

Replacement

- 1. Install Protective Wire Cover: a. Place cover over alignment pins.
 - Secure cover with 4 mounting screws.
 - c. Connect VDE Ground Cable.

Replacement (cont)

2. Secure right VDE Cover to display with 3 screws.

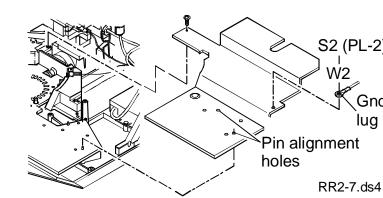

Removal & Replacement Procedures LCx[®] Analyzer Service Manual (Text P/N 47278-102)

Manual **CD Main** Chapter Index Contents Contents Screen

RR-2.7: Protective Wire Cover

4 - 13

PL-2