

RR-8.1: DISPLAY ASSEMBLY (pg 1 of 2)

Removal



- 1. Remove Enclosure (RR-1.3). 2. Tilt back Card Cage (RR-8.0).
- Raise Display to upright position (RR-8.1.1).
- 3. Remove Display Assembly: Disconnect 3 cables.
 - b. Remove 2 thumbscrews that attach Display to sheet metal assembly.
 - c. Remove Display Assembly.

Replacement

- 1. Install Display Assembly:
- a. Attach Display Assembly to sheet metal assembly with 2 thumbscrews.
 - b. Connect 3 cables.
- c. Position and secure Display.
- 2. Reposition and secure Card Cage.

Verification

Perform these procedures in this order:

RR-8.1: Display Assembly

Enclosure Adjustment (VP-2)

3. Install Enclosure Assembly.

- 2. Keyboard Test (VP-42)
- 3. Display Test (VP-43)

Removal & Replacement Procedures LCx[®] Analyzer Service Manual (Text P/N 47278-102)

Chapter Contents


Manual Contents CD Main Screen

Index

4 - 89

PL-8

RR-8.1: Display Assembly (pg 2 of 2)

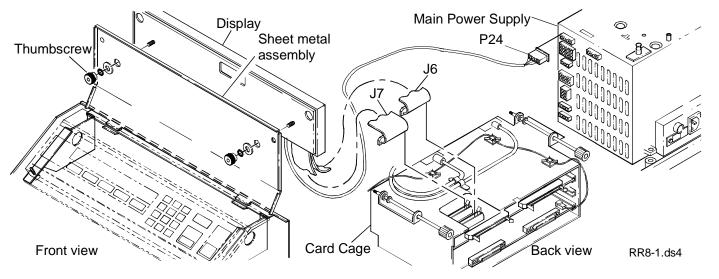

4 Removal & Replacement Procedures RR-8.1: Display Assembly 4 - 90 LCx® Analyzer Service Manual (Text P/N 47278-102)

PL-8

Chapter	Manual	CD Main	Index
Contents	Contents	Screen	