PL-6: PRINTER/MAIN POWER SUPPLY (pg 1 of 3)

Item	RR	Part No.	Description	
	KK			
1		3-04855-01	Paper Feed Switch	
			Assy	
2		3-04517-01	Rod, Paper Hanger	
3	6.3	3-47227-01	Printer Assy	
4		3-47225-01	Cable, Ribbon #7,	
			CPU to Printer	
5		14107-080	Fuse, 10A, Slo Blo	
6		14325-001	Power Cord, 10A,	
			125V	
7		3-04831-01	Cable, Main P/S to	
			Printer	
8		3-04833-01	Cable, Main P/S 110	
			VAC to Mtr. Dr. Bd.	

Item	RR	Part No.	Description
9		3-04830-01	Cable, Main P/S to
			Card Cage
11		3-47080-01	Cable Assy, LLS P/S/
			Mtr. Dr./Analog
12		14107-020	Fuse, 3Ag-3A
13	6.13	3-47230-01	Main Power Supply
			w/Fan
14		3-44091-01	Power Supply Fan
			Baffle
15		3-47414-01	Power Supply Fan,
			24 VDC

NOTE: LLS Bd is shown on PL-5 (item 7).

PL-6 screws/washers table on next page.
Additional part (not shown) listed on next page.

3 Parts Lists LCx[®] Analyzer Service Manual (Text P/N 47278-102)

17278-102)

PL-6: Printer/Main Power Supply 3 - 19

Block/board	PL-6
diagrams	illustration

Chapter	Manual	CD Main	Index
Contents	Contents	Screen	

PL-6: Printer/Main Power Supply (pg 2 of 3)

Additional part (not shown in illustration): 9684-07 Paper, Thermal Printer


Item	Part No.	Description
S1	14494-106	Screw, PHP 6-32 x .380
S2	14494-114	Screw, PHP 6-32 x .87
S3	14494-206	Screw, PHP 8-32 x .375

3 Parts Lists PL-6: Printer/Main Power Supply 3 - 20 LCx® Analyzer Service Manual (Text P/N 47278-102)

Block/board	PL-6	
diagrams	illustration	

Chapter	Manual	CD Main	Index
Contents	Contents	Screen	

PL-6: Printer/Main Power Supply (pg 3 of 3)

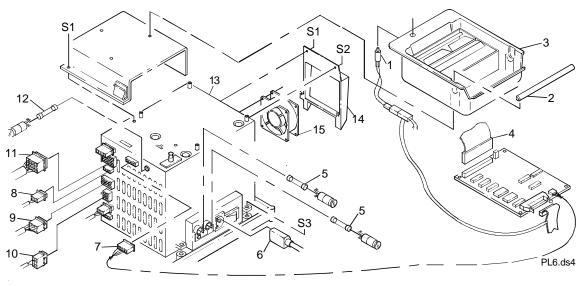

3 Parts Lists PL-6: Printer/Main Power Supply 3 - 21 LCx® Analyzer Service Manual (Text P/N 47278-102)

Block/board	PL-6
diagrams	parts list

Chapter	Manual	CD Main	Index
Contents	Contents	Screen	