
IP-66 Error code 166 (pg 1 of 5)

EC-166: Read error XXXX

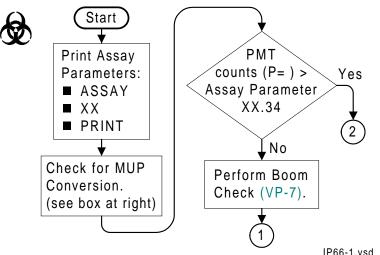


Check for MUP Conversion:

- 1. Pipette 3 drops of MUP on Matrix of clean Reaction Cell (MUP in vial 3).
- 2. Place Reaction Cell in position 1 of carousel.
- 3. Place carousel in analyzer and close door.
- 4. Set H.V. to 600V in MEIA Optics Hand Controls:
 - MONITOR
 - HND CTRLS
 - OPTICS
 - SET HV
 - 600
 - STORE
 - LAMP
- 5. Let PMT Counts (P=) stabilize (Door is closed).
- 6. Compare PMT Counts to Assay Parameter XX.34

2 Troubleshooting IP-66: Error code 166 2 - 164 LCx® Analyzer Service Manual (Text P/N 47278-102)


Chapter	Manual	CD Main	Index
Contents	Contents	Screen	

IP-66 (pg 2 of 5)

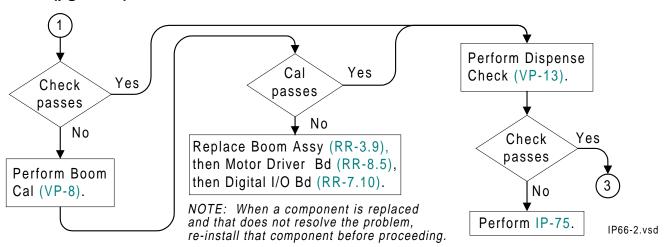

2 Troubleshooting IP-66: Error code 166 2 - 165 LCx® Analyzer Service Manual (Text P/N 47278-102)


IP-66 (pg 3 of 5)

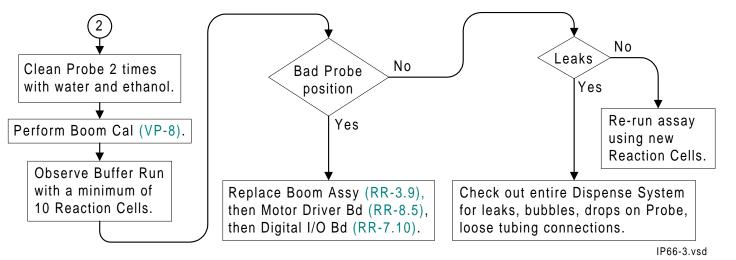

2 Troubleshooting IP-66: Error code 166 2 - 166 LCx® Analyzer Service Manual (Text P/N 47278-102)


Chapter	Manual	CD Main	Index
Contents	Contents	Screen	

IP-66 (pg 4 of 5)

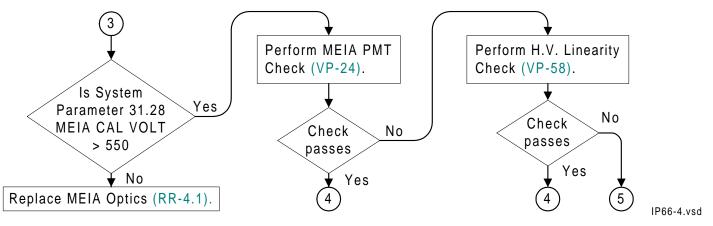



Chapter	Manual	CD Main	Index
Contents	Contents	Screen	

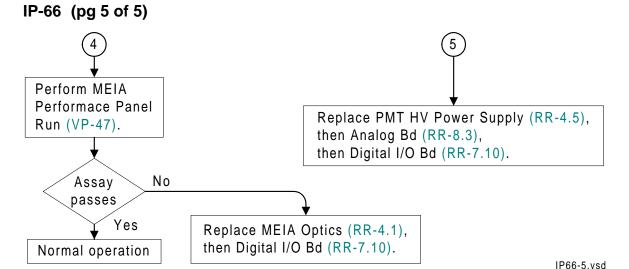

Troubleshooting LCx [®] Analyzer Service Manual (Text P/N 47278-	102)	IP-66: Error	code 166	2 - 168

Chapter	Manual	CD Main	Index
Contents	Contents	Screen	