1. Linux Device driver


NXKR_YoungSikYang

Exported on 02/26/2024

Table of Contents

1	Types of devices in Linux	3
1.1	Character Devices	3
1.2	Block Devices	3
1.3	Network Devices	4
2	Misc Drivers	5
3	Module Drivers	6
4	Adding a dummy (module) driver to the kernel	7
4.1	char driver source code	7
4.2	Include the new driver in the build process	9
4.2.1	- Optional module driver that can be included and excluded via menuconfig	9
4.2.2	- Always compiled together on build	10
4.3	Transfer the module driver to the target board	10
4.3.1	- Using adb	10
4.3.2	- How to install a file to /home/root using yocto	11
4.3.2.1	1. Create a recipe directory in recipes-core(or any recipes- directory)	11
4.3.2.2	2. Create a recipe and a files directory and add necessary files in the files directory	11
4.3.2.3	3. Write the recipe	11
4.3.2.4	4. Add the recipe to the core recipe	12
4.3.3	- Automatically added	12
4.4	Load the module driver in the target board	12
5	Reference	13

1 Types of devices in Linux

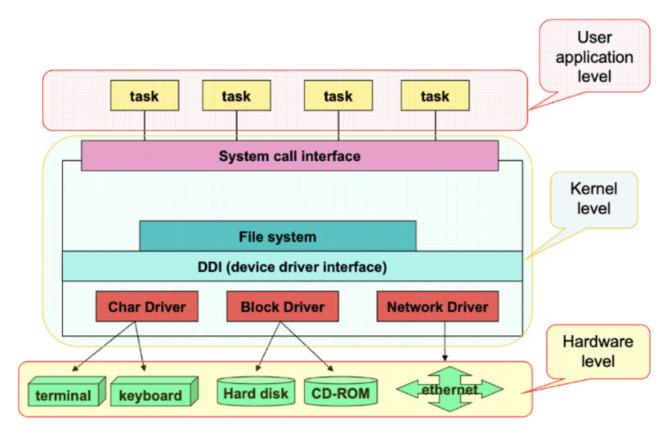

1.1 Character Devices

- Description: Character devices, also known as "char devices," handle data one character at a time.
- **Use Cases**: They are typically used for devices that require sequential access, such as keyboards, mice, serial ports, and more.
- Access: Accessed through files in the /dev directory. Examples include /dev/tty for the terminal, /dev/null, and /dev/random.

1.2 Block Devices

- Description: Block devices handle data in blocks, which means they read and write data in fixed-size chunks. This allows for random access to data blocks, enabling users to jump to different locations on the device.
- Use Cases: Commonly used for storage devices, such as hard drives, SSDs, and USB flash drives.

 Access: Accessed through files in the /dev directory. Examples include /dev/sda for the first SATA drive, /dev/nvme0n1 for the first NVMe drive, etc.

1.3 Network Devices

- **Description**: Network devices are used to send and receive data packets over a network.
- **Use Cases**: Examples include Ethernet adapters, Wi-Fi cards, and other interfaces that facilitate network communication.
- Access: Network interfaces are listed under /sys/class/net/ or can be seen using the ip addr command. They can be interacted with through the utilities like ifconfig, ip, netstat, and others.

2 Misc Drivers

Misc drivers (miscellaneous drivers) in Linux are a category of device drivers that don't fit well into other standard categories of drivers like network, USB, or block drivers.

They are used for controlling various types of devices that do not belong to a common device class.

3 Module Drivers

- **Definition**: Module drivers refer to any drivers that are compiled as modules in the Linux kernel. This can include drivers for network interfaces, block devices, USB devices, etc.
- · Characteristics:
 - Loadable Kernel Modules (LKMs): These drivers can be dynamically loaded into and unloaded from the running kernel, allowing hardware to be added or removed without rebooting the system.
 - **Modularity**: This approach supports modularity and extensibility, enabling the kernel to stay lean by loading only the necessary modules for the hardware present.
 - **Dependency Handling**: The kernel keeps track of dependencies between modules, ensuring that modules required by others are loaded first.
 - Tools for Management: Utilities like modprobe, insmod, and rmmod are used to manage loading and unloading of module drivers.

4 Adding a dummy (module) driver to the kernel

4.1 char driver source code

```
my_char.c
#include <linux/kernel.h>
#include <linux/init.h>
#include <linux/module.h>
#include <linux/kdev_t.h>
#include <linux/fs.h>
#include <linux/err.h>
#include <linux/cdev.h>
#include <linux/device.h>
#include <linux/err.h>
dev_t dev = 0;
static struct class *dev_class;
static struct cdev etx_cdev;
/*
** Function Prototypes
*/
              __init etx_driver_init(void);
static int
static void
                __exit etx_driver_exit(void);
static int
    etx_open(struct inode *inode, struct file *file);
static int
    etx_release(struct inode *inode, struct file *file);
static ssize_t etx_read(struct file *filp, char __user *buf, size_t len,loff_t *
static ssize_t etx_write(struct file *filp, const char *buf, size_t len, loff_t *
off);
static struct file_operations fops =
              = THIS_MODULE,
    .owner
    .read
               = etx_read,
    .write
              = etx_write,
    .open
              = etx_open,
    .release = etx_release,
};
** This function will be called when we open the Device file
*/
```

```
static int etx_open(struct inode *inode, struct file *file)
{
        pr_info("YANG Driver Open Function Called...!!!\n");
        return 0;
}
/*
** This function will be called when we close the Device file
static int etx_release(struct inode *inode, struct file *file)
        pr_info("YANG Driver Release Function Called...!!!\n");
        return 0;
}
** This function will be called when we read the Device file
*/
static ssize_t etx_read(struct file *filp, char __user *buf, size_t len, loff_t *off)
{
        pr_info("YANG Driver Read Function Called...!!!\n");
        return 0;
}
/*
** This function will be called when we write the Device file
*/
static ssize_t etx_write(struct file *filp, const char __user *buf, size_t len,
loff_t *off)
        pr_info("YANG Driver Write Function Called...!!!\n");
        return len;
}
/*
** Module Init function
static int __init etx_driver_init(void)
{
        /*Allocating Major number*/
        if((alloc_chrdev_region(&dev, 0, 1, "etx_Dev")) <0){</pre>
                pr_err("Cannot allocate major number\n");
                return -1;
        pr_info("Major = %d Minor = %d \n", MAJOR(dev), MINOR(dev));
        /*Creating cdev structure*/
        cdev_init(&etx_cdev,&fops);
        /*Adding character device to the system*/
        if((cdev_add(&etx_cdev,dev,1)) < 0){</pre>
            pr_err("Cannot add the device to the system\n");
```

```
goto r_class;
        /*Creating struct class*/
        if(IS_ERR(dev_class = class_create(THIS_MODULE,"etx_class"))){
            pr_err("Cannot create the struct class\n");
            goto r_class;
        }
        /*Creating device*/
        if(IS_ERR(device_create(dev_class, NULL, dev, NULL, "etx_device"))){
            pr_err("Cannot create the Device 1\n");
            goto r_device;
        }
        pr_info("YANG Device Driver Insert...Done!!!\n");
      return 0;
r_device:
        class_destroy(dev_class);
r_class:
       unregister_chrdev_region(dev,1);
        return -1;
}
/*
** Module exit function
*/
static void __exit etx_driver_exit(void)
        device_destroy(dev_class,dev);
        class_destroy(dev_class);
        cdev_del(&etx_cdev);
        unregister_chrdev_region(dev, 1);
        pr_info("Device Driver Remove...Done!!!\n");
}
module_init(etx_driver_init);
module_exit(etx_driver_exit);
MODULE_LICENSE("GPL");
MODULE_AUTHOR("EmbeTronicX <embetronicx@gmail.com>");
MODULE_DESCRIPTION("Simple Linux device driver (File Operations)");
MODULE_VERSION("1.3");
```

4.2 Include the new driver in the build process

4.2.1 - Optional module driver that can be included and excluded via menuconfig

drivers/char/Kconfig

```
config MY_CHAR
tristate "my_char module driver"
default m
help
"my_char module driver"
```

```
make ARCH=arm64 menuconfig

.config - Linux/arm64 4.4.83 Kernel Configuration
```

```
Character devices
Arrow keys navigate the menu. <Enter> selects submenus ---> (or empty
submenus ----). Highlighted letters are hotkeys. Pressing <Y> includes, <N> excludes, <M> modularizes features. Press <Esc> to exit, <?> for Help, </> for Search. Legend: [*] built-in [ ]
              Support for binding and unbinding console drivers
            Unix98 PTY support
              Support multiple instances of devpts
             Legacy (BSD) PTY support
            Non-standard serial port support
             GSM MUX line discipline support (EXPERIMENTAL)
             Trace data sink for MIPI P1149.7 cJTAG standard
      M<mark>> my_char module driver</mark>
*] /dev/mem virtual device support
     [*] /dev/kmem virtual device support
       <Select>
                      < Exit >
                                      < Help >
                                                      < Save >
                                                                     < Load >
```

```
make ARCH=arm64 savedefconfig
cp defconfig ./arch/arm64/configs/s5p6818_bitminer_defconfig
```

drivers/char/Makefile

obj-\$(CONFIG_MY_CHAR) += my_char.o

4.2.2 - Always compiled together on build

obj-m += my_char.o

And then build.

4.3 Transfer the module driver to the target board

4.3.1 - Using adb

adb push my_char.ko /home/root

es/kernel/kernel-4.4.x/drivers/char\$ adb push my_char.ko /home/root my_char.ko: 1 file pushed. 9.9 MB/s (246416 bytes in 0.024s)

4.3.2 - How to install a file to /home/root using yocto

4.3.2.1 1. Create a recipe directory in recipes-core(or any recipes- directory)



4.3.2.2 2. Create a recipe and a files directory and add necessary files in the files directory



4.3.2.3 3. Write the recipe

```
DESCRIPTION = "Install custom file to /home/root"
LICENSE = "MIT"

LIC_FILES_CHKSUM = "file://${COREBASE}/meta/
COPYING.MIT;md5=3da9cfbcb788c80a0384361b4de20420"

SRC_URI = "file://my_char.ko"

do_install() {
    install -d ${D}/home/root # Create the directory if it doesn't exist install -m 0644 ${WORKDIR}/my_char.c ${D}/home/root/my_char.ko}
}

# package management system
FILES_${PN} += "/home/root/my_char.ko"
```

4.3.2.4 4. Add the recipe to the core recipe

```
IMAGE_INSTALL:append = "\
    custom-files \
```

4.3.3 - Automatically added

```
find / -type f -name "my_char*"
```

The ko files(module drivers) are automatically added in /lib/modules/4.4.83/kernel/drivers/

4.4 Load the module driver in the target board

5 Reference

https://embetronicx.com/tutorials/linux/device-drivers¹

¹ https://embetronicx.com/tutorials/linux/device-drivers/misc-device-driver/