1. Linux Device driver

NXKR_YoungSikYang


Exported on 03/06/2024

Table of Contents

1. Types of devices in Linux	3
1.1 Character Devices	3
1.2 Block Devices	3
1.3 Network Devices	4
2. Misc Driver	5
3. Module Driver	6
3.1 Explanation	6
3.2 Diagram showing how LKMs are loaded	7
4. Adding a dummy module driver to the kernel	8
4.1 Source code	8
4.2 Build the module driver	10
4.2.1 Compiling the module along with the kernel	11
4.2.1.1 Optional compile according to Kconfig	11
4.2.1.2 Always compile along with the kernel build	12
4.2.2 Manual build	12
4.3 Loading the module driver	12
4.3.1 If the module was built along with the kernel	12
4.3.2 If the module was manually built	13
4.3.2.1 Using the yocto recipe	13
4.3.2.2 Pushing the module to the target board	14
4.3.2.3 Load the module driver in the target board	14
Reference	15

1. Types of devices in Linux

Linux kernel diagram including device drivers

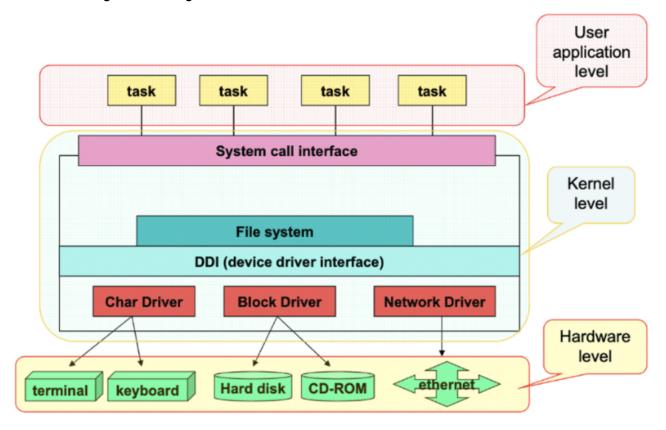

1.1 Character Devices

- Description: Character devices, also known as "char devices," handle data one character at a time.
- **Use Cases**: They are typically used for devices that require sequential access, such as keyboards, mice, serial ports, and more.
- Access: Accessed through files in the /dev directory. Examples include /dev/tty for the terminal, /dev/null, and /dev/random.

1.2 Block Devices

- Description: Block devices handle data in blocks, which means they read and write data in fixed-size chunks. This allows for random access to data blocks, enabling users to jump to different locations on the device.
- Use Cases: Commonly used for storage devices, such as hard drives, SSDs, and USB flash drives.

 Access: Accessed through files in the /dev directory. Examples include /dev/sda for the first SATA drive, /dev/nvme0n1 for the first NVMe drive, etc.

1.3 Network Devices

- **Description**: Network devices are used to send and receive data packets over a network.
- **Use Cases**: Examples include Ethernet adapters, Wi-Fi cards, and other interfaces that facilitate network communication.
- Access: Network interfaces are listed under /sys/class/net/ or can be seen using the ip addr command. They can be interacted with through the utilities like ifconfig, ip, netstat, and others.

2. Misc Driver

Misc drivers (miscellaneous drivers) in Linux are a category of device drivers that don't fit well into other standard categories of drivers like network, USB, or block drivers.


They are used for controlling various types of devices that do not belong to a common device class.

3. Module Driver

3.1 Explanation

- **Definition**: Module drivers refer to any drivers that are compiled as modules in the Linux kernel. This can include drivers for network interfaces, block devices, USB devices, etc.
- · Characteristics:
 - Loadable Kernel Modules (LKMs): Module drivers can be dynamically loaded into and unloaded from the running kernel, allowing hardware to be added or removed without rebooting the system. (LKM is an option)
 - **Modularity**: This approach supports modularity and extensibility, enabling the kernel to stay lean by loading only the necessary modules for the hardware present.
 - Maintainability: Modularization makes it easier to maintain the software. When code is
 organized into modules, developers can quickly update parts of the application without
 affecting the entire system.
 - **Tools for Management**: Utilities like modprobe, insmod, and rmmod are used to manage loading and unloading of module drivers.

3.2 Diagram showing how LKMs are loaded

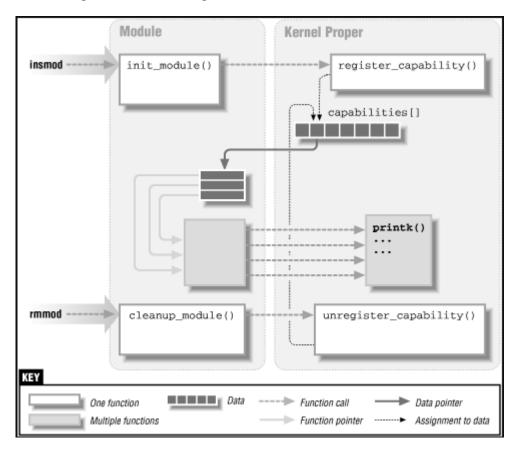

4. Adding a dummy module driver to the kernel

This section describes how to load a loadable kernel module.

4.1 Source code

This is an example code of char driver

my_char.c #include <linux/kernel.h>

```
#include <linux/init.h>
#include <linux/module.h>
#include <linux/kdev_t.h>
#include <linux/fs.h>
#include <linux/err.h>
#include <linux/cdev.h>
#include <linux/device.h>
#include <linux/err.h>
dev_t dev = 0;
static struct class *dev_class;
static struct cdev my_cdev;
/*
** Function Prototypes
static int
static void
static void
static int
stat
static ssize_t my_read(struct file *filp, char __user *buf, size_t len,loff_t *
static ssize_t my_write(struct file *filp, const char *buf, size_t len, loff_t *
off);
static struct file_operations fops =
                                                          = THIS_MODULE,
                .owner
                .read
                                                          = my_read,
                .write = my_write,
.open = my_open,
                .release = my_release,
};
```

```
/*
** This function will be called when we open the Device file
*/
static int my_open(struct inode *inode, struct file *file)
{
        pr_info("YANG Driver Open Function Called...!!!\n");
        return 0;
}
** This function will be called when we close the Device file
static int my_release(struct inode *inode, struct file *file)
        pr_info("YANG Driver Release Function Called...!!!\n");
        return 0;
}
** This function will be called when we read the Device file
static ssize_t my_read(struct file *filp, char __user *buf, size_t len, loff_t *off)
        pr_info("YANG Driver Read Function Called...!!!\n");
        return 0;
}
/*
** This function will be called when we write the Device file
static ssize_t my_write(struct file *filp, const char __user *buf, size_t len, loff_t
*off)
{
        pr_info("YANG Driver Write Function Called...!!!\n");
        return len;
}
** Module Init function
*/
static int __init my_driver_init(void)
{
        /*Allocating Major number*/
        if((alloc_chrdev_region(&dev, 0, 1, "my_Dev")) <0){</pre>
                pr_err("Cannot allocate major number\n");
                return -1;
        }
        pr_info("Major = %d Minor = %d \n",MAJOR(dev), MINOR(dev));
        /*Creating cdev structure*/
        cdev_init(&my_cdev,&fops);
```

```
/*Adding character device to the system*/
        if((cdev_add(&my_cdev,dev,1)) < 0){</pre>
            pr_err("Cannot add the device to the system\n");
            goto r_class;
        }
        /*Creating struct class*/
        if(IS_ERR(dev_class = class_create(THIS_MODULE,"my_class"))){
            pr_err("Cannot create the struct class\n");
            goto r_class;
        }
        /*Creating device*/
        if(IS_ERR(device_create(dev_class,NULL,dev,NULL,"my_device"))){
            pr_err("Cannot create the Device 1\n");
            goto r_device;
        pr_info("yang's char Device Driver Insert...Done!!!\n");
      return 0;
r_device:
        class_destroy(dev_class);
r_class:
        unregister_chrdev_region(dev,1);
        return -1;
}
/*
** Module exit function
*/
static void __exit my_driver_exit(void)
        device_destroy(dev_class,dev);
        class_destroy(dev_class);
        cdev_del(&my_cdev);
        unregister_chrdev_region(dev, 1);
        pr_info("yang's char Device Driver Remove...Done!!!\n");
}
module_init(my_driver_init);
module_exit(my_driver_exit);
MODULE_LICENSE("GPL");
MODULE_AUTHOR("your name");
MODULE_DESCRIPTION("Simple char device driver (File Operations)");
MODULE_VERSION("1.3");
```

4.2 Build the module driver

A module driver can be built using one of the 3 methods below.

4.2.1 Compiling the module along with the kernel

The source(my_char.c) is located in drivers/char.

4.2.1.1 Optional compile according to Kconfig

In this case, the module built can be included and excluded optionally via menuconfig

1. Edit drivers/char/Kconfig

```
config MY_CHAR
tristate "my_char module driver"
default m
help
"my_char module driver"
```

2. Modify and save menuconfig

make ARCH=arm64 menuconfig

```
Character devices
Arrow keys navigate the menu. <Enter> selects submenus ---> (or empty
Arrow keys navigate the menu. <tnter> setects submenus ...). Highlighted letters are hotkeys. Pressing <Y>
includes <N> excludes <M> modularizes features. Press <Esc><to
includes, <N> excludes, <M> modularizes features. Press <Esc> exit, <?> for Help, </> for Search. Legend: [*] built-in [ ]
            Support for binding and unbinding console drivers \mbox{Unix98} PTY support
               Support multiple instances of devpts
             Legacy (BSD) PTY support
             Non-standard serial port support
             GSM MUX line discipline support (EXPERIMENTAL)
             Trace data sink for MIPI P1149.7 cJTAG standard
          my_char module driver
          /dev/mem virtual device support
          /dev/kmem virtual device support
                       < Exit >
                                        < Help >
                                                       < Save >
```

```
make ARCH=arm64 savedefconfig
cp defconfig ./arch/arm64/configs/s5p6818_bitminer_defconfig
```

3. Modify drivers/char/Makefile

```
obj-$(CONFIG_MY_CHAR) += my_char.o
```

4.2.1.2 Always compile along with the kernel build

In this case, the module is always built along with the kernel.

Modify drivers/char/Makefile

```
obj-m += my_char.o
```

4.2.2 Manual build

1. Create this initial directory





Makefil

my_char.c

2. Write Makefile

```
obj-m += my_char.o
KDIR = /home/youngsik/work/dunfell-bitminer/sources/kernel/kernel-4.4.x
all:
    make -C $(KDIR) M=$(shell pwd) modules ARCH=arm64
clean:
    make -C $(KDIR) M=$(shell pwd) clean
```

3. Build

sudo make

4.3 Loading the module driver

Install the built module driver(.ko) to /home/root as described below.

4.3.1 If the module was built along with the kernel

1. Find where the module is

```
find / -type f -name "my_char.ko"
```

/lib/modules/4.4.83/kernel/drivers/char/my_char.ko

2. Load the module

```
insmod /lib/modules/4.4.83/kernel/drivers/char/my_char.ko
```

4.3.2 If the module was manually built

4.3.2.1 Using the yocto recipe

1. Create a recipe directory in recipes-core(or any recipes- directory)



2. Create a recipe and a files directory and add necessary files in the files directory



3. Write the recipe

```
DESCRIPTION = "Install custom file to /home/root"
LICENSE = "MIT"

LIC_FILES_CHKSUM = "file://${COREBASE}/meta/
COPYING.MIT;md5=3da9cfbcb788c80a0384361b4de20420"

SRC_URI = "file://my_char.ko"

do_install() {
    install -d ${D}/home/root # Create the directory if it doesn't exist install -m 0644 ${WORKDIR}/my_char.c ${D}/home/root/my_char.ko
}

# package management system
FILES_${PN} += "/home/root/my_char.ko"
```

4. Add the recipe to the core recipe

```
IMAGE_INSTALL:append = "\
    custom-files \
```

4.3.2.2 Pushing the module to the target board

```
adb push my_char.ko /home/root

es/kernel/kernel-4.4.x/drivers/char$ adb push my_char.ko /home/root
my_char.ko: 1 file pushed. 9.9 MB/s (246416 bytes in 0.024s)
```

4.3.2.3 Load the module driver in the target board

```
insmod my_char.ko
root@s5p6818:~# insmod my_char.ko
[ 2008.780000] Major = 247 Minor = 0
[ 2008.780000] YANG Device Driver Insert...Done!!!
```

[&]quot;rmmod my_char.ko" will remove the added module.

Reference

https://embetronicx.com/tutorials/linux/device-drivers