Cybersecurity Manual

OpenWrt One

Template Version: v0.39 (26 October 2026) · Document version 0.2 · 2026-11-11

Table of Contents

1 Introduction
- 1.1 Quick reference
- 1.2 Document information
- 1.3 Definitions
- 1.4 References [optional]

2 Product properties and context
- 2.1 Product (P)
- 2.2 Security Properties (SP)
- 2.3 Context (C)

3 How to use the product securely
- 3.1 Intended Purpose and reasonably foreseeable use (IPRFU)
- 3.2 Secure commissioning and setup
- 3.3 Secure use: Conditions of Use (CU) and Circumstances leading to Risk (CR) per product Function (FC)
  - 3.3.1 Function FC01 Route and filter traffic
  - 3.3.2 Function FC02 Provide Wi-Fi access
  - 3.3.3 Function FC03 Administer the router
  - 3.3.4 Function FC04 Recover the firmware
- 3.4 Secure installation of security updates
  - 3.4.1 Function FC05 Install security updates
  - 3.4.2 Disabling of automatic security updates
- 3.5 Secure decommissioning and data removal
- 3.6 Integration guidance for system integrators

4 Contact and links
- 4.1 Manufacturer information
- 4.2 Vulnerabilities and security updates
- 4.3 EU Declaration of Conformity
- 4.4 Software Bill of Materials (SBOM) [optional]

5 CRA essential requirements reference [optional]
- 5.1 CRA Annex I, Part I
- 5.2 CRA Annex I, Part II

1 Introduction

This document provides information & instructions to the user as required by the EU Cyber Resilience Act (CRA, EU regulation (2024/2847)). Its contents are in line with the CRA Annex II requirements. Note: All chapters marked [optional] are not legally required by the CRA.

The intention of this document is to provide the user with all necessary information pertaining to the cybersecurity of the product. Reading and understanding this document is required to ensure the secure setup, use, and decommissioning of the product.

The focus of this document is on explaining how to securely use the product, not on explaining how to use the product in general. It is a cybersecurity manual and does not replace user manuals.

1.1 Quick reference

Product properties and context	2.1 Product (P): OpenWrt One · OpenWrt One (FCC ID 2BLLI-HW24) running OpenWrt 25.12.6 2.2 Security Properties (SP): SP01 Write-protected recovery system, SP02 Security fixes backported to supported releases, SP03 Compiler hardening by default, SP04 Open source with reproducibility checks
How to use the product securely	3.2 Secure commissioning and setup 3.3 Secure use: Conditions of Use (CU) and Circumstances leading to Risk (CR) per product Function (FC): FC01 Route and filter traffic, FC02 Provide Wi-Fi access, FC03 Administer the router, FC04 Recover the firmware
Contact and links	4.1 Manufacturer information: Banana Pi (hardware), with the OpenWrt project (firmware). CRA role allocation is for the working group. · contact@openwrt.org (OpenWrt project) · openwrt.org/toh/openwrt/one

1.2 Document information

Version	0.2
Date	2026-11-11
Author	Cairn Viktor for the Value Chain Risk Institute (illustrative example, not the manufacturer's manual)

1.3 Definitions

For more information on each of these concepts, please refer to the Cyber Manual GUIDANCE.

ID	Concept	Description
P	Product	The product under consideration.

PC	Product component	The components the product consists of.
PI	Physical interfaces	Physical interfaces implemented in the product.
PP	Product protocol / service	Logical interfaces (protocols and services) implemented in the product.
C	Context	Reflects the manufacturer's assumptions on the operational environment of the product. Contains all elements (technical components, persons, zones) that do not belong to the product but are needed to describe the product functions.
CC	Context component	The components (systems, networks) the context consists of.
CP	Context persons	Persons that interact with the product.
CZ	Context zones	Zones that categorize context components or persons for example based on physical location, organizational structure, or trust boundaries.
FC	Function	Behavior or capability that a product must perform to satisfy stakeholder needs. The core and ancillary functionality of the product.
SP	Security Property	Security characteristics implemented in the product. The manufacturer is responsible for implementing the Security Properties.
CU	Conditions of Use	Security characteristics implemented in the product context. The user is responsible for meeting the conditions of use to ensure secure use of the product.
IPRFU	Intended purpose and reasonably foreseeable use	The combination of the context, product functions, and the conditions of use: A product is used according to its intended purpose and reasonably foreseeable use when it is used - In the defined context - for the defined functions - adhering to the defined conditions of use.
CR	Circumstances leading to significant cybersecurity risk	Violation of a condition of use, reasonably foreseeable misuse or other circumstances the user can influence that may lead to unwanted damage scenarios.

1.4 References [optional]

- openwrt.org/toh/openwrt/one (last modified 2026-10-23)
- openwrt.org/docs/guide-developer/security (last modified 2026-10-22)
- sfconservancy.org/activities/openwrt-one.html
- one.openwrt.org/hardware/ (schematics and datasheets)

2 Product properties and context


2.1 Product (P)

2.1.1 Product identification

Product name	OpenWrt One
Product type / model / version	OpenWrt One (FCC ID 2BLLI-HW24) running OpenWrt 25.12.6
Product identification [optional]	NOT FOUND in the public documentation read on 8 November 2026.
Additional information [optional]	Illustrative example for the Cyber Manual Movement, built by the Value Chain Risk Institute with the CRA Manual Builder from public documentation read on 8 November 2026. It is NOT the manufacturer's manual and makes no claim about CRA conformity. Gaps are marked NOT FOUND rather than filled in. Hardware manufactured by Banana Pi in collaboration with the OpenWrt project; the firmware is the OpenWrt project's. Which party is the CRA manufacturer is left to the working group. The OpenWrt project is not a legal person, so it is not listed as an open-source software steward (reply on the openwrt-adm list, 10 November 2026). Flash sizes conflict between sources: the OpenWrt wiki (edited 23 Oct 2026) says 256 MiB NAND and 16 MiB NOR; the Software Freedom Conservancy page says 128 MiB NAND and 4 MiB NOR. This example uses the wiki figures. Version 0.2, 11 November 2026: corrected and completed from a reply on the openwrt-adm mailing list (10 November 2026). The fact sheet beside this file quotes it.

2.1.2 Product diagram [optional]

2.1.2 Product diagram

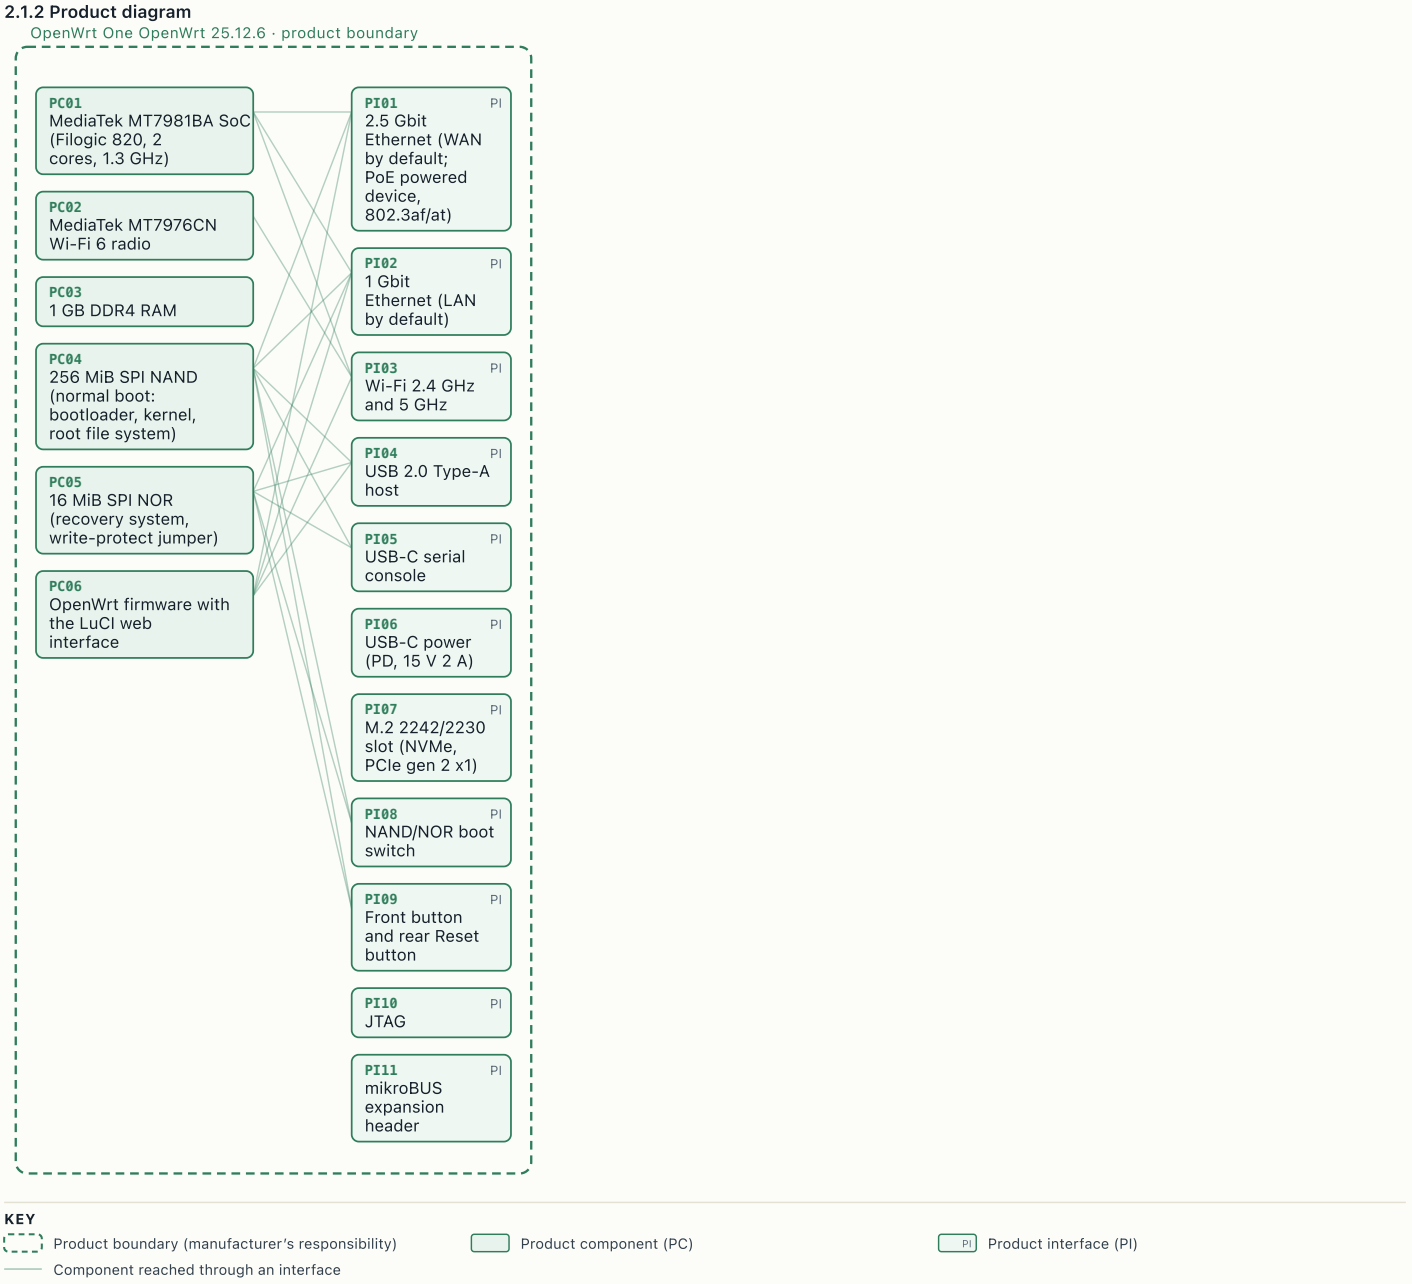

2.1.2 Product diagram. The product's main components and the interfaces through which it is reached. Everything inside the dashed line is the manufacturer's responsibility.

Drawn from the same lists as the tables · Cyber Manual template v0.39 structure · Value Chain Risk Institute · Method: the Derivation Rule, Marpet & Viktor 2026 · CC BY 4.0

2.1.3 Product components (PC) list [optional]

ID	Title & Description
PC01	MediaTek MT7981BA SoC (Filogic 820, 2 cores, 1.3 GHz)
PC02	MediaTek MT7976CN Wi-Fi 6 radio
PC03	1 GB DDR4 RAM
PC04	256 MiB SPI NAND (normal boot: bootloader, kernel, root file system)
PC05	16 MiB SPI NOR (recovery system, write-protect jumper)

PC06	OpenWrt firmware with the LuCI web interface

2.1.4 Product interfaces [optional]

PHYSICAL INTERFACES

ID	Title / Description
PI01	2.5 Gbit Ethernet (WAN by default; PoE powered device, 802.3af/at)
PI02	1 Gbit Ethernet (LAN by default)
PI03	Wi-Fi 2.4 GHz and 5 GHz
PI04	USB 2.0 Type-A host
PI05	USB-C serial console
PI06	USB-C power (PD, 15 V 2 A)
PI07	M.2 2242/2230 slot (NVMe, PCIe gen 2 x1)
PI08	NAND/NOR boot switch
PI09	Front button and rear Reset button
PI10	JTAG
PI11	mikroBUS expansion header


PROTOCOLS AND SERVICES

ID	Protocol / Service / URL	Physical interface	Port	Function	Enabled by default
PP01	HTTP / TCP (LuCI web interface)	PI02 1 Gbit Ethernet (LAN)	80	FC03 Administer the router	yes
PP02	SSH / TCP	PI02 1 Gbit Ethernet (LAN)	22	FC03 Administer the router	yes
PP03	Wi-Fi (WPA2 or WPA3)	PI03 Wi-Fi	/	FC02 Provide Wi-Fi access	after configuration
PP04	Serial console, 115200 8N1	PI05 USB-C serial console	/	FC04 Recover the firmware	yes
PP05	USB mass storage (FAT32) read by the bootloader	PI04 USB 2.0 Type-A	/	FC04 Recover the firmware; FC05 Install security updates	on button press at power-on
PP06	TFTP client (recovery, router at 192.168.11.11)	PI02 1 Gbit Ethernet (LAN)	69	FC04 Recover the firmware	boot menu only

PP07	Request to the Attended Sysupgrade server	PI01 2.5 Gbit Ethernet (WAN)	/	FC05 Install security updates	user-initiated

2.2 Security Properties (SP)

2.2.1 Security property diagram [optional]

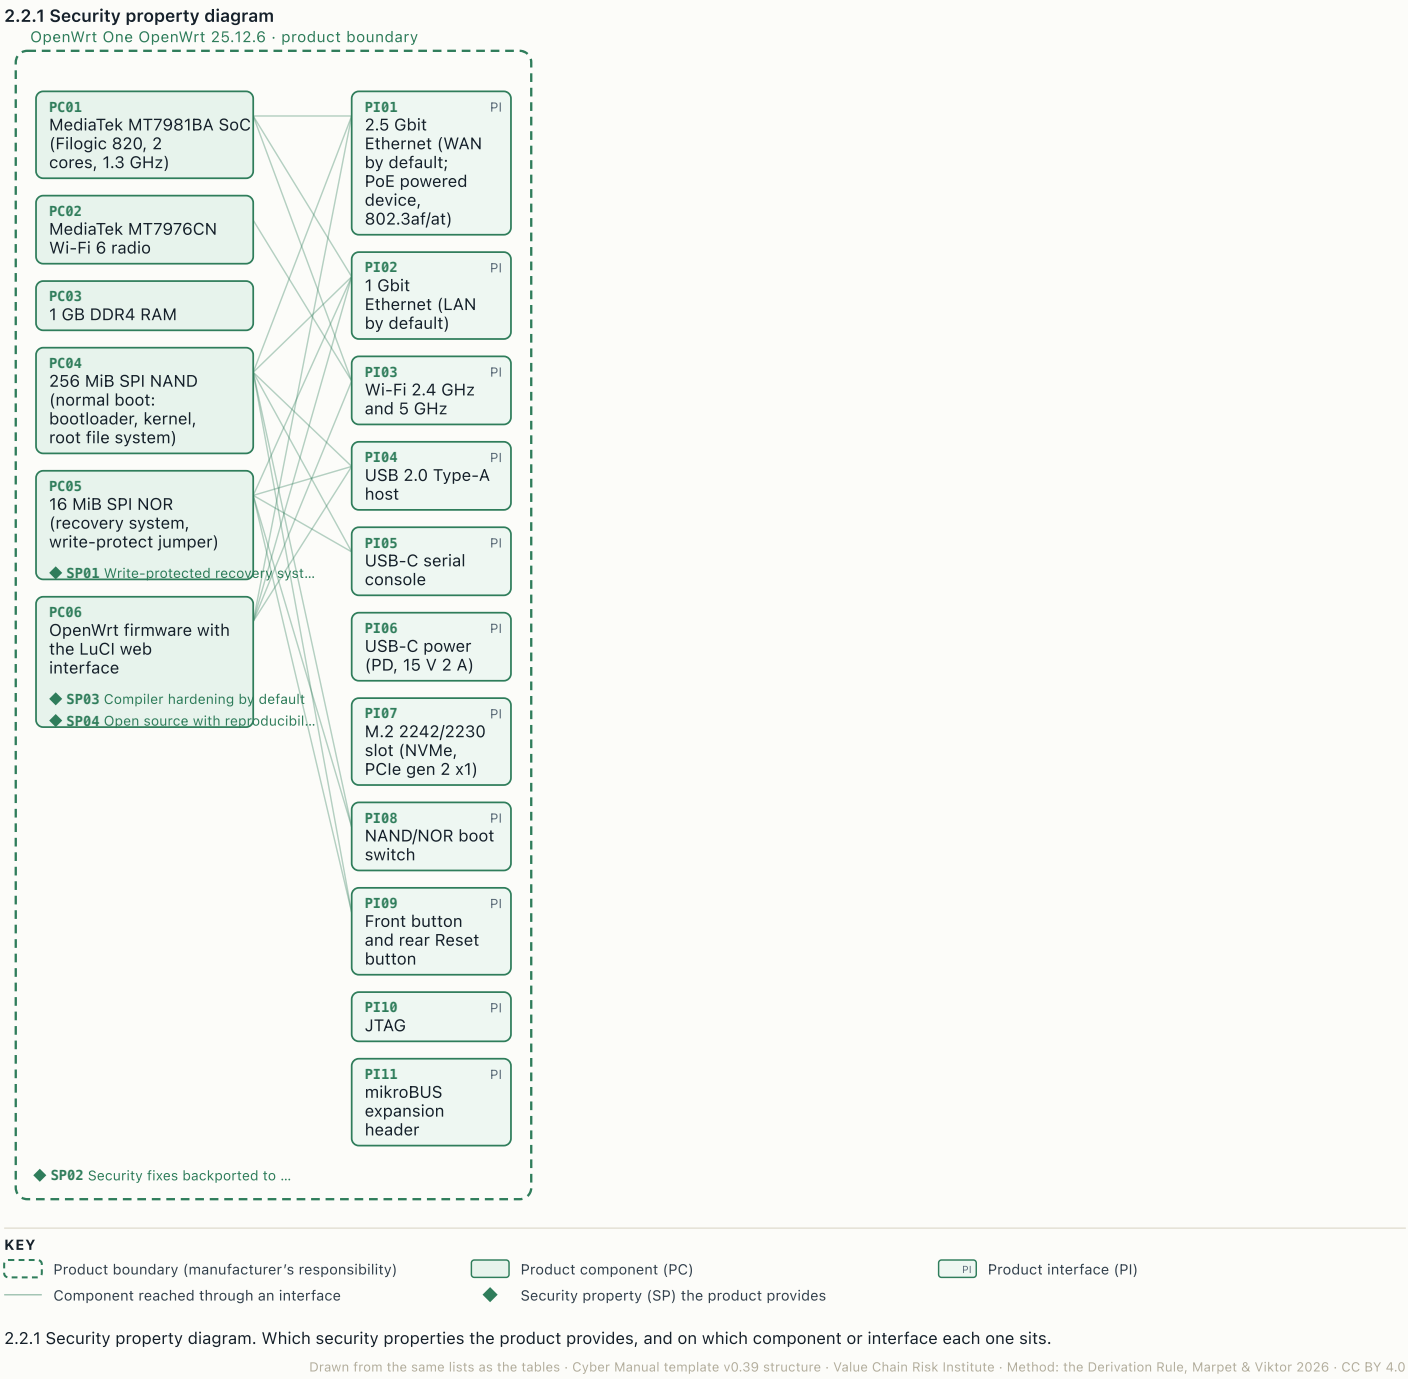

2.2.1 Security property diagram. Which security properties the product provides, and on which component or interface each one sits.

Drawn from the same lists as the tables · Cyber Manual template v0.39 structure · Value Chain Risk Institute · Method: the Derivation Rule, Marpet & Viktor 2026 · CC BY 4.0


2.2.2 Security property list

ID	Affected component(s)	Title & Description

SP01	PC05 SPI NOR	**Write-protected recovery system** `2f` `2h` `2k` A stripped-down recovery system lives in SPI NOR, protected by the NOR WP jumper in its factory default position. With the boot switch on NOR, it re-flashes the whole NAND from a USB drive, even if the NAND bootloader or Trusted Firmware-A is broken.
SP02	Product: OpenWrt One	**Security fixes backported to supported releases** `2c` The OpenWrt project backports security fixes for its core components to supported releases. Package fixes reach users in about two days through the build bots; kernel and kernel-module fixes need a new minor release.
SP03	PC06 OpenWrt firmware	**Compiler hardening by default** `2j` `2k` Packages are built with format-security checks, stack protector (regular), FORTIFY_SOURCE=1, full RELRO and PIE for network-exposed binaries; the kernel has seccomp enabled. SELinux is not enabled.
SP04	PC06 OpenWrt firmware	**Open source with reproducibility checks** `2f` The firmware source is public and copyleft-compliant from the start. The reproducible-builds project checks that OpenWrt master builds reproducibly.

2.3 Context (C)

2.3.1 Context diagram [optional]

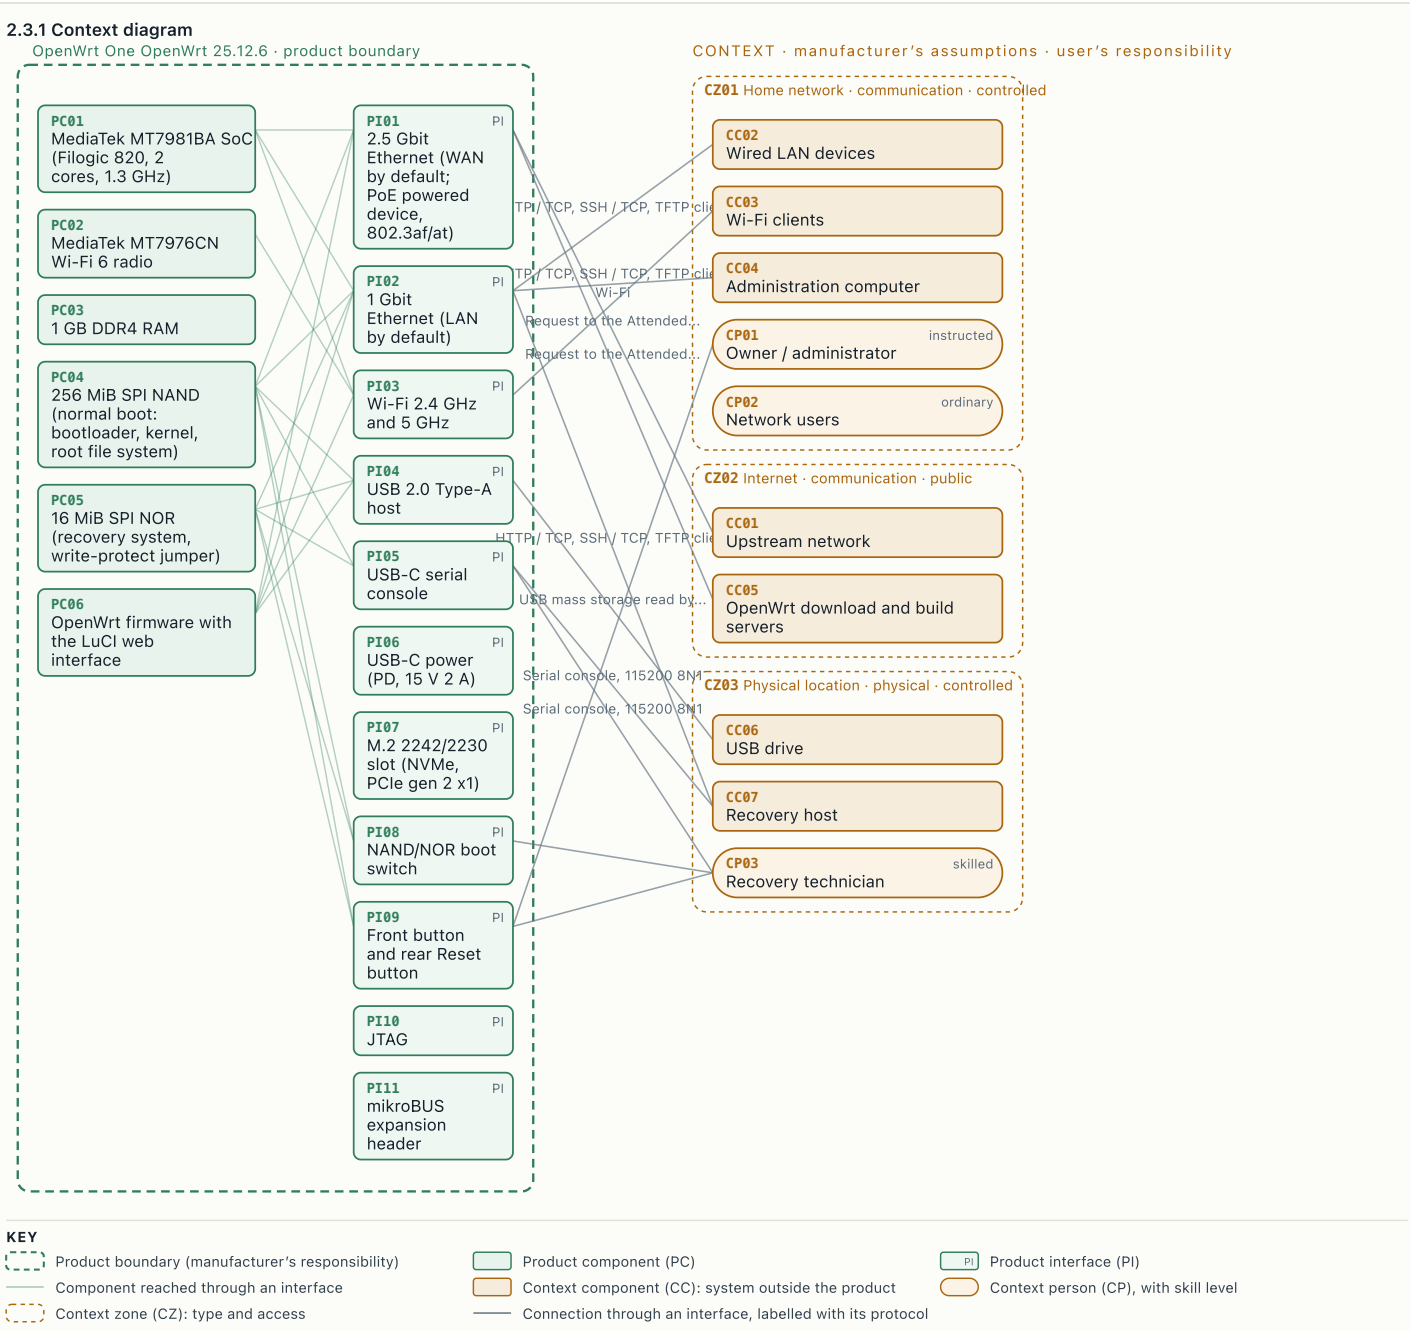

2.3.1 Context diagram. What the product relies on outside its boundary, who works with it, and in which zones. Everything outside the dashed line is an assumption the user is responsible for making true.

Drawn from the same lists as the tables · Cyber Manual template v0.39 structure · Value Chain Risk Institute · Method: the Derivation Rule, Marpet & Viktor 2026 · CC BY 4.0

2.3.2 Context component (CC) list

ID	Title & Description
CC01	**Upstream network** The modem or ISP network connected to the 2.5 Gbit WAN port.
CC02	**Wired LAN devices** Computers and devices connected to the 1 Gbit LAN port or a switch behind it.
CC03	**Wi-Fi clients** Devices connecting over Wi-Fi.

CC04	**Administration computer** A computer with a browser (LuCI) or SSH client used to configure the router.
CC05	**OpenWrt download and build servers** Release download pages, the Firmware Selector and the Attended Sysupgrade server.
CC06	**USB drive** A FAT32 drive holding a sysupgrade or recovery image.
CC07	**Recovery host** A computer with a serial terminal and, for NOR re-flashing, a TFTP server at 192.168.11.23.

2.3.3 Context person (CP) list [optional]

ID	Title & Description	Skill (ordinary, instructed, skilled)
CP01	**Owner / administrator** The person who sets up and maintains the router.	instructed
CP02	**Network users** People whose devices use the network.	ordinary
CP03	**Recovery technician** A person re-flashing NAND or NOR using the recovery procedures.	skilled

2.3.4 Context zone (CZ) list [optional]

ID	Title & Description	Type (physical, communication)	Access (public, limited, controlled)
CZ01	**Home network** LAN and Wi-Fi under the owner's control	communication	controlled
CZ02	**Internet** Everything on the WAN side	communication	public
CZ03	**Physical location** The room where the router is installed	physical	controlled

3 How to use the product securely

This chapter describes the secure use of the product across its lifecycle.

3.1 Intended Purpose and reasonably foreseeable use (IPRFU)

Generally, secure use of the product means using it in line with its intended purpose and reasonably foreseeable use (IPRFU).

The intended purpose and reasonably foreseeable use of the product are defined as product use

- in the context (C) defined in chapter 2.3,
- for the functions (FC) defined in chapters 3.3 and 3.4,
- while adhering to the conditions of use (CU) defined in chapters 3.3 and 3.4.

3.2 Secure commissioning and setup

Secure default configurations are listed in chapter 2.2 Security Properties (SP). The information which protocols are enabled or disabled by default is provided in the interfaces list in chapter 2.1 Product (P).

Additional remarks for secure commissioning and setup:

- Set the NAND/NOR switch to NAND (up).
- Connect a computer to the 1 Gbit port (LAN by default) and power the device by USB-C or PoE on the 2.5 Gbit port.
- Open http://192.168.1.1 and log in as root with an empty password, then set a strong root password immediately.
- Set the Wi-Fi country code before enabling Wi-Fi.
- Check that a supported release is installed and upgrade if not.

3.3 Secure use: Conditions of Use (CU) and Circumstances leading to Risk (CR) per product Function (FC)

3.3.1 Function FC01 Route and filter traffic

FUNCTION (FC)

ID	FC01
Title	Route and filter traffic
Description	Forward traffic between the WAN port, the LAN port and Wi-Fi.
Reasonably foreseeable use [optional]	Use with the LAN and WAN ports swapped; one user reported this out of the box.
Core / ancillary functionality	core functionality

SECURE USE DIAGRAM [OPTIONAL]

CONDITIONS OF USE (CU)

ID	Affects (component CC / person CP / zone CZ)	Title & Description
CU02	CC01 Upstream network	**Confirm the WAN and LAN ports** `2d` `2j` Connect the upstream network to the 2.5 Gbit port and check in LuCI that it is the WAN interface before going online.

CU03	Product boundary OpenWrt One	**Run a supported release** 2c Use a release with Supported or Security Maintenance status (25.12 as of 8 November 2026) and upgrade before it reaches End of Life.

CIRCUMSTANCES POTENTIALLY LEADING TO SIGNIFICANT CYBERSECURITY RISK (CR)

ID	Title and Description (reasonably foreseeable misuse or circumstance leading to risk)	Violated Condition of Use (CU)	Potential risk
CR02	**Ports swapped** The upstream network is plugged into the LAN port.	CU02 Confirm the WAN and LAN ports	The administration interfaces face the upstream network.
CR03	**End-of-life release** The router stays on a release past End of Life (24.10 reached it in September 2026).	CU03 Run a supported release	New vulnerabilities, even severe ones, are no longer fixed.

3.3.2 Function FC02 Provide Wi-Fi access

FUNCTION (FC)

ID	FC02
Title	Provide Wi-Fi access
Description	Dual-band Wi-Fi 6 access point.
Reasonably foreseeable use [optional]	Operation without setting the country code.
Core / ancillary functionality	core functionality

SECURE USE DIAGRAM [OPTIONAL]

CONDITIONS OF USE (CU)

ID	Affects (component CC / person CP / zone CZ)	Title & Description
CU04	CC03 Wi-Fi clients	**Set the country code and use WPA2 or WPA3** 2d 2e Set the Wi-Fi country code first, then protect every SSID with WPA2 or WPA3.

CIRCUMSTANCES POTENTIALLY LEADING TO SIGNIFICANT CYBERSECURITY RISK (CR)

ID	Title and Description (reasonably foreseeable misuse or circumstance leading to risk)	Violated Condition of Use (CU)	Potential risk

CR04	**Open or misconfigured Wi-Fi** An SSID runs without WPA2 or WPA3, or without the correct country code.	CU04 Set the country code and use WPA2 or WPA3	Strangers can join the network; operation may break radio rules.

3.3.3 Function FC03 Administer the router

FUNCTION (FC)

ID	FC03
Title	Administer the router
Description	Configuration through LuCI at http://192.168.1.1 or SSH as root.
Reasonably foreseeable use [optional]	Administration from outside the home network.
Core / ancillary functionality	ancillary functionality

SECURE USE DIAGRAM [OPTIONAL]

CONDITIONS OF USE (CU)

ID	Affects (component CC / person CP / zone CZ)	Title & Description
CU01	CP01 Owner / administrator	**Set a strong root password before use** `2b` `2d` Set it in LuCI (System > Administration > Router Password) or with passwd, before connecting other devices or enabling Wi-Fi.
CU05	CZ02 Internet	**No administration from the internet** `2d` `2j` Keep LuCI and SSH reachable from the home network only.
CU06	CZ01 Home network	**Limit password guessing** `2d` LuCI has no built-in brute-force protection. Restrict who can reach it, or install a tool such as fail2ban.

CIRCUMSTANCES POTENTIALLY LEADING TO SIGNIFICANT CYBERSECURITY RISK (CR)

ID	Title and Description (reasonably foreseeable misuse or circumstance leading to risk)	Violated Condition of Use (CU)	Potential risk
CR01	**No root password** The owner never sets a root password.	CU01 Set a strong root password before use	Anyone on the LAN or Wi-Fi can log in as root through LuCI or SSH and take full control.

CR05	**Administration exposed to the internet** LuCI or SSH is opened to the WAN side.	CU05 No administration from the internet	Attackers on the internet can attempt to log in or exploit the interface.
CR06	**Password guessing** LuCI is reachable by many devices and nothing limits login attempts.	CU06 Limit password guessing	A weak password can be guessed.

3.3.4 Function FC04 Recover the firmware

FUNCTION (FC)

ID	FC04
Title	Recover the firmware
Description	NAND initramfs recovery (front button), NOR full recovery (boot switch on NOR, USB drive), and NOR re-flashing over UART and TFTP.
Reasonably foreseeable use [optional]	None beyond the function description.
Core / ancillary functionality	ancillary functionality

SECURE USE DIAGRAM [OPTIONAL]

CONDITIONS OF USE (CU)

ID	Affects (component CC / person CP / zone CZ)	Title & Description
CU07	CZ03 Physical location	**Control physical access** `2d` `2f` The serial console has no password prompt unless one is enabled, and the buttons and boot switch allow re-flashing. Keep the device where only trusted people can reach it.
CU09	PC05 SPI NOR	**Keep the NOR write protection** `2f` `2k` Leave the NOR WP jumper in its factory position; when re-flashing NOR, unlock it from the boot menu, then lock it again (menu item 7) and remove the jumper.

CIRCUMSTANCES POTENTIALLY LEADING TO SIGNIFICANT CYBERSECURITY RISK (CR)

ID	Title and Description (reasonably foreseeable misuse or circumstance leading to risk)	Violated Condition of Use (CU)	Potential risk
CR07	**Unattended physical access** Untrusted people can reach the device.	CU07 Control physical access	Console access or re-flashing gives full control.

CR09	**NOR left unlocked** NOR is not locked again after re-flashing.	CU09 Keep the NOR write protection	The recovery system can be overwritten, so the failsafe no longer protects the device.

3.4 Secure installation of security updates

Updates are user-initiated: LuCI System > Attended Sysupgrade, owut upgrade on the command line, the web Firmware Selector, or a USB drive read by the bootloader (hold Reset at power-on). Package fixes can arrive in about two days; kernel fixes need a new minor release image.

3.4.1 Function FC05 Install security updates

FUNCTION (FC)

ID	FC05
Title	Install security updates
Description	User-initiated upgrade through LuCI Attended Sysupgrade, owut on the command line, the web Firmware Selector, or a USB drive read by the bootloader.
Reasonably foreseeable use [optional]	Installing SNAPSHOT builds instead of a release.
Core / ancillary functionality	ancillary functionality

SECURE USE DIAGRAM [OPTIONAL]

CONDITIONS OF USE (CU)

ID	Affects (component CC / person CP / zone CZ)	Title & Description
CU03	Product boundary OpenWrt One	**Run a supported release** `2c` Use a release with Supported or Security Maintenance status (25.12 as of 8 November 2026) and upgrade before it reaches End of Life.
CU08	CC05 OpenWrt download and build servers	**Use only official images** `2c` `2f` Obtain images only from the OpenWrt download pages, the Firmware Selector or Attended Sysupgrade.

CIRCUMSTANCES POTENTIALLY LEADING TO SIGNIFICANT CYBERSECURITY RISK (CR)

ID	Title and Description (reasonably foreseeable misuse or circumstance leading to risk)	Violated Condition of Use (CU)	Potential risk
CR03	**End-of-life release** The router stays on a release past End of Life	CU03 Run a supported release	New vulnerabilities, even severe ones, are no longer fixed.

	(24.10 reached it in September 2026).		
CR08	**Image from an unofficial source** A firmware image is taken from a forum, a mirror or a seller.	CU08 Use only official images	Malicious firmware is installed.

3.4.2 Disabling of automatic security updates

The product does not install updates automatically.

Please note that CRA conformity is only assured if the necessary security updates have been installed.

3.5 Secure decommissioning and data removal

Before the product is decommissioned:

- Use NOR recovery to factory re-flash the entire NAND, which removes the configuration, Wi-Fi keys and passwords.
- Remove any USB drive or NVMe SSD; they keep their data.

3.6 Integration guidance for system integrators

Guide to relevant information for system integrators:

Information	Link
Product components and interfaces including used protocols and ports	Chapter 2.1 Product (P)
Product security properties including references to CRA Annex I requirements	Chapter 2.2 Security Properties (SP)
Typical product context including instructions on integration of the product into this context	Chapter 2.3 Context (C)
Product functions including reasonably foreseeable use	Chapter 3.3 Secure use: Conditions of Use (CU) and Circumstances leading to Risk (CR) per product Function (FC)
Intended purpose and reasonably foreseeable use	Chapter 3.1 Intended Purpose and reasonably foreseeable use (IPRFU)
Required security measures (conditions of use) to comply with Annex I requirements when using / integrating the product conditions of use for all product functions and lifecycle phases	Chapter 3 How to use the product securely Chapter 5 Essential requirements reference [optional]
Circumstances leading to risk Note: This is not a full cybersecurity risk assessment. It is recommended to include	Chapter 3.3 Secure use: Conditions of Use (CU) and

the full cybersecurity risk assessments for this product in the cybersecurity risk assessment for the integrated product. The full risk assessment is shared upon request using the contact details provided in chapter 4.	Circumstances leading to Risk (CR) per product Function (FC)
Applied harmonized standards as part of EU Declaration of Conformity	Chapter 4.3 EU Declaration of Conformity
Software Bill of Materials (SBOM)	Chapter 4.4 Software Bill of Materials (SBOM) [optional]
Vulnerability handling and advisories	Chapter 4.2.3 Access to security advisories, Chapter 5 Essential requirements reference [optional] (Annex I, Part 2)
Reporting vulnerabilities	Chapter 4.2.1 Reporting vulnerabilities to the manufacturer

4 Contact and links

4.1 Manufacturer information

Manufacturer	Banana Pi (hardware), with the OpenWrt project (firmware). CRA role allocation is for the working group.
Postal address	NOT FOUND in the public documentation read on 8 November 2026.
E-Mail address	contact@openwrt.org (OpenWrt project)
Website	openwrt.org/toh/openwrt/one

4.2 Vulnerabilities and security updates

4.2.1 Reporting vulnerabilities to the manufacturer

Point of contact	contact@openwrt.org (confidential); fallback openwrt-adm@lists.openwrt.org without exploit details
Coordinated Vulnerability Disclosure Policy	openwrt.org/docs/guide-developer/security

4.2.2 Access to security updates

Access to security updates	firmware-selector.openwrt.org

End of support period	Per OpenWrt release, not per device: 25.12 is Supported with end of life to be announced. A release reaches End of Life one year after its initial release or six months after the next major release, whichever is later. No hardware support period is published: the release policy covers OpenWrt software releases, and the project does not declare one for hardware it does not sell (reply on the openwrt-adm list, 10 November 2026).

4.2.3 Access to security advisories

Access to security advisories	openwrt.org/docs/guide-developer/security

4.3 EU Declaration of Conformity

EU Declaration of Conformity	NOT FOUND: no EU Declaration of Conformity located on 8 November 2026.

4.4 Software Bill of Materials (SBOM) [optional]

Access to SBOM	NOT FOUND in the public documentation read on 8 November 2026.
SBOM formats	NOT FOUND

5 CRA essential requirements reference [optional]

5.1 CRA Annex I, Part I

> Generated crosswalk: each essential requirement lists the Security Properties (SPxx, manufacturer) and Conditions of Use (CUxx, user) that satisfy it, from the Annex I references you attached.

Requirement	CRA Annex I Part I reference	Security Properties (SPxx) and Conditions of Use (CUxx) Security Properties are security requirements implemented in the product under responsibility of the manufacturer. Conditions of Use are security requirements outside the product boundary under responsibility of the user.
Secure by default configuration	`(2b)`	NOT MET BY DEFAULT: after a fresh installation or upgrade no root password is set (OpenWrt security page). The owner must set one before use; see chapter 3.2. **CU01**: Set a strong root password before use
Secure update mechanism	`(2c)`	See chapter 3.4 Secure installation of security updates. **SP02**: Security fixes backported to supported releases **CU03**: Run a supported release **CU08**: Use only official images

Protection from unauthorized access	`(2d)`	**CU01**: Set a strong root password before use **CU02**: Confirm the WAN and LAN ports **CU04**: Set the country code and use WPA2 or WPA3 **CU05**: No administration from the internet **CU06**: Limit password guessing **CU07**: Control physical access
Confidentiality protection	`(2e)`	**CU04**: Set the country code and use WPA2 or WPA3
Integrity protection	`(2f)`	**SP01**: Write-protected recovery system **SP04**: Open source with reproducibility checks **CU07**: Control physical access **CU08**: Use only official images **CU09**: Keep the NOR write protection
Data minimisation	`(2g)`	The product only processes the following data: Network traffic routed between WAN, LAN and Wi-Fi Configuration, including Wi-Fi keys and the root password
Availability protection	`(2h)`	**SP01**: Write-protected recovery system
Minimisation of negative impact on other services	`(2i)`	*SPxx: / CUxx:*
Attack surface limitation	`(2j)`	**SP03**: Compiler hardening by default **CU02**: Confirm the WAN and LAN ports **CU05**: No administration from the internet
Impact reduction	`(2k)`	**SP01**: Write-protected recovery system **SP03**: Compiler hardening by default **CU09**: Keep the NOR write protection
Recording and monitoring	`(2l)`	NOT FOUND in the public documentation read on 8 November 2026.
Secure data removal / transfer	`(2m)`	See chapter 3.5 Secure decommissioning and data removal

5.2 CRA Annex I, Part II

Requirement	CRA Annex I Part II reference	Information
Vulnerability identification	`(1)`	This product is regularly tested for vulnerabilities by the manufacturer.
Vulnerability documentation /	`(1)`	NOT FOUND in the public documentation read on 8 November 2026.

SBOM		
Vulnerability remediation	(2)	Security updates for this product are provided as described in chapter 3.4 Secure installation of security updates and chapter 4.2.2 Access to security updates.
Regular tests	(3)	The OpenWrt project runs uscan weekly (package versions against upstream, and CVEs by CPE) and Coverity Scan weekly on OpenWrt-developed components.
Public vulnerability disclosure	(4)	Advisories are published at openwrt.org/docs/guide-developer/security. They cover OpenWrt-maintained components only, not upstream components such as the Linux kernel or OpenSSL.
Coordinated vulnerability disclosure	(5)	Report confidentially to contact@openwrt.org. The mailbox is not always monitored; if there is no answer, send a brief note without exploit details to openwrt-adm@lists.openwrt.org.
Vulnerability contact	(6)	contact@openwrt.org
Secure update distribution	(7)	See chapter 3.4 Secure installation of security updates.
Security update dissemination	(8)	See chapter 3.4 Secure installation of security updates.

Based on the Cyber Manual Movement's Cybersecurity Manual template v0.39 (26 October 2026), guidance v0.33 and boilerplate v0.23. Generated with the VCRI Cyber Manual Builder, a free populator by the Value Chain Risk Institute. Data stays in your browser. CC BY 4.0 · valuechainrisk.org