

## Why Autoware. Al show activity only CPU0 not show another cores? #3863


( Unanswered )

fiwz789 asked this question in Q&A



fiwz789 on Sep 26, 2023

 I actually use it (not demo) in the v1.14.0 source running on Ubuntu 18.04 My PC have Intel core i9 Gen11th with 16 cores. In system monitor shows activity on all cores but the CPU bars status on runtime manager shows only activity on CPU0 (CPU1 - CPU15 not show %) follow my picture.

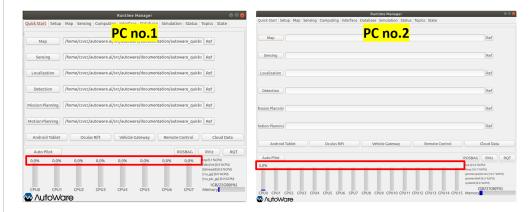


PC no.1 is my old PC it can use normally, PC no.2 is my new PC it's install ROS, Autoware.Al follow offical website but have this problem.

• I want to know what that mean, I will fix this problem if it effect to my PC's performance.

What someting is missing or my PC not support. Please give me answer or some advice.

Thank you very much, Best regards.



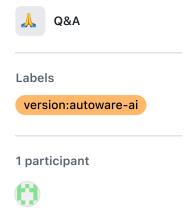

Category

## 0 comments