

16. Camshaft Sprocket

A: REMOVAL

1. EXCEPT FOR STi AND AUSTRALIA MODEL

1) Remove the V-belt. <Ref. to ME(H4DOTC)-54, REMOVAL, V-belt.>

2) Remove the crankshaft pulley. <Ref. to ME(H4DOTC)-56, REMOVAL, Crankshaft Pulley.>

3) Remove the timing belt cover. <Ref. to ME(H4DOTC)-57, REMOVAL, Timing Belt Cover.>


4) Remove the timing belt assembly. <Ref. to ME(H4DOTC)-58, REMOVAL, Timing Belt Assembly.>

5) Remove the camshaft position sensor. <Ref. to FU(H4DOTC)-30, REMOVAL, Camshaft Position Sensor.>

6) Remove the camshaft sprockets. To lock the camshaft, use ST.

ST 18231AA010 CAMSHAFT SPROCKET WRENCH (INTAKE LH)

ST 499207400 CAMSHAFT SPROCKET WRENCH (Except for INTAKE LH)

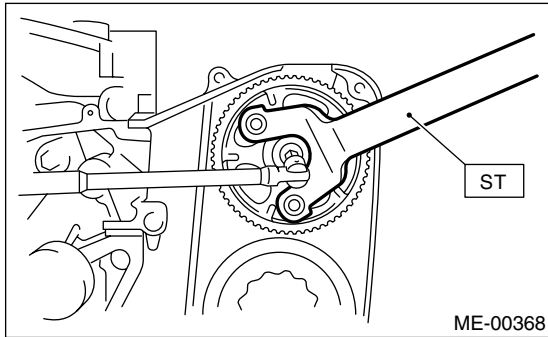

2. STi AND AUSTRALIA MODEL

1) Remove the V-belt. <Ref. to ME(H4DOTC)-54, REMOVAL, V-belt.>

2) Remove the crankshaft pulley. <Ref. to ME(H4DOTC)-56, REMOVAL, Crankshaft Pulley.>


3) Remove the timing belt cover. <Ref. to ME(H4DOTC)-57, REMOVAL, Timing Belt Cover.>

4) Remove the timing belt assembly. <Ref. to ME(H4DOTC)-58, REMOVAL, Timing Belt Assembly.>


5) Remove the camshaft position sensor. <Ref. to FU(H4DOTC)-30, REMOVAL, Camshaft Position Sensor.>

6) Remove the camshaft sprockets. To lock the camshaft, use ST.

ST 499207400 CAMSHAFT SPROCKET WRENCH

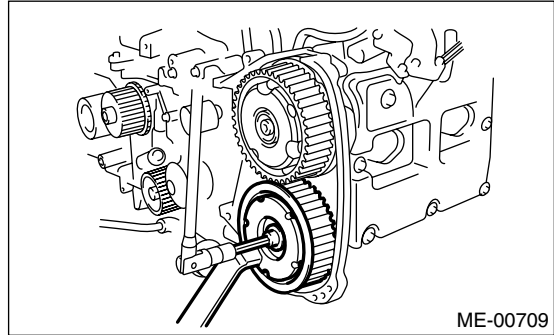

ST 499977500 CAMSHAFT SPROCKET WRENCH

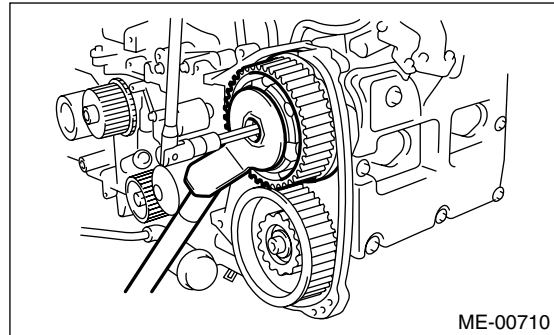

B: INSTALLATION

1. EXCEPT FOR STi AND AUSTRALIA MODEL

1) Install the camshaft sprocket. To lock the camshaft, use ST.


ST 18231AA010 CAMSHAFT SPROCKET WRENCH (INTAKE LH)
ST 499207400 CAMSHAFT SPROCKET WRENCH (Except for INTAKE LH)

Tightening torque:

98 N·m (10 kgf-m, 72.4 ft-lb)

NOTE:

Do not confuse the camshaft sprockets (RH) and (LH) intake side during installation. The camshaft sprocket (LH) is identified by a projection used to monitor camshaft position sensor.

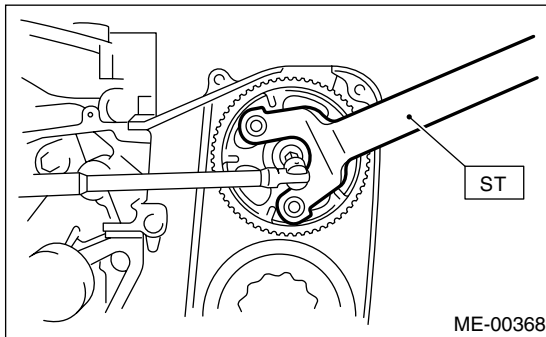

2) Install the camshaft position sensor. <Ref. to FU(H4DOTC)-30, INSTALLATION, Camshaft Position Sensor.>

3) Install the timing belt assembly. <Ref. to ME(H4DOTC)-60, INSTALLATION, Timing Belt Assembly.>

4) Install the timing belt cover. <Ref. to ME(H4DOTC)-57, INSTALLATION, Timing Belt Cover.>

5) Install the crankshaft pulley. <Ref. to ME(H4DOTC)-56, INSTALLATION, Crankshaft Pulley.>

6) Install the V-belt. <Ref. to ME(H4DOTC)-54, INSTALLATION, V-belt.>

2. STi AND AUSTRALIA MODEL

1) Install the camshaft sprocket No. 1 and No. 2. To lock the camshaft, use ST.


ST 499207400 CAMSHAFT SPROCKET WRENCH

Tightening torque:


98 N·m (10 kgf-m, 72.4 ft-lb)

NOTE:

Do not confuse camshaft sprockets (RH) and (LH) during installation. The camshaft sprocket No. 2 is identified by a projection used to monitor camshaft position sensor.

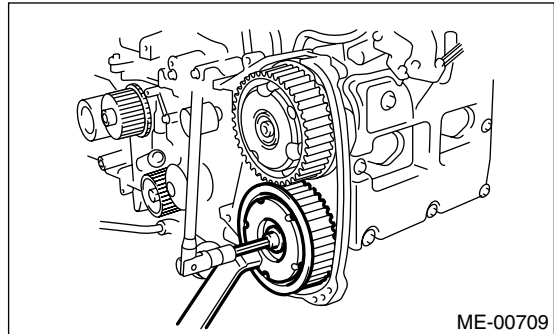

ST 499977500 CAMSHAFT SPROCKET WRENCH

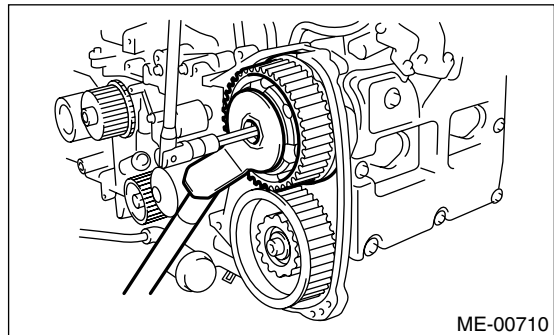

2) Install the camshaft position sensor. <Ref. to FU(H4DOTC)-30, INSTALLATION, Camshaft Position Sensor.>

3) Install the timing belt assembly. <Ref. to ME(H4DOTC)-60, INSTALLATION, Timing Belt Assembly.>

4) Install the timing belt cover. <Ref. to ME(H4DOTC)-57, INSTALLATION, Timing Belt Cover.>

5) Install the crankshaft pulley. <Ref. to ME(H4DOTC)-56, INSTALLATION, Crankshaft Pulley.>

6) Install the V-belt. <Ref. to ME(H4DOTC)-54, INSTALLATION, V-belt.>

C: INSPECTION

1) Check the sprocket teeth for abnormal wear and scratches.

2) Make sure there is no free play between sprocket and key.

3) Check the crankshaft sprocket notch used for sensor for damage and contamination of foreign matter.