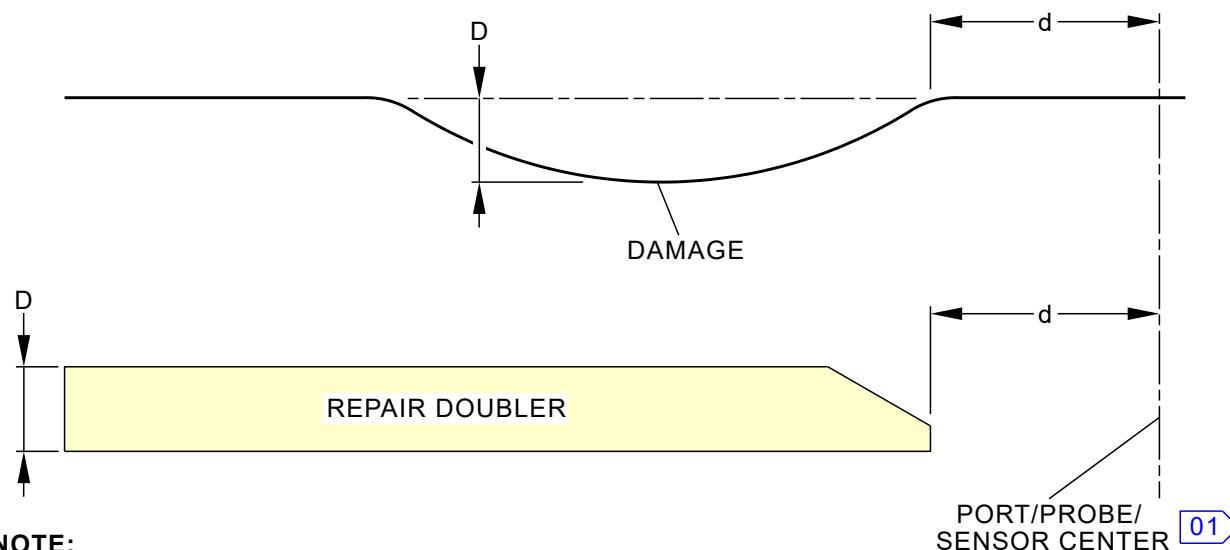


**NOTE:**

01 FOR PITOT AND TOTAL AIR TEMPERATURE PROBES, REFER TO SHEET 2.

d = DISTANCE BETWEEN PORT/PROBE/SENSOR CENTER AND NEAREST EDGE OF DAMAGE/REPAIR DOUBLER.

D = MAXIMUM DEPTH OF DAMAGE OR MAXIMUM THICKNESS OF REPAIR DOUBLER.

DAMAGE/REPAIR DOUBLER CAN BE POSITIONED ALL AROUND PROBE/PORT/SENSOR EXCEPT FOR STATIC PROBE PORTS. FOR STATIC PROBE PORTS, REFER TO THE RELEVANT PARAGRAPH.

N_SR_530011_1_6CEM000A_01_00

Figure 004 / 53-00-11-283-004 (SHEET 1/2) - Definition of Characteristic Parameters