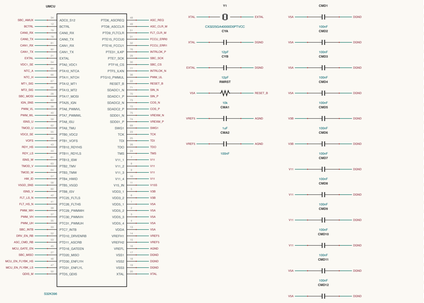
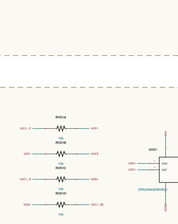
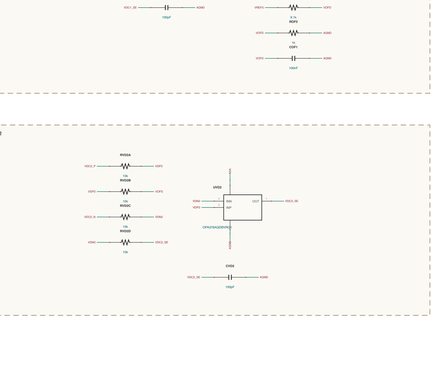
## CONTROL / MCU



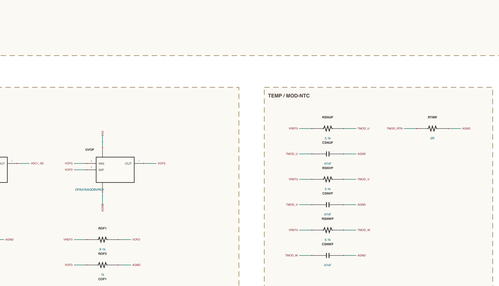

## CONTROL / SWD-BOOT




## SBC / LV-INPUT



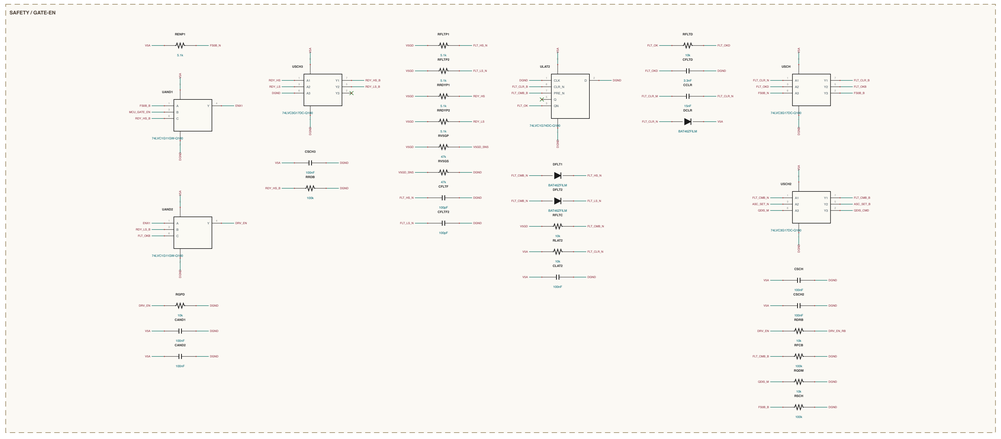

## SBC / FS26




## SBC / WAKE




## SAFETY / GATE-EN




## VDC-RECEIVE / CH-1



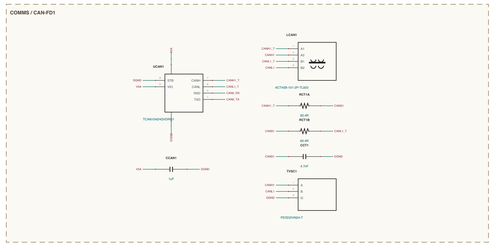

## VDC-RECEIVE / CH-2



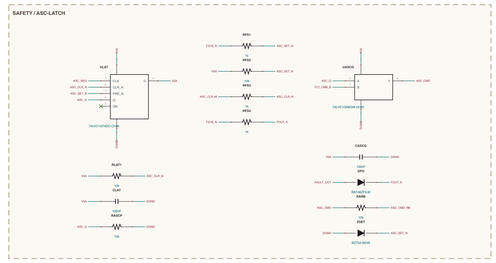

## TEMP / MOD-NTC



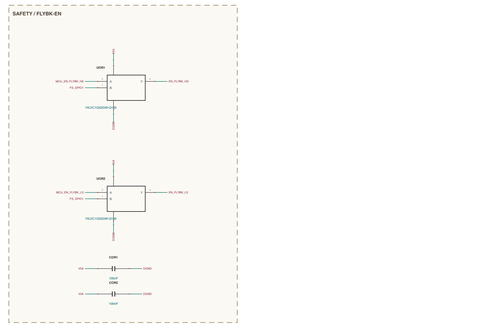

## COMMS / CAN-FD1



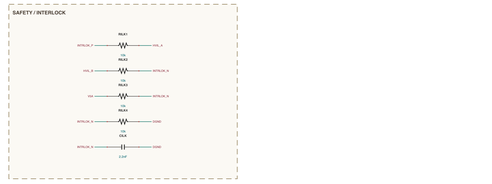

## SAFETY / ASC-LATCH



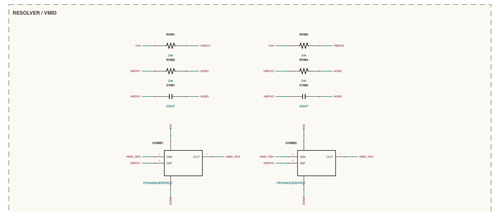

## SAFETY / FLYBK-EN



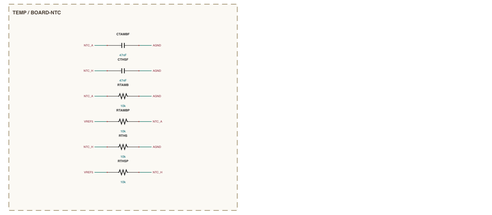

## SAFETY / INTERLOCK



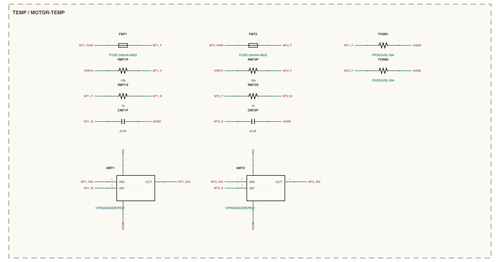

## RESOLVER / VMID



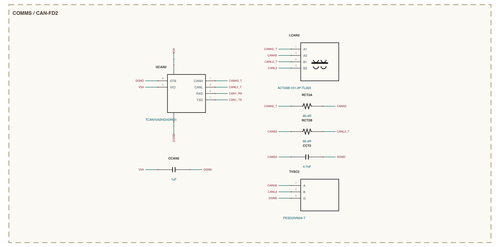

## TEMP / BOARD-NTC



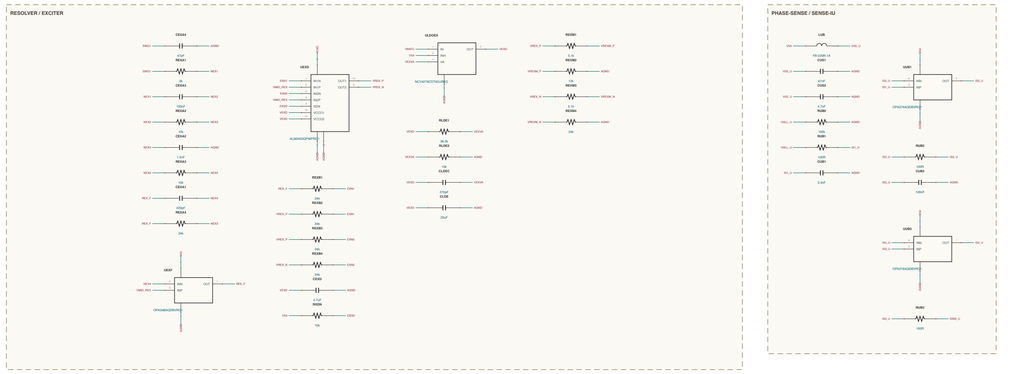

## TEMP / MOTOR-TEMP



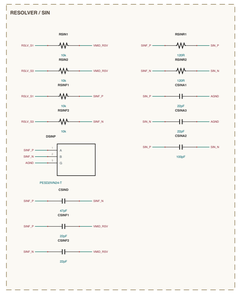

## COMMS / CAN-FD2



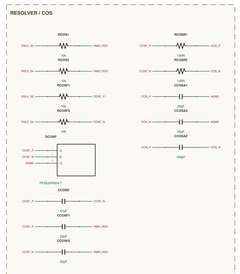

## RESOLVER / EXCITER



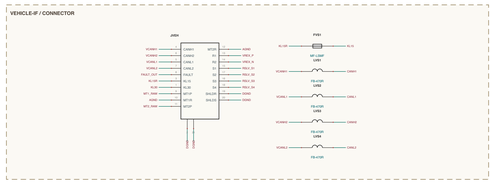

## RESOLVER / SIN



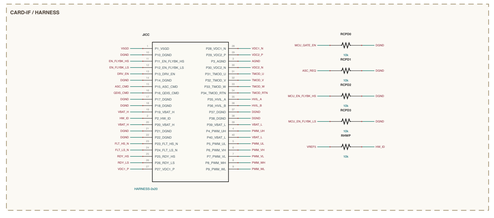

## RESOLVER / COS



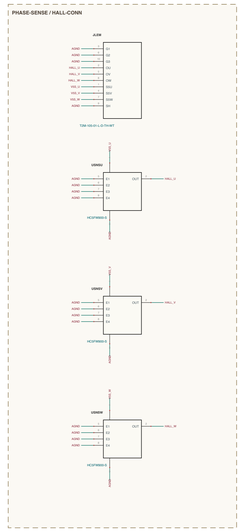

## VEHICLE-IF / CONNECTOR



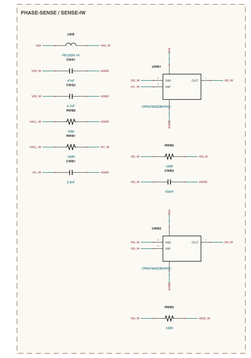

## CARD-IF / HARNESS




## PHASE-SENSE / HALL-CONN



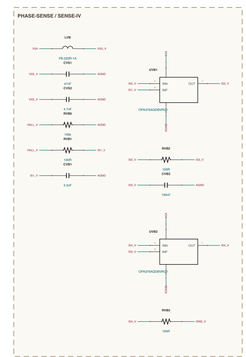

## PHASE-SENSE / SENSE-IW




## PHASE-SENSE / SENSE-IU




## PHASE-SENSE / SENSE-IV




## SHEET INDEX

220 kW pk Control card (LV) - 4 of 4

PHASE-SENSE - 4 sections

RESOLVER - 4 sections

SAFETY - 4 sections

SBC - 3 sections

TEMP - 3 sections

COMMS - 2 sections

CONTROL - 2 sections

VDC-RECEIVE - 2 sections

CARD-IF - 1 section

VEHICLE-IF - 1 section

rev A.11 - 26 sections - 288 components

## NET NAMING

Internal junctions are named for what they join

Uxref+, +PWx node at that IC pin e.g. U5VDC_VINP

Rxxbetw_.W midpoint of a series pair e.g. RBLA_W

Rxxbetw_.<ctrl> tap between Rxxbetwctrl e.g. RVDD_12

all others are explicit design nets

same name on another sheet = same net; joined ONLY at the

named connectors/stuffab (see INTERBOARD LINKS, design basis)

**Traction Inverter — Control Card (S32K396 + FS26, ASIL D)**

Traction Inverter 220 kW pk - Control card (LV), sheet 4 of 4

2026-09-23 · rev A.11