



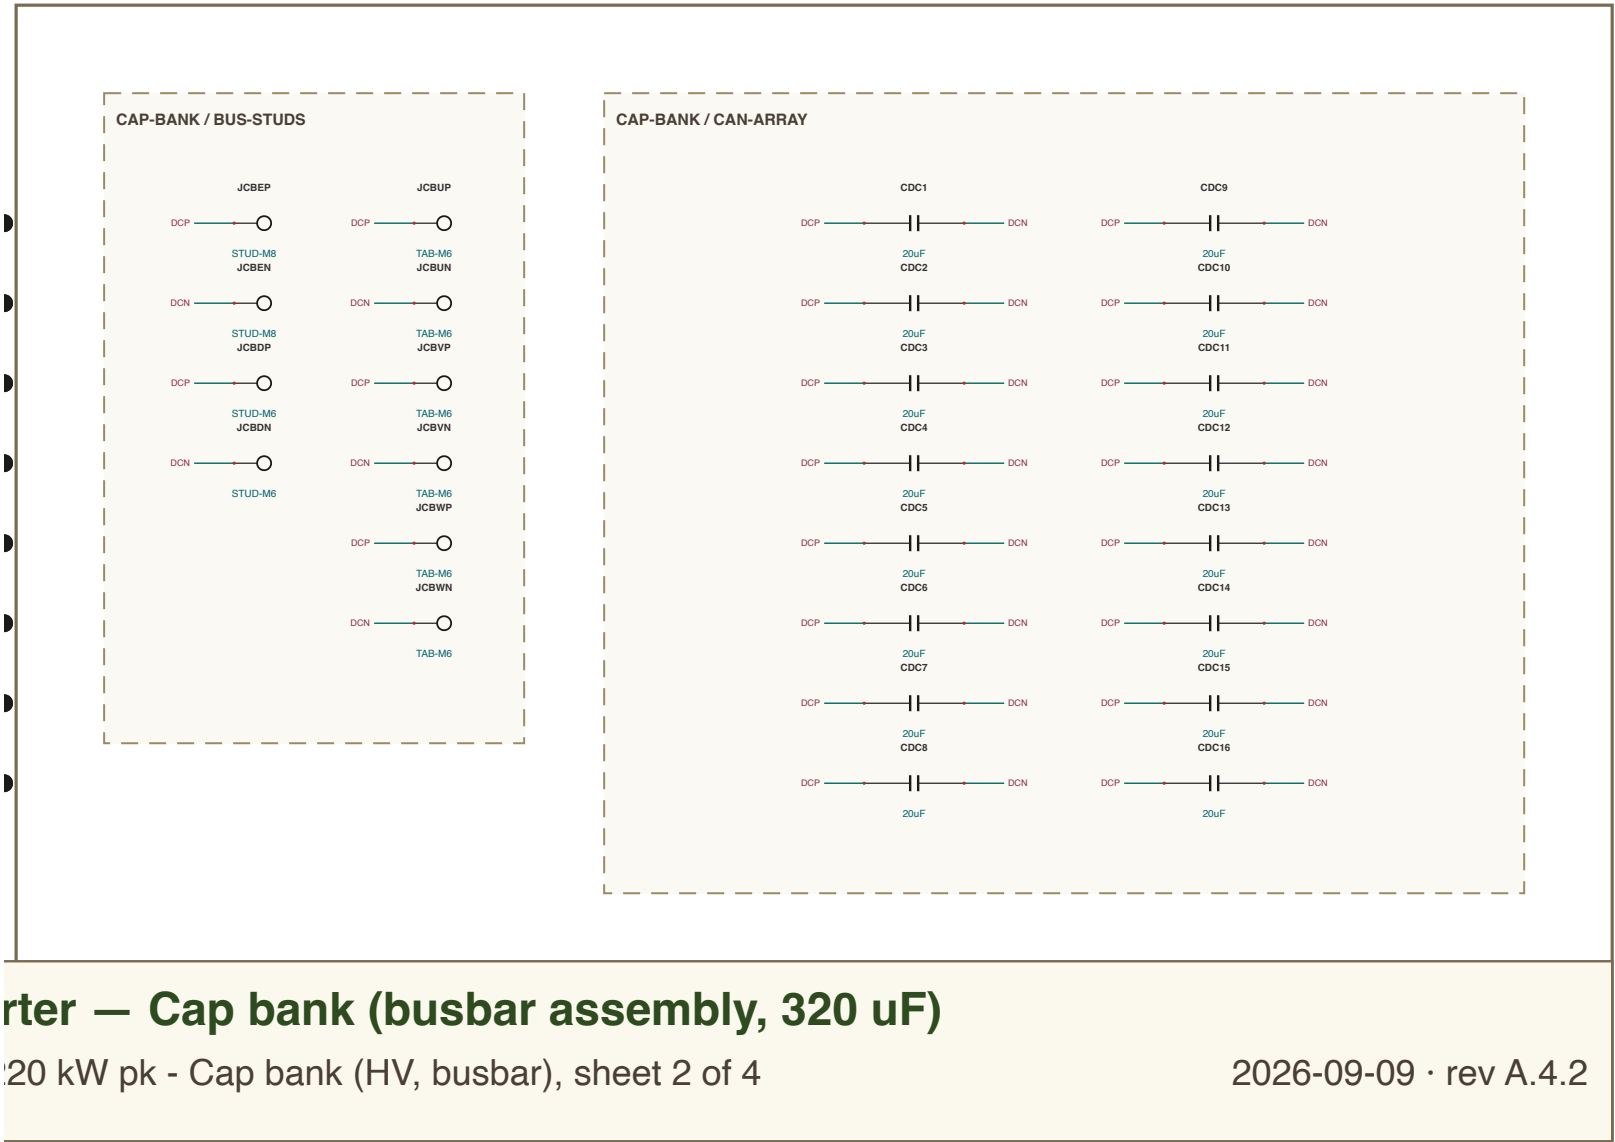
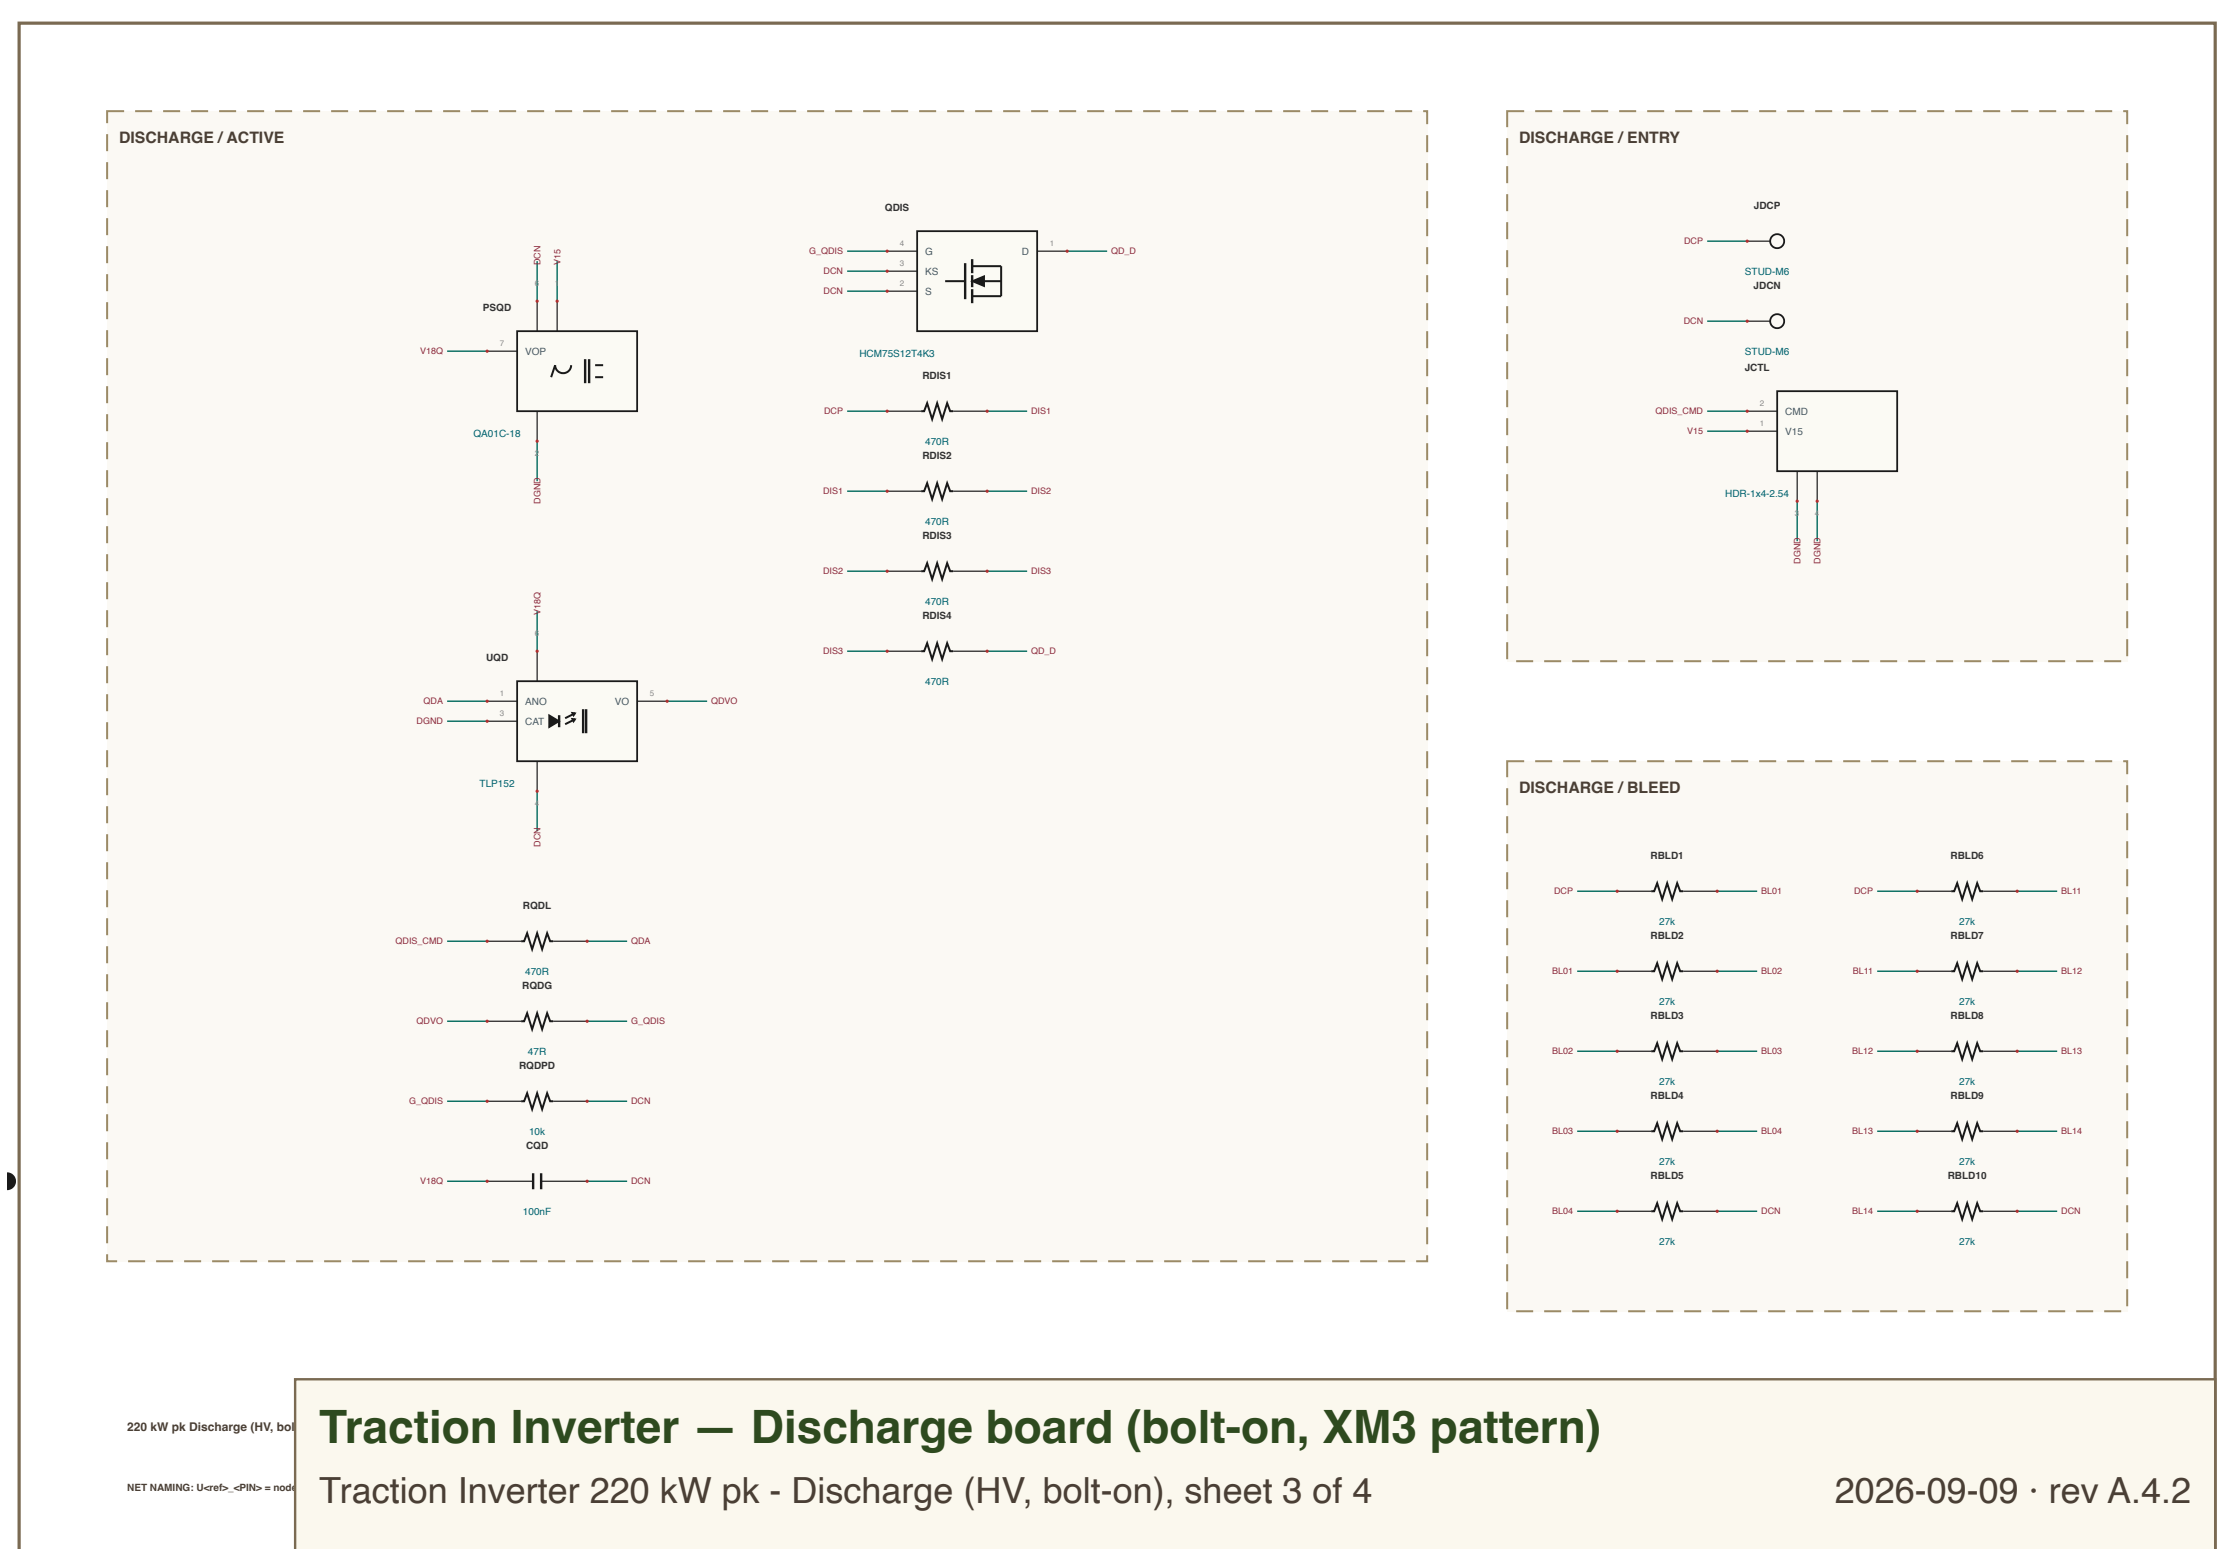
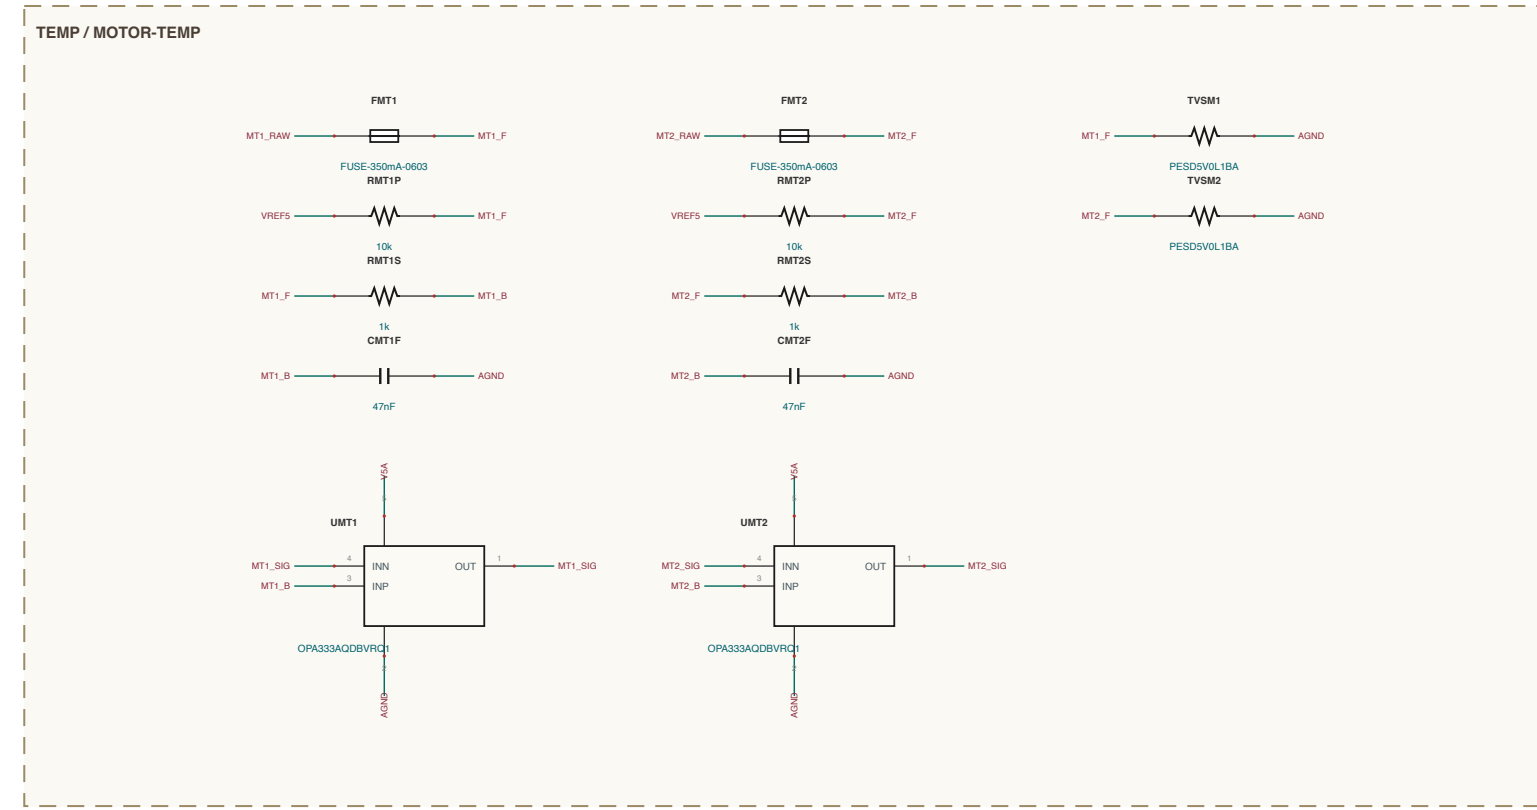
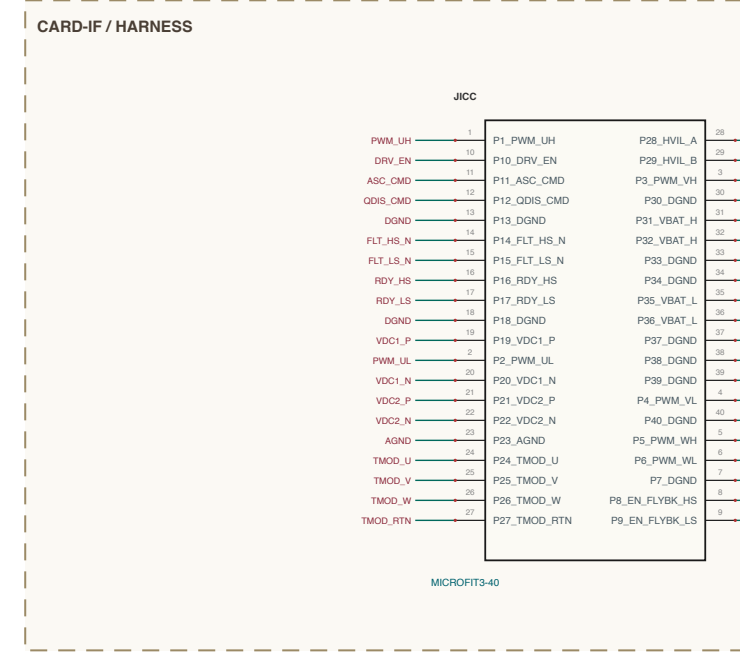
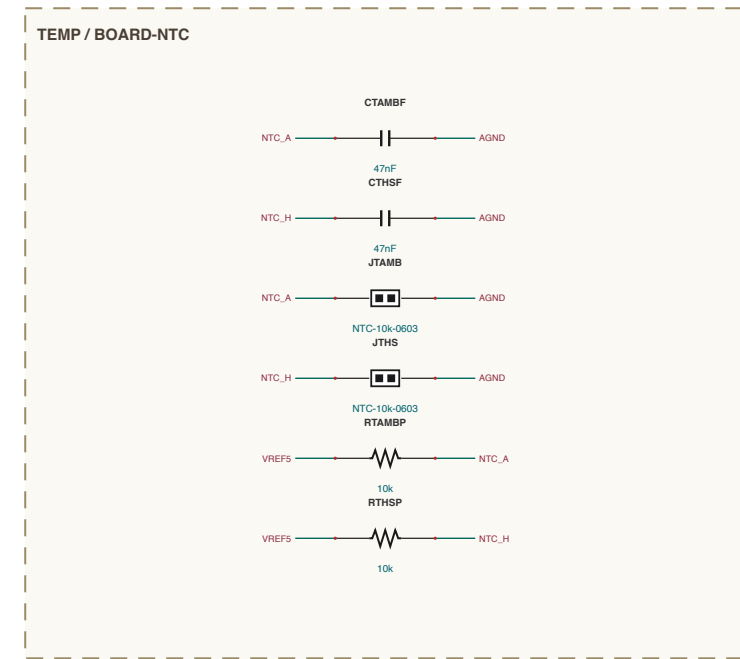
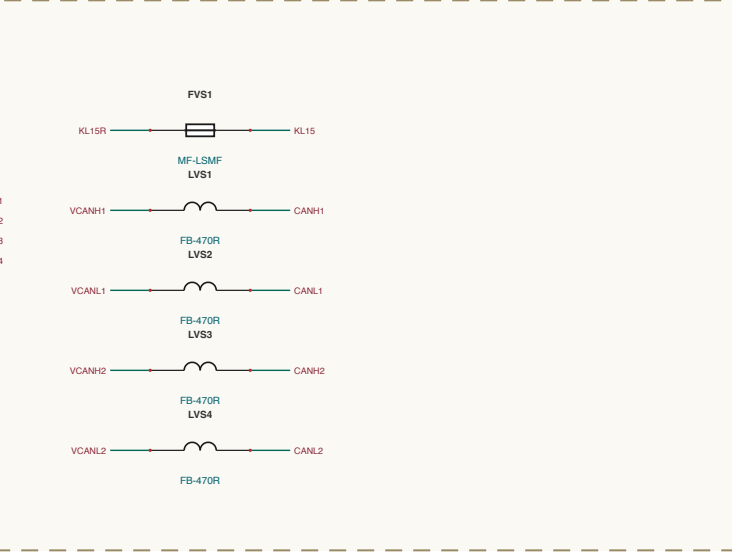
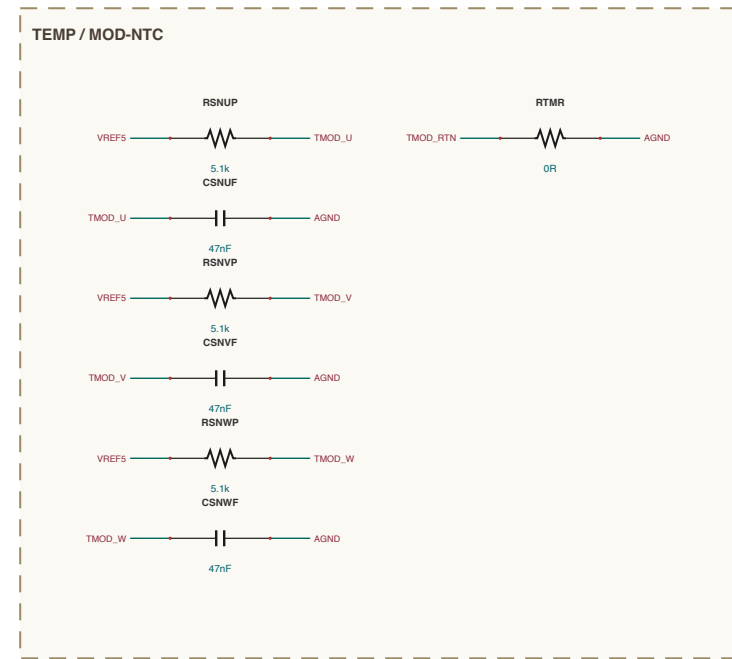
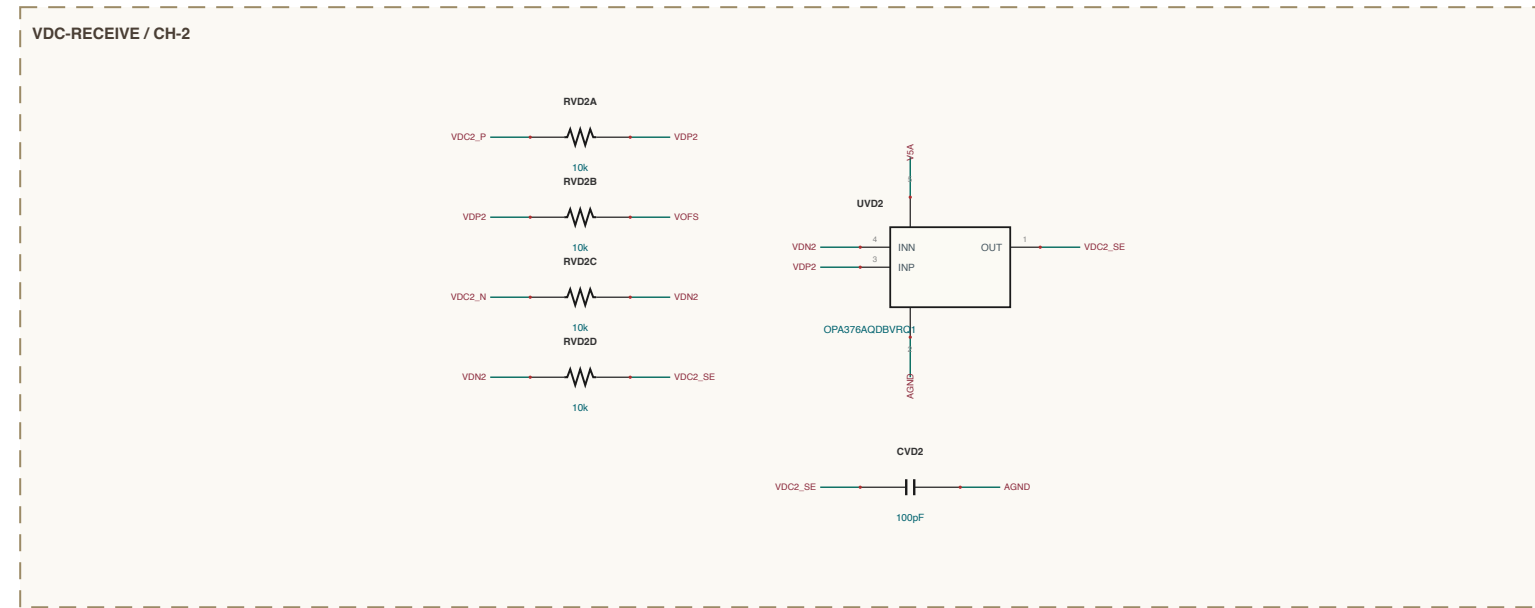
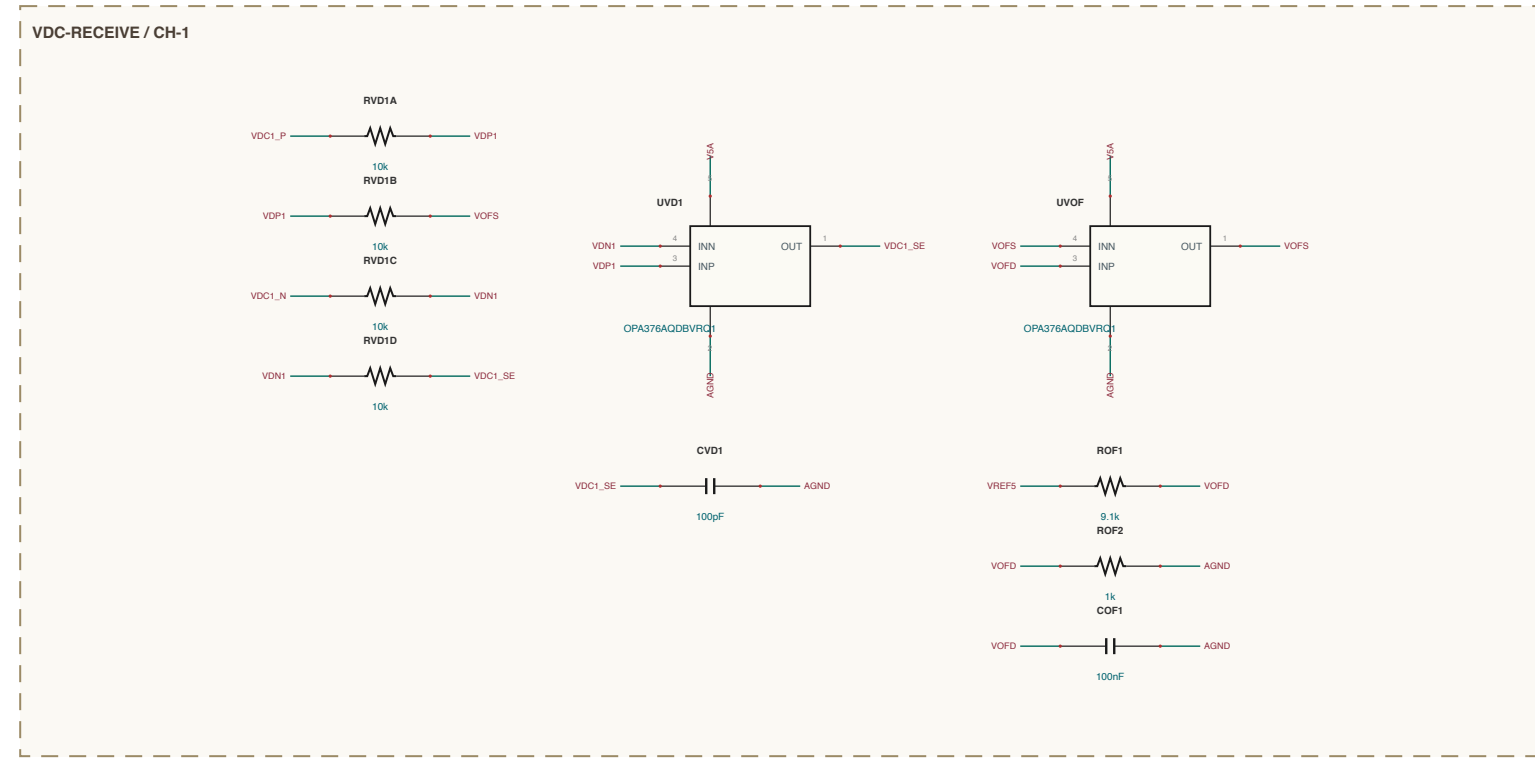
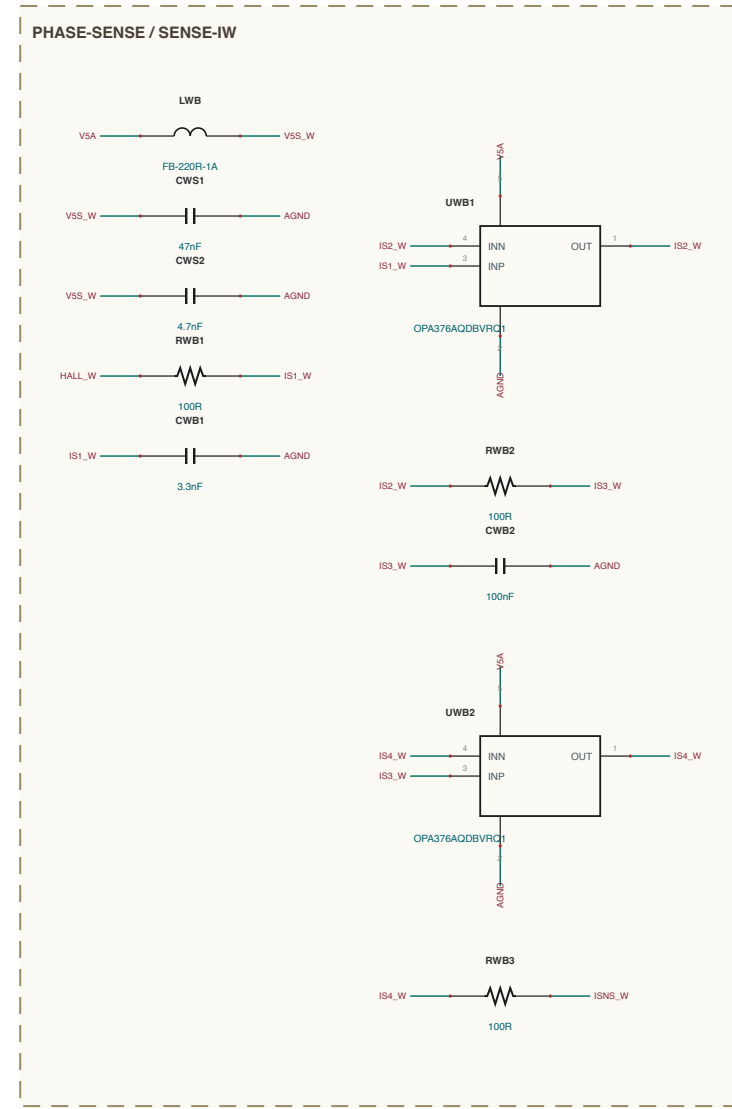
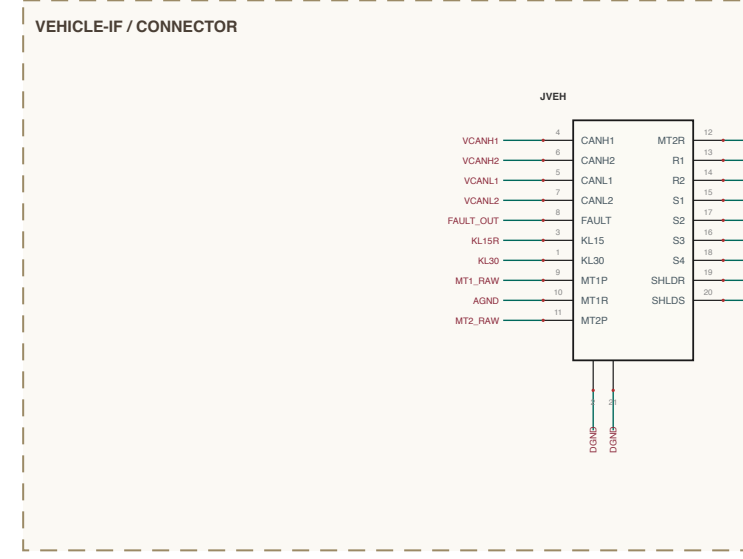
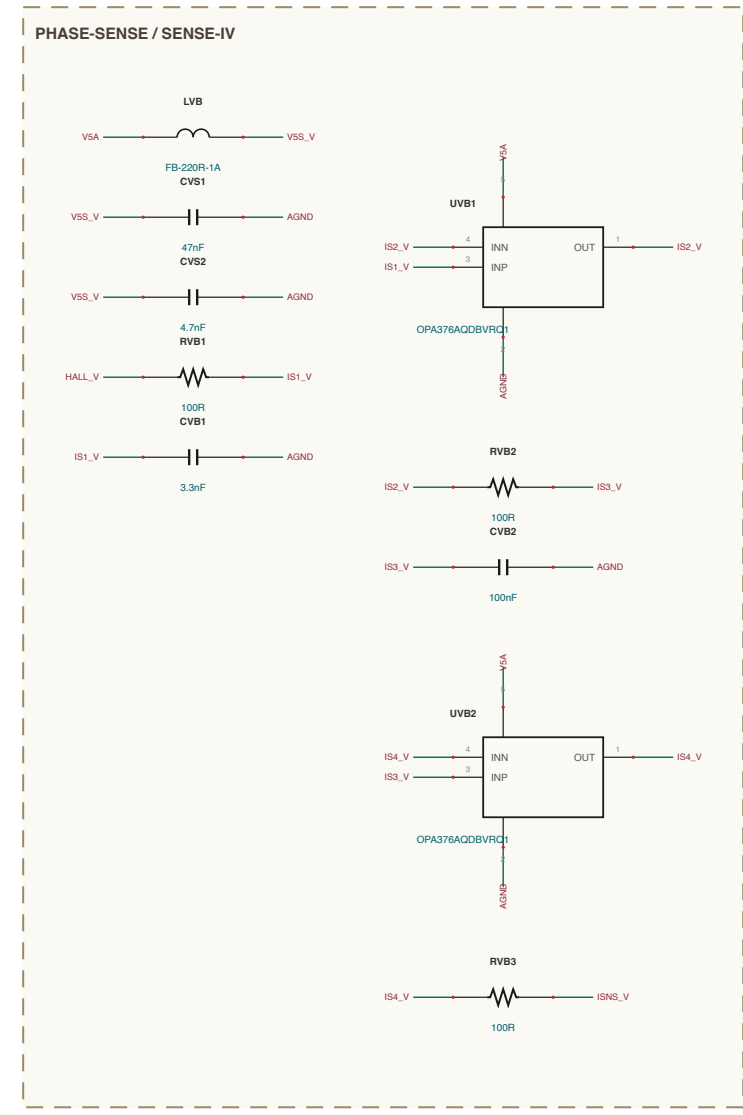
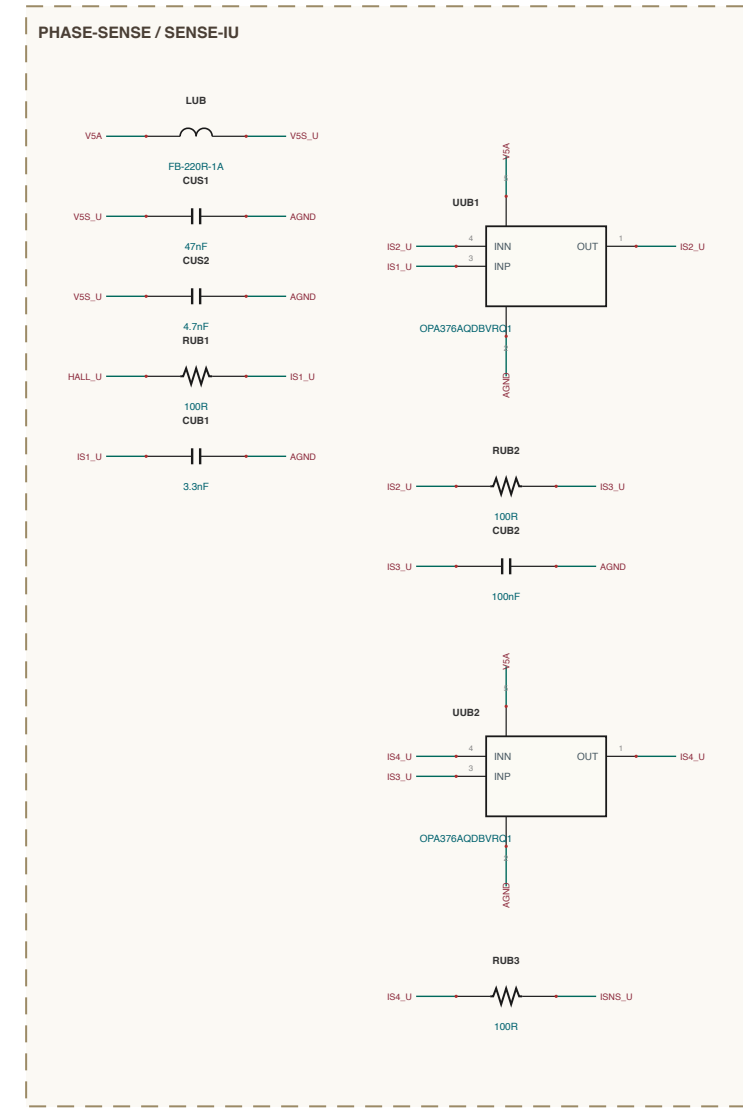
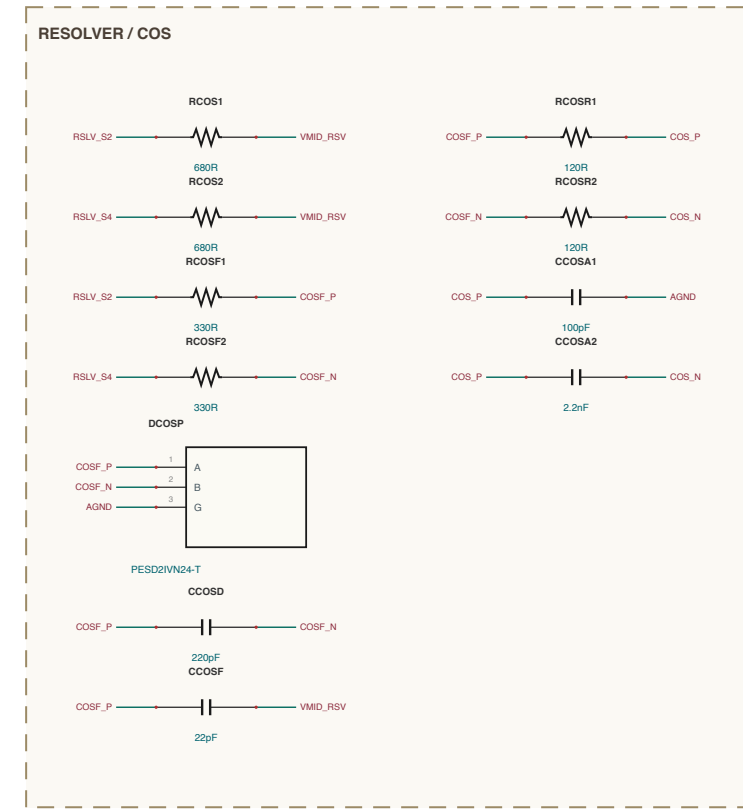
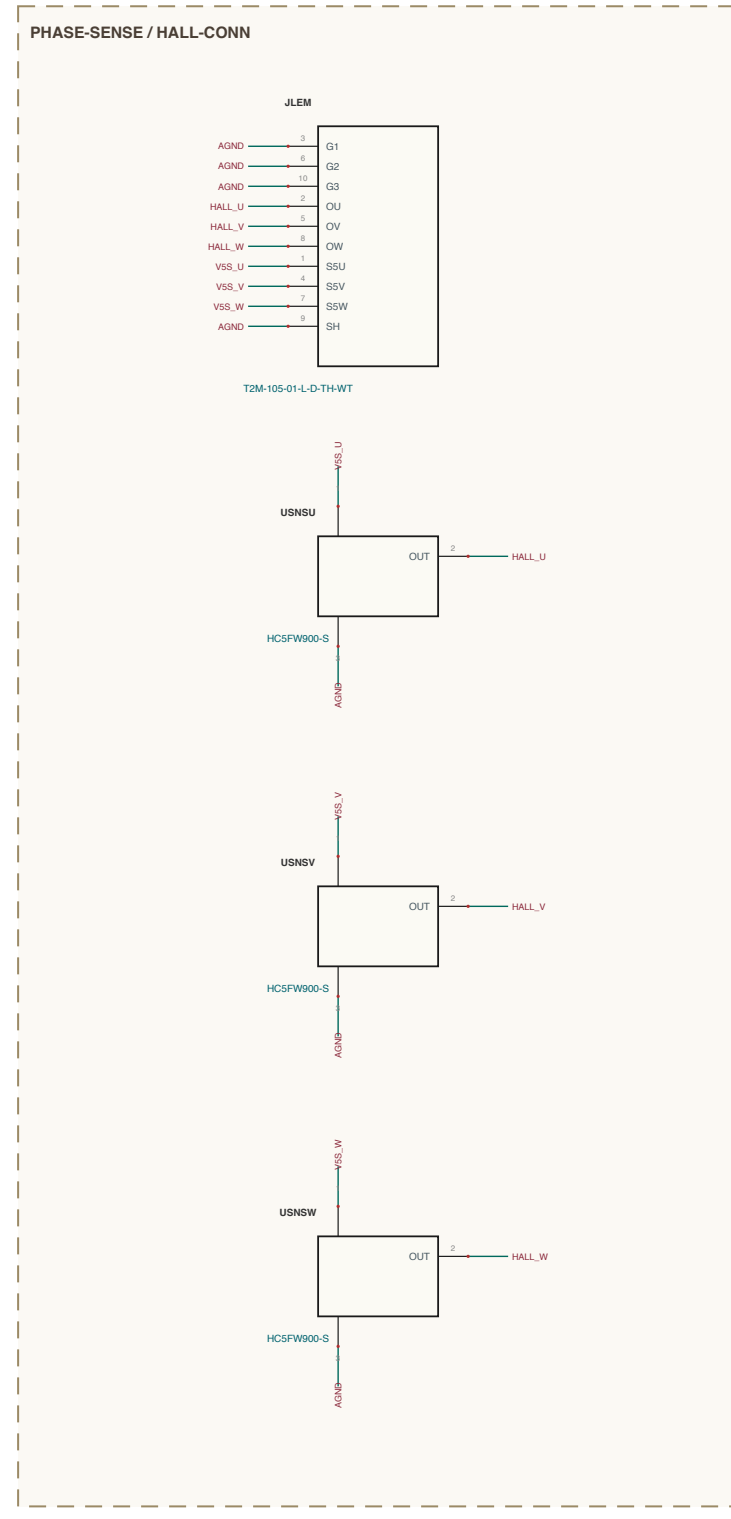
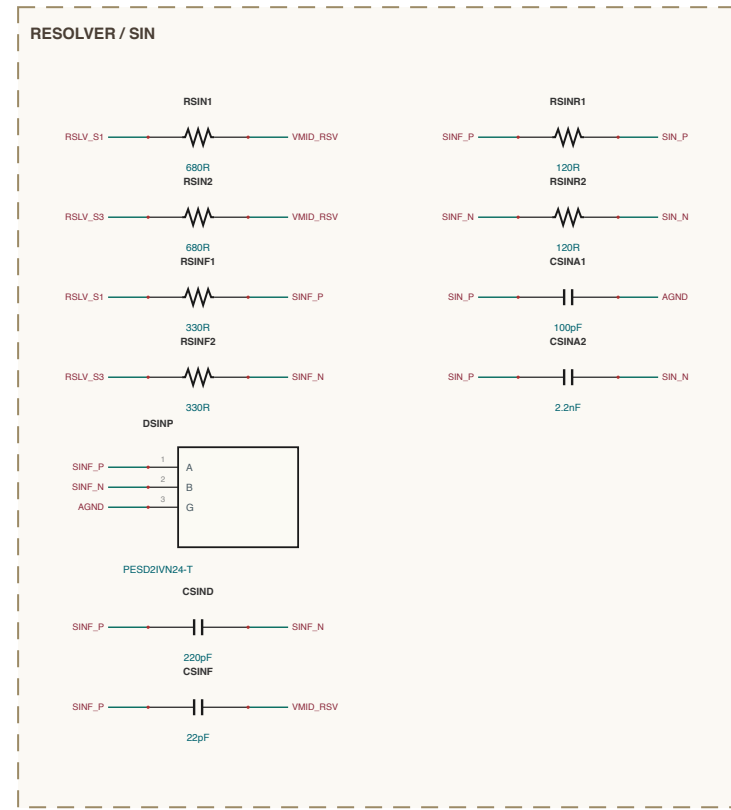
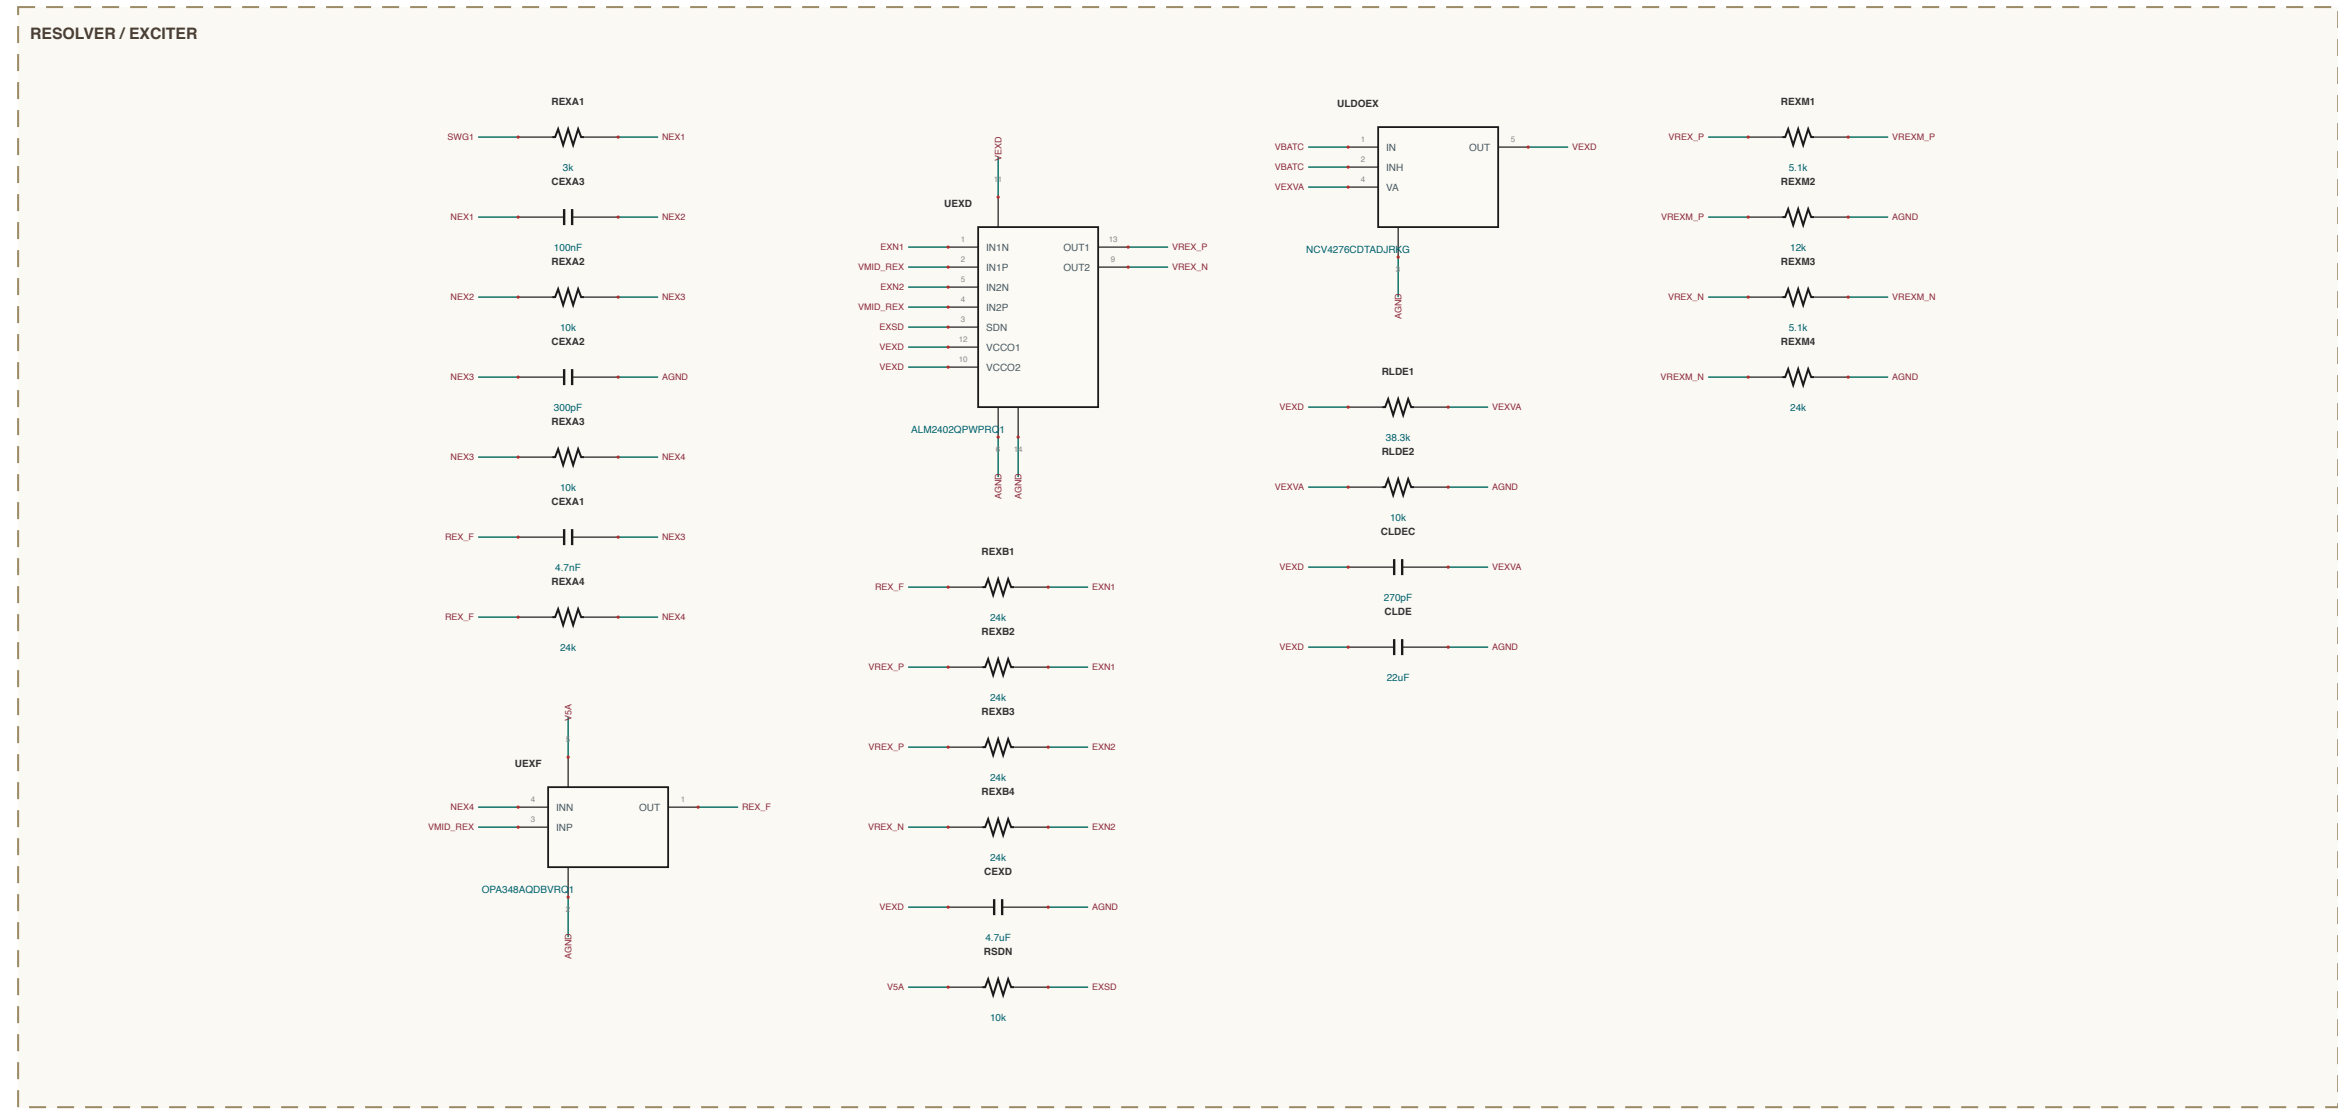
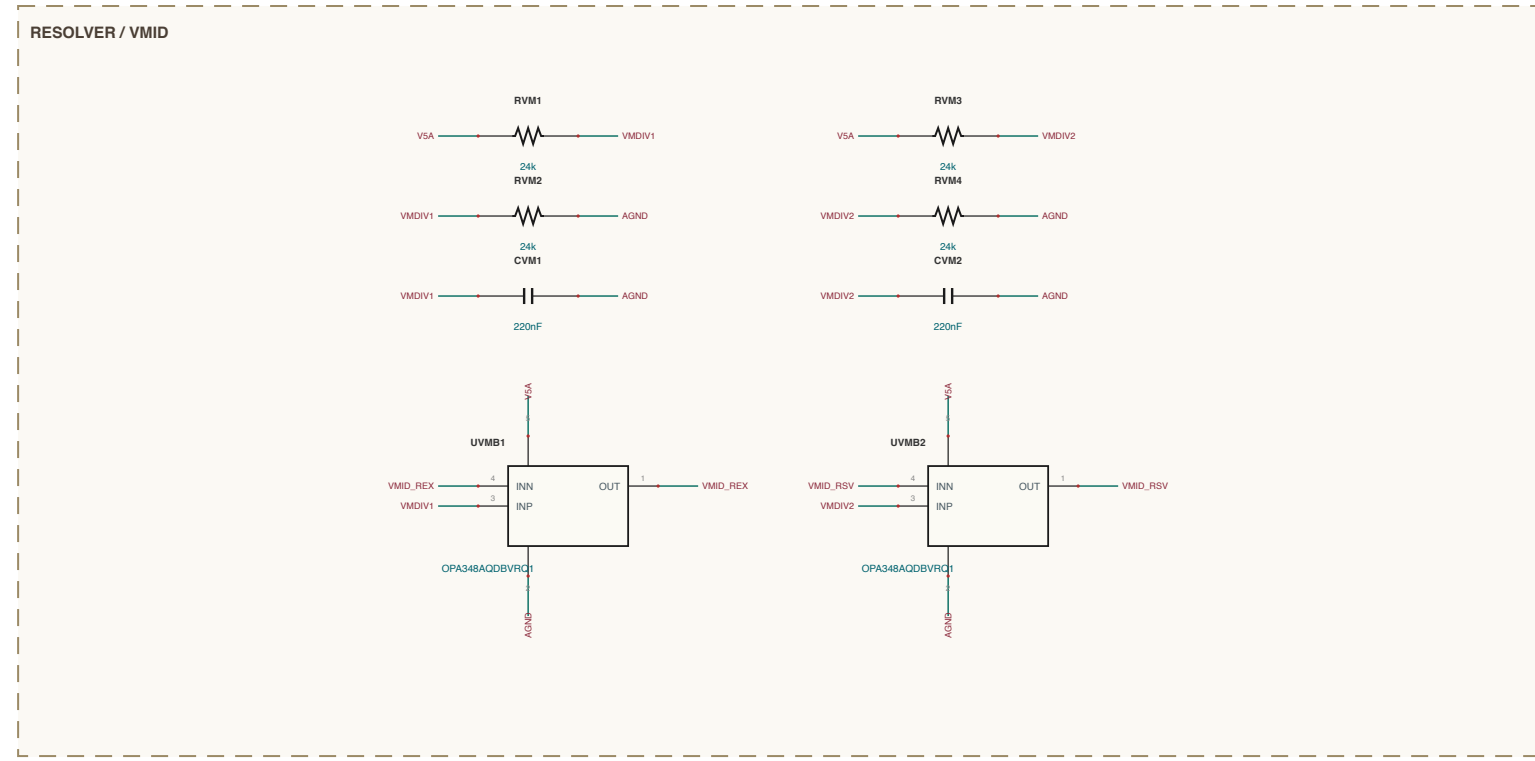
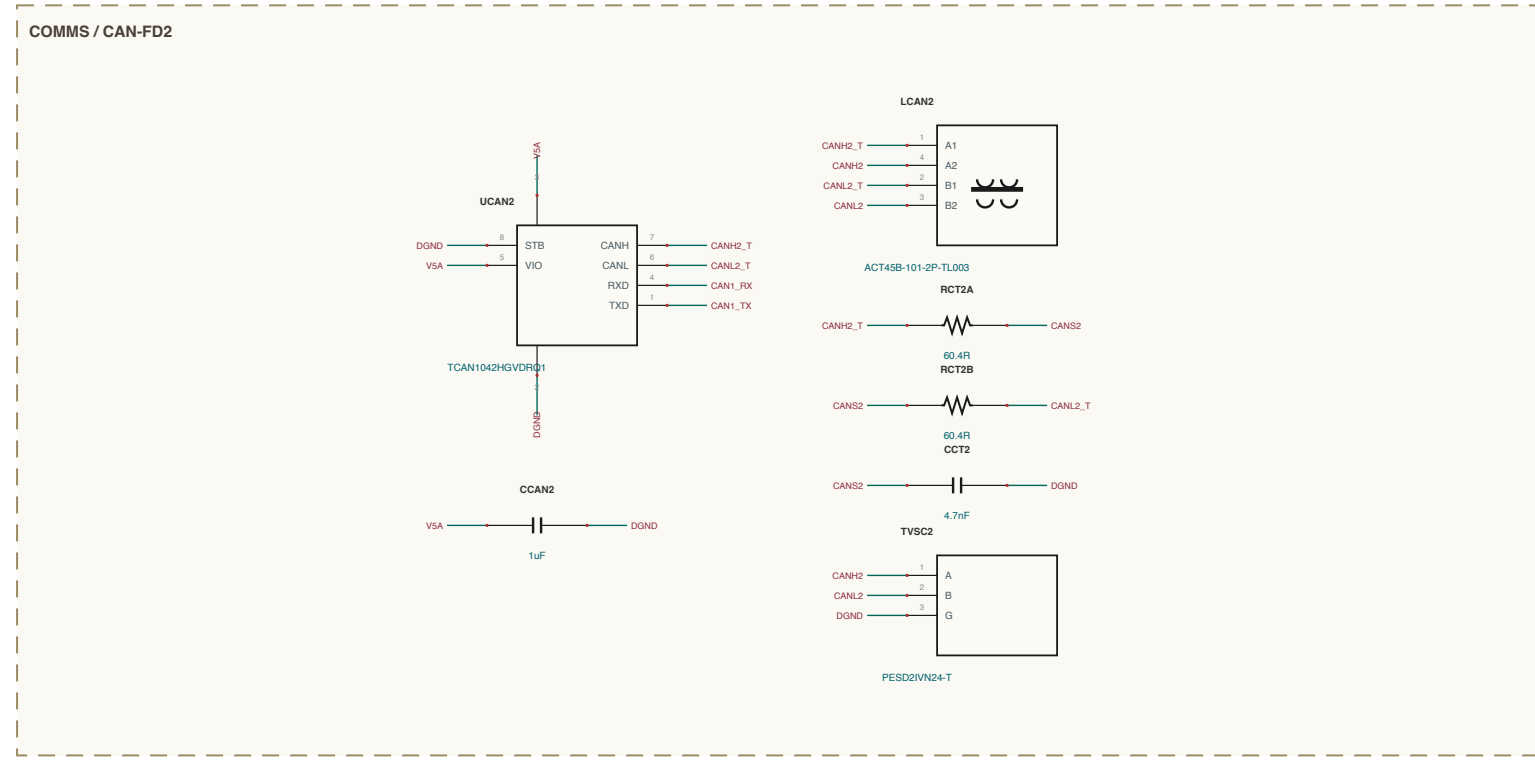
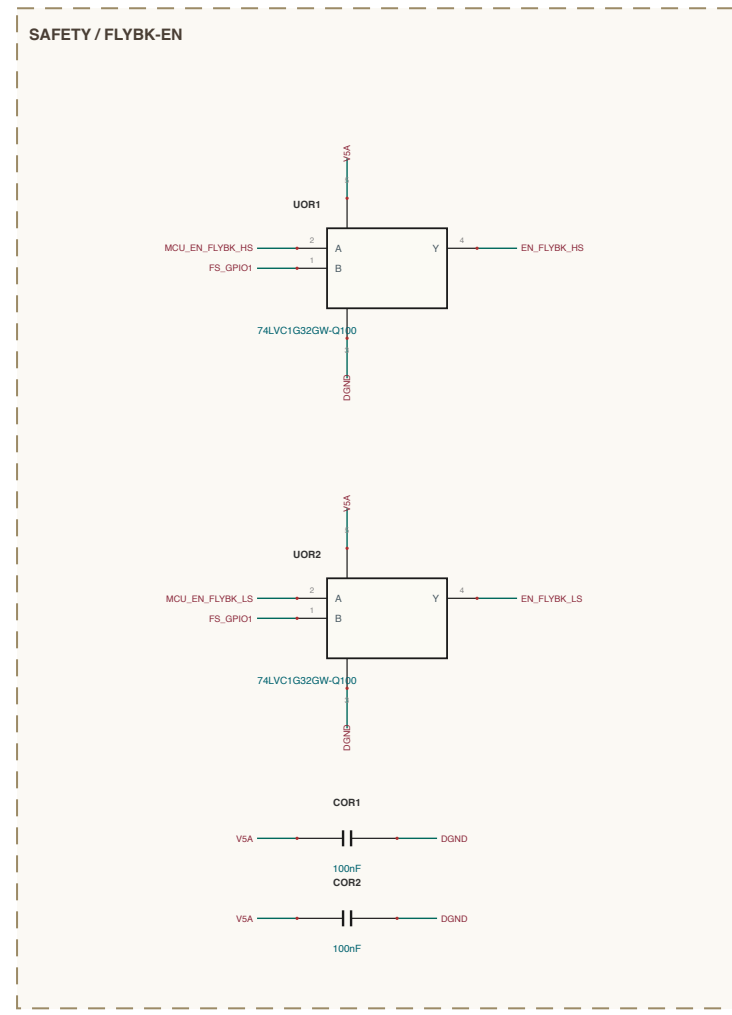
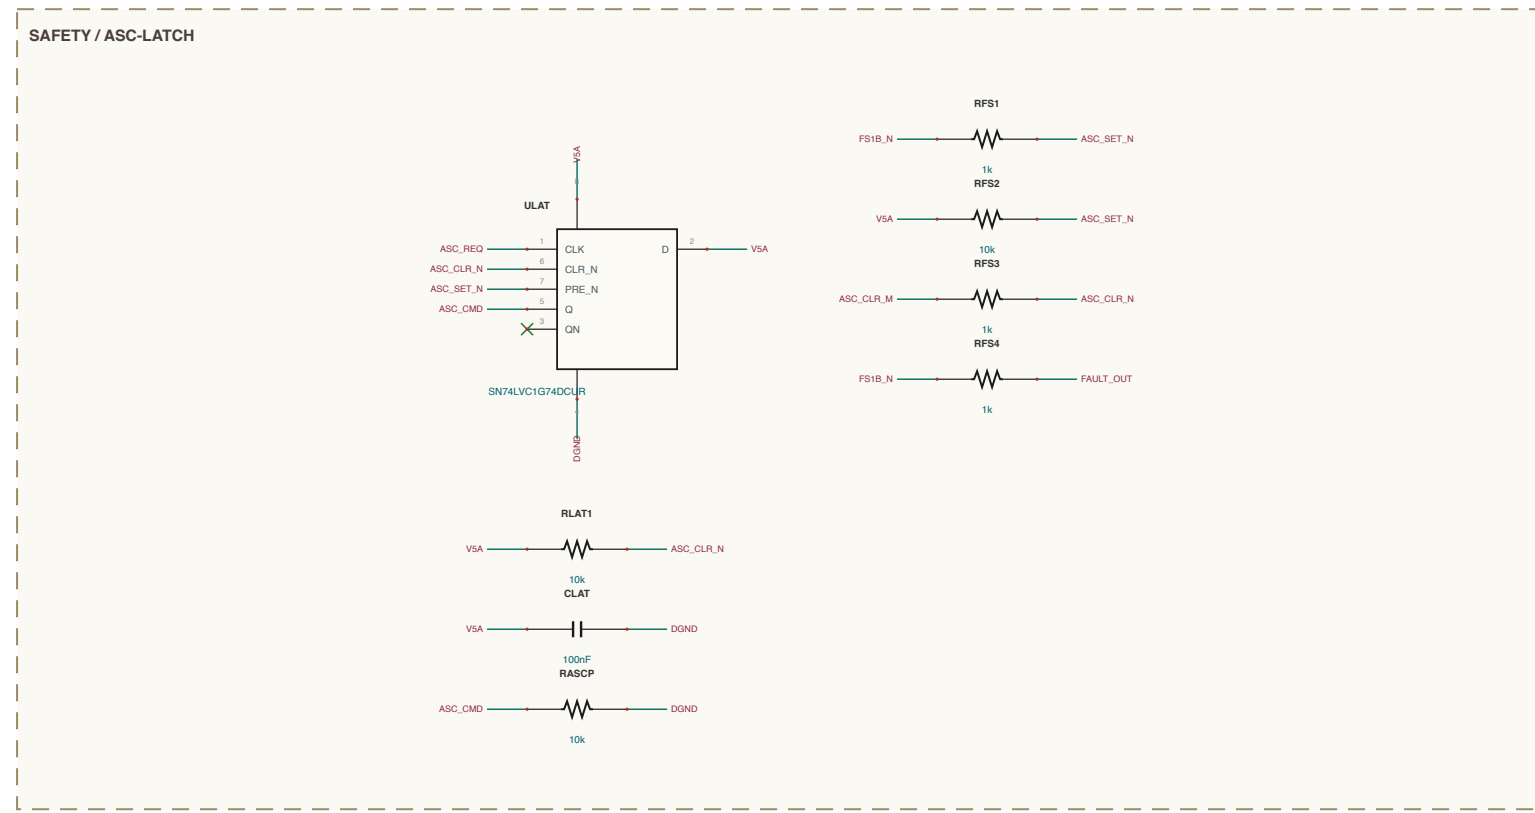
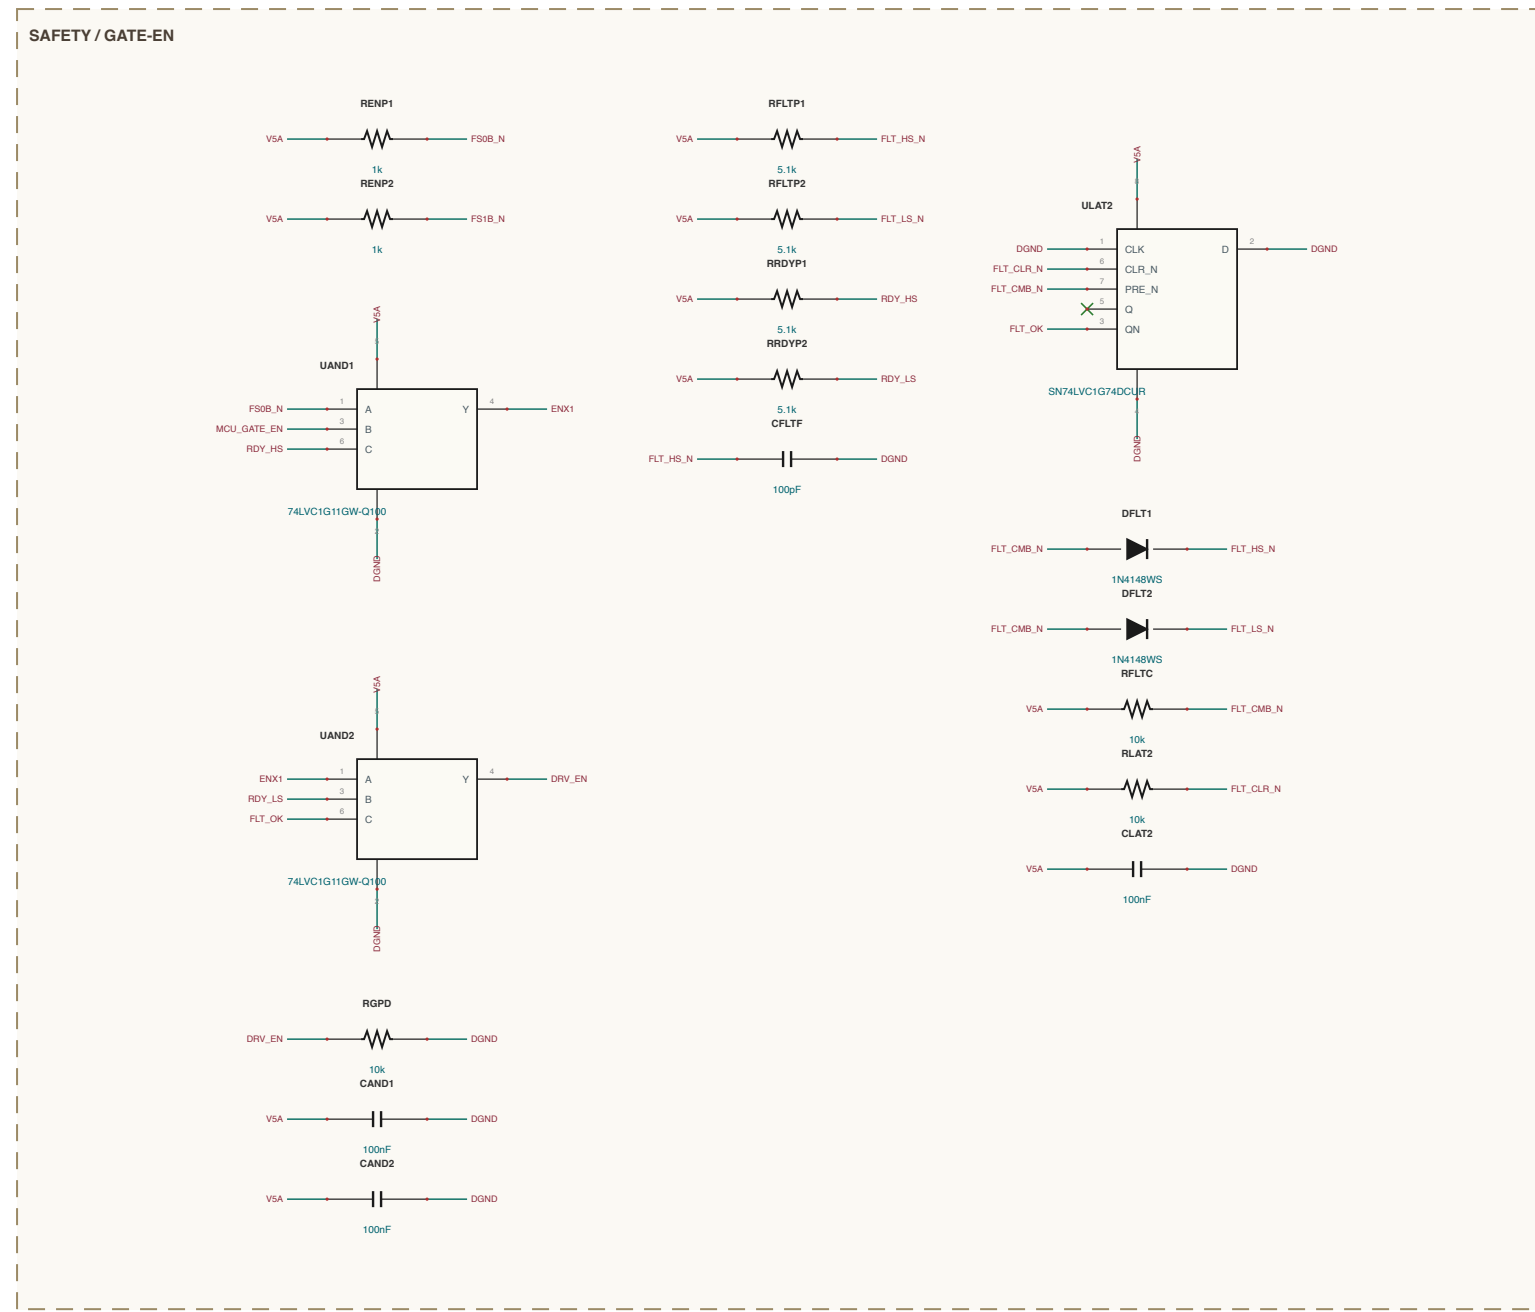
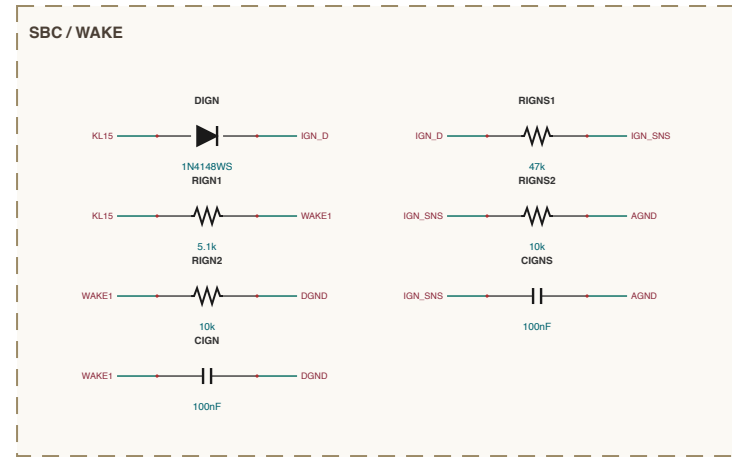
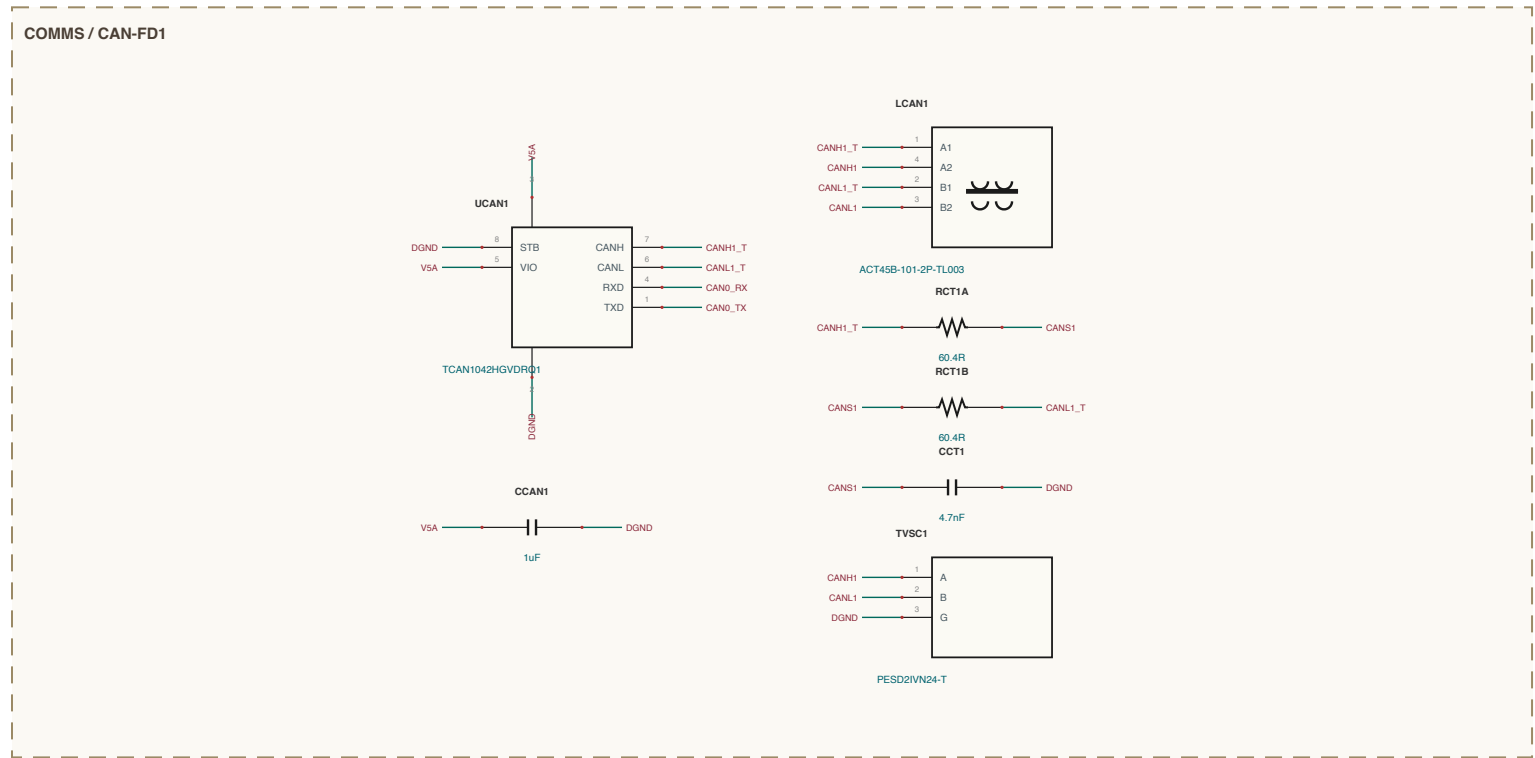


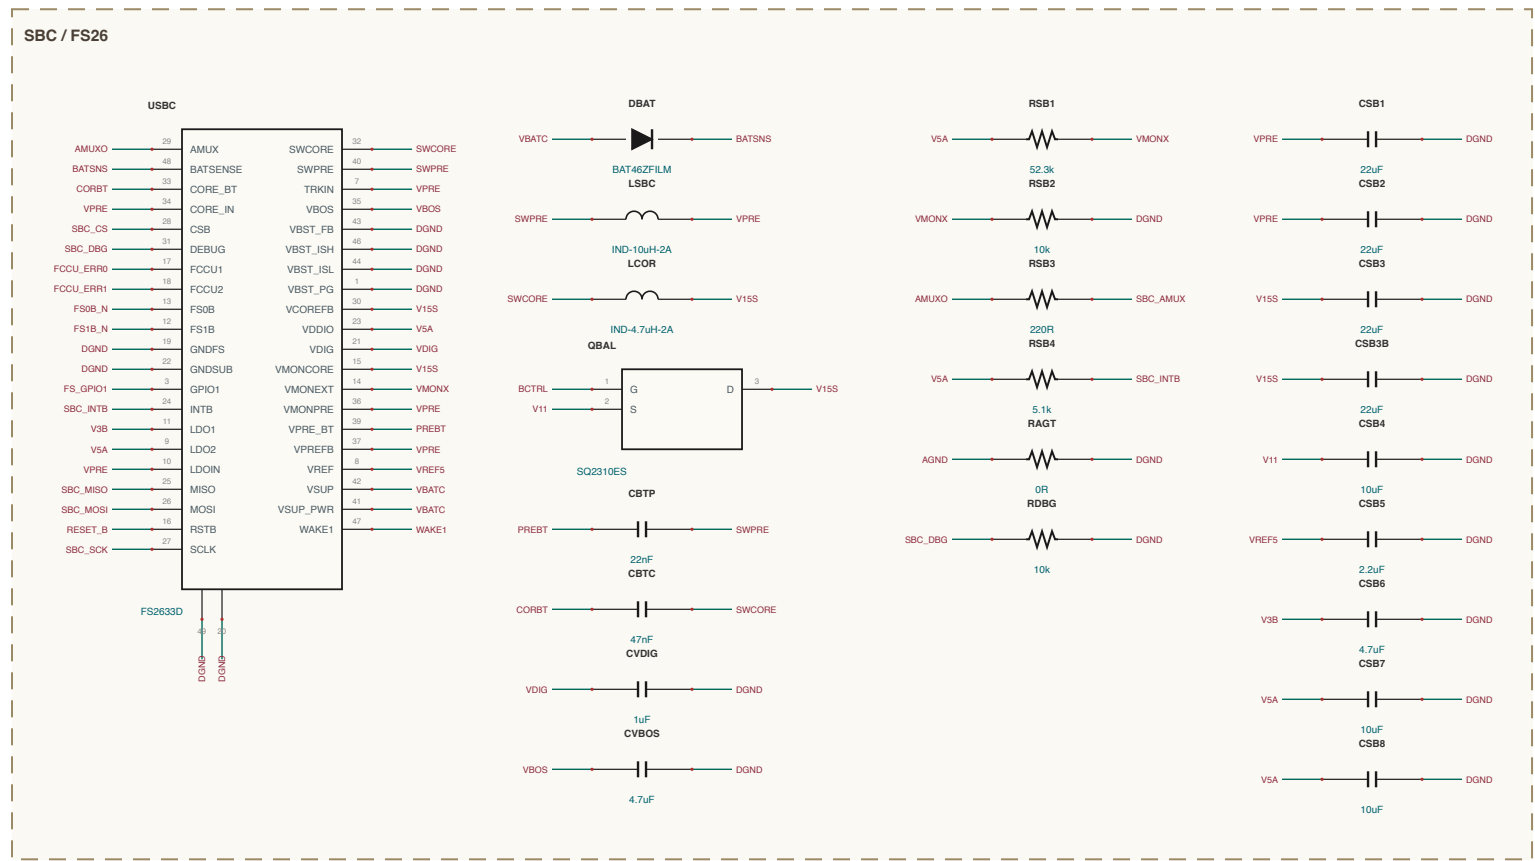

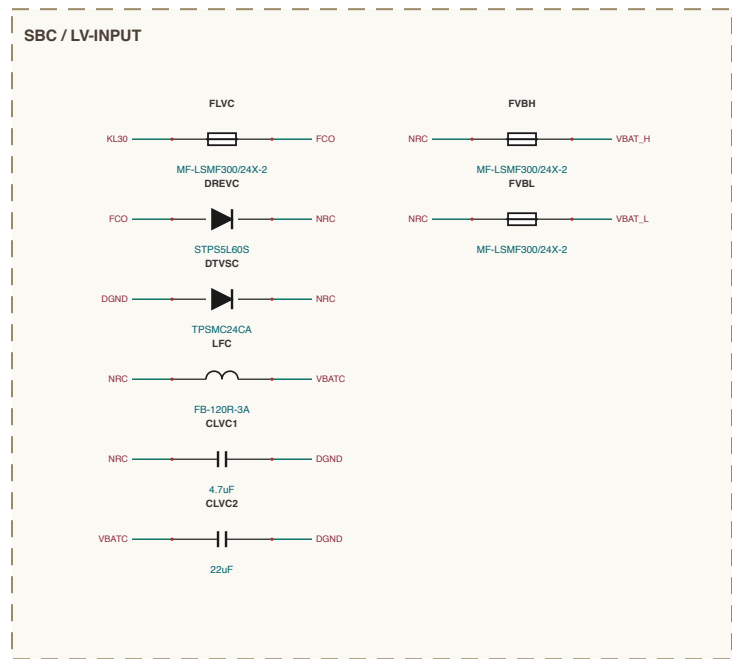

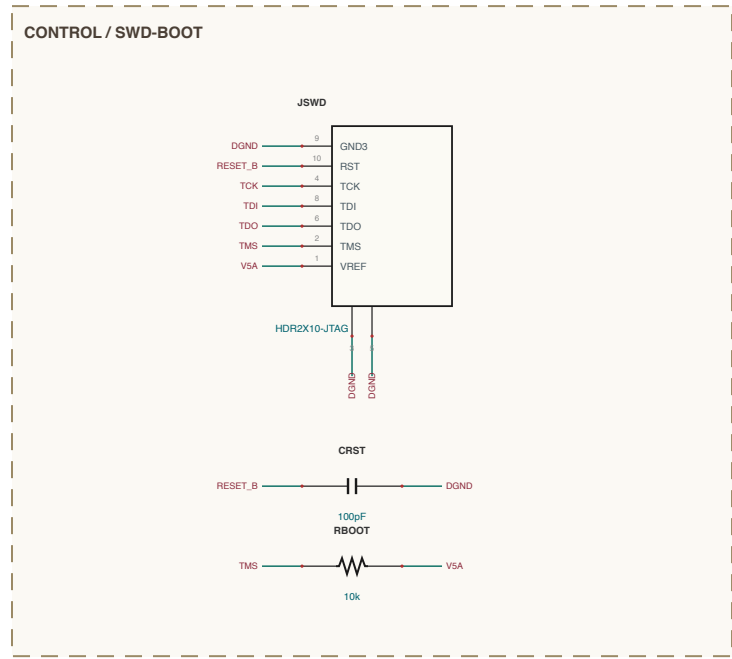

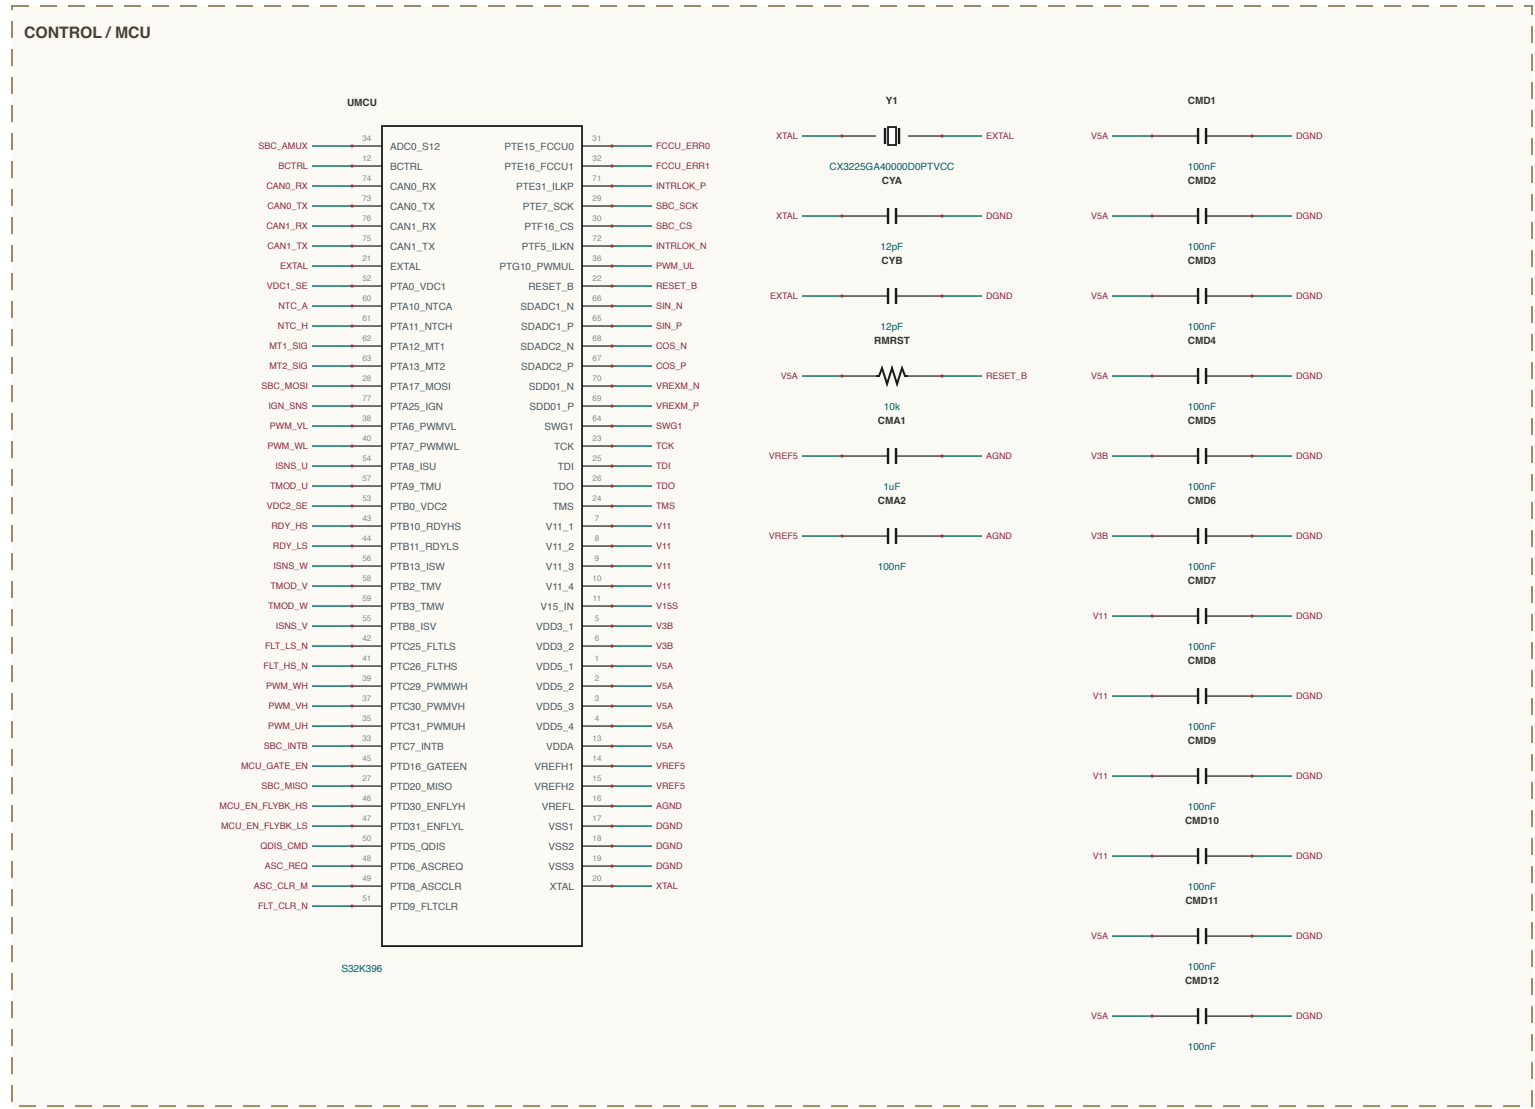

SHEET INDEX

220 kW pk Control card (LV) - 4 of 4

PHASE-SENSE - 4 sections
RESOLVER - 4 sections
SAFETY - 4 sections
SBC - 3 sections
TEMP - 3 sections
COMMS - 3 sections
CONTROL - 2 sections
VDC-RECEIVE - 2 sections
CARD-I/F - 1 section
VEHICLE-I/F - 1 section

no A.4.2 - 36 sections - 238 components

NET NAMING

Internal junctions are named for what they join

Ground - #FF00 ends at first 0 pin e.g. UNOSC_VSP

Resistor - R# endpoint of a series pair e.g. R001_0

Resistor - series tag between Resistorpins e.g. R002_10

All others are explicit design info

Series names are another sheet + series ref, joined ONLY at the

Internal connections/labels from INTERBOARD LINES, design board