


TV instructions


1

Make sure you have selected the correct source: Press the "Source" button on the remote and select "Satellite".

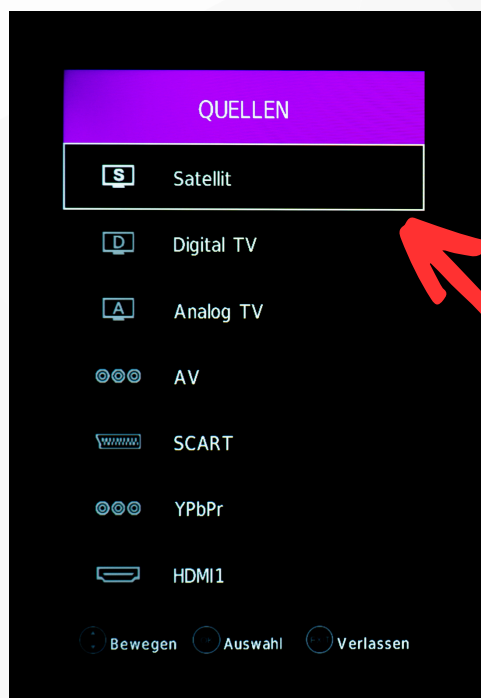

2


When selecting the channel, select the "Frei" tab.

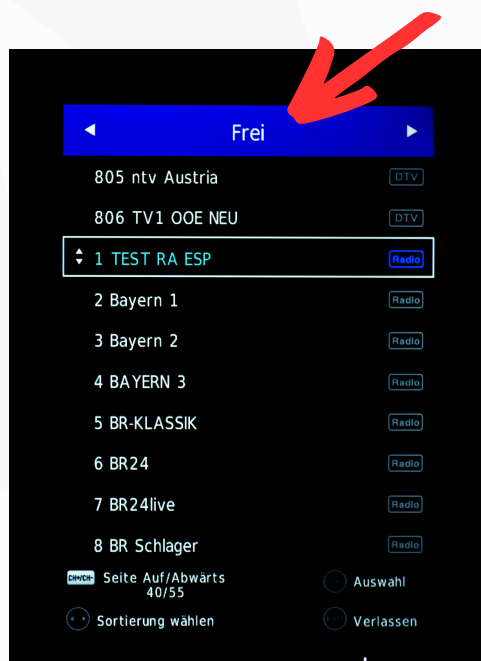

In most cases, the problem is now resolved and you can surf the channels.



If the problem persists, please reinstall the programs.

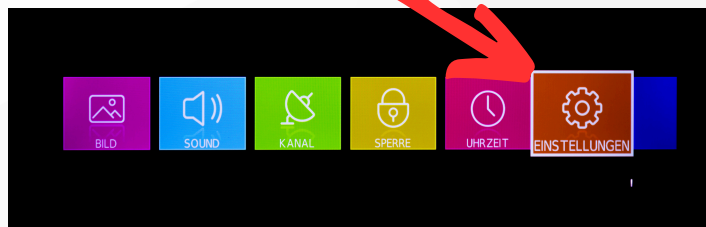



1

To do this, press the "Menu" button on the remote control and go to "Settings"



2

In "Einstellungen" go to the point "Erstinstallation" and apply the following settings. Then press "OK" and the channel search will start. This usually takes a few minutes.

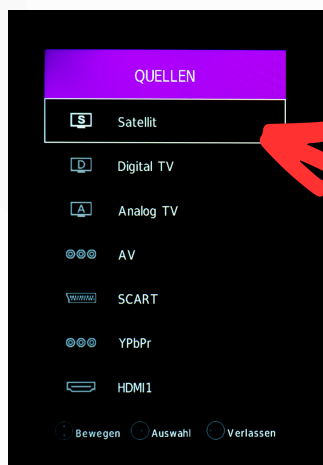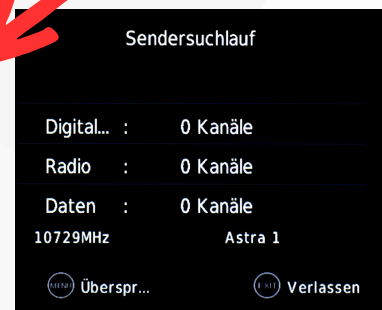

3

If the installation was successful, go to "Satellite" under "Source" and select the "Frei" tab at the top (see instructions above)

