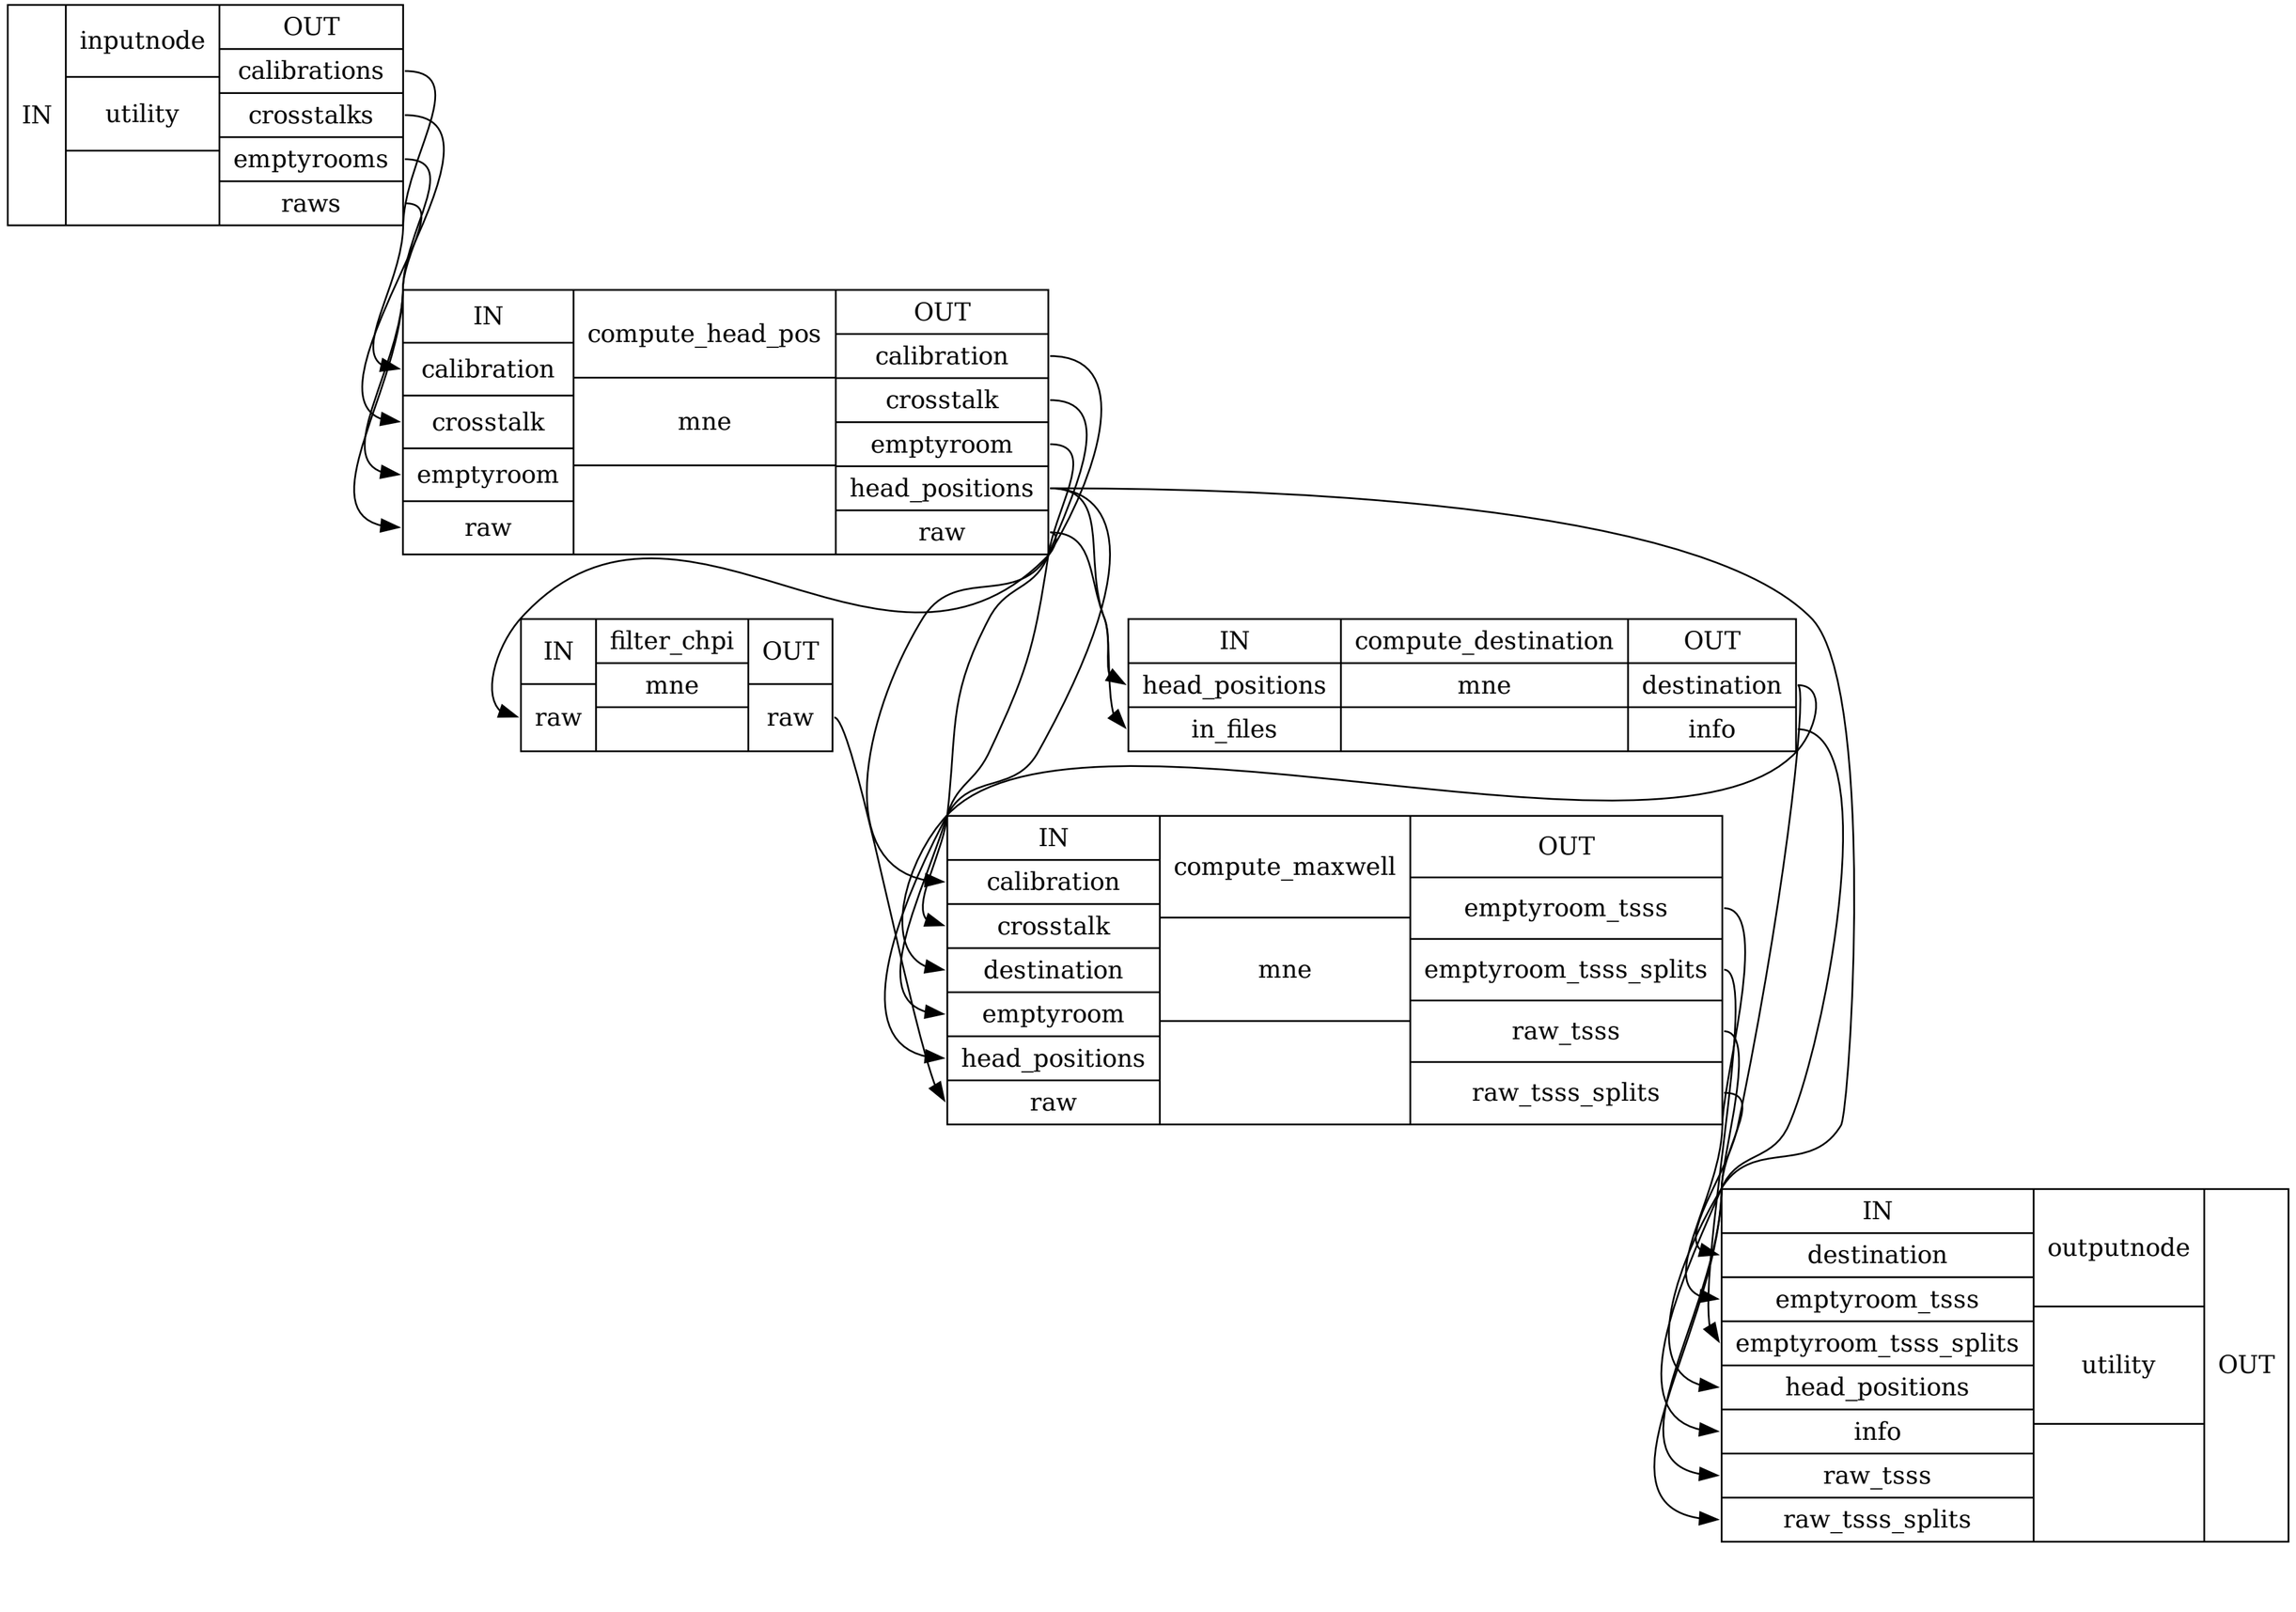
IN
inputnode
OUT
calibrations
utility
crosstalks
emptyrooms
raws
IN
compute_head_pos
OUT
calibration
calibration
crosstalk
mne
crosstalk
emptyroom
emptyroom
head_positions
raw
raw
IN
filter_chpi
OUT
mne
raw
raw
IN
compute_destination
OUT
head_positions
mne
destination
in_files
info
IN
compute_maxwell
OUT
calibration
emptyroom_tsss
crosstalk
mne
emptyroom_tsss_splits
destination
emptyroom
raw_tsss
head_positions
raw_tsss_splits
raw
IN
outputnode
destination
emptyroom_tsss
utility
OUT
emptyroom_tsss_splits
head_positions
info
raw_tsss
raw_tsss_splits