


Trainings ▾

Remove


Turn the keyswitch to the OFF position.

Remove the boot around the gear shift.

Disconnect the neutral position switch from the ICON™ engine harness.

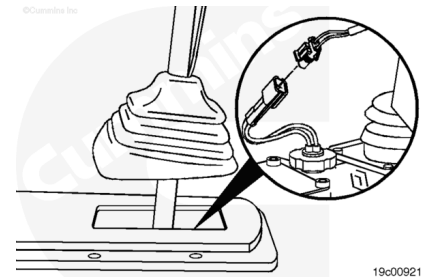

Remove the neutral position switch and o-ring from the threaded port of the transmission.

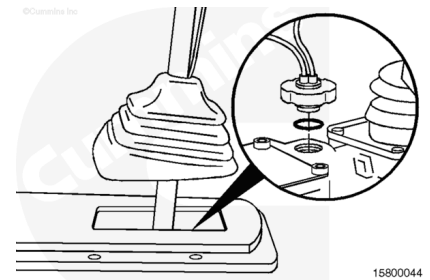


Install

Turn the keyswitch to the OFF position.

Lubricate and install a new o-ring onto the neutral position switch.


Install the neutral position switch into the threaded port.

Torque Value: 20 n•m [15 ft-lb]

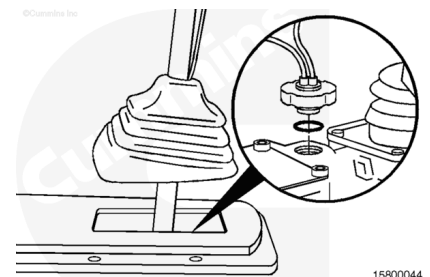

Connect the neutral position switch to the ICON™ engine harness.

Install the boot around the gear shift.

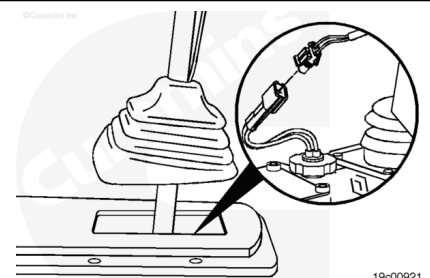

Last Modified: 12-Jun-2003