

Trainings ▾


Remove

Turn the keyswitch to the OFF position.

Locate the ignition bus relay holder mounted under the dashboard near the keyswitch.

Disconnect the ignition bus relay(s) from the ignition bus relay holder.

Remove the ignition bus relay(s).

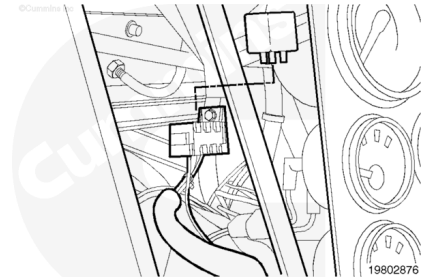

Install

Turn the keyswitch to the OFF position.

Install the replacement ignition bus relay(s) into the relay holder that is mounted under the dashboard near the keyswitch.

