


Trainings ▾

Remove

Turn the keyswitch to the OFF position.

Disconnect the starter relay (mounted on the vehicle's firewall) from the ICON™ engine harness connector.

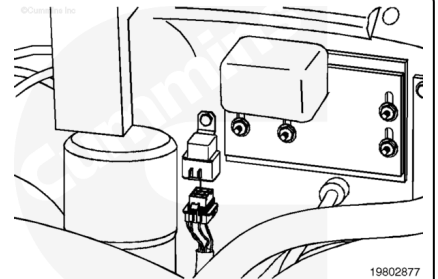

Install

Turn the keyswitch to the OFF position.

Install the starter relay into the ICON™ engine harness connector (i.e., the relay holder) on the vehicle's firewall.

