


Trainings ▾

General Information

The portion of the sensor circuit in the main engine harness consists of the signal wire (pin 5) and the return wire (pin 25 or 26).


The portion of the sensor circuit in the OEM harness consists of the signal wire (C5-E) and the return wire (C5-H).

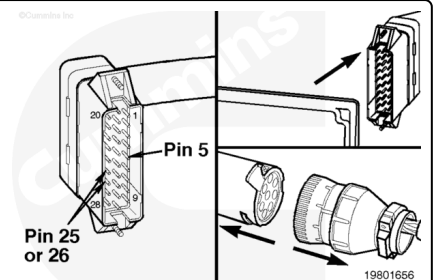

Resistance Check


Disconnect the ECM connector.

Disconnect the C5 connector.

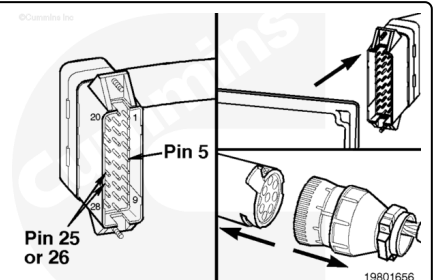


Select the resistance function on the multimeter.

Touch one of the multimeter leads to pin 5 of the main engine harness connector. Touch the other multimeter lead to pin E on the main engine harness side of the C5 connector.

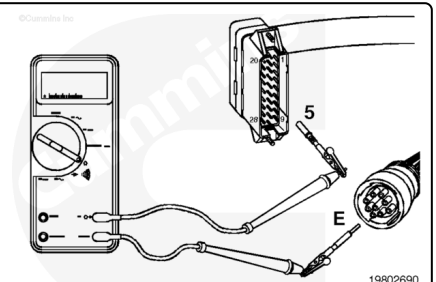

Measure the resistance.

The multimeter **must** show less than 10 ohms, which is a closed circuit. If the circuit is **not** closed, then there is an open circuit in the signal wire.

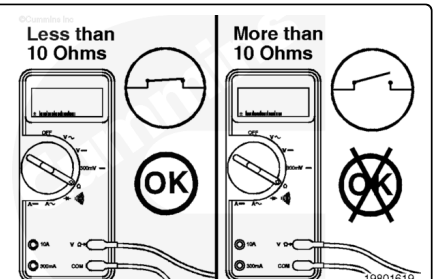


Repair the main engine harness, or, if necessary, replace it.
Refer to Procedure 019-228
(/qs3/pubsys2/xml/en/procedures/98/98-019-228.html) or
019-043 (/qs3/pubsys2/xml/en/procedures/98/98-019-
043.html).

Repeat the above resistance check for the return wire.

Touch one of the multimeter leads to either pin 25 or pin 26 of the main engine harness connector. Touch the other multimeter lead to pin H of the main engine harness side of the C5 connector.

Measure the resistance. The multimeter **must** show less than 10 ohms.

Note : The system will operate properly if **only one** of the battery return wires is working. However, if the circuit is open on one of the battery return wires, then the main engine harness should be repaired.

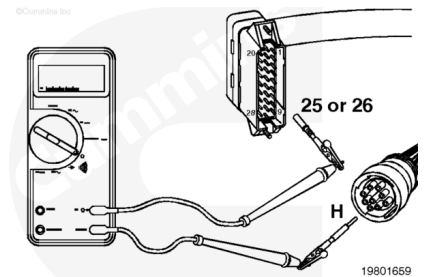


Check for Short Circuit to Ground

Disconnect the ECM connector.

Disconnect the C5 connector.

Touch one of the multimeter leads to pin 5 of the main engine harness connector. Touch the other multimeter lead to a good, clean surface on the engine block.

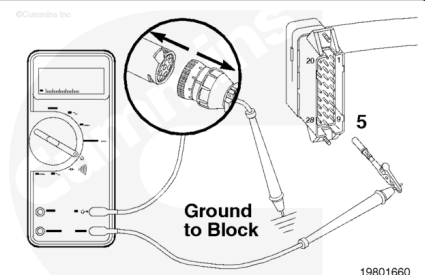


Measure the resistance.

The multimeter **must** show more than 100k ohms, which is an open circuit. If the circuit is **not** open, then there is a short circuit between the wire connected to pin 5 and chassis ground.

Repair the main engine harness, or, if necessary, replace it.

Refer to Procedure 019-228

(/qs3/pubsys2/xml/en/procedures/98/98-019-228.html) or
019-043 (/qs3/pubsys2/xml/en/procedures/98/98-019-
043.html).

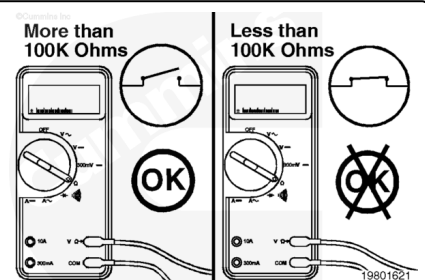


Check for Short Circuit from Pin to Pin

Disconnect the ECM connector.

Disconnect the C5 connector.


Check for a short circuit between pin 5 of the main engine harness connector and **all** other pins in the connector.

Touch one of the multimeter leads to pin 5 of the main engine harness connector. Touch the other multimeter lead to **all** other pins in the main engine harness connector, one at a time.

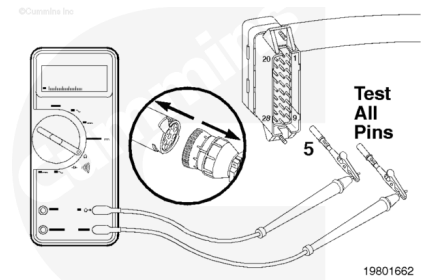

Measure the resistance.

The multimeter **must** show more than 100k ohms, which is an open circuit. If the circuit is **not** open, then there is a short between the wires connected to pin 5 of the main engine harness connector and **any** other pin that registered the closed circuit.

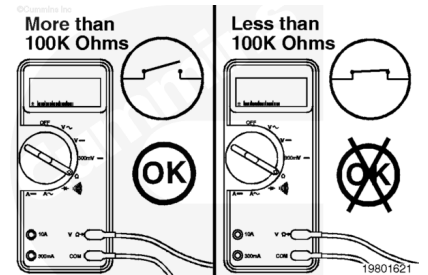

Repair the main engine harness, or, if necessary, replace it.

Refer to Procedure 019-228

(</qs3/pubsys2/xml/en/procedures/98/98-019-228.html>) or 019-043 (</qs3/pubsys2/xml/en/procedures/98/98-019-043.html>).

Check for a short circuit between the coolant temperature return wire and all other pins.

Touch one of the multimeter leads to pin 25 of the main engine harness connector. Touch the other multimeter lead to **all** other pins in the connector **except** pin 26.

Measure the resistance.

The multimeter **must** show less than 100k ohms.

