


Trainings ▾

General Information


The electronic fuel control (EFC) module contains the EFC actuator valve. The module is mounted directly on top of the modified PT® fuel pump.

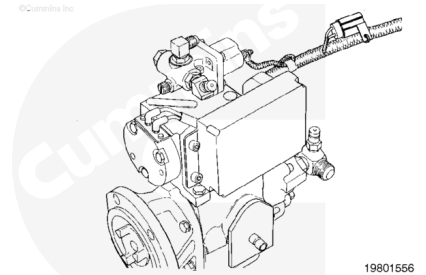

Inspect for Reuse

Inspect the mounting bore of the EFC in the CENTRY™ module for damage, which can cause leakage. Inspect for debris in the mounting bore.


If damage or debris exists, clean or replace the EFC module.

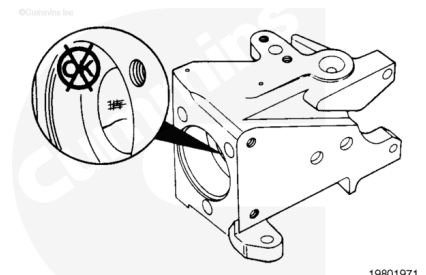


Remove

Note : The module does not have to be removed to remove the valve unless the valve is stuck in the module or there is not enough room to pull the valve out of the engine. To remove the EFC valve, refer to Procedure 019-102.

Disconnect the electrical leads from the valve.

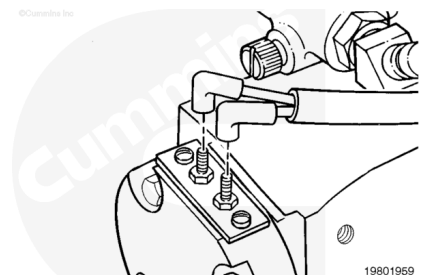


Remove the main engine harness hold-down clamp from the side of the engine block.

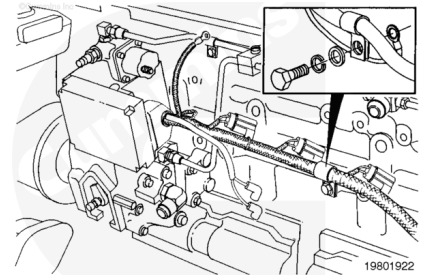


⚠ CAUTION ⚠

Do not overtwist, bend, or pull on the main engine harness.

Remove the ECM. Refer to Procedure 019-031
(/qs3/pubsys2/xml/en/procedures/98/98-019-031.html).

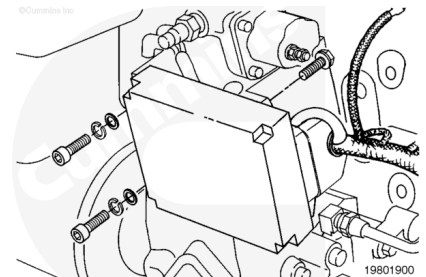


Remove the two ECM harness connector capscrews from the ECM unit.

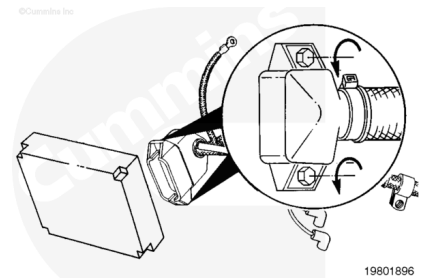

Disconnect the fuel tubing from the fuel shutoff valve.


Disconnect the voltage supply wire from the fuel shutoff solenoid.

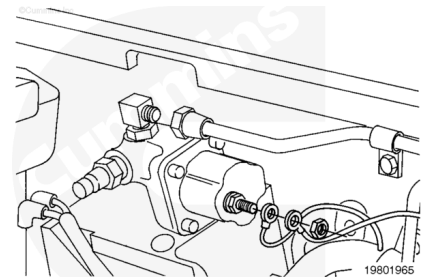

Note : On some engine configurations, it will **not** be necessary to remove the fuel shutoff valve from the EFC module in order to remove the module.


Remove the two capscrews, lockwashers, and flat washers securing the fuel shutoff valve to the EFC module.

Remove the fuel shutoff valve from the EFC module.

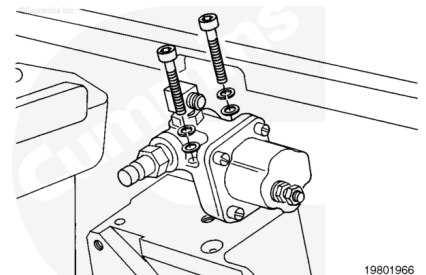

Remove the two mounting capscrews securing the EFC module to the PT fuel pump.


Remove the EFC module.

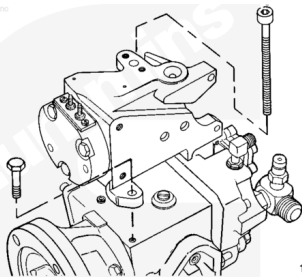

19801967

Install

Check to make sure the replacement module does have an EFC bypass plug installed.

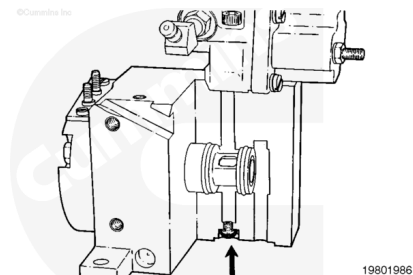


19801986

If necessary, install the gasket and EFC bypass plug into the module. Tighten the plug.

Torque Value: 1.0 n•m [9 in-lb]

Insert the rectangular seal into the bottom of the module.

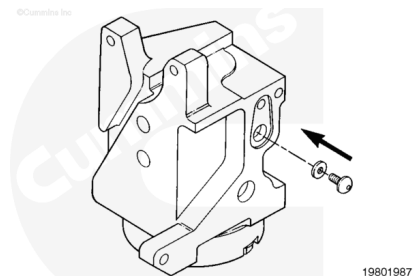


19801987

Install the EFC valve into the module. Refer to Procedure 019-102 (</qs3/pubsys2/xml/en/procedures/98/98-019-102.html>).

Install the module onto the PT fuel pump and tighten the capscrews.


Torque Value: 16 n•m [142 in-lb]

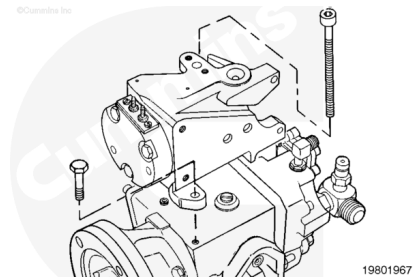

19801967

Install the fuel shutoff solenoid and tighten the capscrews.


Torque Value: 14 n•m [124 in-lb]

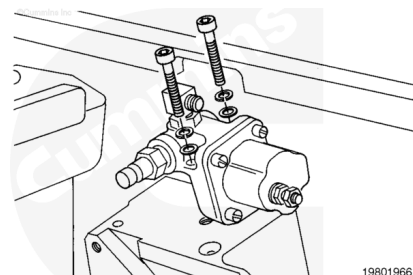

19801966

Connect the fuel tubing to the fuel shutoff valve.


Connect the electrical connections on the fuel shutoff solenoid.

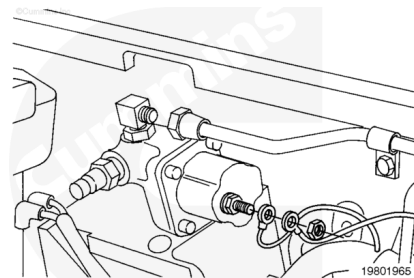

⚠ CAUTION ⚠

Do not overtighten the connector capscrews; this can cause the capscrews to break and damage the ECM.


Install the ECM harness connector to the ECM unit. Refer to Procedure 019-031 (</qs3/pubsys2/xml/en/procedures/98/98-019-031.html>).

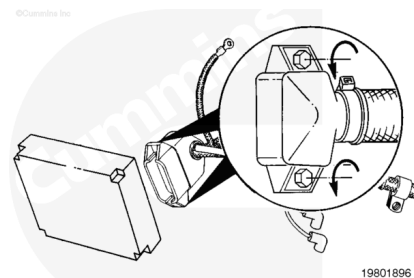


⚠ CAUTION ⚠

Do not overtwist, bend, or pull on the main engine harness; this can cause damage to the connector pins and the ECM.


Install the ECM. Refer to Procedure 019-031 (</qs3/pubsys2/xml/en/procedures/98/98-019-031.html>).

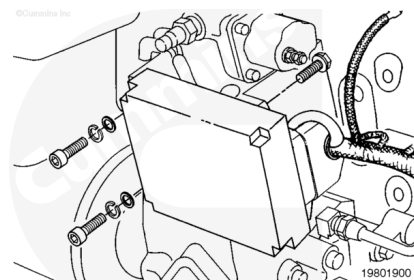

Install the hold-down clamp securing the main engine harness to the side of the engine block.

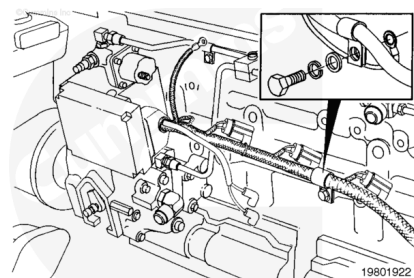

Connect the electrical leads to the EFC valve.

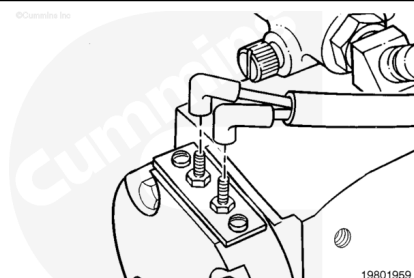

Last Modified: 01-Apr-2003
