


Trainings ▾

General Information

The intermediate-speed switch is located on the CENTRY™ driver interface panel.

Note : Some applications will use a relay instead of an interface panel switch. Refer to the OEM manual to see how a particular system is wired.

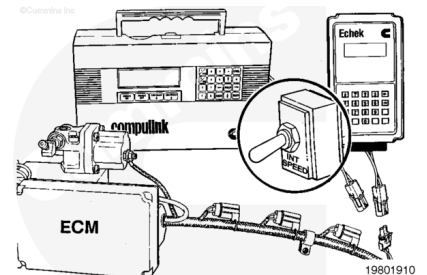


Resistance Check

Locate the switch on the driver interface panel and remove it. Refer to the OEM troubleshooting and repair manual for the procedure.

Disconnect the wires connected to the switch (wire Nos. C6-C, C6-E, C6-H).


Note : The switch is a normally open switch.

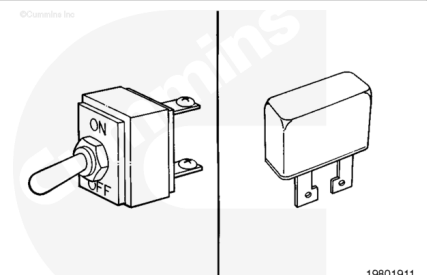

Select the resistance function on the multimeter.


Touch the multimeter leads to the switch terminals.

Toggle the switch to the OFF (closed) position.

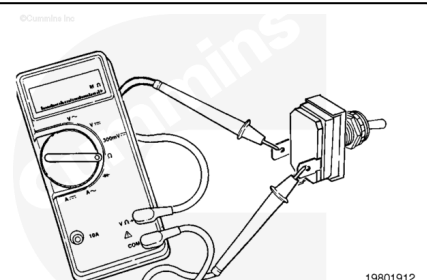

Measure the resistance.

The multimeter **must** show more than 100k ohms, which is an open circuit. If the circuit is **not** open, then there is a short circuit within the switch.

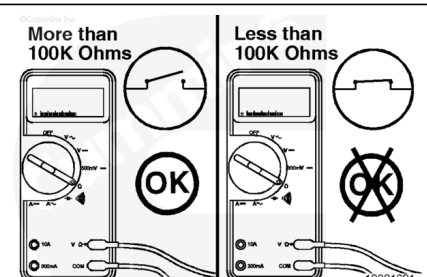

Replace the switch. Refer to the OEM troubleshooting and repair manual for the procedure.

Toggle the switch to the ON position.

Measure the resistance. The multimeter **must** show less than 10 ohms, which is a closed circuit. If the circuit is **not** closed, then there is an open circuit within the switch.

Replace the switch. Refer to the OEM troubleshooting and repair manual for the procedure.

