


Fault Code: 141

Engine Oil Rifle Pressure 1 Sensor Circuit - Voltage Below Normal or Shorted to Low Source

 Printable Version

Overview

Codes	Reason	Effect
Fault Code: 141 PID(P): P100 SPN: FMI: 4 Lamp: On SRT: 00-625	Low signal voltage or open circuit detected at the engine oil pressure circuit.	None on performance.

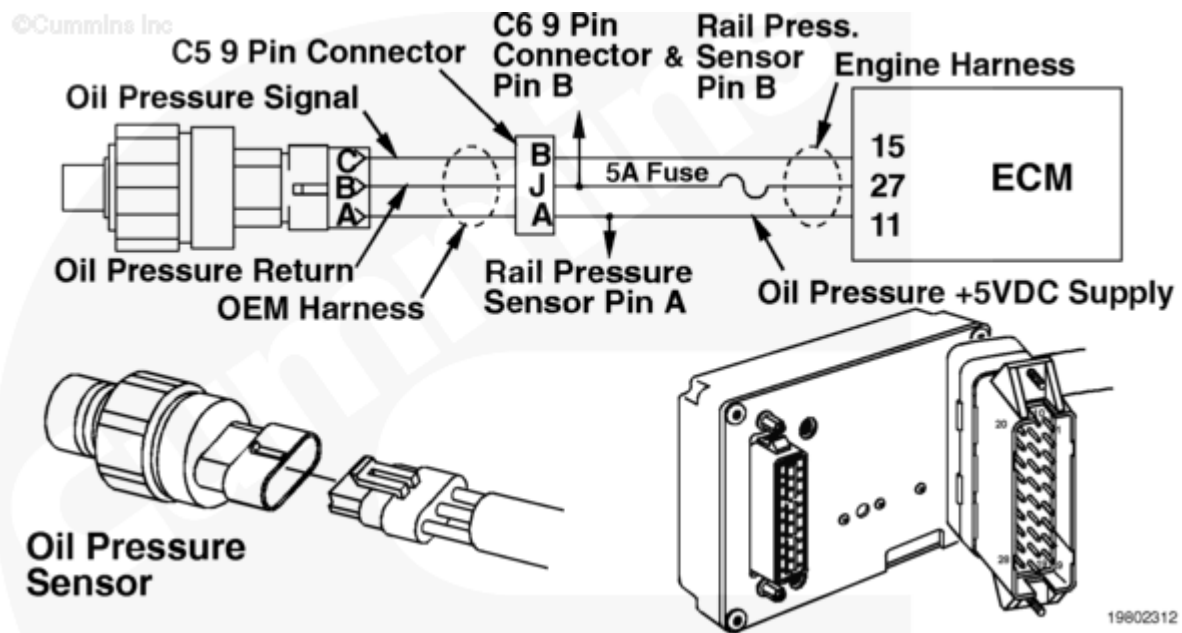

Oil Pressure Sensor Circuit

Circuit Description

The engine oil pressure sensor is a variable resistance sensor used by the ECM to monitor the lubricating oil pressure. The engine oil pressure sensor has three circuits: 5 volt supply, return, and signal circuits. The signal circuit voltage indicates the oil pressure in the oil rifle.

Component Location

The oil pressure sensor location may vary and is OEM dependent.

Conditions For Running The Diagnostics

This diagnostic runs continuously when the keyswitch is in the ON position.

Conditions For Setting The Fault Codes

The Engine Control Module (ECM) detected the engine oil pressure signal voltage was out of range low.

Action Taken When The Fault Code Is Active

- The ECM illuminates the amber CHECK ENGINE light when the diagnostic runs and fails.
- No engine protection for engine oil pressure.

For Power Generation Applications:

- The generator set controller displays the fault immediately when the diagnostics runs and fails.
- No engine protection for engine oil pressure.

Conditions For Clearing The Fault Code

- To validate the repair, perform a key cycle, start the engine and let it idle for 1 minute.
- The fault code status displayed by the recommended Cummins® electronic service tool or equivalent will change to INACTIVE immediately after the diagnostic runs and passes.
- The ECM will turn off the amber CHECK ENGINE lamp immediately after the diagnostic runs and passes.
- The “Reset All Faults” command in the recommended Cummins® electronic service tool or equivalent can be used to clear active and inactive faults.

For Power Generation Applications:

- To validate the repair, start the engine and let it run for 1 minute at no load.
- The generator set controller will turn off the indicator immediately after the user presses reset.
- The “Reset All Faults” command in the recommended Cummins® electronic service tool or equivalent can be used to clear active faults.

Shoptalk

Possible causes of this fault code include:

- Malfunctioning or damaged engine wiring harness.
- Malfunctioning or damaged OEM wiring harness.
- Damaged or loose connectors.
- Malfunctioning or damaged engine oil pressure sensor.

Refer to Troubleshooting Fault Code t05-141 (</qs3/pubsys2/xml/en/procedures/98/98-t05-141.html>)

Last Modified: 08-Sep-2021
