


Fault Code: 254

Auxiliary Shutdown Circuit - Voltage Below Normal or Shorted to Low Source

 Printable Version

Overview

Codes	Reason	Effect
Fault Code: 254 PID(P): S17 SPN: FMI: 4 Lamp: On SRT: 00-629	Low voltage on the auxiliary shutdown/torque output driver circuit when the auxiliary shutdown is on.	Engine may not start. Engine may shut down. Possible reduced engine performance.

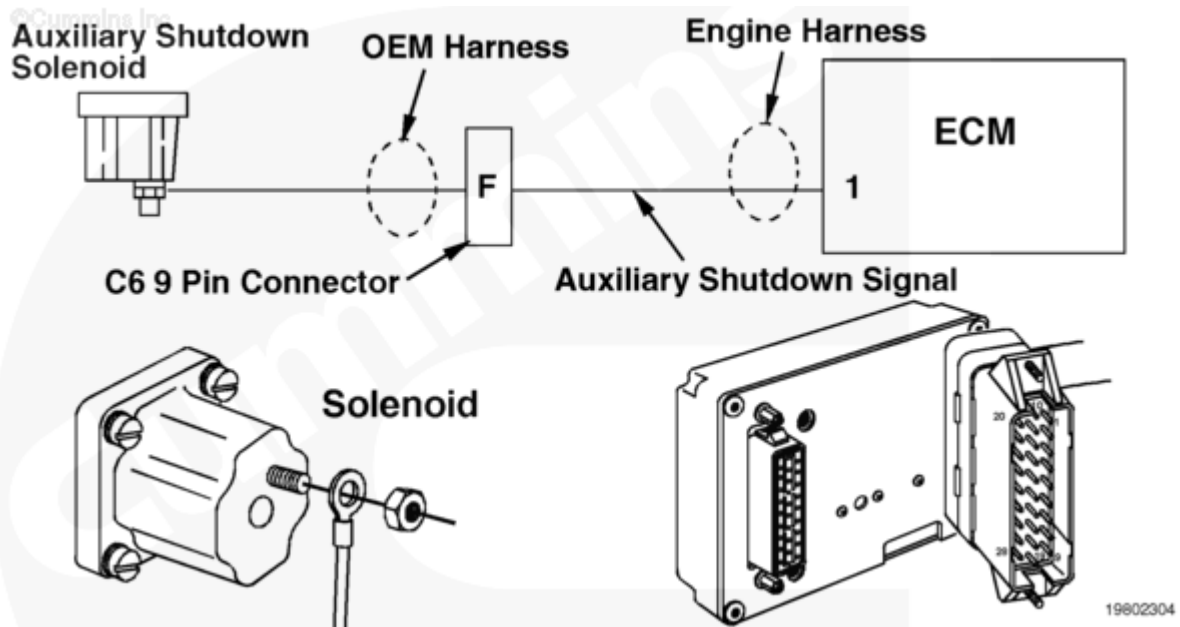

Auxiliary Shutdown Circuit

Circuit Description

The auxiliary shutdown/ torque output driver in the CENTRY™ system can be used to power auxiliary shutdown devices such as air intake flaps. The auxiliary shutdown/ torque output driver has a single circuit; auxiliary shutdown/ torque output driver. The ECM provides switched battery voltage to the auxiliary shutdown solenoid.

Component Location

The auxiliary shutdown solenoid location may vary and is OEM dependent.

Conditions For Running The Diagnostics

This diagnostic runs continuously when the keyswitch is in the ON position.

Conditions For Setting The Fault Codes

The Engine Control Module (ECM) detected the auxiliary shutdown/ torque output driver voltage was out of range low.

Action Taken When The Fault Code Is Active

- The ECM illuminates the red STOP ENGINE lamp immediately when the diagnostic runs and fails.

For Power Generation Applications:

- The generator set controller displays the fault immediately when the diagnostics runs and fails.

Conditions For Clearing The Fault Code

- Turn the keyswitch OFF. Allow the ECM to completely power down and turn the keyswitch ON.
- The fault code status displayed by the recommended Cummins® electronic service tool or equivalent will change to INACTIVE immediately after the diagnostic runs and passes.
- The ECM will turn off the red STOP ENGINE lamp immediately after the diagnostic runs and passes.
- The "Reset All Faults" command in the recommended Cummins® electronic service tool or equivalent can be used to clear active and inactive faults.

For Power Generation Applications:

- To validate the repair, start the engine and let it run for 1 minute at no load.
- The generator set controller will turn off the indicator immediately after the user presses reset.
- The "Reset All Faults" command in the recommended Cummins® electronic service tool or equivalent can be used to clear active faults.

Shoptalk

Possible causes of this fault code include:

- Malfunctioning or damaged engine wiring harness.
- Malfunctioning or damaged OEM wiring harness.
- Damaged or loose connectors.
- Malfunctioning or damaged auxiliary shutdown solenoid.

Refer to Troubleshooting Fault Code t05-254 (</qs3/pubsys2/xml/en/procedures/98/98-t05-254.html>)

Last Modified: 15-Sep-2021
