

Trainings ▾

General Information

⚠ WARNING ⚠

Do not pull or pry on the fan to manually rotate the engine. To do so can damage the fan blades. Damaged fan blades can cause premature fan failures which can result in serious personal injury or property damage.

©Cummins Inc.

This procedure instructs how to rotate the engine for service events.


Note : The illustrations in this procedure are generic and may not represent the hardware on all engines.

Preparatory Steps

⚠ WARNING ⚠

Batteries can emit explosive gases. To reduce the possibility of personal injury, always ventilate the compartment before servicing the batteries. To reduce the possibility of arcing, remove the negative (-) battery cable first and attach the negative (-) battery cable last.

©Cummins Inc.

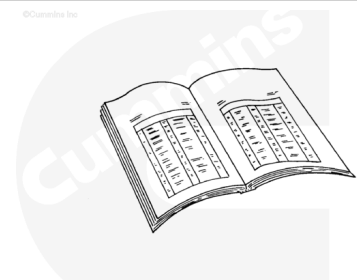


ck800wa

- Disconnect the Batteries. See equipment manufacturer service information.

Rotate

⚠ WARNING ⚠

When servicing the engine, do not use a remote starter switch or other means that would engage the starting motor to rotate the engine on a high pressure common rail engine. Using the starter motor can create highly pressurized fuel in the fuel system. High-pressure fuel spray can penetrate the skin, resulting in serious personal injury or death. Use a hand barring tool to rotate the engine for servicing the engine. Always loosen the pump to rail fuel line at the rail to vent the pressure after rotating the engine. Keep hands clear of the line when loosening and wear appropriate eye protection.

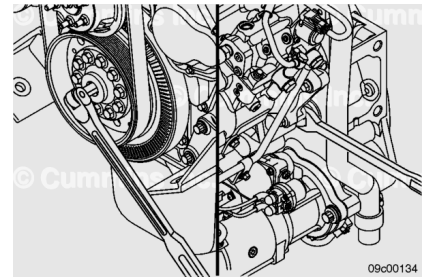

Front Barring

- Insert the 3/4 inch breaker bar into the barring plate attached to the front of the crank nose. Rotate the engine **clockwise** when viewed from the front of the engine.

Rear Barring

- Remove the plastic cover in the flywheel housing. Insert service tool, Part Number 4919092, into the flywheel housing. Use a 3/4 inch breaker bar and rotate it **counterclockwise** when viewed from the front of the engine.

Finishing Steps

⚠ WARNING ⚠

Batteries can emit explosive gases. To reduce the possibility of personal injury, always ventilate the compartment before servicing the batteries. To reduce the possibility of arcing, remove the negative (-) battery cable first and attach the negative (-) battery cable last.

- Remove all tools.
- Connect the batteries. See equipment manufacturer service information.



