

Trainings ▾

Preparatory Steps

- Remove the air crossover. Refer to Procedure 010-019 (</qs3/pubsys2/xml/en/procedures/18/18-010-019-tr.html>).




Remove

Crankcase breathers can be mounted in any cylinder location. Record the number of breathers and their location, before removing.


Remove the rocker lever cover capscrews.

Remove the rocker lever cover and gasket.

Discard the gasket.

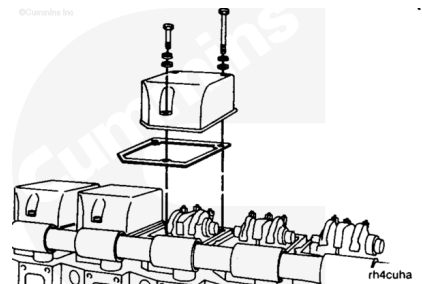


Disconnect the solenoid wire from inside the cover on engines equipped with an engine brake.

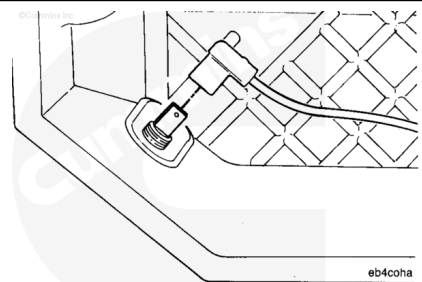

Clean and Inspect for Reuse

⚠ WARNING ⚠

When using solvents, acids, or alkaline materials for cleaning, follow the manufacturer's recommendations for use. Wear goggles and protective clothing to reduce the possibility of personal injury.

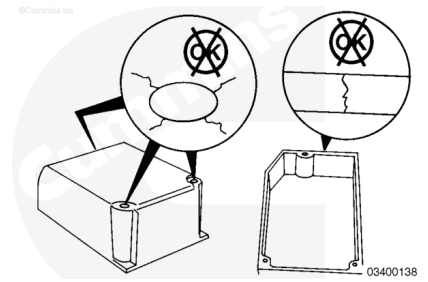


Clean the rocker lever cover with a solvent that will **not** harm aluminum.

Inspect the rocker lever for cracks.

If the rocker lever cover is cracked, it **must** be repaired or replaced.

Install

If the engine has an engine brake, connect the solenoid wire to the terminal inside the cover.

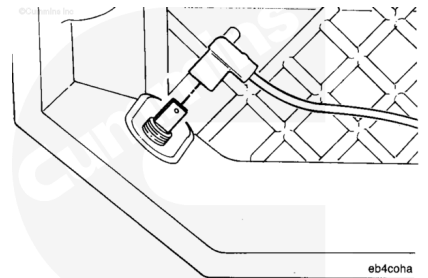

⚠ CAUTION ⚠


The use of gasket cement on the gasket will prevent the gasket from sealing properly.

Install the gasket and rocker lever cover.

Install the washers and capscrews.

Tighten the short capscrew first, then tighten the remaining capscrews.

Torque Value: 45 n•m [33 ft-lb]

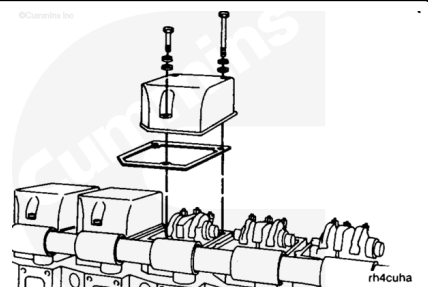

Finishing Steps

- Install the air crossover. Refer to Procedure 010-019 (/qs3/pubsys2/xml/en/procedures/18/18-010-019-

tr.html).

