


Trainings ▾

Remove

⚠ WARNING ⚠

Fuel is flammable. Keep all cigarettes, flames, pilot lights, arcing equipment, and switches out of the work area and areas sharing ventilation to reduce the possibility of severe personal injury or death when working on the fuel system.

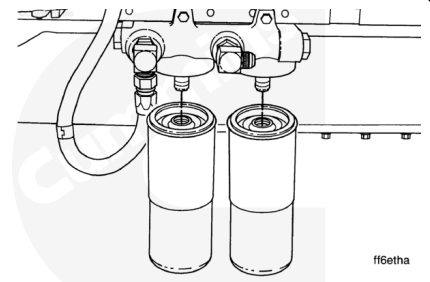


Close the fuel line shutoff valve before changing the fuel filters, or the overhead tank can drain, causing a fuel leak.

Remove the fuel filter with filter wrench, Part Number 3376807.

Remove the thread adapter sealing ring (1).

Use a clean, lint-free towel to clean the surface of the filter head gasket.

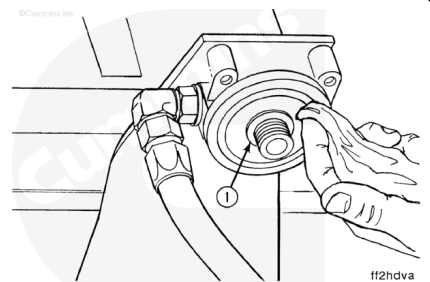


Install

Install a new thread adapter sealing ring supplied with the new filter.

A fuel-water separator or fuel filter and water separator combination **must** be installed.

Apply a light coating of clean engine oil to the surface of the filter gasket.

Fill the filter with clean fuel.

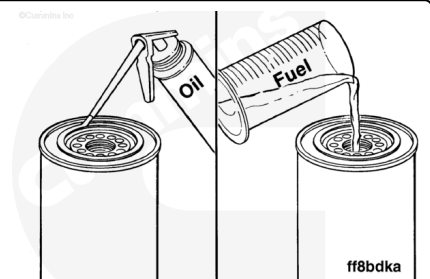

Install the filter on the filter head. Turn the filter until the gasket touches the surface of the filter head.

Tighten the filter an additional $\frac{1}{2}$ to $\frac{3}{4}$ of a turn after the gasket touches the filter head surface.

Open the fuel line shutoff valve and check for leaks.

