


Trainings ▾

Remove


Remove the injector hold down clamp capscrews.

Remove the injector hold down clamp.

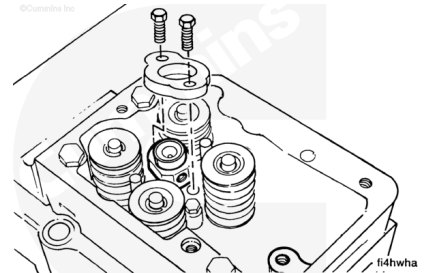

⚠ CAUTION ⚠

Do not allow the STC tappet to fall out of the injector, engine damage can result.

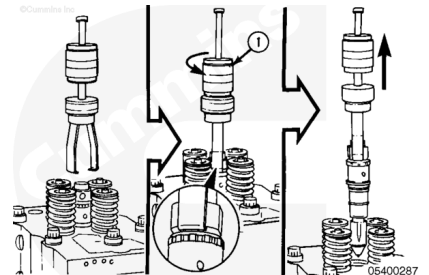

Note : The rocker housing has been removed from the illustration for clarity.

For top stop injectors, use injector puller, Part Number 3376497.

Make sure the puller arms are firmly under the top stop screw.

Tighten the clamping ring (1).


Use the slide hammer to remove the injector.

For standard injector injectors use puller, Part Number 3376000 or 3376497.

Place the split collar over the injector.

Slide the locking collar over the split collar.


Use the slide hammer to remove the injector.

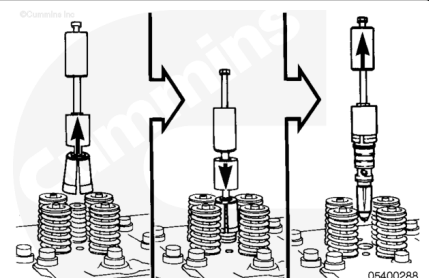

Clean and Inspect for Reuse

⚠ WARNING ⚠

When using solvents, acids, or alkaline materials for cleaning, follow the manufacturer's recommendations for use. Wear goggles and protective clothing to reduce the possibility of personal injury.

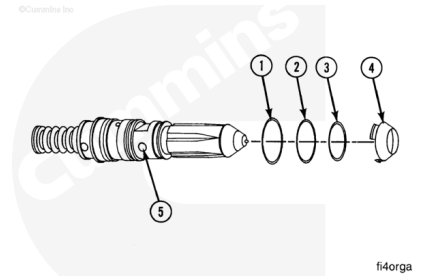

⚠ WARNING ⚠

Wear appropriate eye and face protection when using compressed air. Flying debris and dirt can cause personal injury.

⚠ CAUTION ⚠

Injector plungers and barrels have a precise fit and are damaged easily. Only trained technicians are authorized to remove the plungers. Do not allow the plunger to fall out of the injector.

Note : Sealing rings are available in different thicknesses to adjust the injector protrusion.

Remove o-rings (1), (2), and (3).

Remove the sealing ring (4) and record its thickness.

Clean the exterior of the injector with a lint-free cloth.

Check the area the makes contact with the injector.

Check the orifice screen (5). It **must** be clean. If there is debris on the screen, remove the retaining clip and the screen for cleaning.


Clean the screen in solvent and dry with compressed air.

Install the screen and retaining clip.

Install

Identify the o-rings so they can be installed in the correct groove.

- O-ring (1) has a red dot or stripe and is dull gray in appearance.
- O-ring (2) has no markings.
- O-ring (3) has a green dot or stripe. The o-ring has a shiny black appearance.

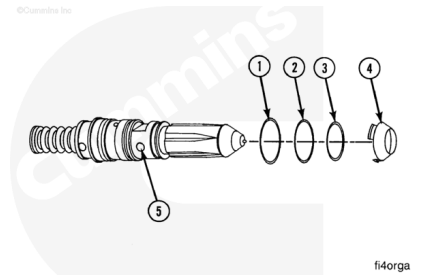


Lubricate the o-rings with vegetable oil and install them in the appropriate location.

Install the proper size seal ring (4).


Place the standard injector in the bore.

Turn the injector so the screen points toward the hold-down capscrew hole on the intake side of the cylinder head.

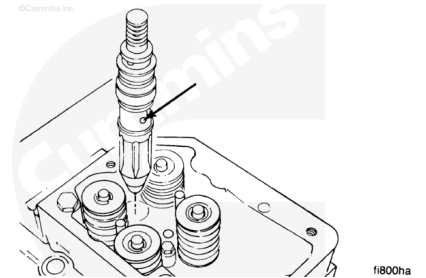

Do **not** allow the STC tappet fall out of the STC (top stop) injector. Damage can result.


The STC tappet **must** be near the rocker lever assembly.

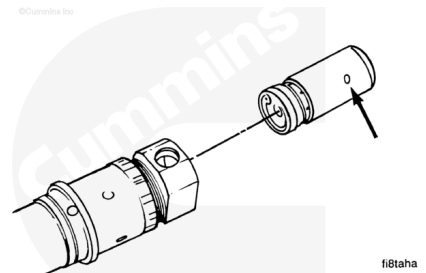

Do **not** push the injector on the seat until it is correctly aligned.

Place the STC injector in the bore. Turn the injector so the hole in the top stop screw points to the oil supply hole in the rocker lever housing.


Use the oil jumper tube and the connector screw as tools. Turn the injector until the holes are aligned. Remove the connector screw and the tube.

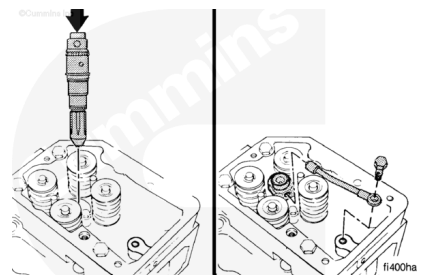

⚠ CAUTION ⚠

Do not use a wooden tool to push the injector onto the seat. Failure can result because of splinters falling into the tappet.


Apply a quick hard push with a blunt object that touches the top stop screw, to seat the injector.

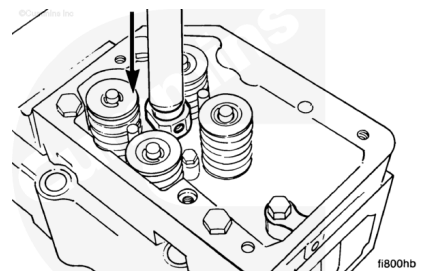

A single snapping sound will be heard when the injector is seated properly.

⚠ CAUTION ⚠

The injector hold-down clamp that is used on engines with STC requires capscrew that are 3 mm [1/8 in] longer than those on other K19 engines.

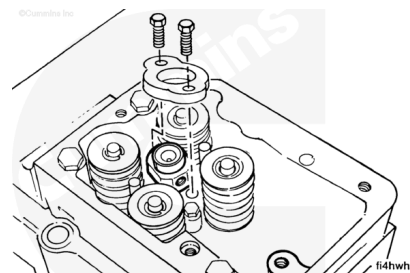

Install the hold-down clamp and the self-locking capscrews.

Alternately tighten the capscrews in sequence so the clamp is centered on the injector body.

Torque Value: 16 n•m [145 in]