


Trainings ▾

Remove

Note : The following steps show the combination oil filter. Use the same procedures when changing the remote bypass oil filters.

Remove the oil filters with oil filter wrench, Part Number 3400157 or 3400158, or equivalent.


Discard the oil filters if they are **not** needed for failure analysis.

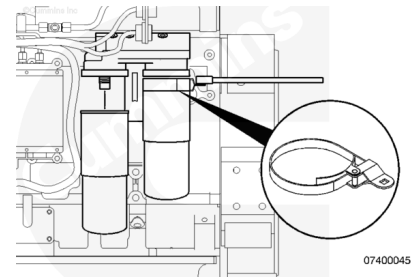

Install

Clean the oil filter head surface.

Lubricate the gasket surface of the oil filter with clean engine oil.

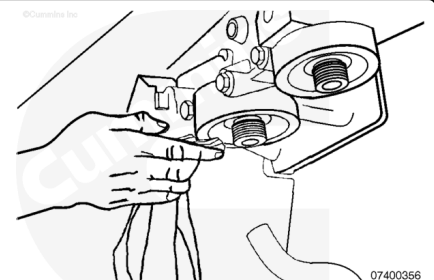


Fill the oil filters with clean 15W-40 oil.

Install the oil filters on the oil filter head.

Mechanical overtightening can distort the threads or damage the oil filter element seal.


Turn the oil filter until the seal contacts the oil filter head.

Turn an additional $\frac{3}{4}$ to 1 turn.

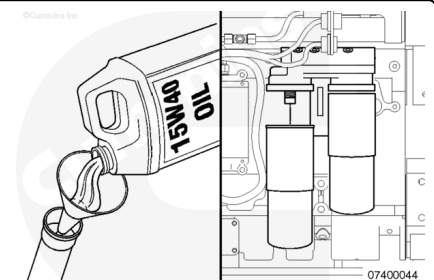

Operate the engine until the oil temperature is at a minimum of 65°C [150°F].

Check for leaks.

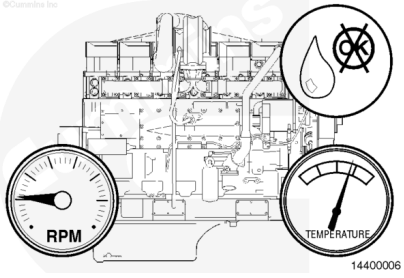

Last Modified: 28-Jul-2006
